
Assembly Instructions

HKLFPS008

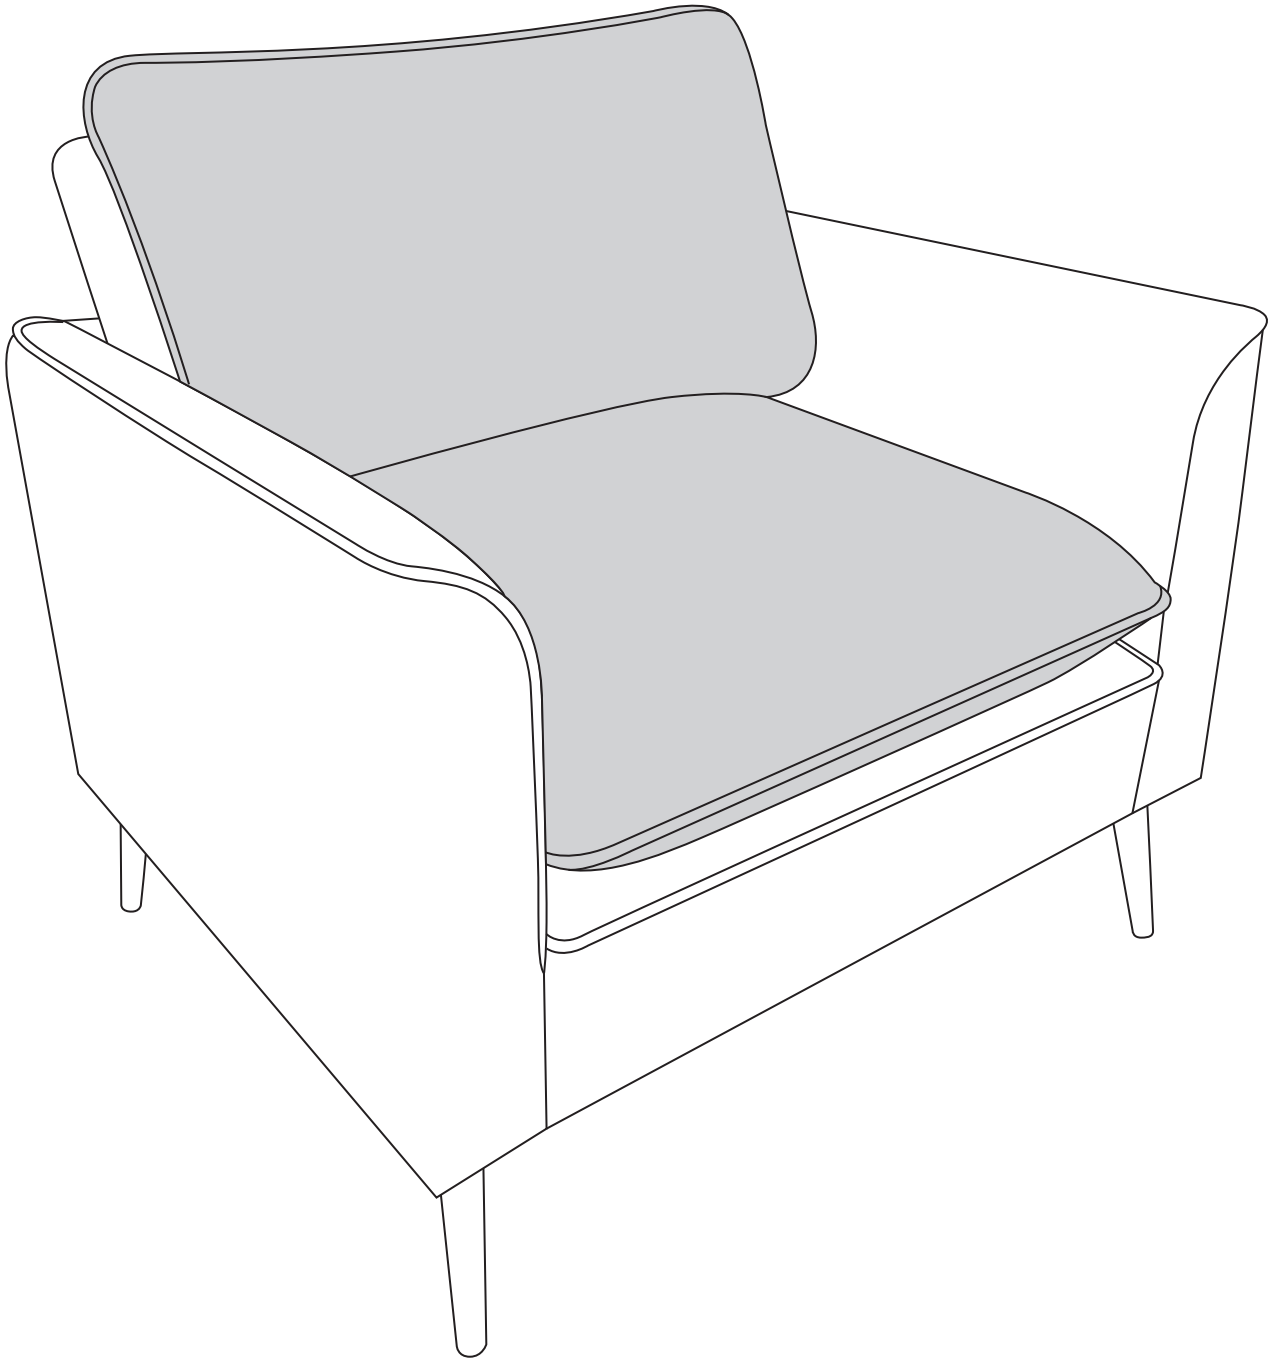

Assembly Instructions

HKLFPS008

ASSEMBLY REQUIREMENT

1 PERSON ASSEMBLY | 30 MINUTES ASSEMBLY TIME (APPROXIMATE)
TOOLS REQUIRED: ALLEN WRENCHES (PROVIDED)

ASSEMBLY REQUIREMENT

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts Checklist and ensure they are complete before you start assembling .

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior and finish of the furniture.
3. During assembly, do not over-tighten any fittings as this may cause damage.
4. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
5. Do not sit or stand on the partially assembled product, only use the product for which it is intended.

CARE AND USE

- Recommended for indoor and residential use only.
- Wipe with a soft, dry cloth. DO not use harsh abrasives or household cleaners as they may damage the finish.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.

Okeysen Accent Chairs Limited Warranty

Okeysen accent chairs are warranted from the date of purchase against failure due to material and workmanship as follows

1 YEAR on component parts including screws, pillow and armrests.

1 YEAR on Upholstery fabric and foam against wear and deterioration.

To make a warranty claim, please contact Okeysen, provide model number, proof of purchase description of the problem.









At it's option Okeysen will:


a) Supply compatible components of current manufacture.

b) Send a new product if necessary, customer must return the original product to the warehouse. Return freight will be paid by Okeysen.


RETURN POLICY

Customers can request to return the item within 30 days of receiving it. Return freight will be paid by Okeysen.

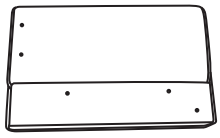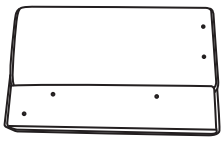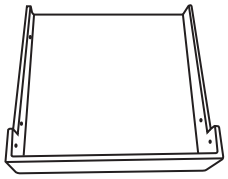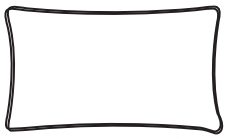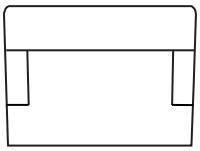
PARTS CHECKLIST				
 L Ax1	 R Bx1	 Cx1	Back frame  Dx1	Back inner cushion  Ex1
Seat inner cushion  Fx1	Seat cover  Gx1	Back frame cover  Hx1	Back cover  Ix1	 Foreleg Jx2pcs
 Hind leg Kx2pcs	 Lx6pcs	 Mx12pcs	 Nx6pcs	 Ox1

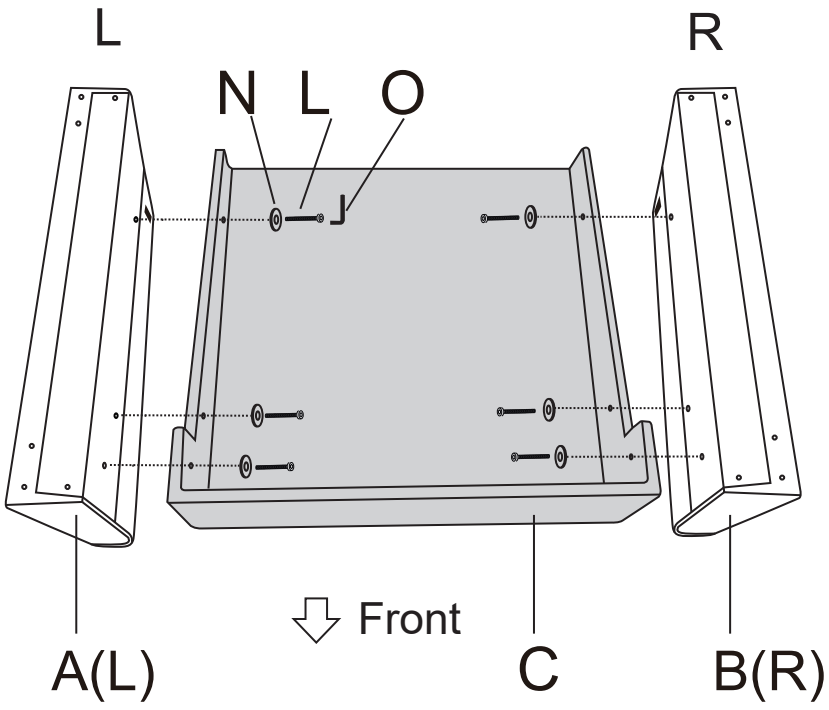


Step 1 : Attach Seat **C** to the Left Armrest **A** and Right Armrest **B** with Gasket **Nx6** and Screws **Lx6** by Allen Wrench **O** as the picture.

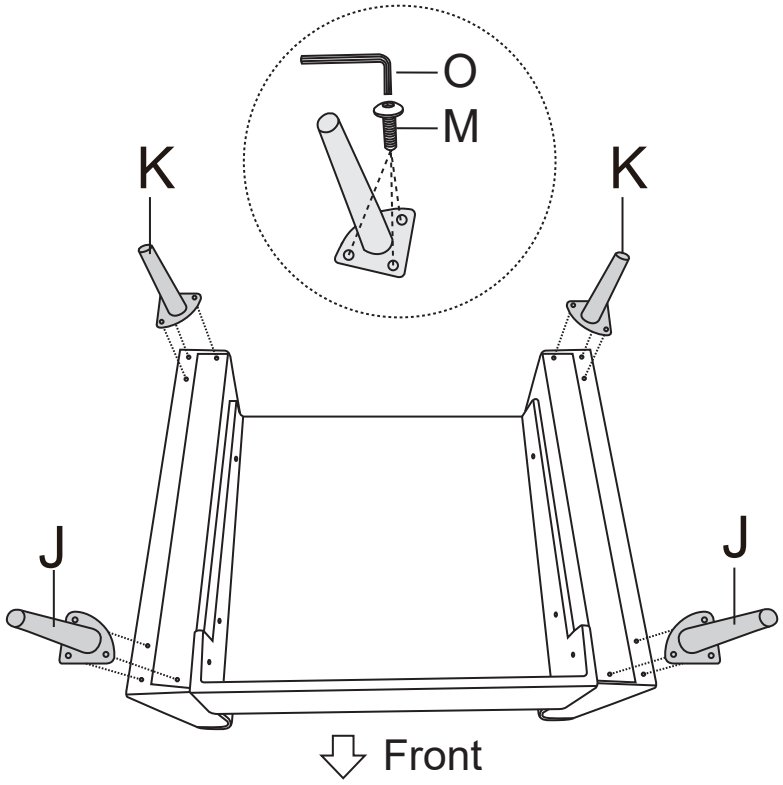


Step 2: Attach Foreleg **Jx2** and Hind Leg **Kx2** with Screws **Mx12** by Allen Wrench **O**.

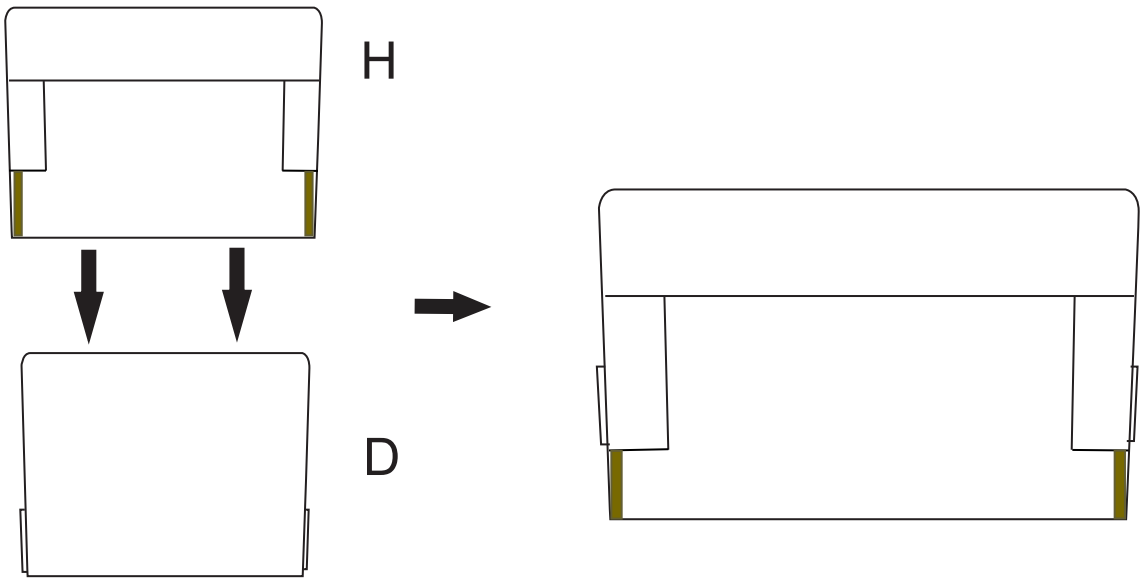


Step 3: Put the back cover **H** onto back frame **D**. Paste the velcor of back cover onto the fabric of back frame. Carefully align the edge of the back frame.

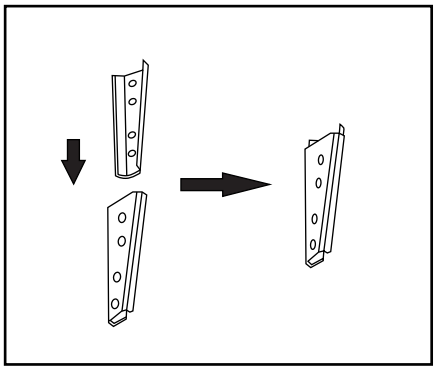


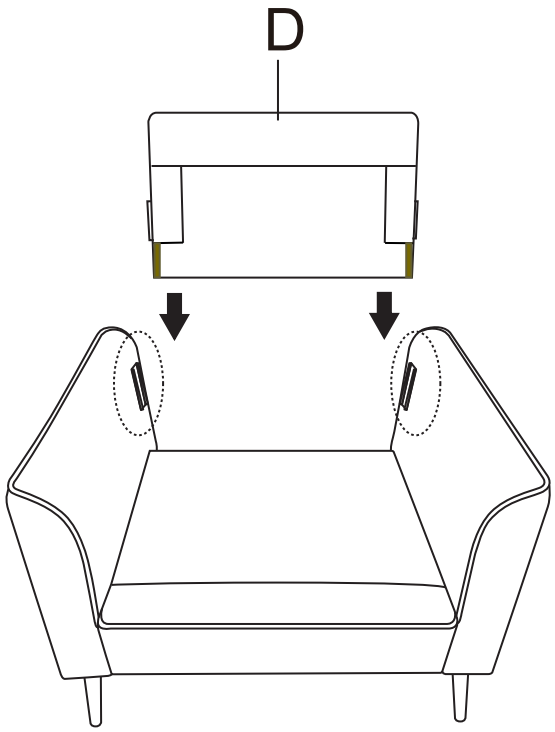


Step 3：Attach the Backrest **D** to the armrest with the slots as picture.

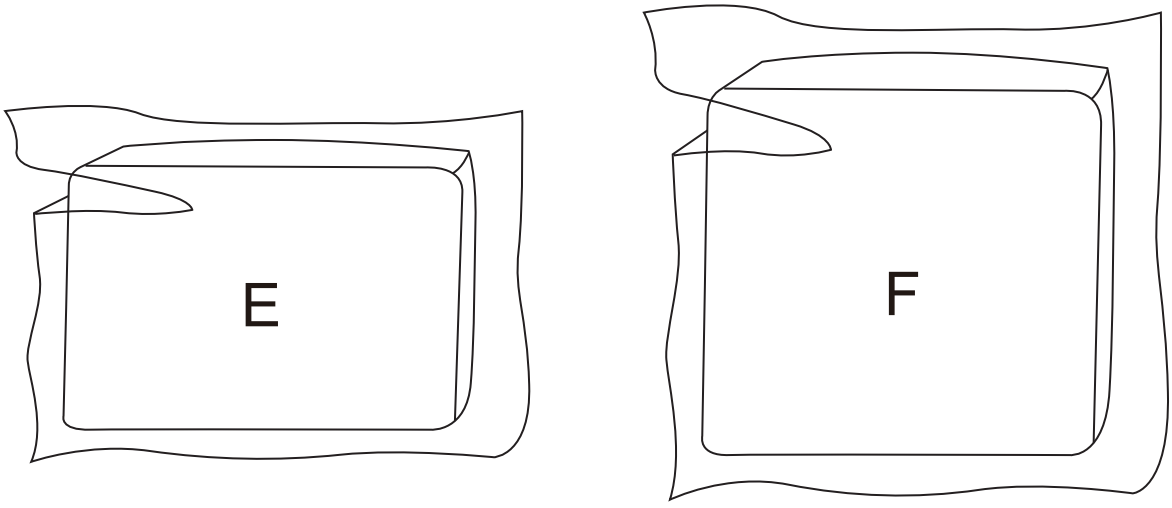

Step 4: Take out the Cushions **E F** from the package, knock them to restore the foam inside, the marks on the cushions will gradually disappear themselves in 48 hours.

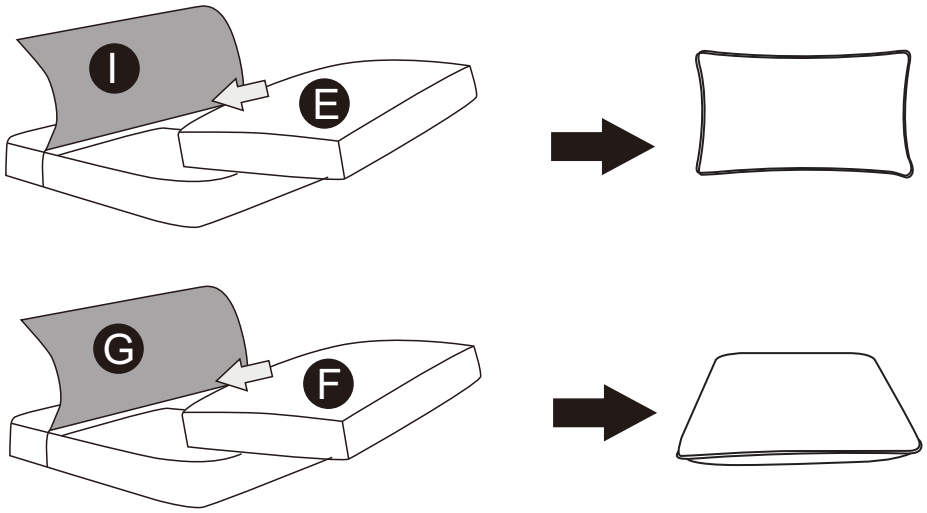

Step 5: Put the Back Cushion **E** into cover **I** accordingly, then zip it up.
Put the expanded Seat Cushion **F** into cover **G** accordingly, then zip it up.
Please be patient and careful when put the cushions into the covers.

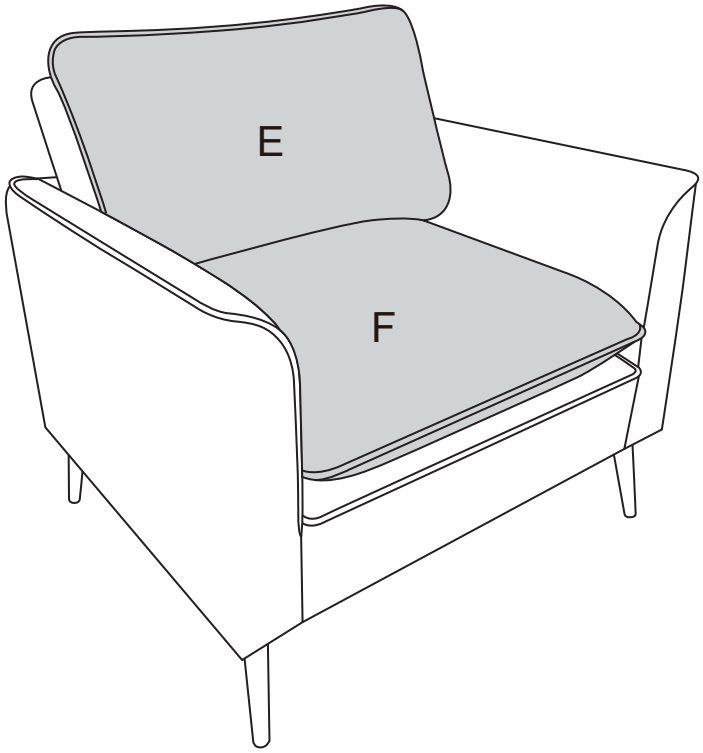

Step 6: Put the cushions on the sofa and adjust the back frame cover.
Now, enjoy your new sofa!

After-sales Support

We are working on delivering you a perfect product,
but sometimes the parts may still be damaged or lost in transit.

If any parts are damaged or lost, please contact us immediately,
perfect solutions will be offered to fix the issues.

CONTACT INFO: Support@Okeysen-Global.com