
Dressing Table

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

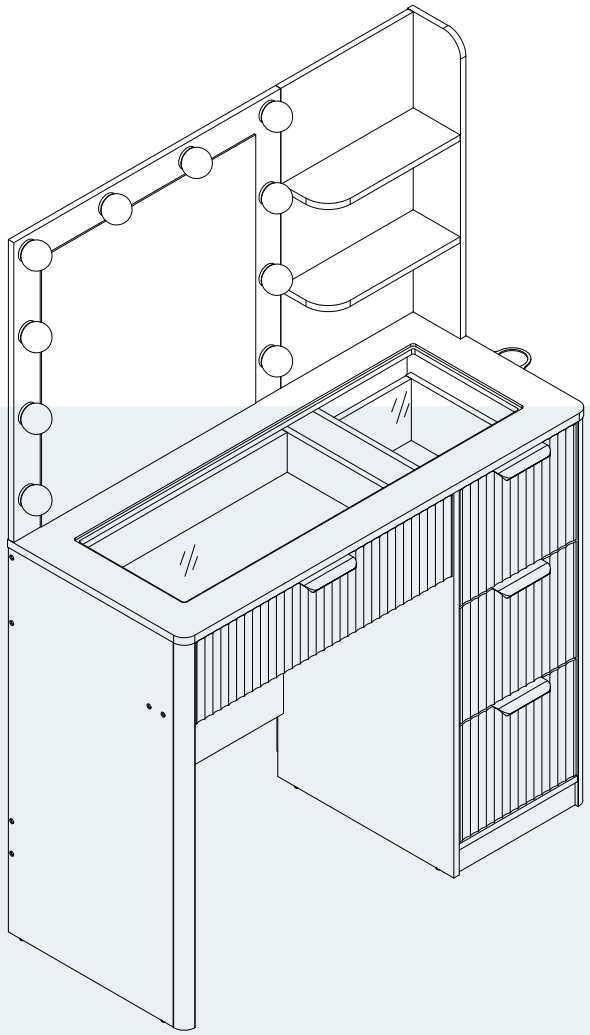

Arrive in 2 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.

EN

CONTACT US

- **Email: info@grandtunnel.com**
  In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Safety and Care Advice

Thank you for choosing this product! To ensure safe use and long-term maintenance, please read this manual carefully and keep it for future reference.

Important Notes:

- This product is designed for indoor use only and should not be used for commercial or outdoor purposes without authorization.
- Children under the age of 14 should not participate in the assembly process.

Important - Please read these instructions fully before starting assembly

1.Preparation Before Assembly

Check Components and Tools:

Refer to the provided parts list to ensure all components and fittings are included. If any parts are missing or damaged, please contact customer service immediately.

Required Tools:

Prepare a Phillips screwdriver, a spirit level, a rubber mallet, and expansion bolts or screws suitable for your wall type (not included).

Workspace:

- Assemble the product on a flat, soft surface (e.g., carpet) to avoid scratching the furniture.
- Ensure the workspace is spacious enough to lay out all components and facilitate assembly.

  Safety Precautions:
- Keep children and pets away from the assembly area to prevent accidental injuries or swallowing of small parts.
- Assembly by two people is recommended to improve efficiency and ensure safety.

2.Assembly Instructions

- Initial Fixing:

  Assemble the components in the order specified in the manual. Do not skip any steps.

  Tighten screws and connectors loosely at first to allow for adjustments later.
- Alignment Check:

  Before fully tightening screws, ensure all grooves and holes are properly aligned to prevent incorrect assembly.
- Wall Mounting (if applicable):
- Use the included anti-topple device to secure the furniture to the wall. If suitable wallmounting fittings are not provided, purchase appropriate expansion bolts and screws for your wall type.
- Follow the wall-mounting guidelines to prevent tipping hazards.

3.Post-Assembly Checks

- Verify that all parts are securely installed and screws are fully tightened.
- Ensure the anti-topple device is properly installed.
- Once the furniture is in its final position, use a spirit level to confirm it is level.

Usage Instructions

1.Safety Tips for Use
Prevent Tipping:
· Always use the included anti-topple device to secure the furniture and prevent accidents.
· Check the stability of the anti-topple device regularly.
· Open only one drawer at a time to maintain balance.
Weight Distribution:
· Place heavy items in the lower drawers or shelves to improve stability.
· Avoid placing heavy objects on top of the furniture unless it is designed for such use.
Child Safety:
· Do not allow children to climb, sit, or hang on the furniture.
· Keep small parts and sharp objects stored inside drawers or cupboards, out of children's reach.
2.Special Features (if applicable):
· Lighting System:
· Follow the instructions to correctly install electrical components, ensuring wires are not exposed.
· If the LED strip or switch needs replacement, consult a professional.

Maintenance Instructions

1. Cleaning and Care
• Wipe the surface with a slightly damp soft cloth and mild detergent. Avoid using bleach, solvents, or abrasive cleaners.
• Regularly clean underneath and behind the furniture to prevent dust accumulation.

2. Regular Checks
• Inspect screws and fittings regularly to ensure they are not loose, and tighten them if necessary.
• Check the anti-topple device to ensure it is securely connected, and adjust immediately if any looseness is detected.

3. Preventing Environmental Damage
• Avoid placing the furniture in damp areas to prevent material deformation or structural damage.
• Protect the furniture from prolonged exposure to direct sunlight to prevent discoloration or surface aging.

4. Product Disposal
• This product should not be disposed of as household waste. Please take the furniture to an authorized recycling facility in accordance with local regulations.
• For products containing electrical components, ensure proper recycling as per the European Union Waste Electrical and Electronic Equipment Directive (WEEE).

Safety Warnings

1. Anti-Tip Warning
To prevent serious injury or death caused by furniture tipping over:
A. Always use the included anti-tip device or other suitable wall-mounting hardware to securely anchor the furniture to the wall.
B. Do not allow children to climb, hang, or play on the furniture.
C. Only open one drawer at a time.
D. Avoid placing heavy items on the top drawer or the top surface of the furniture.

2. Installation Warnings
- Follow the assembly steps as outlined in the manual.
- Do not use high-torque power tools to avoid damaging screws or fittings.
- Do not move the furniture or place heavy items on it until assembly is fully completed.

3. Child Safety
- This product is not a toy. Keep all small parts and packaging materials out of reach of children.
- Using the anti-tip device is essential to ensure child safety.

4. Electrical Safety (If Applicable)
- Before using the product, ensure all electrical components are properly connected.
- Do not attempt to disassemble or modify the electrical parts. For replacements, consult a qualified electrician.

Customer Care
If you encounter any of the following issues, please contact our customer service team promptly:
- Missing or damaged parts.
- Questions during assembly.
- Issues related to product use or maintenance.

To assist us in resolving your concerns quickly, please provide the following information:
- Order number.
- Purchase platform.
- Purchase date.
- Detailed description of the issue and photos (if applicable).

Customer Service Contact Information:
- Email: info@grandtunnel.com

Compliance with European Market Regulations
- This manual complies with the General Product Safety Directive (GPSD) and relevant regulations for furniture product instructions in the UK (Bs14749), Germany, France, Spain, and Italy.
- All warnings and maintenance guidance provided are intended to ensure user safety and prolong the product's lifespan.

Thank you for your support and trust. Enjoy your product!

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6X30mm screws.”

Contact Us:

· By Email:

Send an email to info@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

· A description of the missing parts and a photo of the parts list.
· Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to info@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: info@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

· Customer Service Email: info@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

· Order details (order number, purchase platform, purchase date).
· Clear photos or videos.
· We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

A Guide to Wall Mounting & Fixings

Important note:

Important Notes



Wall Plugs: If plastic wall plugs are supplied, they are only suitable for masonry walls.
For other wall types, consult a qualified tradesperson.
Installer Responsibility: Using incorrect fixings may result in product failure.

Befor Drilling: Always check for hidden wires or pipes in the wall.


Hints for Safe and Secure Fixing

1. Screw & Wall Plug Size: Use a larger size if unsure.
2. Drill Bit Selection: Match the drill bit size to the wall plug.
3. Drill Position: Drill horizontally and avoid enlarging the hole.
4. Care for Fragile Walls: Insert wall plugs carefully in tiles or thin walls to prevent cracks.
5. Tight Fit: Ensure wall plugs fit snugly into drilled holes.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

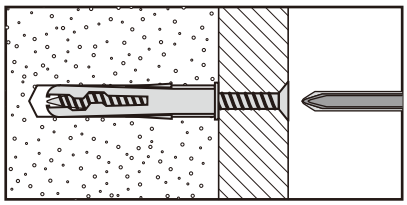


General Purpose Wall Plug: For brick, concrete, and aerated blocks. Not suitable for heavy loads.

No.3 "Cavity Fixing" wall plug

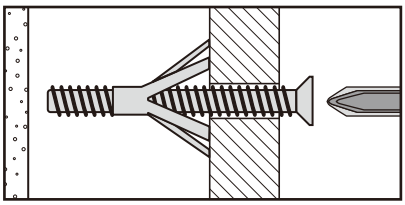


Cavity Fixing Wall Plug : For hollow wooden doors or partitions.

No.5 "Hammer Fixing" wall plug

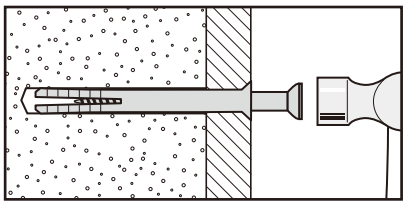


Hammer Fixing Plug: For walls stuck with plasterboard; ensure it anchors securely.

No.2 " Plasterboard" wall plug

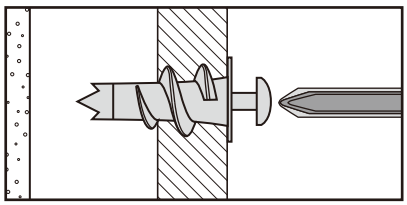


Plasterboard Wall Plug: For light loads on plasterboard partitions.

No.4 " Cavity Fixing – Heavy Duty" wall plug

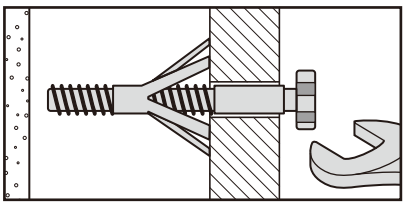

Heavy-Duty Cavity Fixing : For heavy loads like wall cabinets and shelves

No.6 " Shield Anchor" wall plug – heavy loads

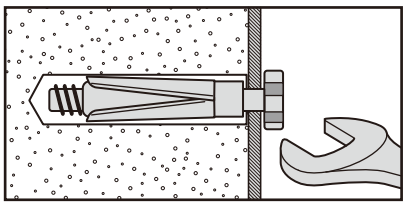

Shield Anchor Wall Plug: For very heavy loads like TV brackets or speakers

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.


Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

. Regular Checks: Inspect fittings to ensure screws and wall plugs remain secure.. Safety Reminder: Always use appropriate fixings and regularly verify stability.

Using Camlocks


Step 1

. Attach the Male Camlock
. Insert the male camlock into the designated hole on the panel as shown in the instructions.
. Secure it firmly using a screwdriver, ensuring it is tightly fitted .

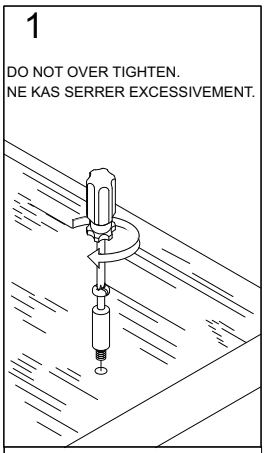


Step 2

. Insert the Male Camlock into the Entry Hole
. Push the panel with the male camlock into the corresponding entry hole of the other panel.
. Ensure the panels are aligned correctly to avoid damage during installation.

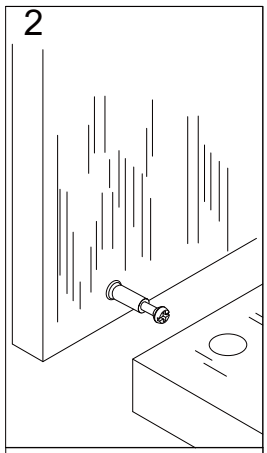


Step 3

. Install the Female Camlock
. Insert the female camlock into the pre-drilled hole on the receiving panel.
. Ensure the arrow on the top of the camlock points towards the entry hole for the male camlock.

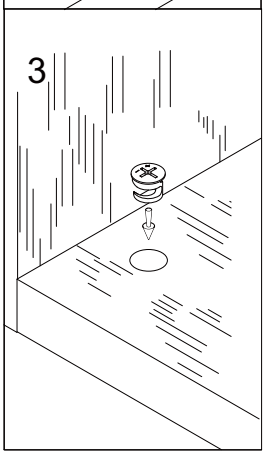

Step 4


. Tighten the Female Camlock
. Using a screwdriver, turn the female camlock clockwise until it locks the male camlock in place.
. You should feel a click or resistance once the camlock is fully secured.

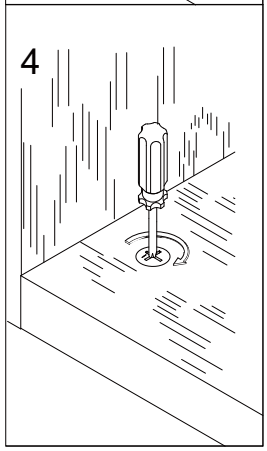

Note:
. Do not overtighten to prevent damage to the camlock or the panel.
. Ensure all camlocks are installed firmly before proceeding to the next assembly step.

Tips for Best Results:
. Use a manual screwdriver to prevent overtightening.
. Double-check alignment of the panels before tightening the camlocks to avoid misalignment.
. If a camlock feels loose, disassemble and check for proper positioning before re-securing.

Assembly Instructions

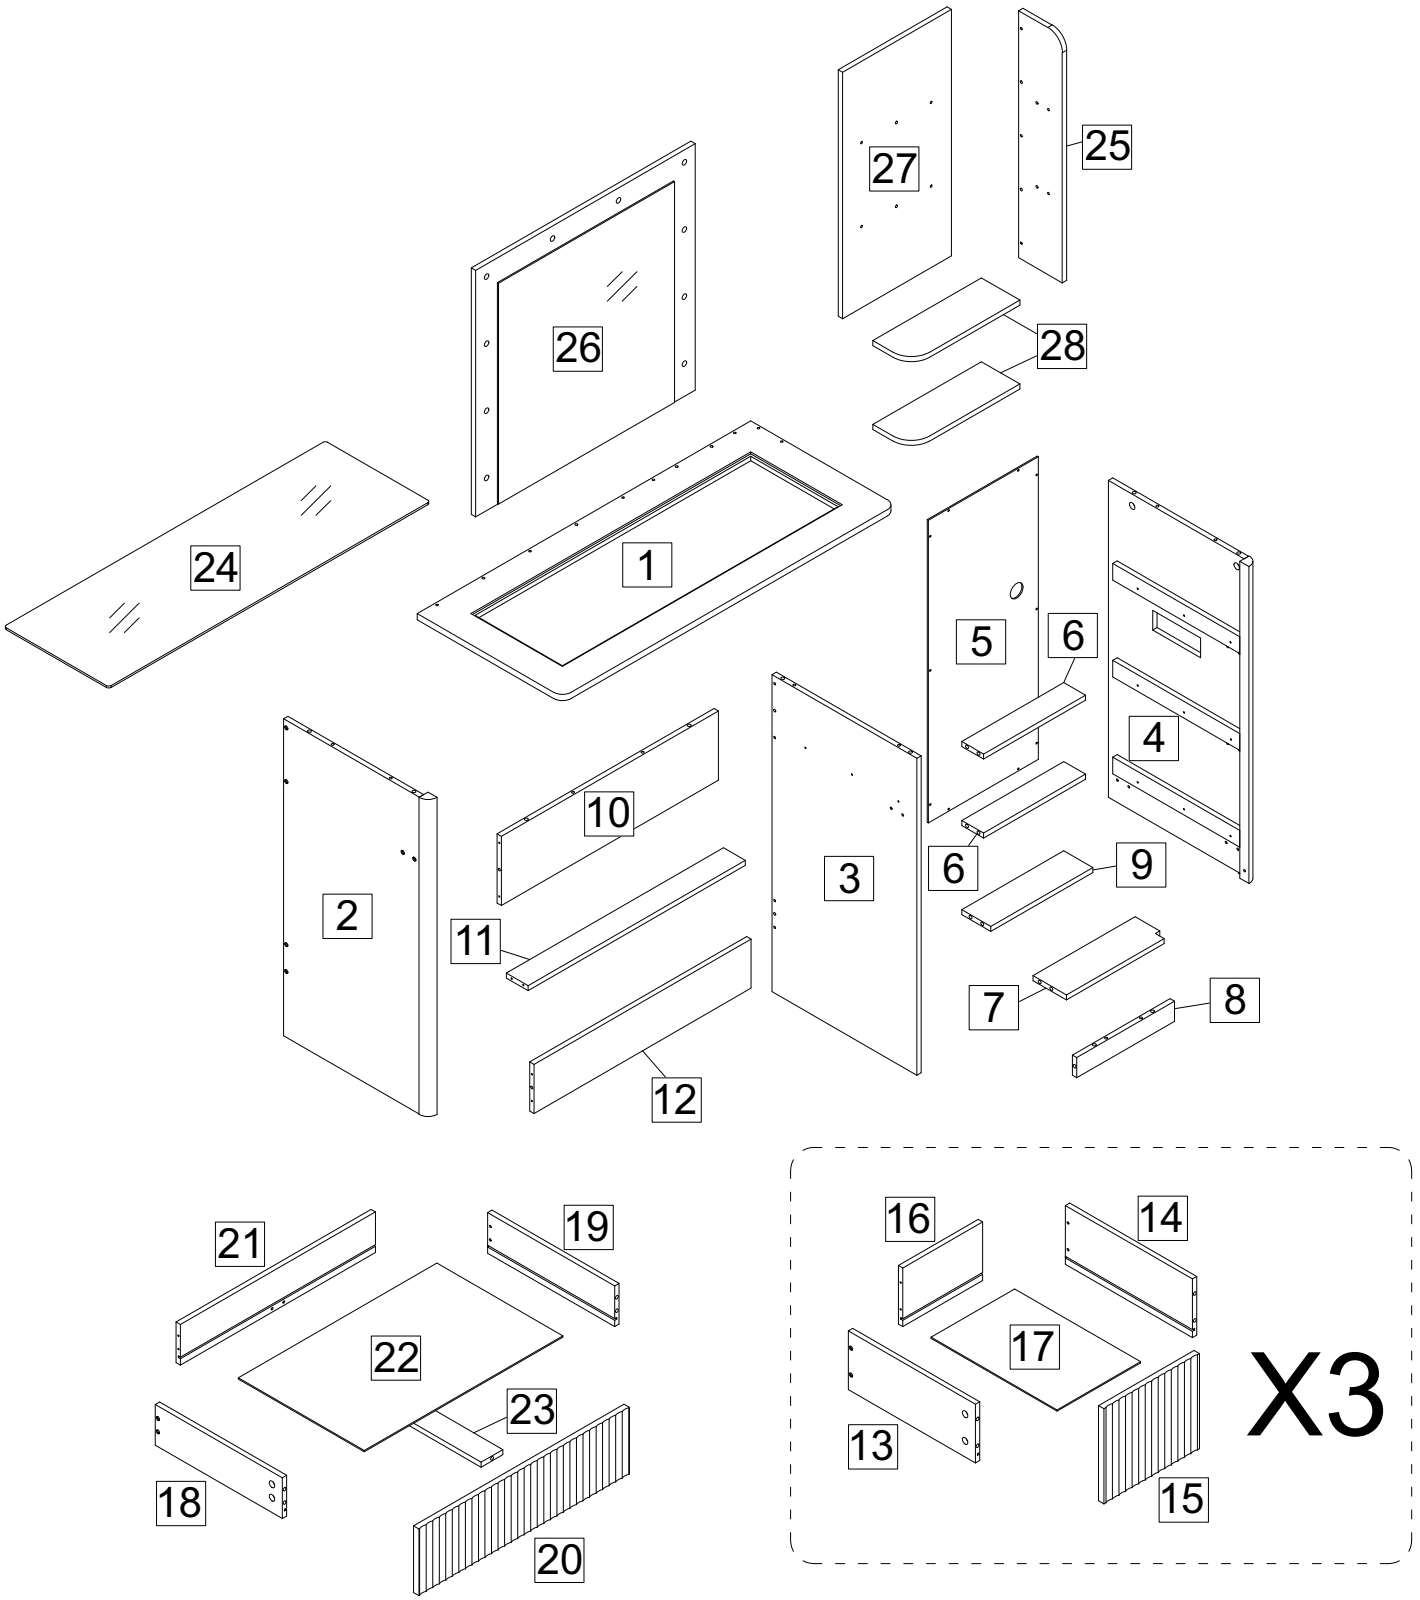

Component Identification

Arrange the parts and hardware according to the exploded diagram to ensure you can easily identify each item by its corresponding number:

- Main Structural Components: Confirm all parts (numbers 1–12,24–28) are accounted for and ready for frame assembly.
- Drawer Components: Verify that all drawer-related parts (numbers 13–23) are present for subsequent drawer assembly.

Installation Tips

- Protect the Work Area: Lay a protective mat on a flat surface to prevent scratches on components and to avoid losing small parts.
- Step-by-Step Assembly: Assemble parts in categories to prevent confusion or incorrect installation. Small Part Management: Store screws, nuts, and other small hardware in a tray or container for easy access.
- Teamwork Recommended: Due to the weight of certain components, it is advised that at least two people collaborate to assemble the frame.


. Safety Warning: For safe and stable installation:
. Properly install anti-tip devices.
. Distribute weight evenly.
. Position the cabinet against a wall.
. Avoid climbing or standing on the furniture.

Final Checks


- Ensure all screws and connecting components are securely fastened.
- Check that the frame is stable and drawers slide smoothly without obstruction.
- Confirm that all parts have been installed as shown in the diagram.

Parts List - Panels (Box 1/2)


Please make sure you have all the panels listed below.

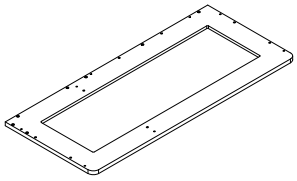


1 (919*400*15mm x1)

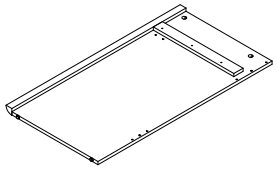


2 (756*399*25mm x1)

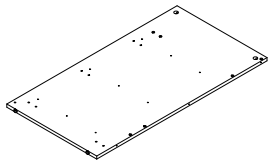


3 (756*399*12mm x1)

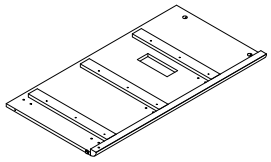


4 (756*399*25mm x1)

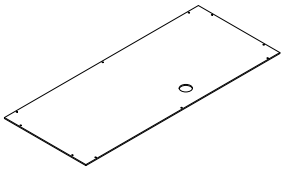


5 (722*303*3mm x1)

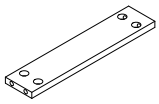


6 (281*60*12mm x2)

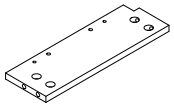


7 (281*92*12mm x1)

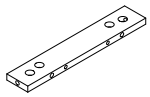


8 (269*48*12mm x1)

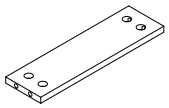


9 (281*80*12mm x1)

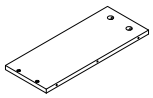


13 (350*140*12mm x3)

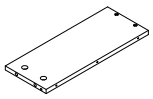


14 (350*140*12mm x3)

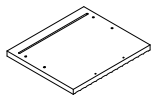


15 (227*263*15mm x3)

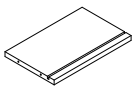


16 (220*140*12mm x3)

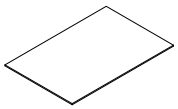


17 (347*230*3mm x3)

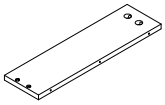


18 (350*97*12mm x1)

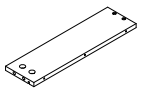


19 (350*97*12mm x1)

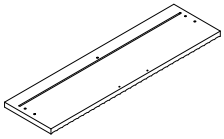


20 (159*580*15 x1)

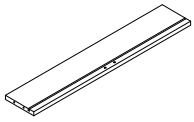

21 (537*97*12mm x1)

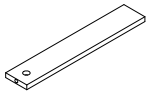


23 (337*60*12mm x1)

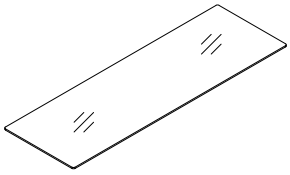


24 (769*250*4mm x1)

Parts List - Panels (Box 1/2)


Please make sure you have all the panels listed below.

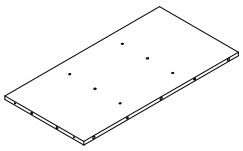

27 (588*300*12mm x1)

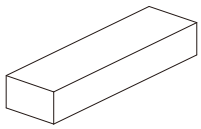


Fittings Box

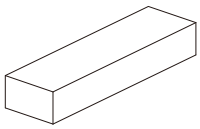


Light Bulb Box

Parts List - Panels (Box 2/2)


Please make sure you have all the panels listed below.

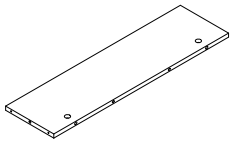


10 (598*165*12mm x1)

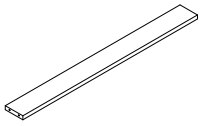


11 (598*80*12mm x1)

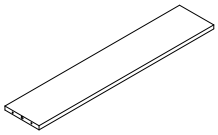


12 (598*117*12mm x1)

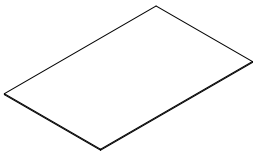


22 (547*347*3mm x1)

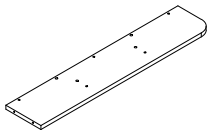

25 (589*120*12mm x1)

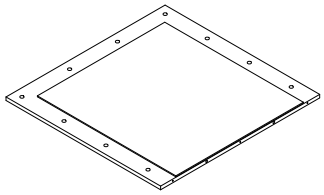


26 (588*605*12mm x1)

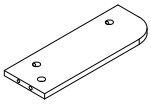


28 (299*106*12mm x2)

Components List Panels


Please ensure you have all the panels and fittings listed below before starting assembly.

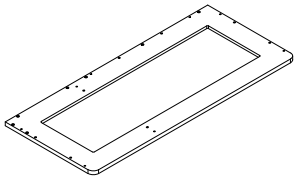


1 (919*400*15mm x1)

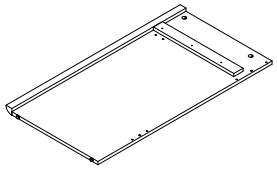


2 (756*399*25mm x1)

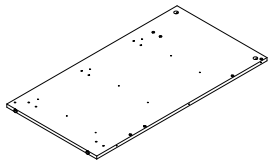


3 (756*399*12mm x1)

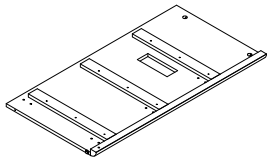


4 (756*399*25mm x1)

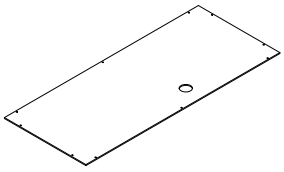


5 (722*303*3mm x1)

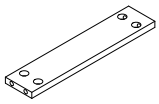


6 (281*60*12mm x2)

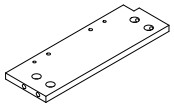


7 (281*92*12mm x1)

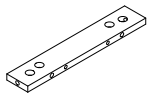


8 (269*48*12mm x1)

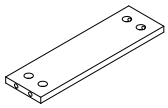


9 (281*80*12mm x1)

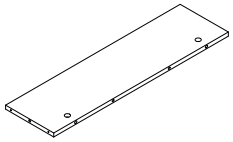


10 (598*165*12mm x1)

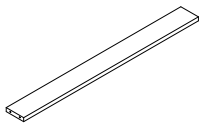


11 (598*80*12mm x1)

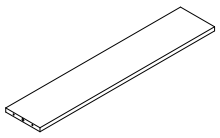


12 (598*117*12mm x1)

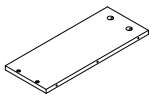


13 (350*140*12mm x3)

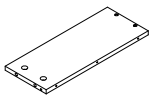


14 (350*140*12mm x3)

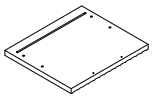


15 (227*263*15mm x3)




16 (220*140*12mm x3)




17 (347*230*3mm x3)



18 (350*97*12mm x1)




19 (350*97*12mm x1)

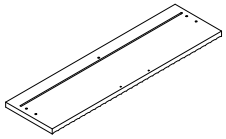


20 (159*580*15mm x1)

Components List Panels


Please ensure you have all the panels and fittings listed below before starting assembly.

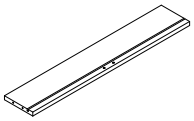


21 (537*97*12mm x1)

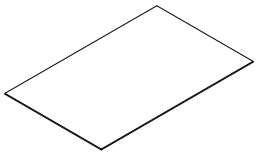


22 (547*347*3mm x1)

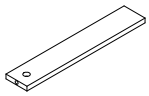


23 (337*60*12mm x1)

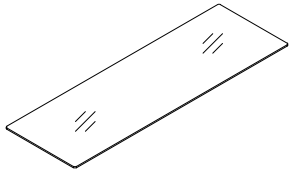


24 (769*250*4mm x1)

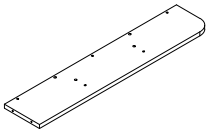


25 (589*120*12mm x1)

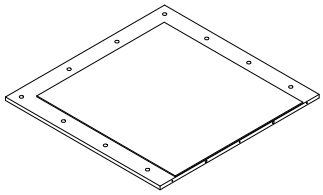

26 (588*605*12mm x1)

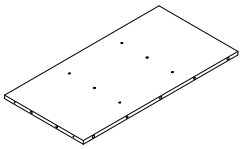

27 (588*300*12mm x1)




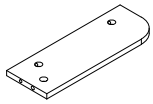


28 (299*106*12mm x2)


Components List Fittings

Please confirm that you have all the fittings listed below before starting assembly.

Note:
The quantities provided are sufficient to complete the assembly. In some cases, extra fittings may be included for convenience.

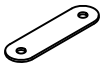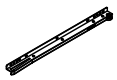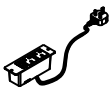
A  15*9.5mm x 54+3	B  6.5*35mm x 54+3	C  6*30mm x 24+3
D  3.5*12mm x 56+3	E  3*12mm x 8+1	F  4*35mm x 37+2
G  3*14mm x 10+1	H  4*12mm x 2+1	I  45*12mm x 3
J  120*38*17mm x 4	K  109*99*38.5x 1	L  CL L=350 x 4
L  CR L=350 x 4	L  DL L=350 x 4	L  DR L=350 x 4
M  x 1	N  21x 29+2	O  70*30*5x 1
P  x 10	Q  x 1set	


Tools required



Phllips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

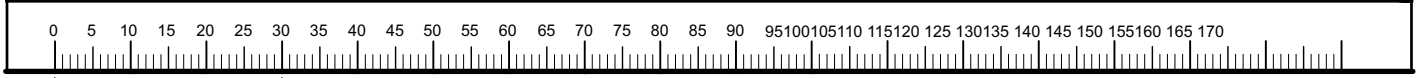


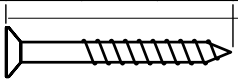


The screws length is measured from the head to the point (30mm screw shown).


Assembly Instructions

Step 1

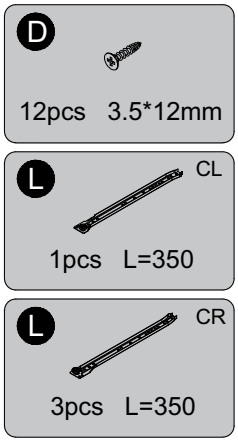


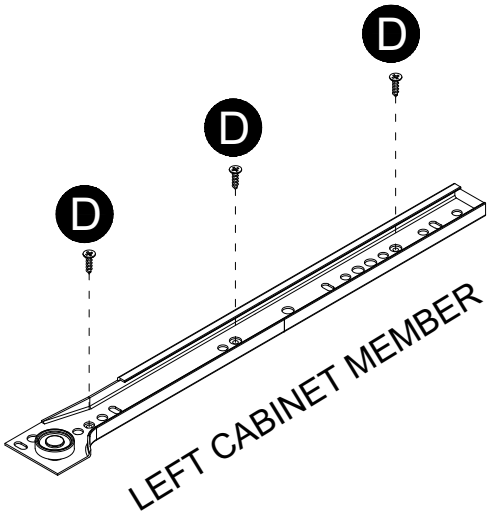


L-CL

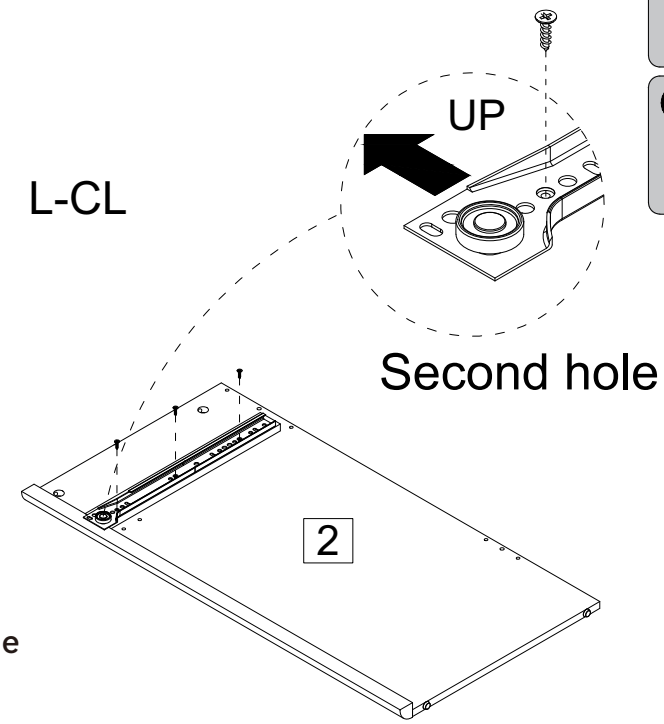

A. Use 3 screws (D) to fix the guide rail (L) to Panel 2.
B. Use 9 screws (D) to fix the 3 guide rails (L) to Panel 4.

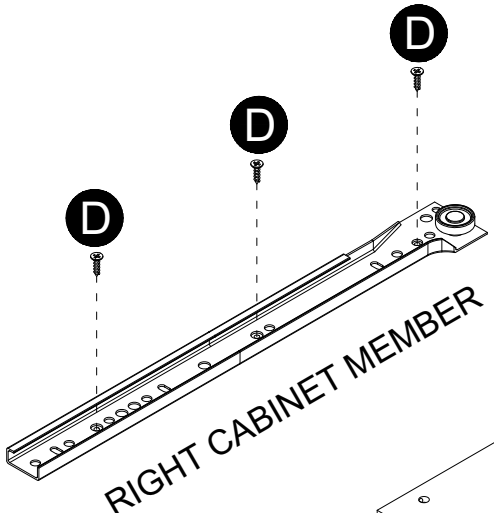


L-CR

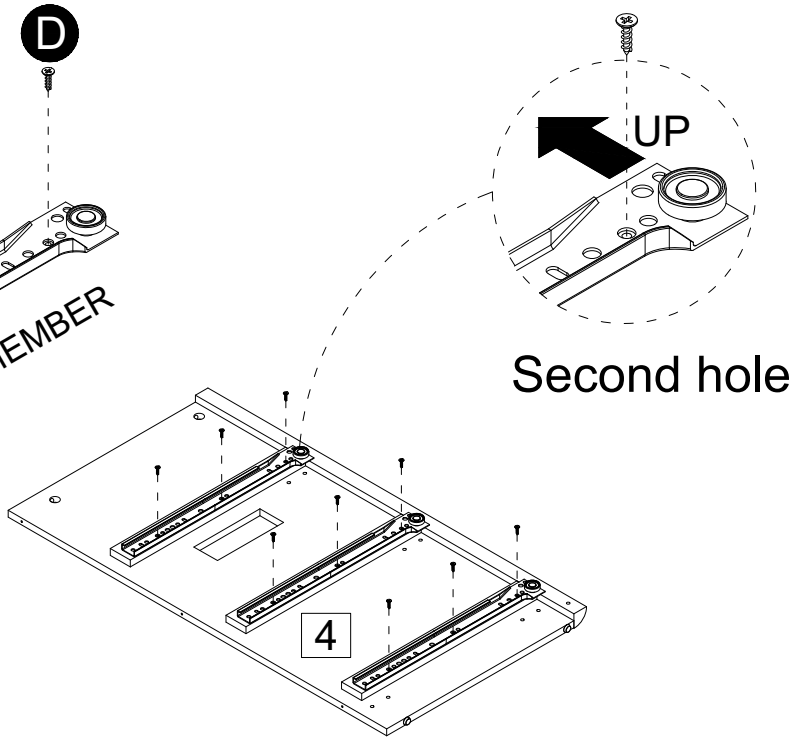


Assembly Instructions


Step 2


CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

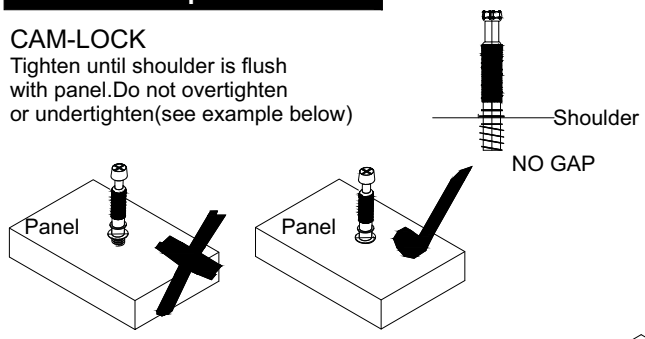


Note:
Please carefully review the "Camlock Installation Guide" to ensure the camlocks are installed correctly.

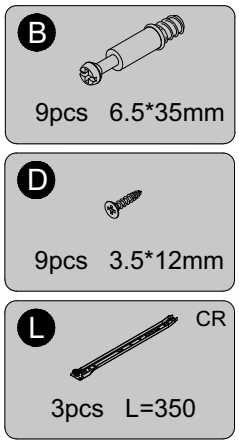

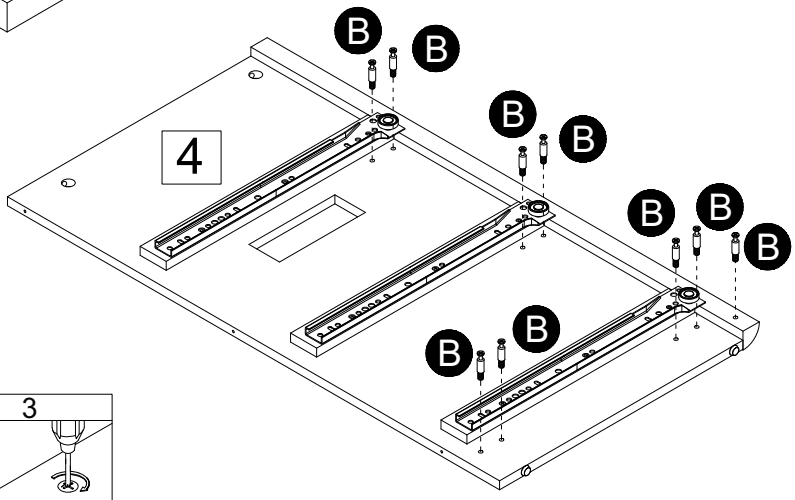

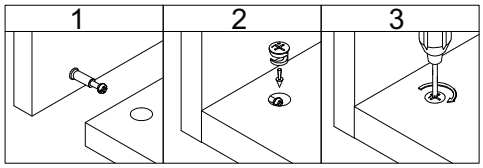

A.Install 9 cam lock screws (B) on the panel 4.

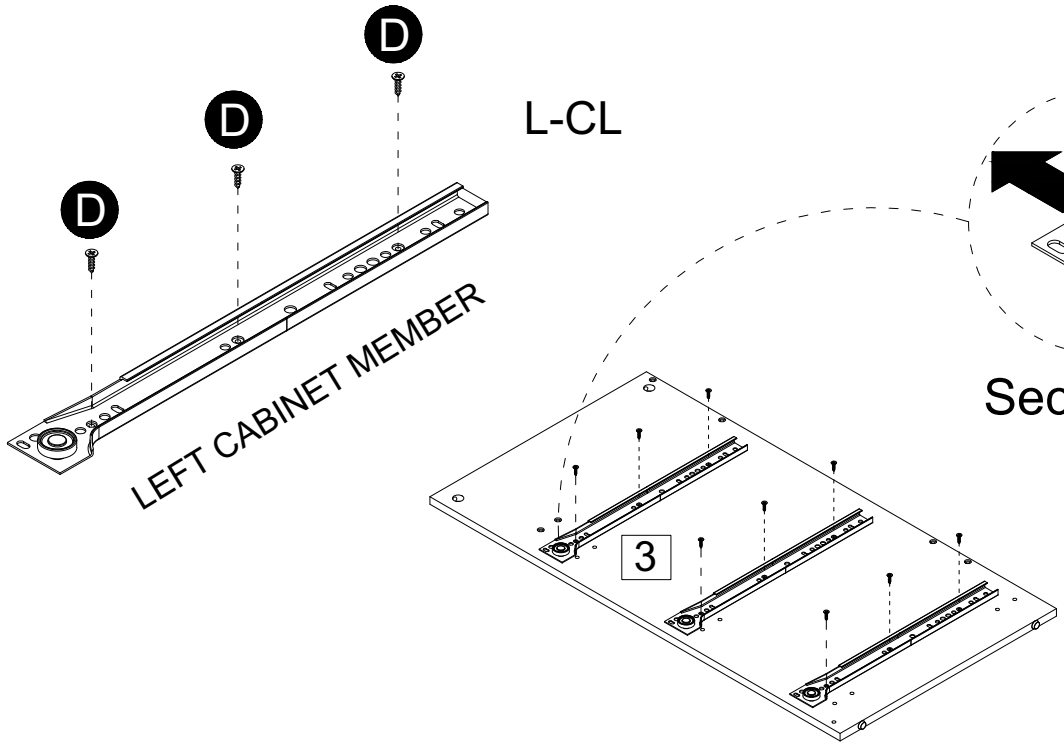



B.Use 9 screws (D) to fix the 3 guide rails to Panel 3.


Assembly Instructions


Step 3

A. Install 9 cam lock screws (B) onto Panel 3.
B. Turn Panel 3 over by 180°, then use 3 screws (D) to fix the guide rail (L) to Panel 3.

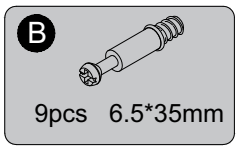


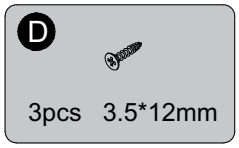

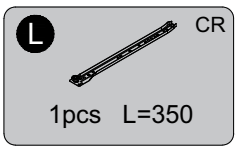


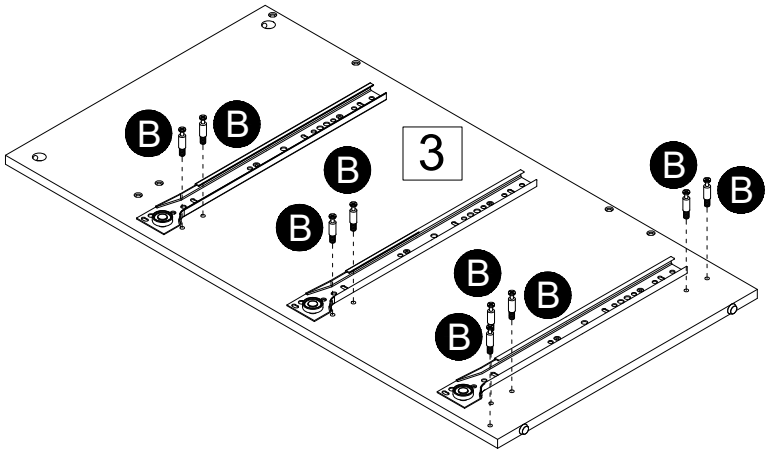


FLIP OVER

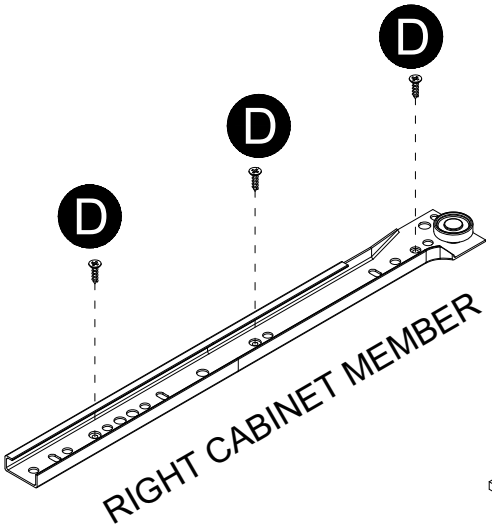

L-CR

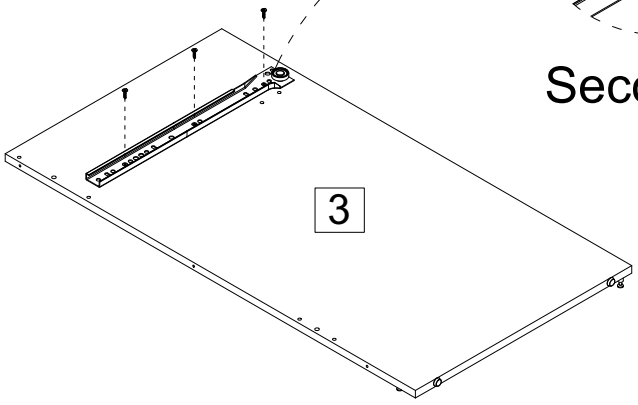

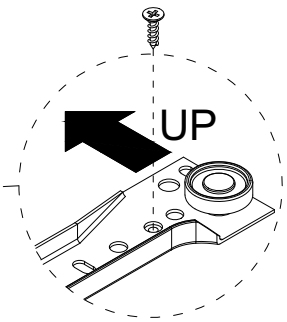

Second hole

Assembly Instructions

Step 4

Insert 4 wooden dowels (C) into Panels 10 and 12. Use 12 screws (F) to connect Panels 10, 11 and 12 to Panels 2 and 3, then tighten securely. As shown, cover the cam locks with 6 hole covers (N).

C


4pcs 6*30mm

F

12pcs 4*35mm

N

6pcs 21

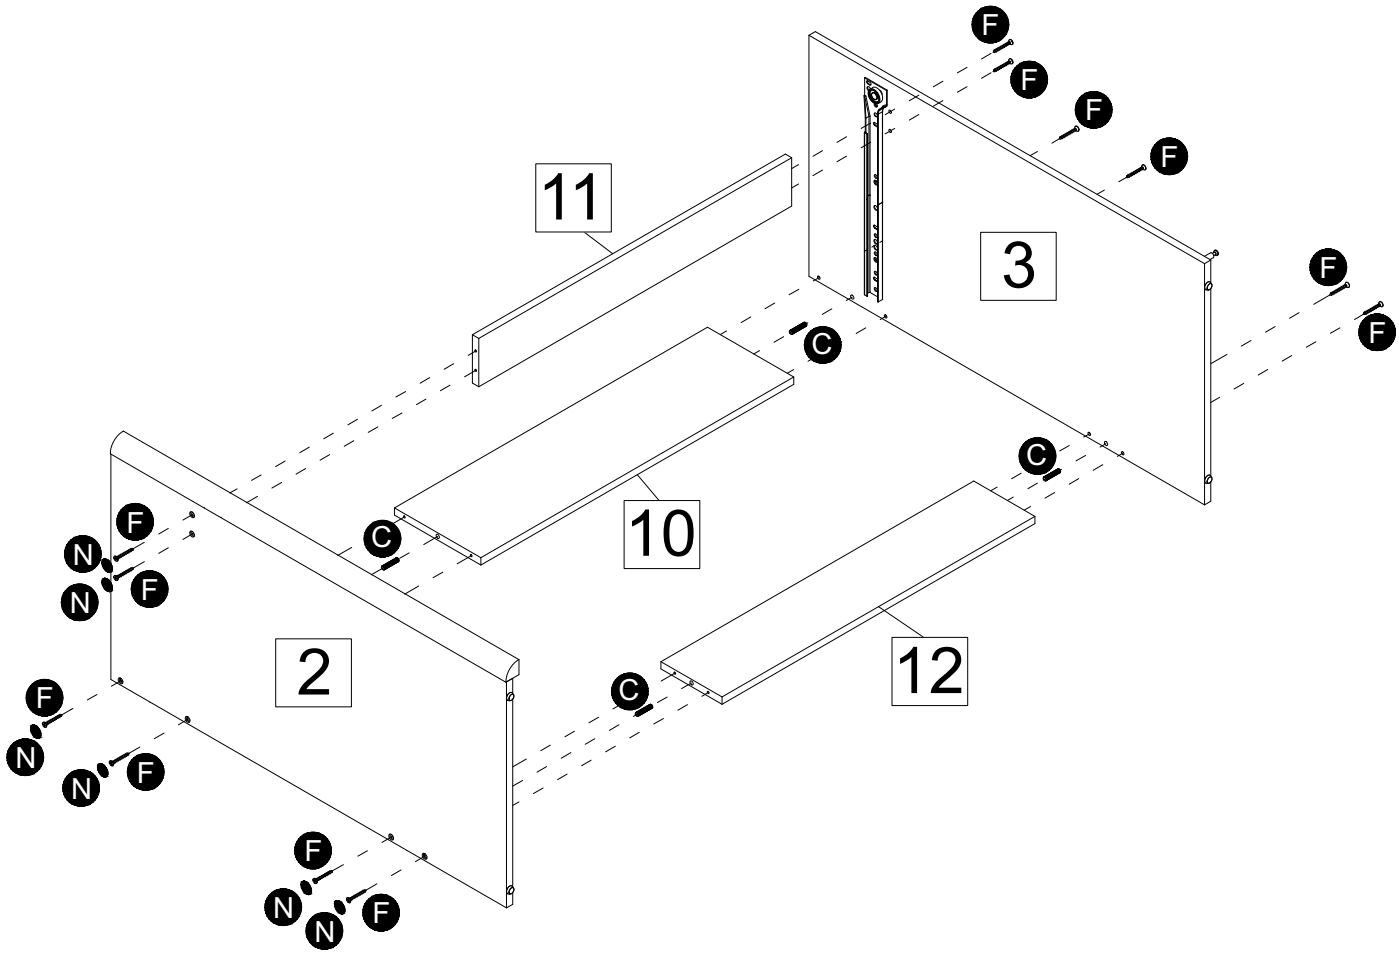



Assembly Instructions


Step 5


CAM-LOCK

Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

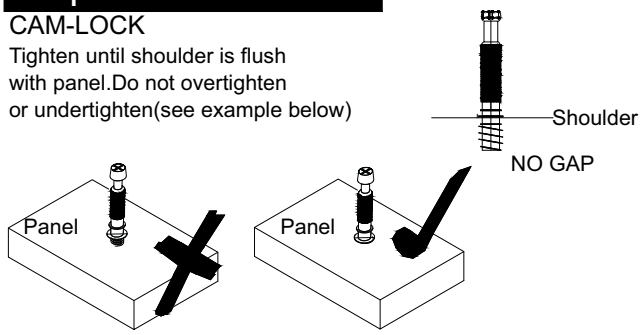


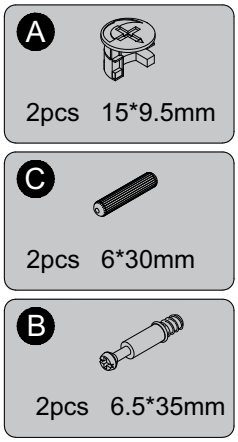

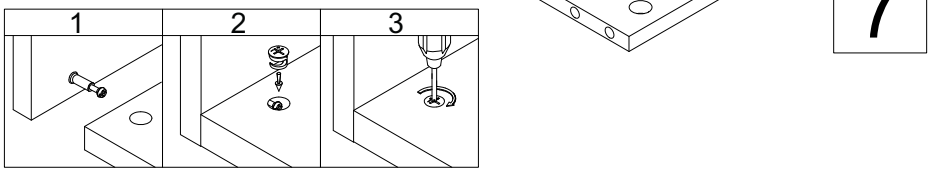

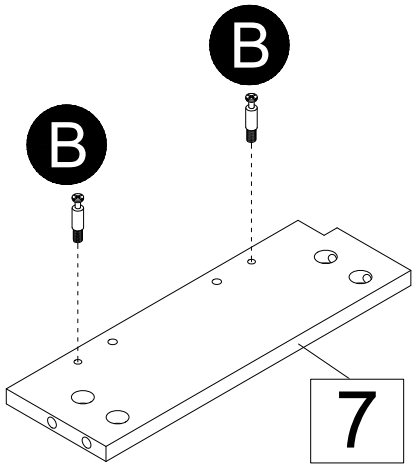

A. Install 2 cam lock screws (B) onto Panel 7.

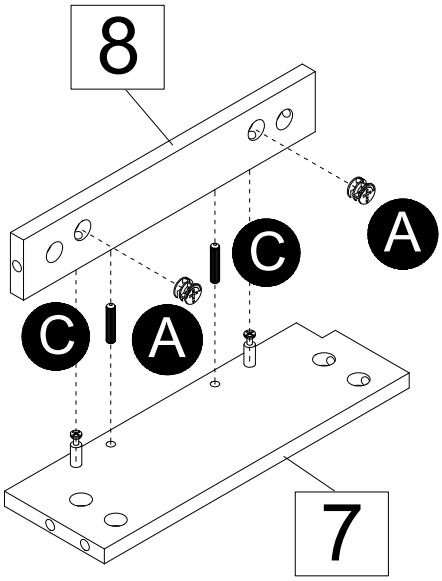



B. Insert 2 wooden dowels (C) into Panel 8 and use 2 cam locks (A) to fix Panel 7 to Panel 8.

Assembly Instructions

Step 6

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

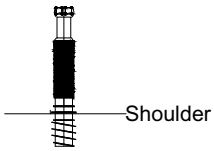


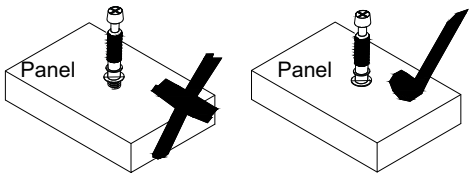


A



9pcs 15*9.5mm

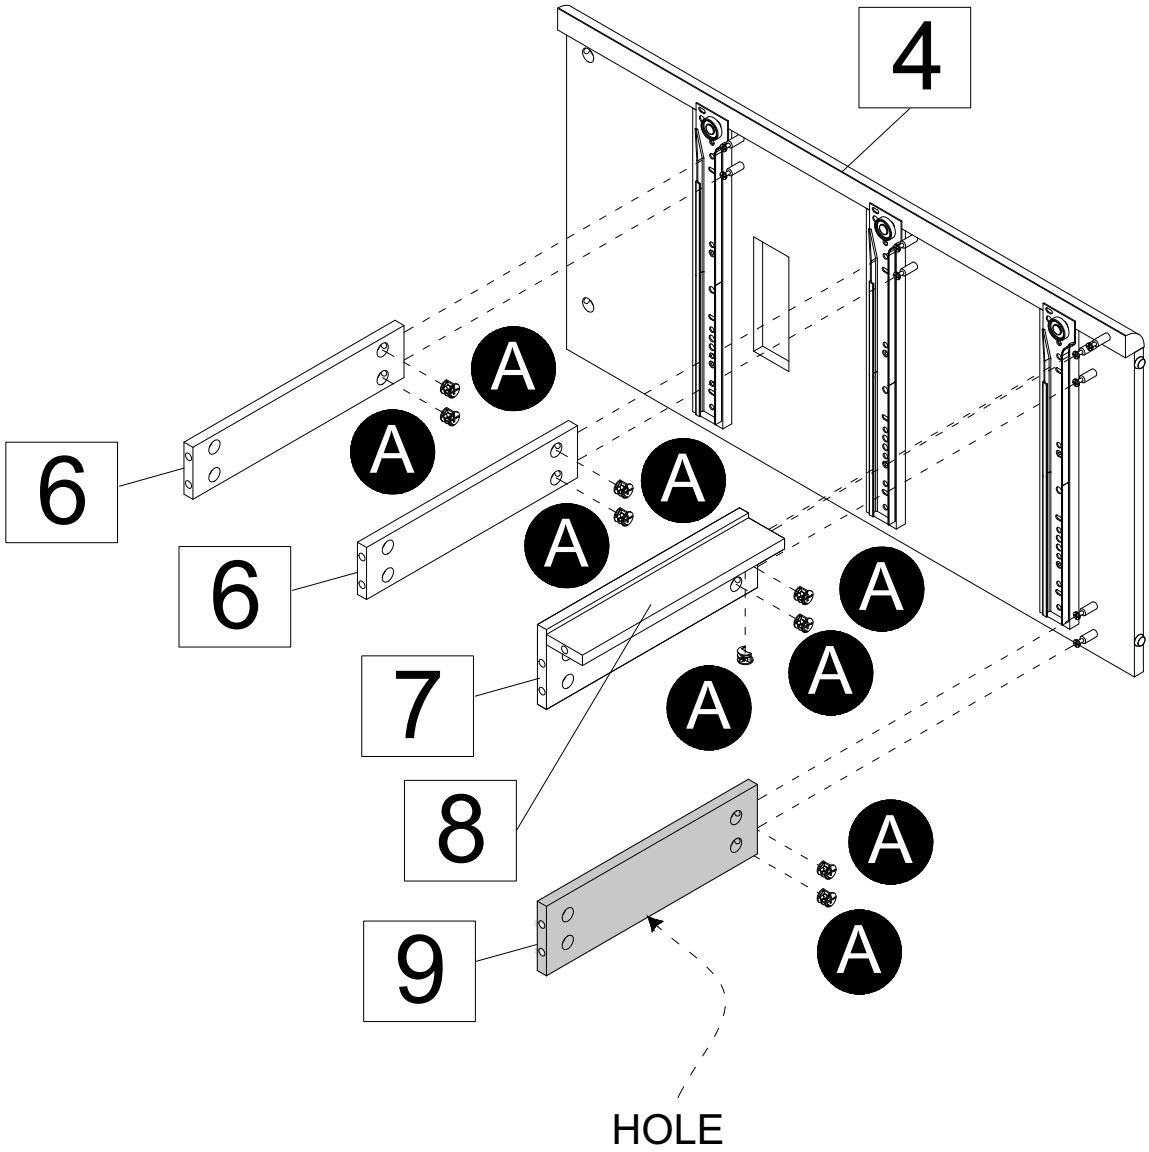

Use 9 cam locks (A) to fix the two Panels 6 and Panels 7, 8 and 9 to Panel 4. Tighten securely.

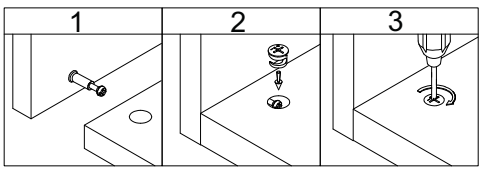


Assembly Instructions


Step 7

A



9pcs 15*9.5mm

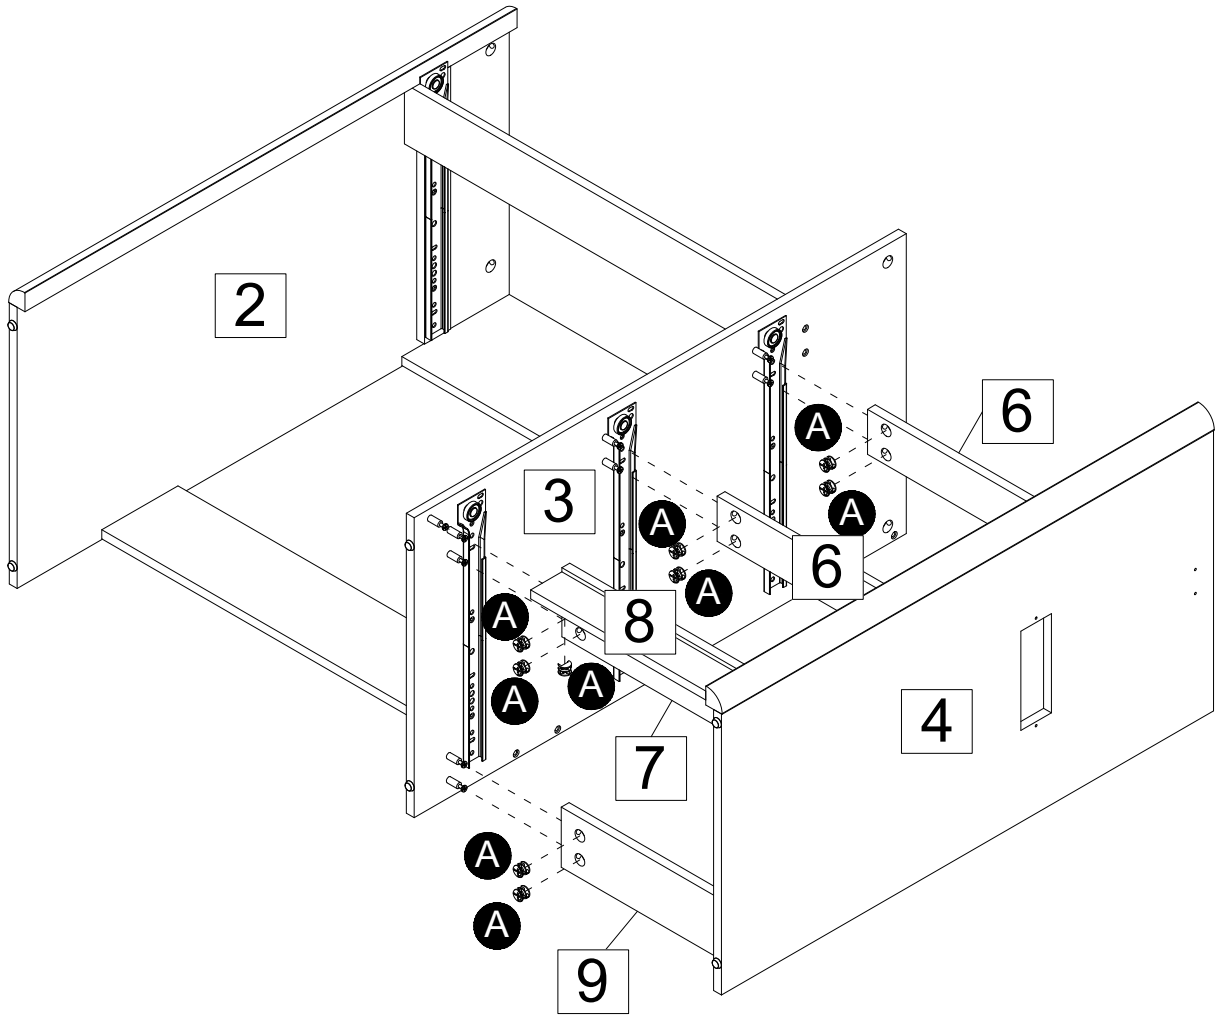

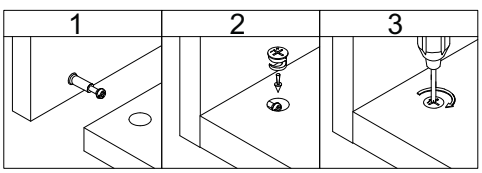



Use 9 cam locks (A) to fix the two Panels 6 and Panels 7, 8 and 9 to Panel 3. Tighten securely.

Assembly Instructions


Step 8

A. Install 4 cam lock screws (B) onto Panel 27.

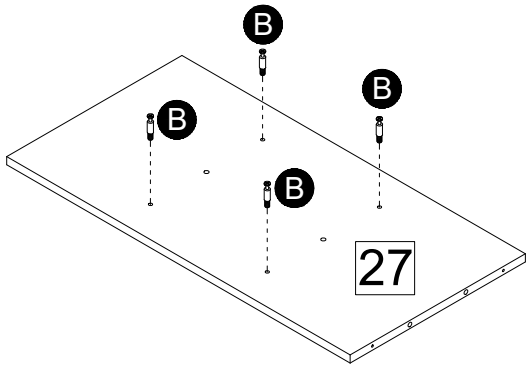


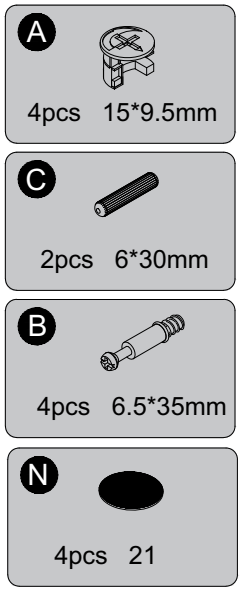

B. Insert 2 wooden dowels (C) into the two Panels 28, then use 4 cam locks (A) to fix Panel 27 in place. As shown, cover the cam locks with 4 hole covers (N).

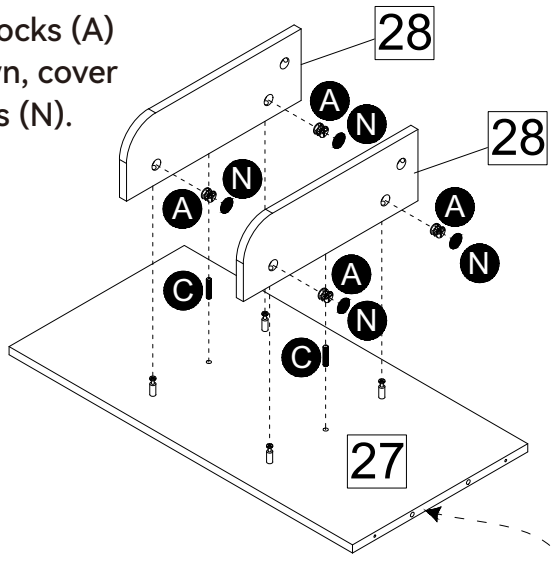



Be careful

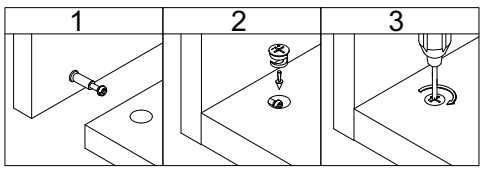


Assembly Instructions


Step 9

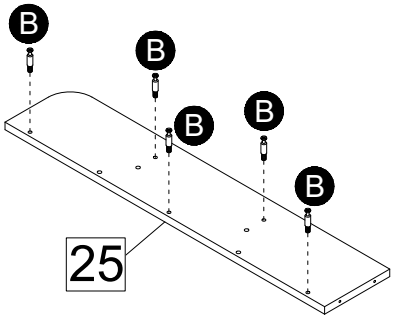


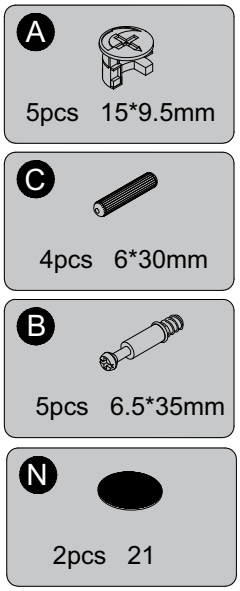

A. Install 5 cam lock screws (B) onto Panel 25.
B. Insert 4 wooden dowels (C) into Panels 27 and 28, then use 2 cam locks (A) to fix Panel 25 to Panel 28. As shown, cover the cam locks with 2 hole covers (N).
C. Turn Panel 27 over by 180°, then use 3 cam locks (A) to fix Panel 25 to Panel 27.

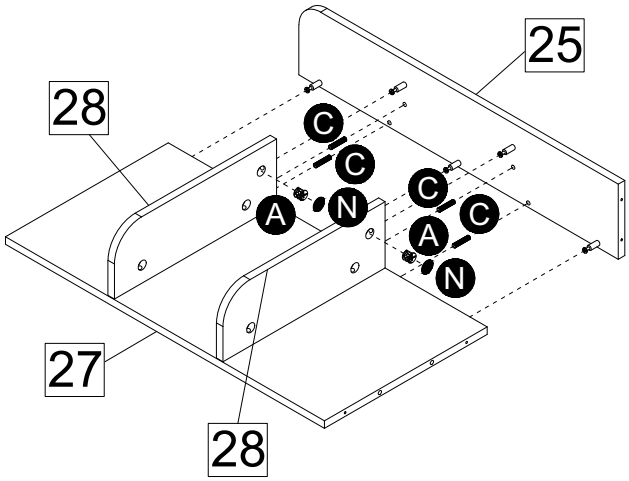

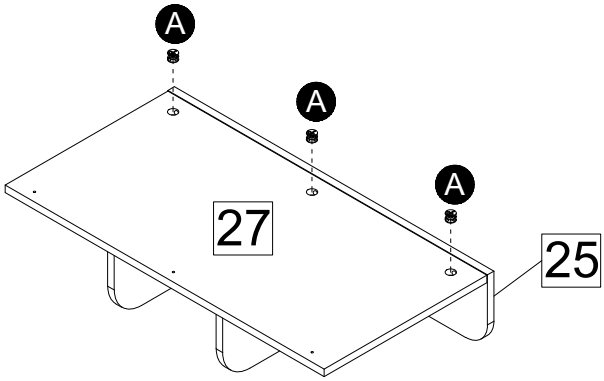


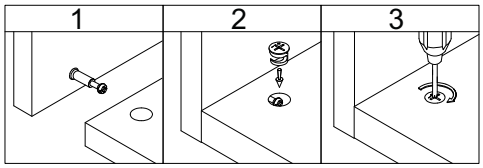


Assembly Instructions

Step 10


CAM-LOCK
Tighten until shoulder is flush
with panel.Do not overtighten
or undertighten(see example below)

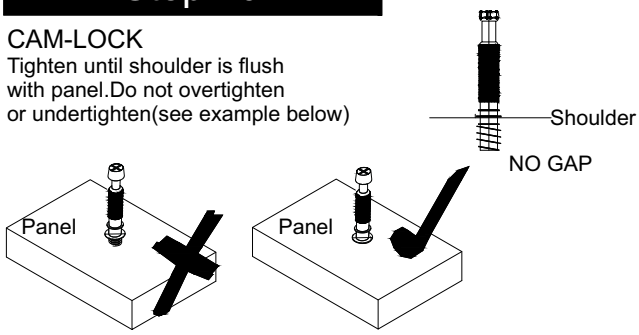

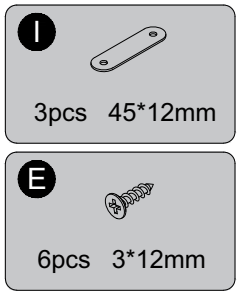

Use 6 screws (E) and 3 metal plates (I) to connect Panels 26 and 27 together.

This step requires two people.

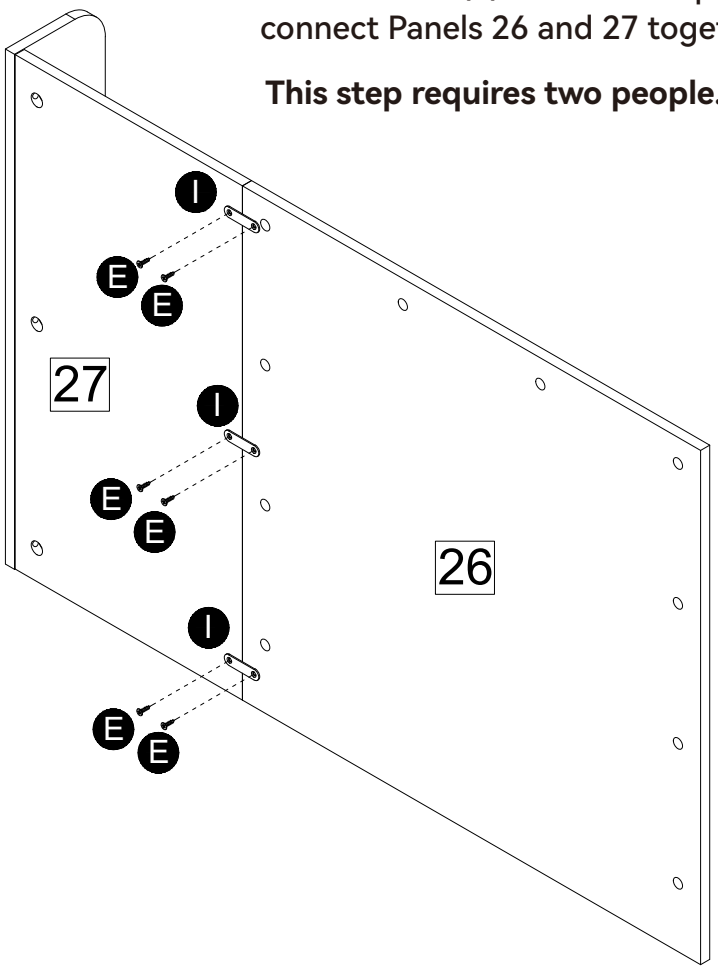

Assembly Instructions

Step 11

C




4pcs 6*30mm

F



7pcs 4*35mm


Insert 4 wooden dowels (C) into Panels 25 and 26, then use 7 screws (F) to connect Panel 1 to Panels 25, 26 and 27. Tighten securely.

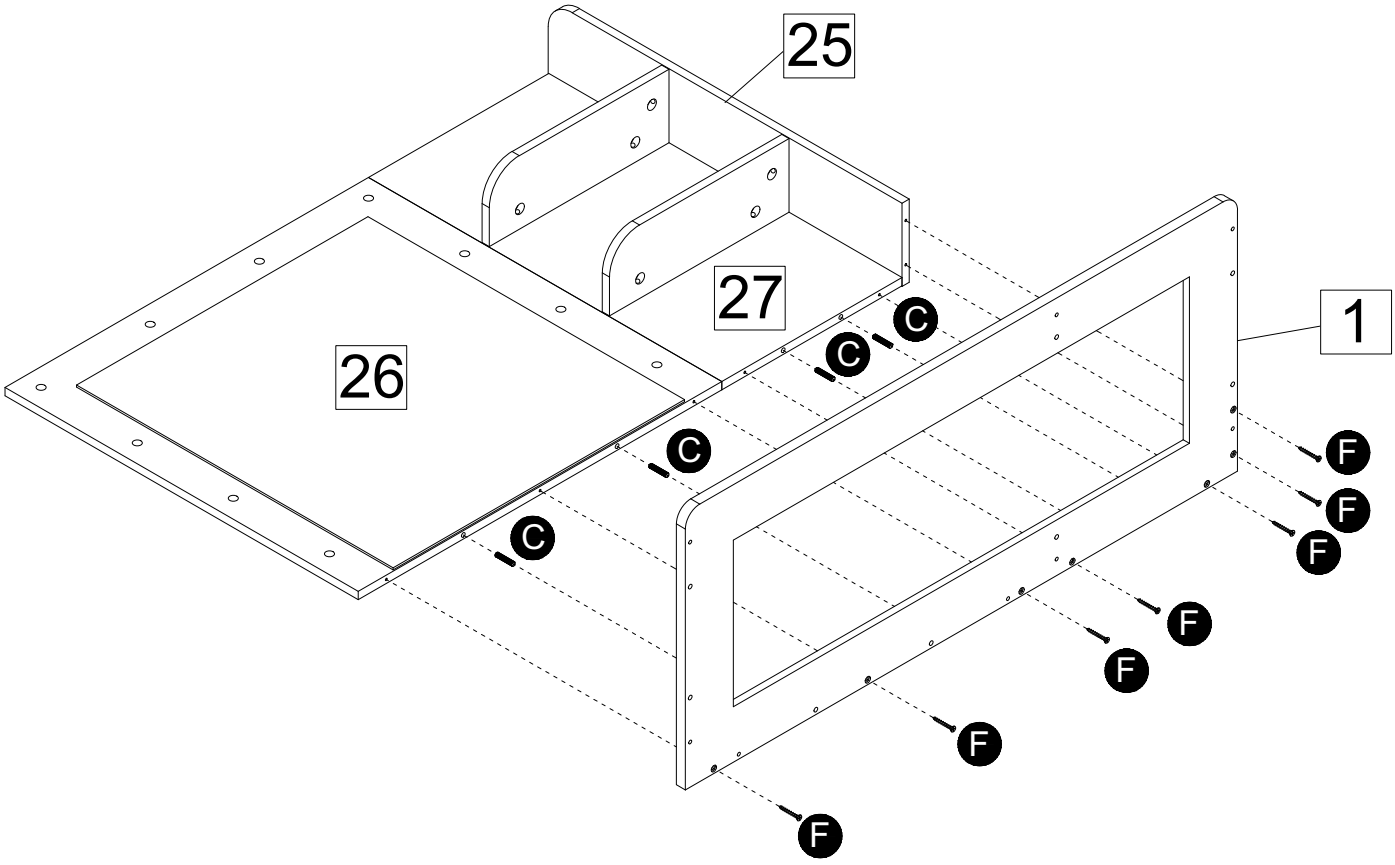


Assembly Instructions


Step 12


CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

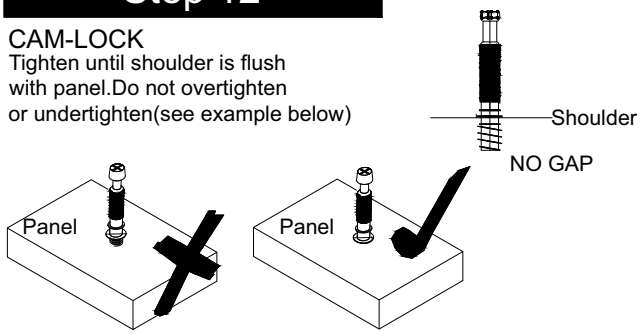

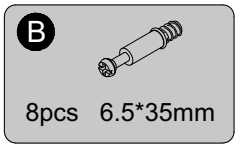


Install 8 cam lock screws (B) onto Panel 1.

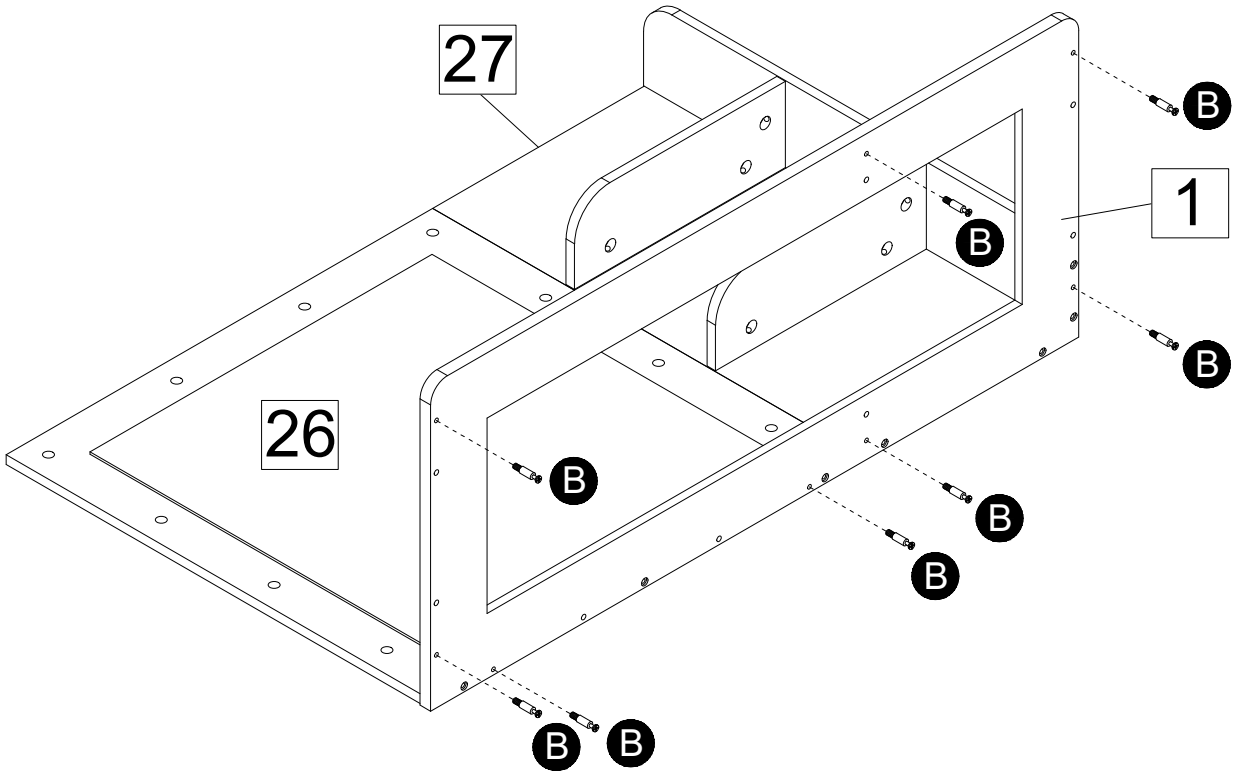

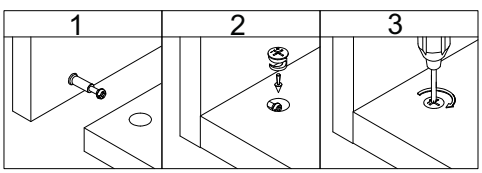


Assembly Instructions


Step 13

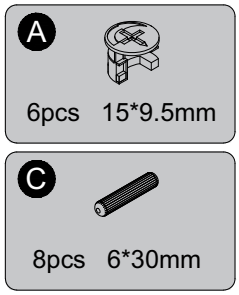

Insert 8 wooden dowels (C) into Panels 2, 3, 4 and 10, then use 6 cam locks (A) to fix Panel 1 to Panels 2, 3, 4 and 10.

This step requires two people.

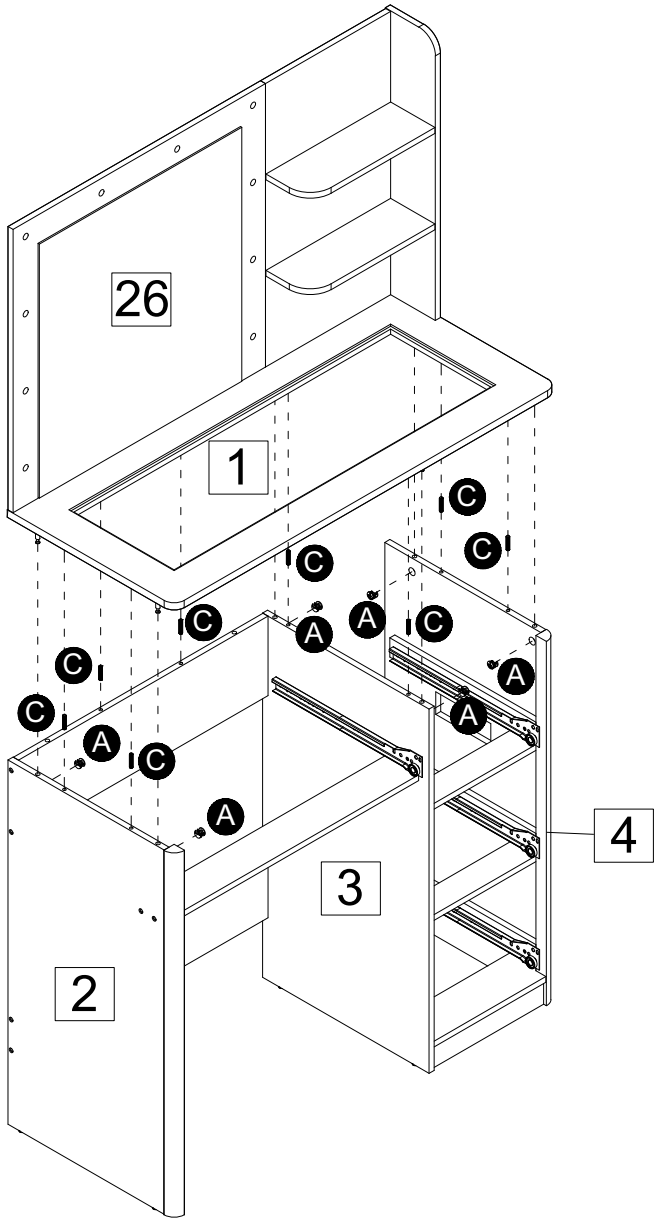


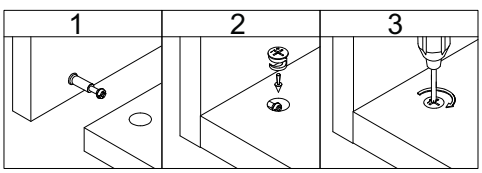



Assembly Instructions


Step 14

Use 2 cam locks (A) to fix Panels 26 and 27 to Panel 10. As shown, use 10 screws (G) to fix Panel 5. Use screw (Q) to fix the plastic fixing piece (Q) onto Panel 26.

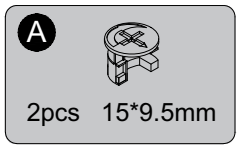

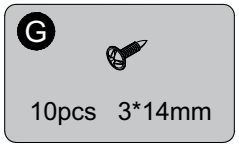

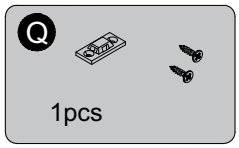

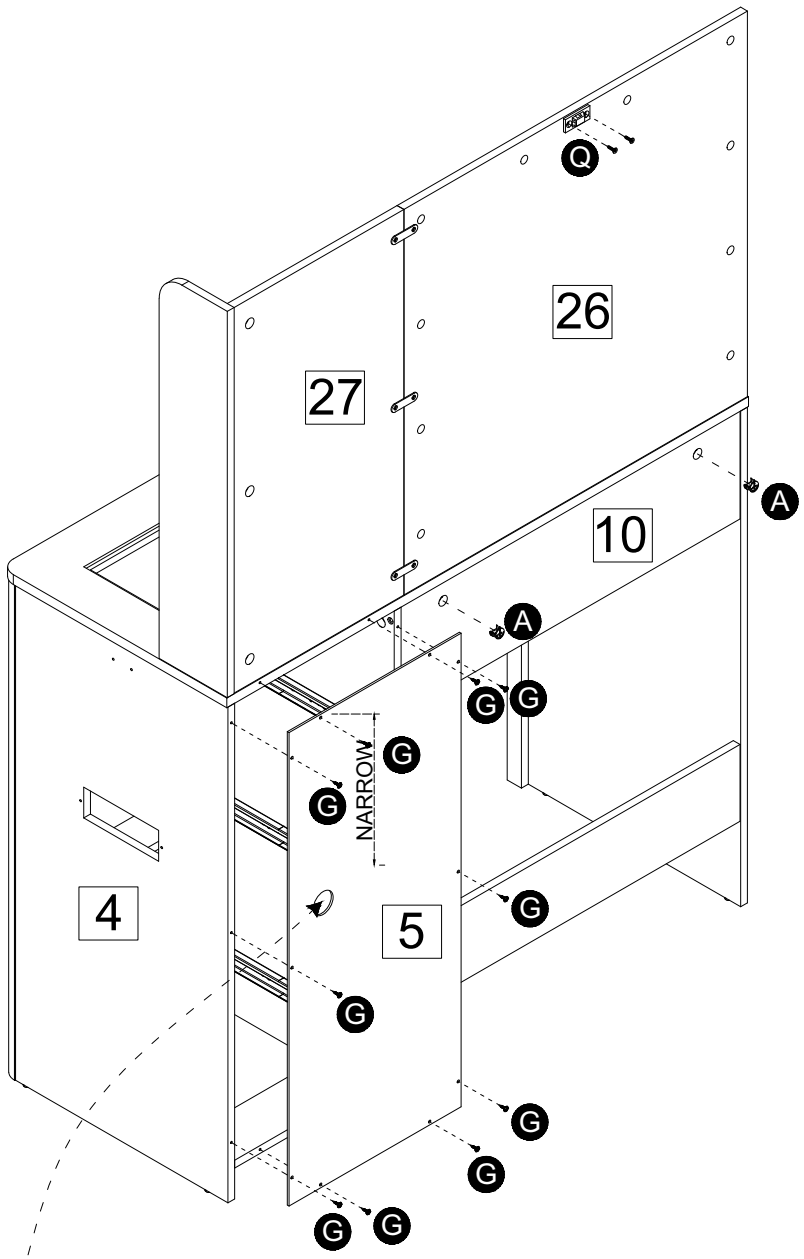

When installing Panel 5, please pay attention to the spacing and orientation of the round holes; the narrower spacing should face towards it.

Assembly Instructions

Step 15

E

2pcs 3*12mm

M

1pcs

H


2pcs 4*12mm

K

1pcs 190*99*38.5

WARNING

USE APPROVED USB POWER SOURCE
Connect only to a certified 5V 2A USB power adapter.
Do not use damaged or uncertified chargers.

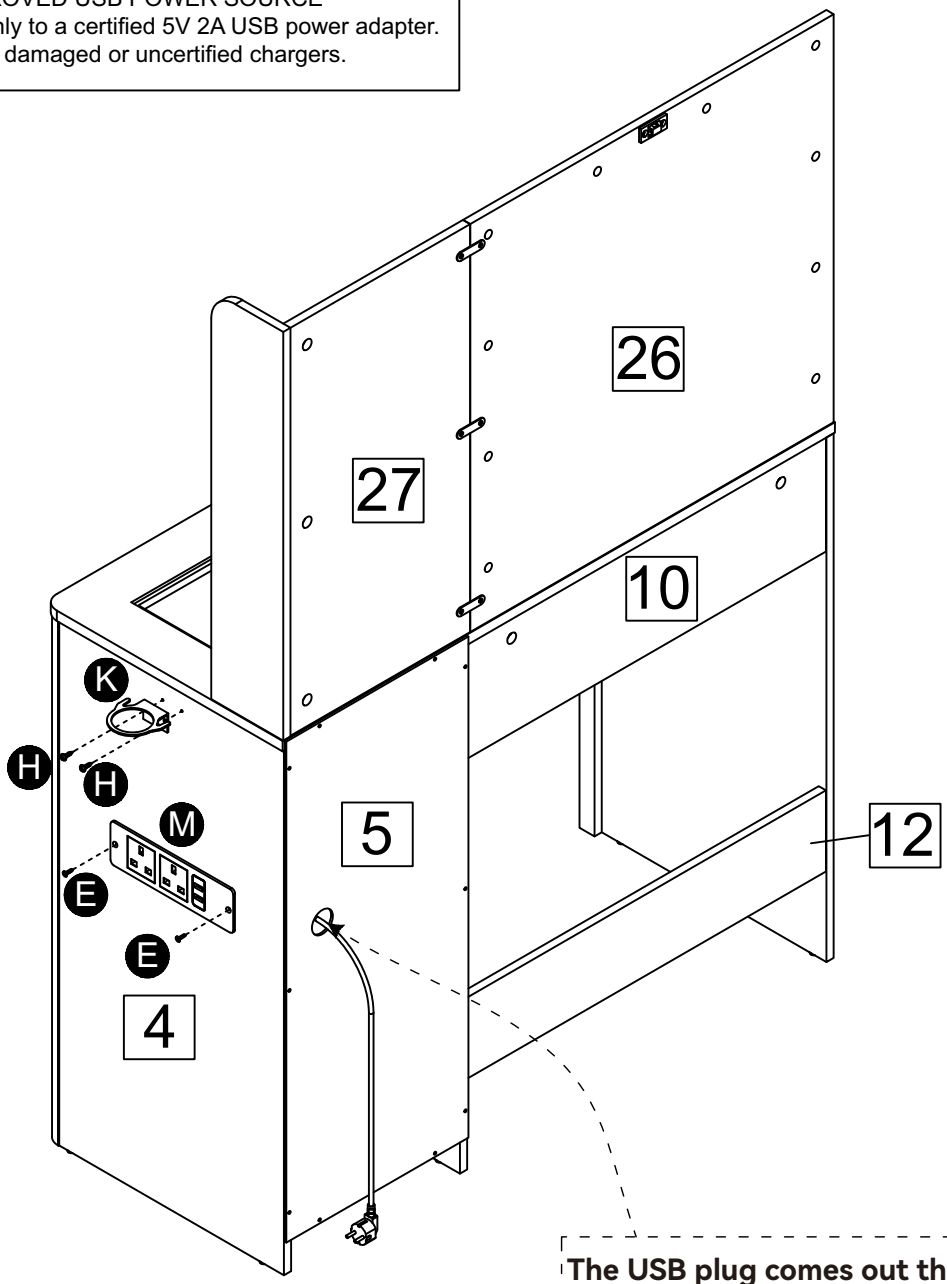


The USB plug comes out through the hole in the back panel.

Use 2 screws (H) to fix the hair dryer holder (K) to Panel 4. As shown, use 2 screws (E) to fix the socket (M) to Panel 4.


Assembly Instructions

Step 16

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

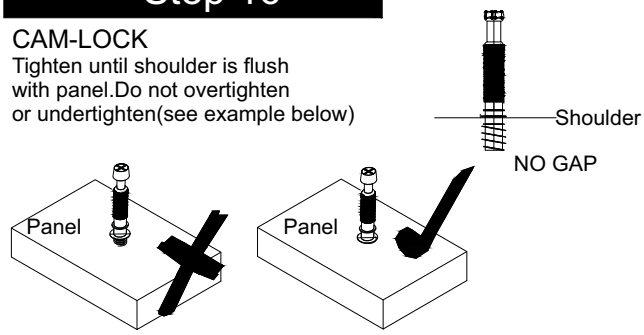


N 12pcs 21	D 6pcs 3.5*12mm	A 12pcs 15*9.5mm	
J 3pcs 120*38*17mm	B 12pcs 6.5*35mm	F 12pcs 4*35mm	

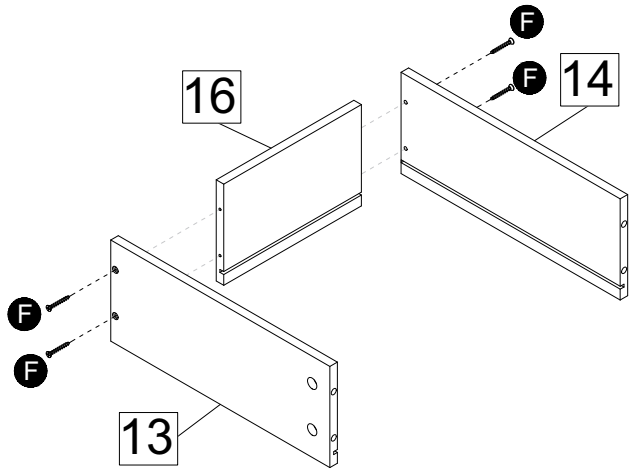


A. Use 4 screws (F) to connect Panels 13 and 14 to Panel 16.

Step 1

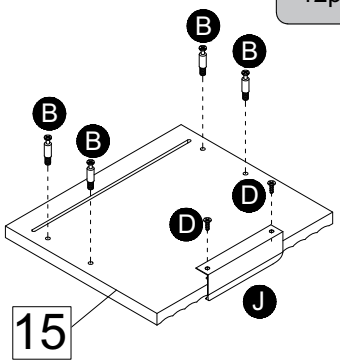


C. Install 4 cam lock screws (B) onto Panel 15, then use 2 screws (D) to fix the handle (J) to Panel 15.

FLIP OVER

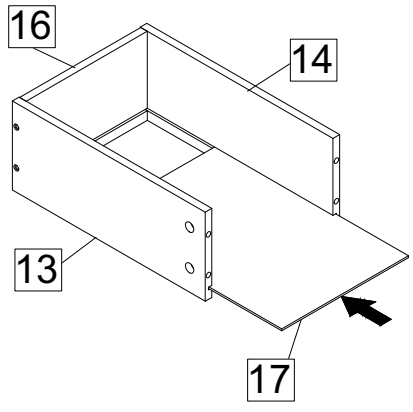


B. Insert Panel 17 into the groove as shown.

Step 2

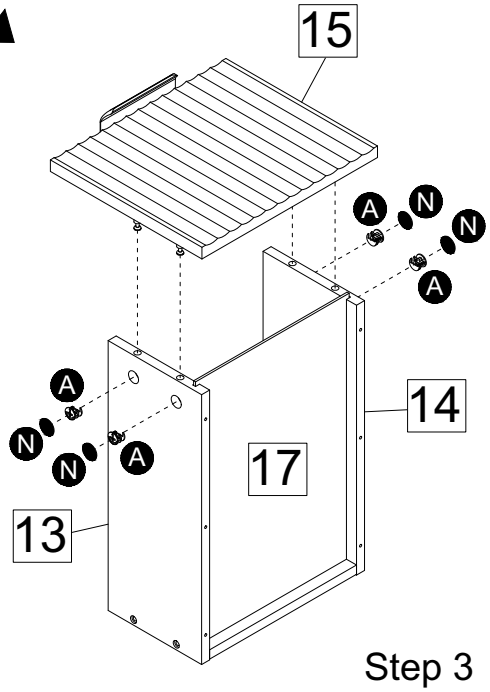

Step 3

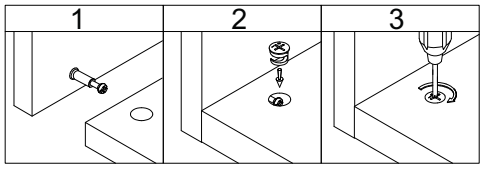

D. Use 4 cam locks (A) to fix Panels 13 and 14 to Panel 15. Cover with 4 hole covers (N).

X3

Assembly Instructions


Step 17

Use 6 screws (D) to fix the left and right guide rails (L) to Panels 13 and 14 respectively.

D
18pcs 3.5*12mm

L DL
3pcs L=350

L DR
3pcs L=350

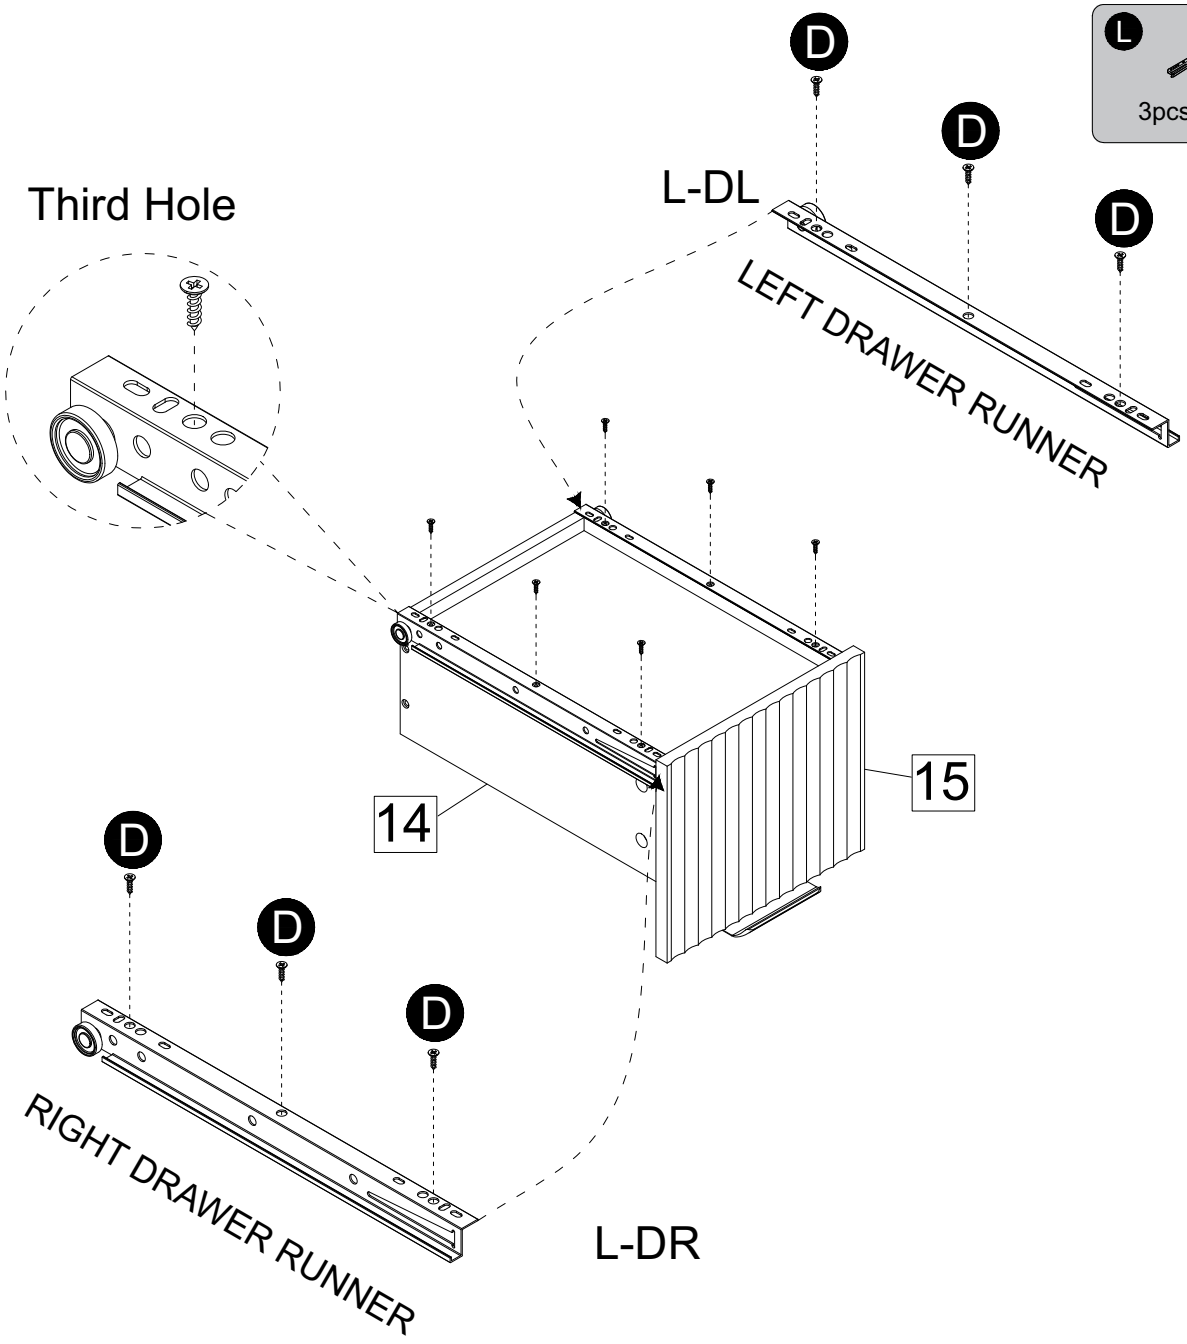


X3


Assembly Instructions

Step 18

CAM-LOCK
Tighten until shoulder is flush with panel.Do not overtighten or undertighten(see example below)

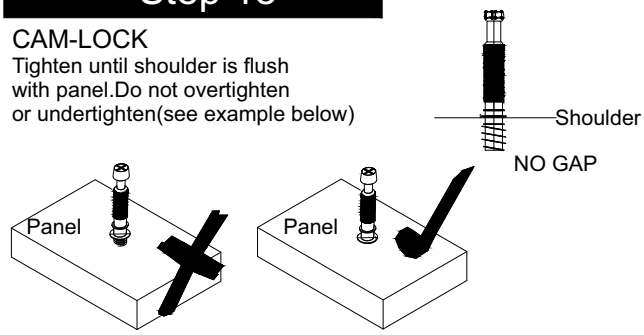


N 5pcs 21	D 2pcs 3.5*12mm	A 5pcs 15*9.5mm	
J 1pcs 120*38*17mm	B 5pcs 6.5*35mm		
	F 6pcs 4*35mm		

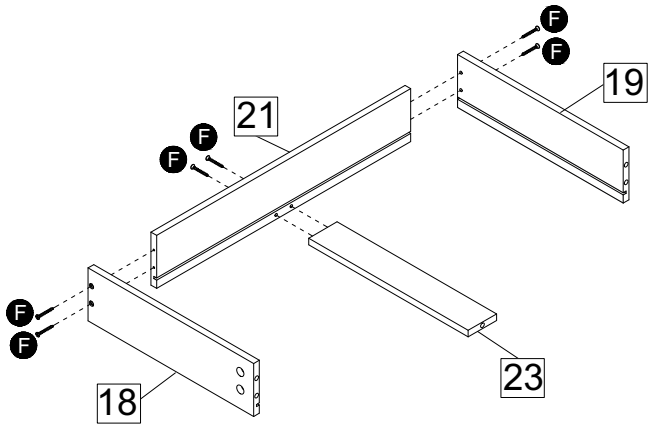


A. Use 6 screws (F) to connect Panels 18, 19 and 23 to Panel 21.

Step 1

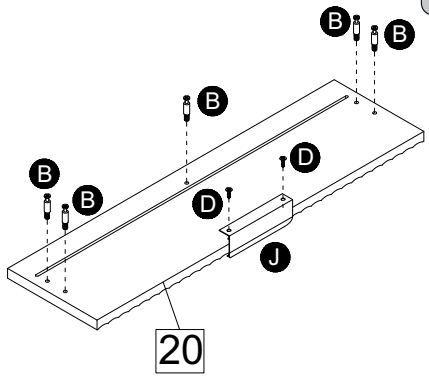


C. Install 5 cam lock screws (B) onto Panel 20, then use 2 screws (D) to fix the handle (J) to Panel 20.

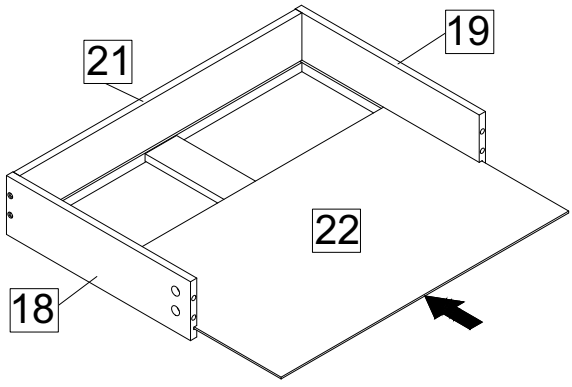


B. Insert Panel 22 into the slot as shown.

Step 2

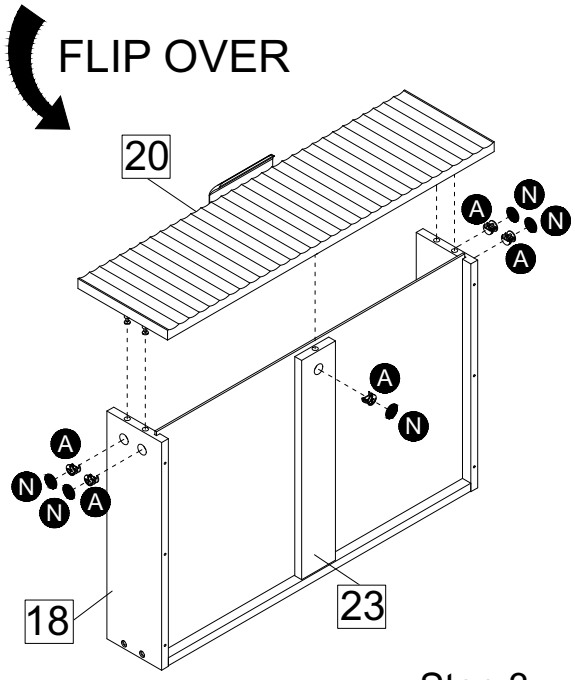

Step 3

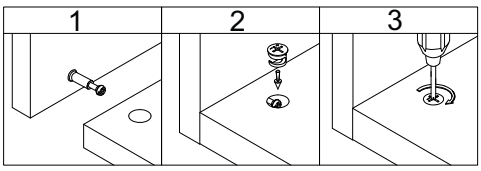

D. Use 5 cam locks (A) to fix Panels 18, 19 and 23 to Panel 20. Cover with 5 hole covers (N).

Assembly Instructions


Step 19

Use 6 screws (D) to fix the left and right guide rails (L) to Panels 18 and 19 respectively.

D
6pcs 3.5*12mm


L DL
1pcs L=350

L DR
1pcs L=350

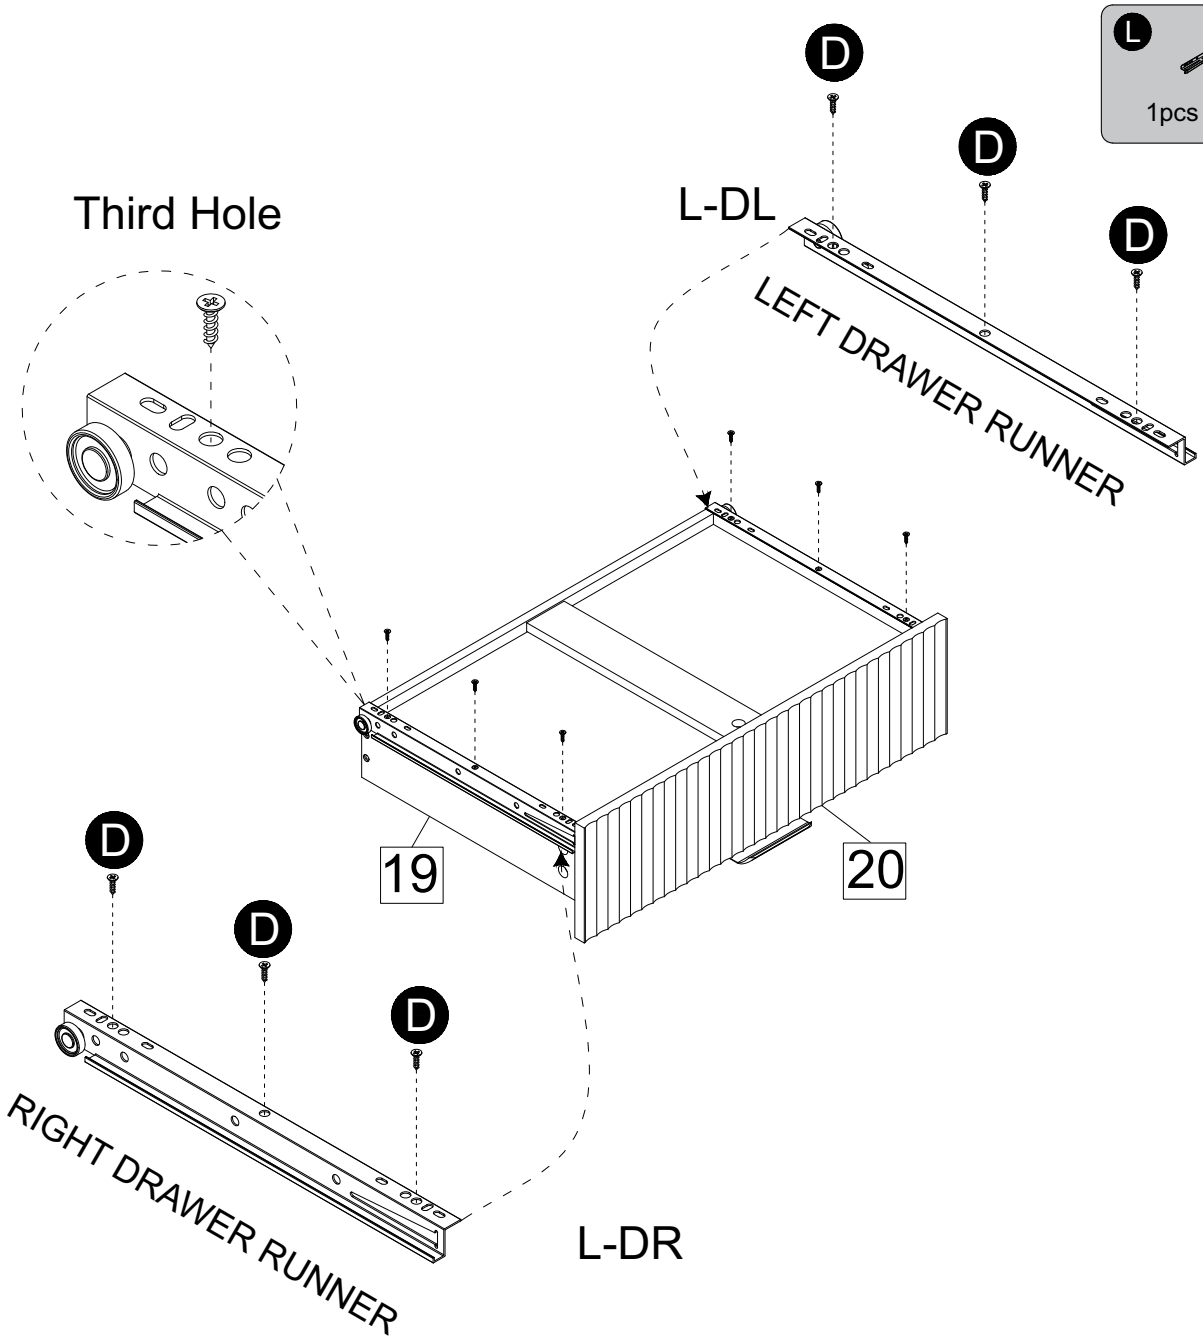


Assembly Instructions

Step 20

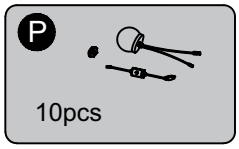

Pass the bulb (P) through the hole in Panel 26, then rotate the mounting nut clockwise to secure it.

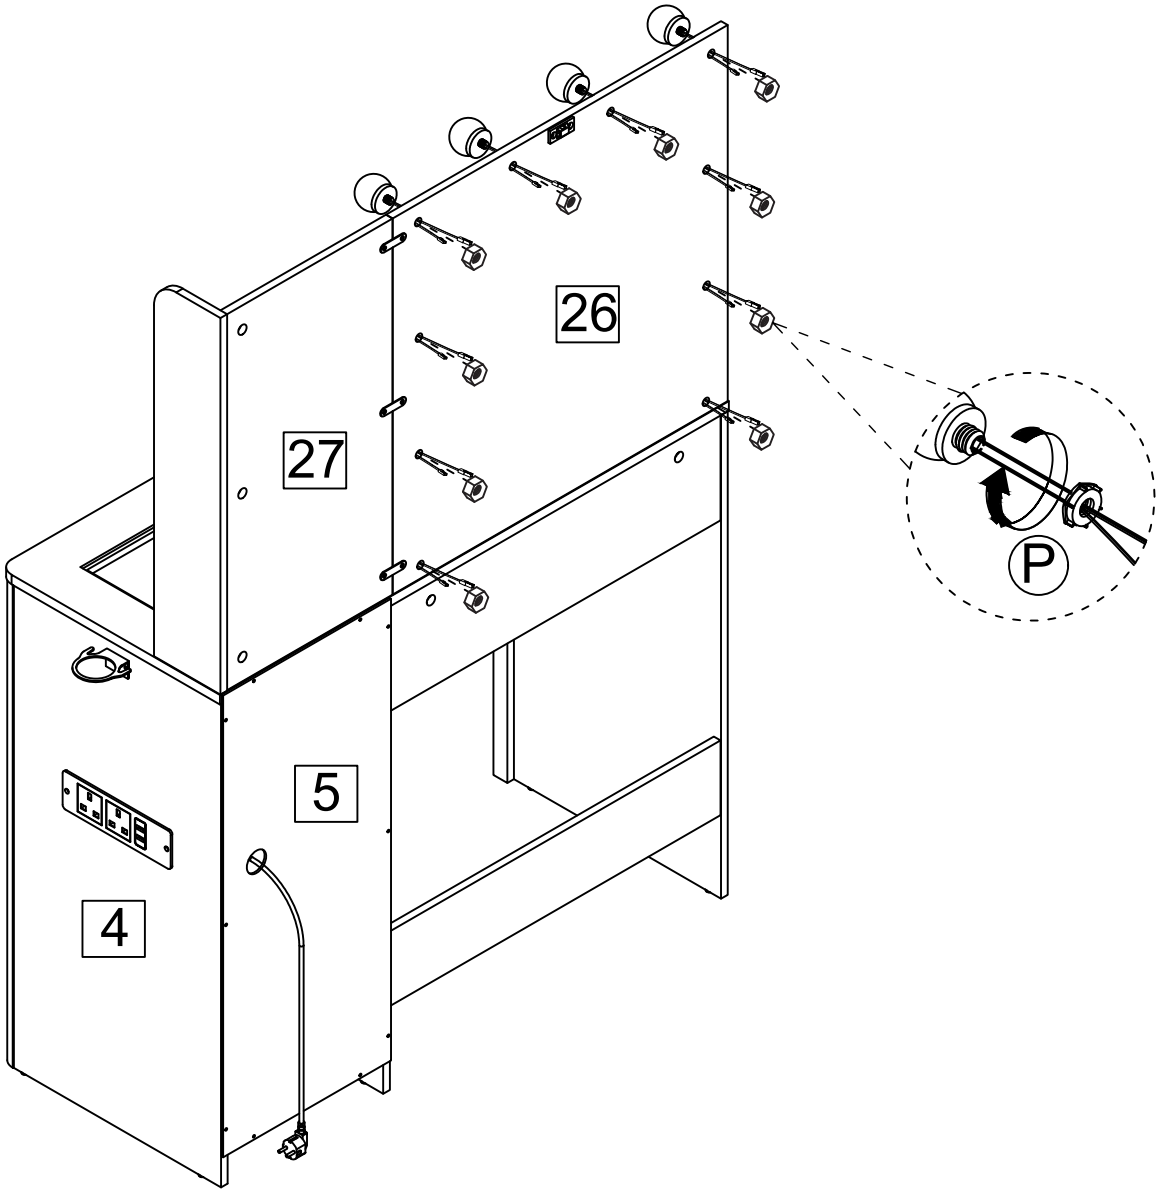


Assembly Instructions

Step 21

Feed the bulb cable (P) through the pre-drilled panel, gently press the bulb so that it sits flush, then route the cable through the cable channel on the opposite side and connect the adjacent bulbs in sequence, matching the same coloured wires.

Note:


When applying make-up, you can use the switch to turn the light on or off. The dressing table offers three colour temperature lighting modes. Simply touch the button to light up the mirror and switch between colours to suit your different needs. Press and hold to adjust the brightness.

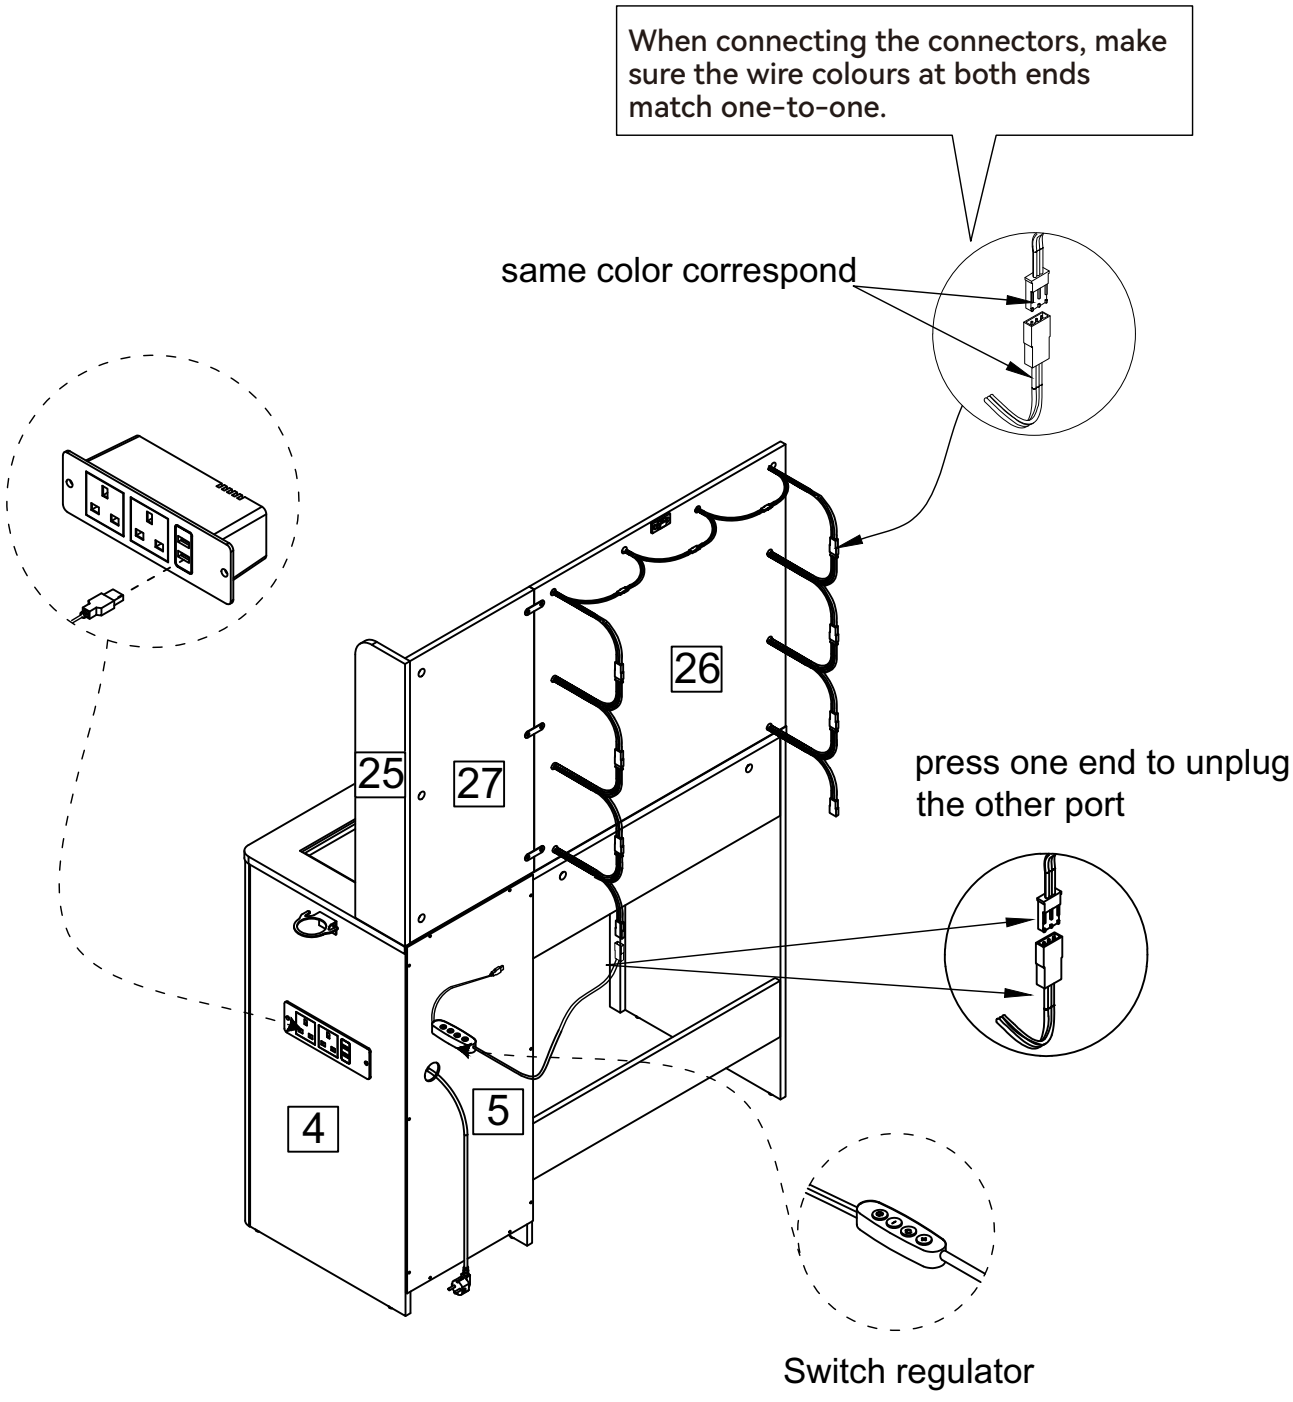

Assembly Instructions

Step 22


Align Panels 15 and 20 with the guide rails (L), then align the grooves and slide them into the cabinet.

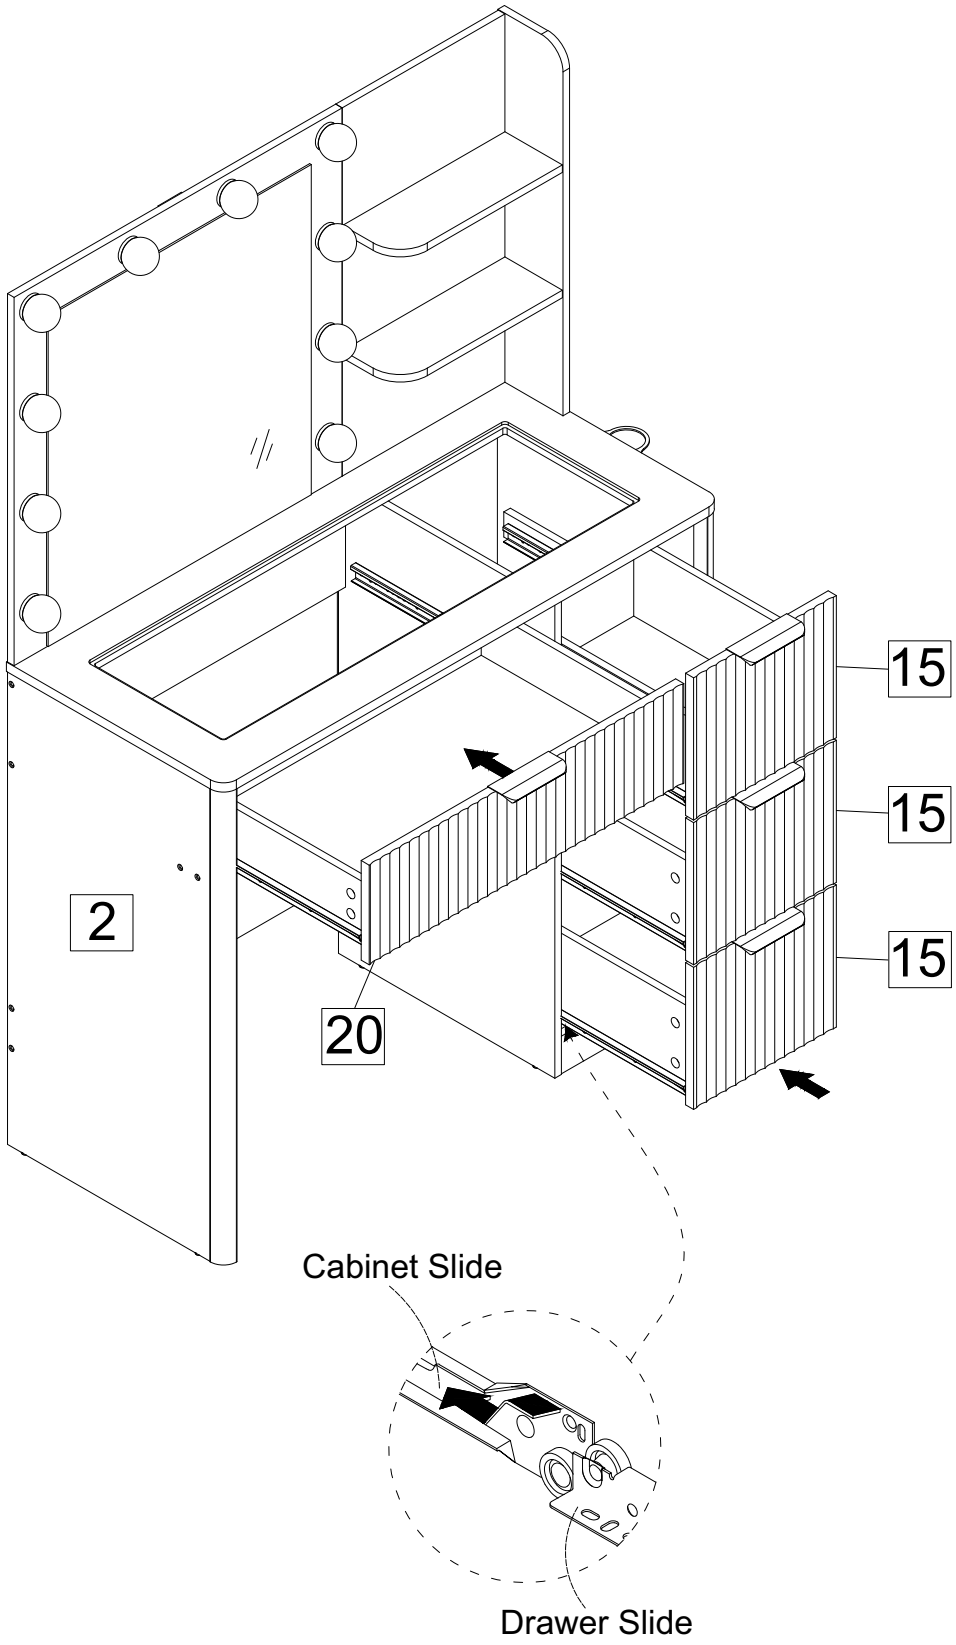

Assembly Instructions


Step 23

Align the tempered glass 24 with the panel grooves and lower it vertically into place.

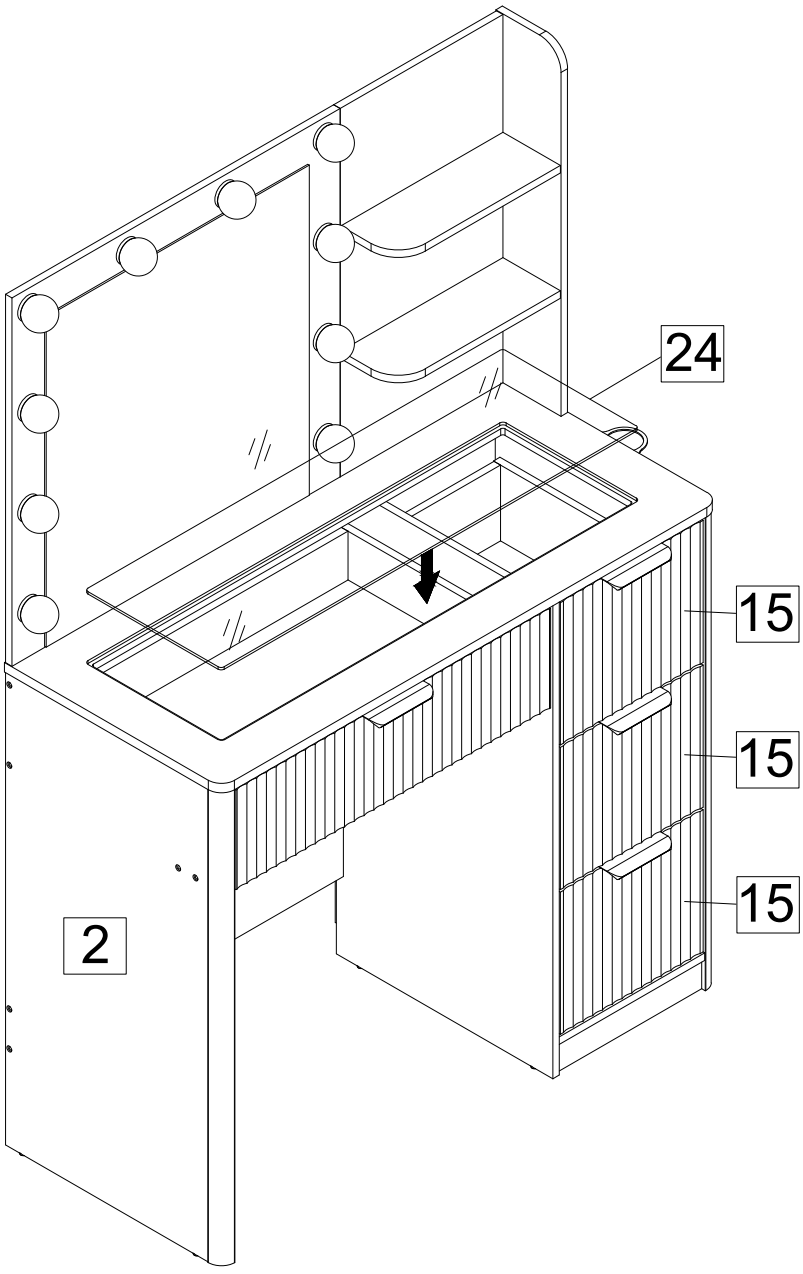


Assembly Instructions

Step 24

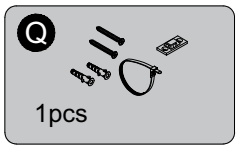

A. Prepare the wall for installation:
Use a power drill to drill two suitably sized holes in the wall.
Insert the wall anchors firmly into the drilled holes.
B. Secure the cabinet to the wall:
Use the long screws to fix the plastic fixing brackets to the wall.
Move the cabinet close to the wall so that the two base supports are positioned against it, then secure them tightly using the nylon cable ties.

Note:
Ensure the cabinet is level and securely fixed to the wall to guarantee safety and stability.

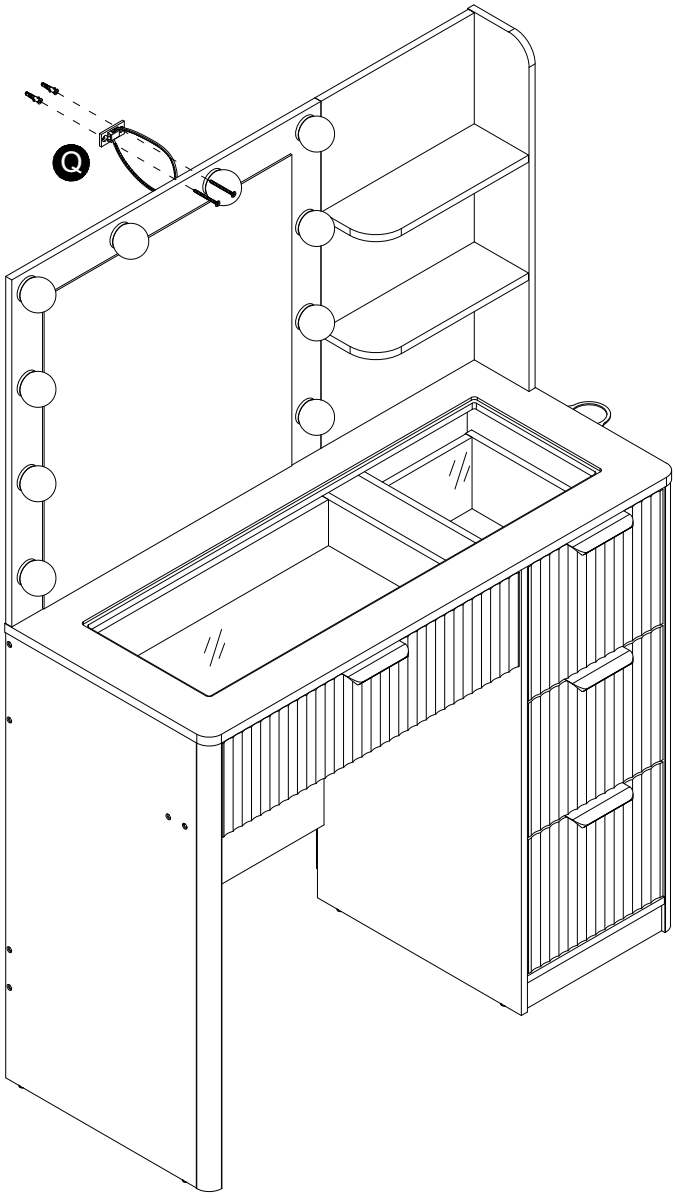



MAINTENANCE AND CARE

1.Prevent Pests

Keep wooden furniture away from damp environments to prevent pest infestations and wood deterioration. Use a dehumidifier or air conditioner during humid seasons to maintain a dry atmosphere.

2.Protect from Sunlight

Avoid placing furniture in direct sunlight to prevent cracking, discoloration, and fading. If sunlight exposure is unavoidable, use curtains or blinds to shield the furniture.

3.Keep Away from Heat Sources

Position furniture away from heaters, radiators, or open flames to avoid damage and maintain its structural integrity.

4.Routine Care

Apply furniture oil periodically to enhance the wood's shine, prevent cracking, and prolong its lifespan.

5.Regular Cleaning

Vacuum dust and debris frequently, especially beneath and around furniture, to ensure a clean and hygienic environment.

6.Maintain Dryness

Ensure adequate ventilation to prevent moisture buildup. Use a dehumidifier if necessary to protect the furniture from dampness.

7.Avoid Contact with Corrosive Substances

Keep the furniture away from acidic or alkaline substances to protect its finish and durability.

8.Gentle Cleaning

Wipe surfaces with a damp, well-wrung cloth to clean without causing water damage or swelling.

9.Minimize Sun Exposure

Prolonged exposure to sunlight can dry out and damage wood. Place furniture in shaded areas or use curtains to block harmful UV rays.

Dressing Table

SKU:
BJ17E1-1C6A1
BJ17E1-1C6A2
BJ17E1-1C6B1
BJ17E1-1C6B2
BJ17E1-1C6C1
BJ17E1-1C6C2

V1.0