USER MANUAL

30L+30L Dual Compartmen Sensor Trash Can

Start Up

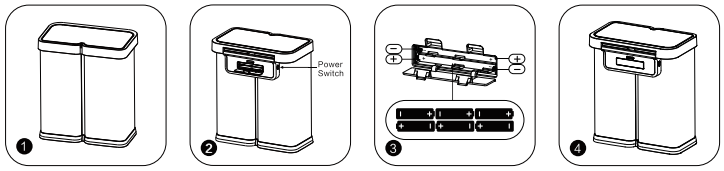

1.Check if the product is in good condition.

2.At the back of the lid where the switch lies, turn the switch to “0” to cut off power, and then open the cap of the battery compartment.

3.Install six AA batteries properly.

4.Put the cap back to the battery compartment, and then turn on the switch to “—” .

Operation Guide

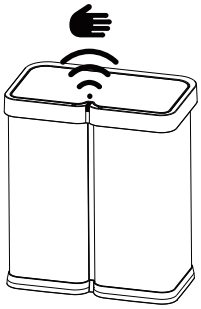

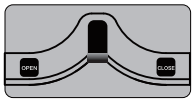

Standby Mode

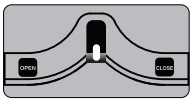

Sensing Mode
(Green light blinks)

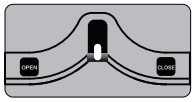

Stay Open Mode
(Blue light is on)

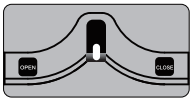

Low Battery Indicator
(Red light blinks)

This product adopts infrared sensor technology to control open and close of the lid. The sensing range is 20cm (±5cm) above the control panel. When an object or a hand is in sensing range, the lid opens automatically.

Standby Mode---Turn on the switch on the right hand side of back handle, the product enter standby mode.

Sensing Mode---When the object is placed in the sensing area, the green light is on and lid open automatically. When no object within sensing area, the green light flashes for 3 seconds before the lid closes.

Deactivate Stay Open Mode---Touch OPEN button, the Blue light is on, and lid stays open.

Release the mode---1.Touch CLOSE button, the Blue light is off, and lid closes.
2.Lid will close after 2 minutes if no interference.

Low Battery Indicator----The red light in the middle of the panel flashes to indicate that the batteries run low. Please replace batteries.

Garbage Bag Setting

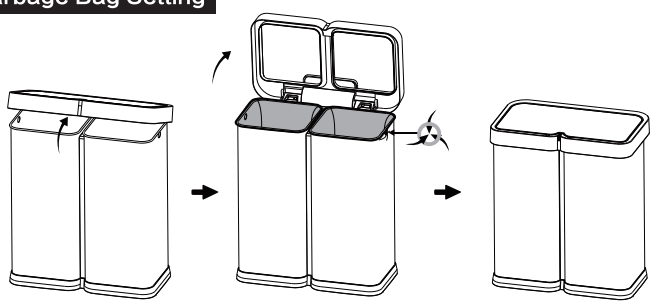

Open the upper frame.

Put garbage bag into the bucket and wrap the top of the bucket, and then tuck the exposed part of bag into the hole.

Put the lid back in place.

Troubleshooting

The lid fails to open properly.
1.Check if the batteries are installed properly or if the batteries are in good contact with springs.
2.Check if the switch is turned on.
3.Keep away from sensing range for 10 seconds and then try again.

The lid fails to close properly.
1.Check if there is any interference in sensing range.
2.The circuit may be damp. Turn off the switch and put it in a ventilated place until it is dry. Then try again to turn it on.

The lid opens very slowly.
The batteries are running low, please replace them.

Remark: If the above solution doesn't work, please consult your local distributor.

Maintenance and Precautions

1.1.Turn on switch button at the back of lid for the first usage.
2.The stainless steel part of this product adopts fingerprint proof resistant coating. Do not use corrosive detergent or sanitizer to clean the surface. Please wiped clean with semi-dry cloth.
3.This product is powered by 6 pieces of AA batteries. Please properly install the positive and negative terminals of the batteries before the first usage. In normal situation the batteries can last for 7~10 months (if open and close 20 times per day). When the batteries run low, the lid might react slowly. To ensure normal performance, please replace the batteries in time.
4.If the batteries are dead or left unused for a long time, please replace or take them out to prevent battery over discharge and leakage.
5.Keep the batteries away from the heat source to prevent the batteries from exploding in extreme circumstances.
6.To better protect the motor, please do not close the lid directly with other forces. Lid will be closed automatically after 3 seconds.

Limited Warranty

How long does the Warranty last?
The warranty is valid for 365 days from the date of original purchase with proof.

What does the Warranty cover?
The warranty will cover the breakdown of the electronic components in the sensing lid (e.g. the chip, gearing system or electronic circuit) and fracture of plastic parts.

What does the Warranty NOT cover?
1.Other components are not covered by this warranty such as the Bin Body, Retainer Ring, the Base of the unit, Battery Caps, Inner Bucket as well as attachments.
2.Any products on which the seals and/or serial numbers have been broken, removed, tampered with, defaced or altered in any manner are not covered.
3.Any problems caused by abuse, misuse, personal removal, unfavorable and unsuitable environment, accident, theft, scratch, soak, natural disasters like earthquakes, fire, floods, windstorm, lightening, abnormal voltage and pest are not covered.
4.Warranty is voided if the product is disassembled, modified, repaired or reinstalled with unauthorized components by anyone other than Upella.
5.Consequential or incidental damages arising from any product defect shall not be liable.
6.There is no warranty that items are sold solely under the terms and conditions of the selling party as used, floor sample, or refinished, and no warranty that the product is used as test equipment.
7.There is no expressed or implied warranty of merchantability or of fitness for any particular purpose of any product.

How to get the service?
1.To be eligible for service under the warranty, please contact us by email to submit a request for warranty service attached with a proof of purchase (such as a copy of original sales receipt) within 30 days of purchase.
2.Do not deliver your defective product to Upella if you are not sure whether it is covered, please contact us by email first.

How does law apply?
1.All warranties which are not satisfied in this limited warranty are expressly disclaimed by Upella. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty.
2.This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and province.

Thank you for purchasing the Upella!

*All contents of this user manual have been carefully reviewed. For any printing mistakes or misunderstanding of the contents, Top profit Manufacturing Co., Ltd reserves the right for final explanation.