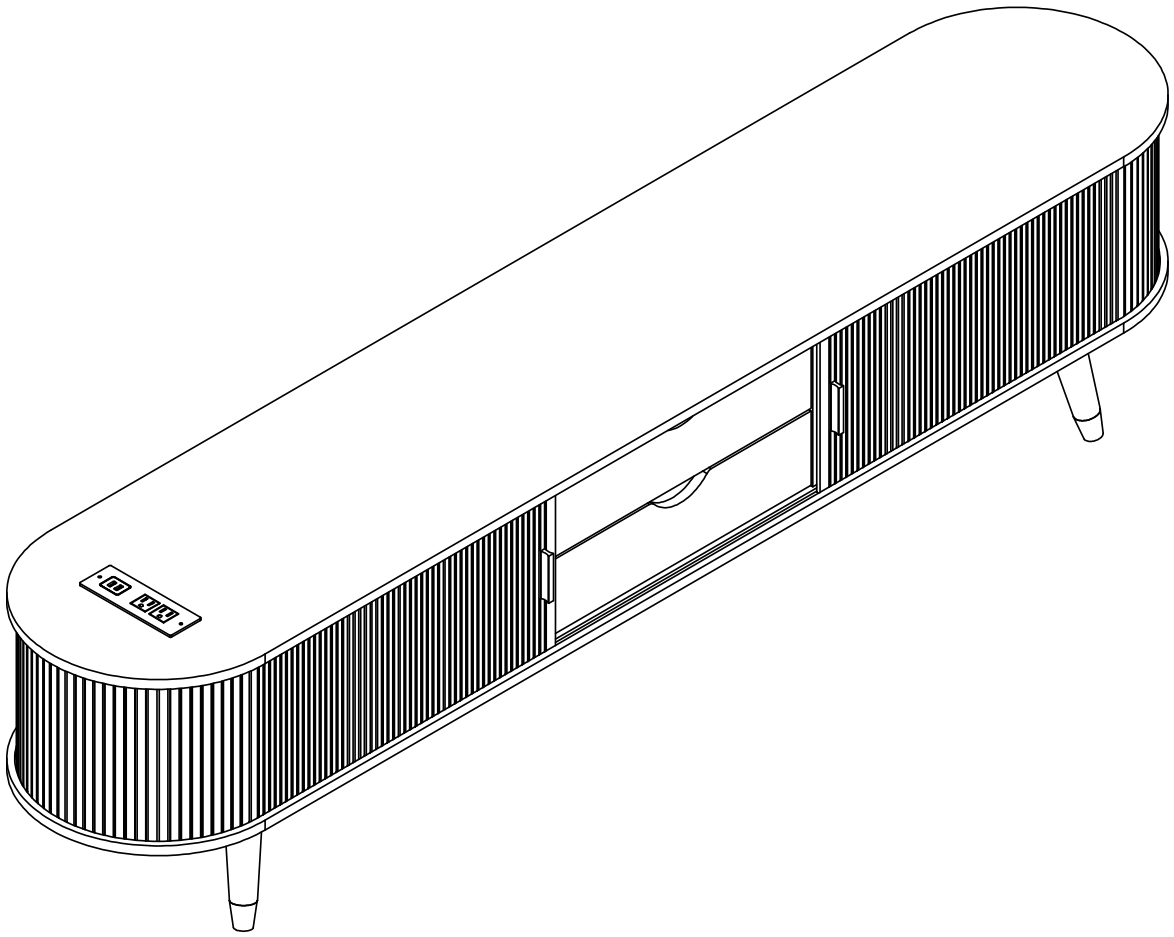
TV STAND

Assembly Instructions - Please keep for future reference

SKU: **N721P428444**



Dimensions

Width-75inch
Depth-14.96inch
Height-17.72inch

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions



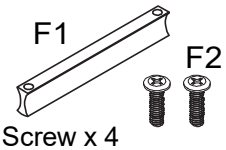


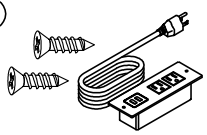





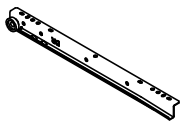

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels llsted below

Note:The quantlle below are the correcet amount to complete the assembly. in some cases more fittings may be supplied than are required.

Ⓐ  15*12mm Cam Bolt x 16	Ⓑ  15*9.5mm Cam Lock x 16	Ⓒ  6*40mm Dowel x 16	Ⓓ  7*40mm Screw x 8
Ⓔ  3*12mm Screw x 20	Ⓕ  4*8mm Screw x 4 Metal handle x 2	Ⓖ  Adjustable Leveler x 2	Ⓗ  3*16mm Screw x 12
Ⓘ  Shelf bracket x 8	Ⓙ  Extension cord x 1	Ⓚ  Four hole iron sheet x 2	Ⓛ  Five hole iron sheet x 4
Ⓜ  3.5*14mm Screw x 28	Ⓝ  Hole to stick x 16	Ⓞ  Screwdriver x 1	Ⓟ  Allen Wrench x 1
Ⓠ  3.5*35mm Screw x 8	ⓇⓇ  300mm runner x 2	ⓁⓁ  300mm runner x 2	ⓇⓇ  300mm runner x 2
ⓁⓁ  300mm runner x 2			

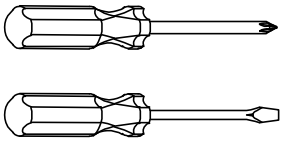Tools required




Phillips screwdriver or
flat-head screwdriver

Using Camlocks


Step 1

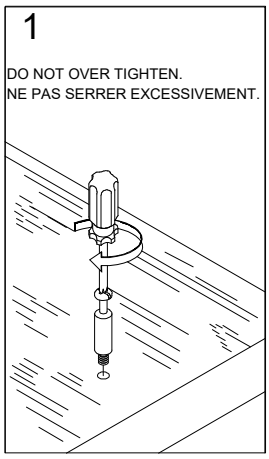Connect the male camlock as diected in the assembly instructions using a scewdriver.



Step 2

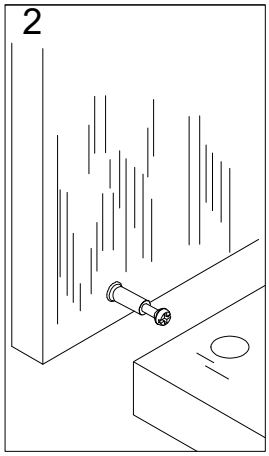
Push the male camlock into the entry hole.



Step 3

Insert the female camlock as shown in the instruction.

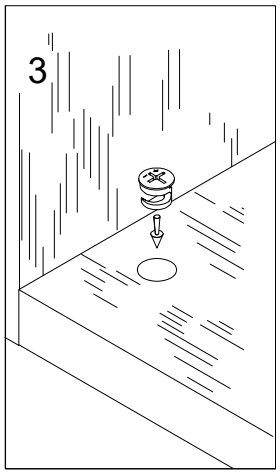Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.




Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.









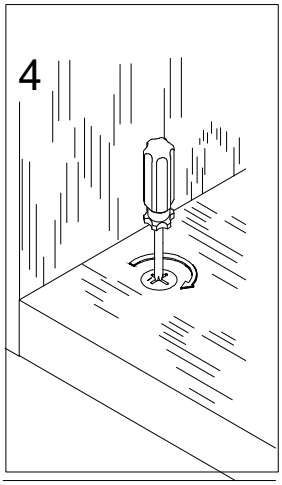
The joint is now secure.









Assembly Instructions

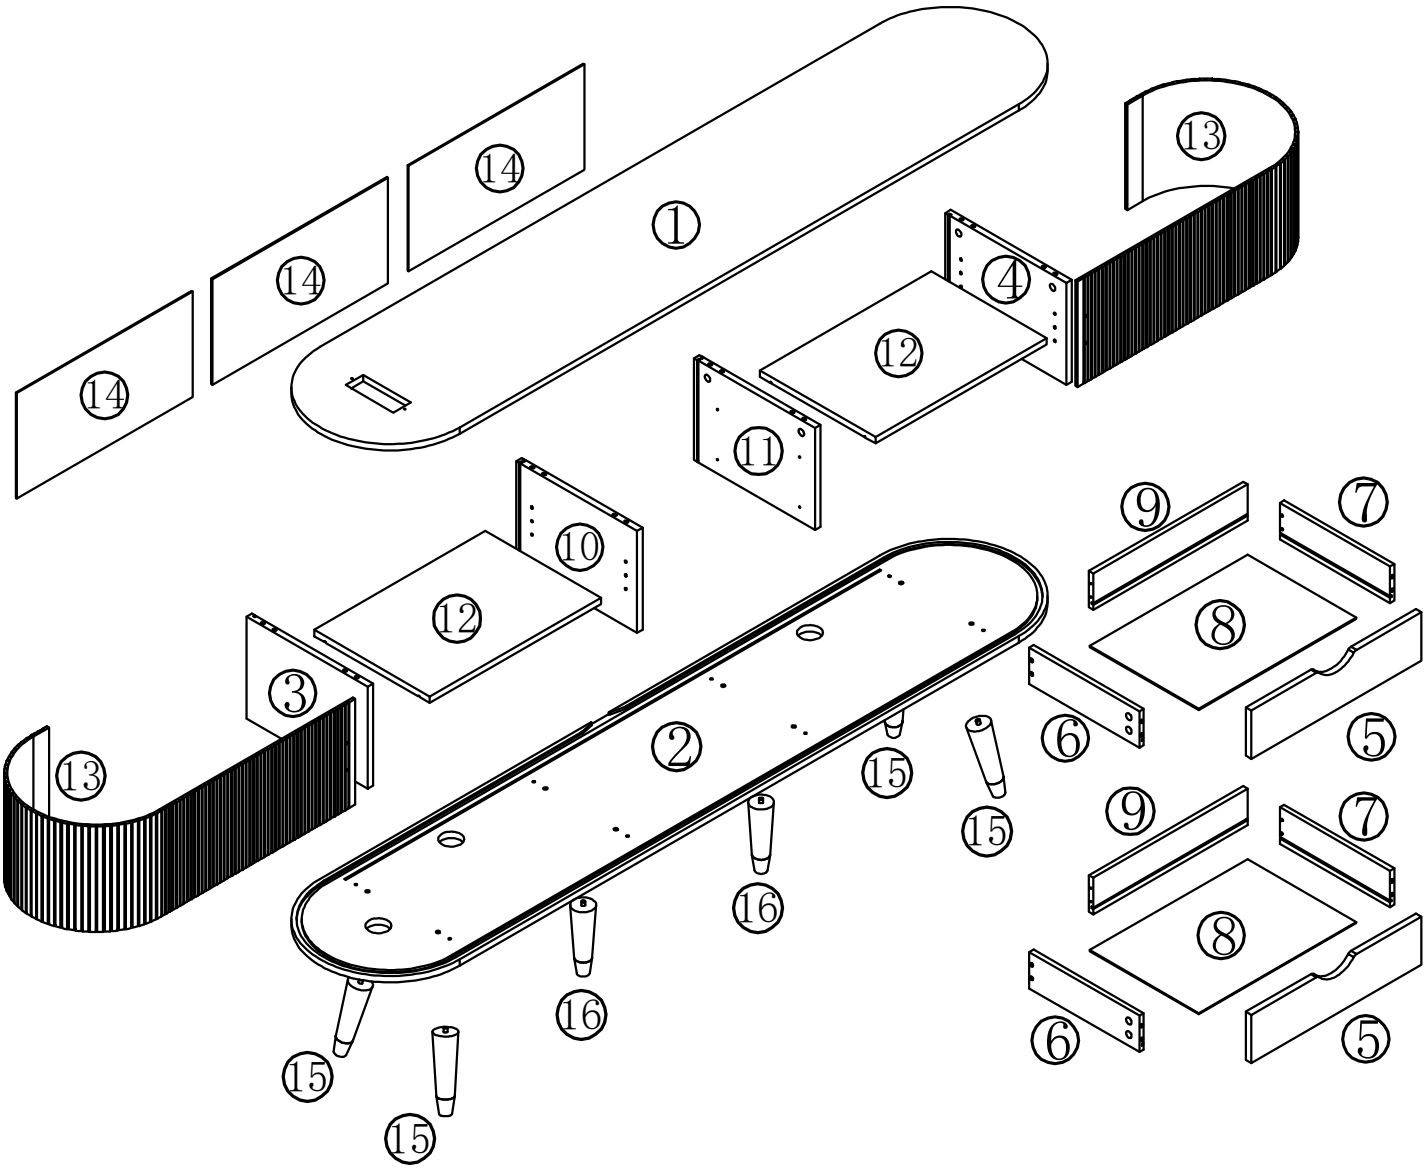


Assembly Instructions

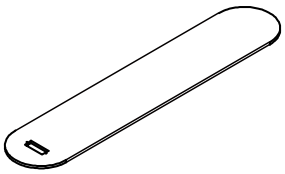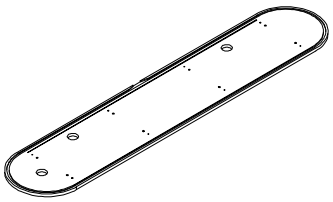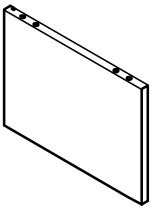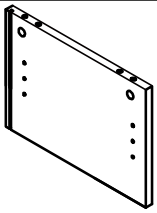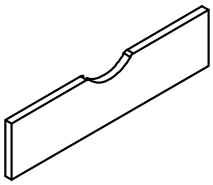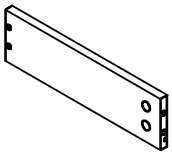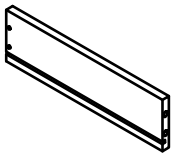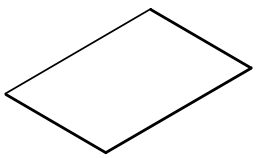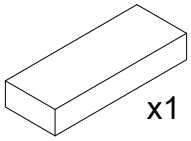
1		1905 x 390 x 15 mm **1**	
2		1905 x 390 x 15 mm **1**	
3		330 x 240 x 15 mm **1**	
4		330 x 240 x 15 mm **1**	
5		466 x 116 x 15 mm **2**	
6		300 x 86 x 12 mm **2**	
7		300 x 86 x 12 mm **2**	
8		427 x 294 x 4 mm **2**	
	 x1 Hardware Kit		

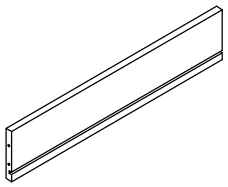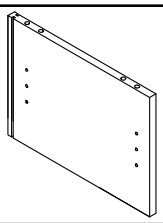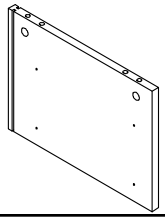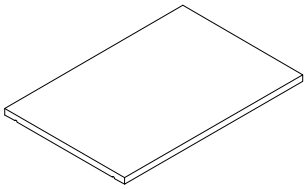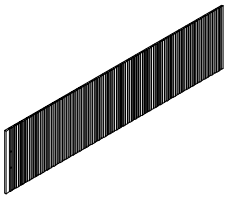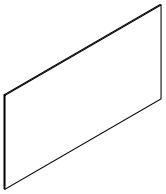9		421 x 86 x 12 mm **2**	
10		330 x 240 x 15 mm **1**	
11		330 x 240 x 15 mm **1**	
12		469 x 315 x 15 mm **2**	
13		1110 x 249 x 5 mm **2**	
14		477 x 249 x 4 mm **3**	
15		Ø5 x 178 mm **4**	
16		Ø5 x 167 mm **2**	

Assembly Instructions

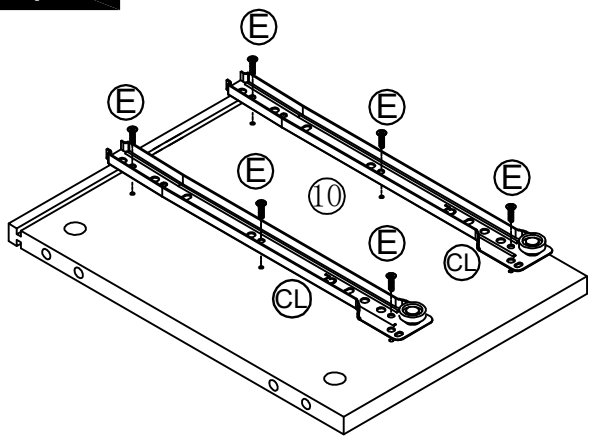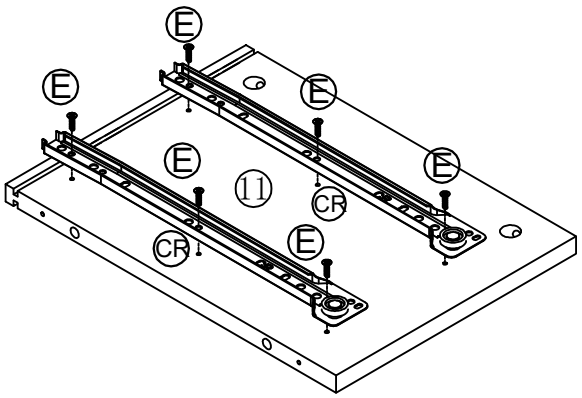
Step 1










CL

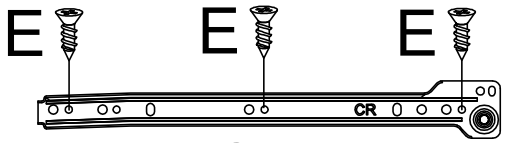

CR

Ⓔ	Ⓒⓛ	Ⓒⓡ
		
3*12mm Screw x 12	300mm runner x 2	300mm runner x 2

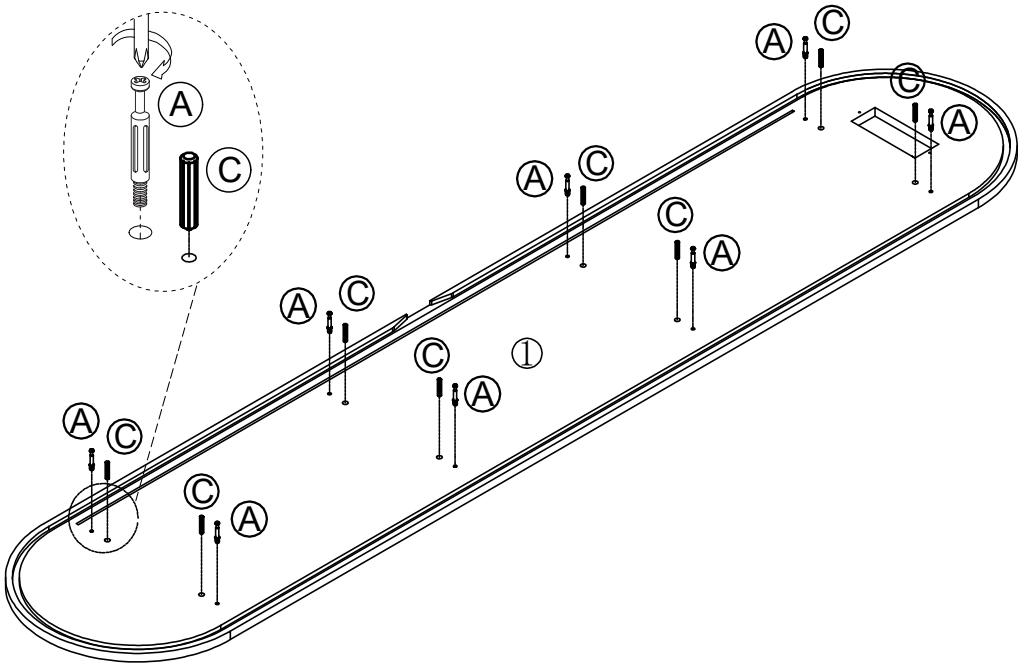
Step 2




Ⓐ	Ⓒ
	
15*12mm Cam Bolt x 8	6*40mm Dowel x 8

Assembly Instructions

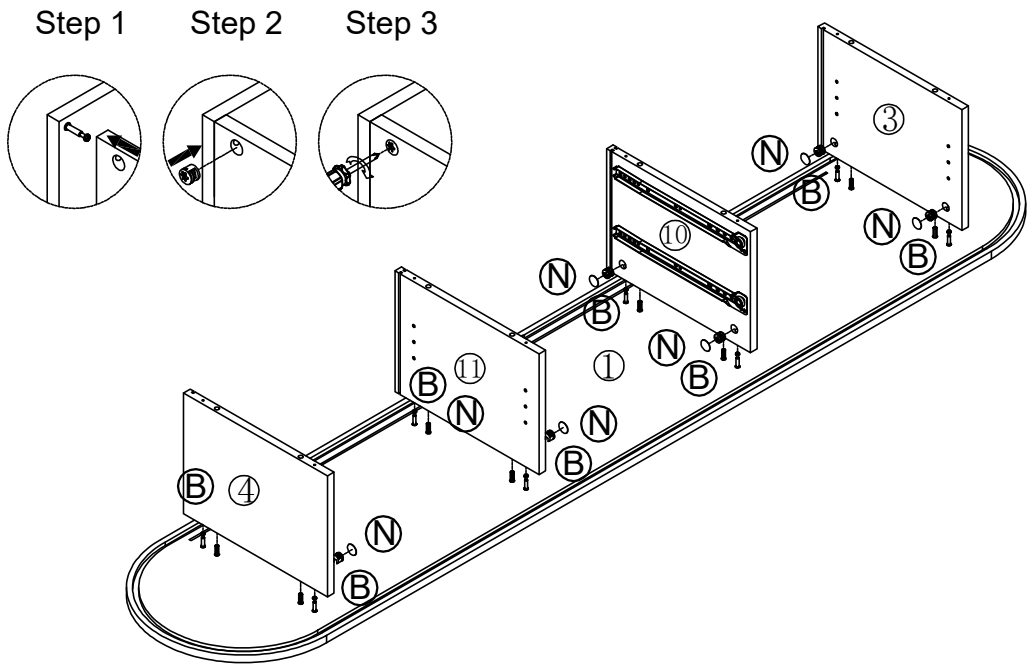
Step 3



Ⓑ	Ⓝ
15*9.5mm Cam lock x 8	Hole to stick x 8

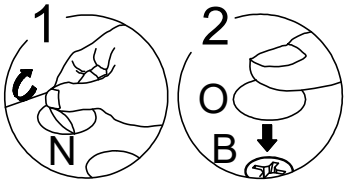

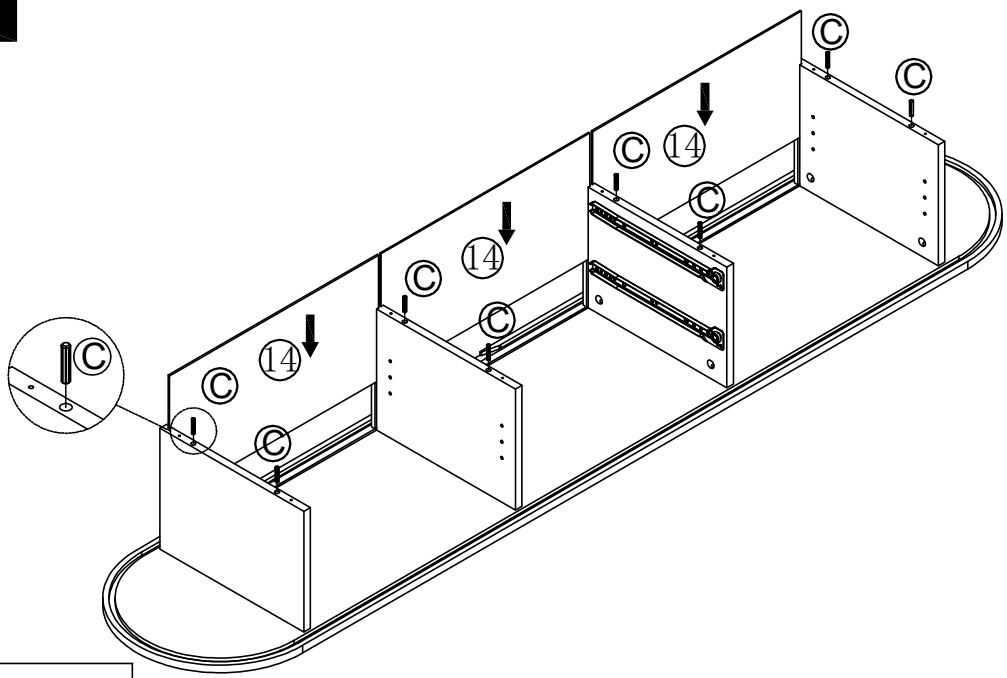
Step 4



Ⓒ
6*40mm Dowel x 8


Assembly Instructions


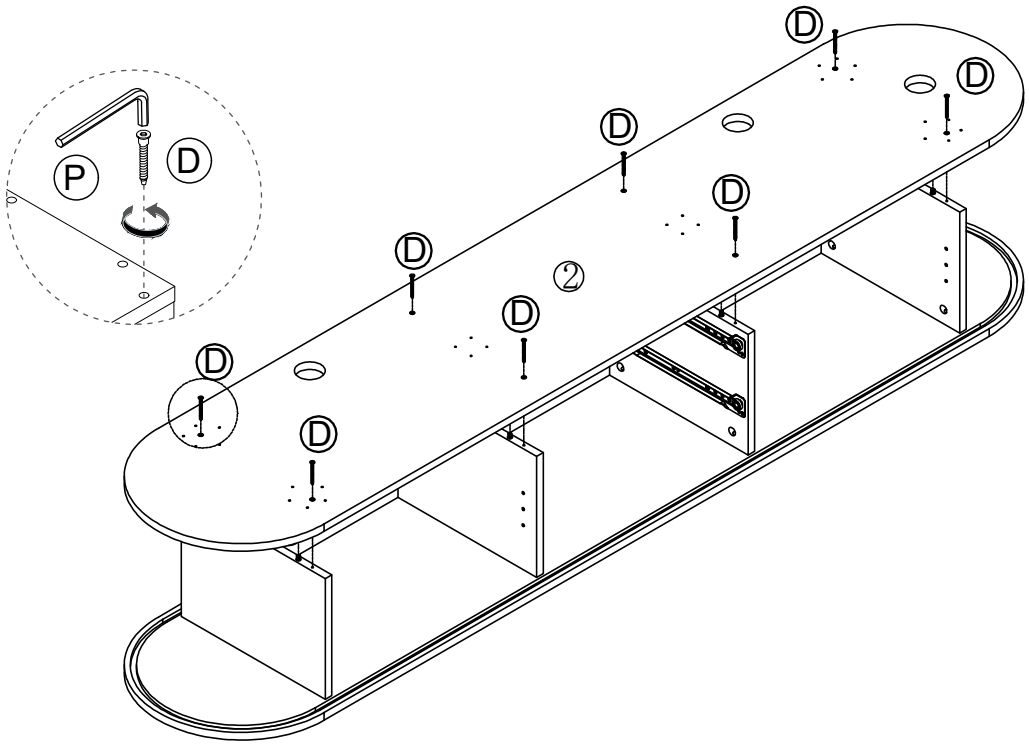
Step 5



Ⓓ	
	7*40mm Screw x 8

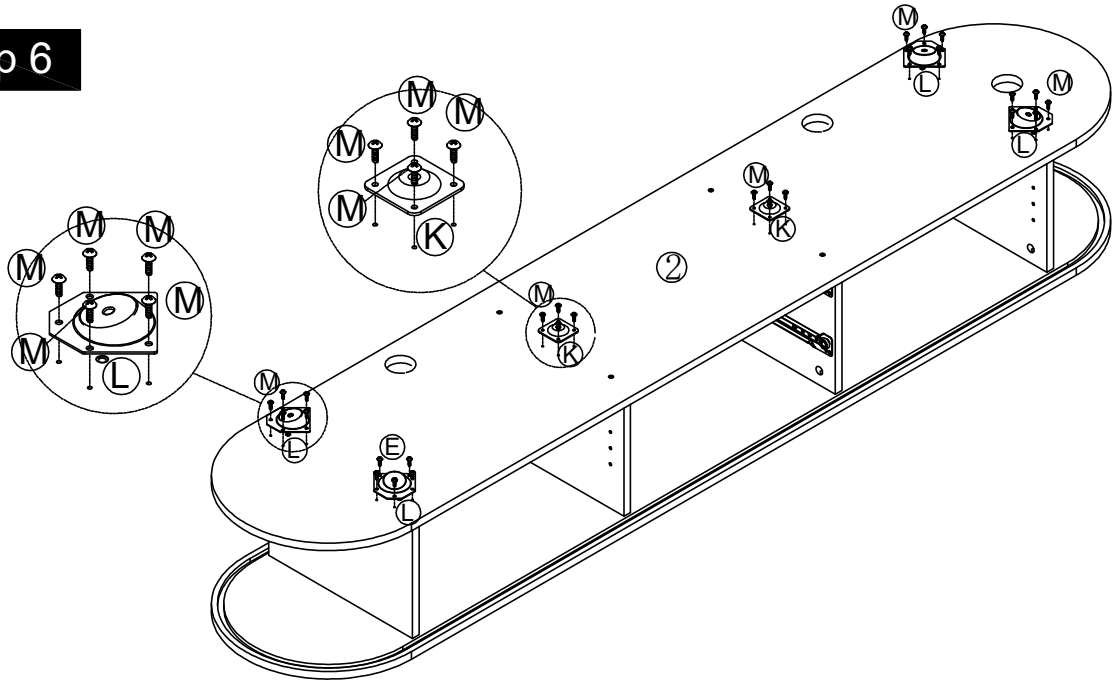
Step 6



Ⓜ	Ⓚ	Ⓛ
		
3.5*14mm Screw x 28	Four hole iron sheet x 2	Five hole iron sheet x 4

Assembly Instructions

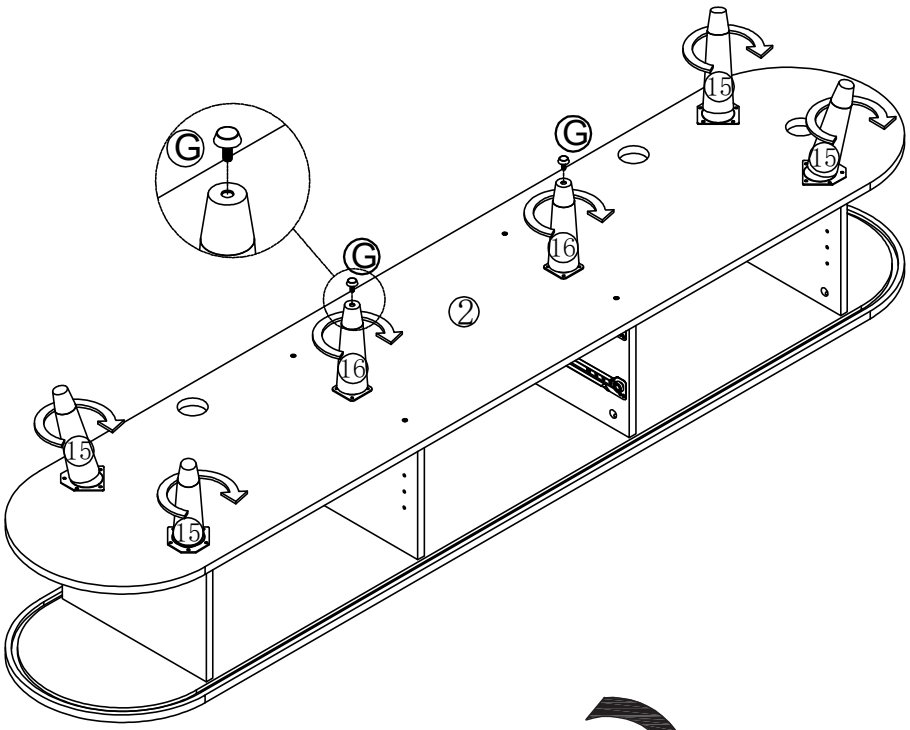Step 7






Ⓖ




Adjustable Leveler x 2

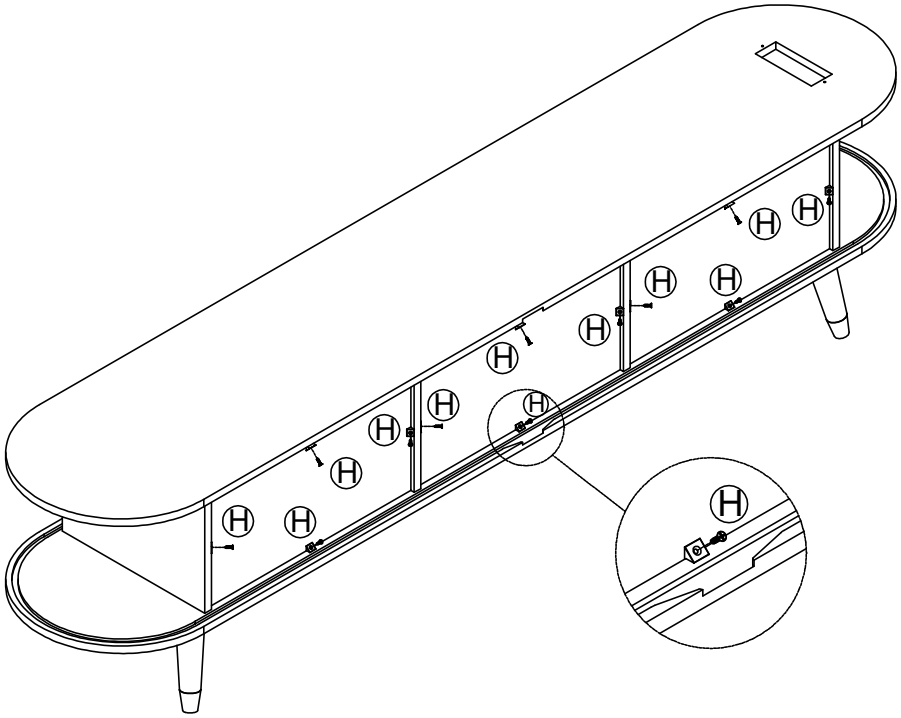Step 8




Ⓗ





3*16mm Screw x 12


Assembly Instructions

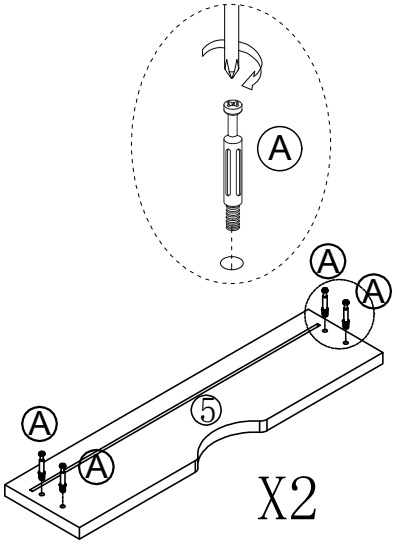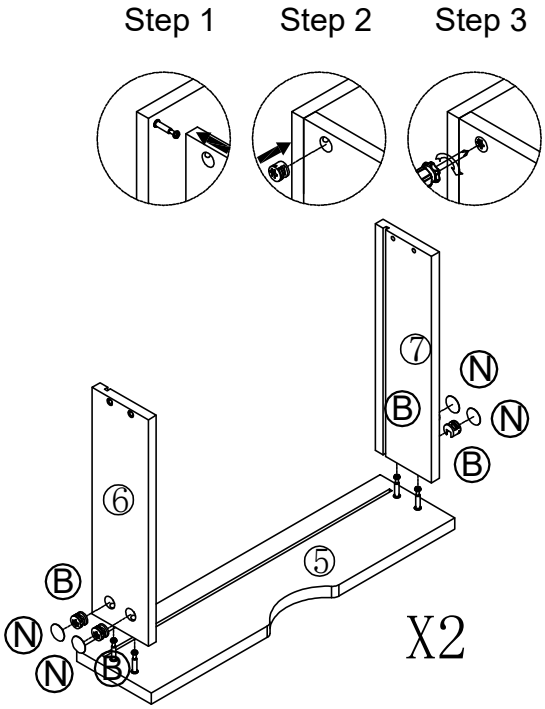Step 9








A	B	N
		
15*12mm Cam Bolt x 8	15*9mm Cam lock x 8	Hole to stick x 8

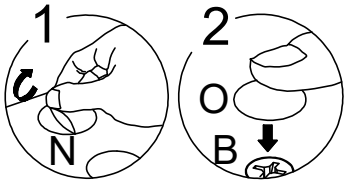

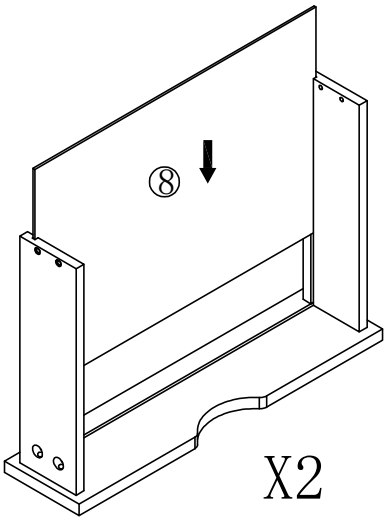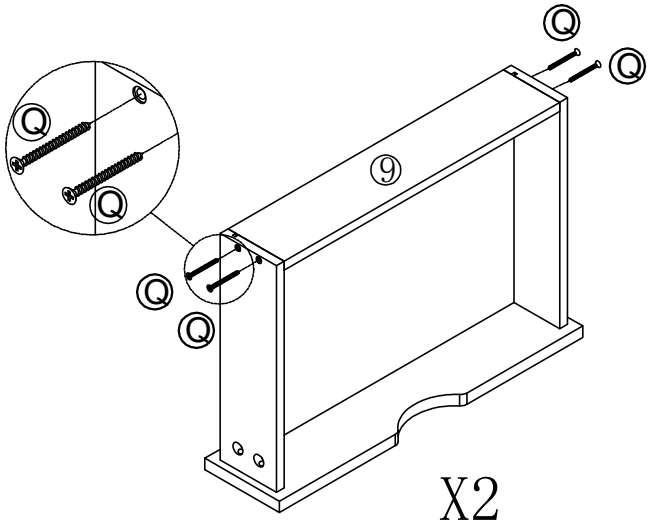Step 10







Q

3.5*35mm Screw x 8

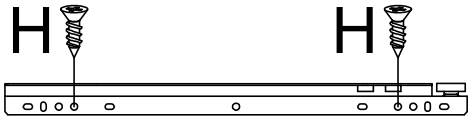Assembly Instructions

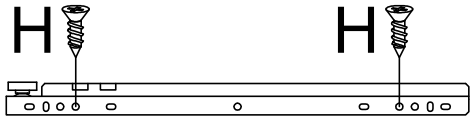
Step 11



DL



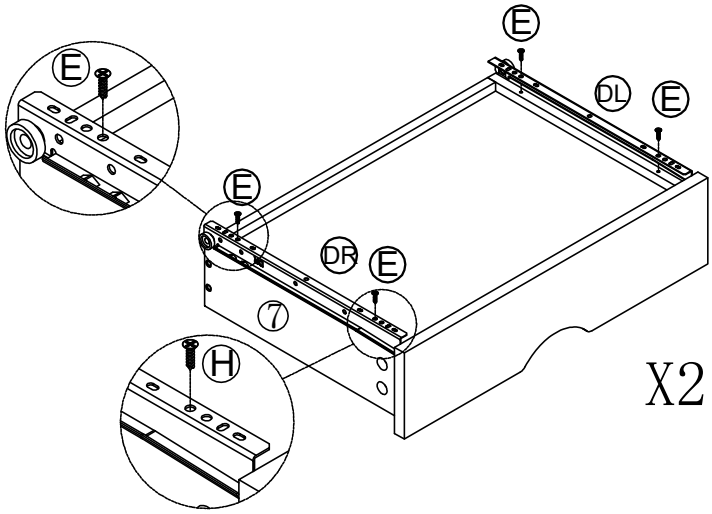
DR



X2


E	DL	DR
		
3*12mm Screw x 8	300mm runner x 2	300mm runner x 2

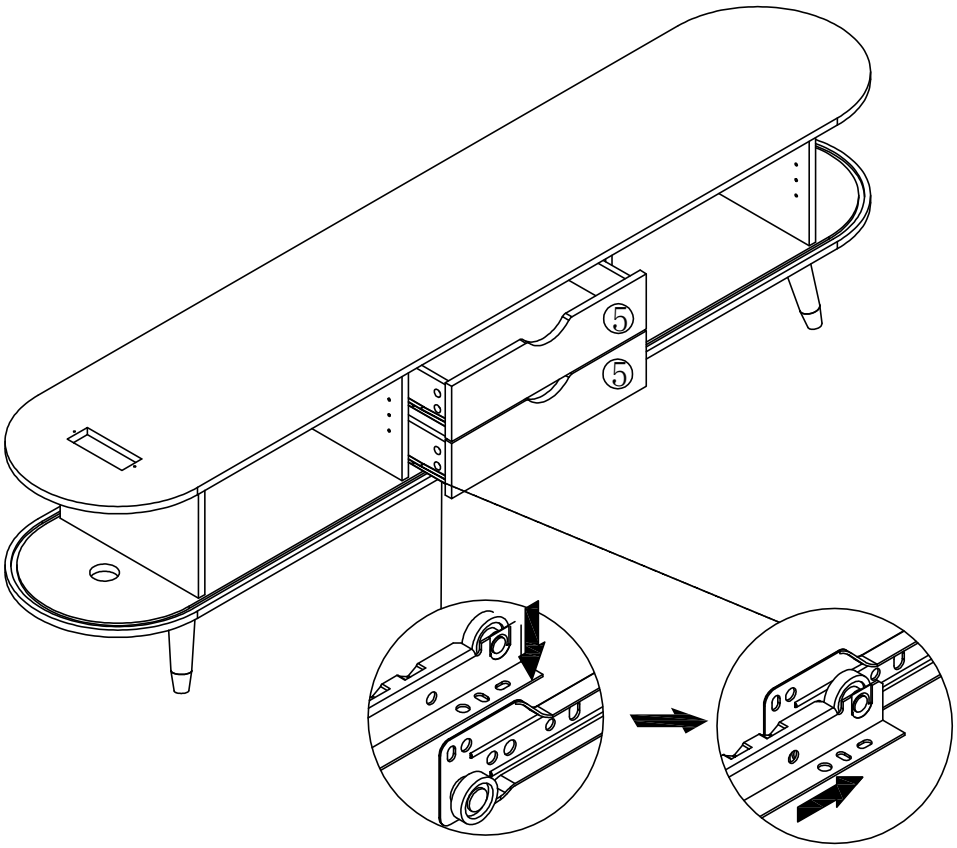
Step 12




Assembly Instructions

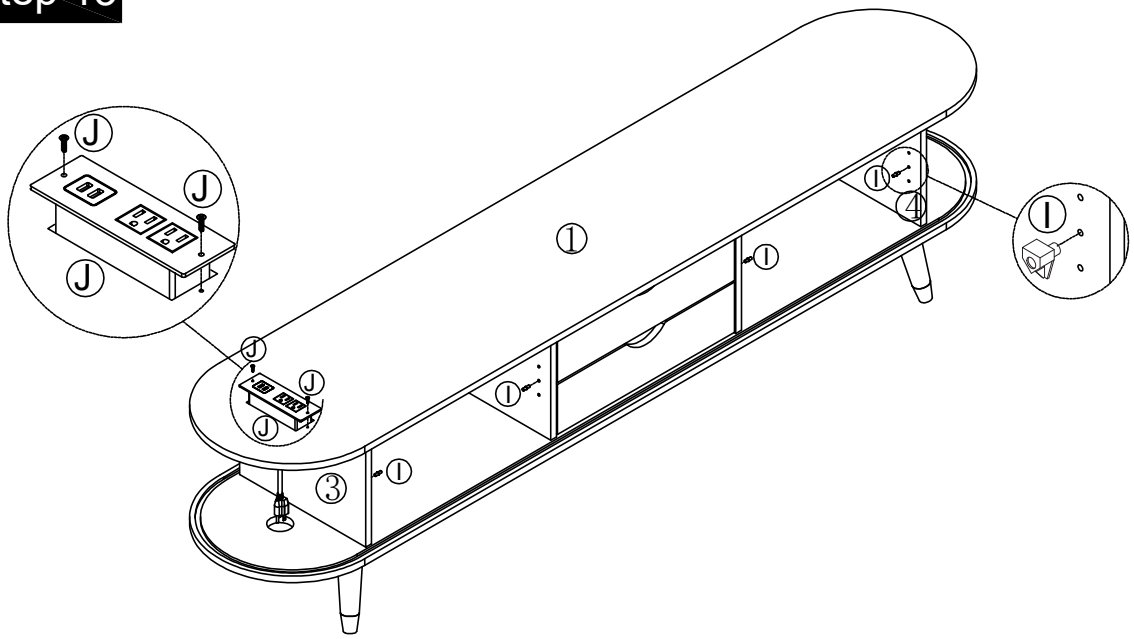Step 13




ⓘ  Shelf bracket x 8	Ⓙ  Extension cord x 1

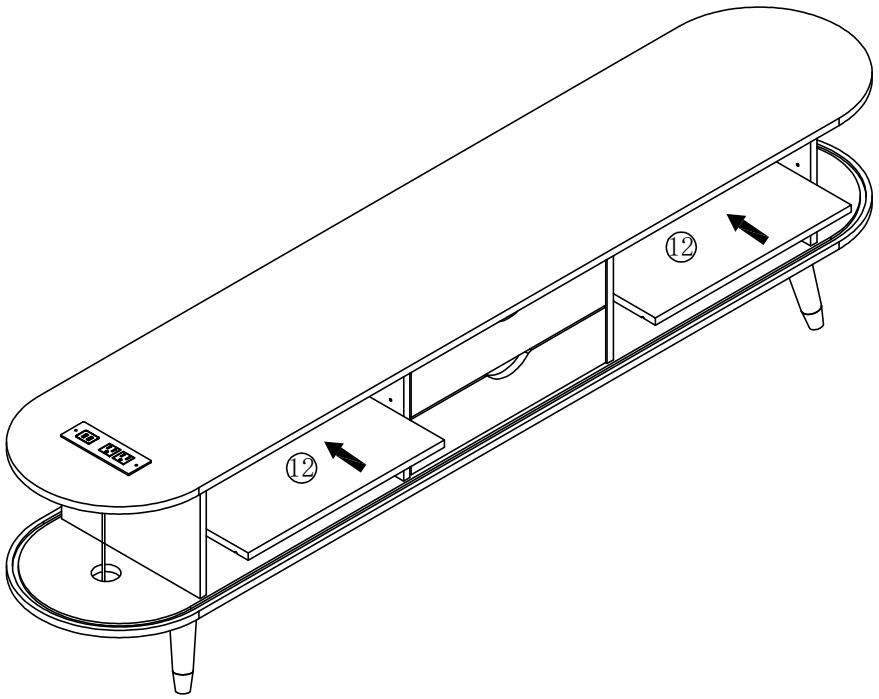
Step 14




Assembly Instructions

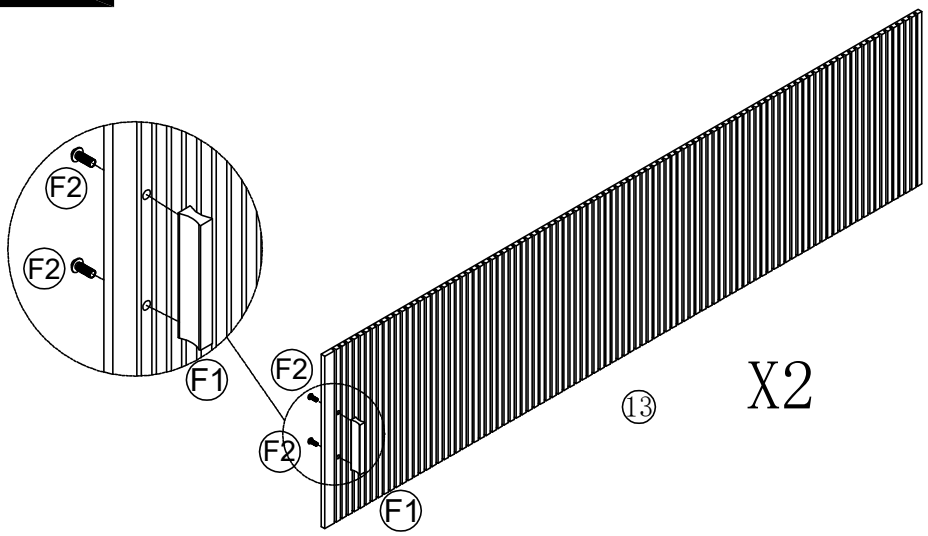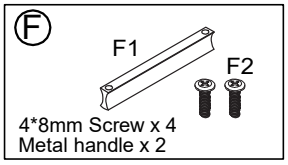Step 15





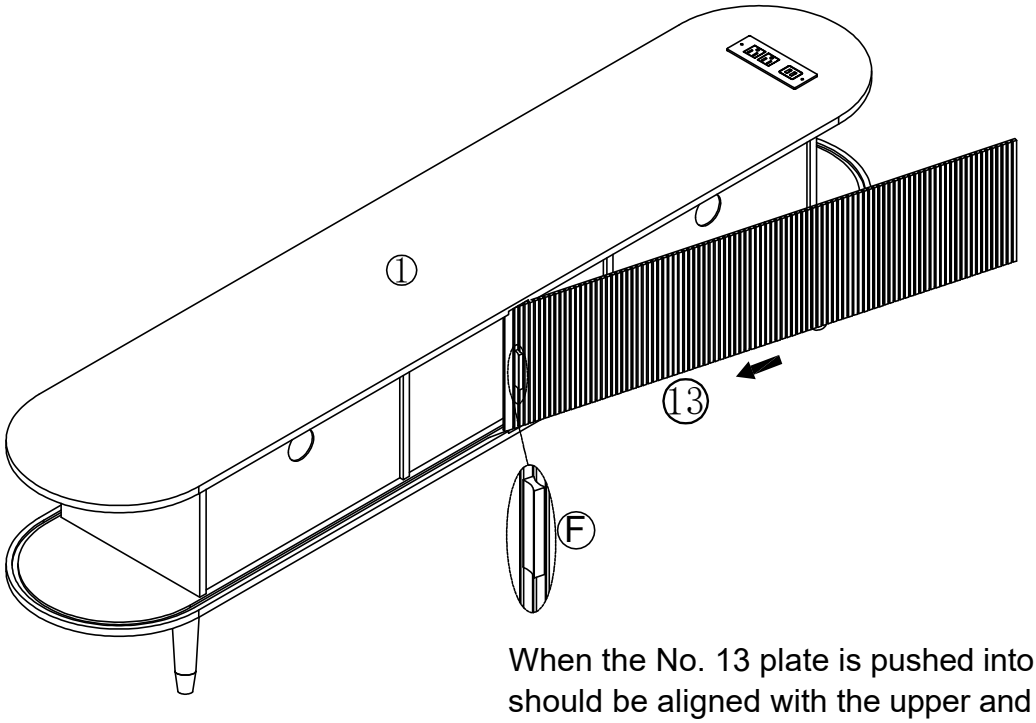
Step 16



When the No. 13 plate is pushed into, it should be aligned with the upper and lower slots, with the drawing surface facing outward and the smooth surface facing inward


Assembly Instructions

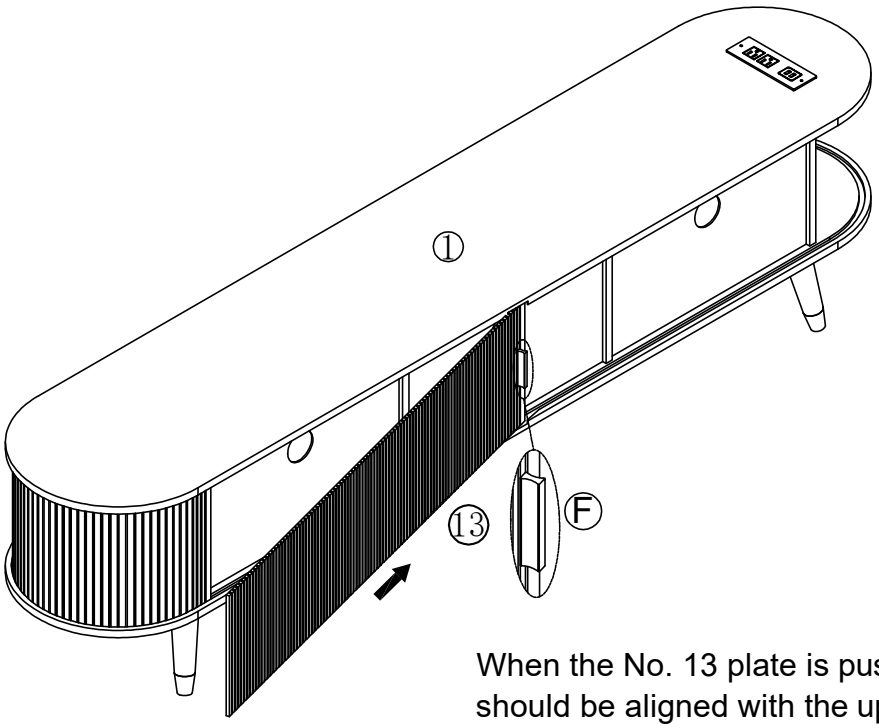Step 17



When the No. 13 plate is pushed into, it should be aligned with the upper and lower slots, with the drawing surface facing outward and the smooth surface facing inward

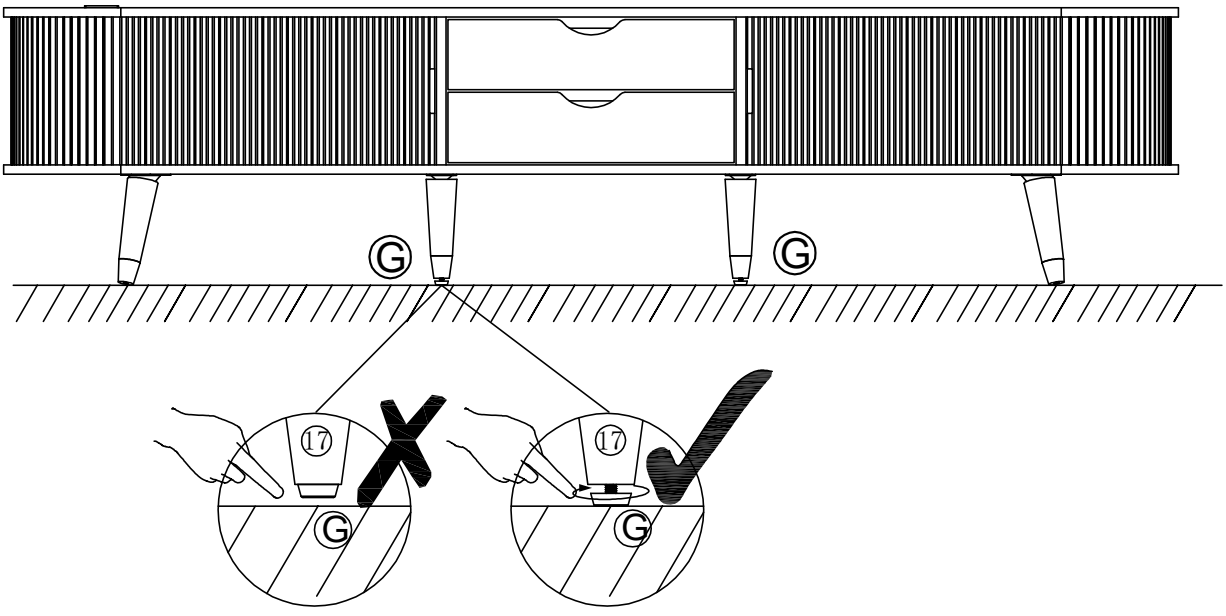Step 18



G can be used to adjust the height

Assembly Instructions

Step 19

