30 Key Mini Grand Piano



USER'S MANUAL

Age Grading 4+

Before You Start

•Please read all instructions carefully.
•Retain instructions for future reference.
•Separate and count all parts and hardware.
•Read through each step carefully and follow the proper order.
•We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
•Always place the product on a flat, steady and stable surface.

WARNING

•Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.
•The toy is to be assembled by an adult.
•Toys contain functional sharp edges and sharp point, please use under adult supervision.

PARTS

A

PIANO



1 PC

B

PIANO LEG



4 PC

C

BENCH



1 PC

D

BENCH LEG



4 PC

E

MUSIC STAND



1 PC


NOTICE

- Do not stand on or use any part of this set as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

PRODUCT ASSEMBLY


Please retain these instructions for future reference.

1

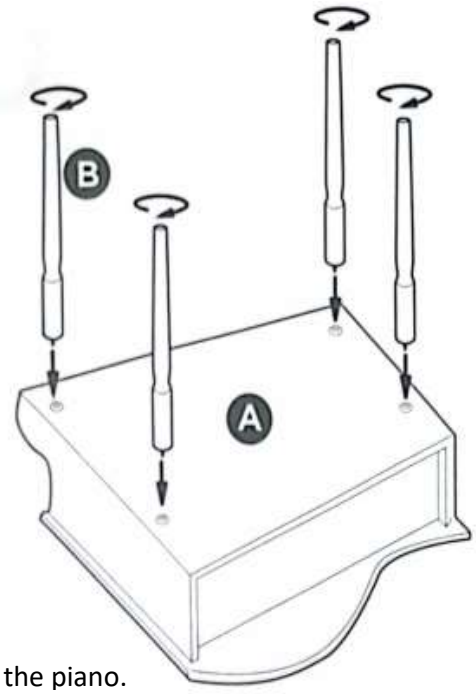


Assemble the piano.

2

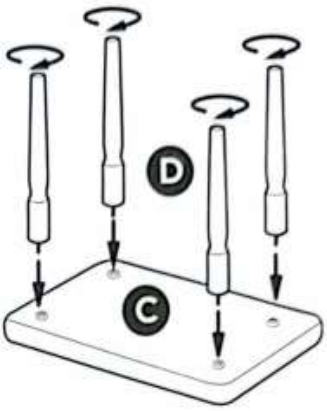

Assemble the stool.

3

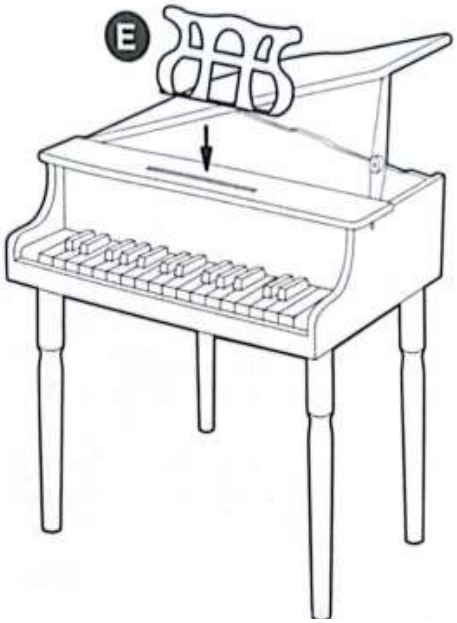

Flip over and place the music stand into the slot.

Customer Service

Contact us through our website: www.TeamCustomerService.com

If you have any question about assembly, use or possible missing part, please contact us and we will be glad to assist you