
ASSEMBLY INSTRUCTION

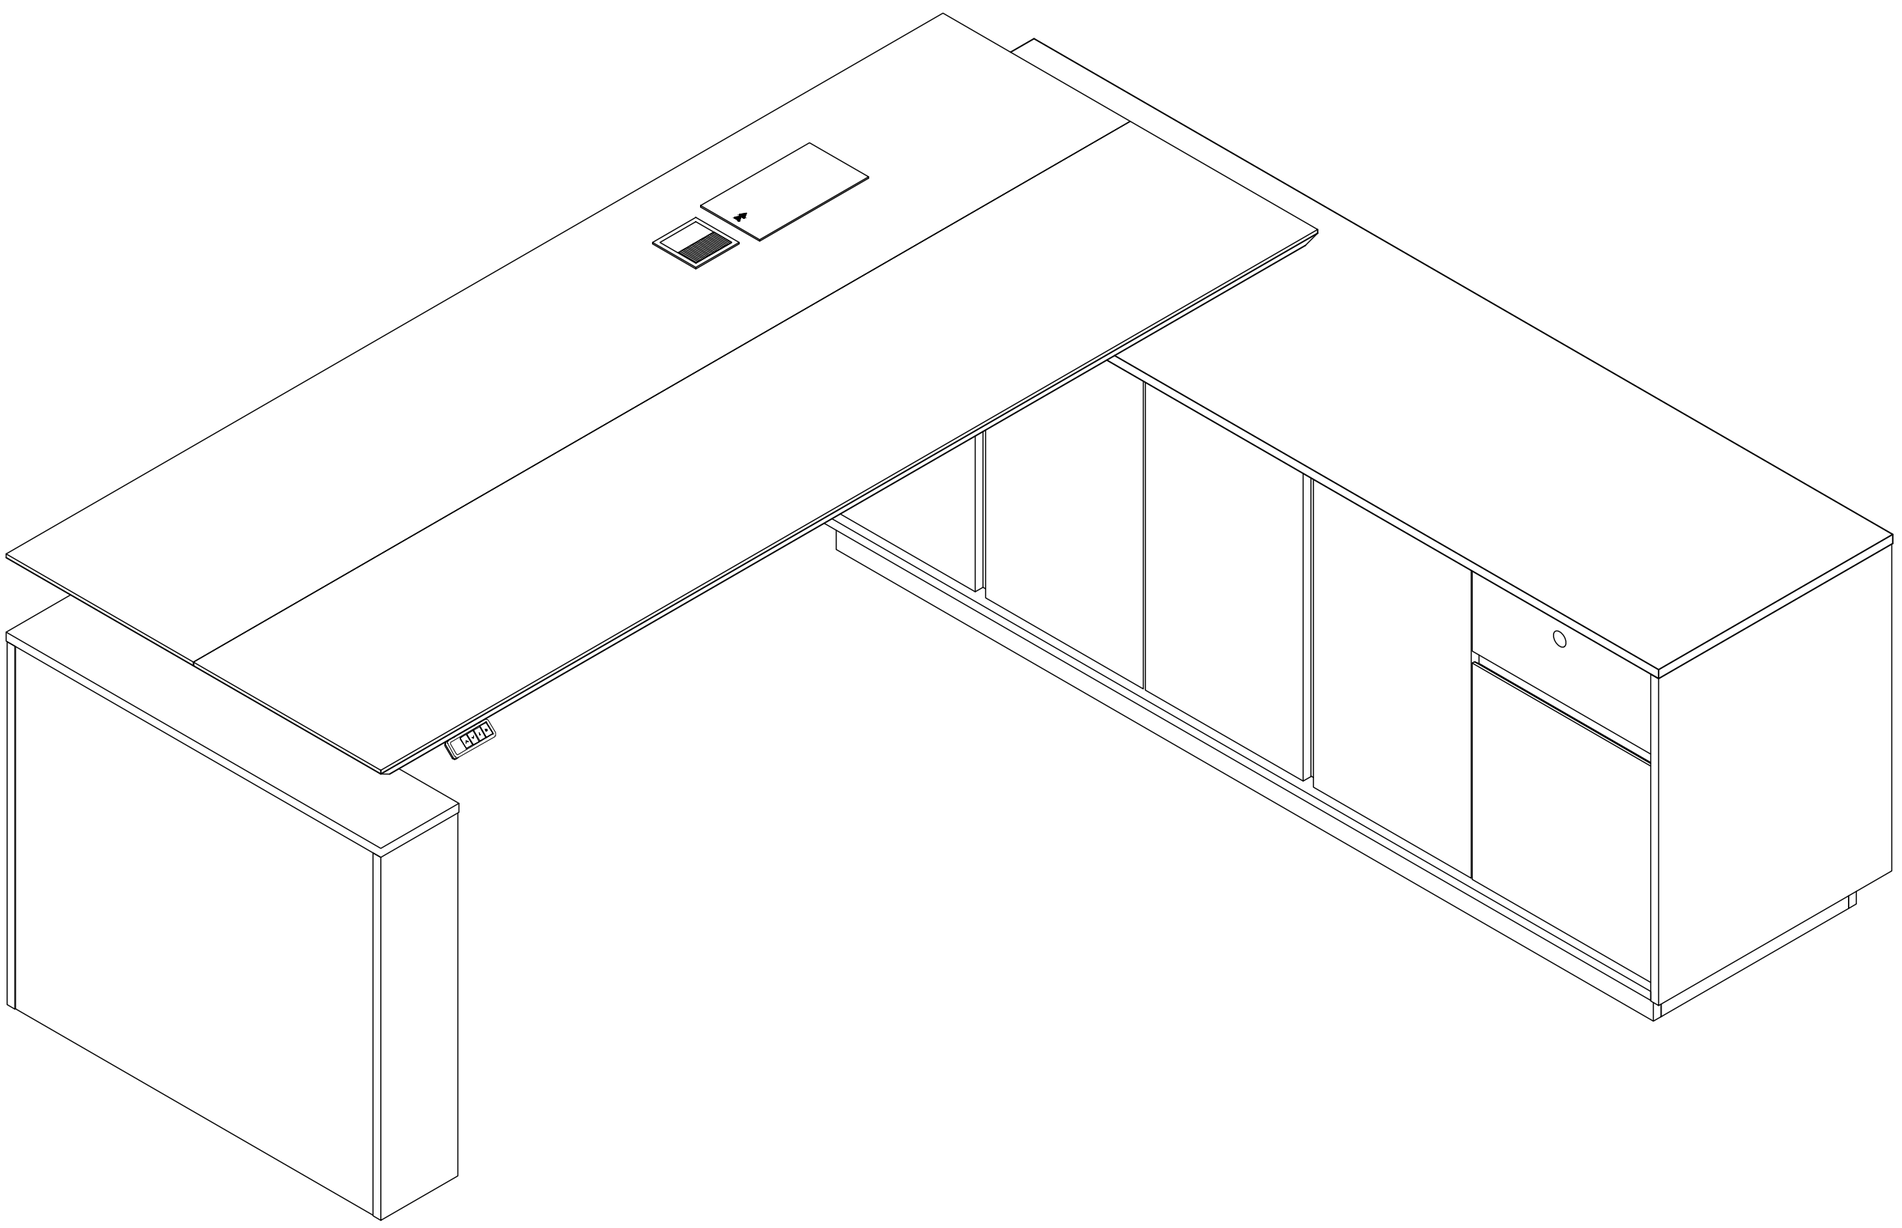


Suggestion

·It is recommended to install it near a power source, as later steps will require the power to be turned on.

·This product requires installation by at least two people.

ASSEMBLY INSTRUCTION

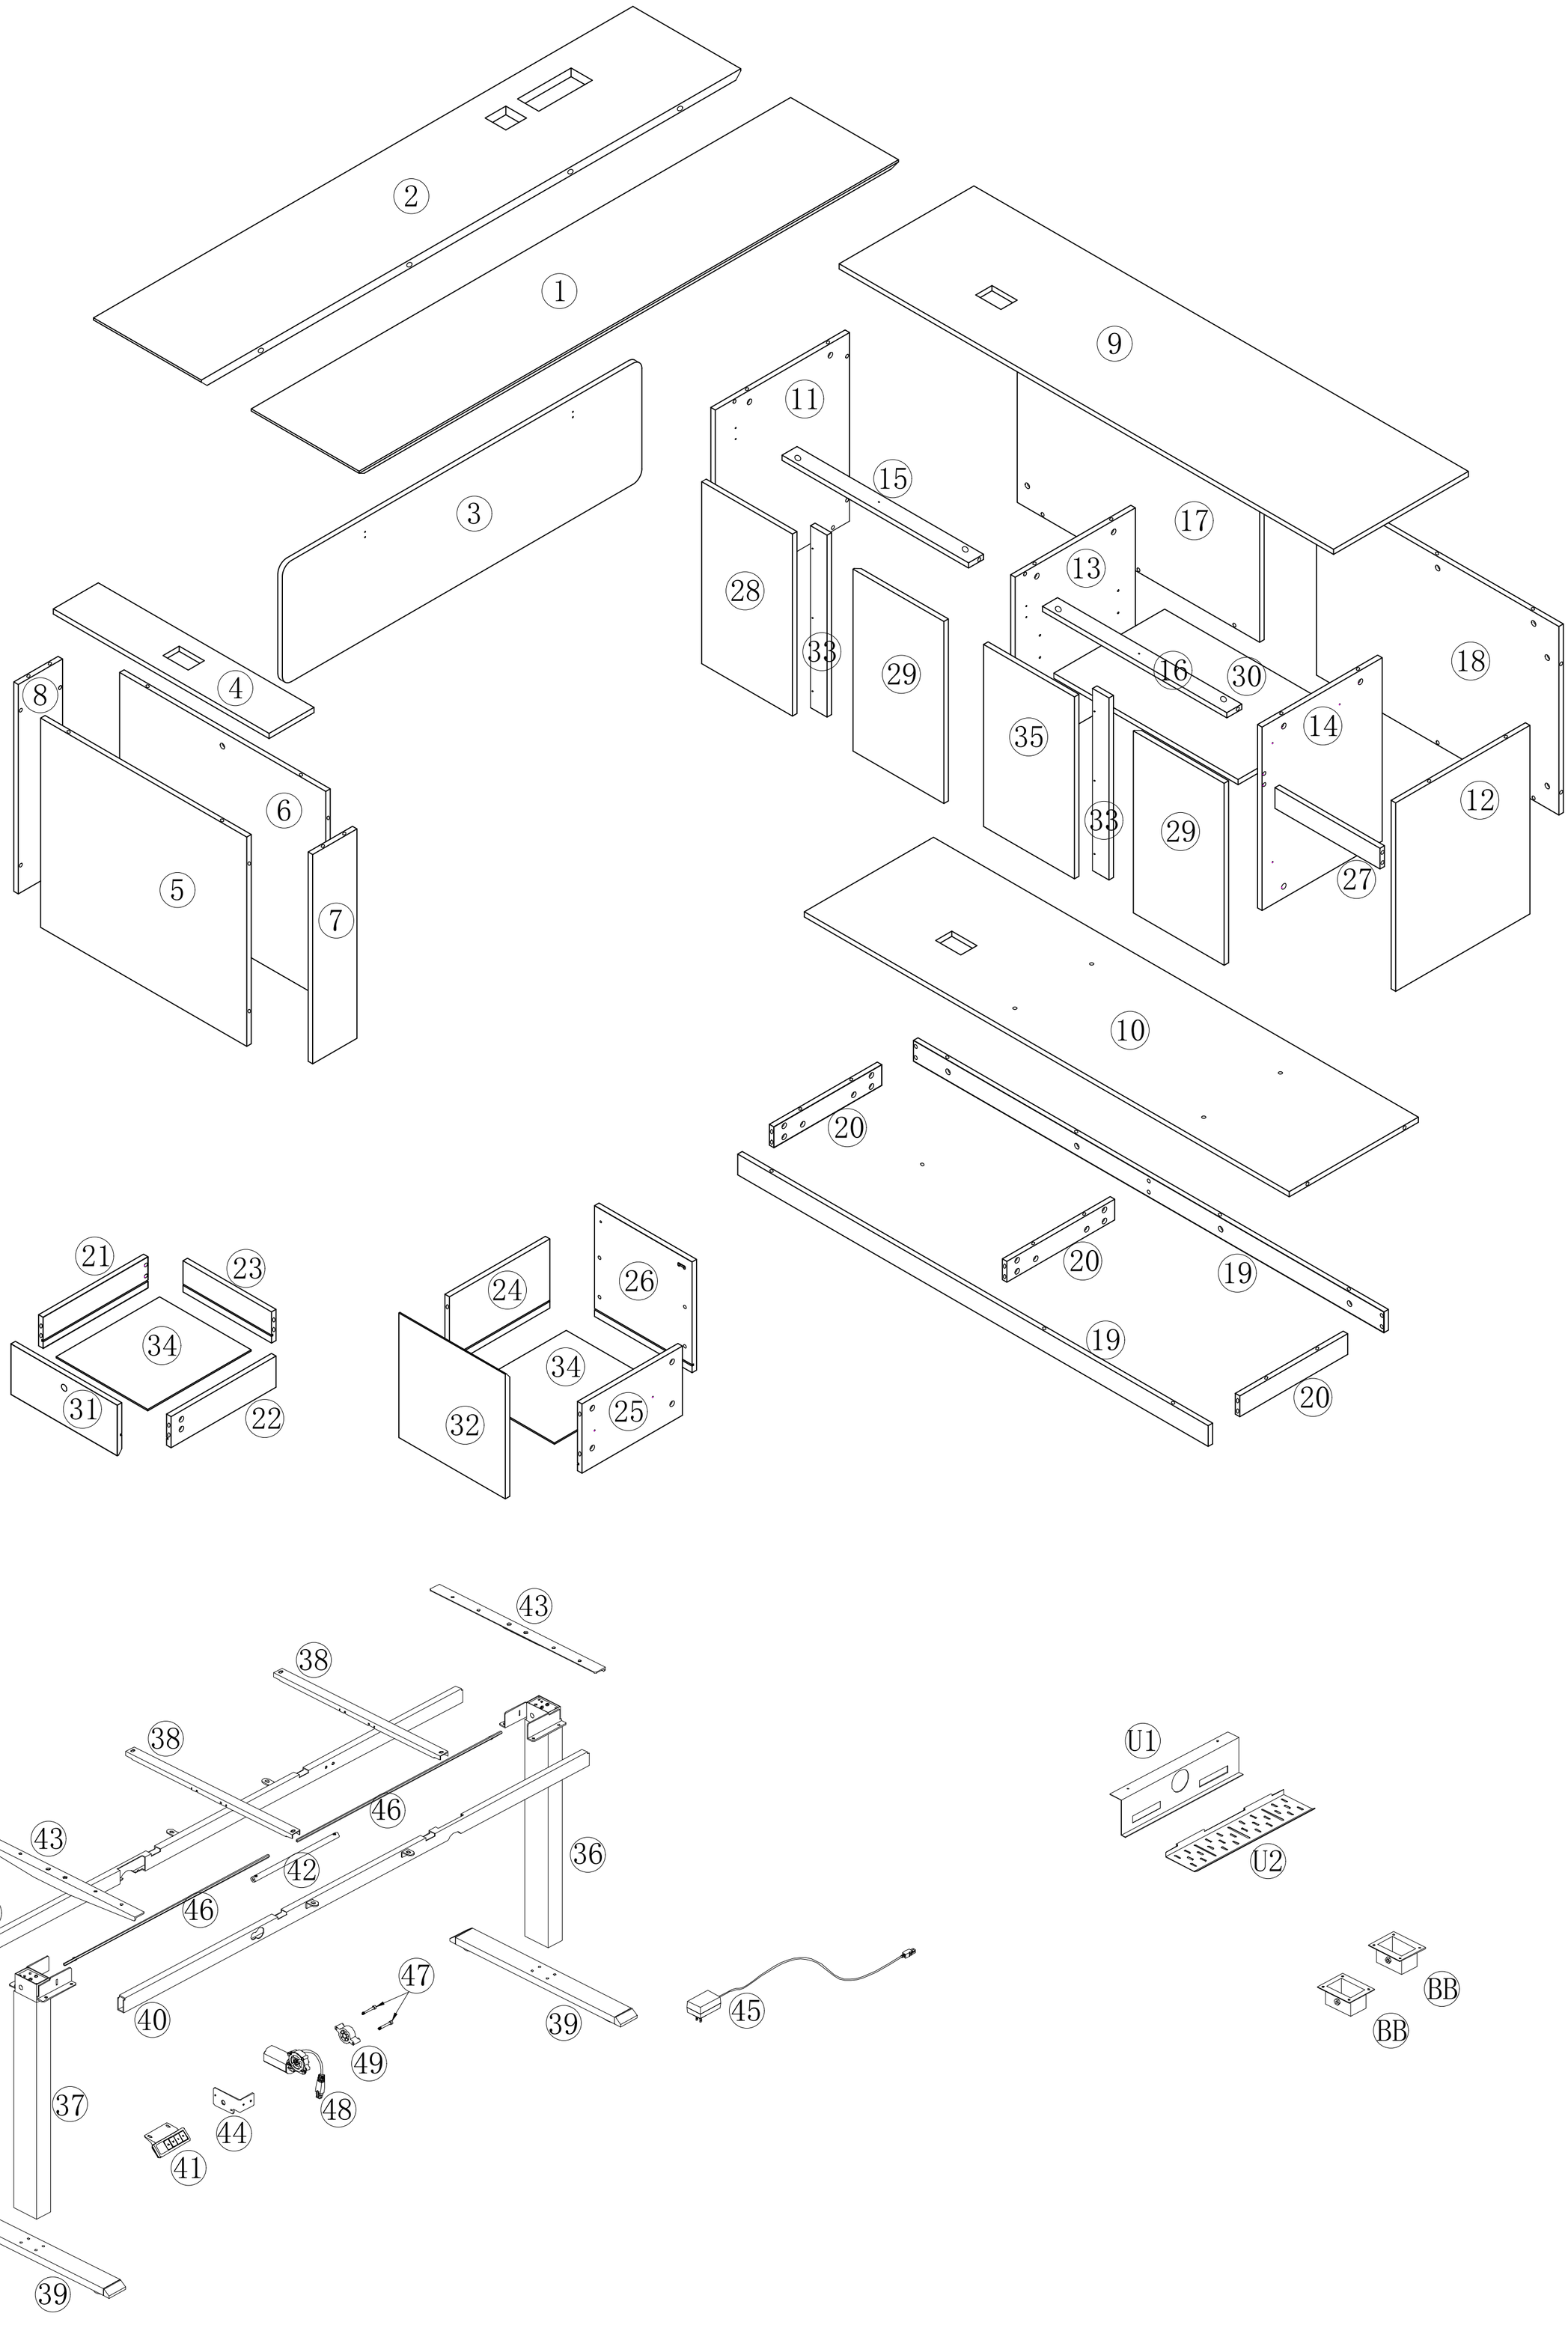

ASSEMBLY INSTRUCTION

Safety Information

Please read all instructions carefully before assembly.
Ensure all parts are properly installed and tightened before use.
Assemble the product on a flat and stable surface.
Keep small hardware parts away from children during assembly.
Do not use the product if any parts are damaged or missing.

Usage Warnings

Do not place excessive weight on the desktop or shelves.
Do not stand or sit on the product.
Use the product only for its intended purpose.
Avoid dragging heavy objects across the surface to prevent damage.

Child Safety Warning

This product is not a toy.
Keep children away from packaging materials and small components.
Children should not climb or play on the product.

Care Instructions

Clean with a soft, dry cloth.
Do not use abrasive cleaners or harsh chemicals.
Keep the product away from prolonged exposure to moisture.

Electrical Safety Warning

Use only the supplied power adapter.
Keep electrical components away from water.
Do not operate the product with wet hands.
Disconnect power before cleaning or maintenance.
Stop using the product if the power cord is damaged.

ASSEMBLY INSTRUCTION

Sicherheitshinweise

Bitte lesen Sie alle Anweisungen vor der Montage sorgfältig durch.
Stellen Sie sicher, dass alle Teile vor der Verwendung ordnungsgemäß installiert und fest angezogen sind.
Montieren Sie das Produkt auf einer ebenen und stabilen Oberfläche.
Halten Sie Kleinteile und Befestigungsmaterial während der Montage von Kindern fern.
Verwenden Sie das Produkt nicht, wenn Teile beschädigt sind oder fehlen.

Warmhinweise zur Verwendung

Platzieren Sie keine übermäßig schweren Gegenstände auf der Tischplatte oder den Ablageflächen.
Stellen Sie sich nicht auf das Produkt und setzen Sie sich nicht darauf.
Verwenden Sie das Produkt nur für den vorgesehenen Zweck.
Ziehen Sie keine schweren Gegenstände über die Oberfläche, um Beschädigungen zu vermeiden.

Sicherheitshinweis für Kinder

Dieses Produkt ist kein Spielzeug.
Halten Sie Kinder von Verpackungsmaterialien und Kleinteilen fern.
Kinder dürfen nicht auf das Produkt klettern oder damit spielen.

Pflegehinweise

Reinigen Sie das Produkt mit einem weichen, trockenen Tuch.
Verwenden Sie keine scheuernden Reinigungsmittel oder aggressiven Chemikalien.
Halten Sie das Produkt von längerer Feuchtigkeitseinwirkung fern.

Elektrische Sicherheitshinweise

Verwenden Sie ausschließlich das mitgelieferte Netzteil.
Halten Sie elektrische Komponenten von Wasser fern.
Bedienen Sie das Produkt nicht mit nassen Händen.
Trennen Sie die Stromversorgung vor der Reinigung oder Wartung.
Verwenden Sie das Produkt nicht weiter, wenn das Netzkabel beschädigt ist.

ASSEMBLY INSTRUCTION

Informations de sécurité

Veuillez lire attentivement toutes les instructions avant l’assemblage.
Assurez-vous que toutes les pièces sont correctement installées et bien serrées avant utilisation.
Assemblez le produit sur une surface plane et stable.
Gardez les petites pièces et les éléments de fixation hors de portée des enfants pendant l’assemblage.
N’utilisez pas le produit si des pièces sont endommagées ou manquantes.

Avertissements d’utilisation

Ne placez pas de poids excessif sur le plateau du bureau ou les étagères.
Ne montez pas et ne vous asseyez pas sur le produit.
Utilisez le produit uniquement pour l’usage auquel il est destiné.
Évitez de faire glisser des objets lourds sur la surface afin d’éviter tout dommage.

Avertissement de sécurité pour les enfants

Ce produit n’est pas un jouet.
Gardez les enfants éloignés des matériaux d’emballage et des petites pièces.
Les enfants ne doivent pas grimper sur le produit ni jouer avec celui-ci.

Instructions d’entretien


Nettoyez le produit avec un chiffon doux et sec.
N’utilisez pas de produits de nettoyage abrasifs ni de produits chimiques agressifs.
Évitez une exposition prolongée du produit à l’humidité.

Avertissement de sécurité électrique


Utilisez uniquement l’adaptateur secteur fourni.
Gardez les composants électriques à l’écart de l’eau.
N’utilisez pas le produit avec les mains mouillées.
Débranchez l’alimentation avant tout nettoyage ou entretien.
Cessez d’utiliser le produit si le cordon d’alimentation est endommagé.

ASSEMBLY INSTRUCTION


① 1PC

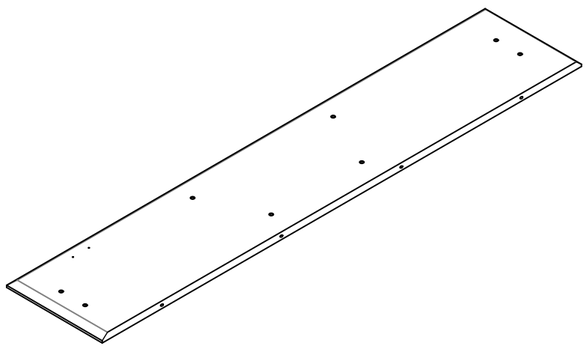


② 1PC

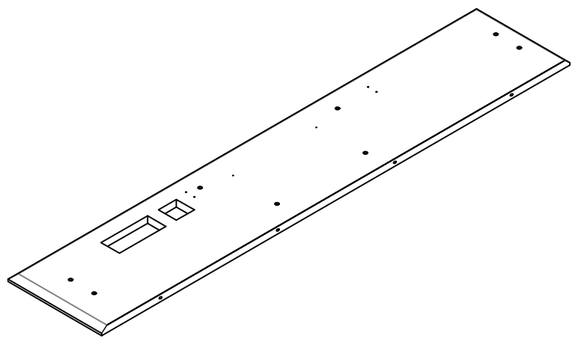


③ 1PC

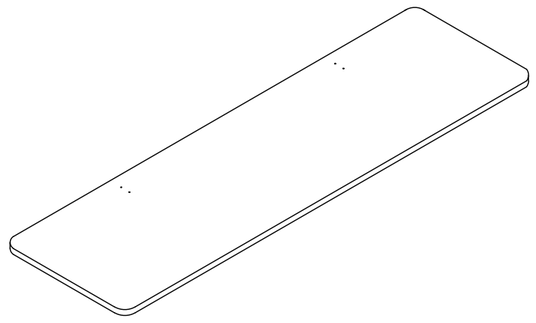


④ 1PC

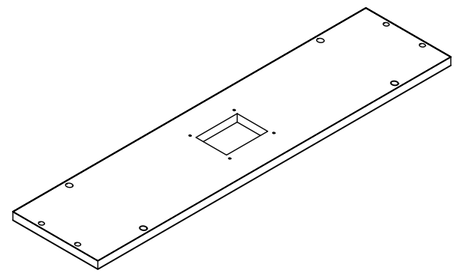


⑤ 1PC

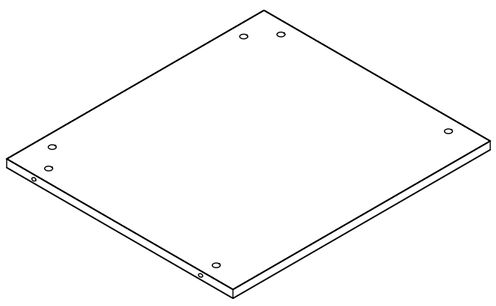


⑥ 1PC

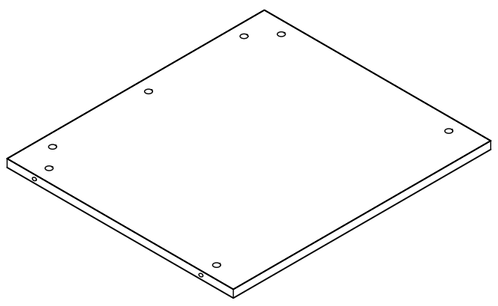


⑦ 1PC

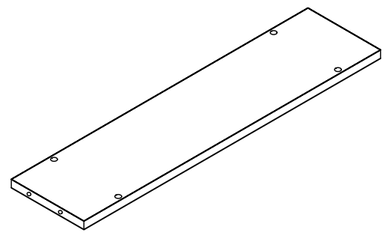


⑧ 1PC

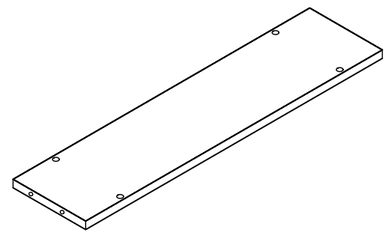


⑨ 1PC

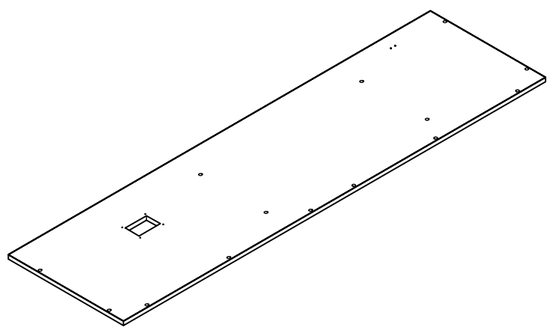


⑩ 1PC

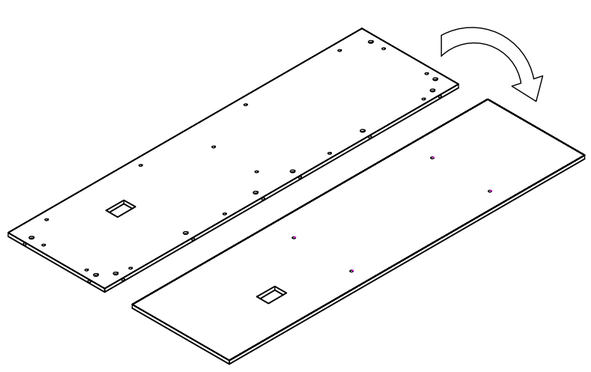


⑪ 1PC

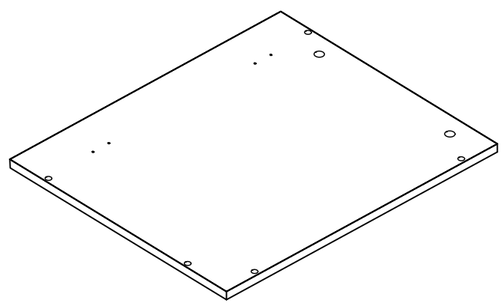


⑫ 1PC

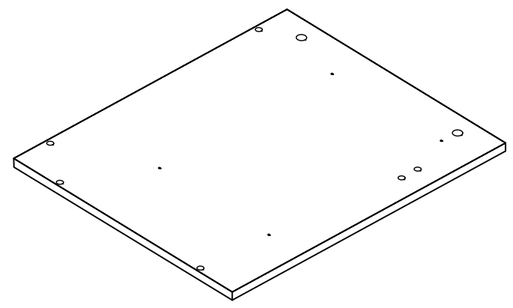


⑬ 1PC

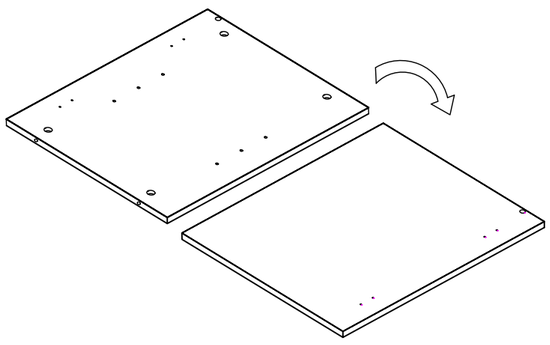


⑭ 1PC

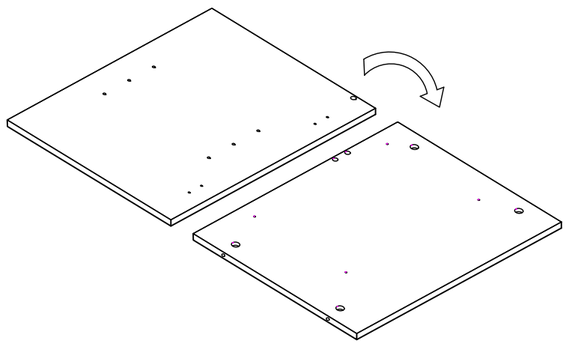


⑮ 1PC

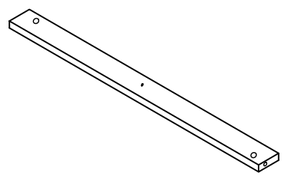


⑯ 1PC

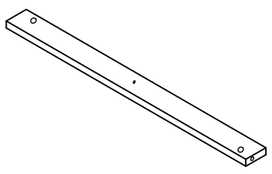


⑰ 1PC

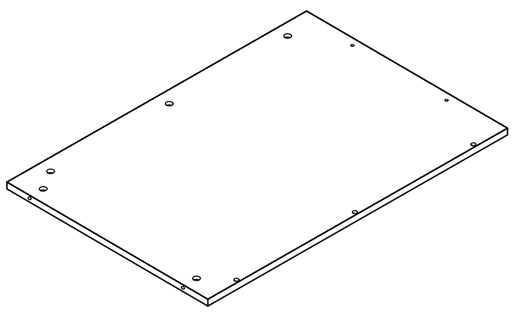


⑱ 1PC

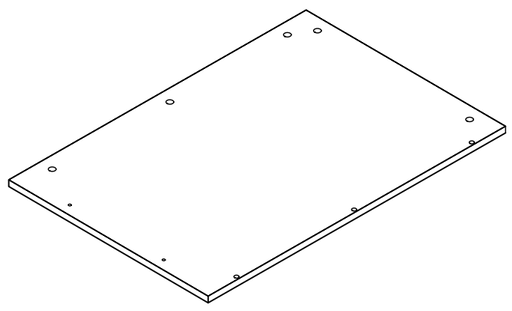













⑲ 2PCS

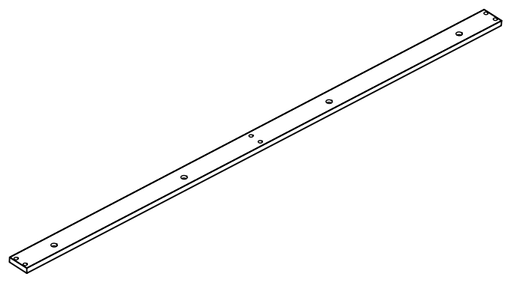











⑳ 3PCS

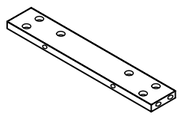

ASSEMBLY INSTRUCTION

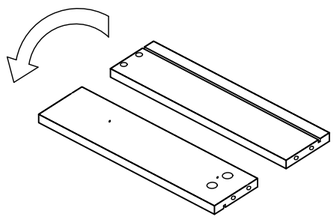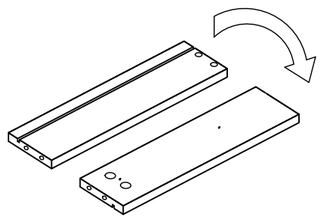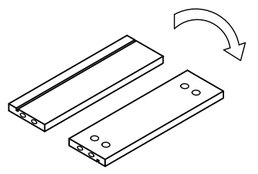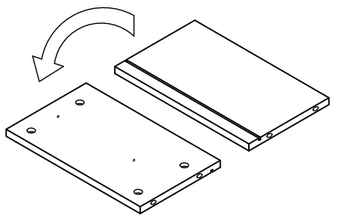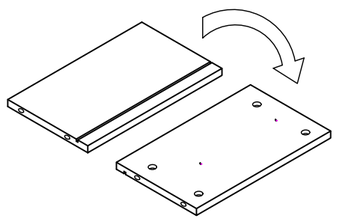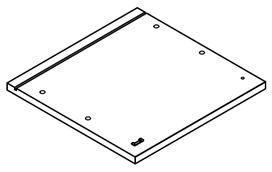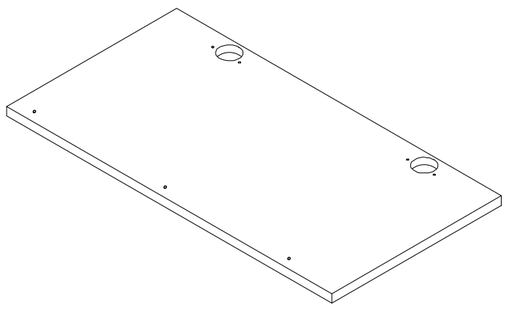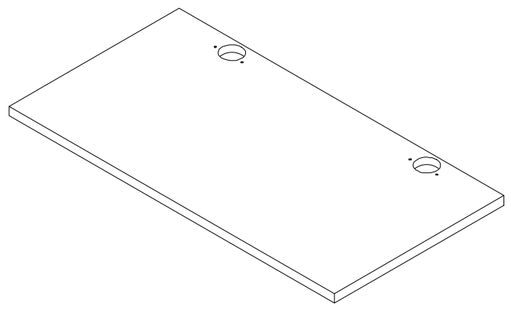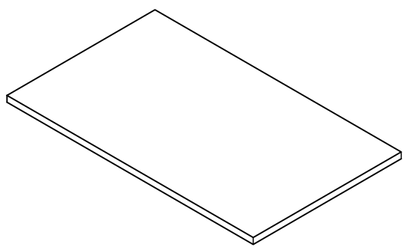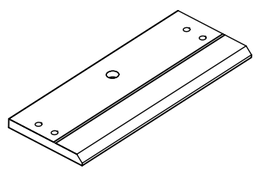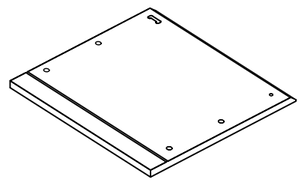21 1PC 	22 1PC 	23 1PC 	24 1PC 
25 1PC 	26 1PC 	27 1PC 	28 1PC 
29 2PCS 	30 1PC 	31 1PC 	32 1PC 
33 2PCS	34 2PCS	35 1PC	

ASSEMBLY INSTRUCTION

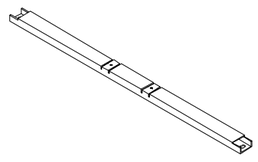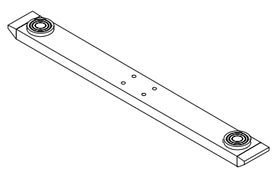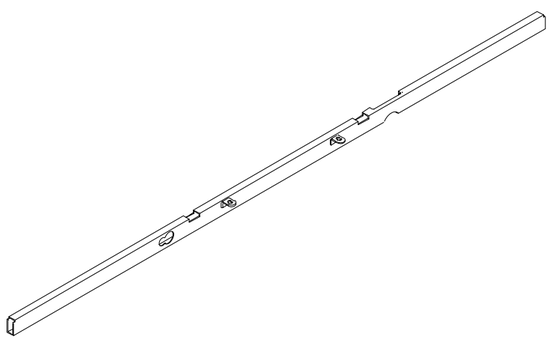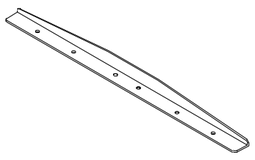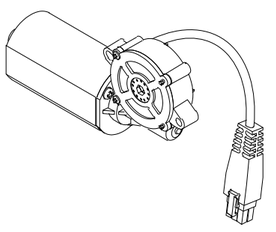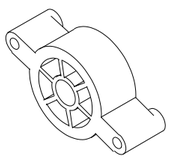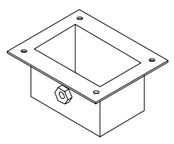36 1PC 	37 1PC 	38 2PCS 	39 2PCS 
40 2PCS 	41 1PC 	42 1PC 	43 2PCS 
44 1PC	45 1PC 	46 2PCS 	47 2PCS
48 1PC 	49 1PC 	50 2PCS 	
A 12PCS  M6*30	B 10PCS  M6*10	C 1PC  M4	D 4PCS  M6*10

ASSEMBLY INSTRUCTION

E 8PCS




M6*12

F 2PCS



M8


H 4PCS

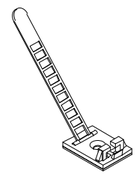

I 1PC




J

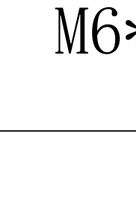

4PCS


8PCS

K 94PCS




M6*40

L 94PCS

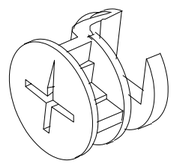


M 8PCS




Ø8*30


N 4PCS

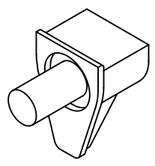

O 2PCS

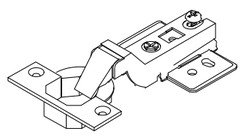


P 4PCS

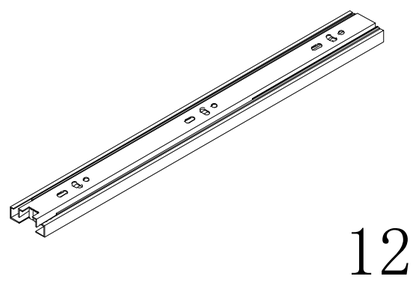


12″

Q 80PCS




Ø3.5*14

R 8PCS




Ø3.5*25

S 16PCS

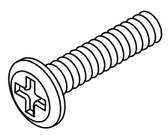


M6*16


T 1PC

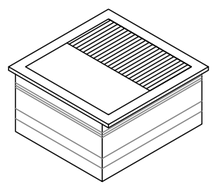


U 1SET

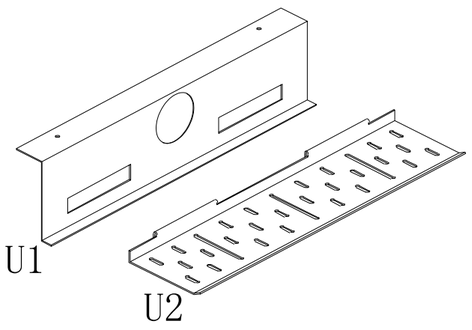


V 1SET

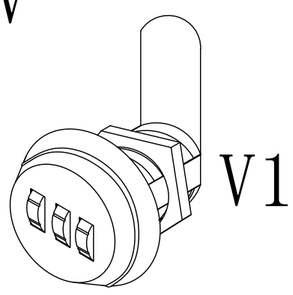


W 2PCS

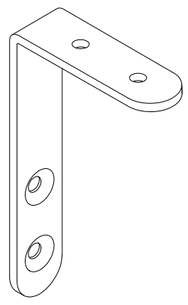

X 2PCS

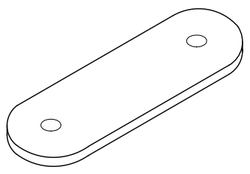


Y 2PCS

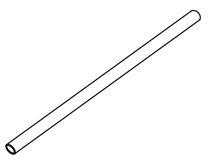


L=345


Z 30PCS




AA 1SEY

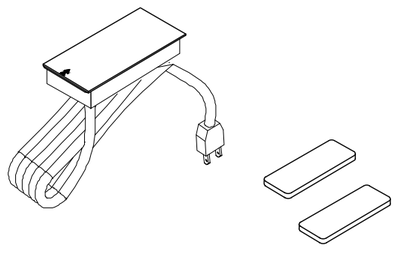

BB 6PCS

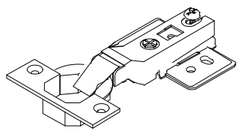

CC 2PCS

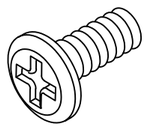


M8*16

M4


ASSEMBLY INSTRUCTION

"K" Hardware installation example


I

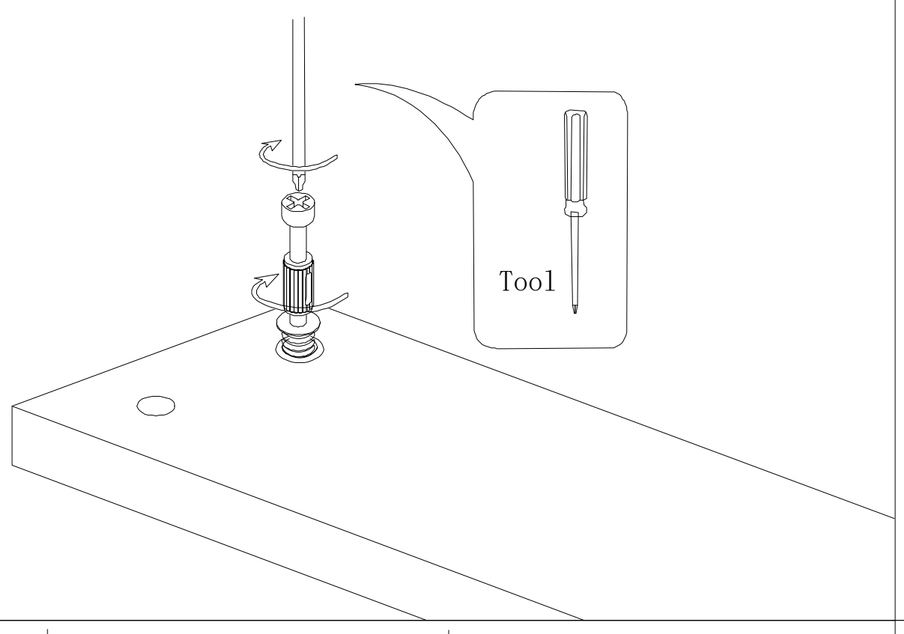


II

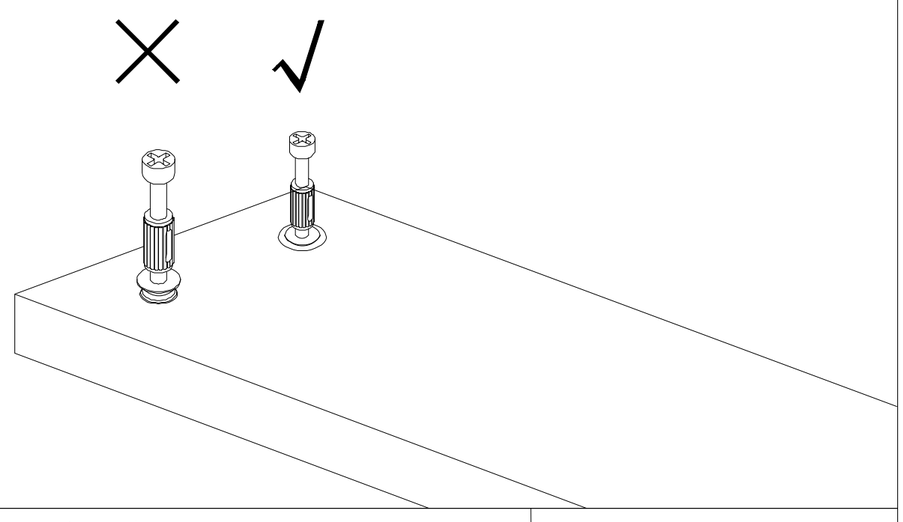

III

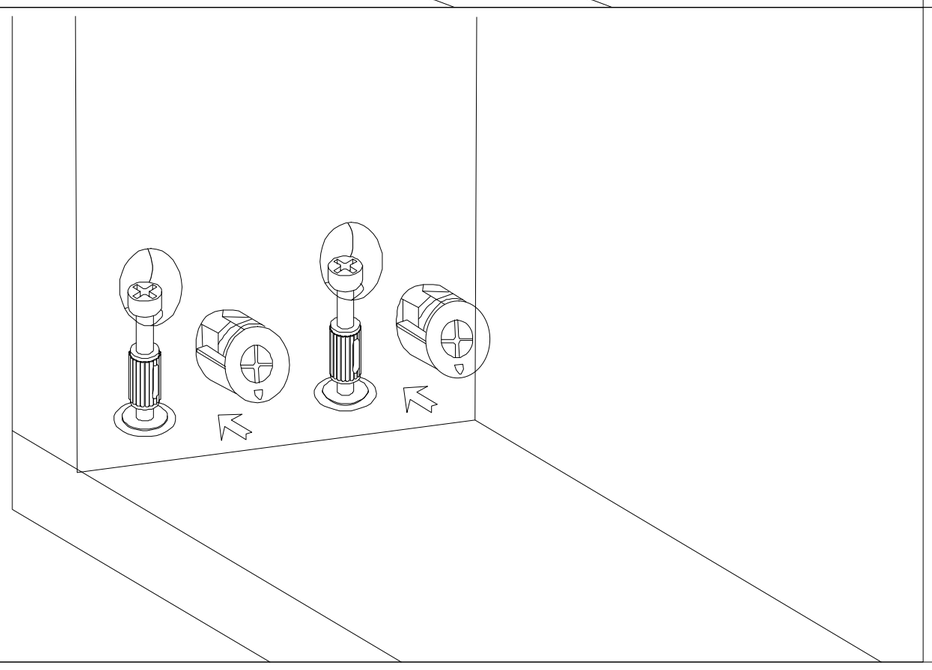


IV

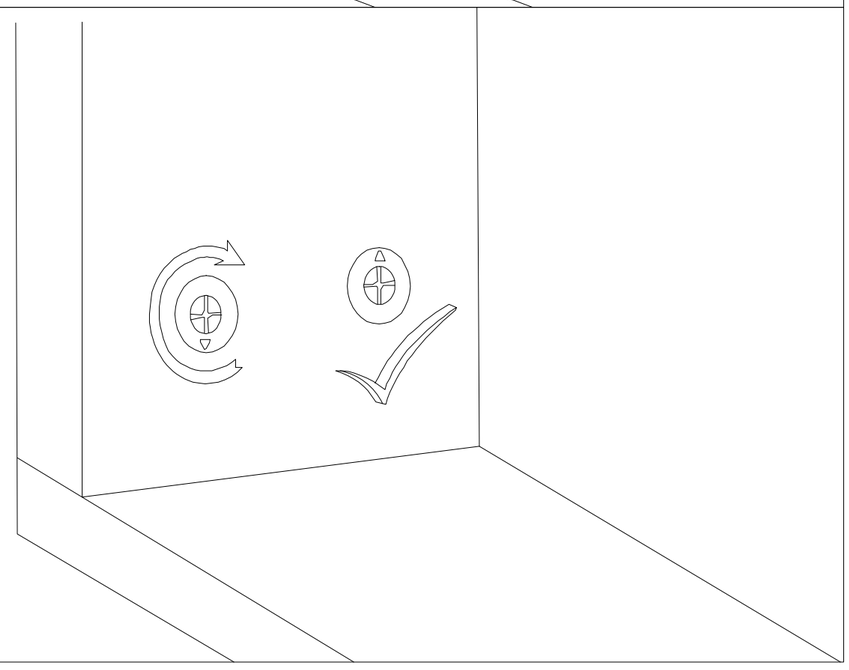

ASSEMBLY INSTRUCTION


step 1

K 66 PCS




M6*40


Kx4

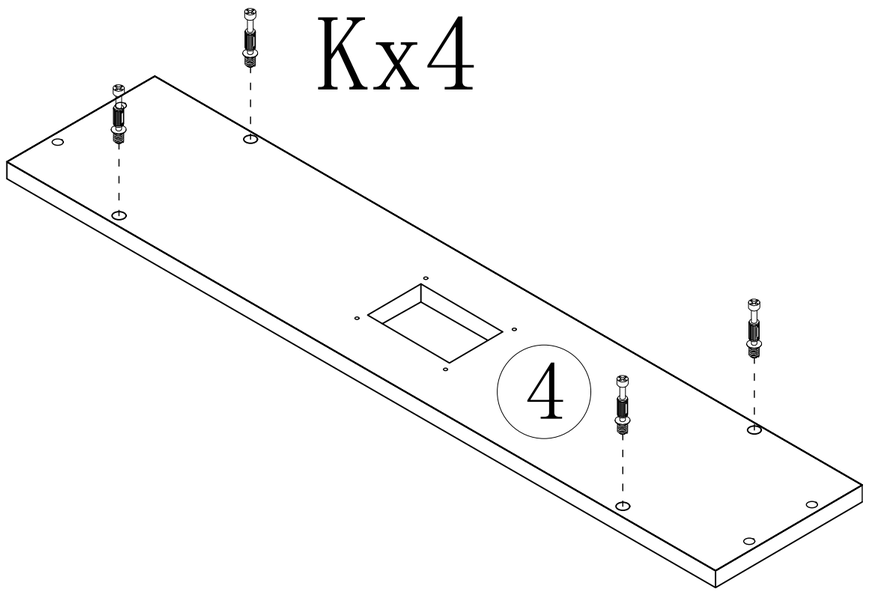


Kx4

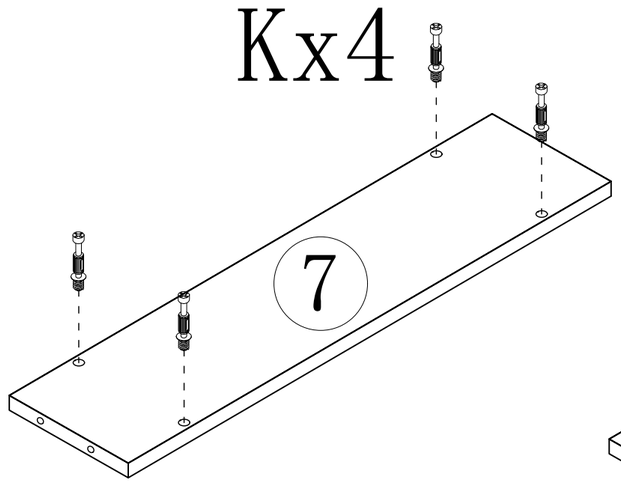


Kx4

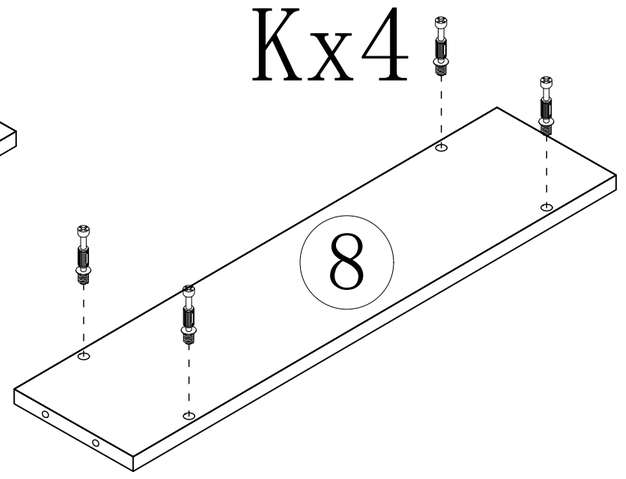


Kx14

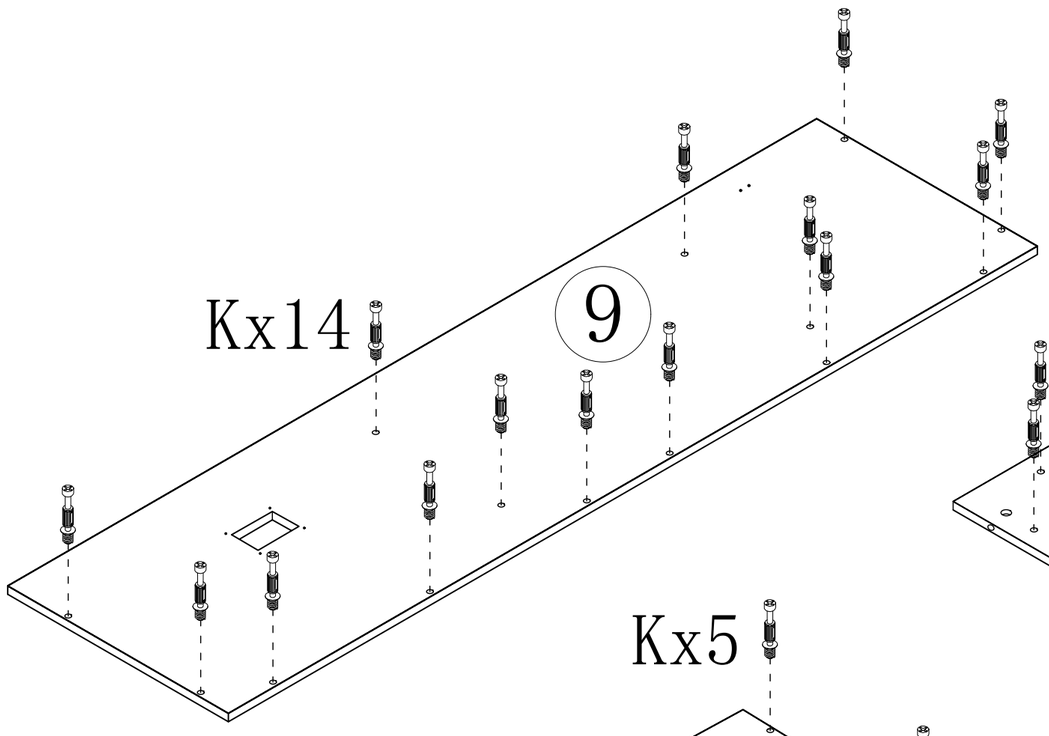


Kx18

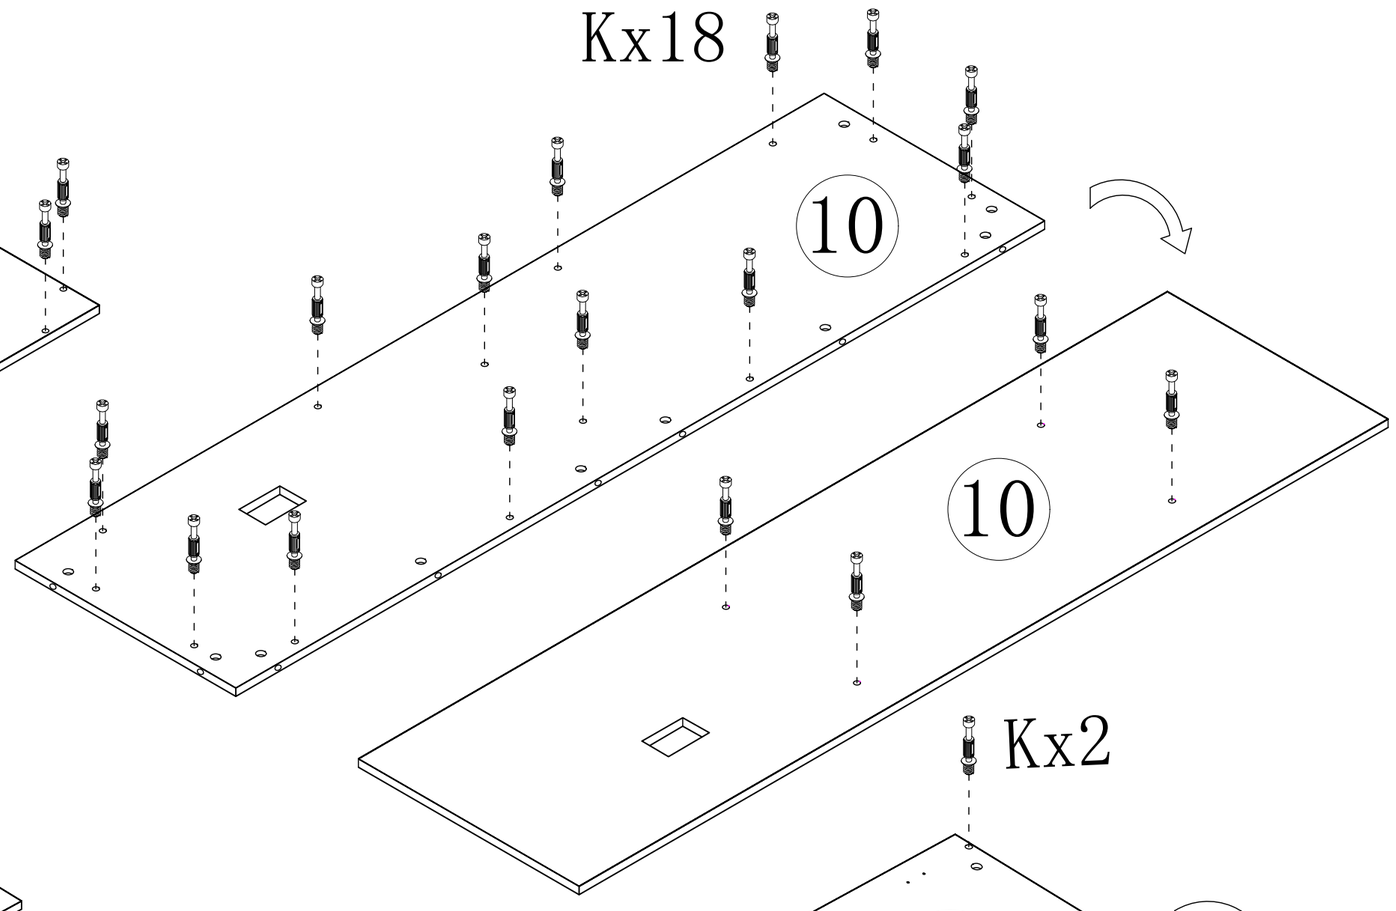


Kx5

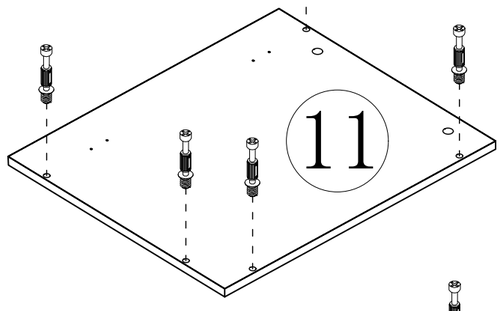


Kx6

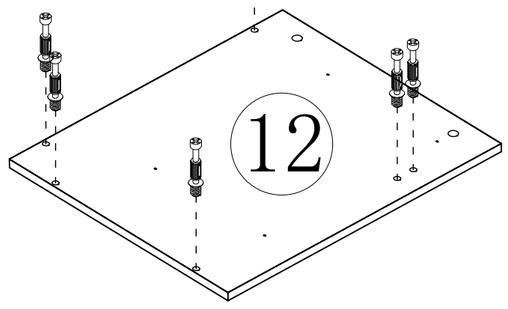


Kx2

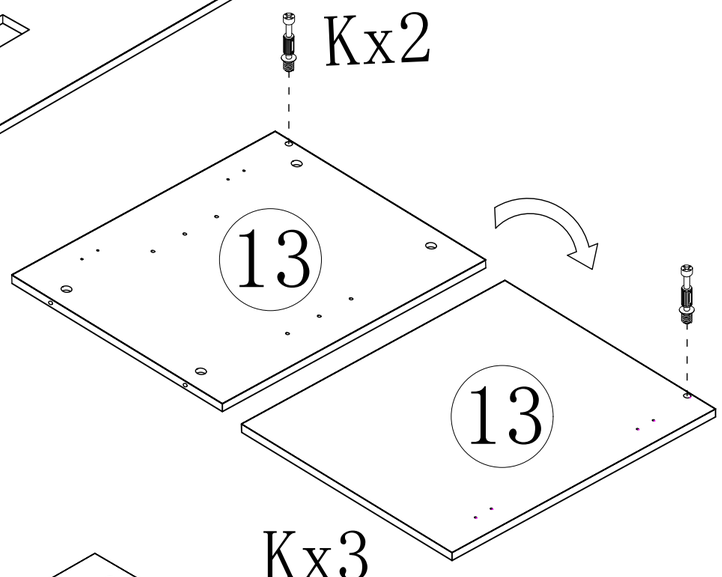


Kx3

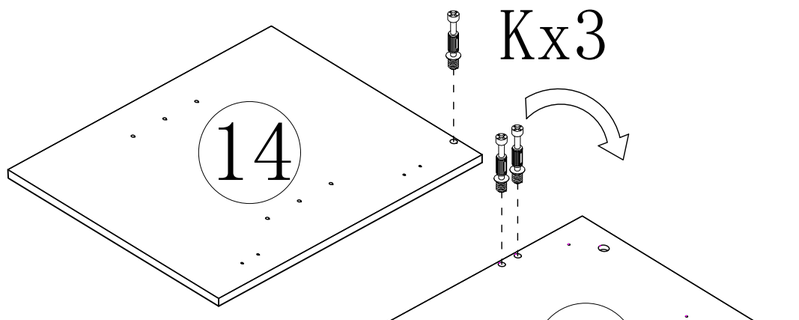


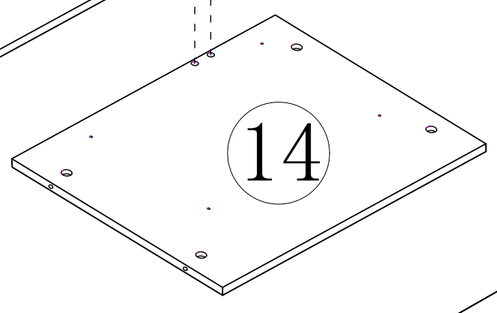

Kx3

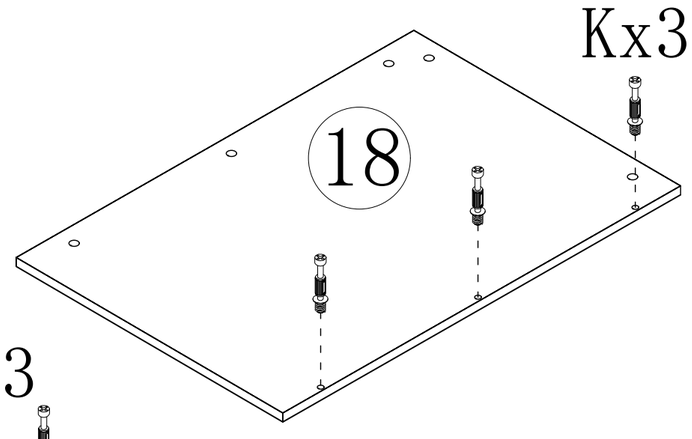


Kx3

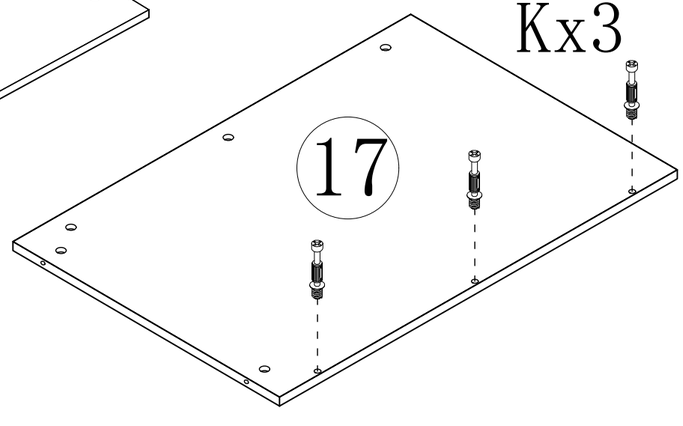


ASSEMBLY INSTRUCTION


step 2


K 28 PCS





M6*40

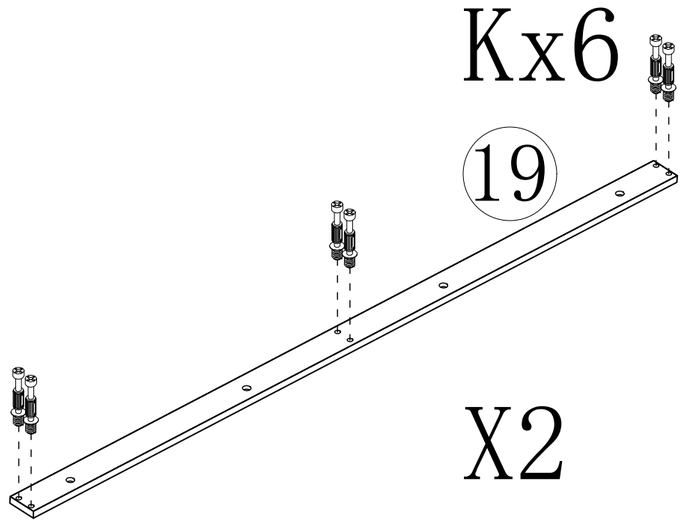


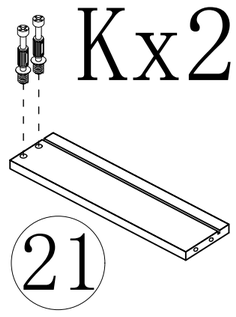

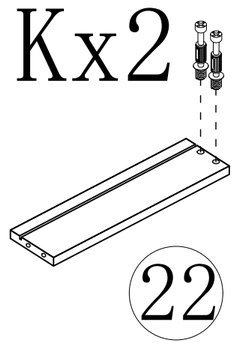

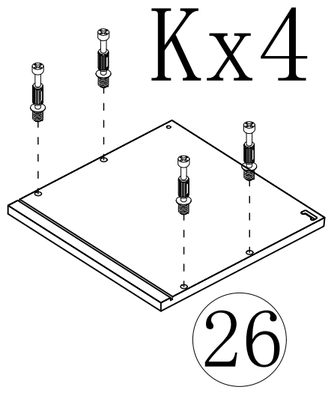


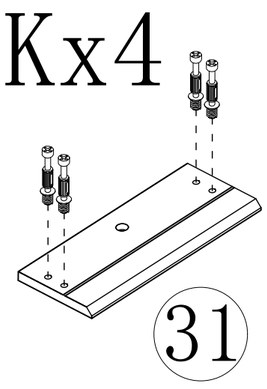


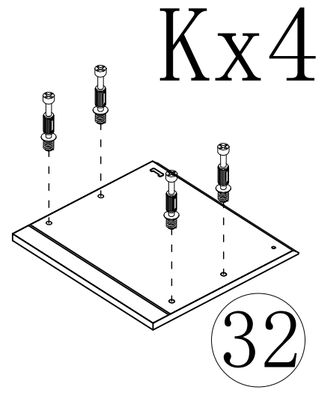

step 3


L 8 PCS

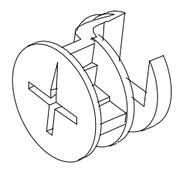

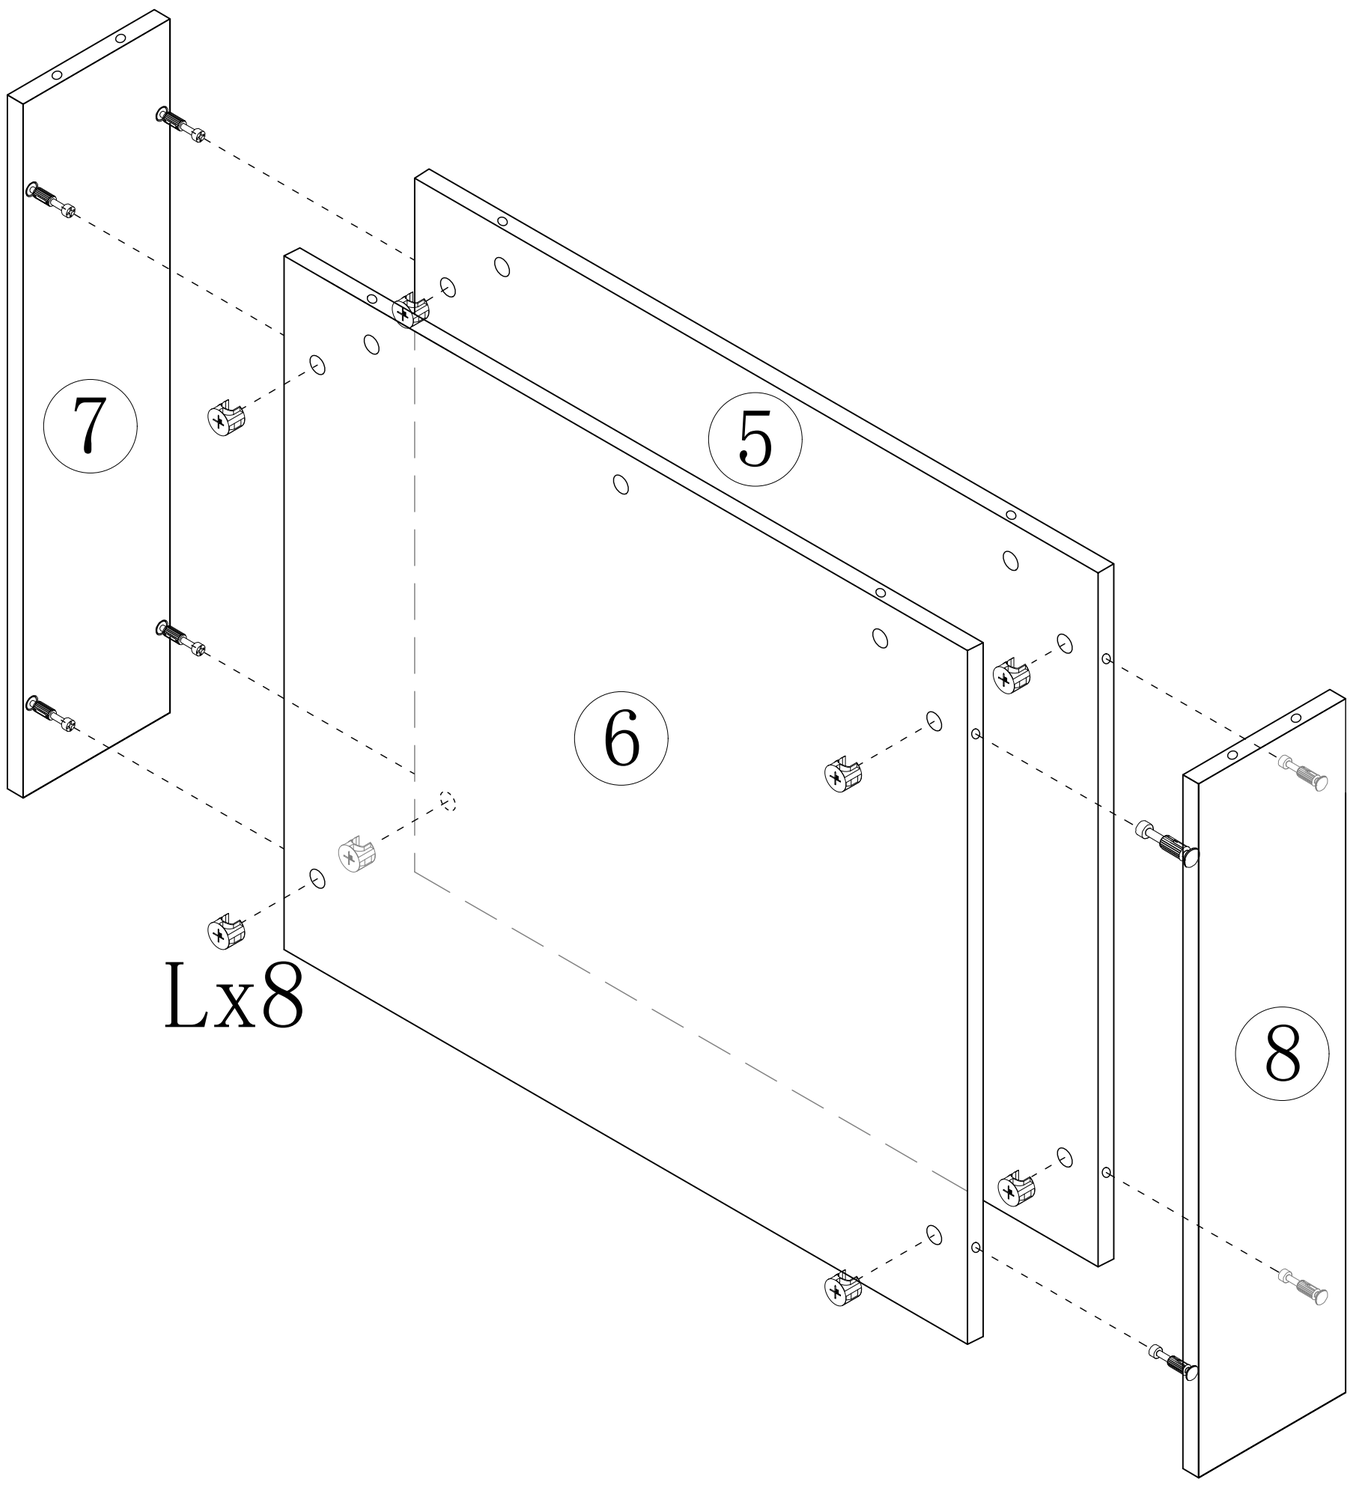



ASSEMBLY INSTRUCTION

step 4

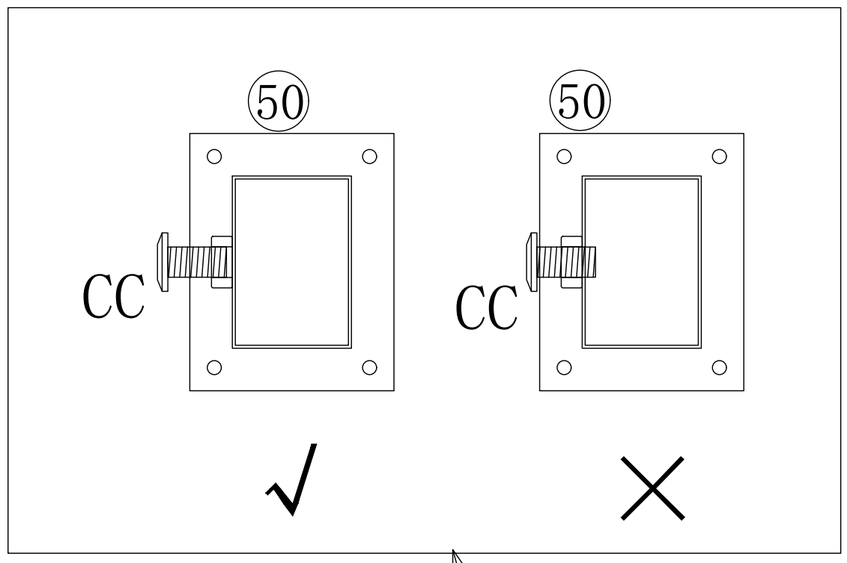


Qx4

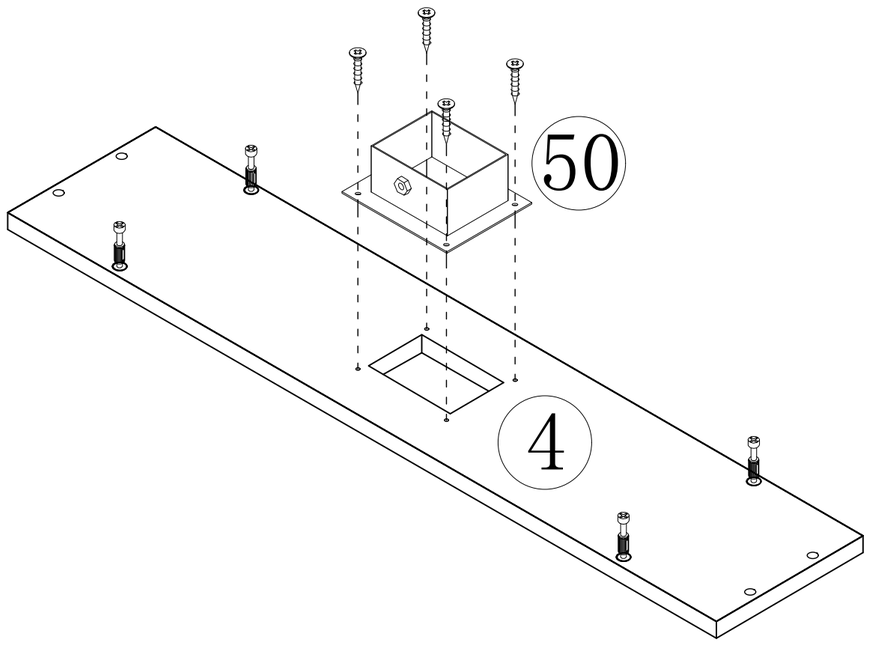

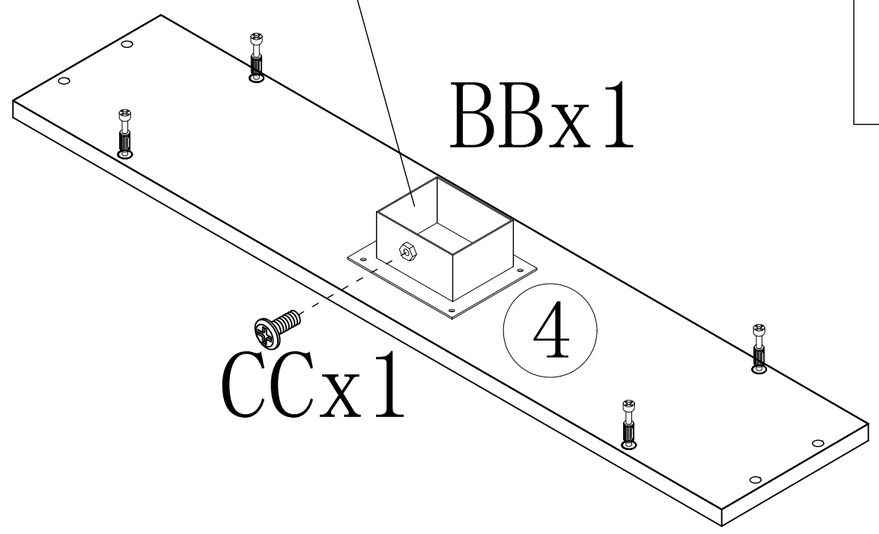

Q	4 PCS
	Ø3.5*14
CC	1 PC
	M8*16
50	1 PC

step 5

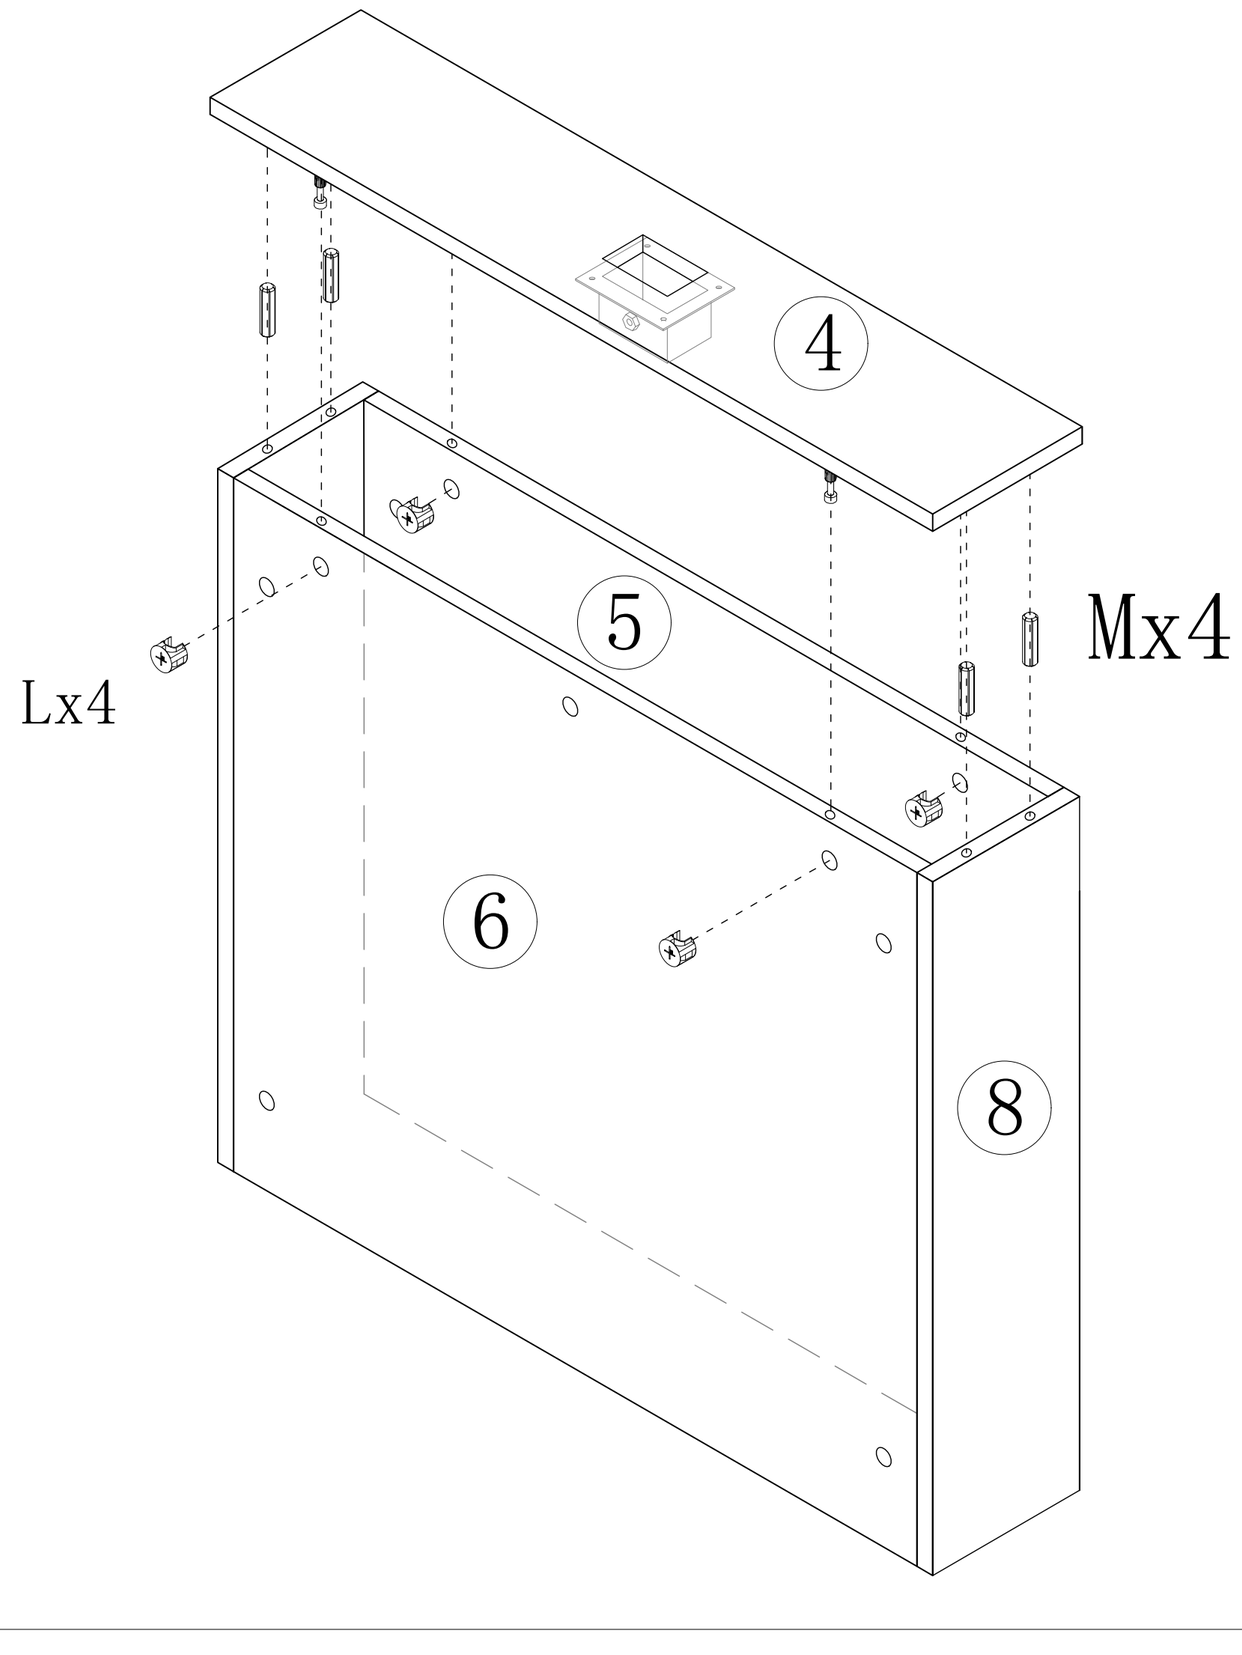

L	4 PCS
M	4 PCS
	Ø8*30


ASSEMBLY INSTRUCTION

step 6


A 4 PCS



M6*30

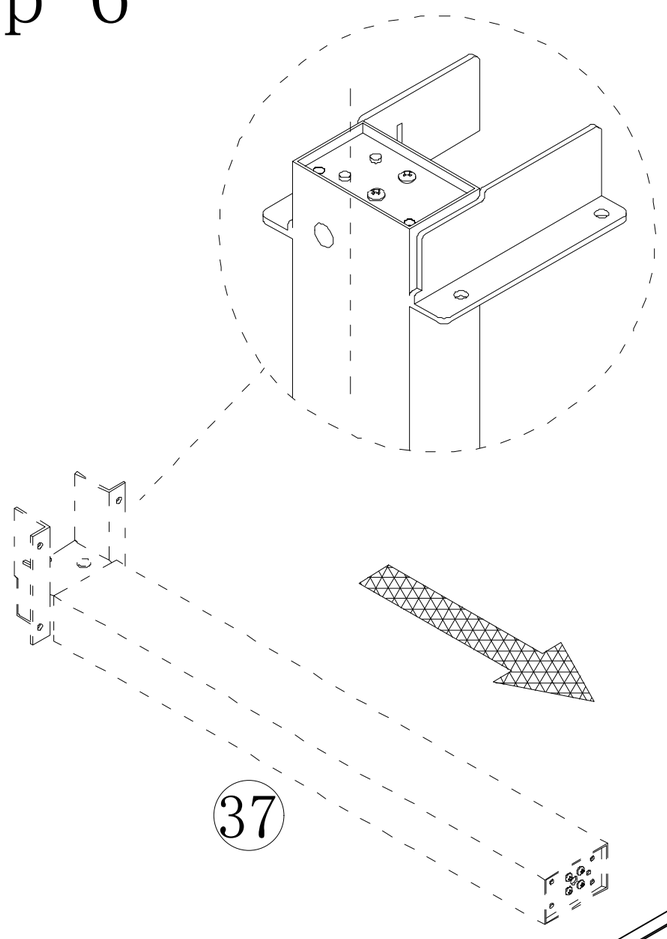


⚠ This product has two different types of table legs. This is the left leg. The difference is that in this perspective view, the hole is located behind the dotted line.

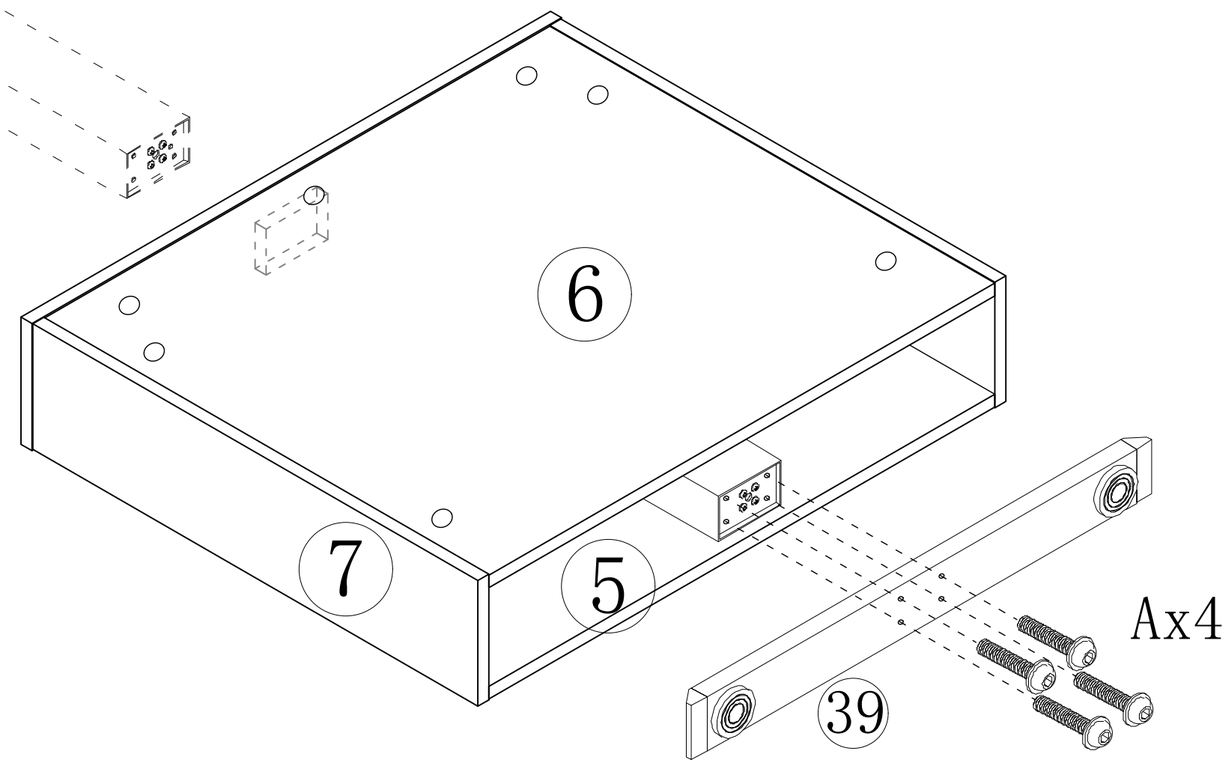


step 7

P 4PCS

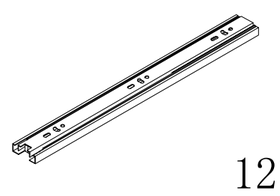


12″

Px4

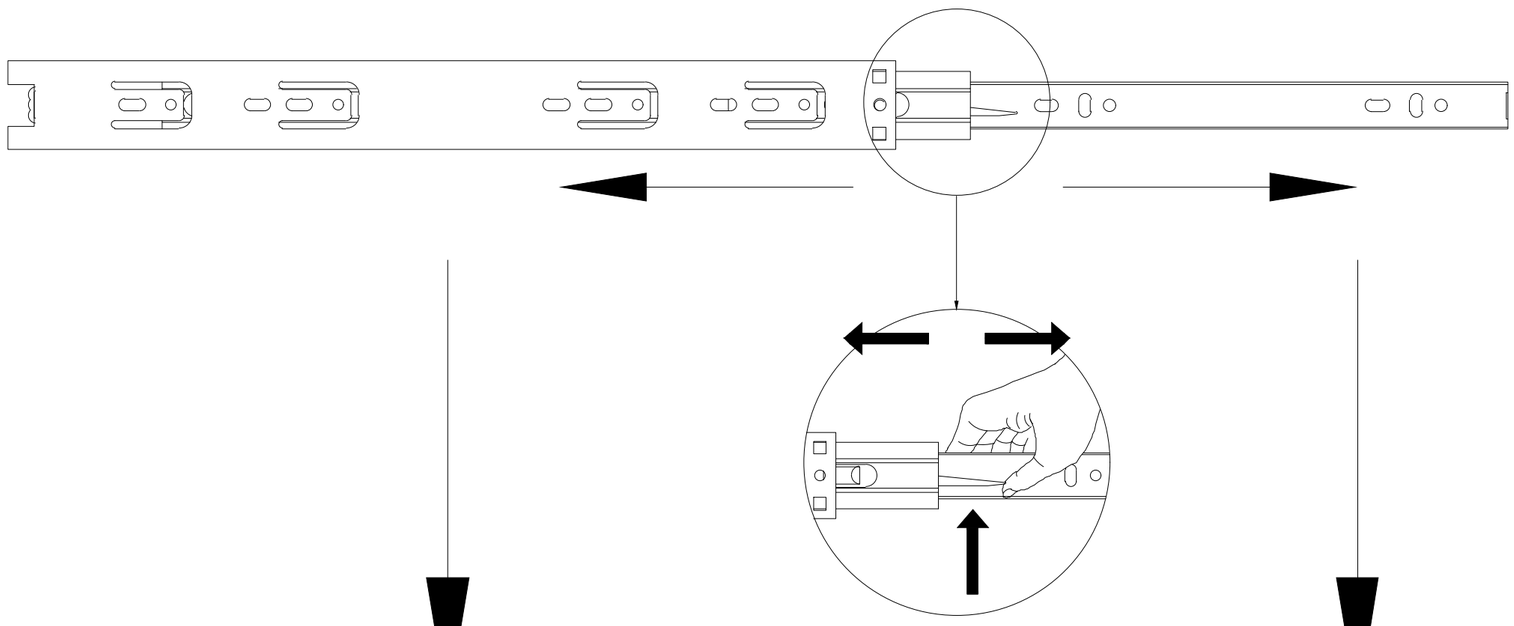

P1




P2




ASSEMBLY INSTRUCTION

step 8

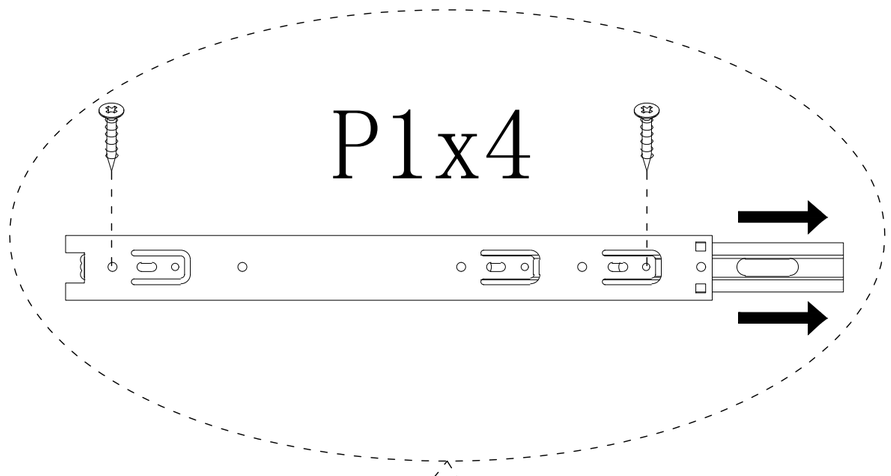


P1 4PCS

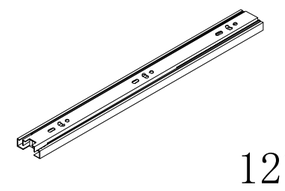



12″

Q 8 PCS




Ø3.5*14

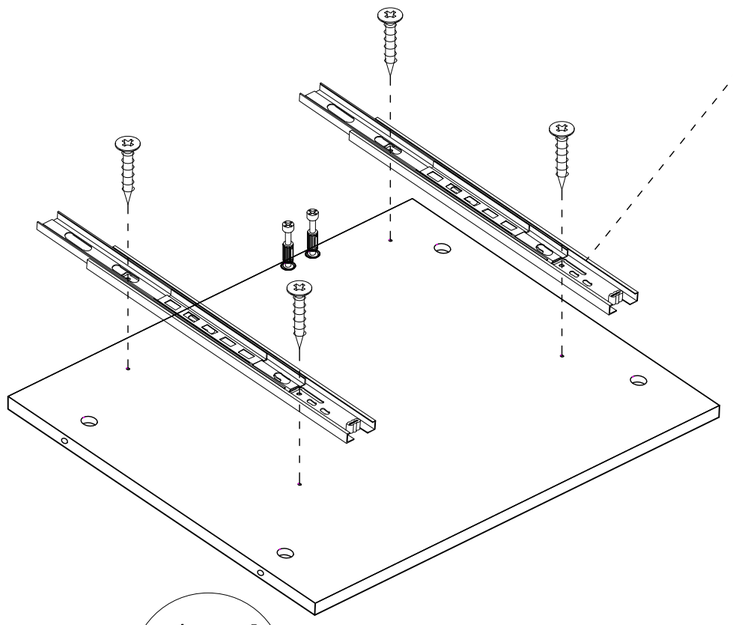


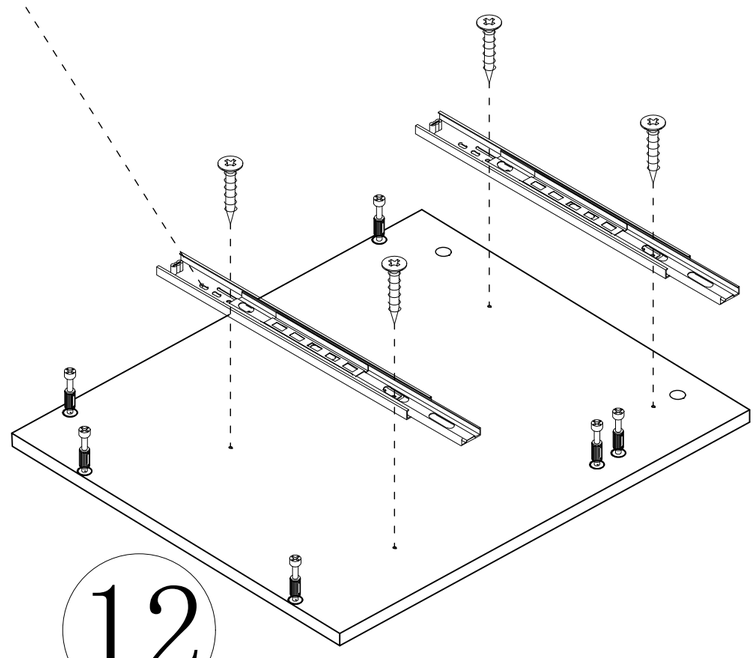

step 9


L 2 PCS

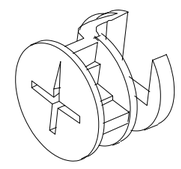

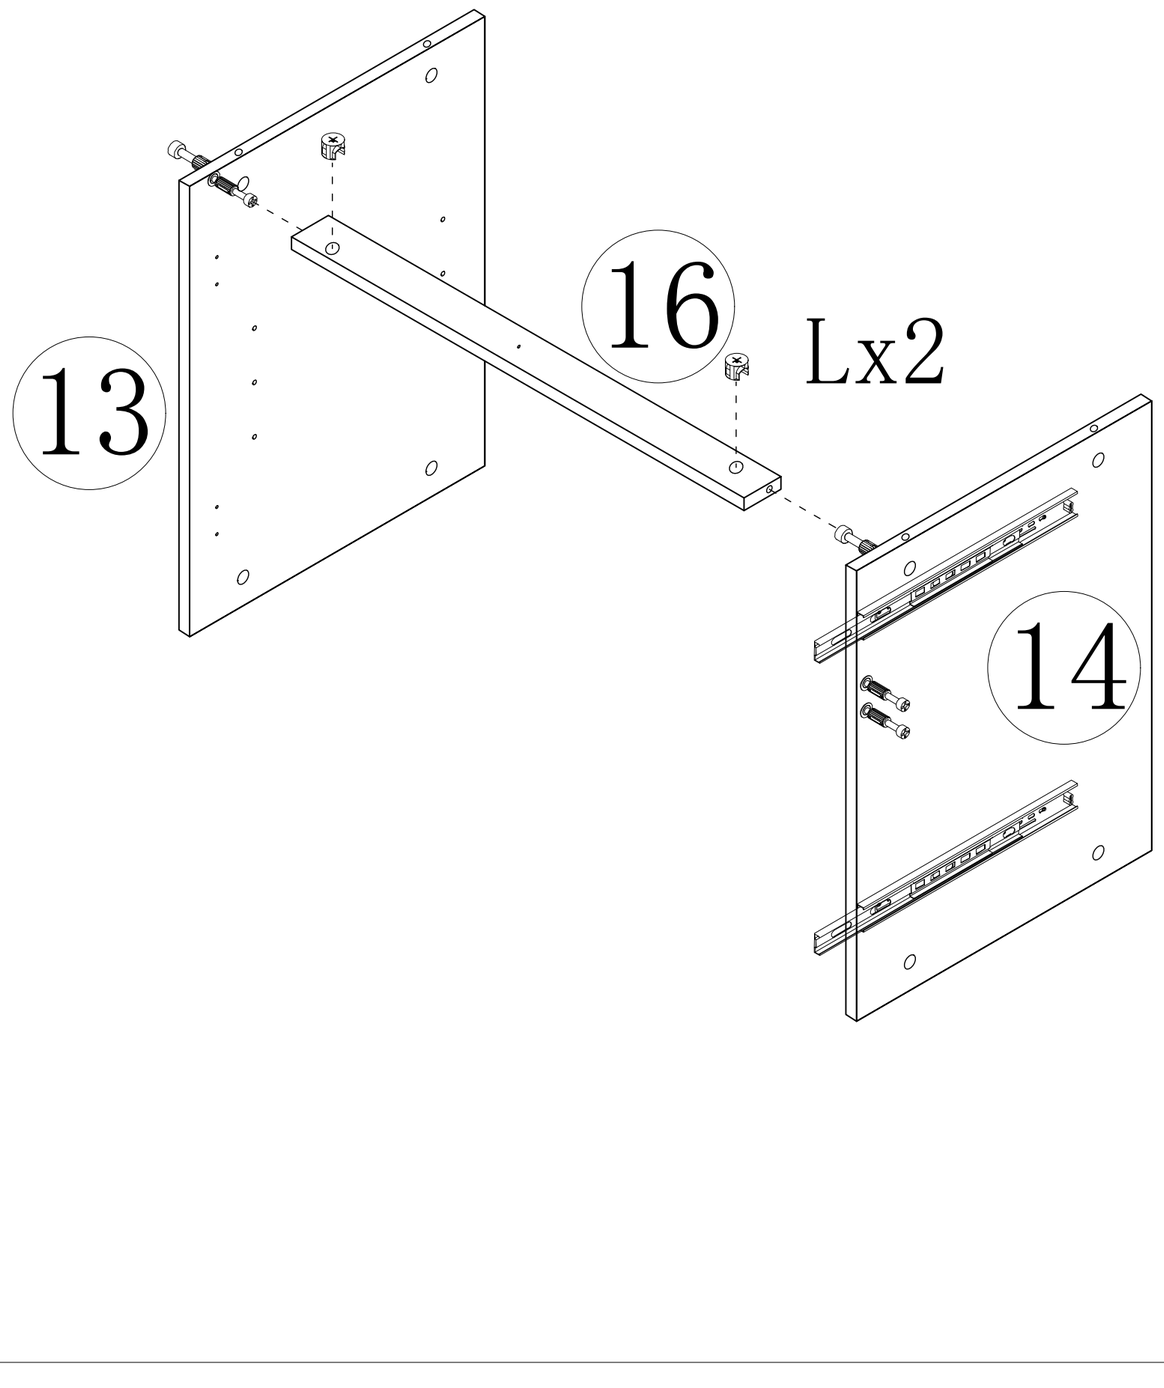


ASSEMBLY INSTRUCTION


step 10

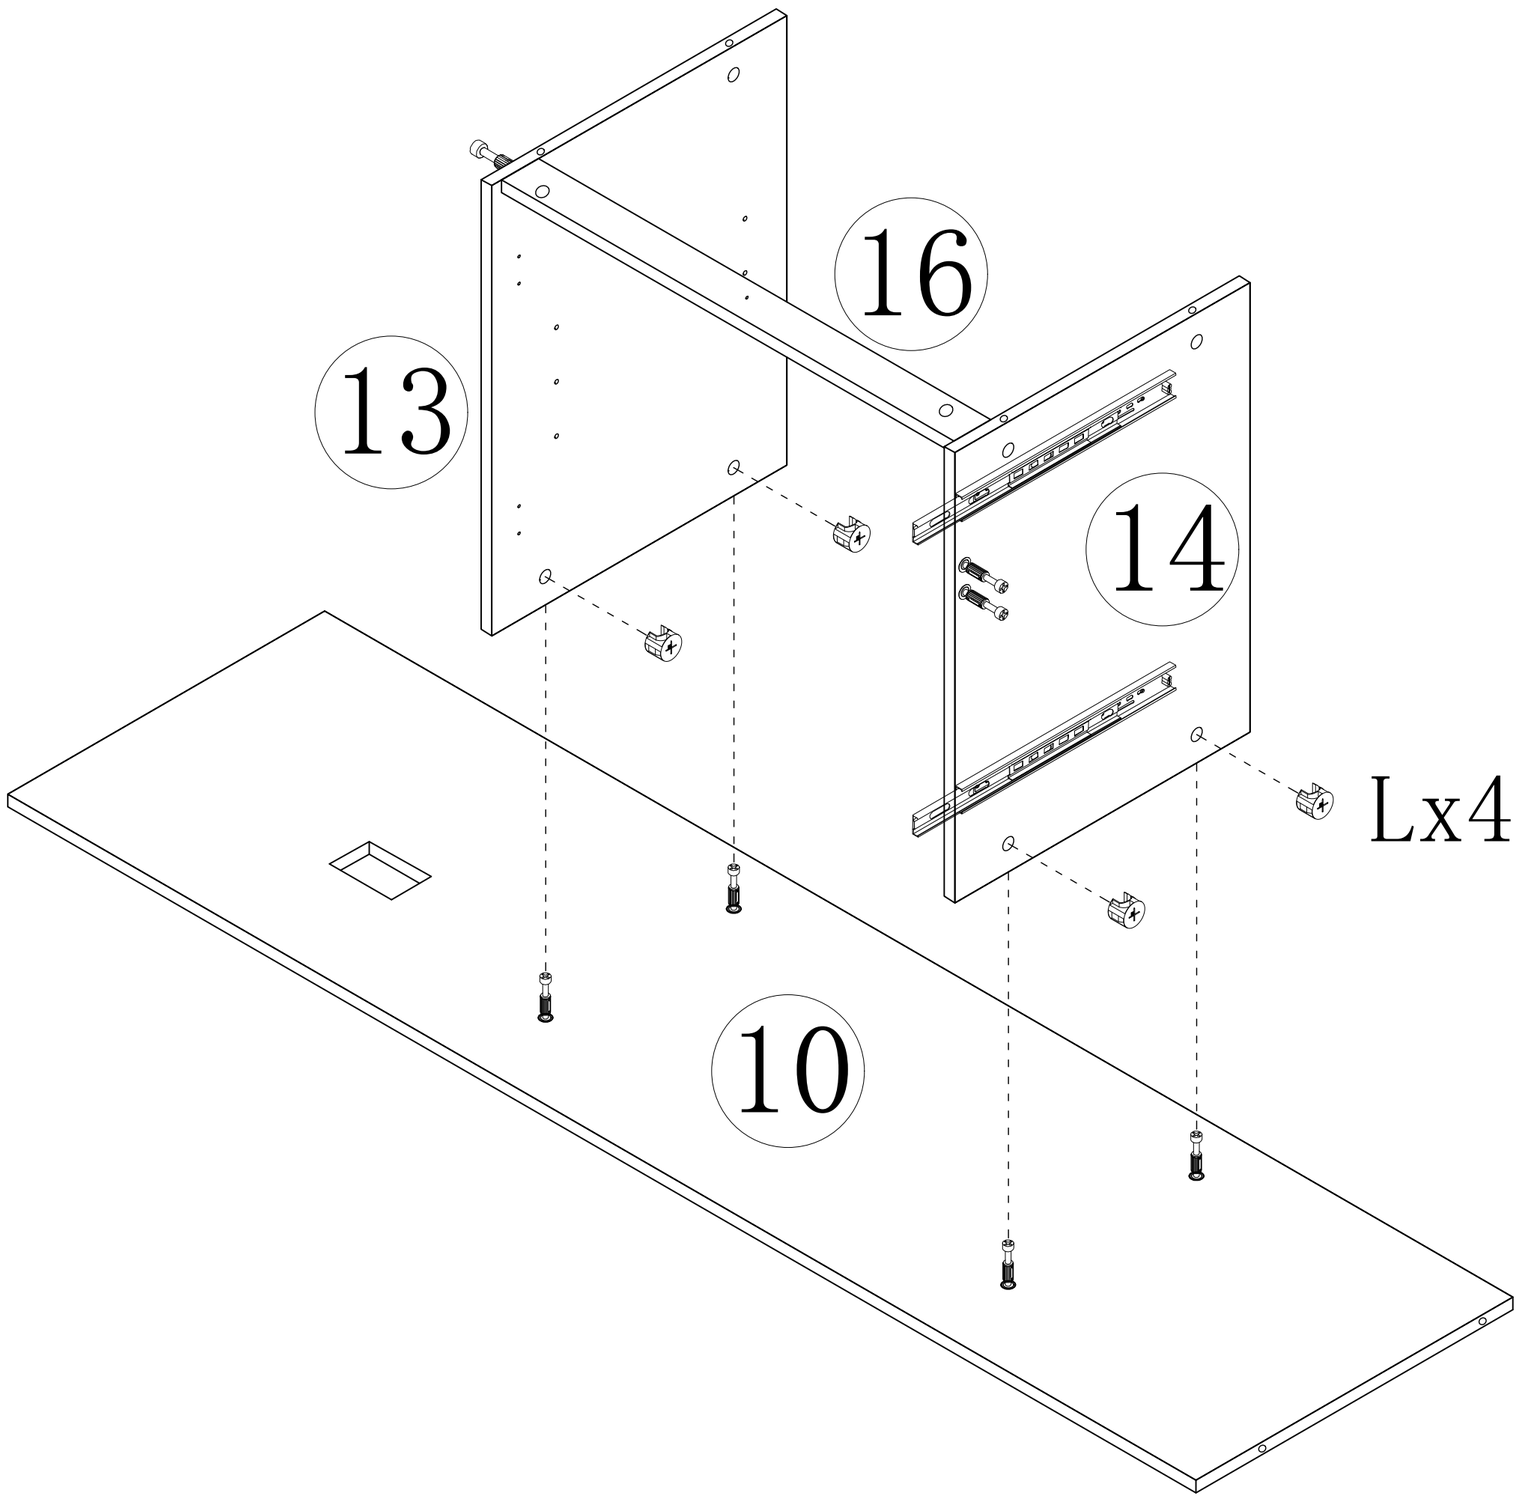


L 4 PCS

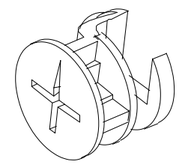


step 11

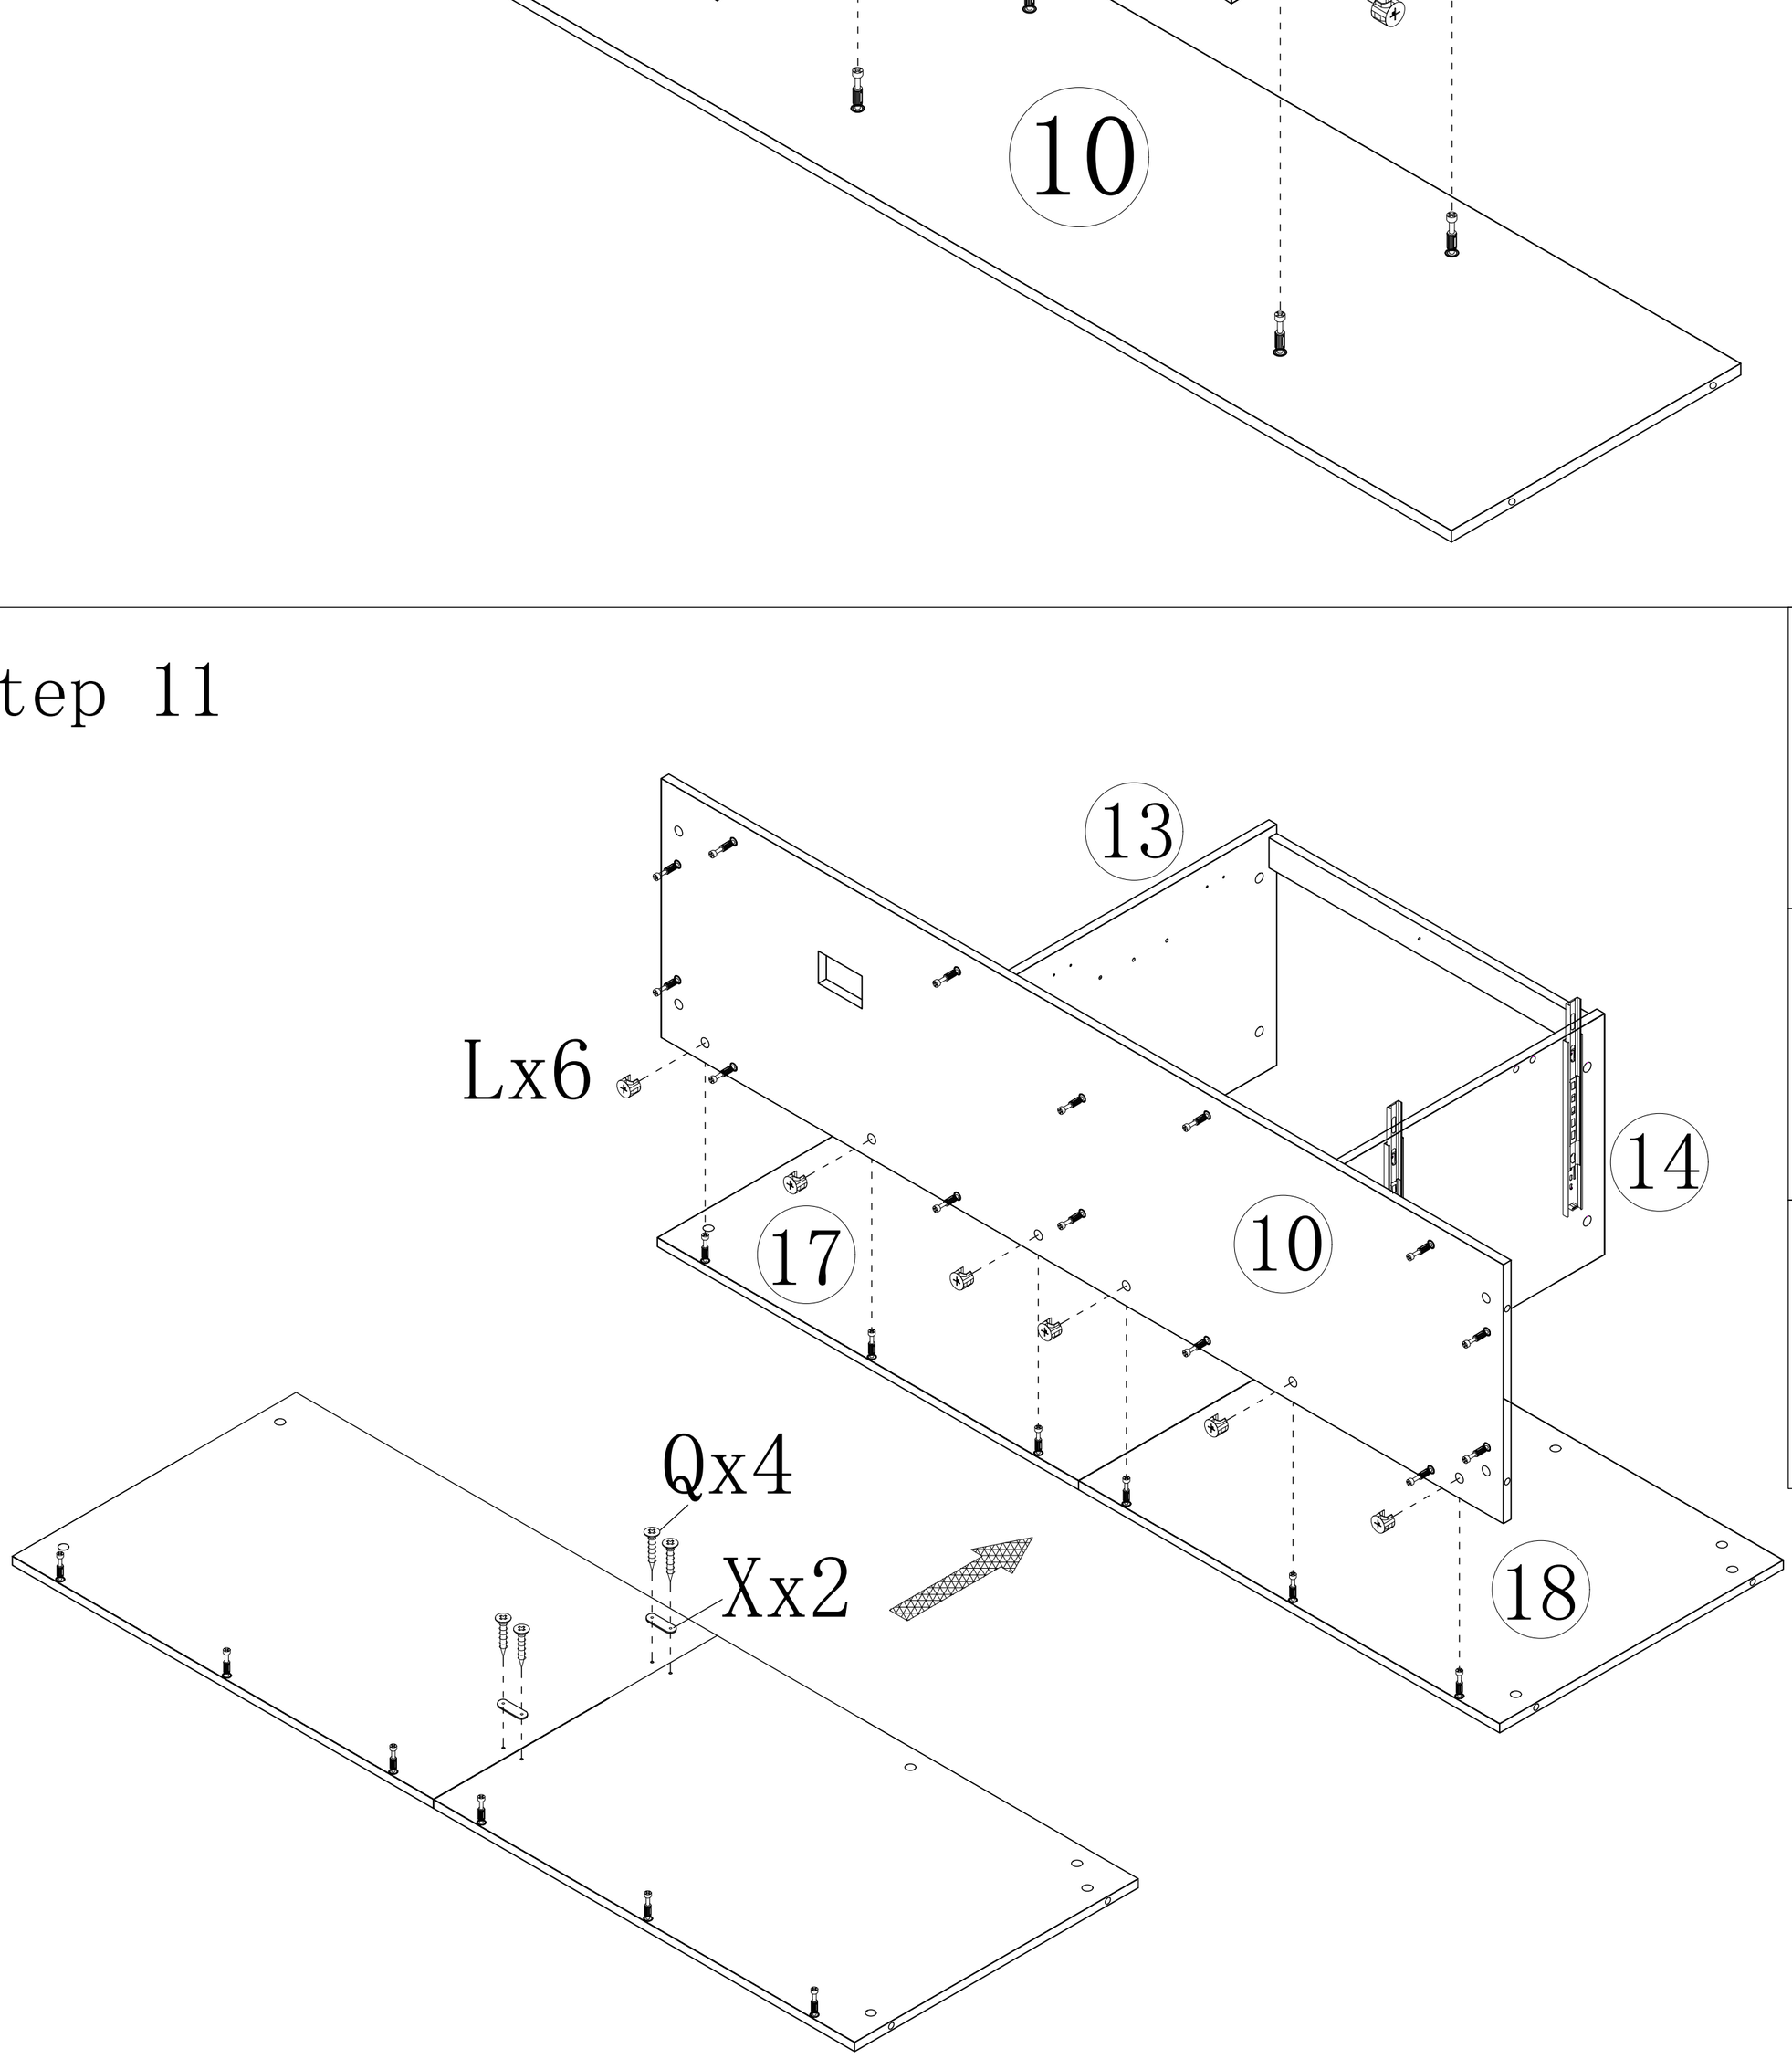

L 6 PCS

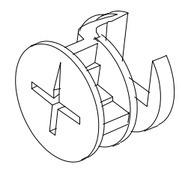


Q 4 PCS



Ø3.5*14


G 2PCS

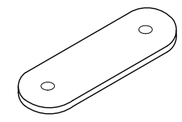


ASSEMBLY INSTRUCTION

step 12


L 14 PCS

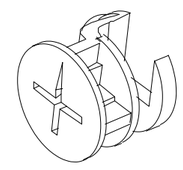


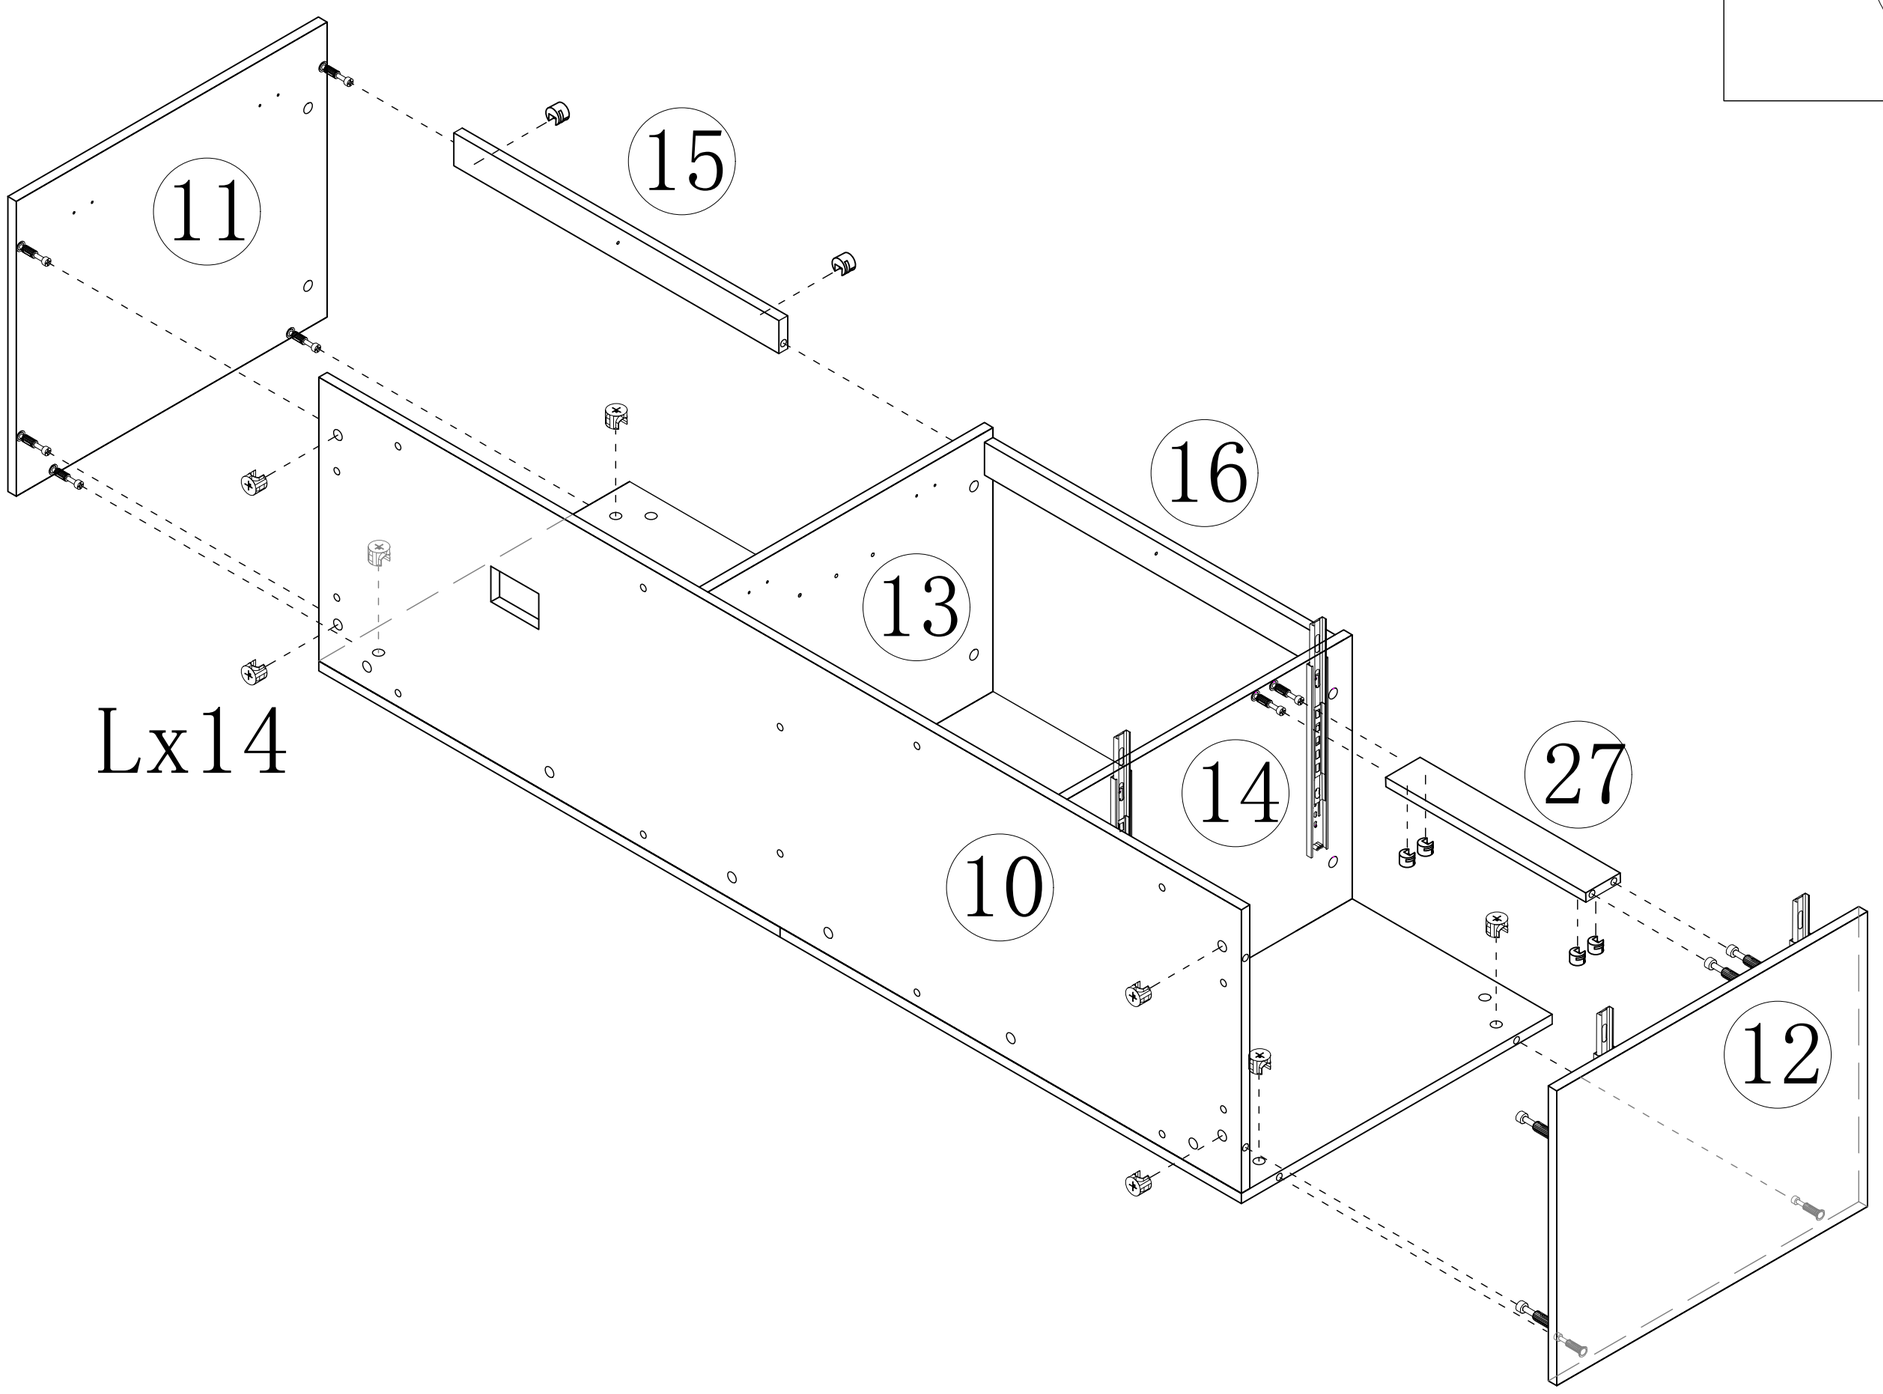

step 13

L 12 PCS

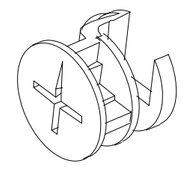


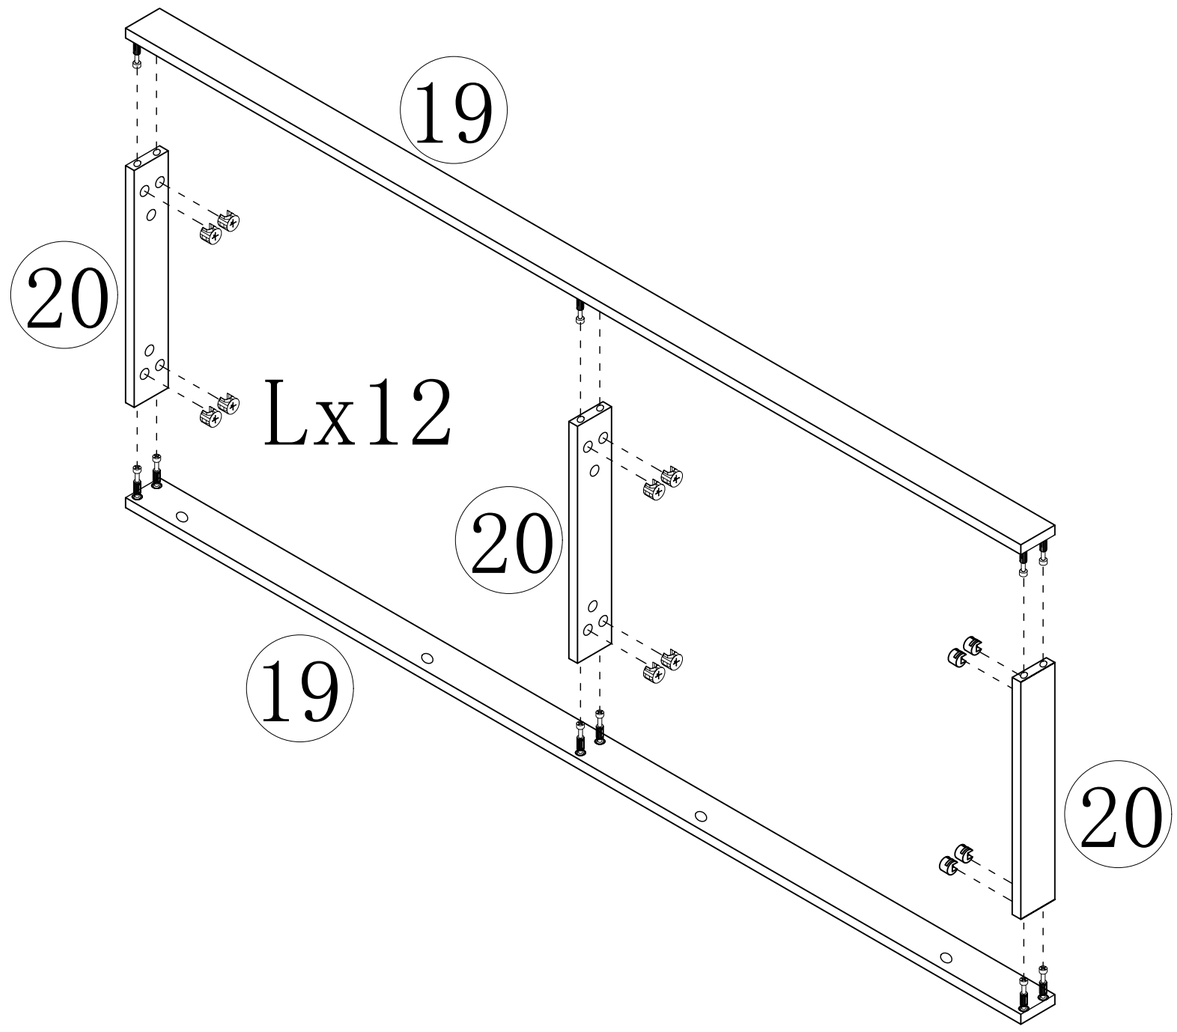


ASSEMBLY INSTRUCTION

step 14


L 14 PCS

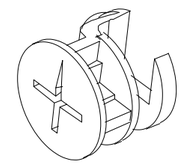

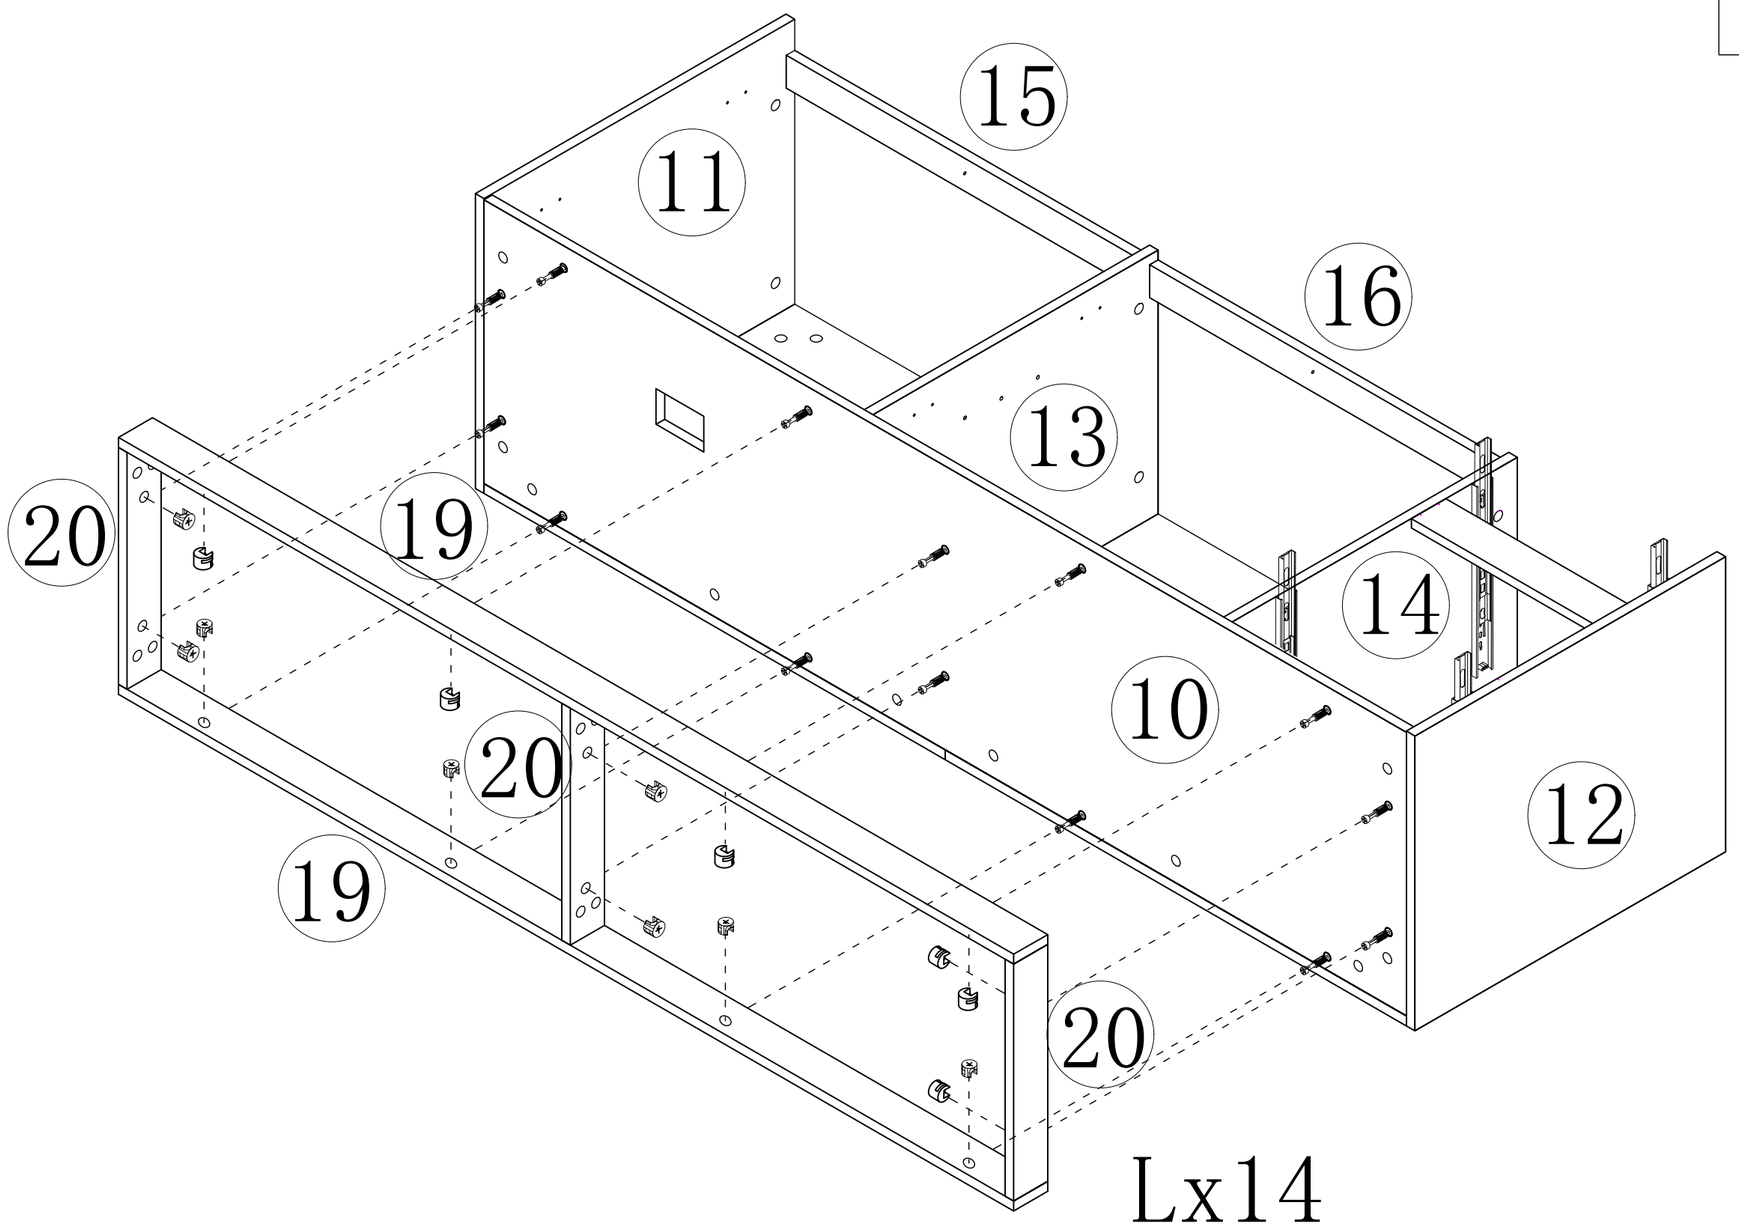


step 15

Q 6 PCS




Ø3.5*14


V2 1 PC

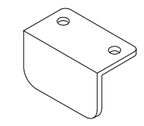

V2

50 1 PC




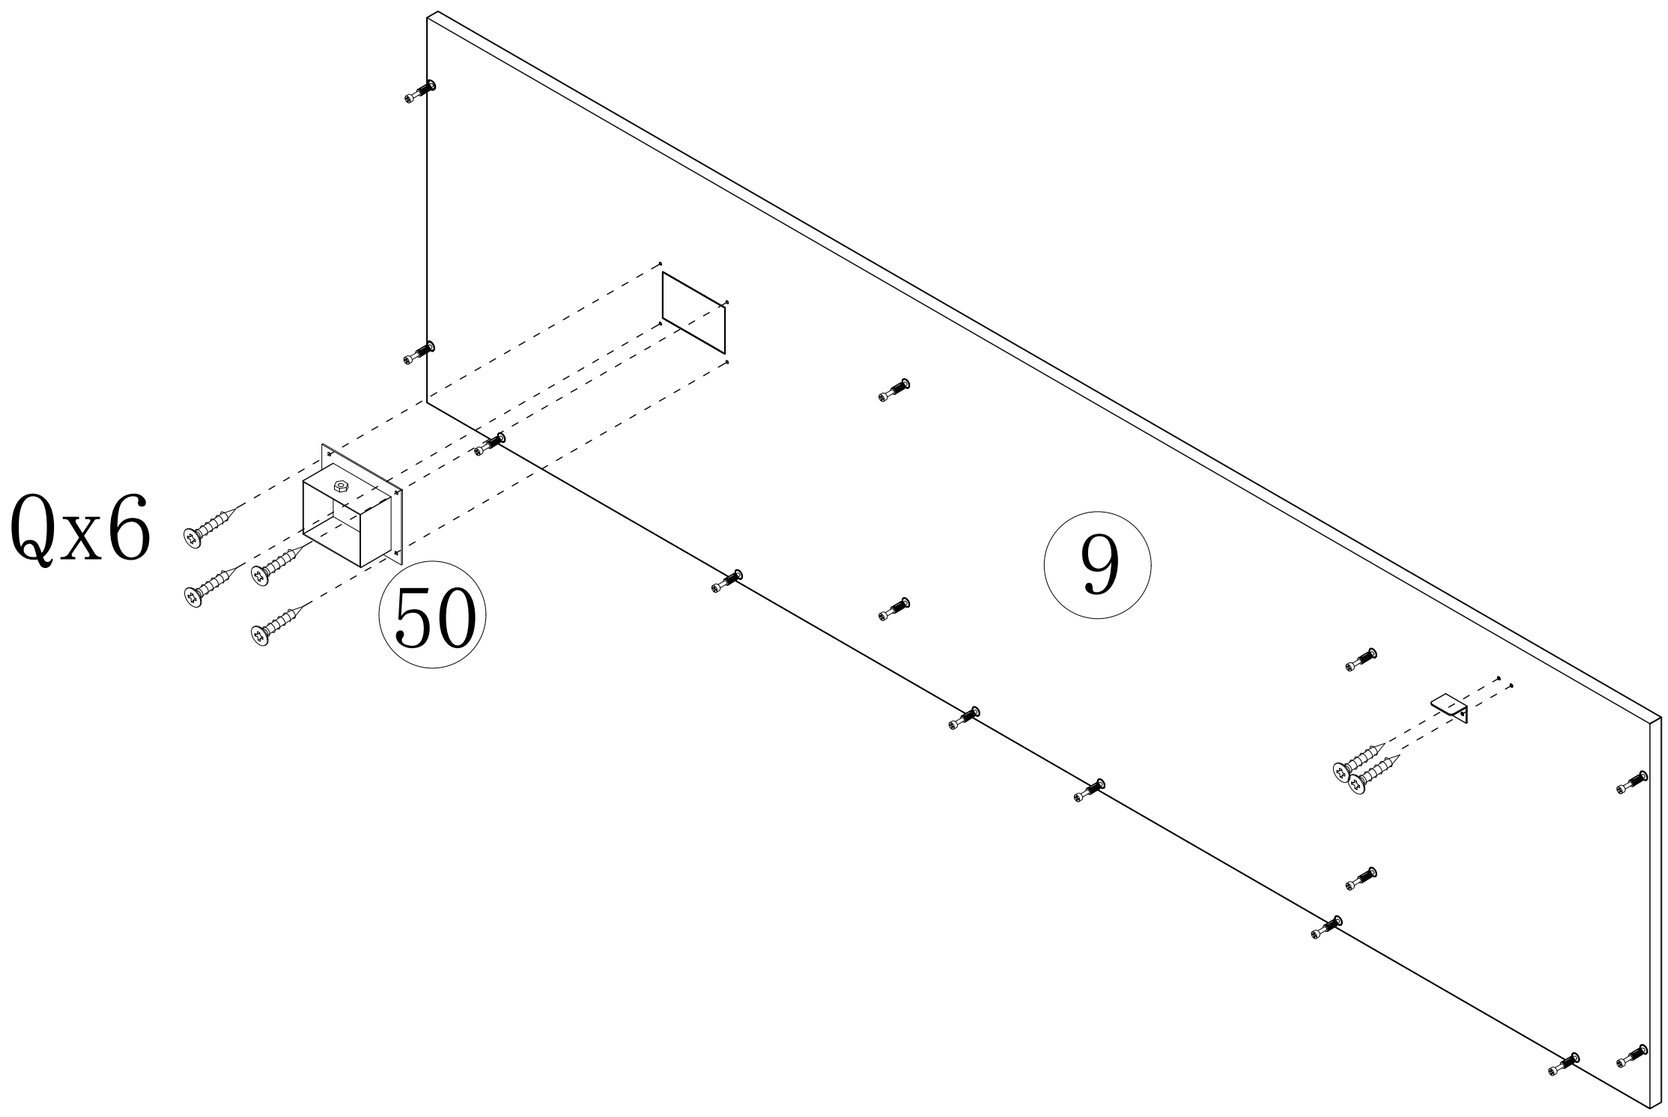


ASSEMBLY INSTRUCTION

step 16


L 14 PCS

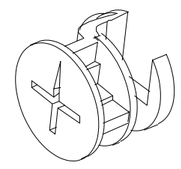

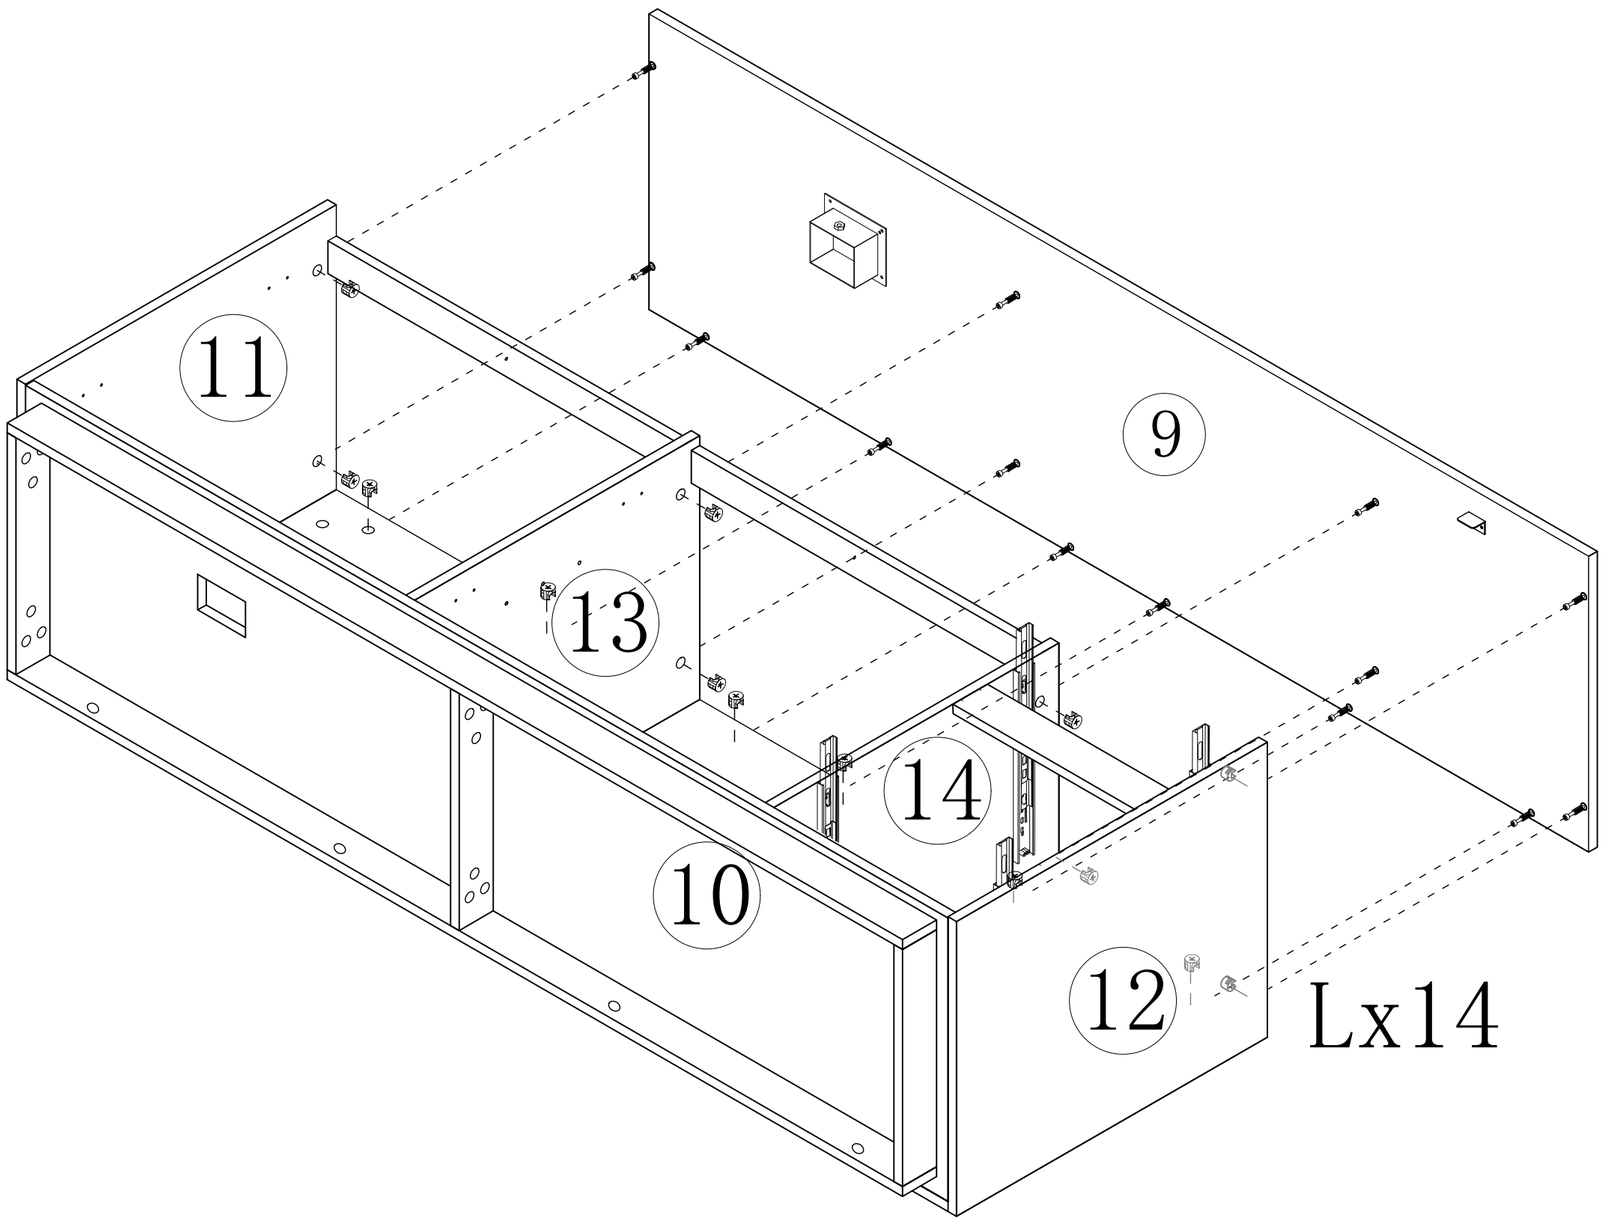


step 17

A 4 PCS





M6*30

R 2 PCS



Ø3.5*25

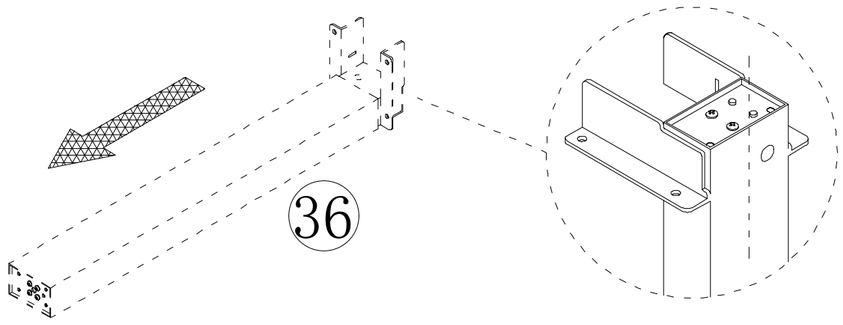

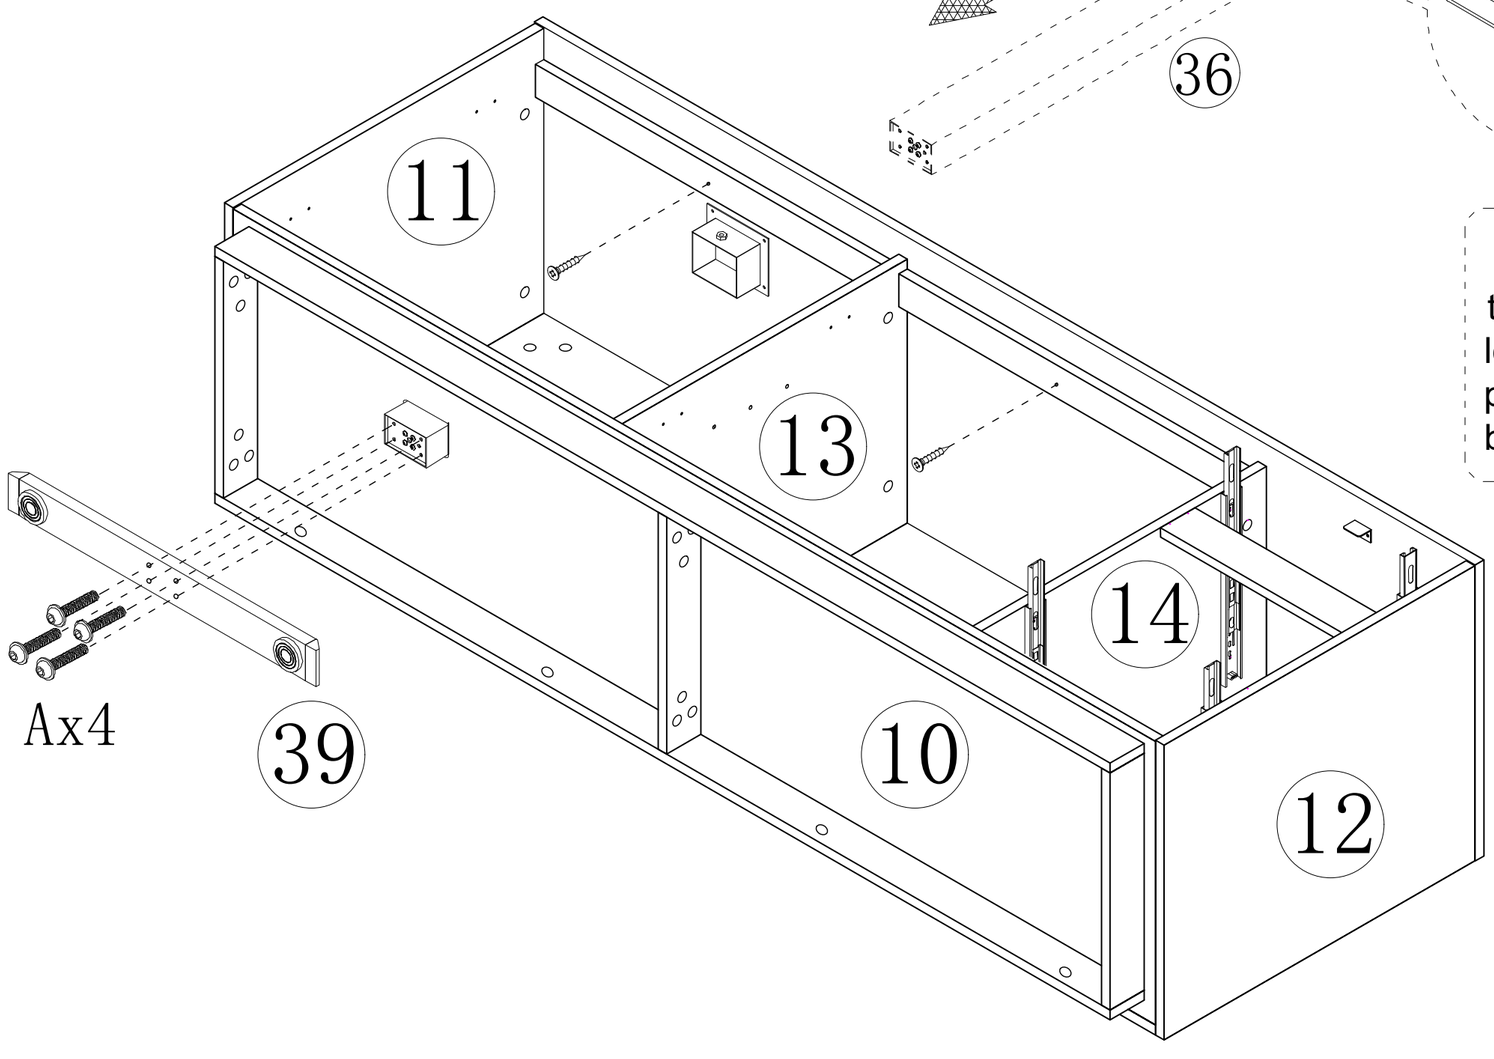


⚠ This product has two different types of table legs. This is the right leg. The difference is that in this perspective view, the hole is located behind the dotted line.

ASSEMBLY INSTRUCTION


step 18


N	4PCS

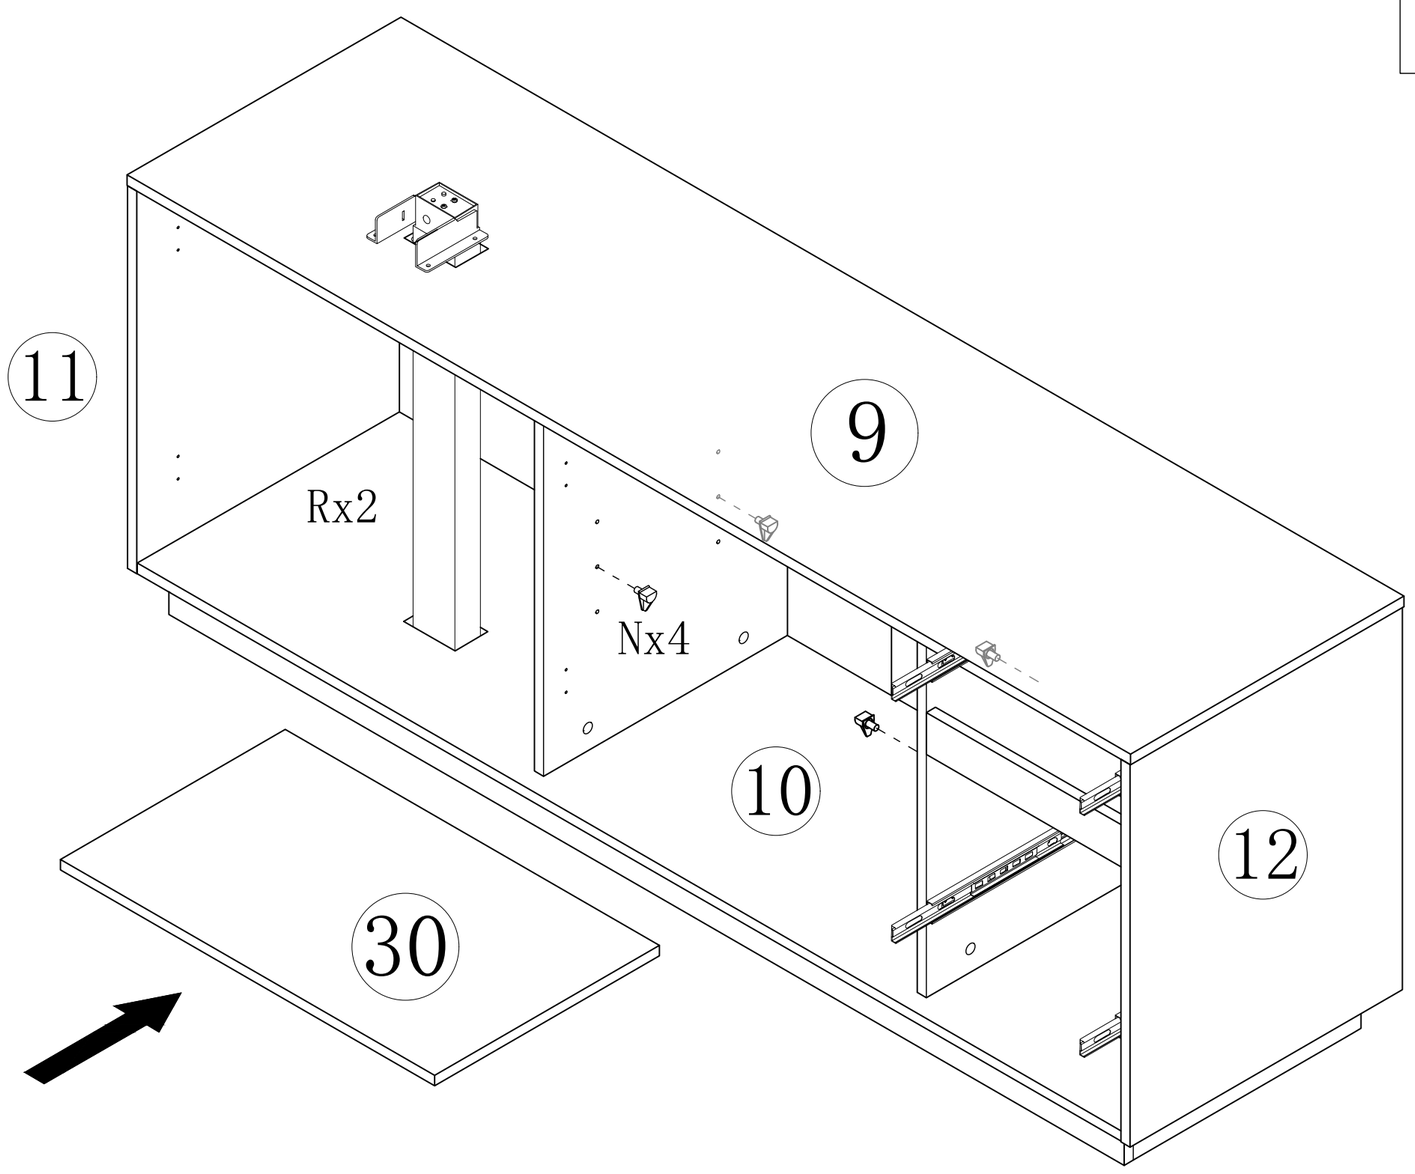


step 19

R	6 PCS	Q	16 PCS
Ø3.5*25		Ø3.5*14	
BB	6PCS	O	8 PCS

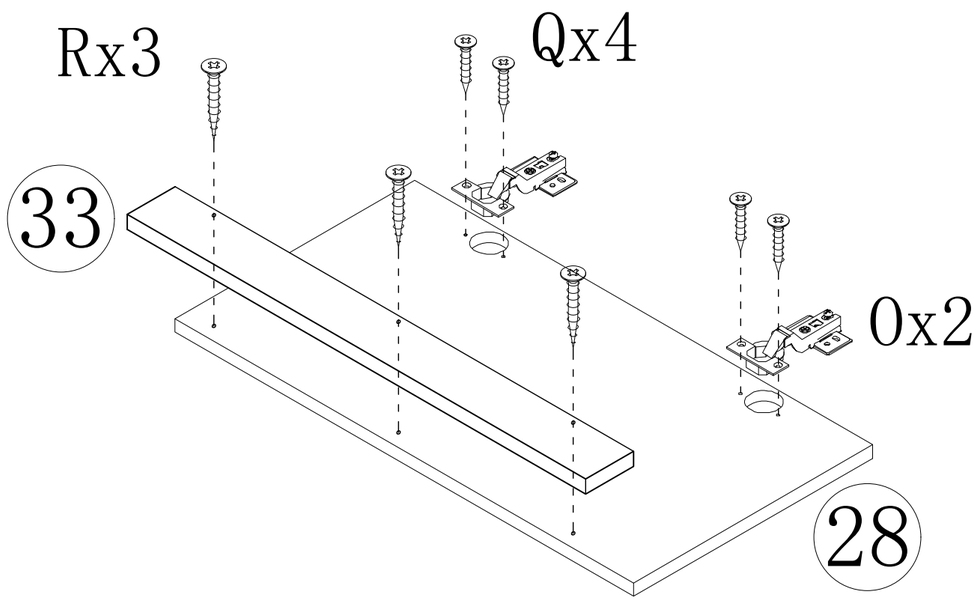

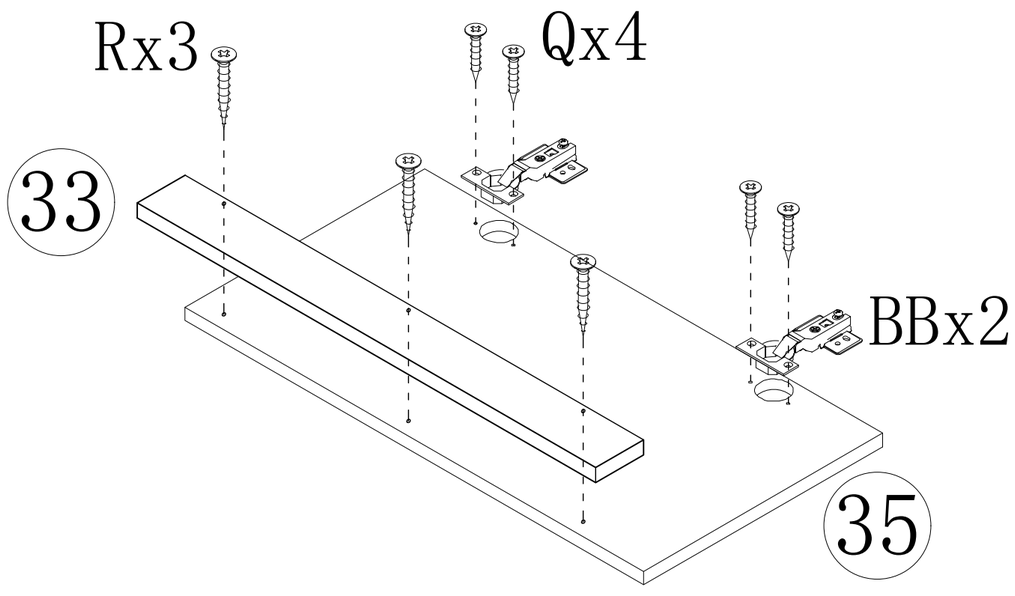

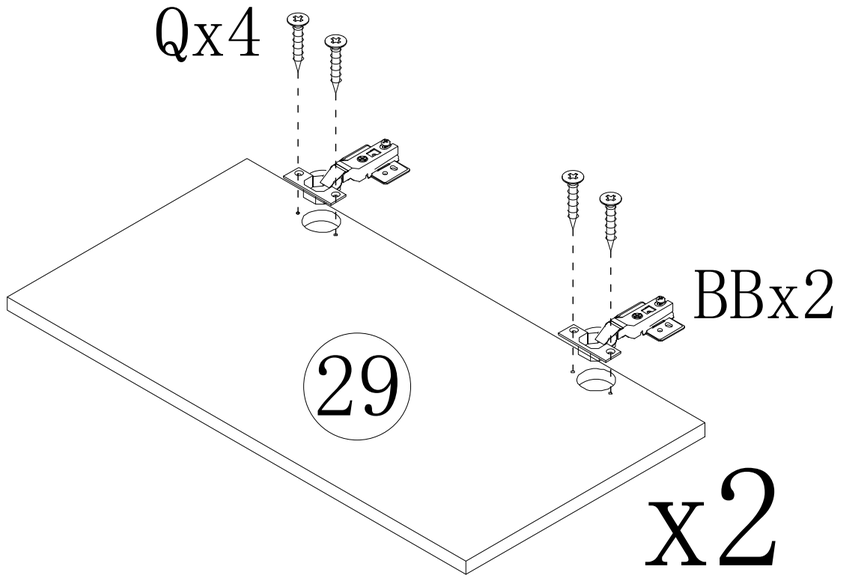


ASSEMBLY INSTRUCTION

step 20


Q 32 PCS

Ø3.5*14

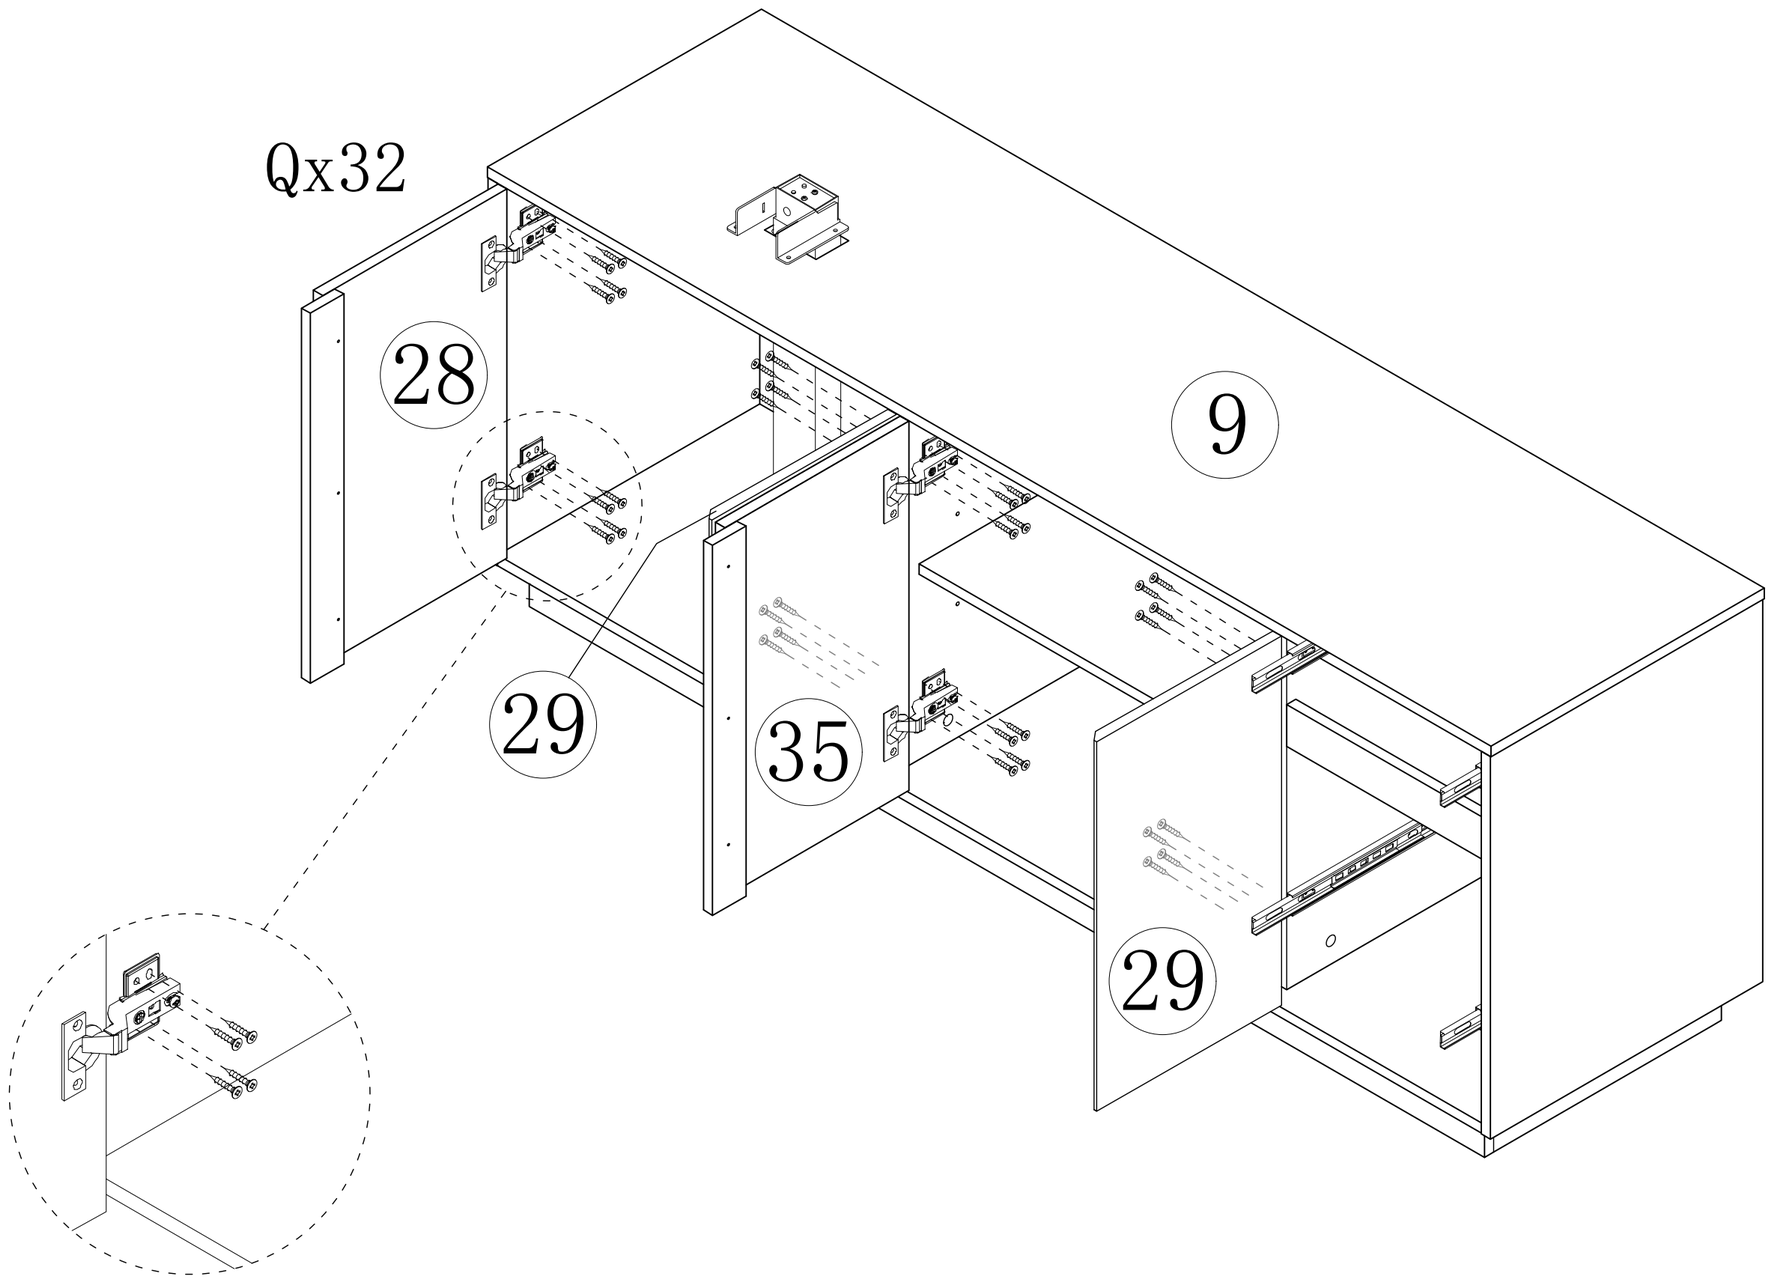


step 21

L 8 PCS

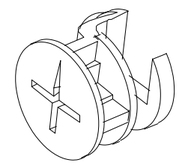



Q 4 PCS



Ø3.5*14


P2 2 PCS

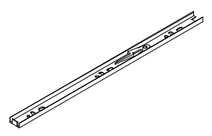

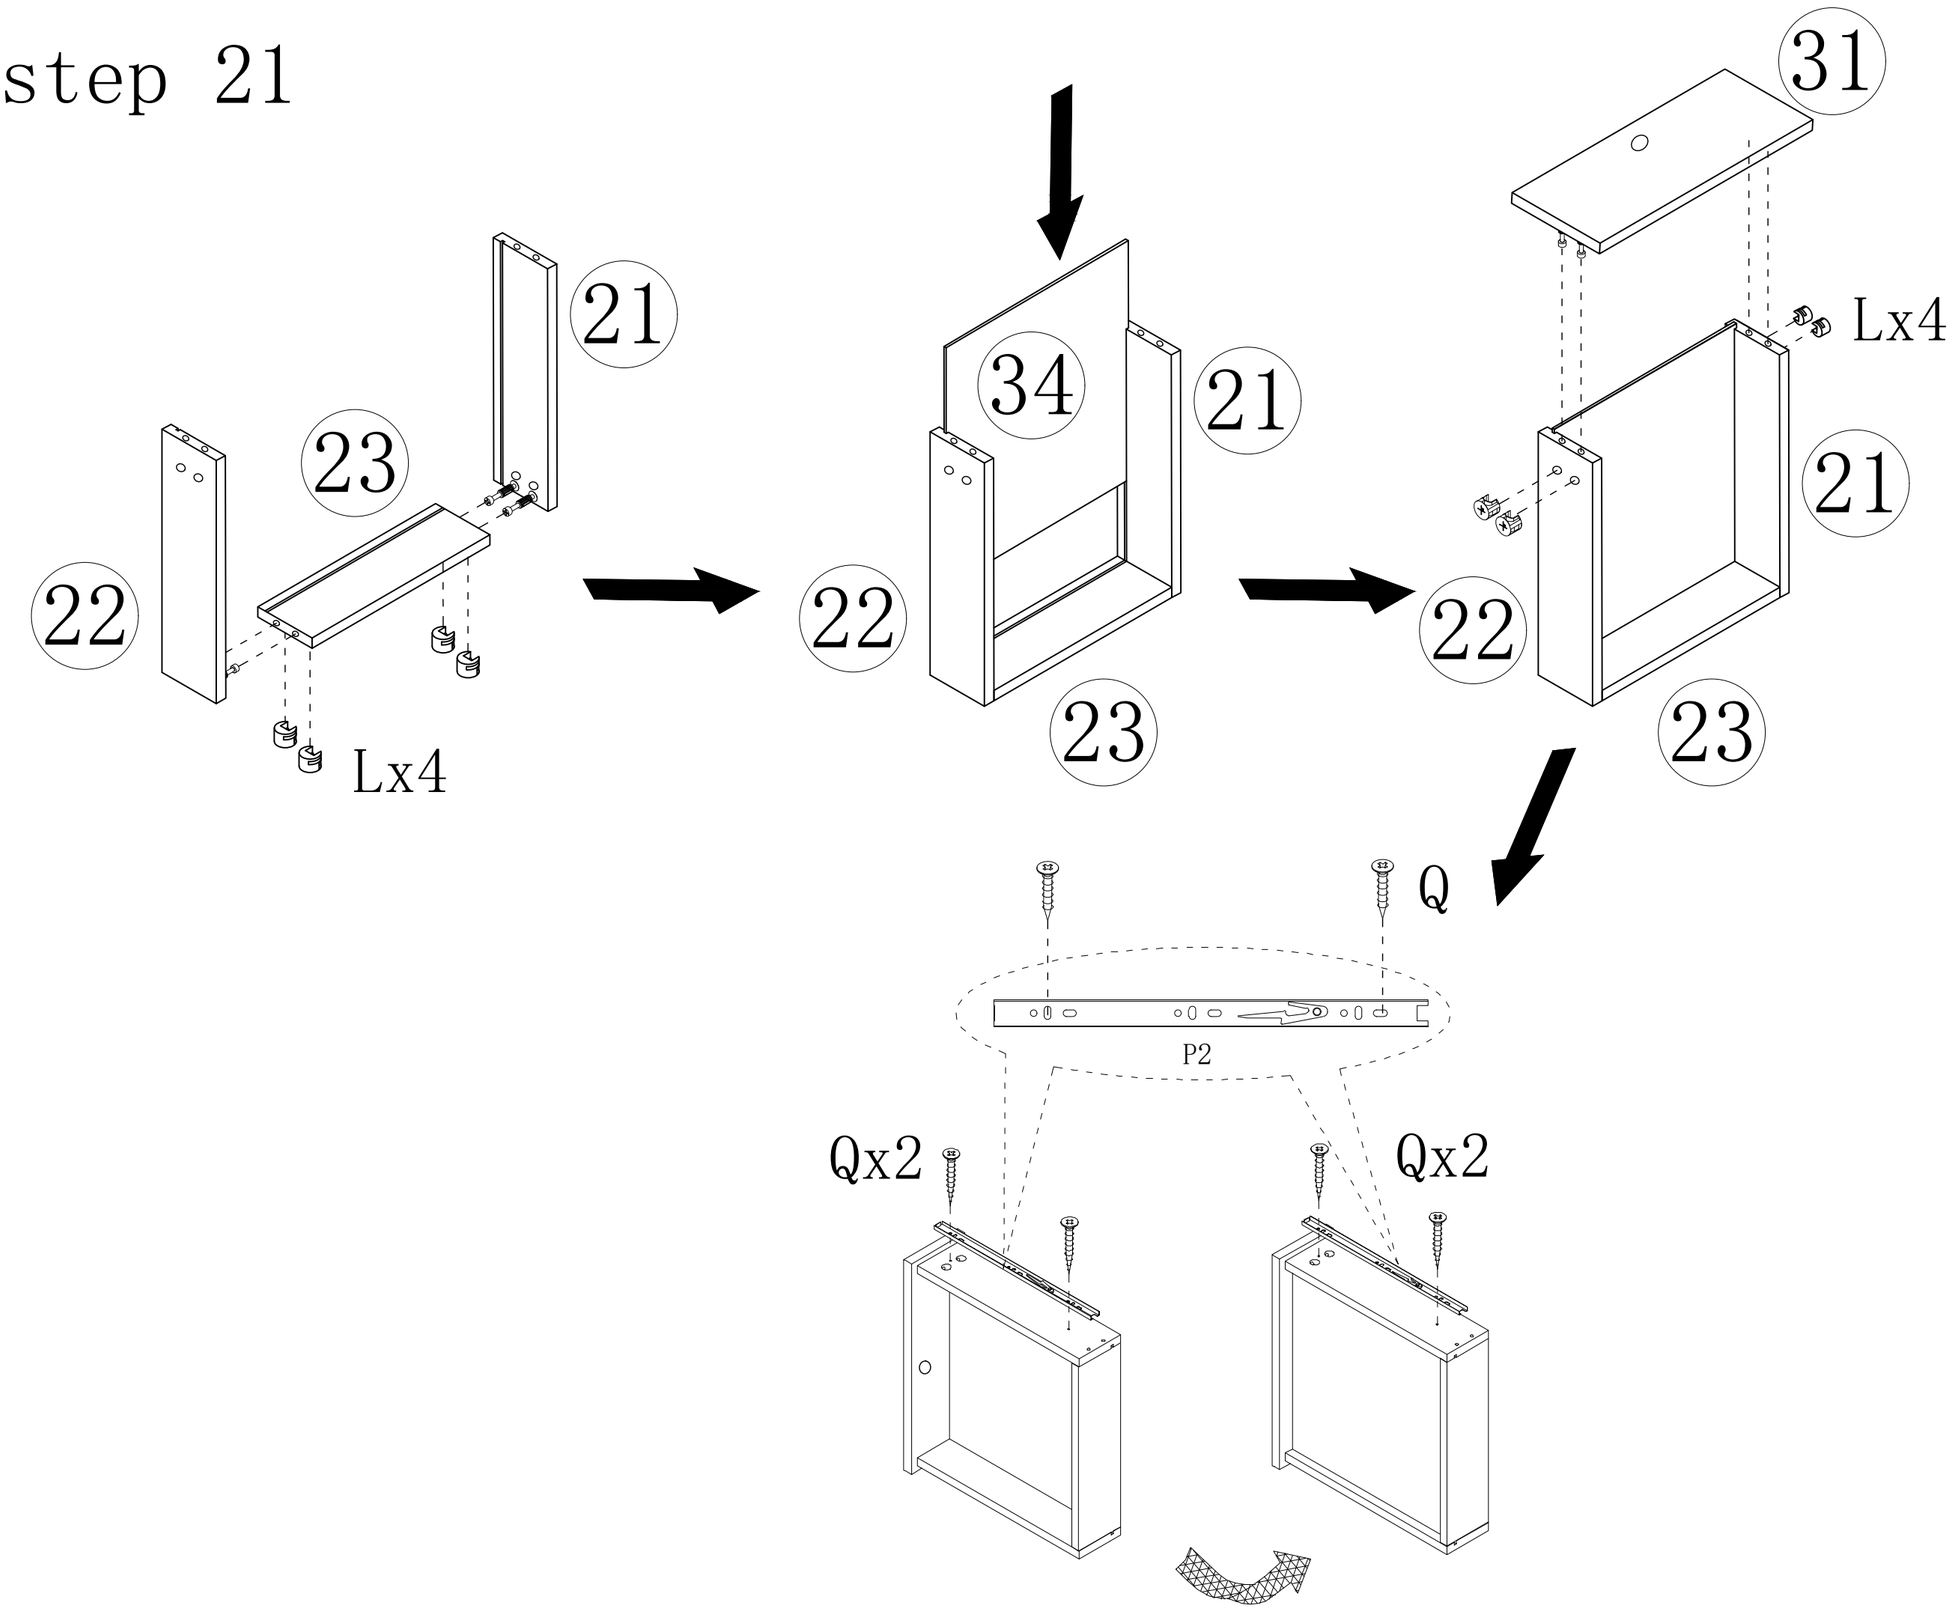


ASSEMBLY INSTRUCTION


V1 1PC

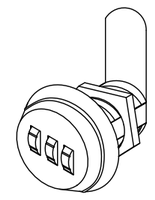


step 22

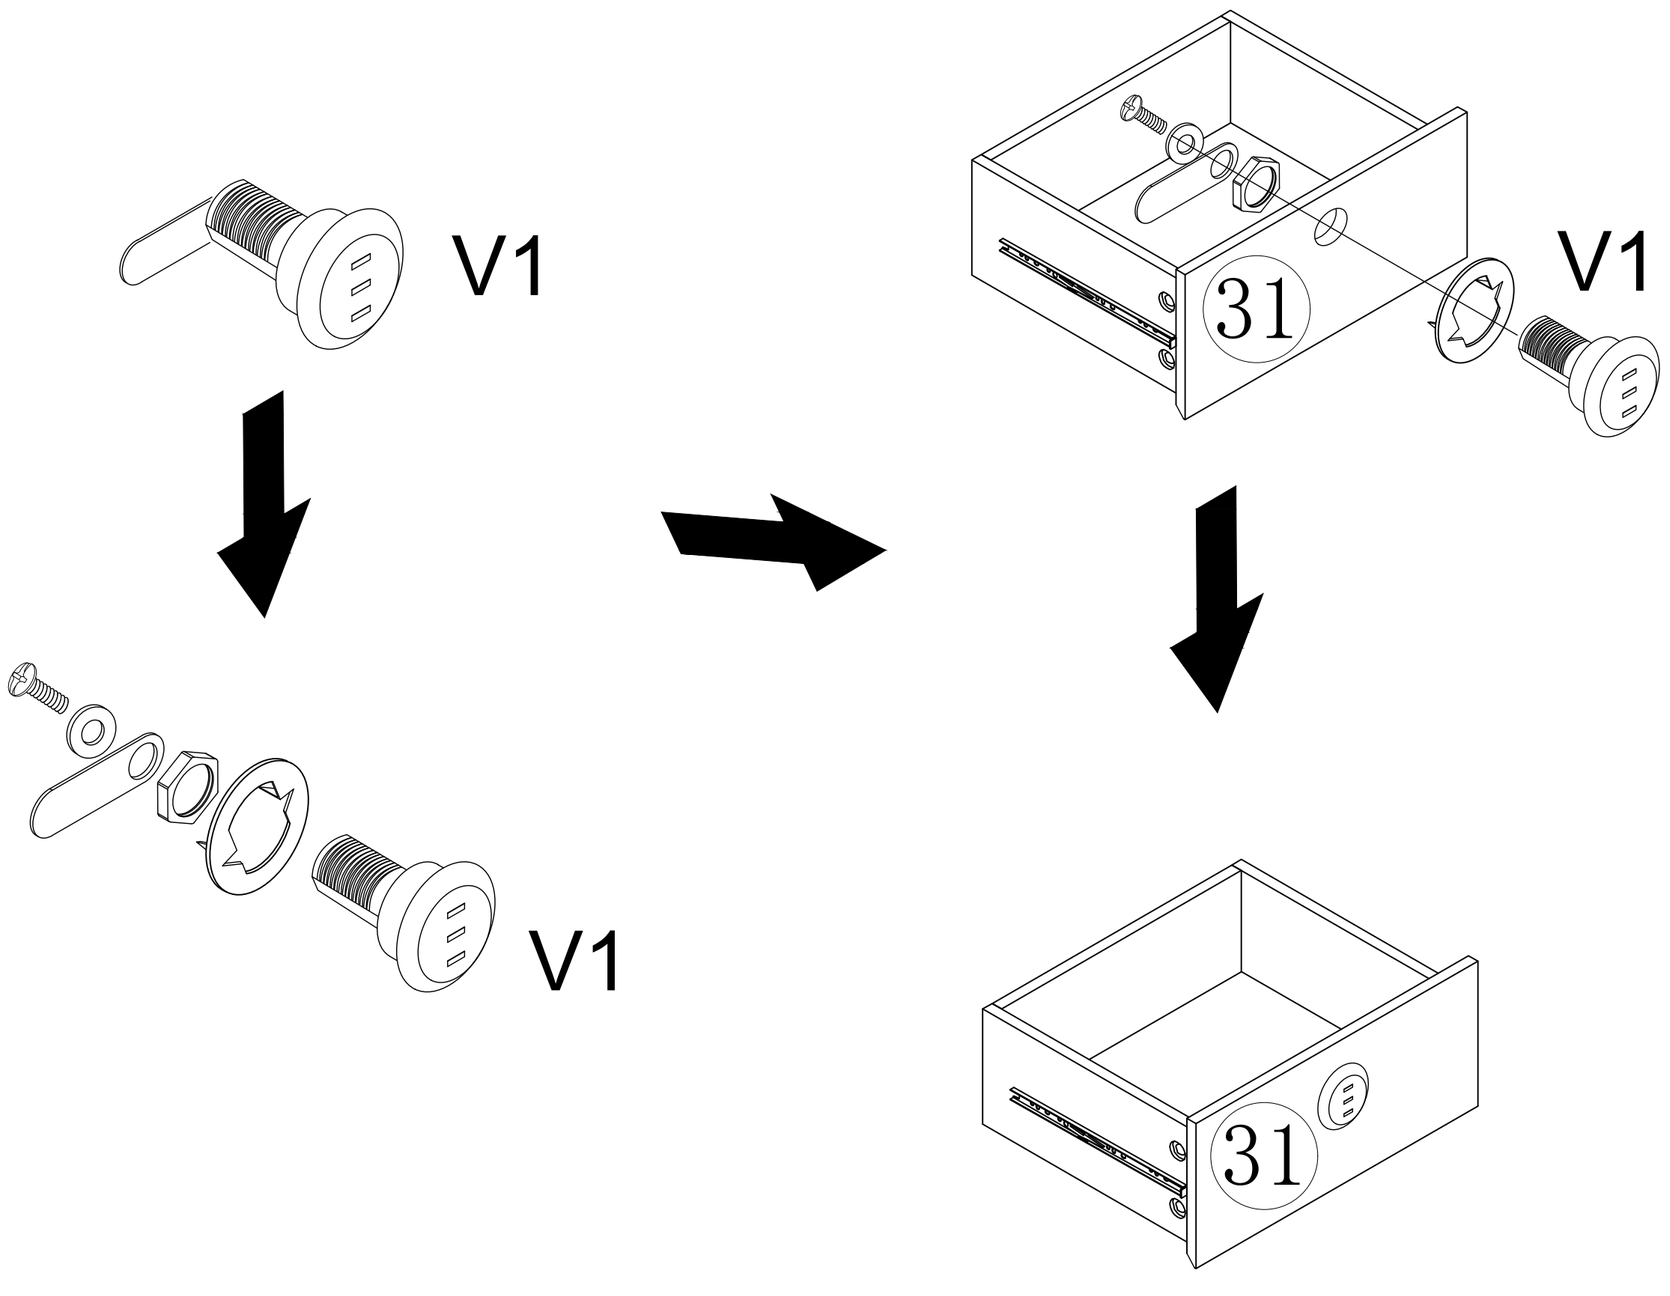


step 23

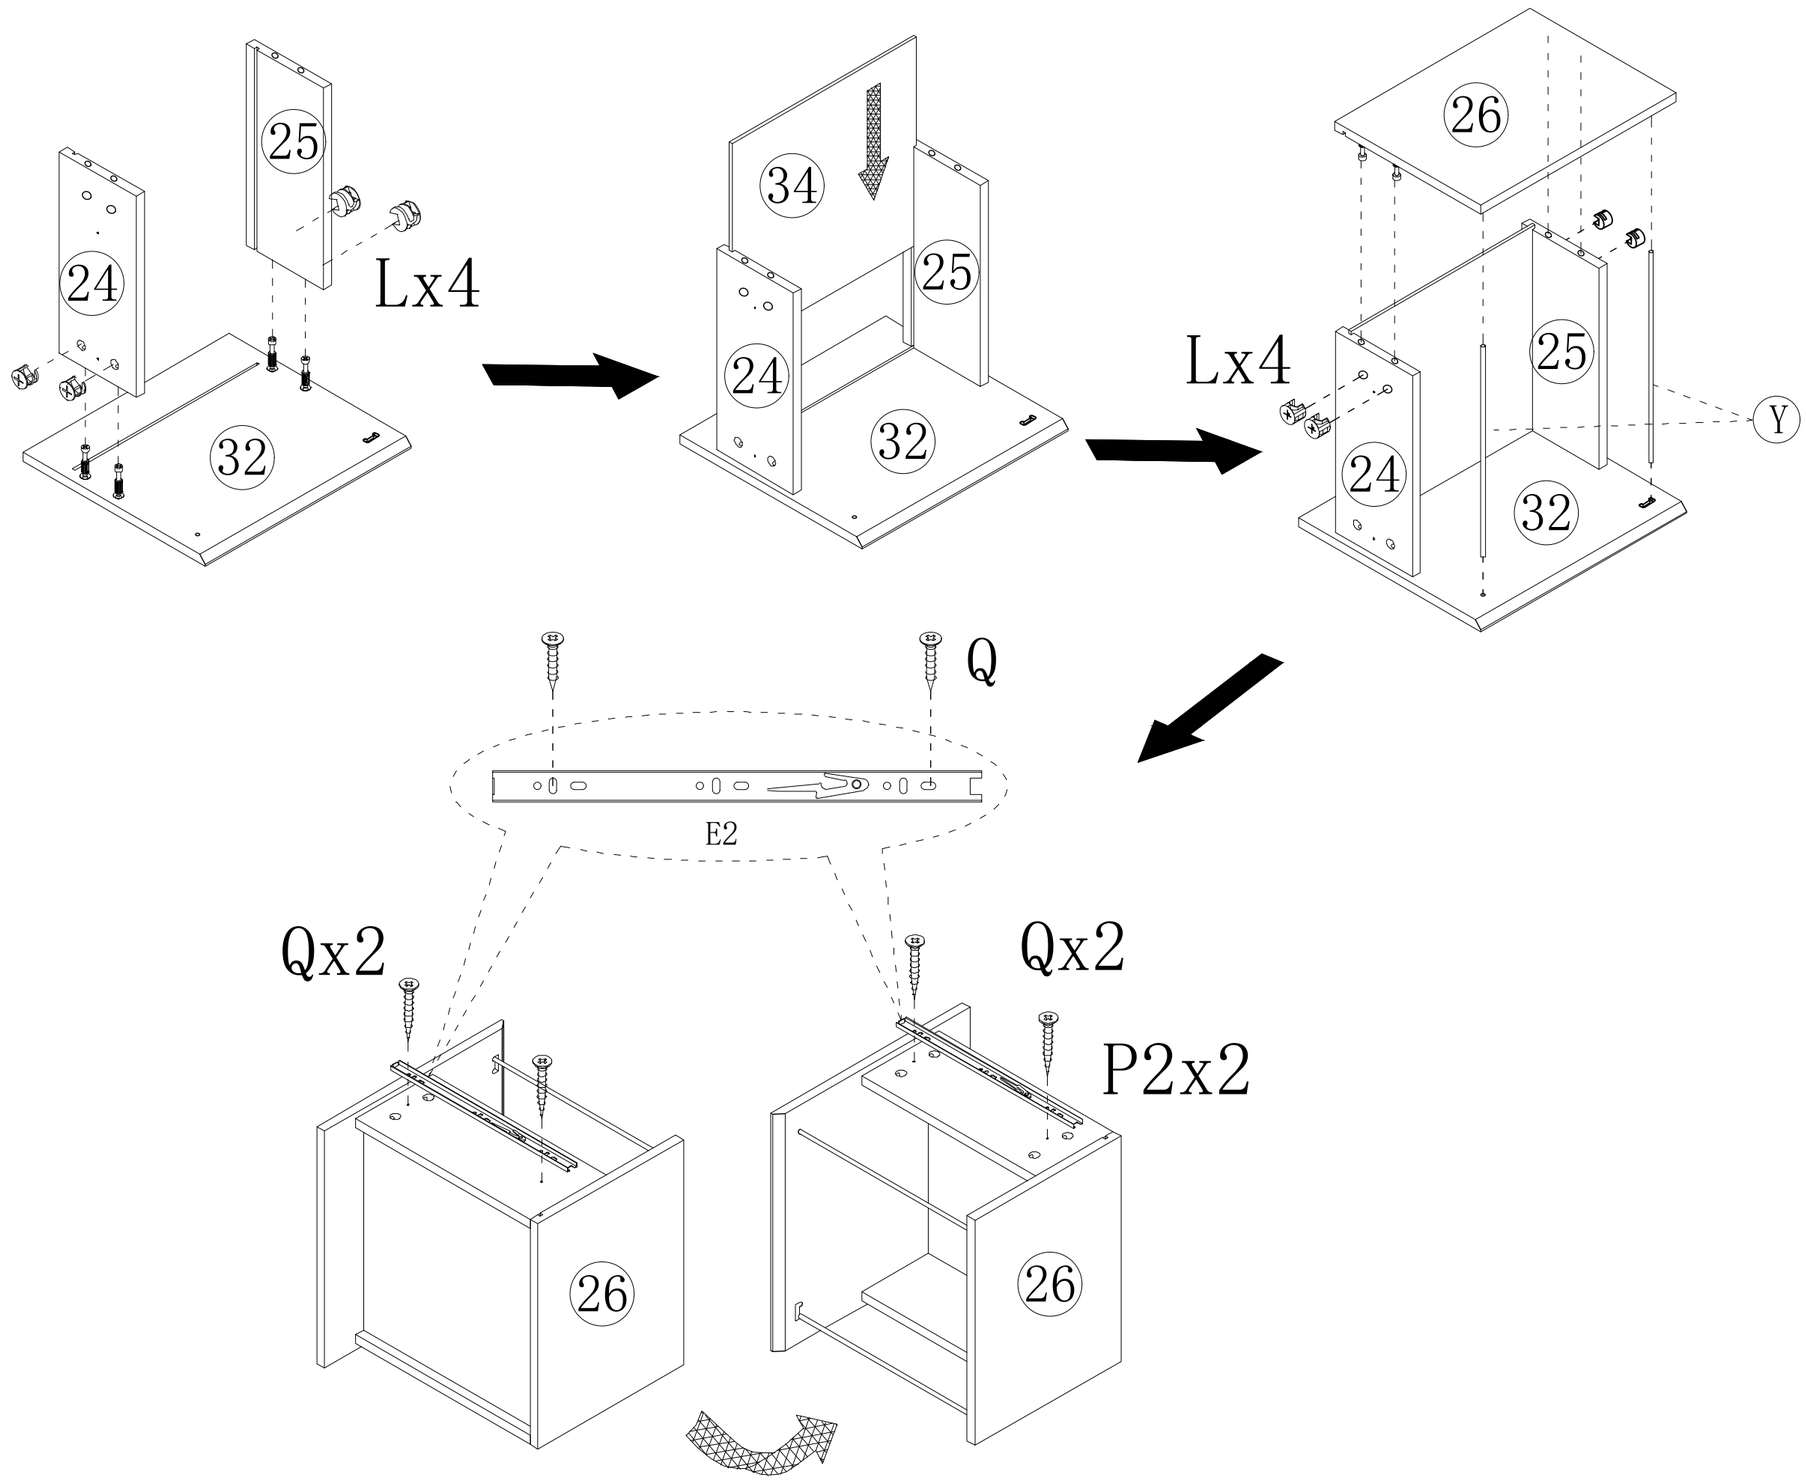

L 8 PCS

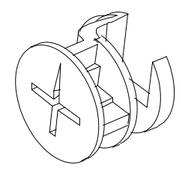


Q 4 PCS




Ø3.5*14

P2 2 PCS

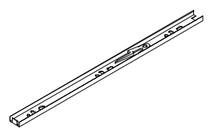


Y 2PCS

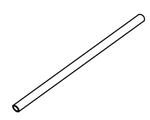

L=345


ASSEMBLY INSTRUCTION

step 24

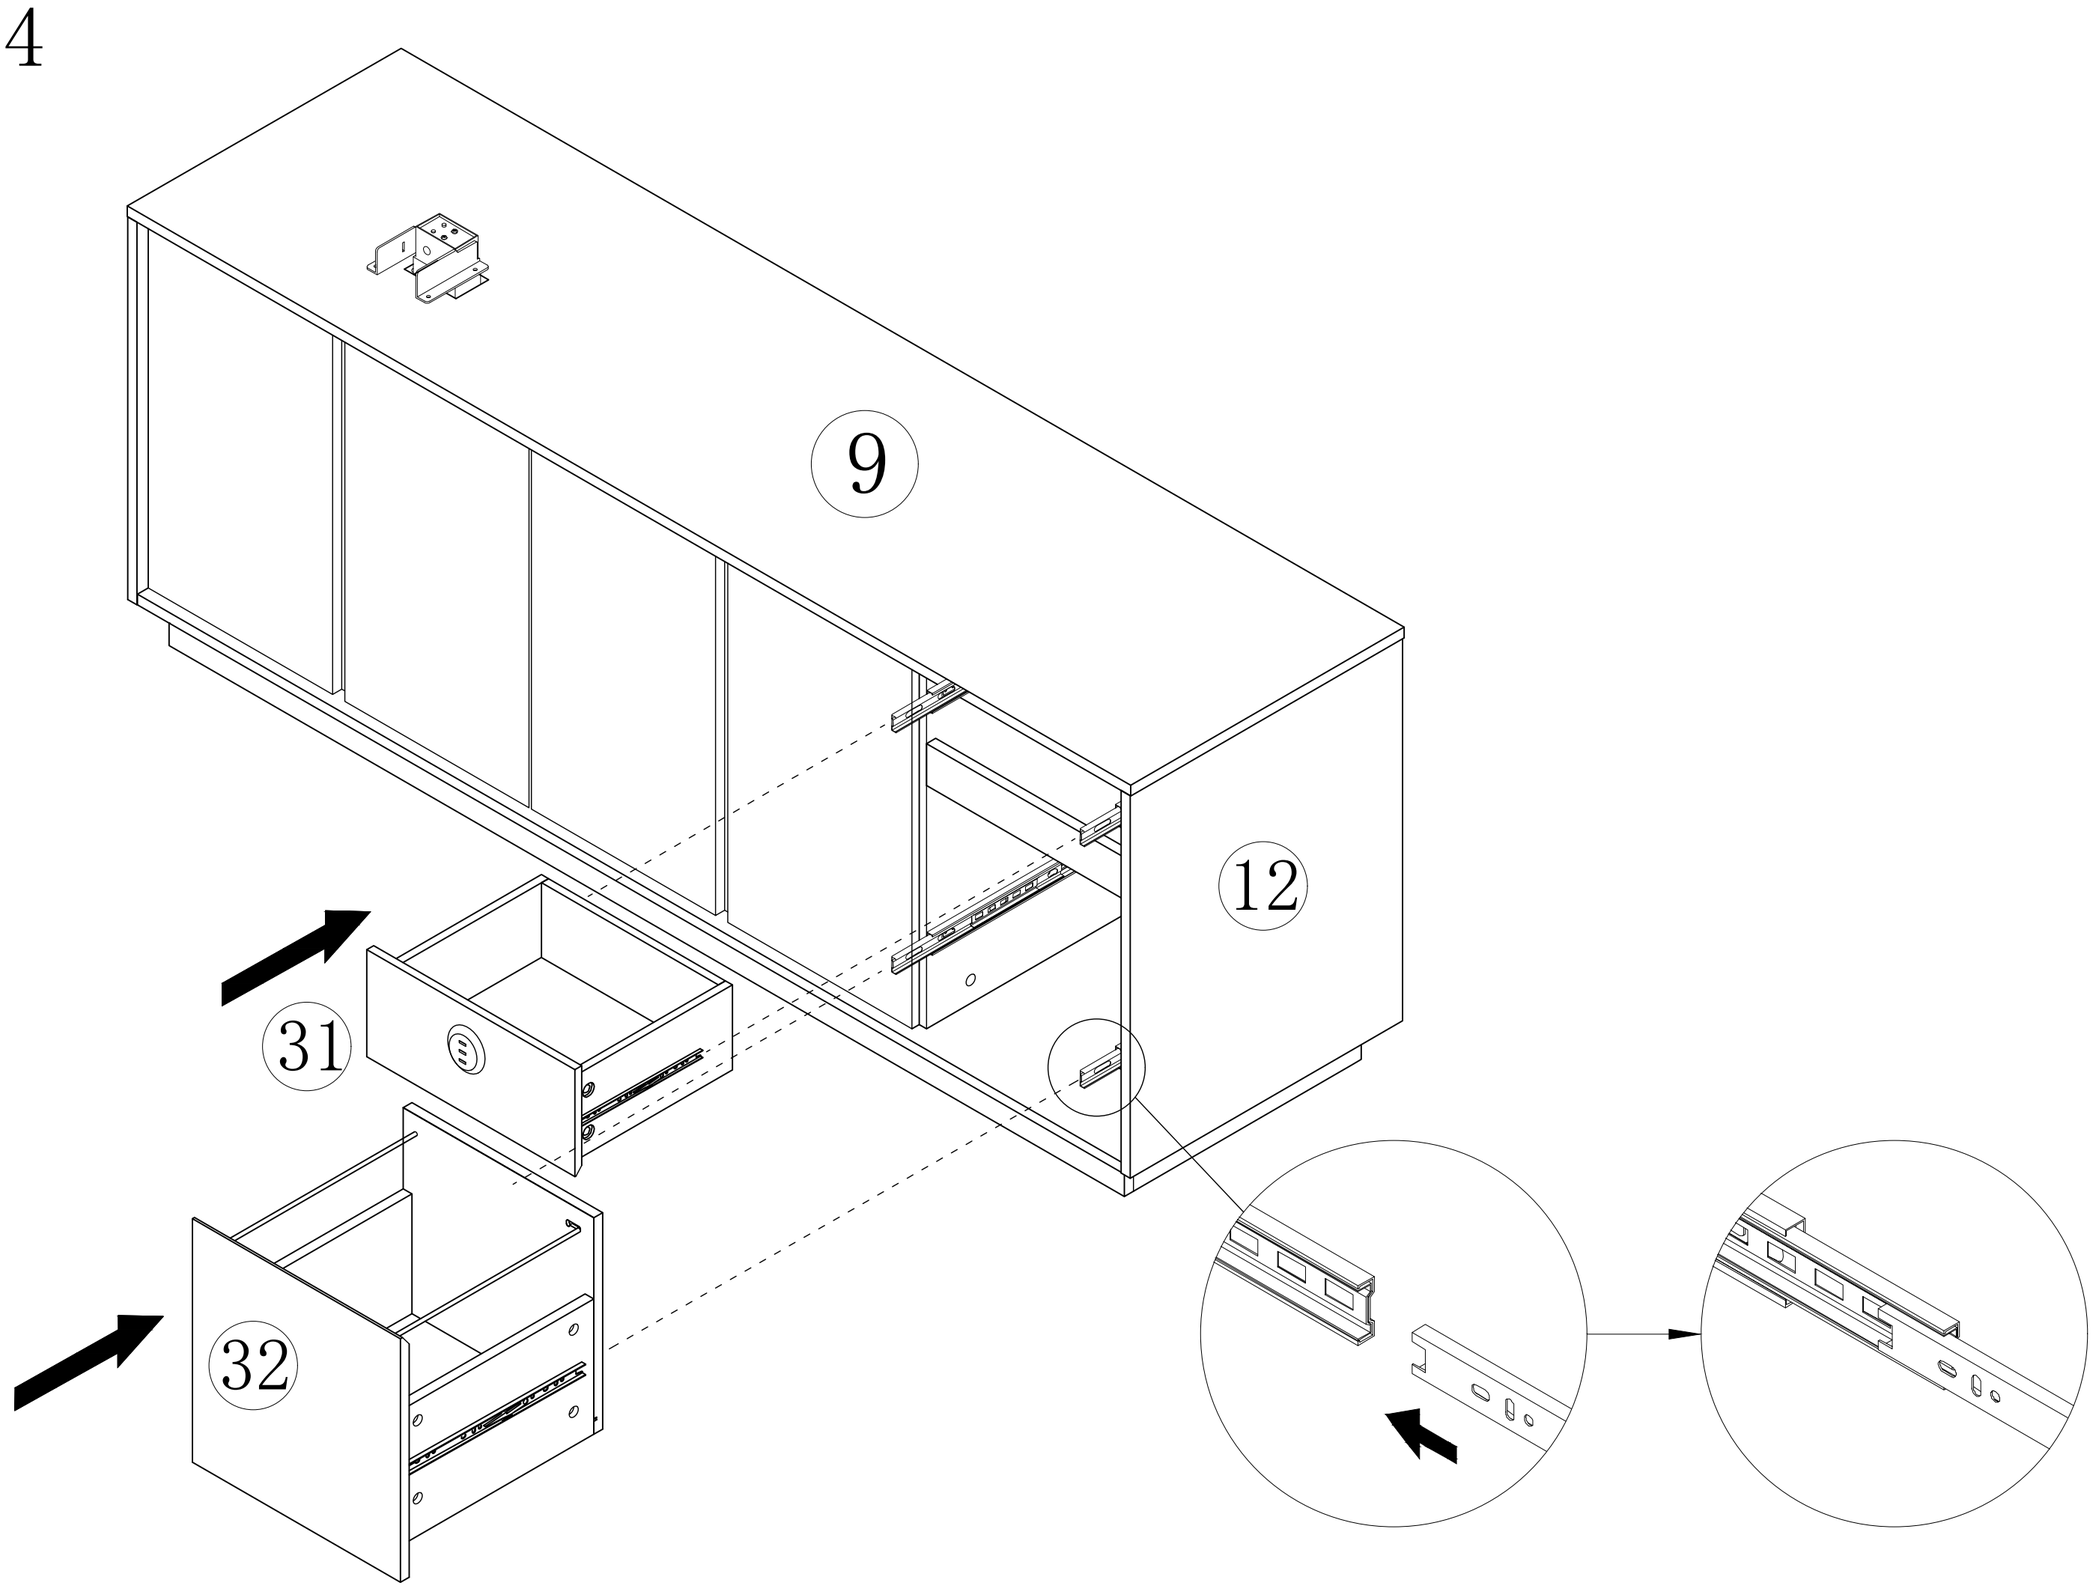


step 25

Attention, please! Lift accessory 1 and accessory 2 up by hand to the same level to facilitate the installation of accessory 40 in step 26.

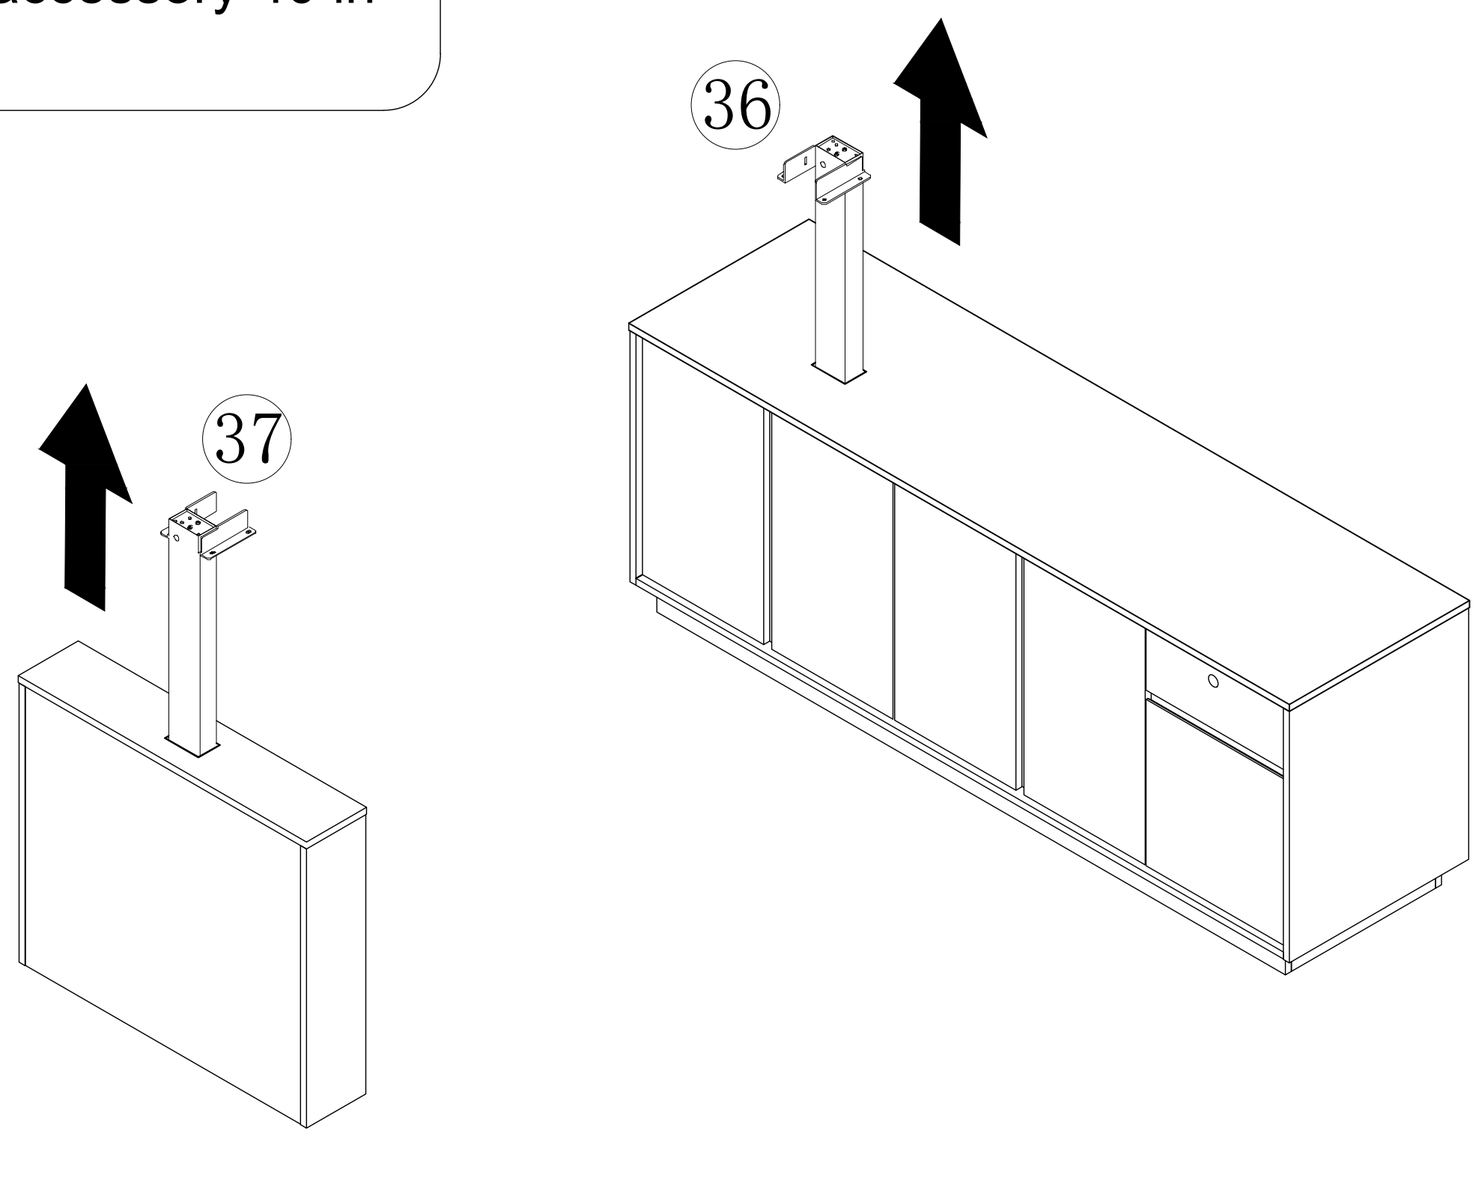


ASSEMBLY INSTRUCTION


step 26

C	1PC	B	4 PCS
			
M4		M6*10	

Note that the "gourd-shaped hole" here on the front crossbeam is close to the left cabinet

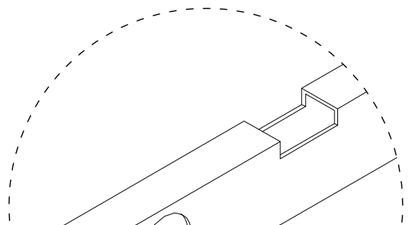


First install the inner screw, then install the outer screw.

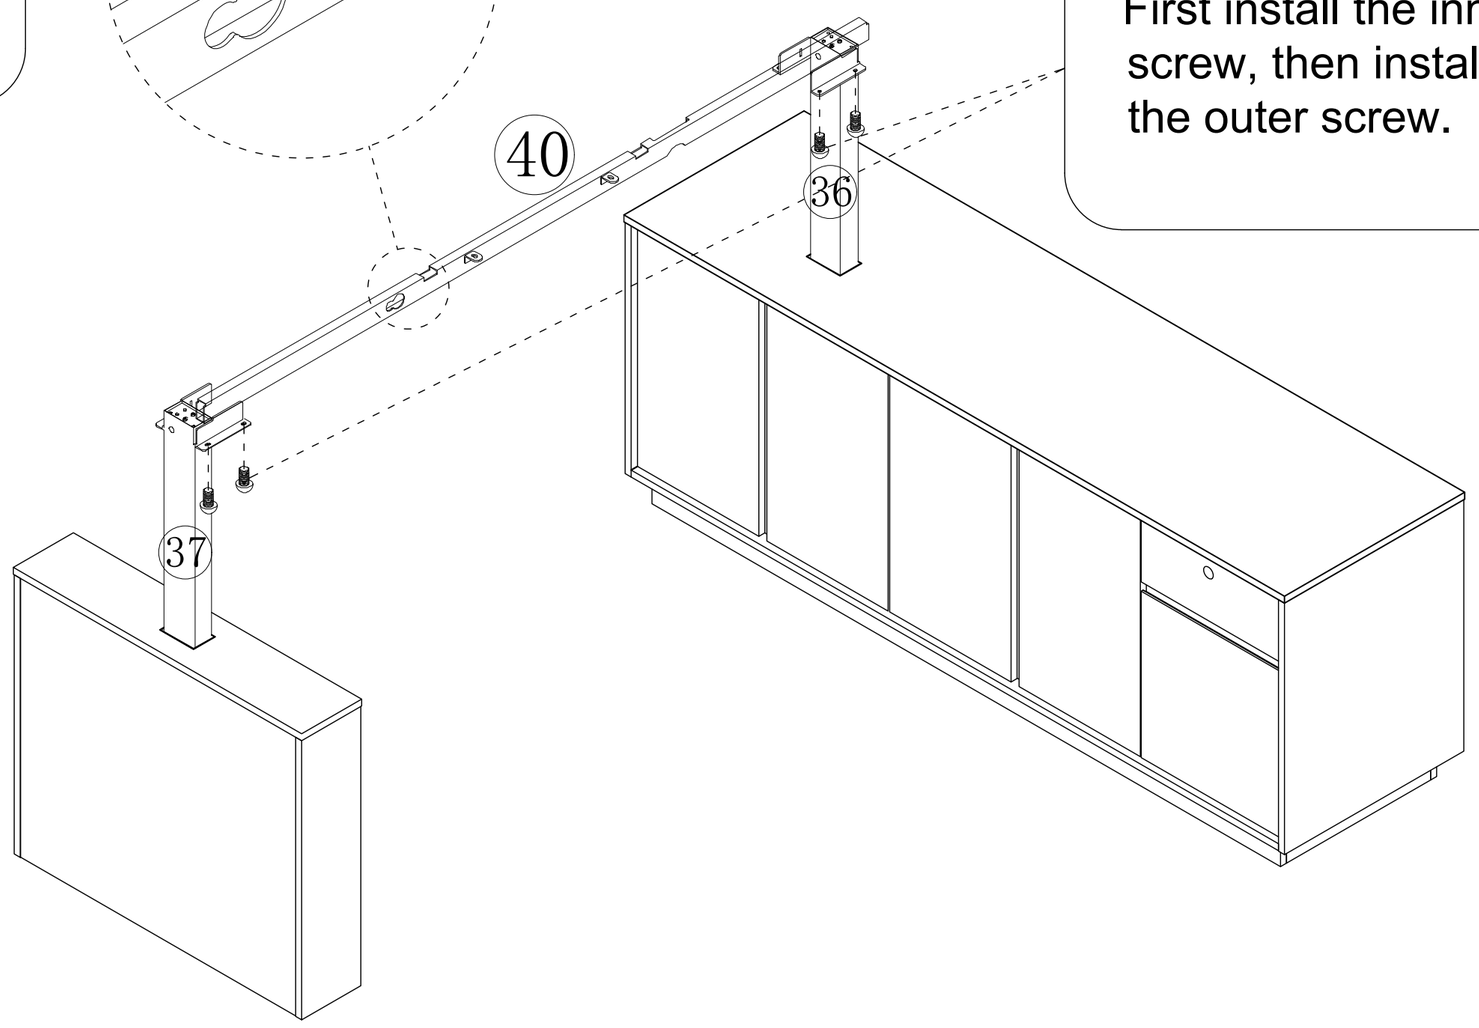

step 27


Attention, please! Install accessory 40, which is the crossbeam, and press the legs on both sides to the lowest position.


⚠ If it is not pushed all the way to the bottom, it may cause the product to have uneven legs, which can result in an uneven tabletop.

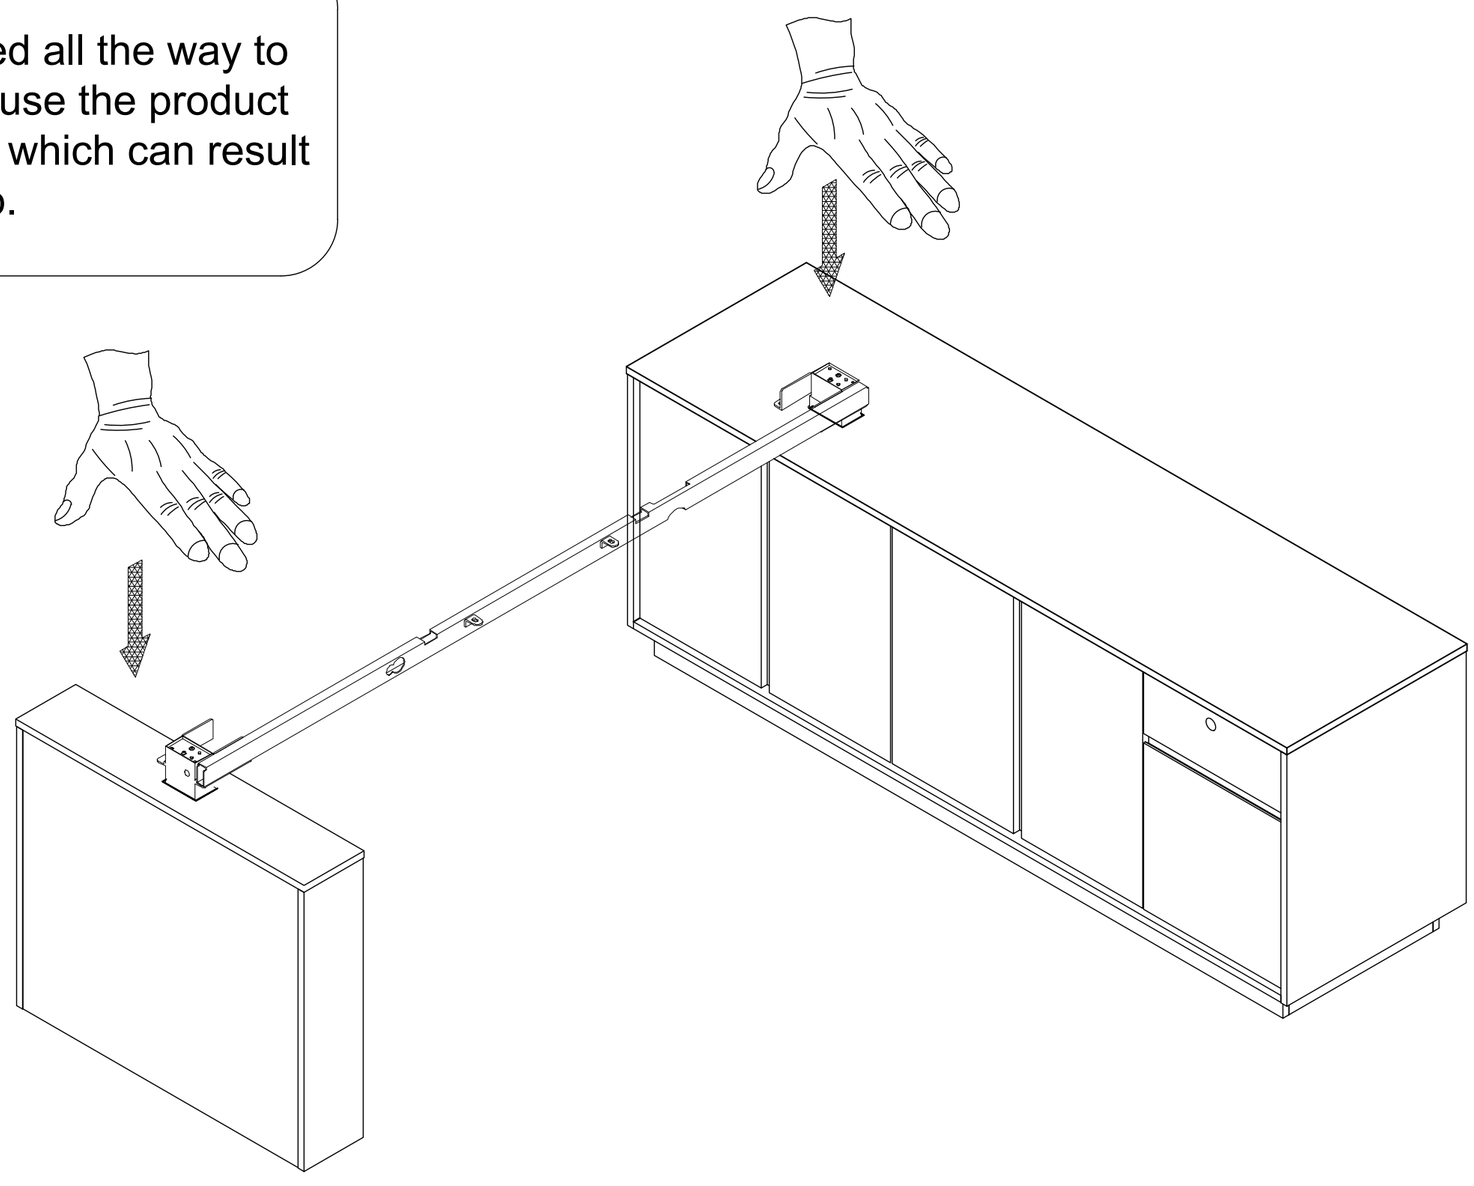


ASSEMBLY INSTRUCTION

step 28

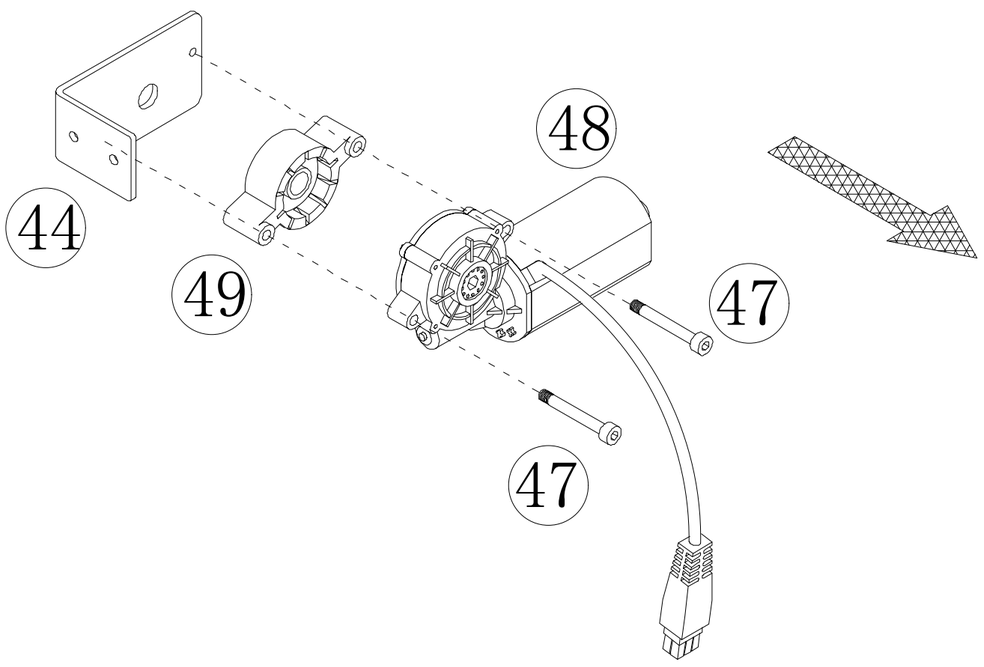


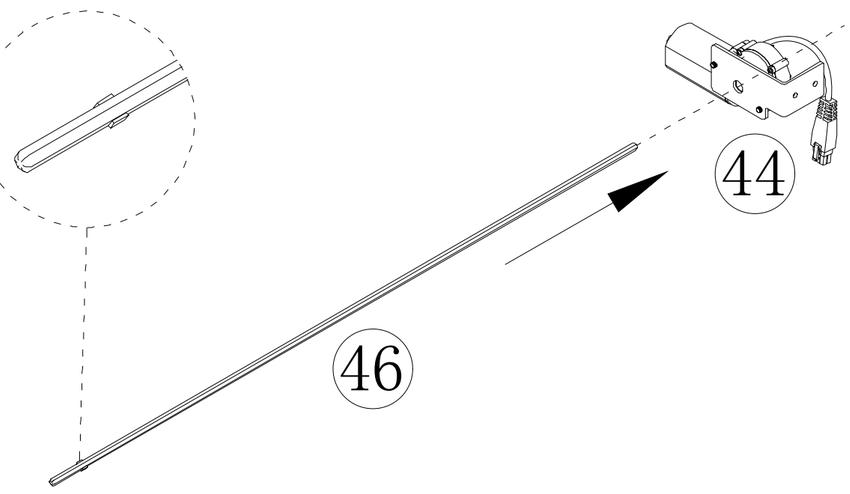

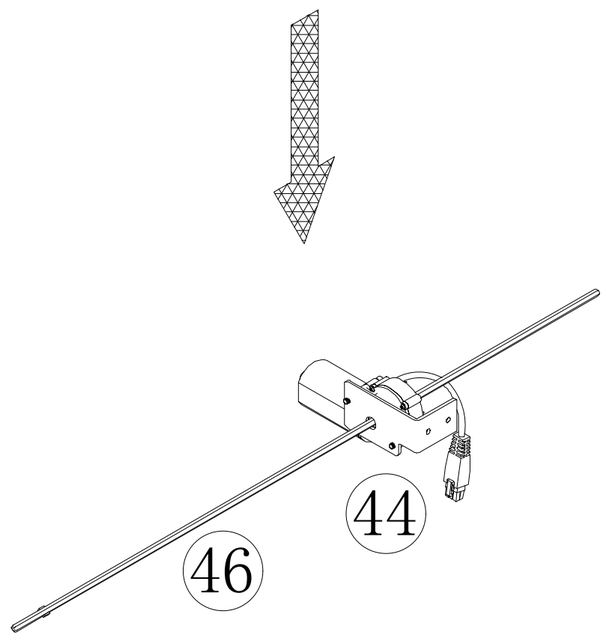


step 29

B 2 PCS



M6*10

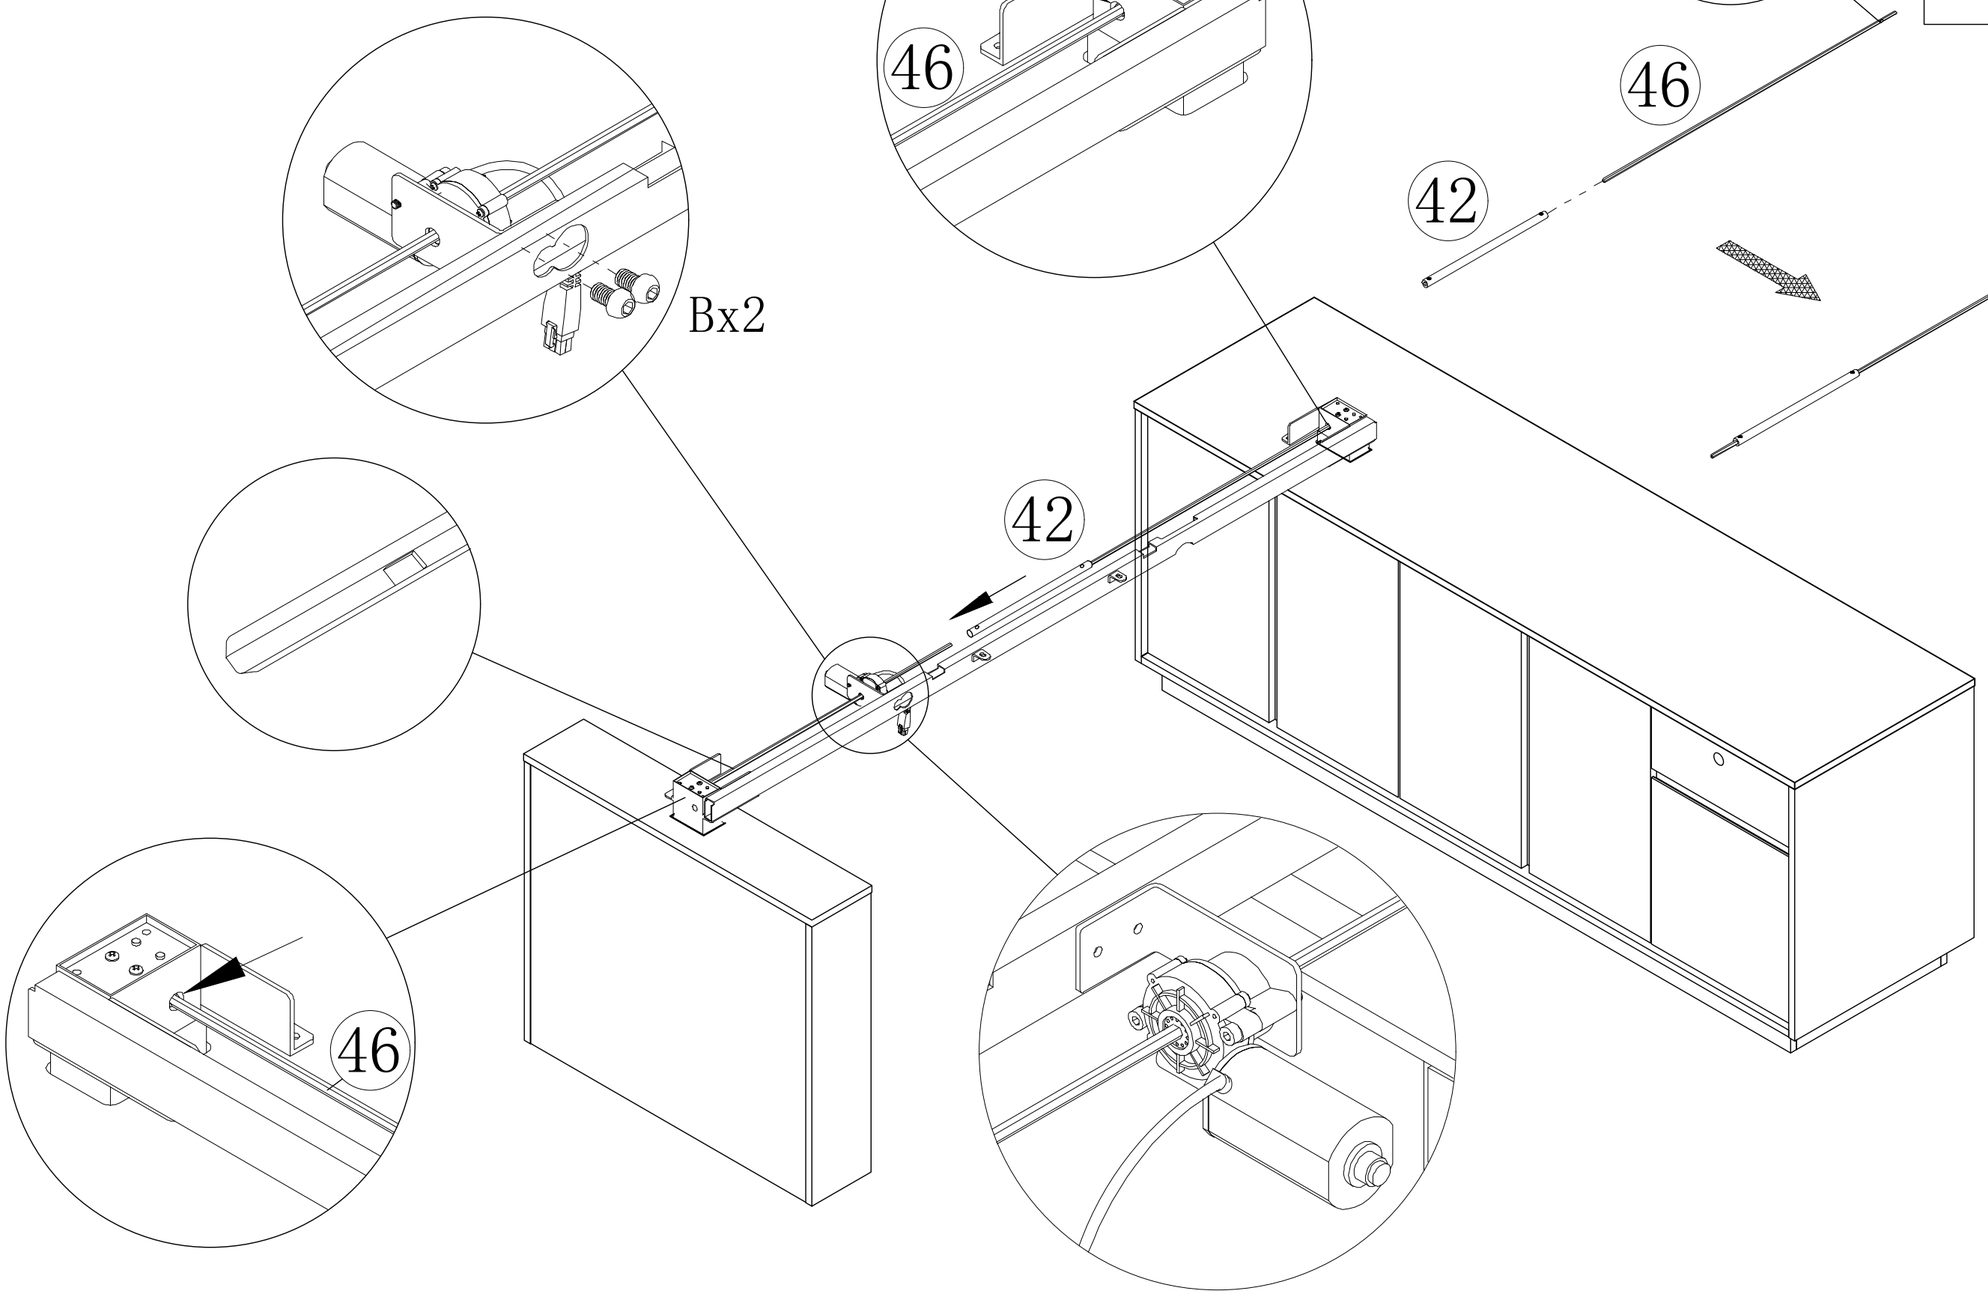


ASSEMBLY INSTRUCTION

step 30

Note: If the transmission rod doesn't ft smoothly into the hole of rod coupler, fne-tune ft with the wrench.

C 1PC



M4


F 2PCS



M8


I 1PC



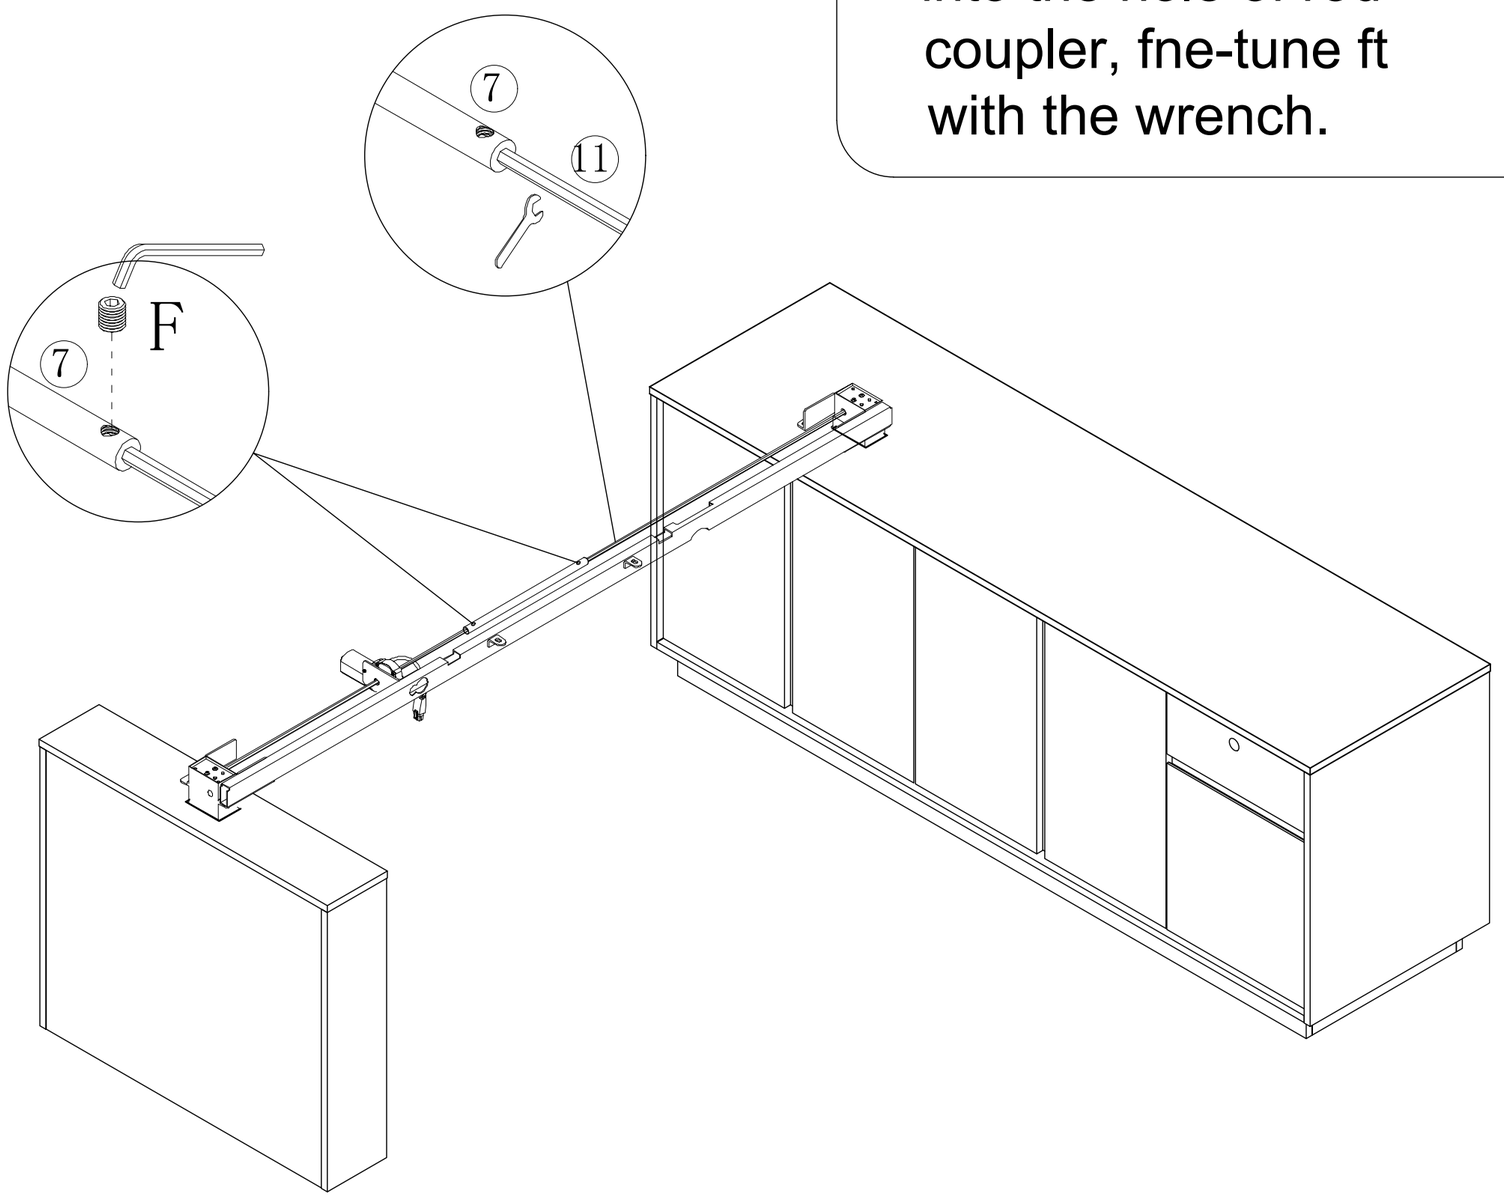


step 31

Step1：Connect the controller of the lifting frame, namely accessory 41, to the plugs of the other two accessories 45 and 48, and then turn on the power.
Step2：Press the downward button on the controller for 5 seconds- the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.
Step3：Press and hold the "Rise" button, raise the lifting frame to a certain height, then turn off the power and proceed to the next installation step.

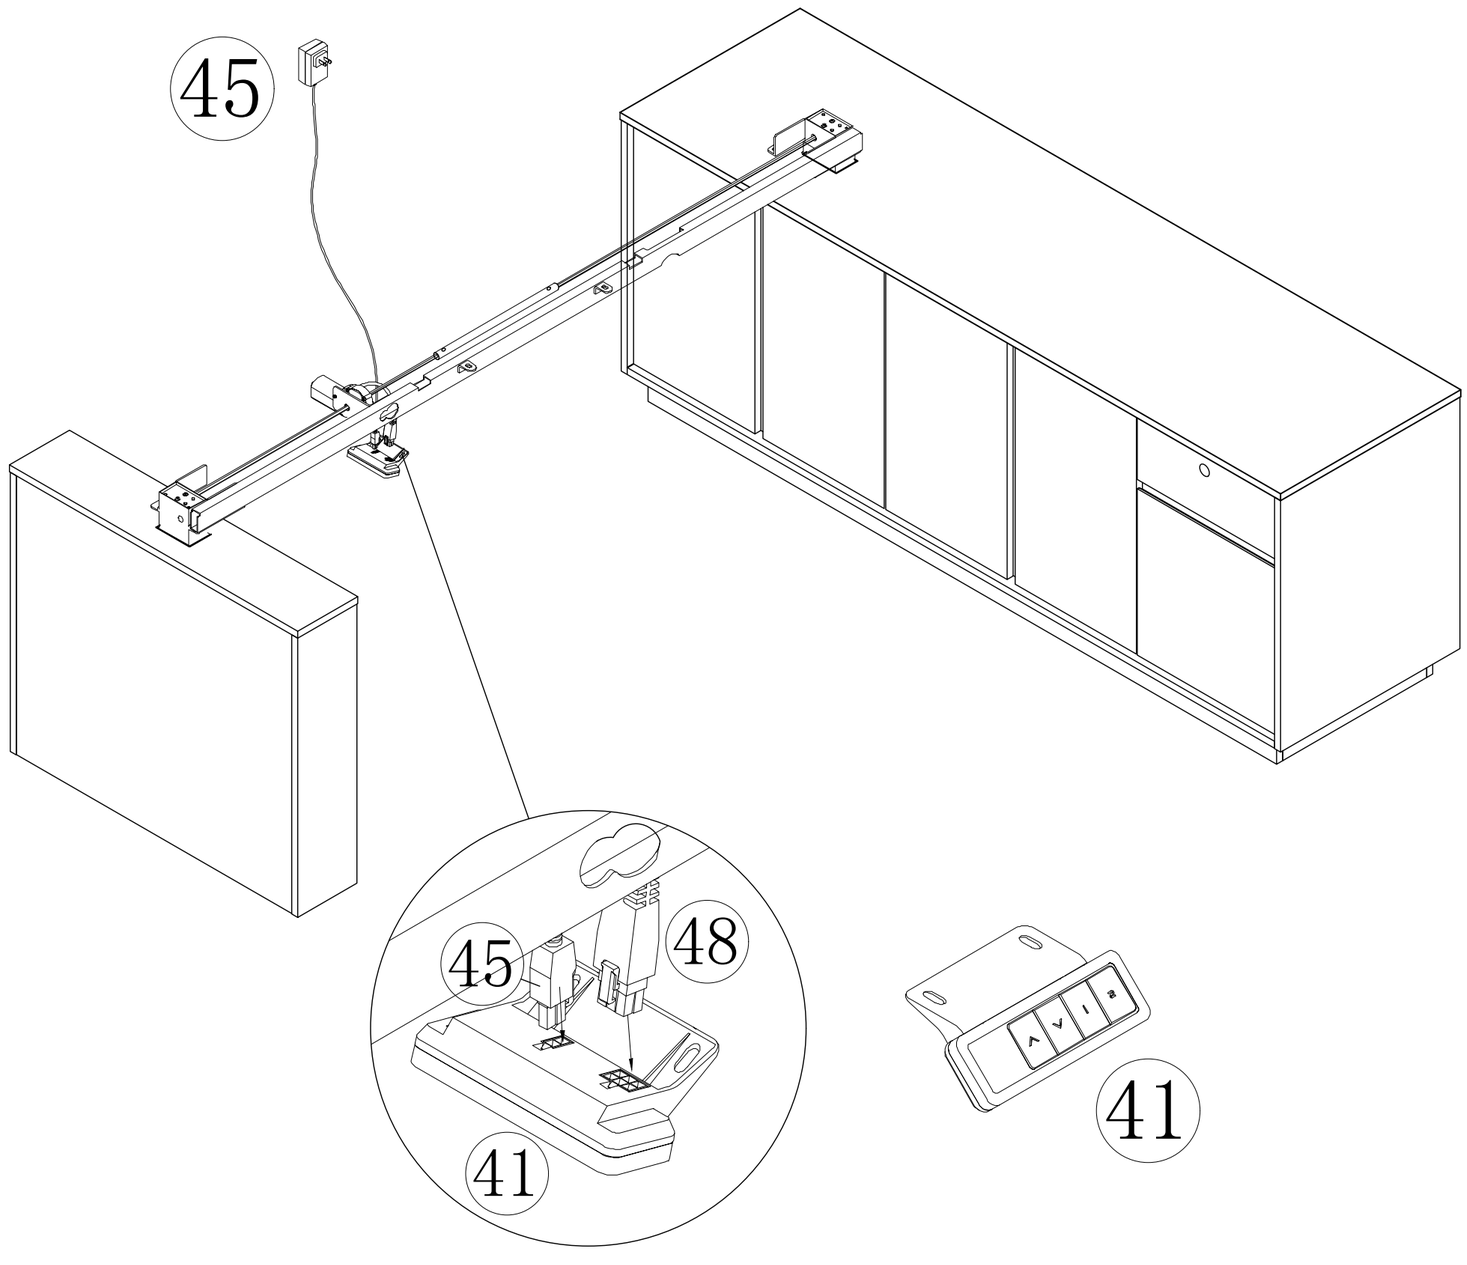



ASSEMBLY INSTRUCTION

step 32

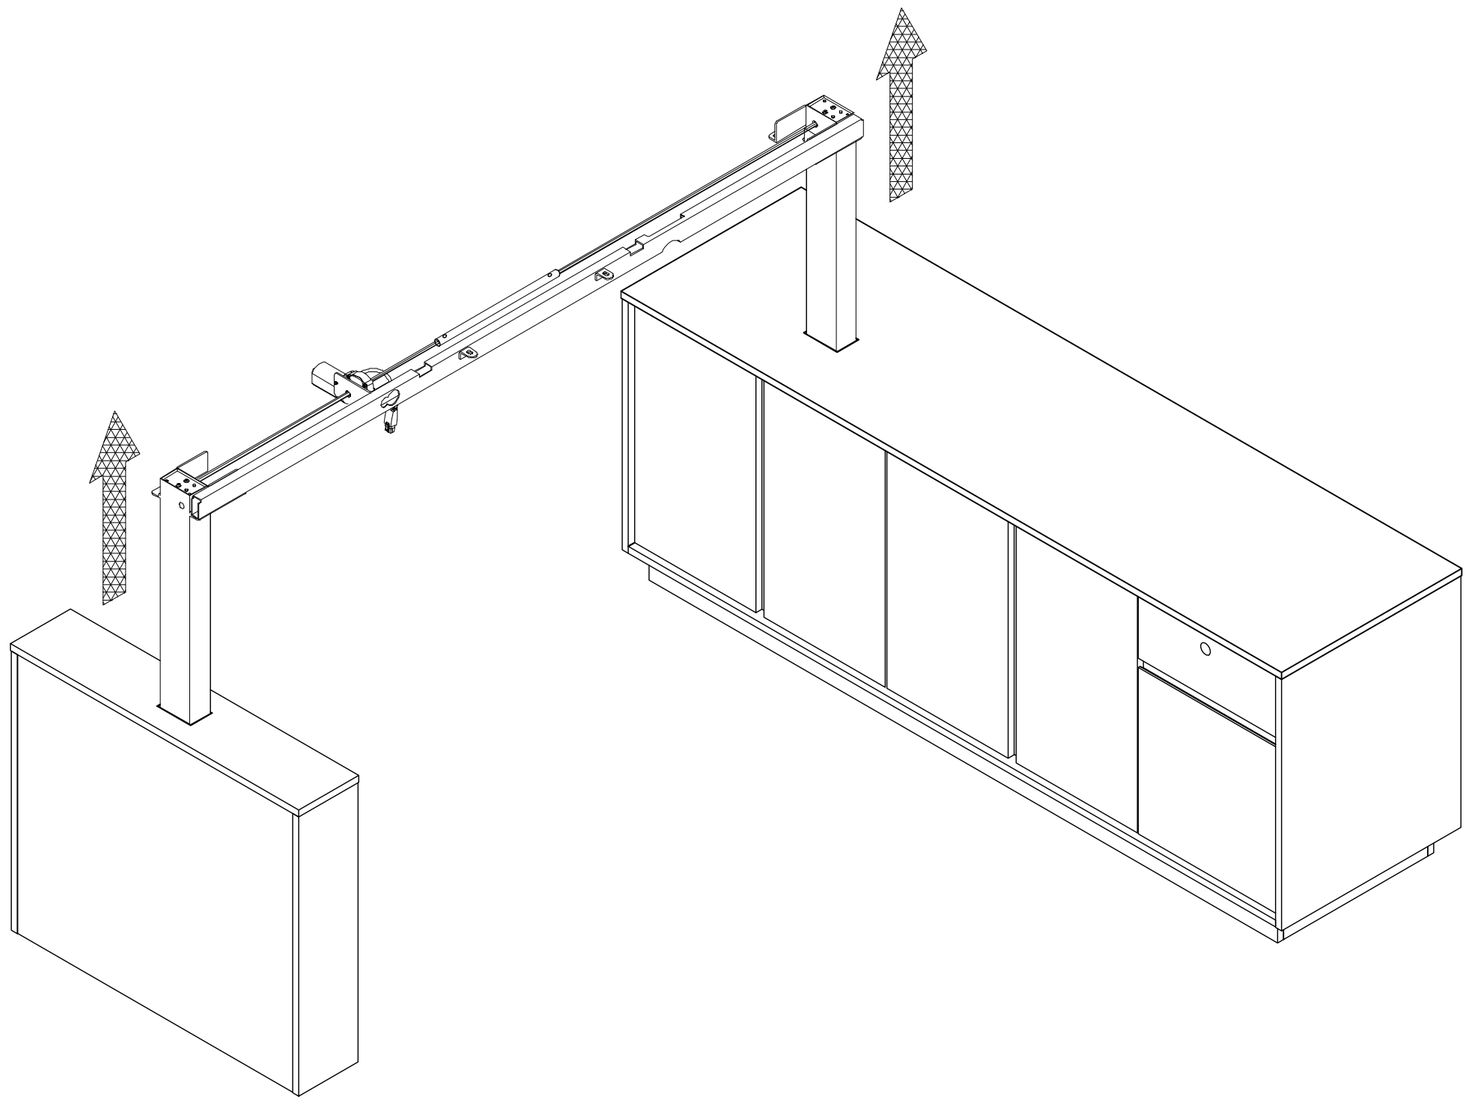

step 33


B	4 PCS
	
M6*10	

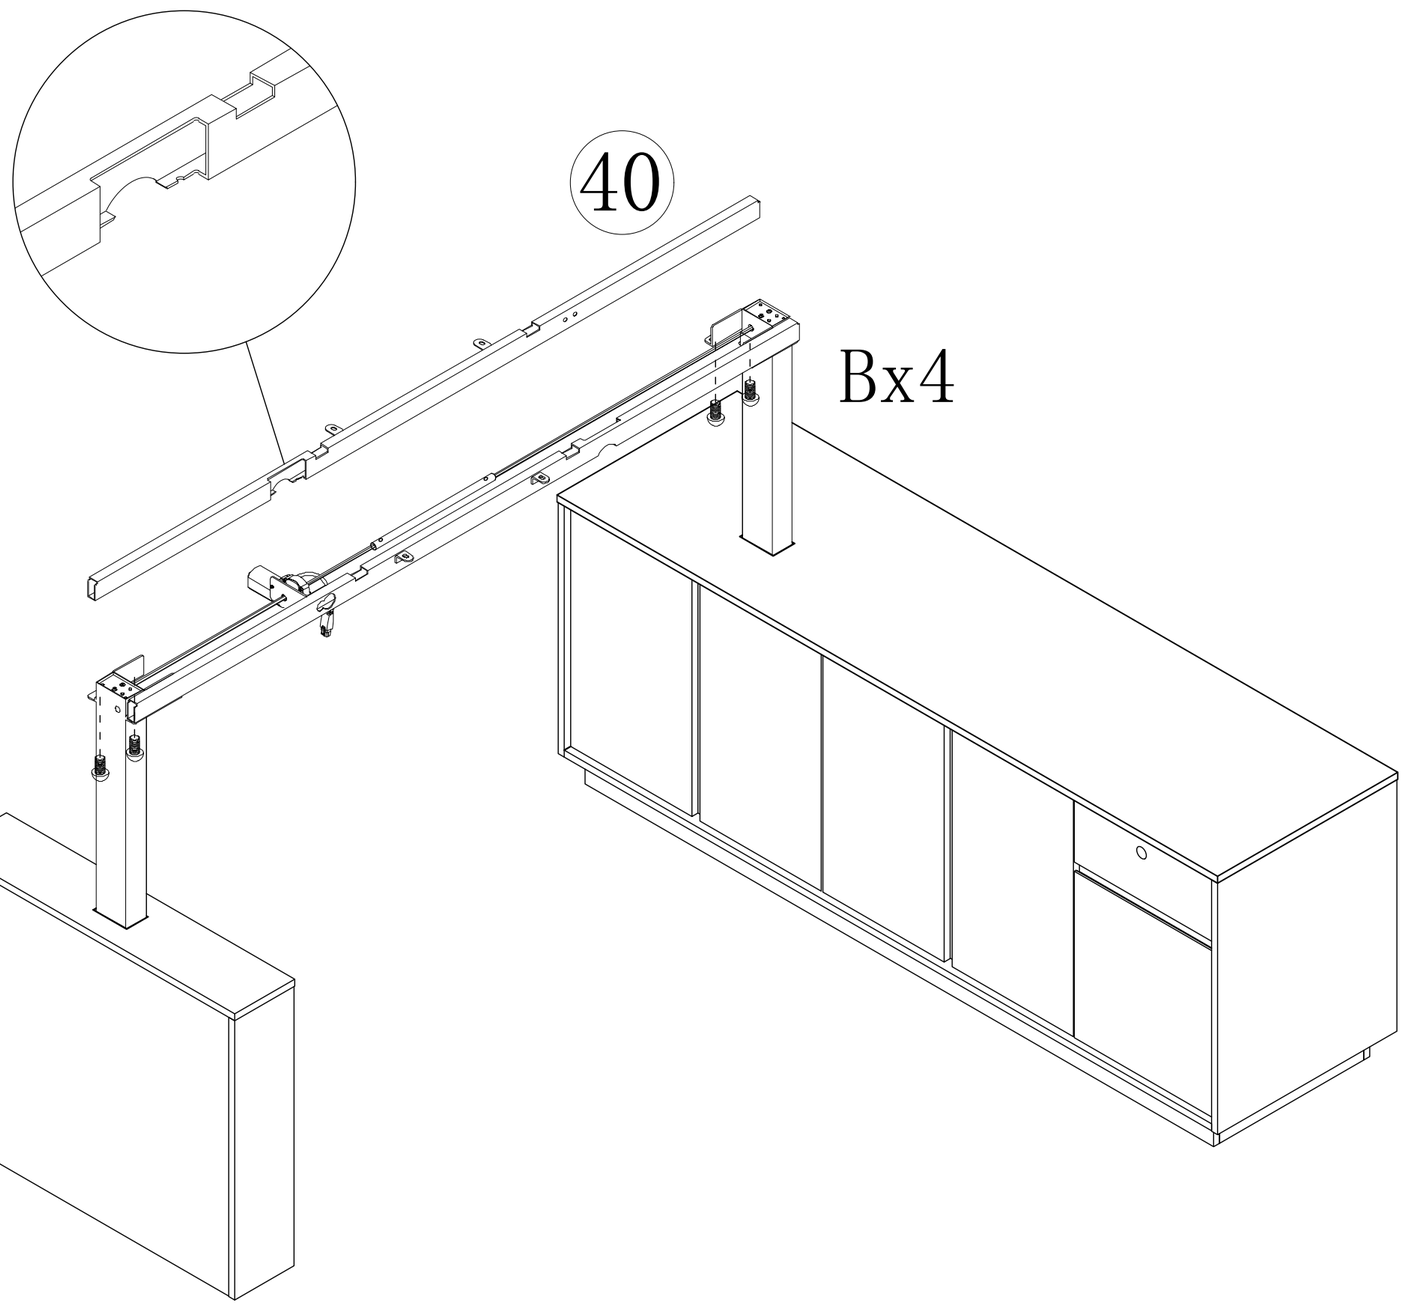


ASSEMBLY INSTRUCTION

step 34

A 4PCS



M6*30

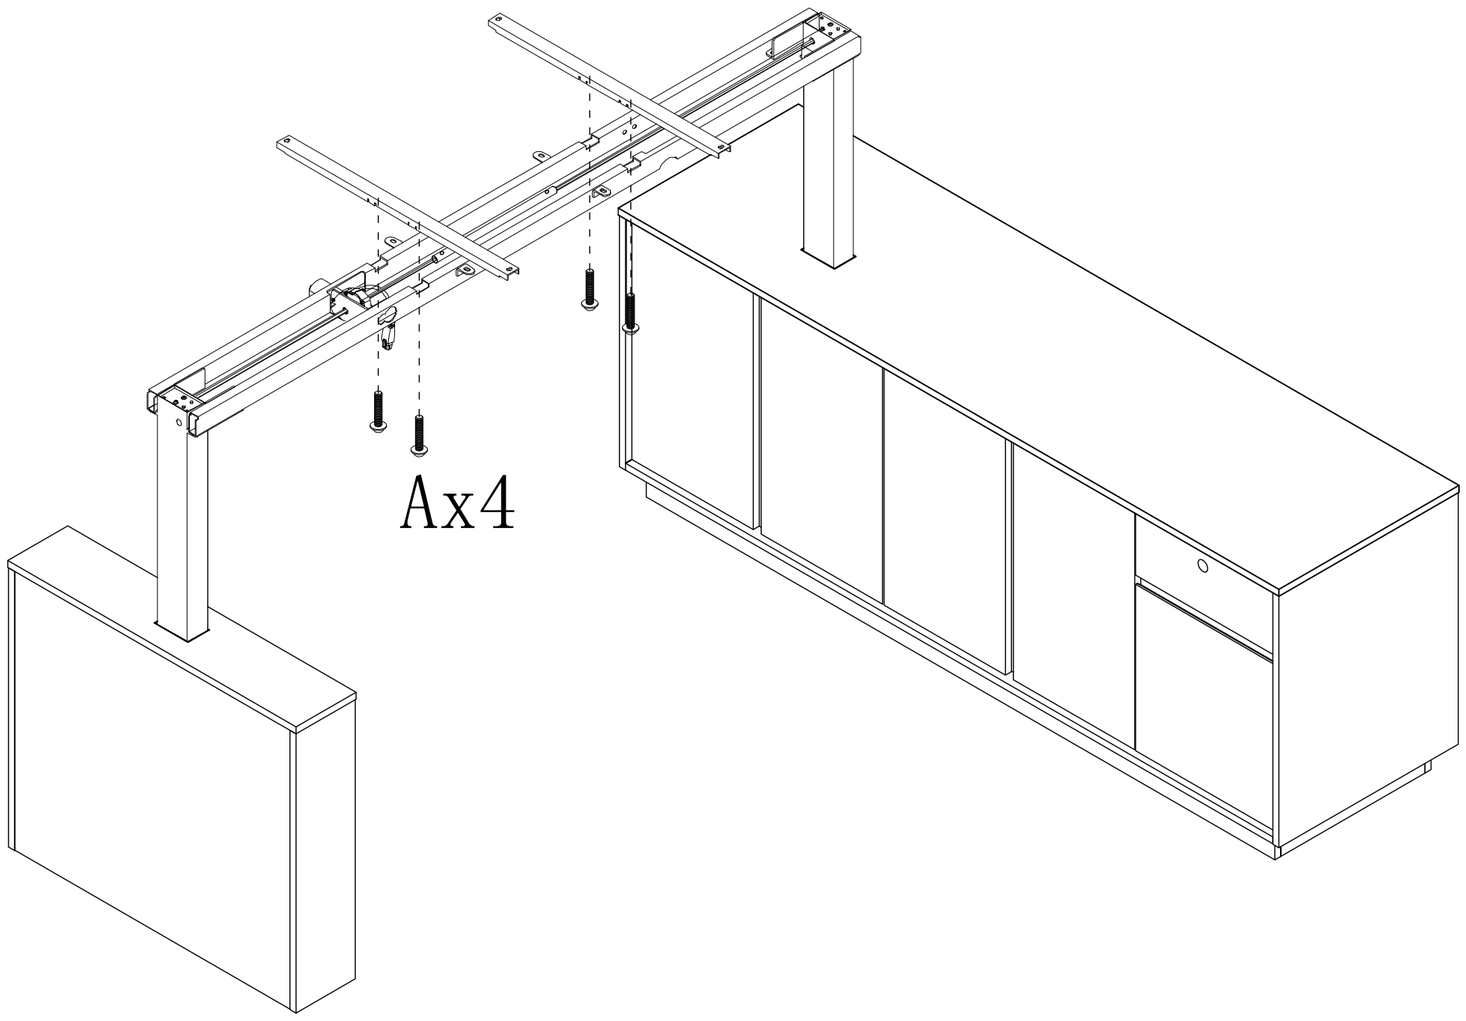


step 35

D 4PCS



M6*10

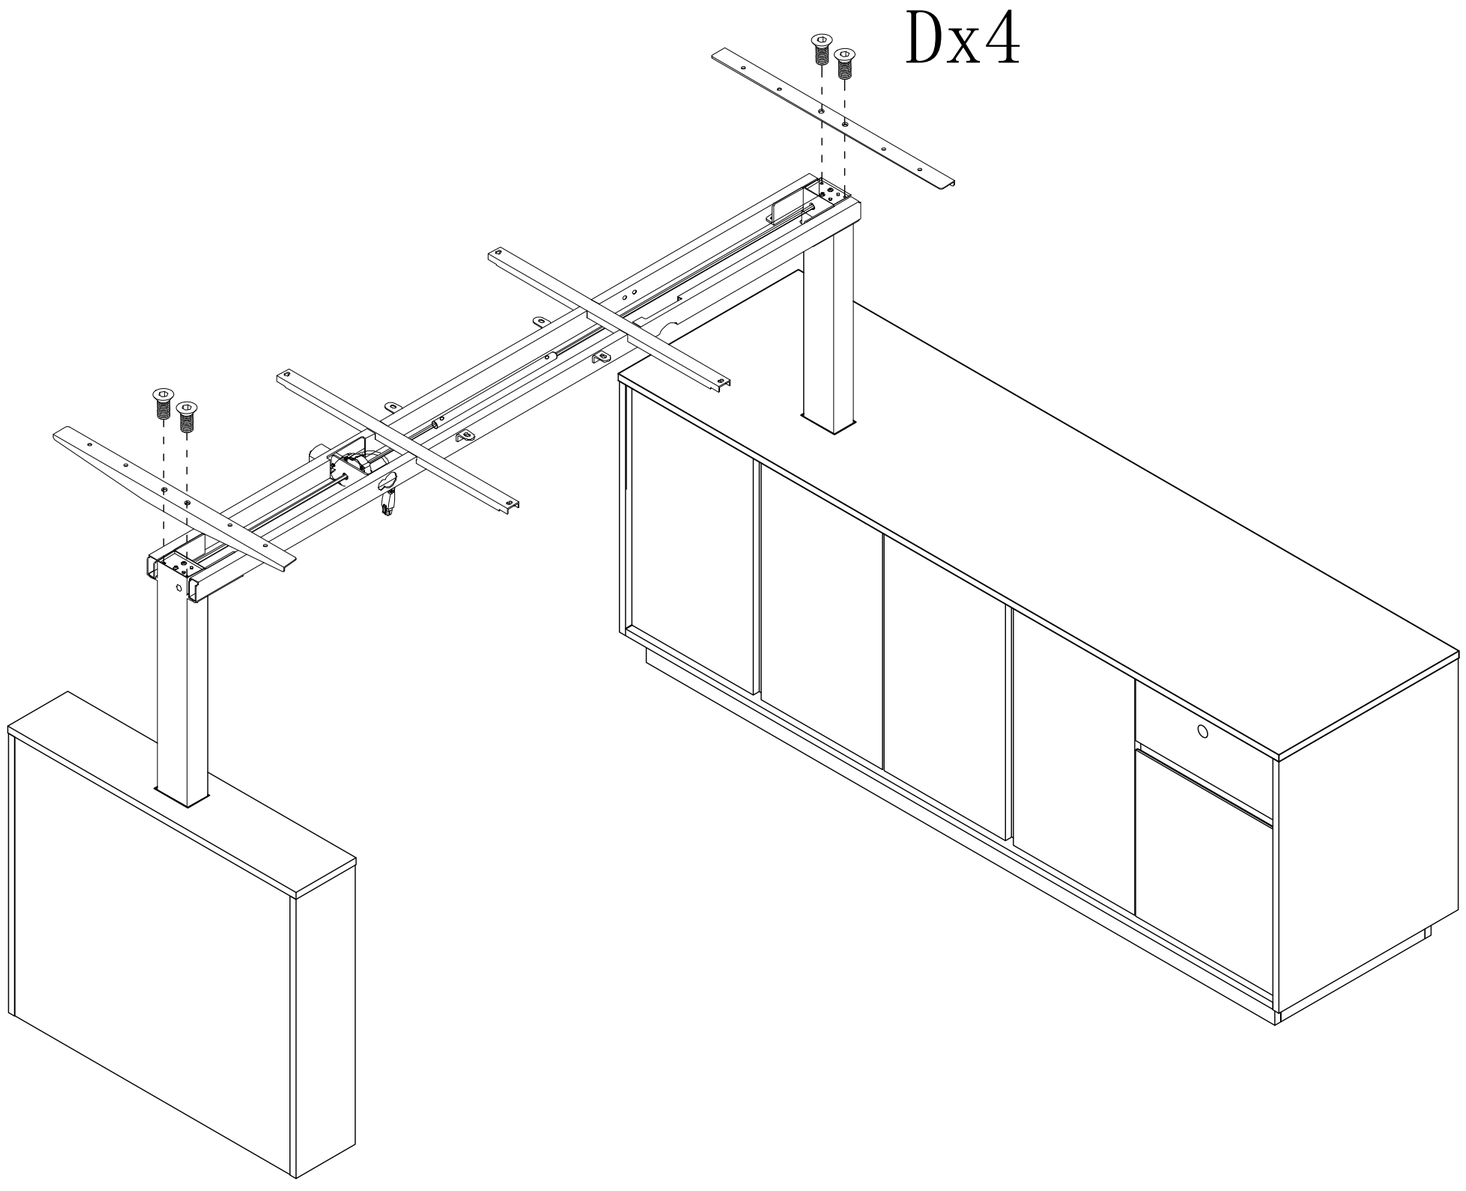

ASSEMBLY INSTRUCTION


step 36

The tabletop is too heavy. It is recommended to move the two boards here to the tabletop and then join them together.

M 4 PCS



Ø8*30

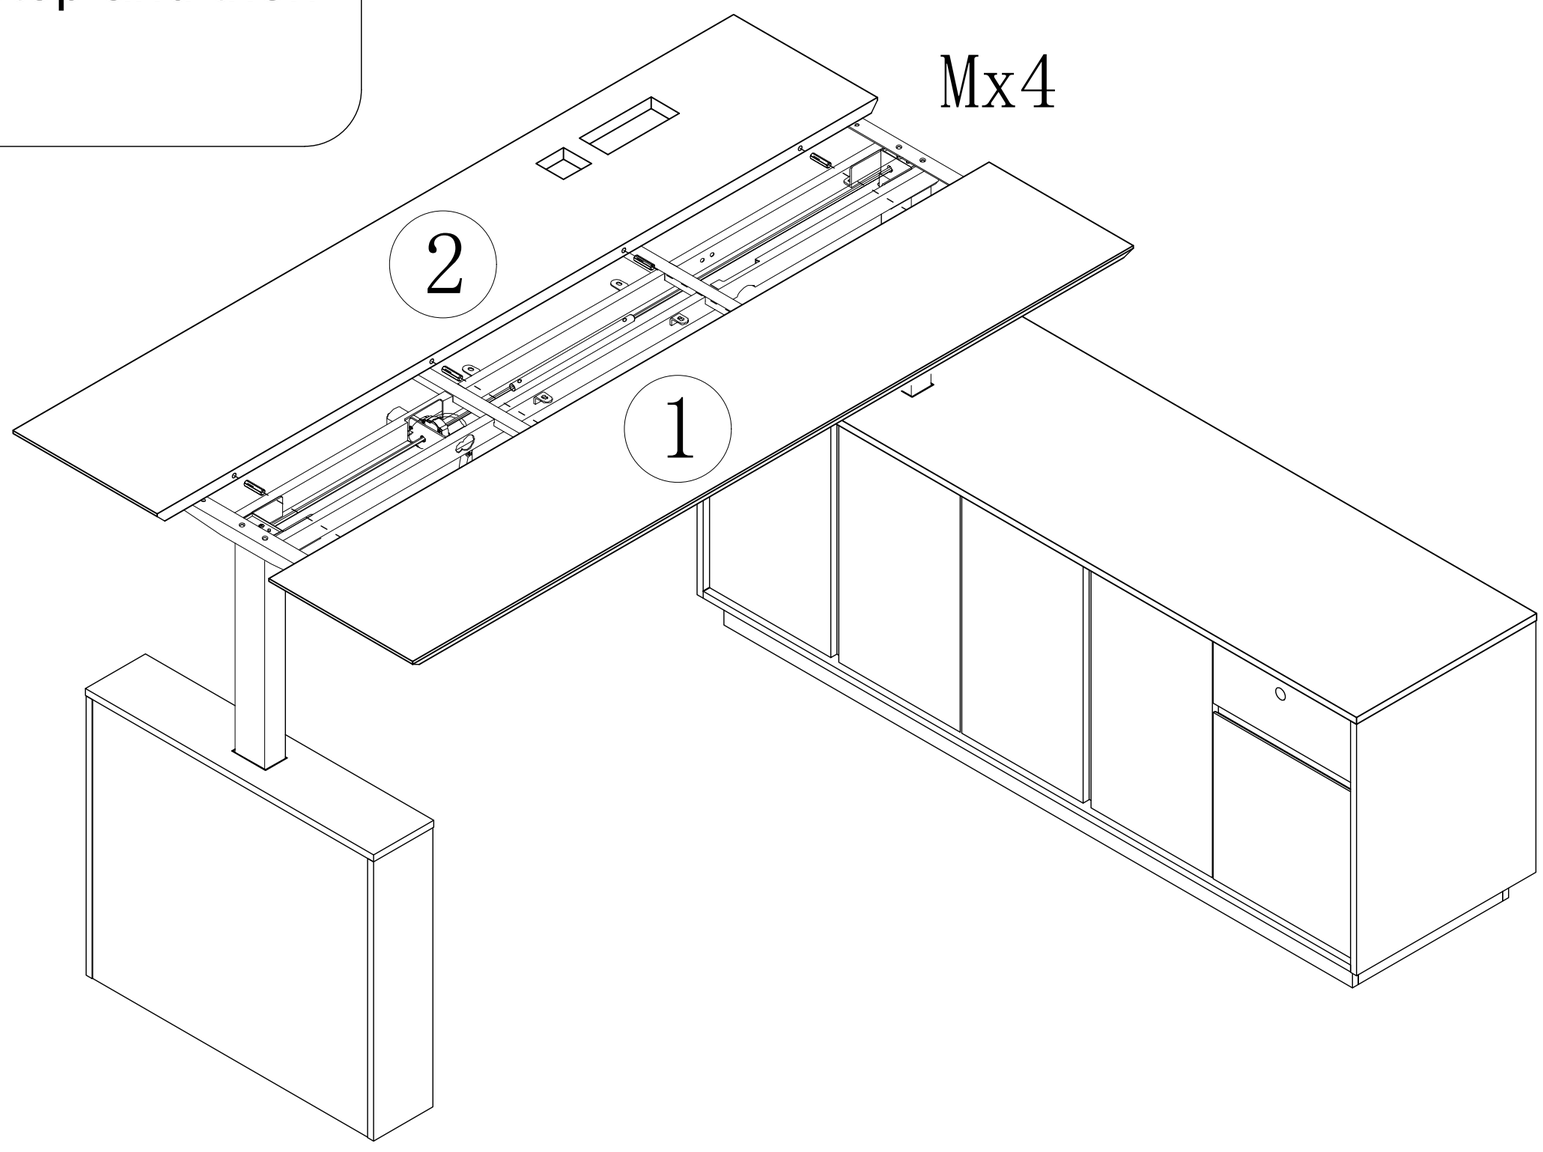


step 37

S 16PCS




M6*16

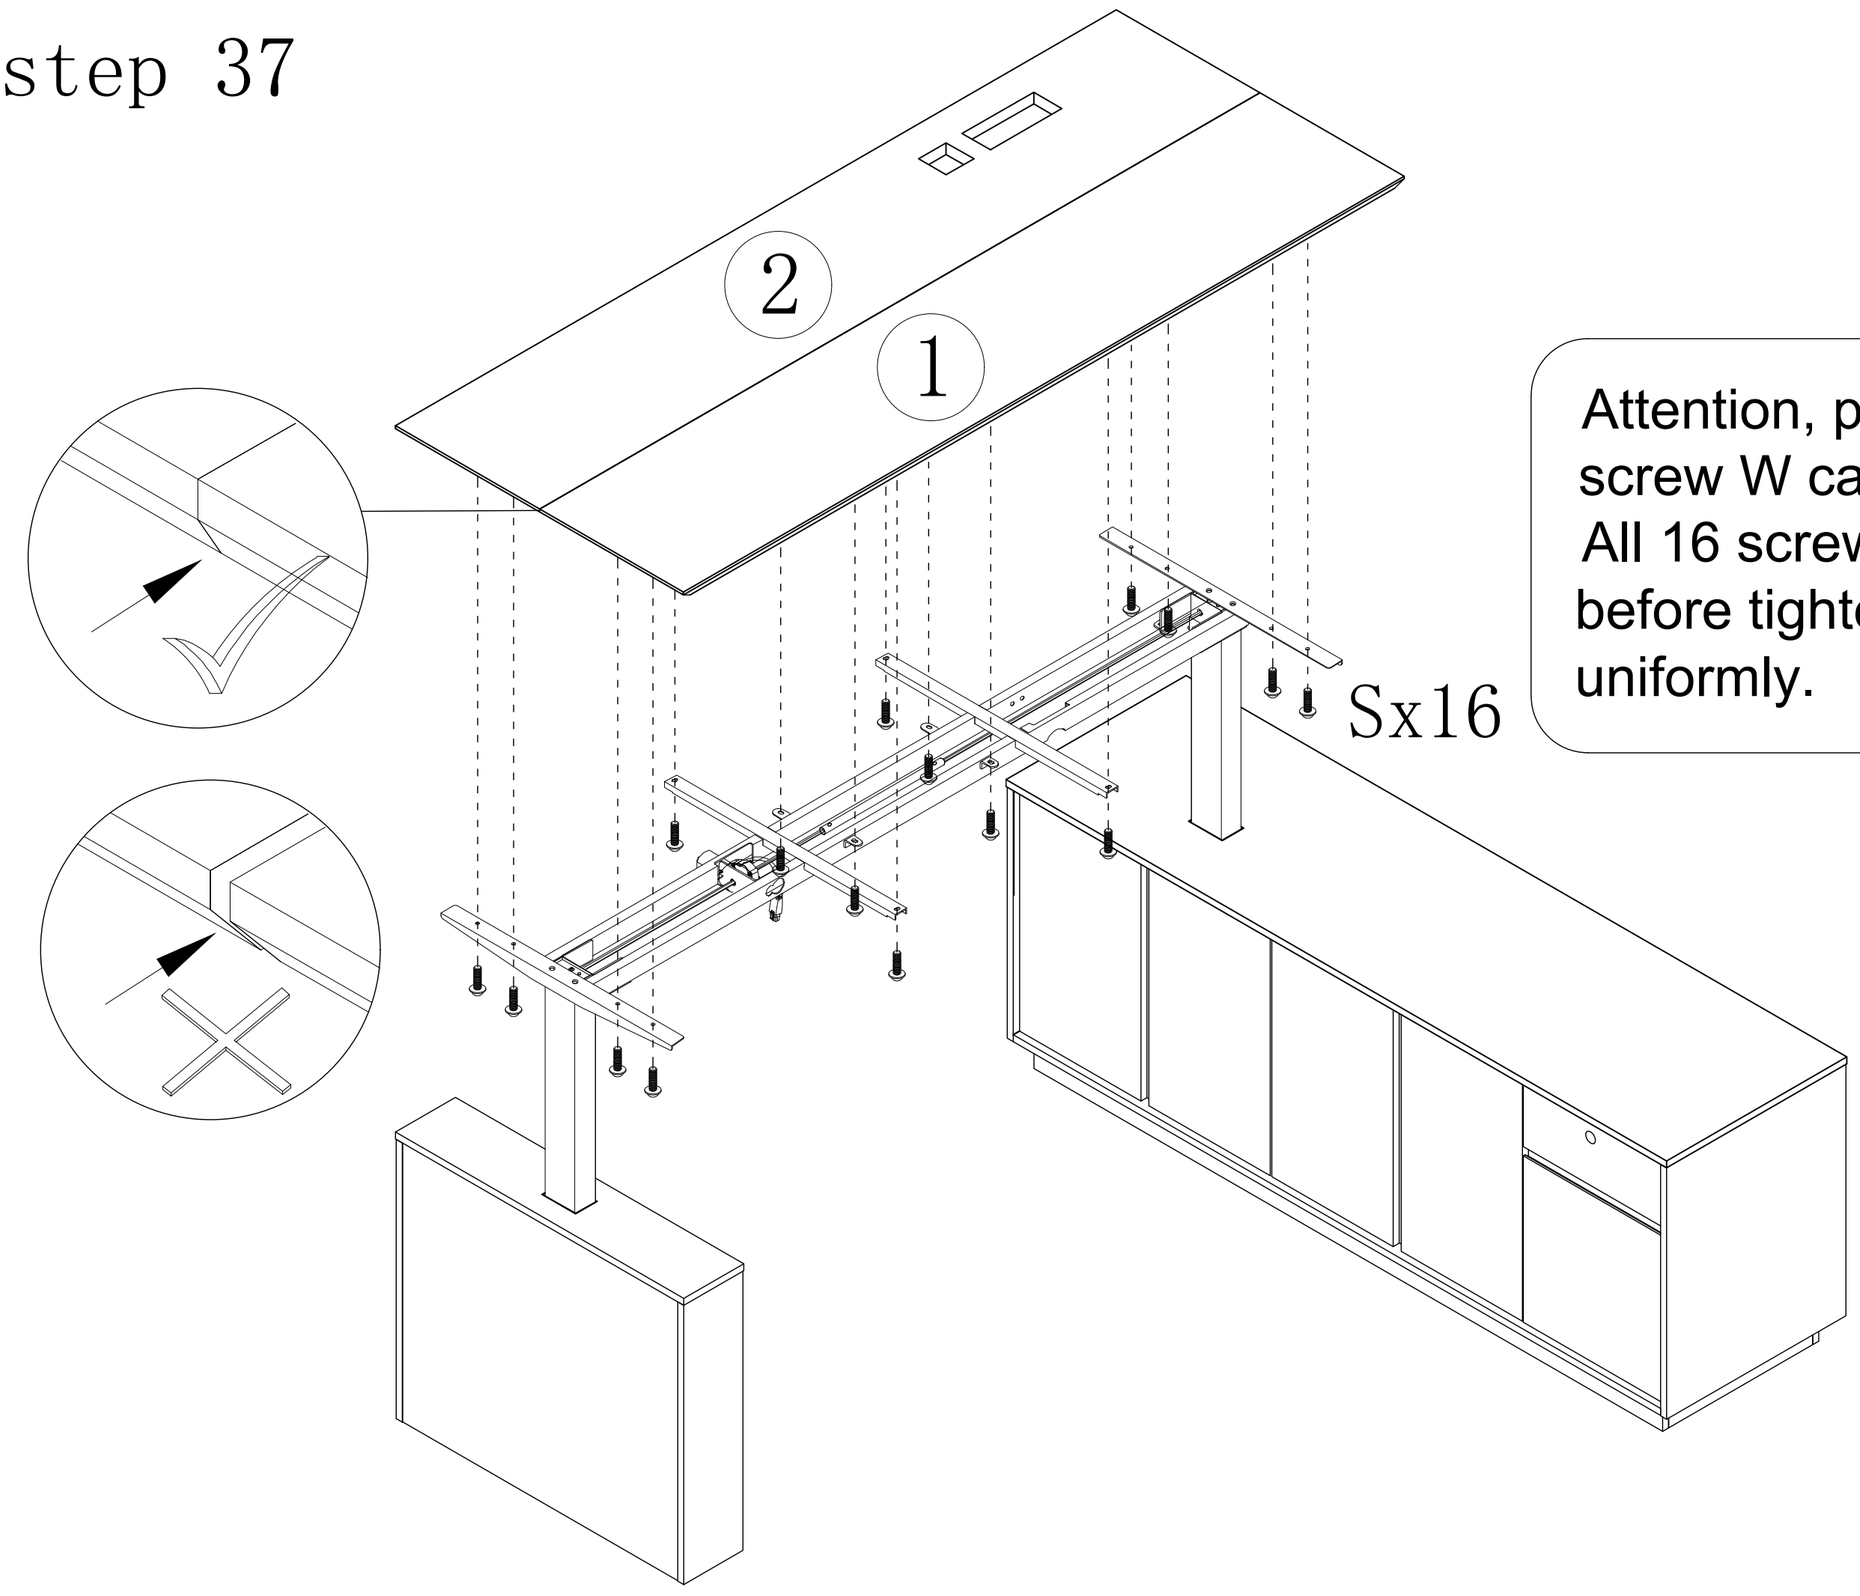

Attention, please! At this step, screw W cannot be locked yet. All 16 screws need to be locked before tightening screw S uniformly.

ASSEMBLY INSTRUCTION

step 38

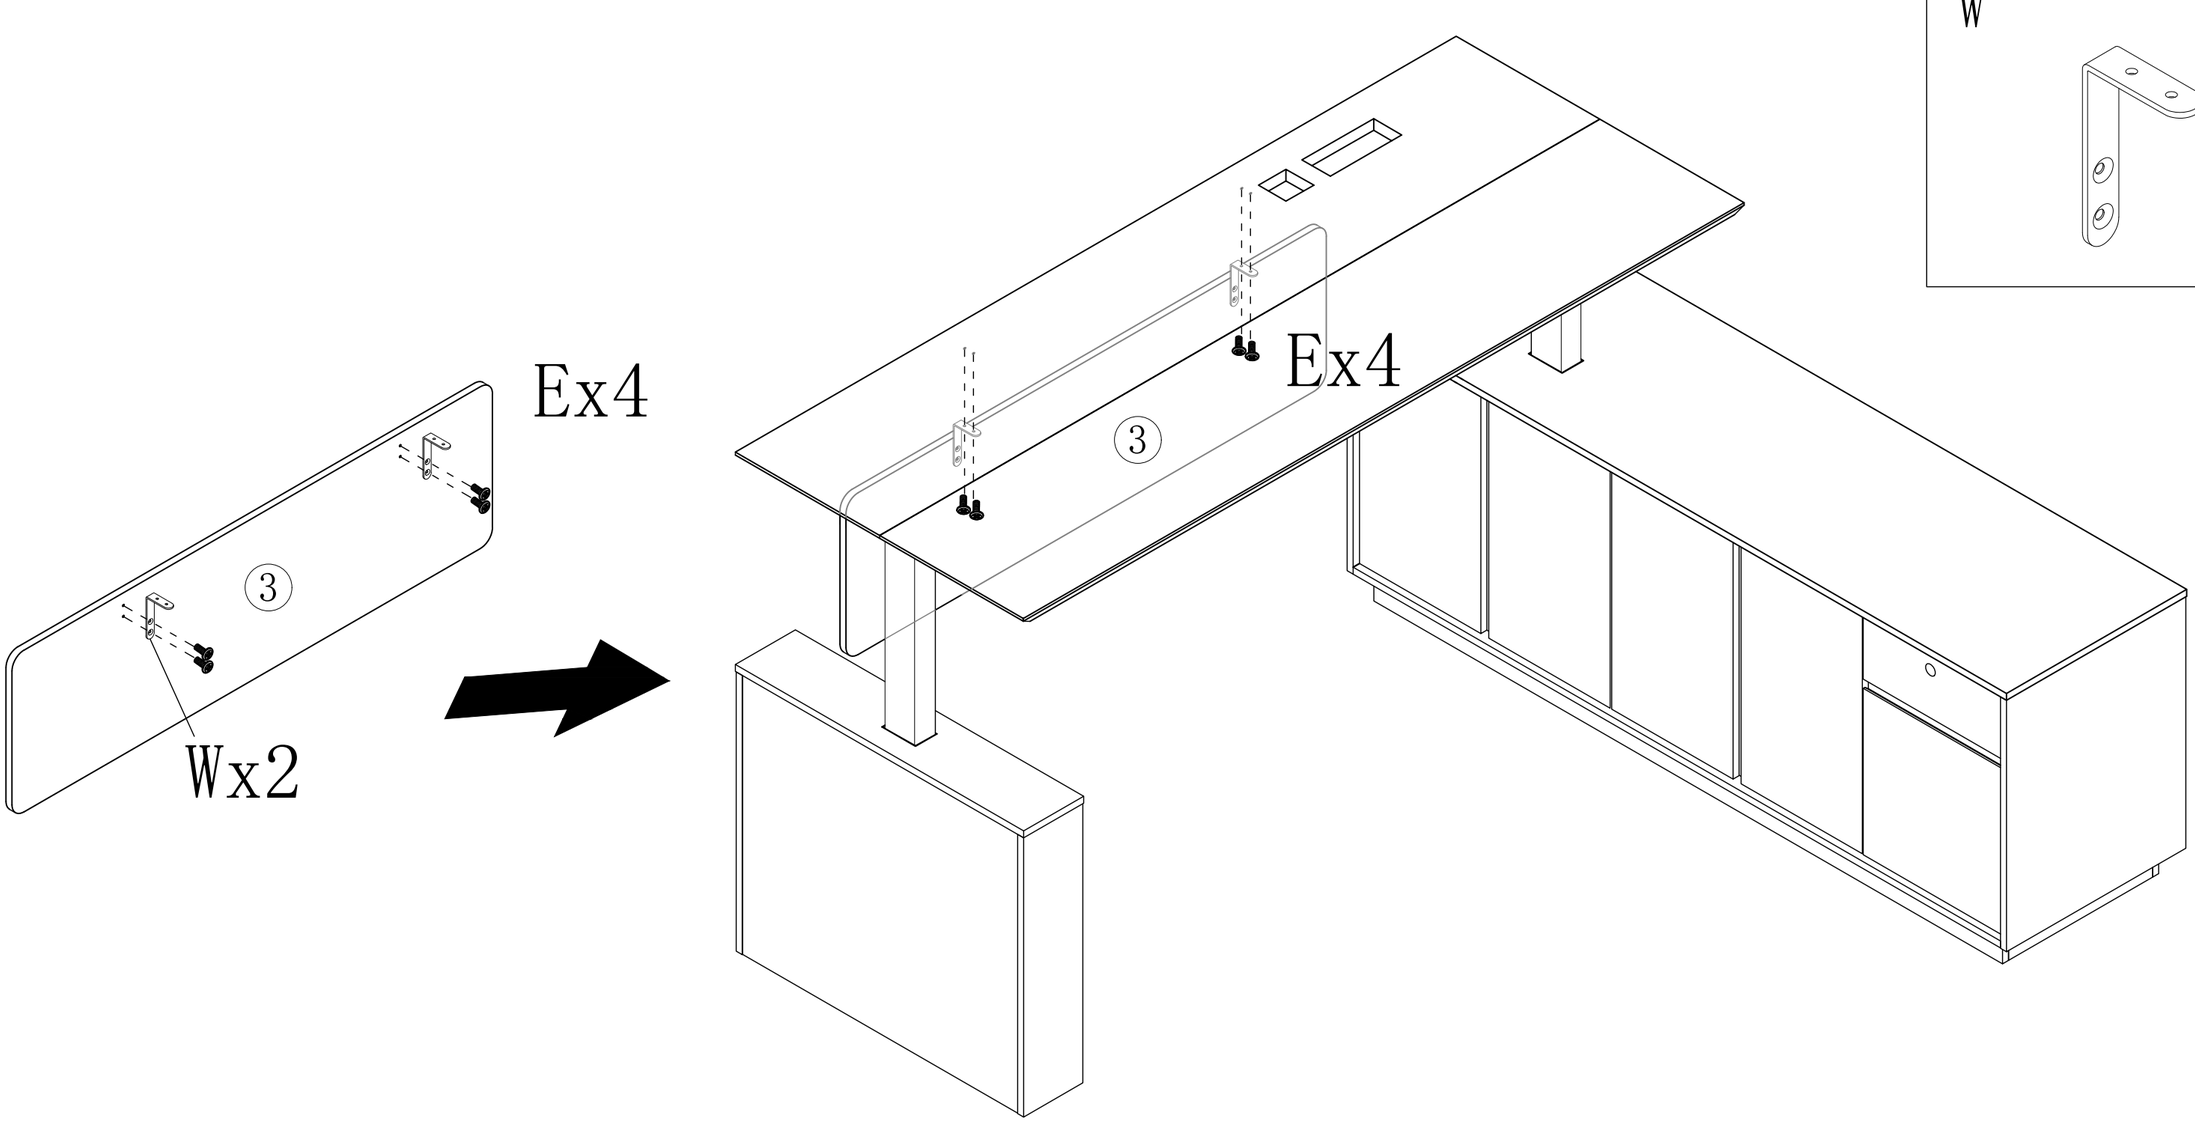


E 8PCS




M6*12

W 2PCS

step 39

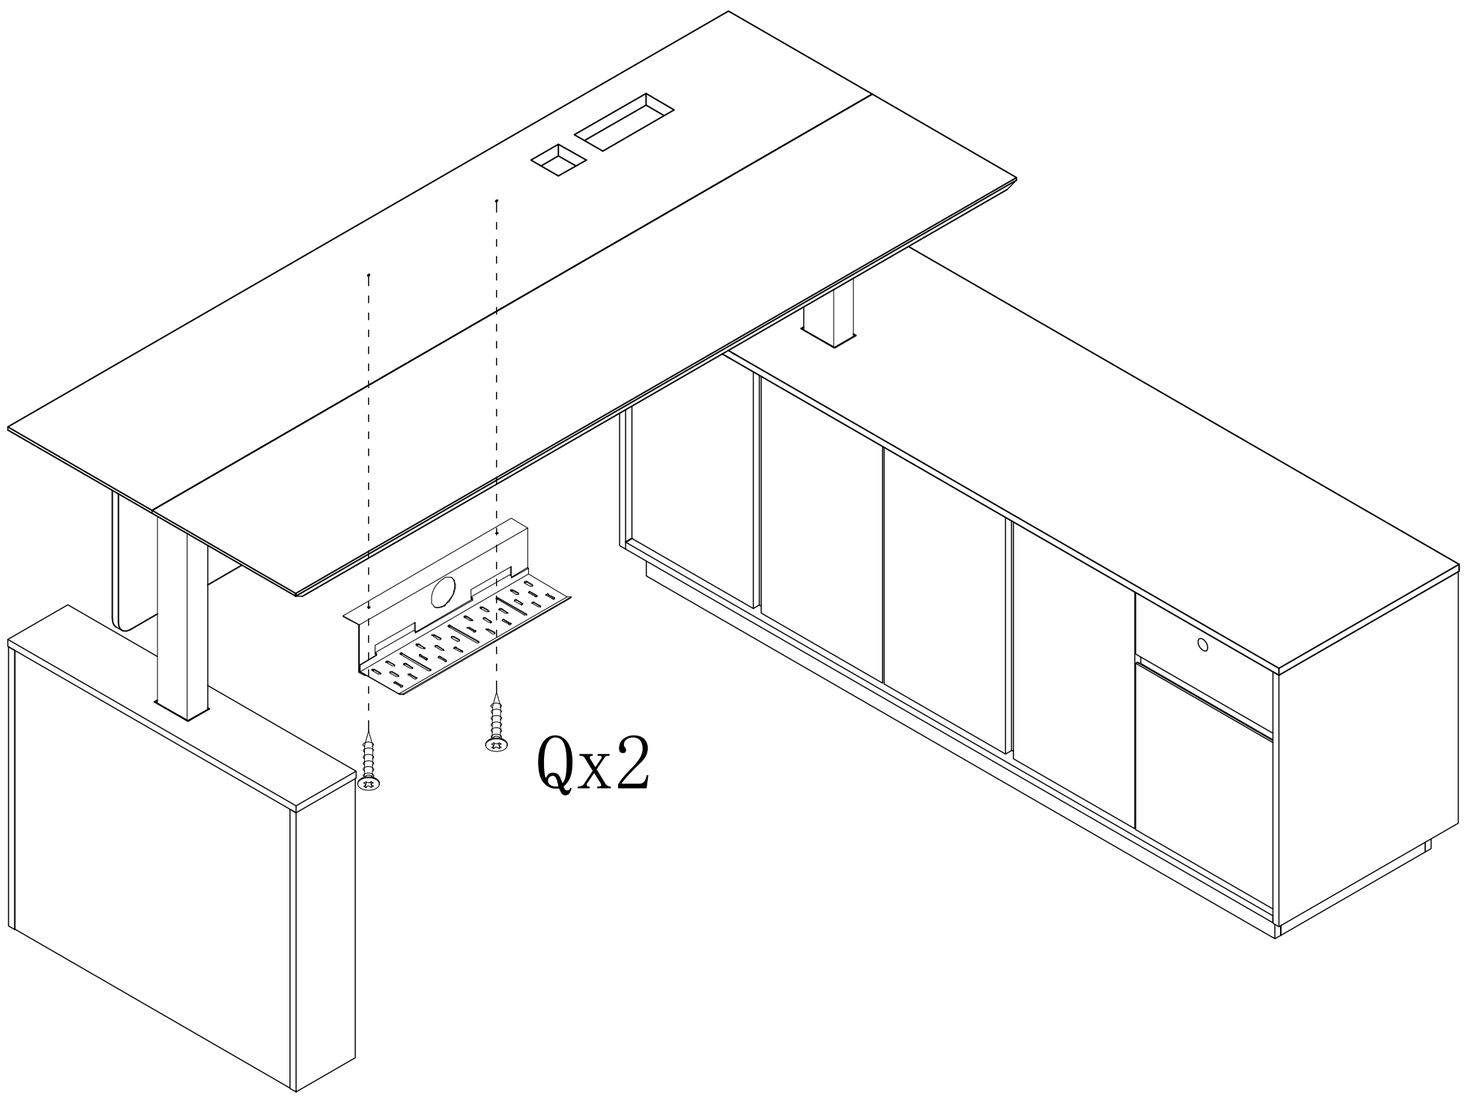



Q 2 PCS



Ø3.5*14


U 1SET

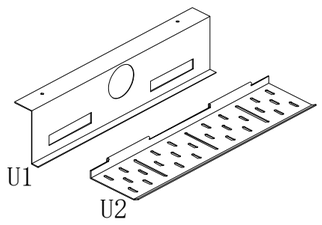

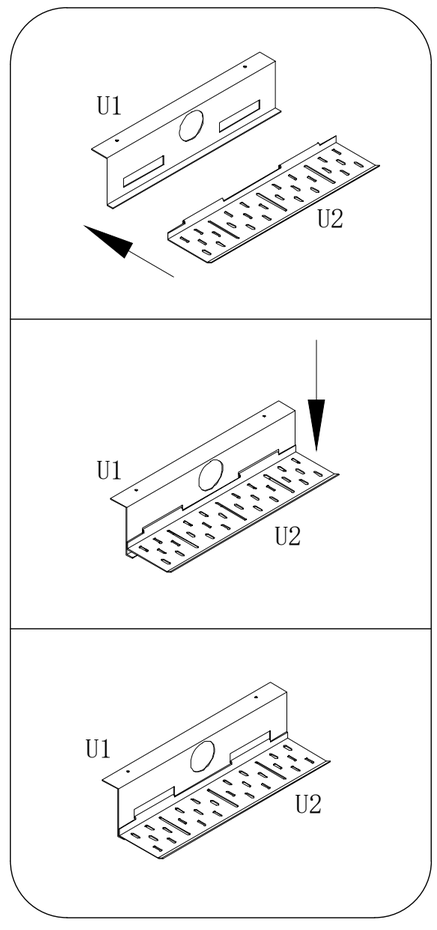


ASSEMBLY INSTRUCTION


step 40

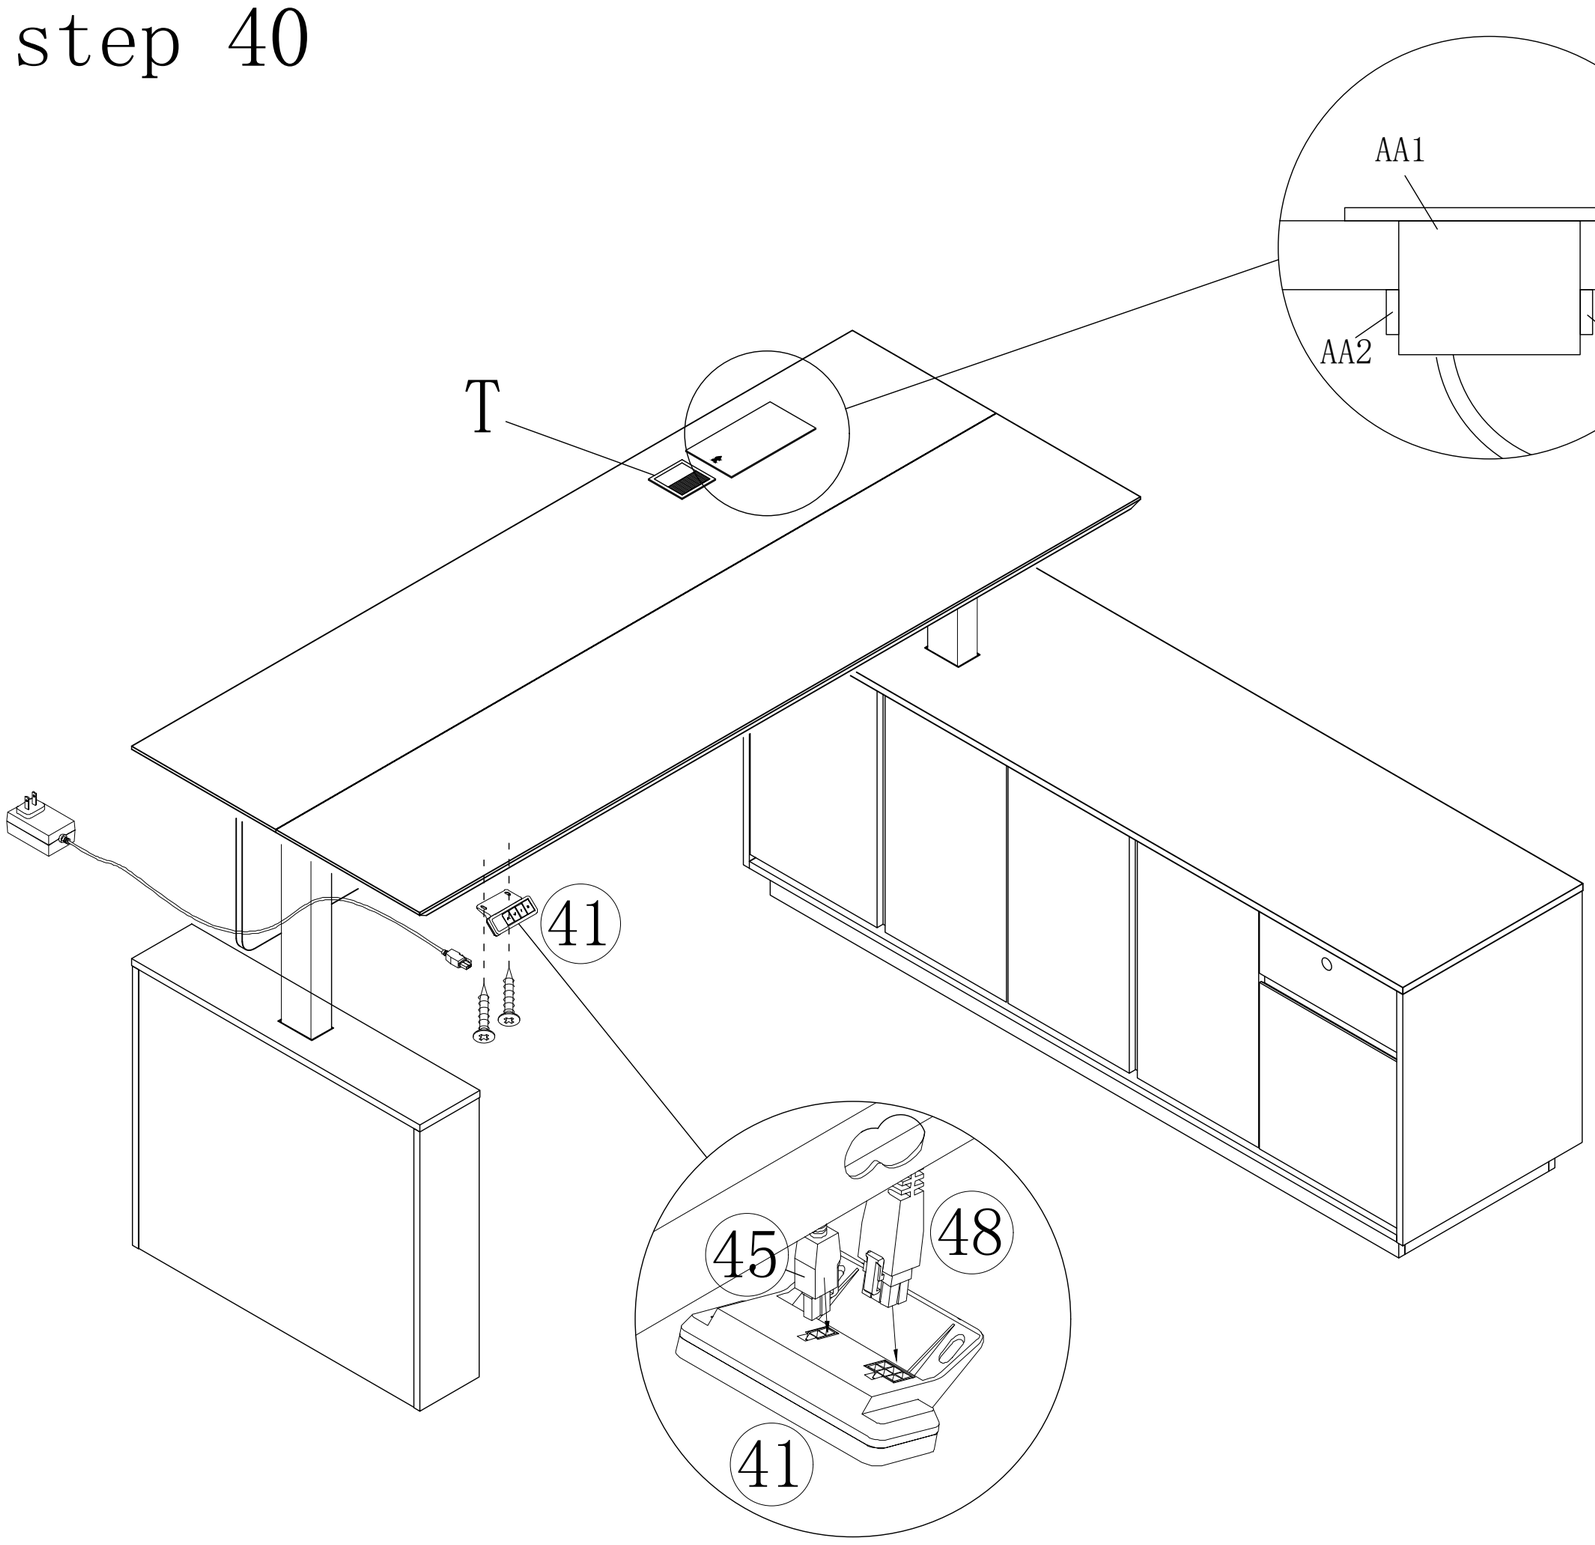


AA 1 PC

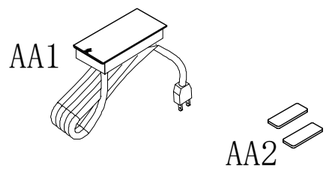

T 1 PC

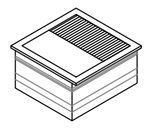

H 4PCS

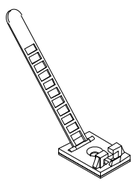


To prevent the power adapter from being damaged and from loosening, please use a pull strap to secure the cable.

step 41

CC 1 PC




M8*16

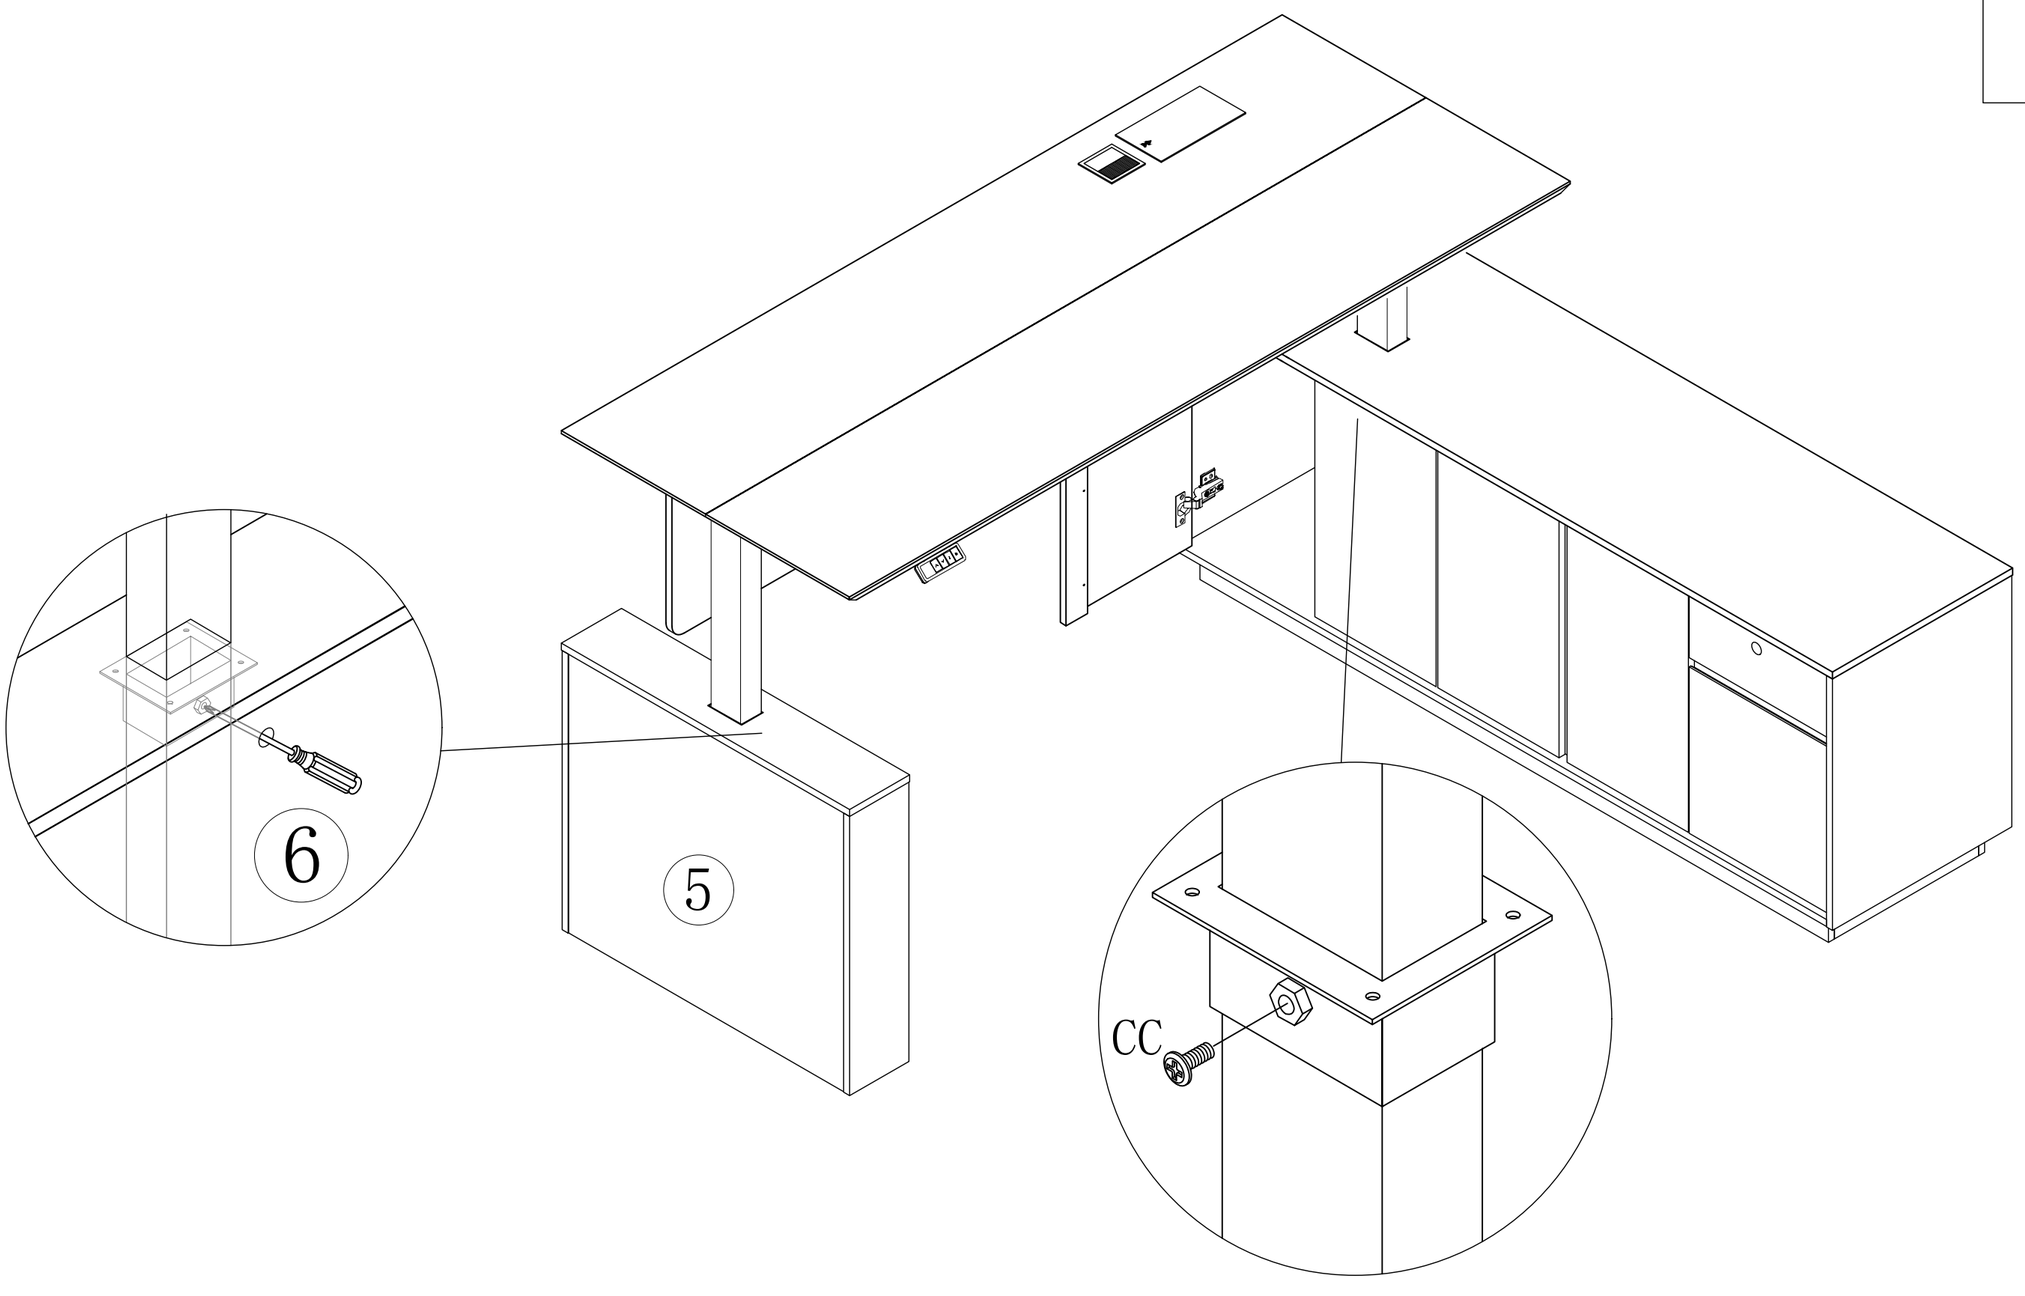

ASSEMBLY INSTRUCTION

step 42

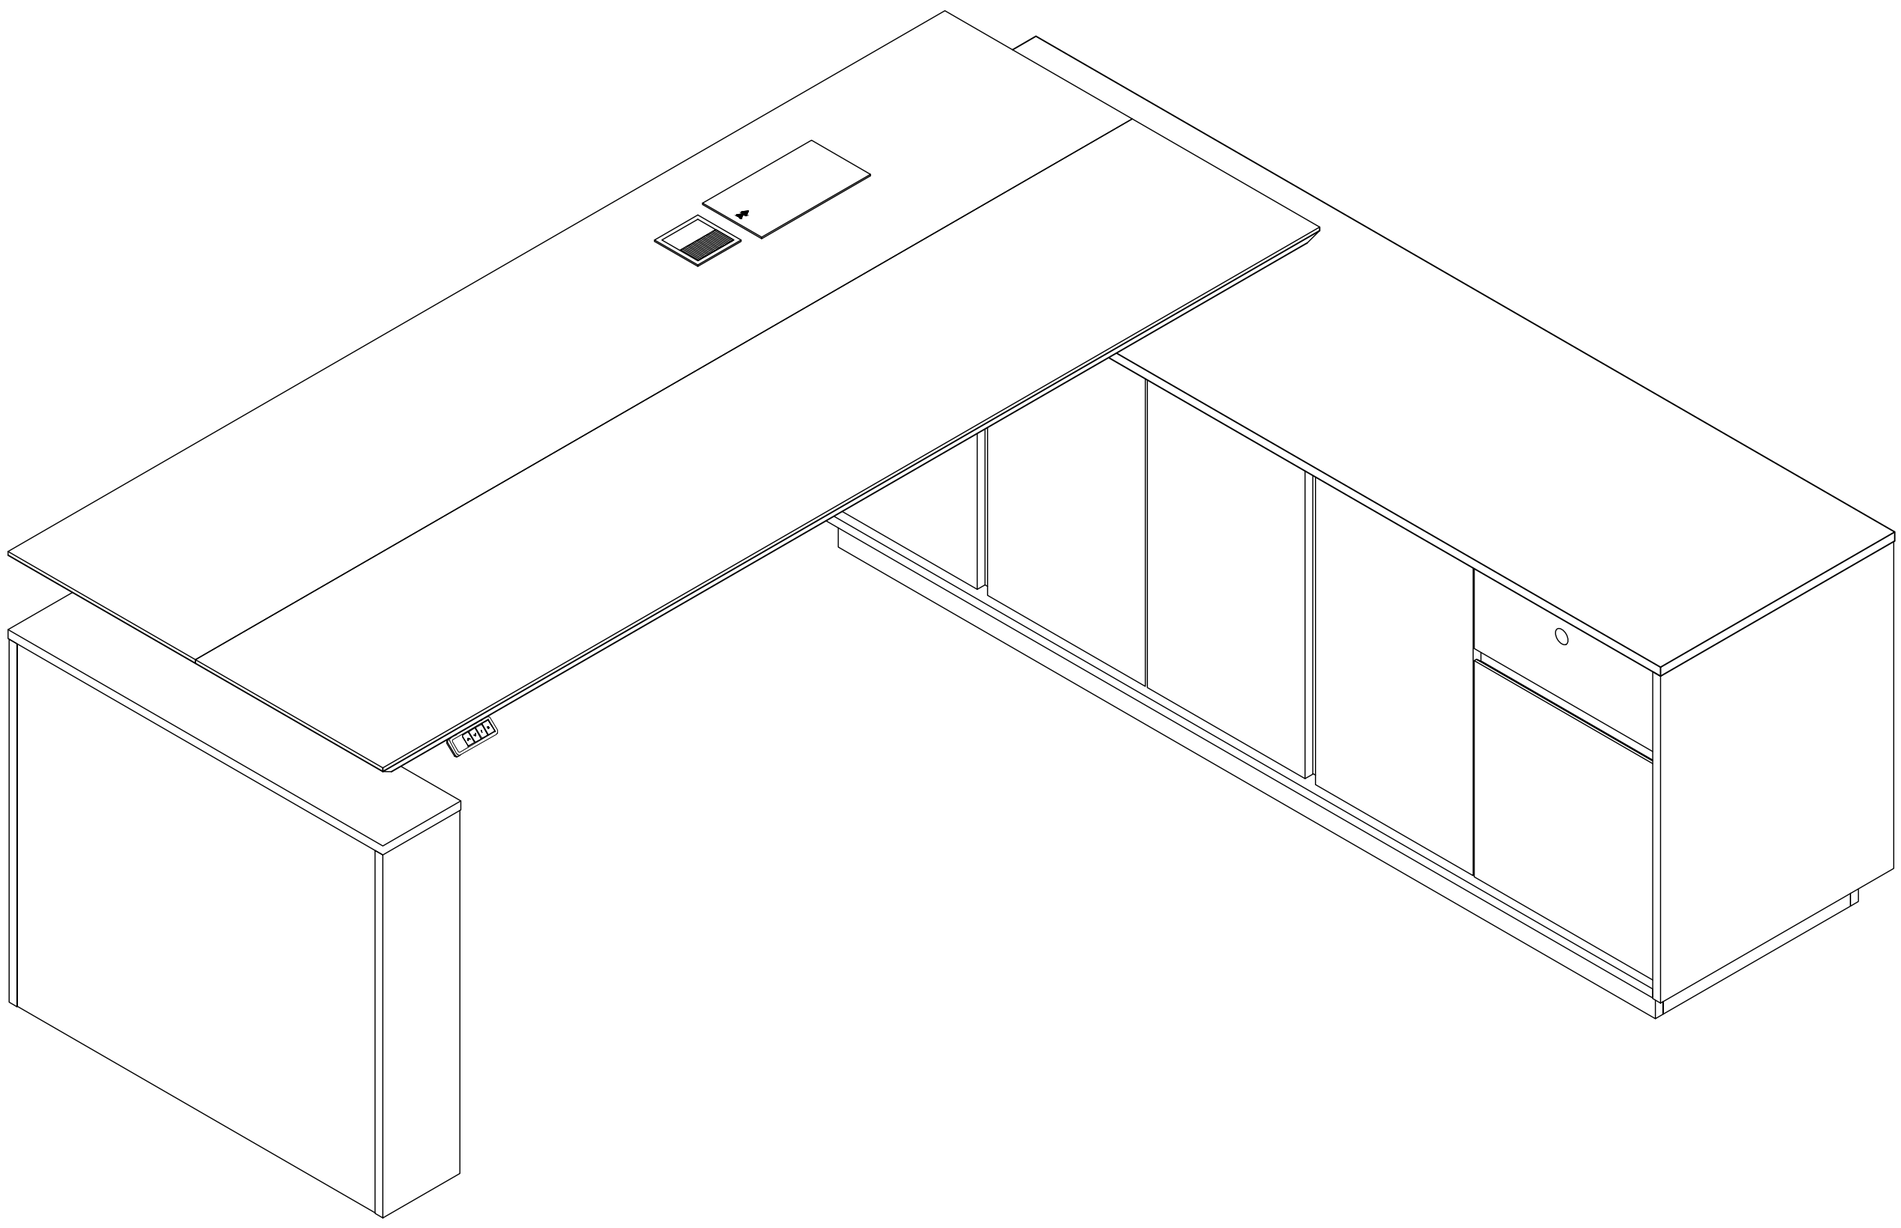

OK

ASSEMBLY INSTRUCTION

Instruction Manual for JCB35M51C Controller (Version 1.0-English)


System Function Description:

1. Lifting and Lowering Function of the Height-Adjustable Desk:

Hold down the upward button, and the column will rise; hold down the downward button, and the column will lower. Release the button, and the movement will stop.

2. Memory Position Function:

Long press the "①/②" button for 3 seconds until the digital tube display flashes. After the number flashes 3 times and stops, the current height will be successfully stored in the corresponding memory position. Short press the "①/②" button and release it, and the tabletop will automatically move to the height of the memory position. During operation, pressing any button can stop the movement.

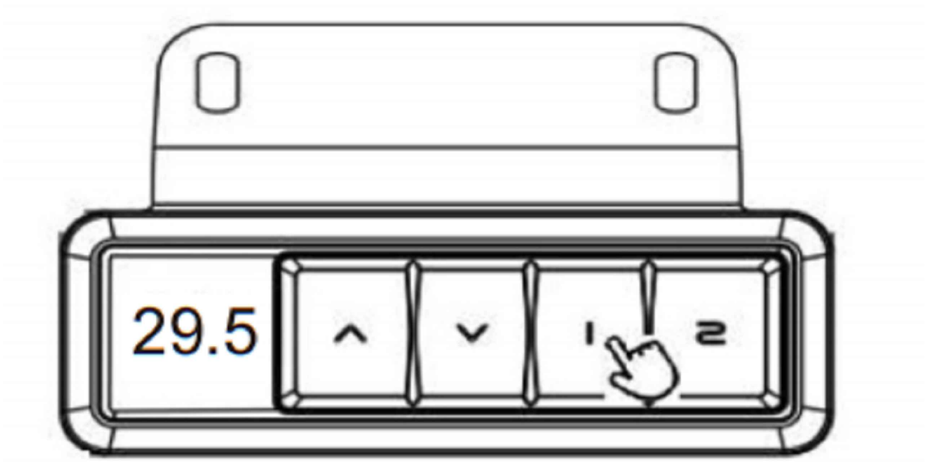

3. Reset Function:

(1) Function Description:

The system needs to be reset under specific circumstances.

These circumstances include:

① When used for the first time, the system will enter the reset state after being powered on.

② Active reset will put the system into the reset state.

③ A system abnormality will cause the system to enter the reset state.

(2) Operation Method:

Bottom Reset: Hold down the downward button until it reaches the bottom. Then release the button, and press the downward button again for 5 seconds— the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.

