FLEXSTEEL®

RAF Power Recliner with Power Headrest, Heat & Massage

#6

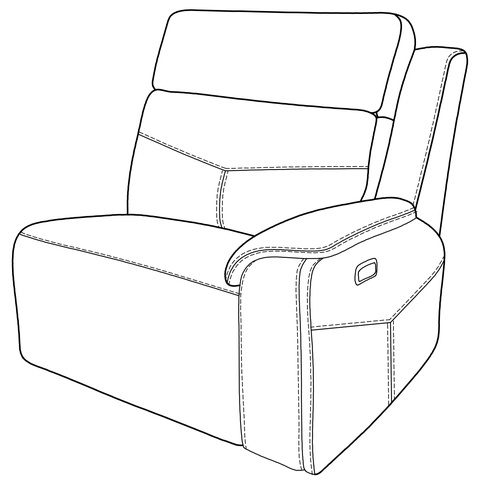

IMPORTANT NOTE

Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

Part List

A. Back
1 piece

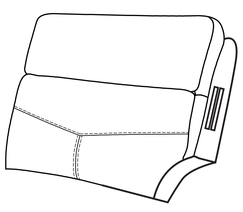

B. Wing
1 piece



C. Seat
1 piece

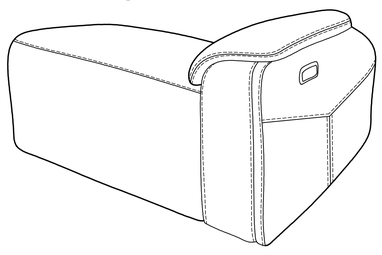

D. Transformer
1 piece

E. AC Power Cable
1 piece

Assembly Instructions

STEP 1

Detach the Transformer (D), AC Power Cable (E) and Wing (B) from the bottom of the Seat (C). (See Figure 1.)

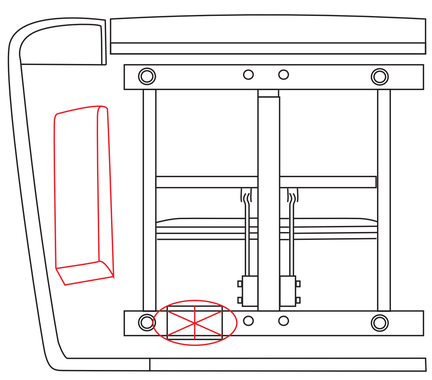

Figure 1

STEP 2

Attach the Back (A) to the Seat (C) and the Wing (B) to the Back (A). Ensure the latches fit well.
Flip up the back flaps, connect the headrest cable and massage tube. (See Figure 2.)

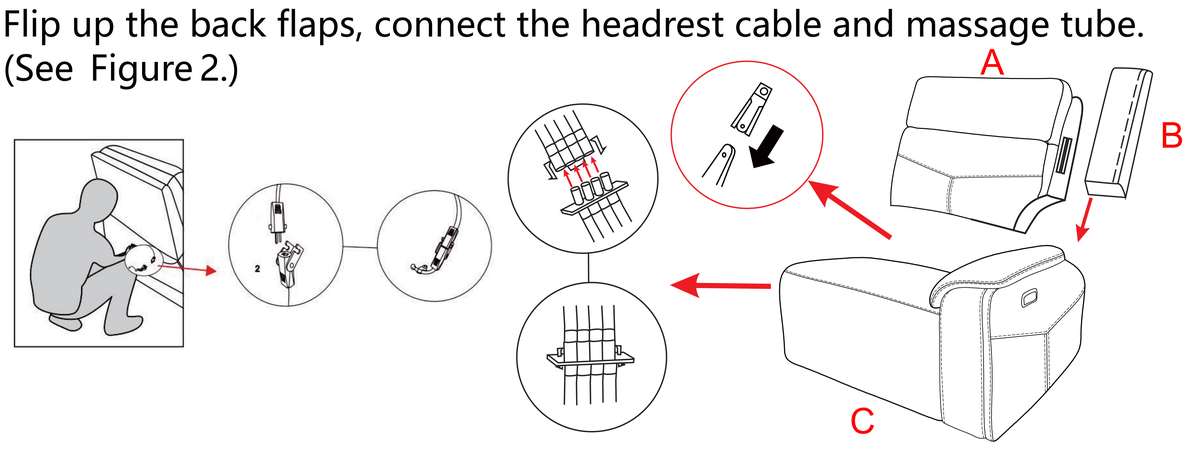

Figure 2

STEP 3

Zip the fabric on bottom of Back (A) with back of Seat (C). (See Figure 3.)

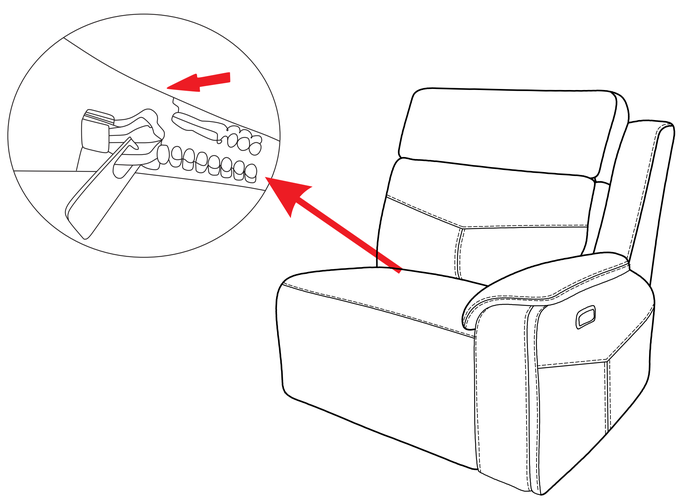

Figure 3

STEP 4

Begin sectional connection by placing the piece #1 in desired location in the room.
Then start sectional connection by placing #2 into piece #1.
Continue sectional connection with piece #3 thru #6 following the same method described above. (See Figure 4.)

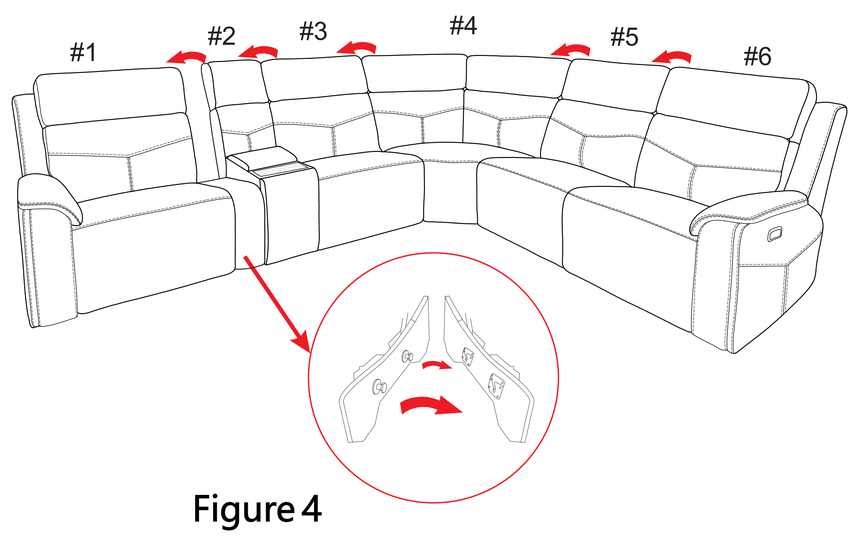

Figure 4

STEP 5

Connect the base motor cable and AC Power Cable to the Transformer for piece #1 & #6.
Connect the base motor cable to the Transformer for piece #5.
Connect the wireless charge cable to the Transformer for piece #2.
Plug the transformers into nearby outlets.
(See Figure 5.)

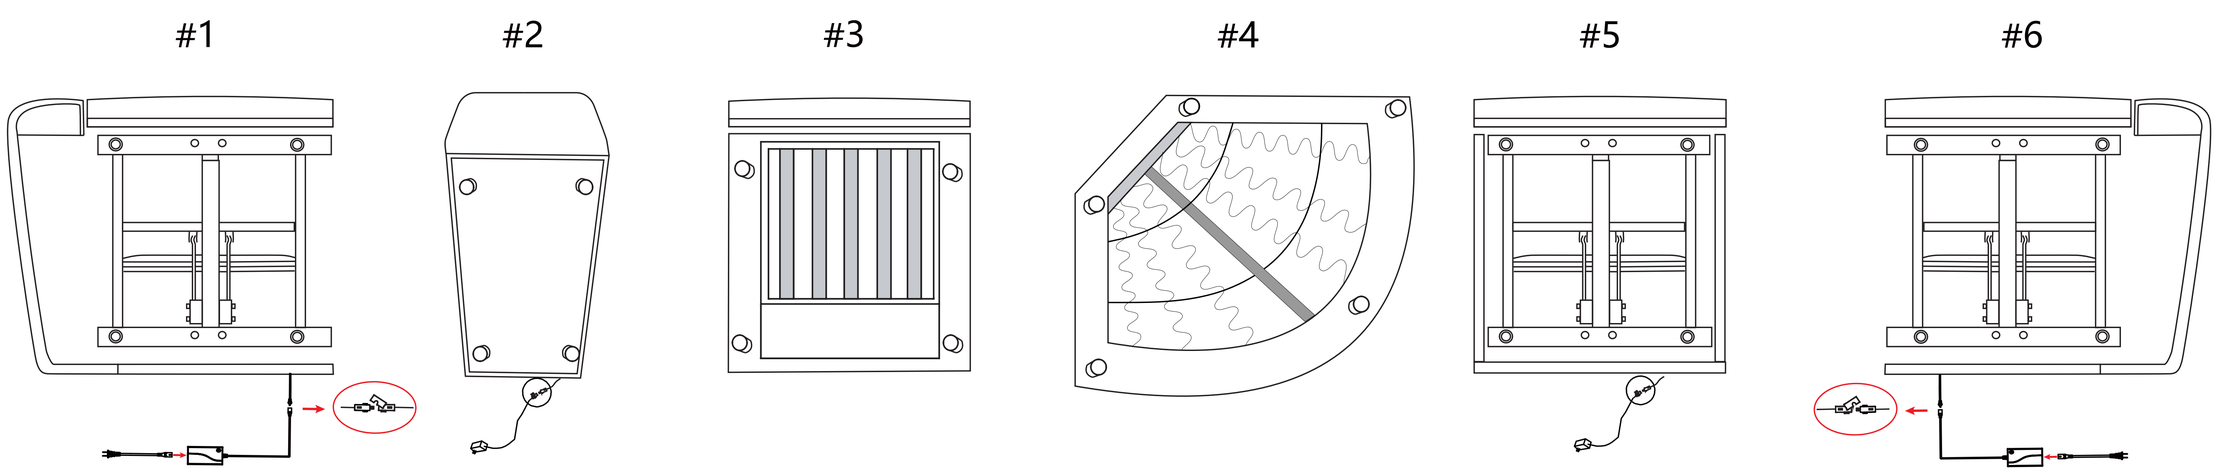

Figure 5

STEP 6

Fasten the back flaps to the bottom of the furniture. (See Figure 6.)

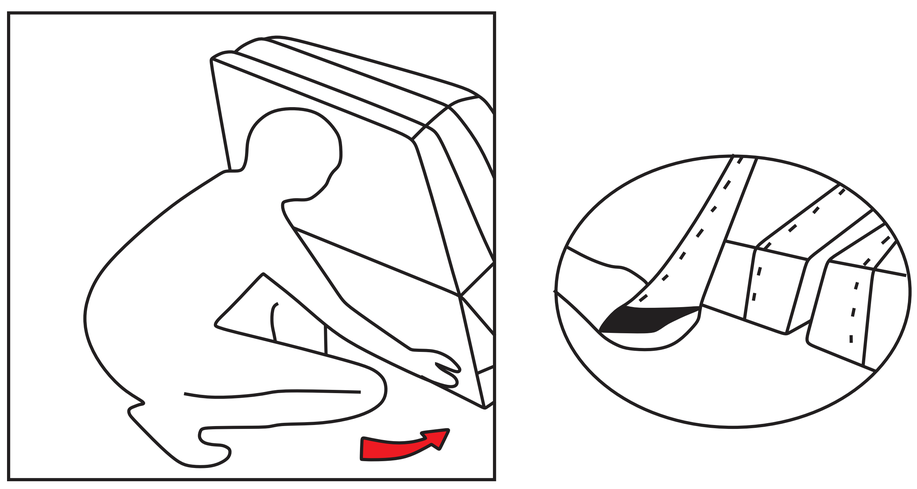

Figure 6

Disassembly Instructions

Unzip the zipper between Back (A) and Seat (C), then disconnect the headrest cable and massage tubes behind the back flap.
Pull up the spring leaf in bracket, then lift Back (A) up. (See Figure 7.)

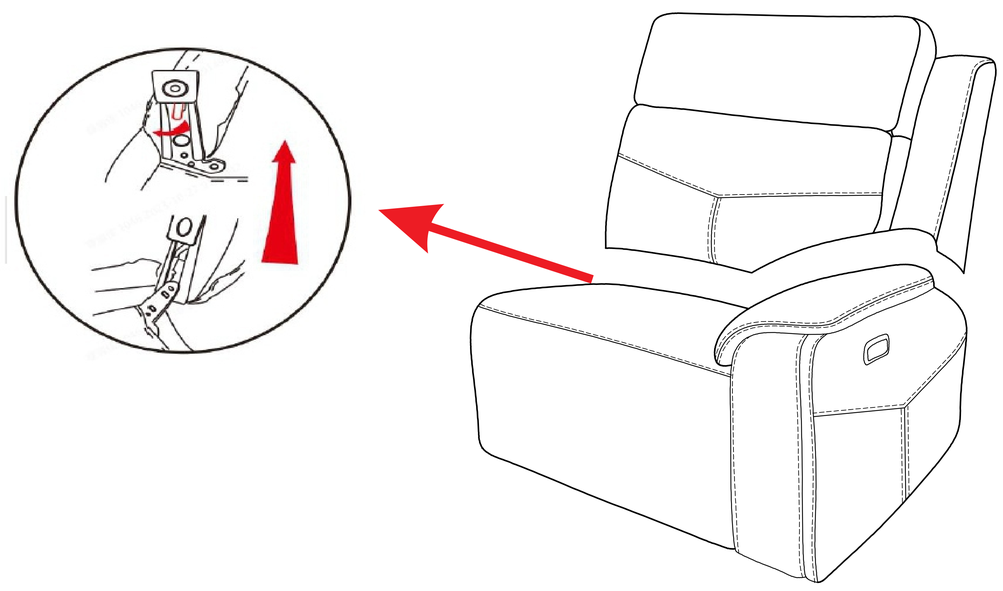

Figure 7

Hidden Cup Holder

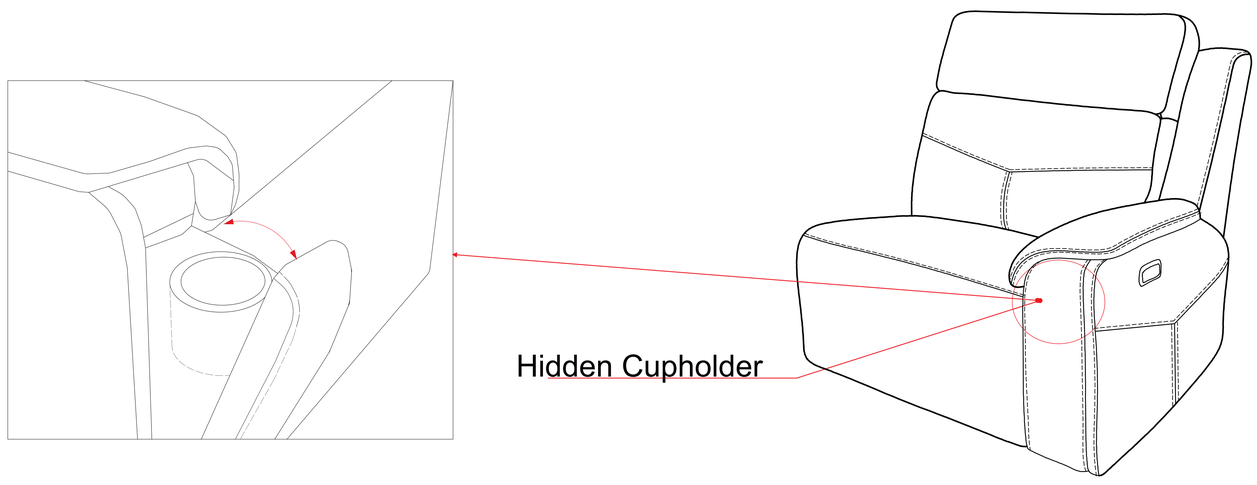

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.

FLEXSTEEL®

Armless Power Recliner with Power Headrest & Lumbar

#5

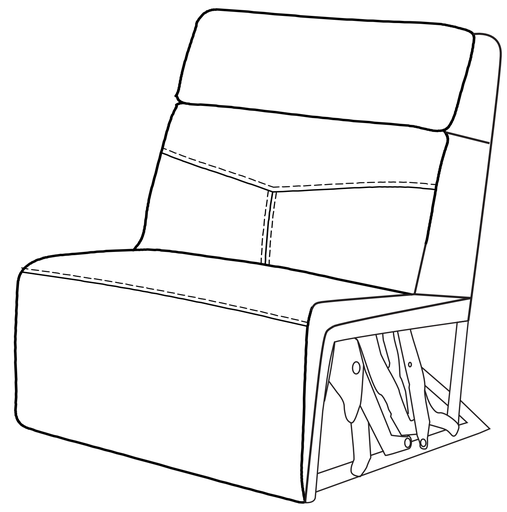

IMPORTANT NOTE

Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

Part List

A. Back
1 piece

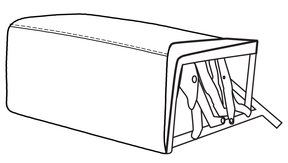

B. Seat
1 piece

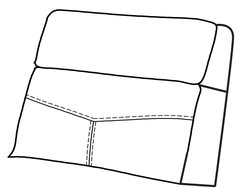

C. Transformer
1 piece

Assembly Instructions

STEP 1

Detach the Transformer (C), from the bottom of the Seat. Attach the Back (A) to the Seat (B). Ensure the latches fit well. (See Figure 1.)

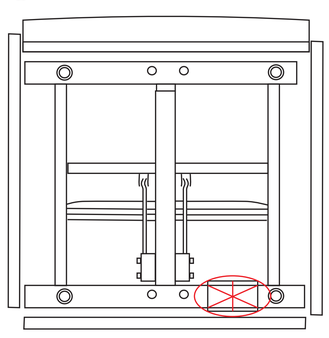

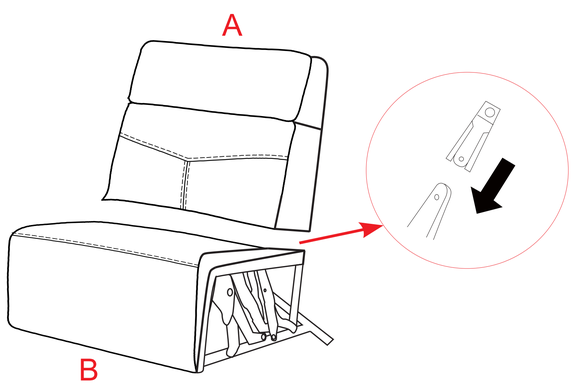

Figure 1

STEP 2

Flip up the back flap, connect the headrest and lumbar cables. (See Figure 2.)

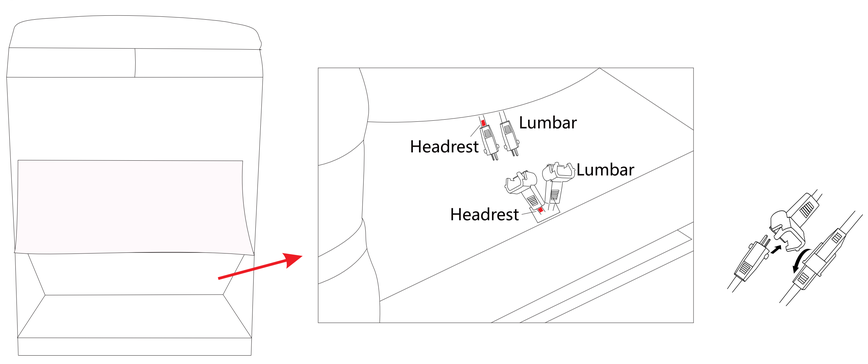

Figure 2

STEP 3

Zip the fabric on bottom of Back (A) with back of Seat (B). (See Figure 3.)

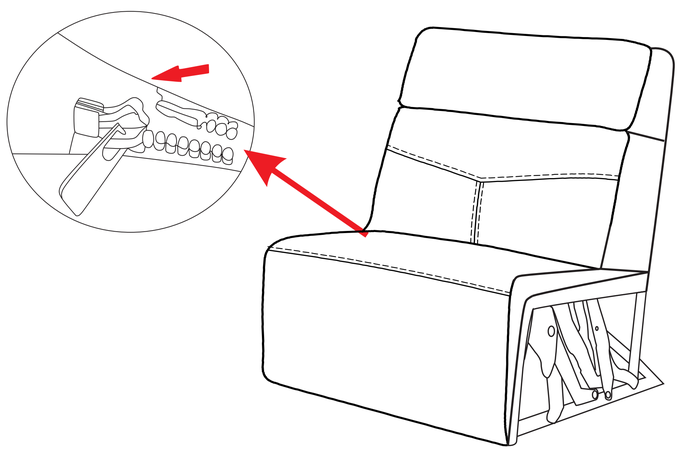

Figure 3

STEP 4

Begin sectional connection by placing the piece #1 in desired location in the room. Then start sectional connection by placing #2 into piece #1. Continue sectional connection with piece #3 thru #6 following the same method described above. (See Figure 4.)

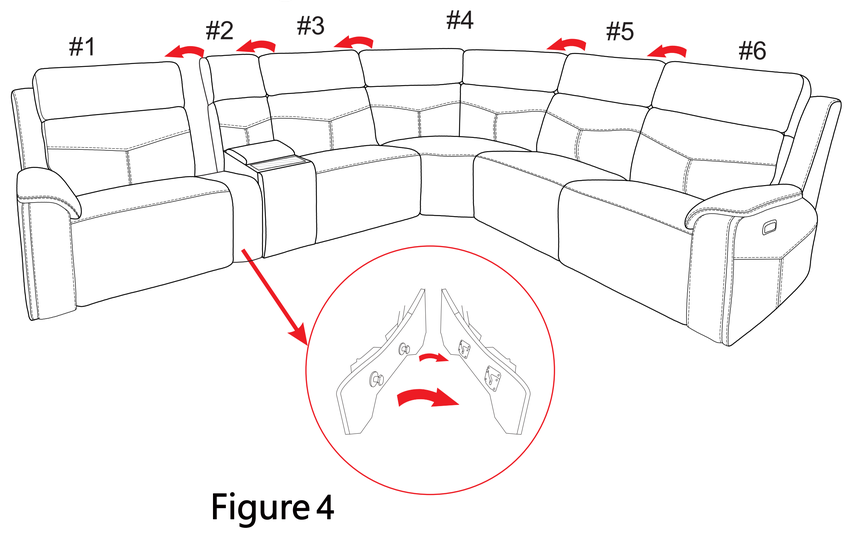

Figure 4

STEP 5

Connect the base motor cable and AC Power Cable to the Transformer for piece #1 & #6.
Connect the base motor cable to the Transformer for piece #5.
Connect the wireless charge cable to the Transformer for piece #2.
Plug the transformers into nearby outlets.
(See Figure 5.)

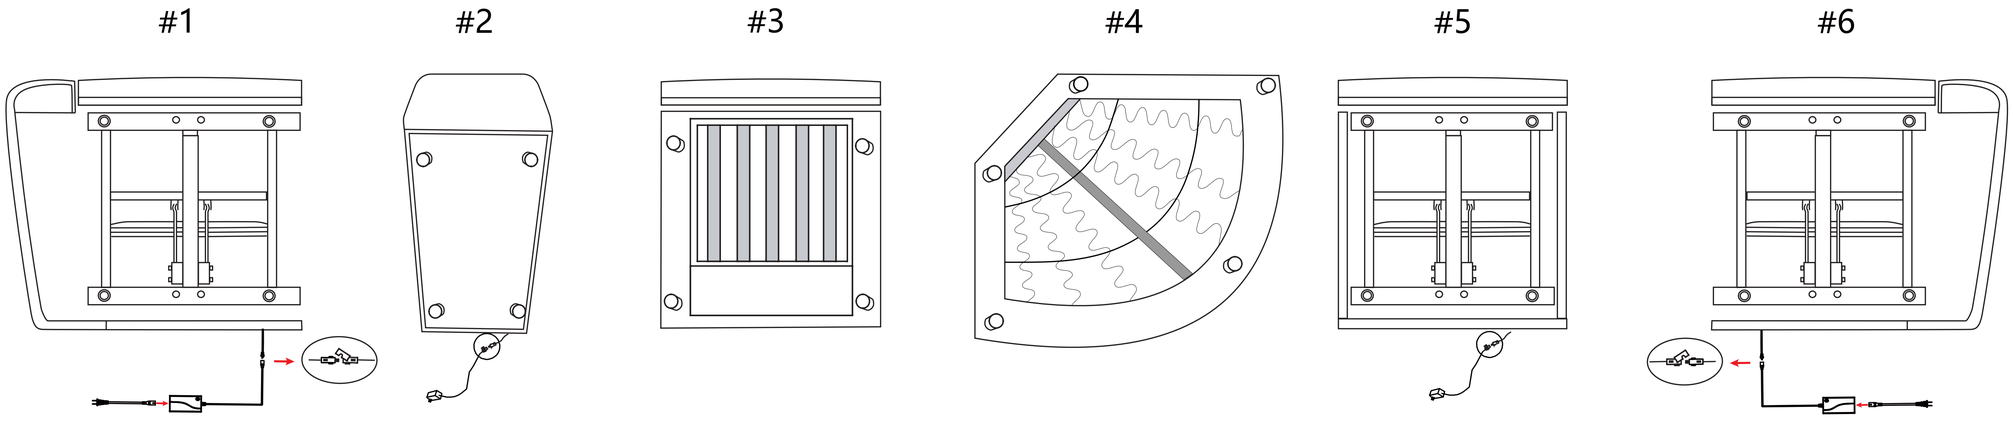

Figure 5

STEP 6

Fasten the back flaps to the bottom of the furniture. (See Figure 6.)

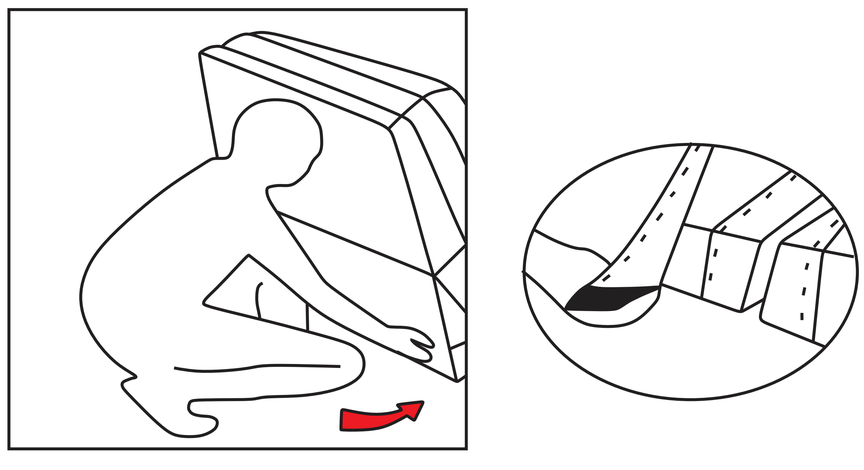

Figure 6

Disassembly Instructions

Unzip the zipper between Back (A) and Seat (B), then disconnect the headrest cable and massage tubes behind the back flap.
Pull up the spring leaf in bracket, then lift Back (A) up. (See Figure 7.)

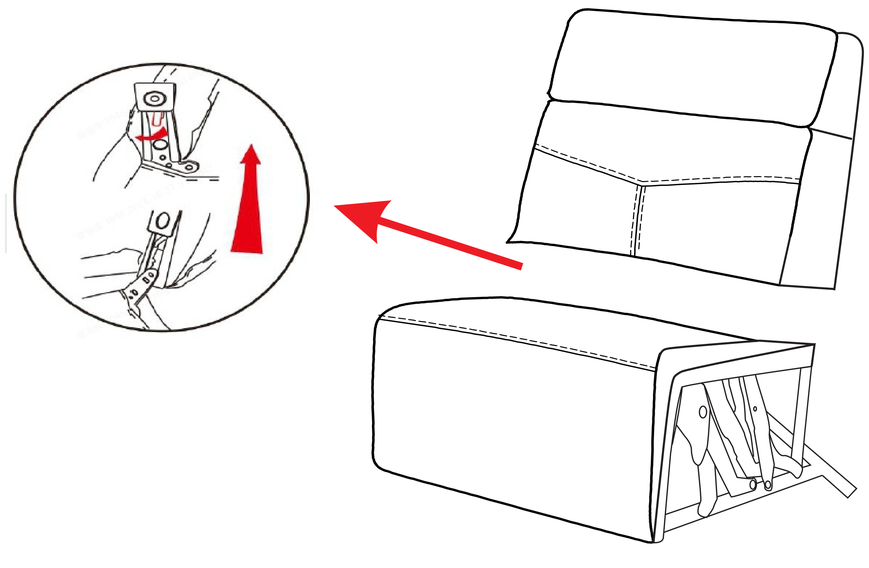

Figure 7

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.

FLEXSTEEL®

Wedge

#4

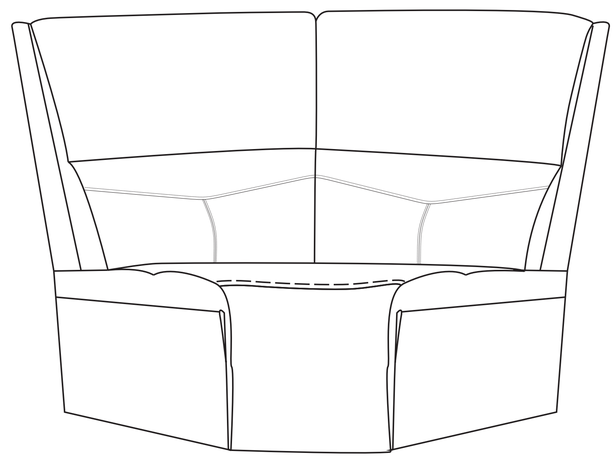

IMPORTANT NOTE

Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

Part List

A. Left Back
1 piece

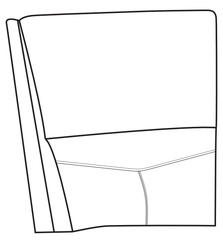

B. Right Back
1 piece

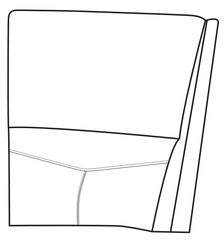

C. Seat
1 piece

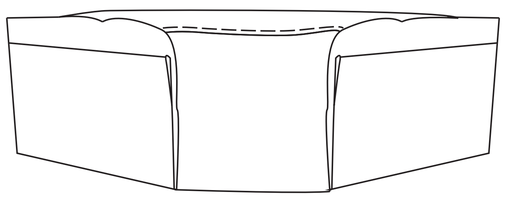

D. Plastic Feet
5 pieces

Assembly Instructions

STEP 1

Attach the Plastic Feet (D) to the bottom of the Seat (C) (See Figure 1.)

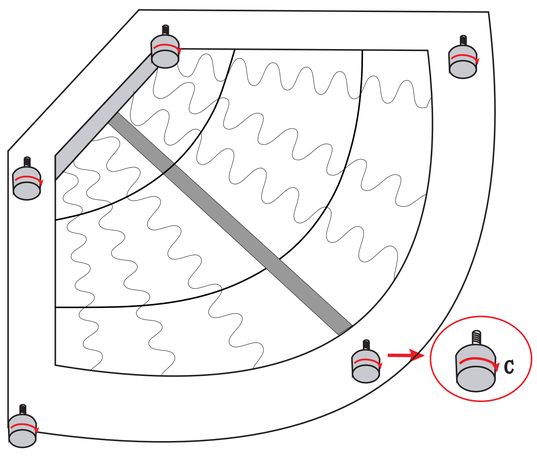

Figure 1

STEP 2

Attach the Backs (A B) to the Seat (C). Ensure the latches fit well. (See Figure 2.)

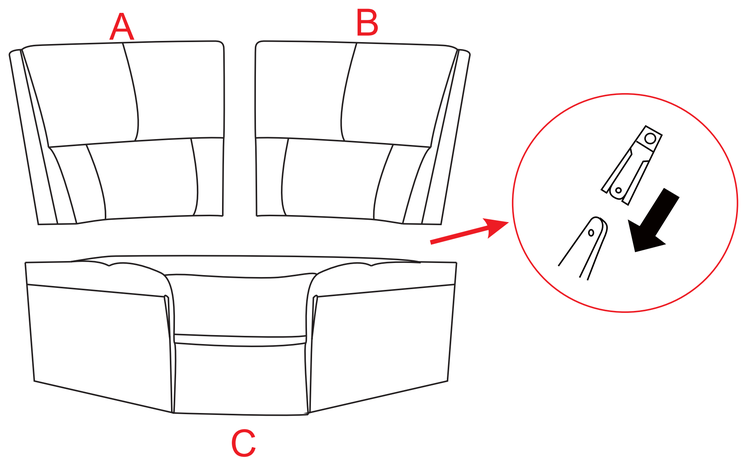

Figure 2

STEP 3

Begin sectional connection by placing the piece #1 in desired location in the room.
Then start sectional connection by placing #2 into piece #1.
Continue sectional connection with piece #3 thru #6 following the same method described above. (See Figure 3.)

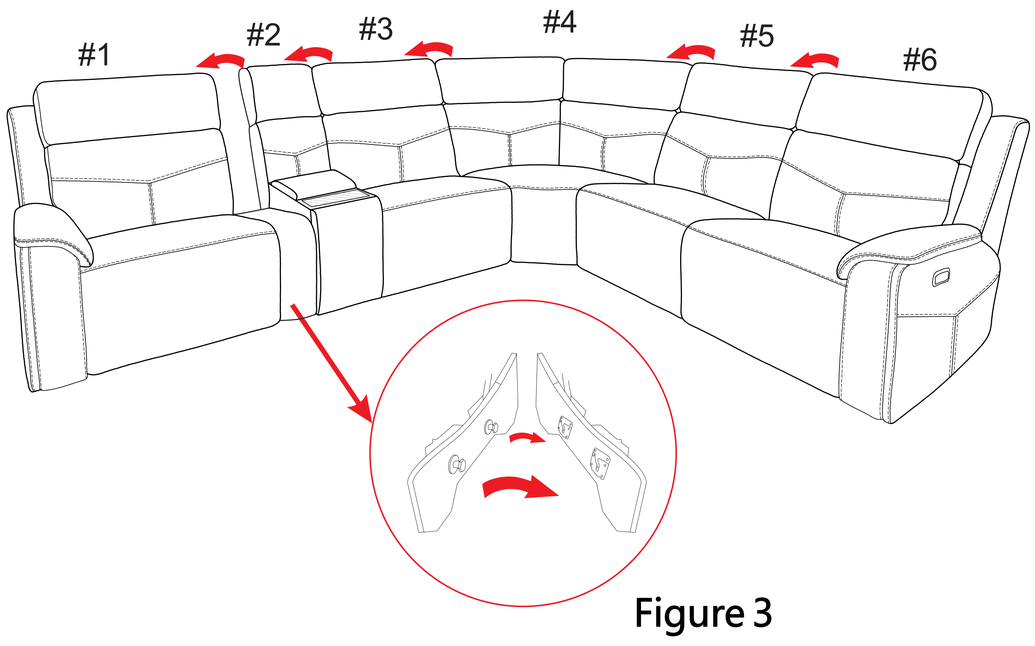

Figure 3

STEP 4

Connect the base motor cable and AC Power Cable to the Transformer for piece #1 & #6.
Connect the base motor cable to the Transformer for piece #5.
Connect the wireless charge cable to the Transformer for piece #2.
Plug the transformers into nearby outlets.
(See Figure 4.)

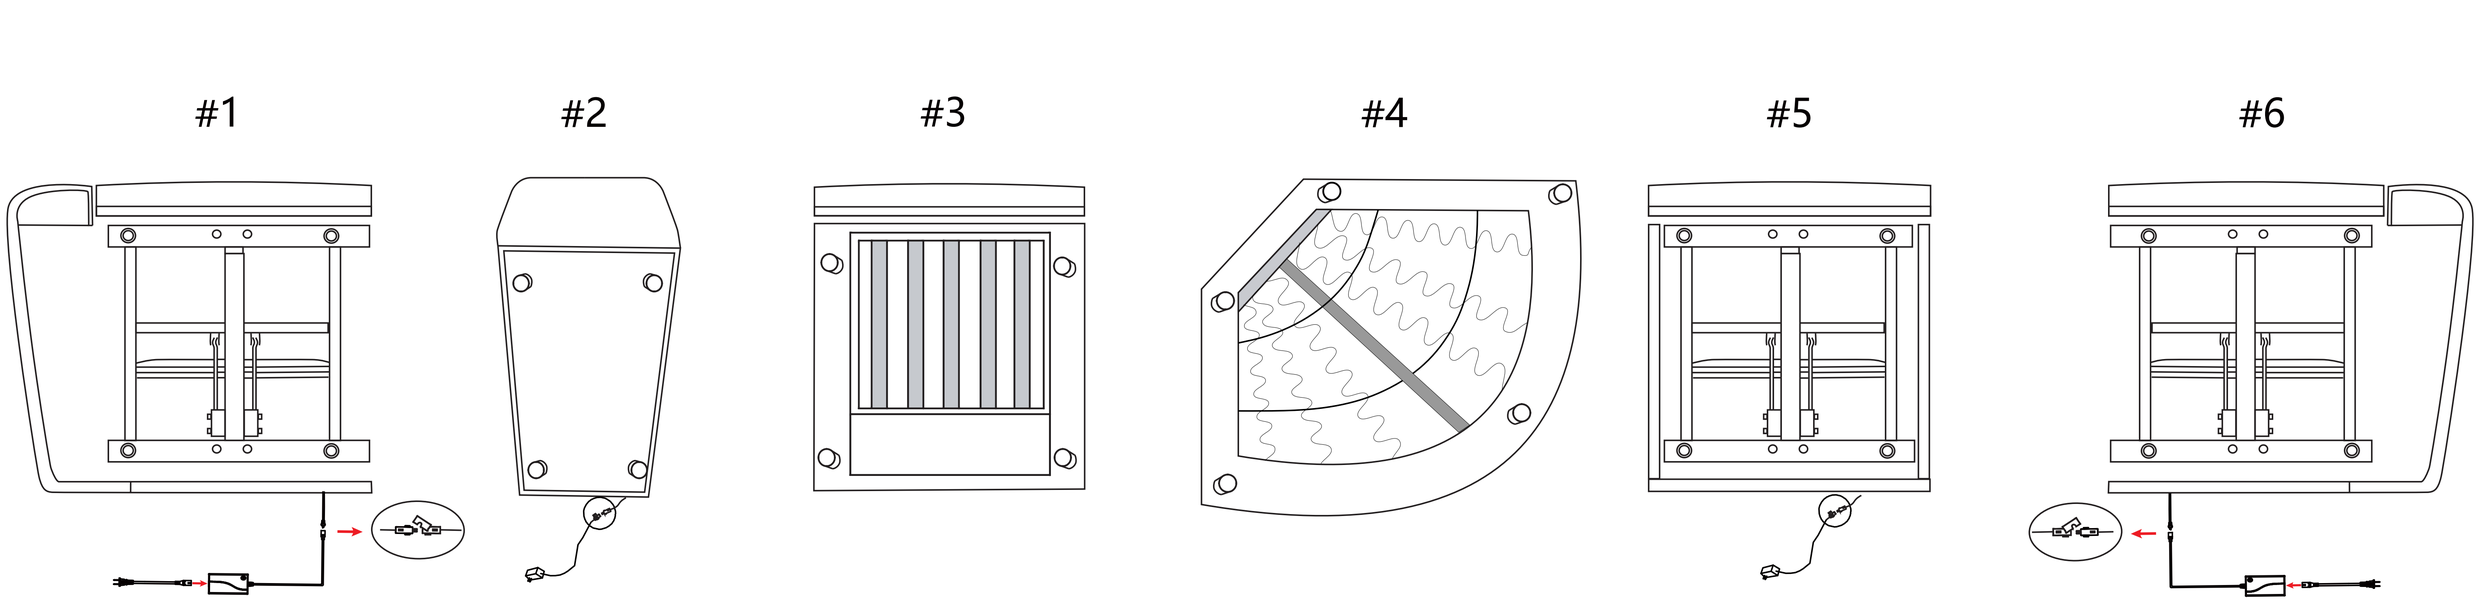

Figure 4

STEP 5

Fasten the back flaps to the bottom of the furniture. (See Figure 5.)

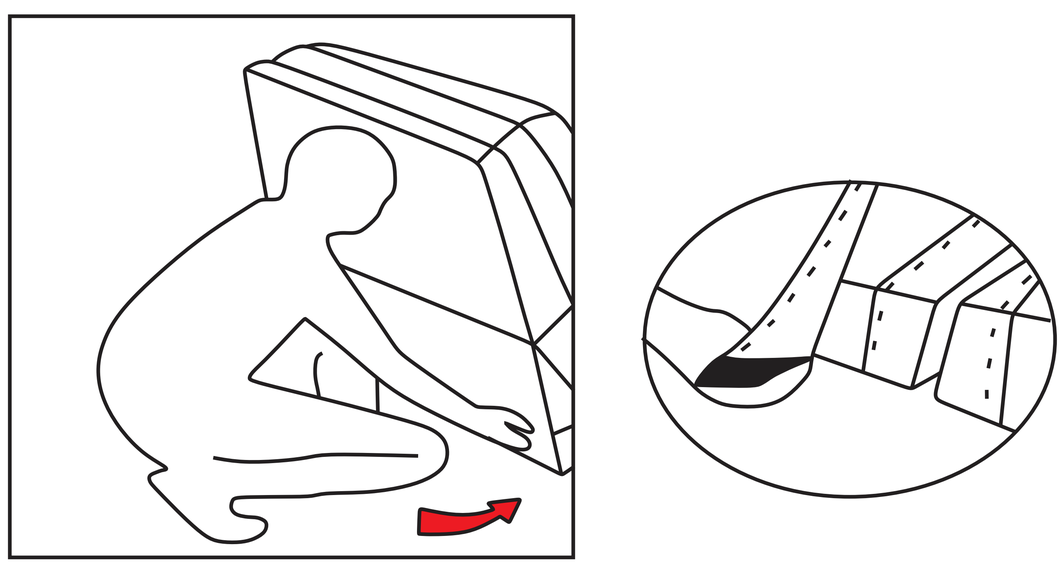

Figure 5

Disassembly Instructions

Pull up the spring leaf in bracket, then lift Backs (A B) up. (See Figure 6.)

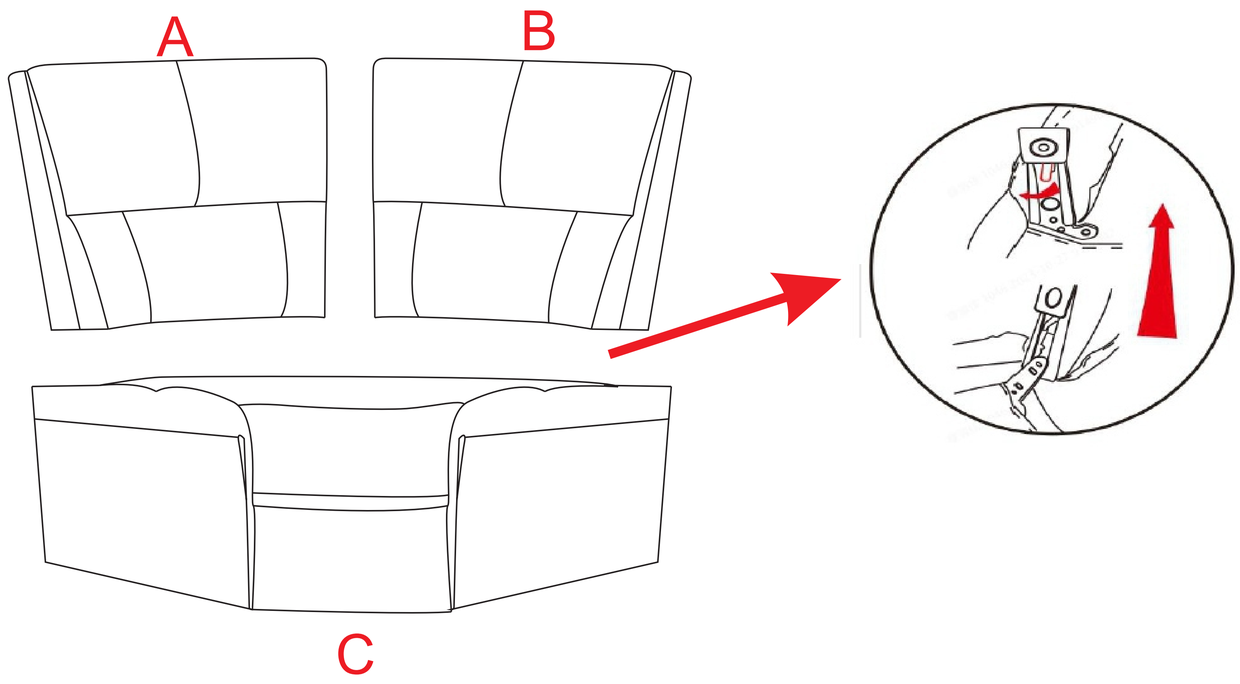

Figure 6

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.

FLEXSTEEL®

Armless Chair

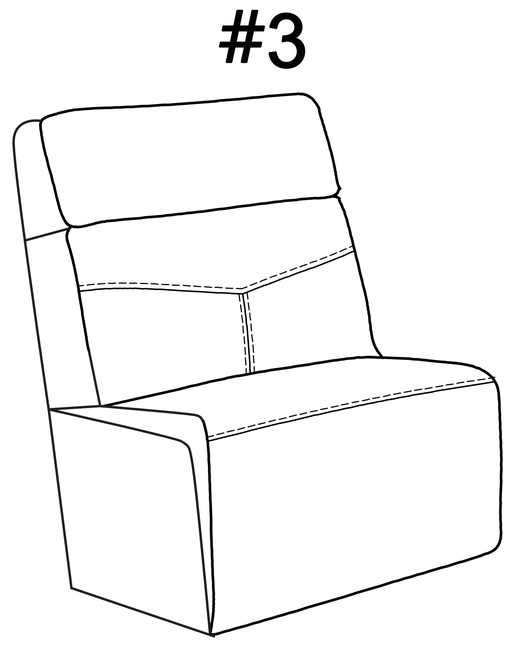

IMPORTANT NOTE
Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

Part List

A. Back
1 piece

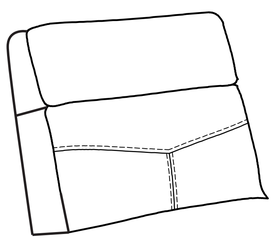

B. Seat
1 piece

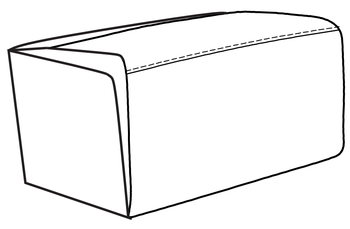

C. Plastic Feet
4 pieces

Assembly Instructions

STEP 1
Attach the Plastic Feet (C) to the bottom of the Seat (B) (See Figure 1.)

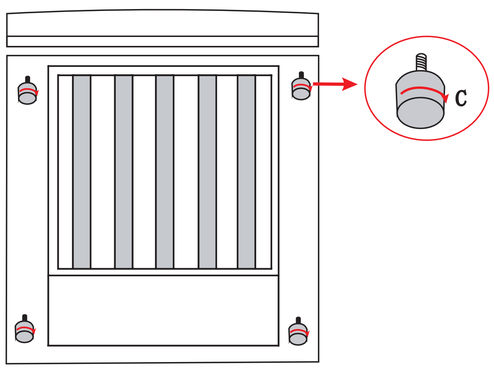

Figure 1

STEP 2
Attach the Back (A) to the Seat (B). Ensure the latches fit well. (See Figure 2.)

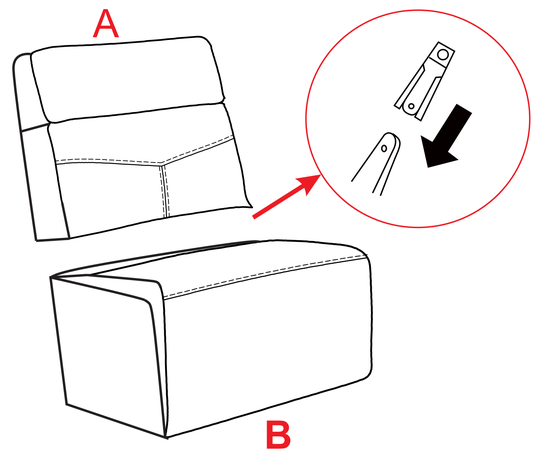

Figure 2

STEP 3
Begin sectional connection by placing the piece #1 in desired location in the room.
Then start sectional connection by placing #2 into piece #1.
Continue sectional connection with piece #3 thru #6 following the same method described above. (See Figure 3.)

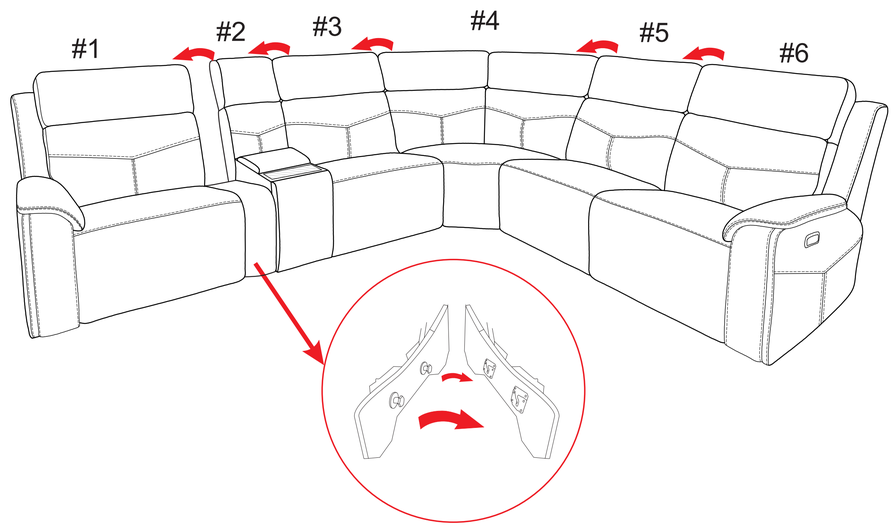

Figure 3

STEP 4
Connect the base motor cable and AC Power Cable to the Transformer for piece #1 & #6.
Connect the base motor cable to the Transformer for piece #5.
Connect the wireless charge cable to the Transformer for piece #2.
Plug the transformers into nearby outlets.
(See Figure 4.)

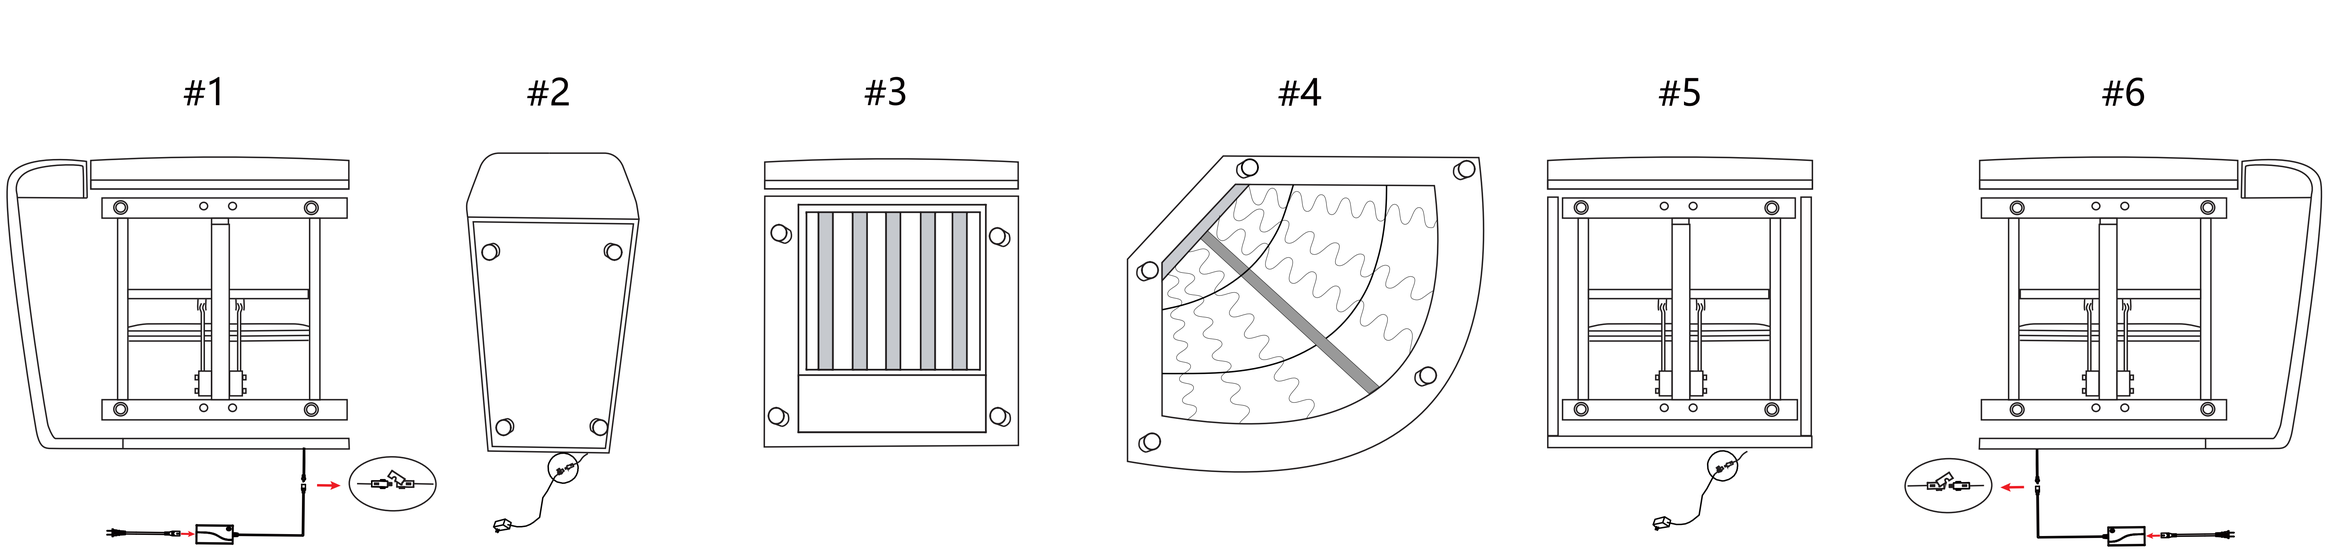

Figure 4

STEP 5

Fasten the back flaps to the bottom of the furniture. (See Figure 5.)

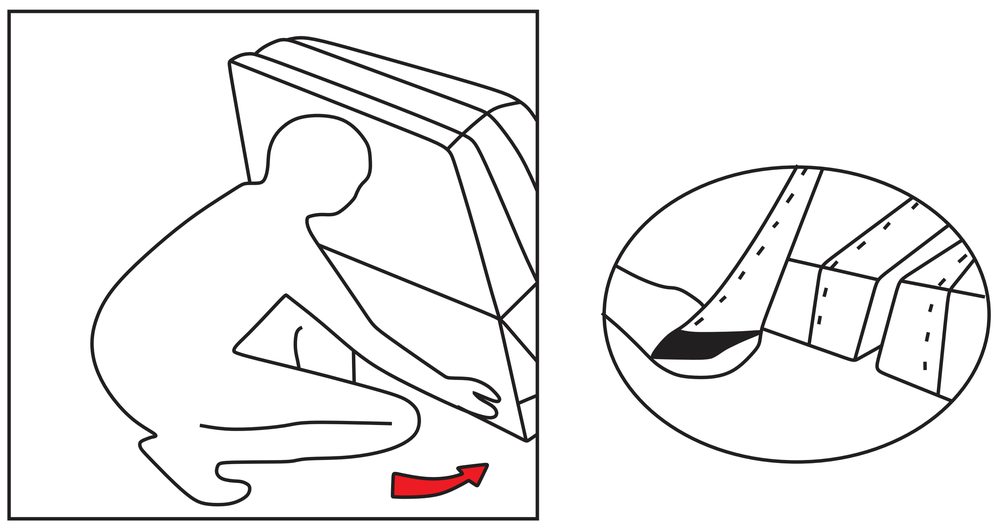

Figure 5

Disassembly Instructions

Pull up the spring leaf in bracket, then lift Back (A) up. (See Figure 6.)

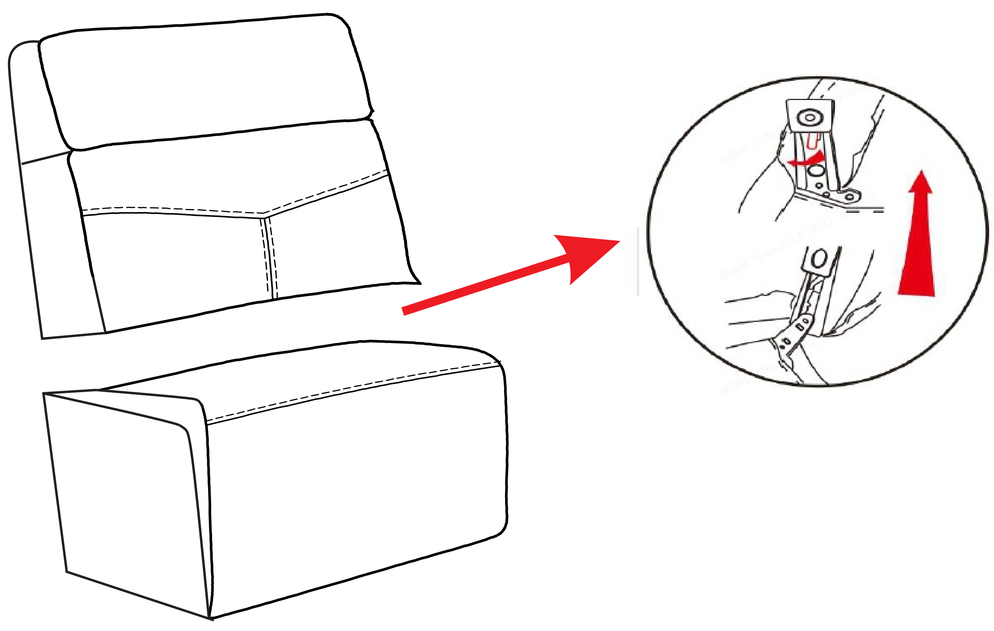

Figure 6

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.