
INSTRUCTIONS MANUAL

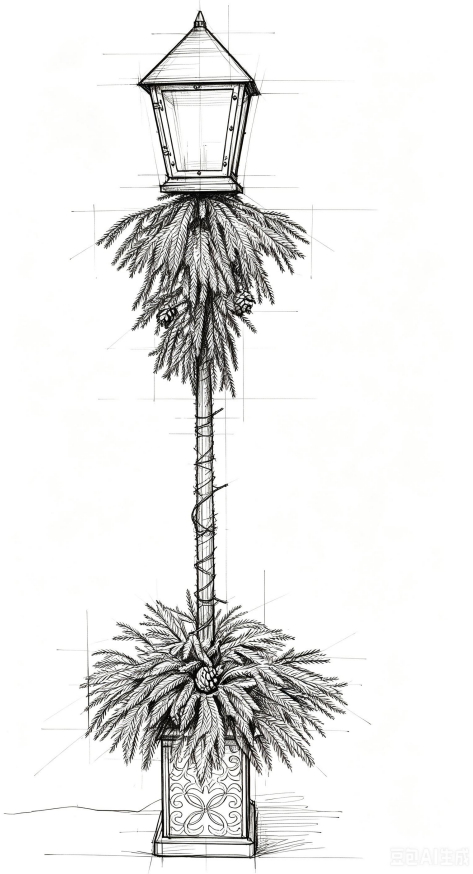

CHRISTMAS TREE

IF YOU PURCHASED THE PRODUCT ONLINE AND HAVE
ANY QUESTIONS OR CONCERNS
PLEASE CONTACT US VIA EMAIL,TEXT,OR PHONE

Date of Manufacture: 26W35

WARNINGS

⚠ **Keep children and pets away from the working area during assembly and adjustments.**

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.

3. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.

4. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.

WARRANTY

•WHAT IS COVERED?

•The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.

•Warranty: 180 DAYS.



•Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.

ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING - Risk of Fire and Electric Shock:

1. Read all instructions and warning tags included with this tree.
2. Do not place near barbeques, candles, outdoor heaters, or other similar sources of heat.
3. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
4. Disconnect tree's light sets from power before starting.
5. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
6. Do not press or grasp bulbs during assembly or installation.
7. Make sure final assembly stable enough to hold the tree upright.
8. Do not use candles on tree. Use only with the included mini lights.
9. Do not overload extension cords or power strips.
10. Always fully insert electrical plugs into a receptacle.
11. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small.
12. Risk of electric shock if bulbs are broken or missing.
13. The bulbs are non-replaceable.Do not interconnect components of this light string with those from light strings of other manufacturers.
14. Do not use the product under this condition.

Assembly Instructions

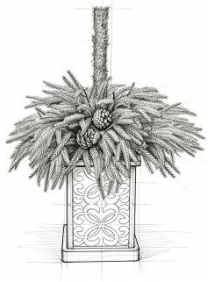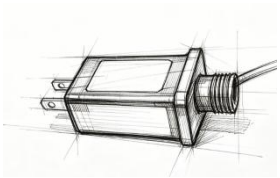1（Tree Tip）	2（Bottom Section）	3（Plug Adapter）
		

Assembly and Instruction Procedure:

Every carton should contain a top section and a bottom section (larger trees include middle sections).

This will depend on what model you have purchased. Also included is a base . Remove all Packaging (i.e. cardboard or plastic) before beginning.

Choose a location where the tree is to be displayed.

1. Connect all sections of the Christmas tree as shown in Figure 1.
2. **CONNECT THE LIGHT STRINGS BETWEEN SECTIONS**: Attach Part 3 (Plug Adapter) to the end of the power cord. Ensure all connections are secure.
3. Gently lower all main branches on tree sections (Figure 2).Take care not to place unnecessary pressure on the brackets when assembling. The branches on your tree can be adjusted to give tree the desired amount of fullness.
4. Plug tree lights into a power outlet.

YOUR TREE IS NOW READY TO ENJOY!



Figure 2

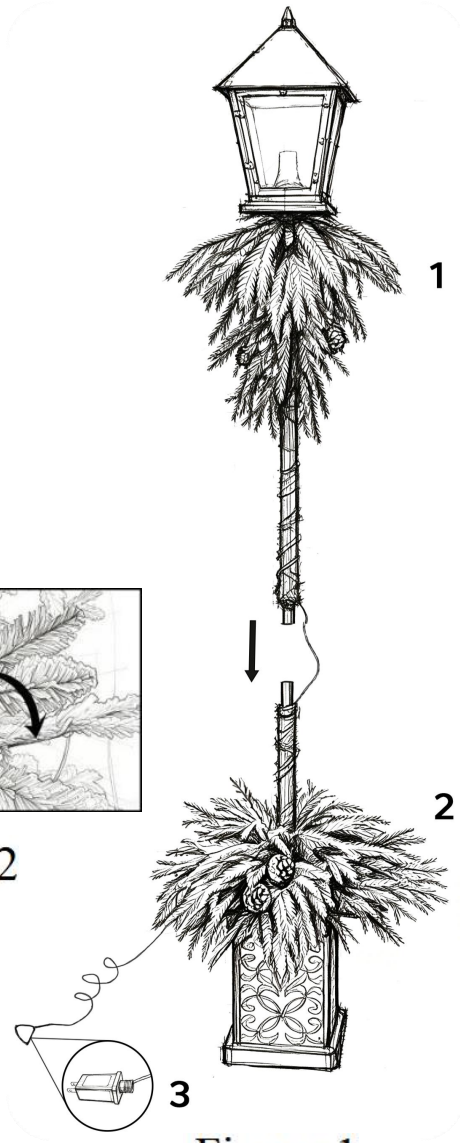


Figure 1

Storage Tips:

1. Warning - Disconnect power from the lights.
2. Remove all decorations.
3. Starting from the top, carefully remove branches. Press the tips back up against the stem.
4. Place the branch sections back into the carton, putting the longest one on the bottom.
5. Store The Product In a Cool, Dry Location Protected From Sunlight, Where The Temperature Does Not Exceed 104°F.