

# Hamilton Beach

## Electric Kettle Bouilloire électrique Hervidor eléctrica

Read before use / Lire avant utilisation / Lea antes de usar

For recipes, tips,  
product information and  
registration:  
hamiltonbeach.com

Pour des recettes,  
des conseils, des  
renseignements sur le  
produit et l'enregistrement :  
hamiltonbeach.ca

Para recetas, consejos,  
información del producto  
y registro:  
hamiltonbeach.com.mx

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not touch hot surfaces or hot water. Use handles or knobs. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
5. To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
6. Unplug from outlet when kettle is not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
8. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or personal injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. Do not place electric kettle on or near a hot gas or electric burner or in a heated oven.
12. To disconnect electric kettle, turn any control to OFF (O) and then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
13. Do not use appliance for other than intended use.
14. Do not use for other than heating water. Other liquids or food will contaminate the interior and void warranty.
15. Do not allow kettle to boil dry.
16. To avoid circuit overload, do not operate another high-wattage appliance on the same circuit.
17. Heater may remain hot after the kettle is turned off.
18. **WARNING:** If the kettle is overfilled, boiling water may be ejected.
19. **WARNING:** Scalding may occur if the lid is opened during the heating cycle.
20. Be certain kettle lid is securely in place during operation and when pouring hot water. Do not use force when placing lid on kettle.
21. Use only the power base provided.
22. Do not clean glass with cleansers, steel wool pads, or other abrasive material.

## SAVE THESE INSTRUCTIONS

### Other Consumer Safety Information

This appliance is intended for household use only.


**▲ WARNING Electrical Shock Hazard:** This appliance is provided with a grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit into the outlet, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved

extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. The extension cord must be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.


To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

## Parts and Features

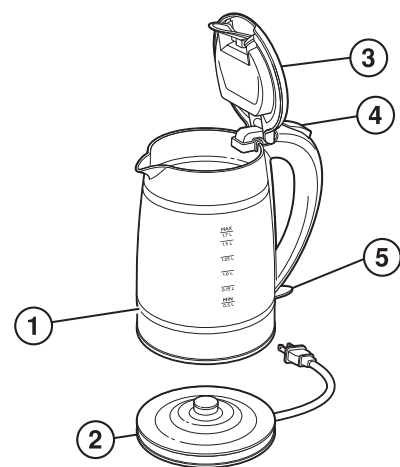

1. Water Temperature Indicator Light (located inside Kettle; see Chart)
2. Power Base with Cord Wrap Storage
3. Lid with Hinged Anti-Scale Nonremovable Mesh Filter
4. Lid-Opening Button
5. ON (I)/OFF (O) Power Switch
6. Cord Wrap

To order parts, visit:  
hamiltonbeach.com/parts

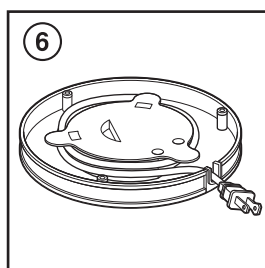

## How to Use

**▲ WARNING Burn Hazard.** Do not overfill kettle. Boiling water may spit out of the spout.

**Before first use:** Press Lid-Opening Button to lift Lid and fill Kettle with water to MAX fill line. Press Lid down until it locks in place. Place Kettle on Base; press Power Switch down to turn Kettle on. Kettle will bring water to a boil, then shut off automatically. Discard water and repeat 2 times, rinsing out Kettle each time. Kettle is now ready for use.

1. Press Lid-Opening Button to lift Lid and fill Kettle with desired amount of water. Do not fill above MAX 1.7 L fill line or below MIN 0.5 L fill line.
2. Press Lid down until it locks into place and place Kettle on Base.
3. Plug into outlet.
4. Press Power Switch down and purple Water Temperature Indicator Light

will illuminate when heating. Water Temperature Indicator Light located inside Kettle will change color as water heats. See chart for color of light and temperature of water. Kettle will automatically shut off when water has boiled and Power Switch will move up to OFF (O). Unplug.

### NOTES:

- Only use Kettle to heat water. If Kettle is used to heat other liquids, such as coffee or tea, the warranty will be voided.
- When filled past MIN 0.5 L fill line, Kettle will automatically shut off 30-90 seconds after water boils.

Color of Light	Temperature of Water
Purple	Below 113°F (45°C)
Blue	113°F–144°F (45°C–62°C)
Green	144°F–169°F (62°C–76°C)
Light Green	169°F–198°F (76°C–92°C)
Red	Above 198°F (92°C)

**NOTE:** These temperature settings can vary depending on a number of factors, such as altitude, impurities in water, and amount of water in Kettle. Actual temperature may differ by ±5° degrees.

### If Kettle Floor Discolors:

It is normal for stainless steel heating elements to discolor. This does not affect the performance of Kettle. Do not use abrasive scouring pads or cleaners since this may damage the stainless steel surface.

### If Kettle Boils Dry:

The heating element is protected by two automatic safety devices. If your Kettle is accidentally switched on without being filled with water, or is allowed to boil dry, Kettle will automatically switch off. You should:

- Lift Power Switch up to turn OFF (O), unplug, and wait about 20 minutes for the element to cool down.
- Refill Kettle; then use as normal and check that Kettle functions correctly.

### Kettle Shutoff:

This Kettle is designed to automatically shut off 30 to 90 seconds after water boils.

### If Kettle Does Not Work:

Make these simple checks before visiting hamiltonbeach.com:

- Have you turned Power Switch down to ON (I) position?
- If Kettle heats but does not boil, it might need descaling.
- Has Kettle been accidentally switched on without being filled with water or allowed to boil dry? Lift Power Switch to turn OFF (O), wait 20 minutes, and try again.
- Is cord firmly plugged into the outlet and Kettle firmly seated in Base?

### Anti-Scale Nonremovable Mesh Filter:

Scale is caused by lime and calcium in hard water. Mesh Filter will prevent these suspended particles from being poured out of Kettle. Filter should be cleaned periodically to ensure optimum performance. To clean Nonremovable Filter, unplug Kettle and allow to cool. Rinse Filter under running water and brush with a soft brush. An old, clean toothbrush works well.

Temperature & Tea Guide		
TYPE	TEMP. °F	TIME
Delicate Tea	160°	2 minutes
Green Tea	175°	1–3 minutes
White Tea	180°	3–4 minutes
Oolong Tea, Hot Cocoa	190°	3–5 minutes
French Press Coffee	200°	3–4 minutes
Black Tea/Herbal Tea, Boil	212°	5 minutes

## Care and Cleaning

**▲ WARNING Electrical Shock Hazard.** Do not immerse kettle, power base, or plug in water or other liquid.

**▲ WARNING Burn Hazard.** Do not use abrasive scouring pads or powders since they may scratch the smooth surface of the kettle, causing the glass to break suddenly during use or cleaning.

**To remove discoloration or scale/lime deposit from inside bottom of Kettle:**

1. Unplug.
2. Pour 1 tablespoon white vinegar and 1/4 cup (59 mL) water into Kettle and let stand 10 minutes.  
OR  
Place 1/2 teaspoon (2.5 mL) cream of tartar (available in the spice aisle of grocery store) into Kettle. Then fill Kettle 1/2 full with water. Plug into outlet, press Power Switch down, and bring to boil. Lift Power Switch up to turn OFF. Unplug and let cool. Rinse several times with clean tap water.
3. Rub Kettle floor with a paper towel. Remove paper towel and vinegar.
4. Wash with soap and water, and then rinse and dry.  
**Tip:** To avoid scale/lime deposit buildup, empty Kettle after each use.
5. For easy storage, cord can be wrapped under Power Base.

## Limited Warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with our returning a product or component under this warranty to you. If the product or component is unavailable, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make warranty claim, do not return this appliance to the store. Please write Hamilton Beach Brands, Inc., Customer Service Department, 4421 Waterfront Dr., Glen Allen, VA 23060, or visit hamiltonbeach.com/customer-service in the U.S. or hamiltonbeach.ca/customer-service in Canada. For faster service, locate the model, type, and series numbers on your appliance.

## PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

1. Lire toutes les instructions.
2. Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
3. Une surveillance étroite est requise pour tout appareil utilisé par ou près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.
4. Ne pas toucher les surfaces chaudes ou l'eau bouillante/chaude. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les brûlures causées par les surfaces chaudes ou les déversements de liquide chaud.
5. Pour éviter le risque d'incendie, d'électrocution et les blessures, ne pas immerger le cordon, la fiche, la base d'alimentation ou la bouilloire électrique dans l'eau ou tout autre liquide.
6. Débrancher de la prise murale dès la fin de l'utilisation et avant le nettoyage. Laisser refroidir l'appareil avant d'installer ou de retirer des pièces et avant de le nettoyer.
7. Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Veuillez communiquer avec le

service à la clientèle pour obtenir de l'information concernant l'inspection, la réparation ou le réglage, comme précisé dans la garantie limitée.

8. L'utilisation d'accessoires non recommandés ou vendus par le fabricant de l'appareil peut provoquer un incendie, un choc électrique ou blesser quelqu'un.

9. Ne pas utiliser à l'extérieur.

10. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact entre le cordon et les surfaces chaudes, incluant la cuisinière.

11. Ne pas placer la bouilloire électrique sur ou près d'un brûleur chaud à gaz ou électrique ou dans un four chaud.

12. Pour débrancher la bouilloire, tourner toute commande à OFF (O/arrêt), puis déconnecter la fiche de la prise murale. Pour le débrancher, tenir la fiche et la retirer de la prise. Ne jamais tirer sur le cordon.

13. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.

14. Cet appareil n'est destiné qu'à faire bouillir l'eau. Bouillir d'autres types de liquide ou d'aliments contaminera l'intérieur de l'appareil et annulera la garantie.

15. Ne pas laisser l'eau de la bouilloire s'évaporer complètement.

16. Pour éviter la surchauffe d'un circuit électrique, ne pas brancher d'autre appareil de haute puissance sur le même circuit.

17. L'élément chauffant peut rester chaud une fois que la bouilloire est éteinte.

18. **AVERTISSEMENT :** Si la bouilloire est trop pleine, l'eau bouillante peut éclabousser.

19. **AVERTISSEMENT :** Il y a un risque de brûlure si le couvercle est ouvert durant le cycle de chauffage.

20. S'assurer que le couvercle de la bouilloire est bien fixé pendant l'utilisation et au moment de verser l'eau chaud. Ne pas utiliser la force pour

fixer le couvercle de la bouilloire.

21. N'utiliser que la base d'alimentation fournie.

22. Ne pas nettoyer le verre avec des nettoyants, des tampons d'acier ou autres matériaux abrasifs.

## CONSERVER CES INSTRUCTIONS

### Autres consignes de sécurité pour le consommateur

Cet appareil est destiné à un usage domestique uniquement.


**▲ AVERTISSEMENT Risque de choc électrique :** Cet appareil est fourni avec une fiche à prise de terre (3 broches) pour réduire le risque de choc électrique. La fiche ne tient que dans un sens dans une prise mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur. Si vous ne pouvez pas insérer la fiche dans la prise, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation

d'une rallonge approuvée est permise si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. La rallonge doit être du type à mise à la terre, à 3 fils. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.


Pour éviter la surcharge du circuit électrique, ne pas utiliser un autre appareil à haute puissance sur le même circuit que cet appareil.

## Pièces et caractéristiques

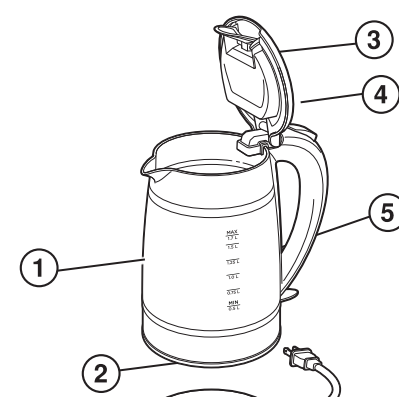

1. Voyant lumineux indiquant la température de l'eau (situé à l'intérieur de la bouilloire; consulter le tableau)
2. Base d'alimentation avec enrouleur de cordon pour le rangement
3. Couvercle à charnière avec filtre anti-tartre en maille non amovible
4. Bouton d'ouverture du couvercle
5. Interrupteur d'alimentation ON (I/marche)/OFF (O/arrêt)
6. Rembobineur de cordon

Pour commander des pièces, visiter :  
hamiltonbeach.ca/parts

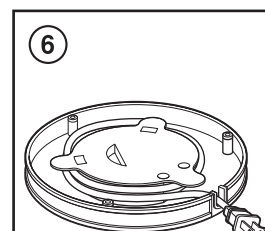

## Utilisation

**▲ AVERTISSEMENT Risque de brûlures.** Ne pas trop remplir la bouilloire. L'eau brûlante peut jaillir hors du bec.

**Avant la première utilisation :** Appuyer sur le bouton d'ouverture du couvercle pour l'ouvrir et remplir la bouilloire d'eau jusqu'à la ligne de remplissage MAX. Appuyer sur le couvercle jusqu'à ce qu'il se fixe en place. Placer la bouilloire sur la base et abaisser l'interrupteur d'alimentation pour la mettre en marche. La bouilloire portera l'eau à ébullition, puis s'éteindra automatiquement. Jeter l'eau et répéter l'opération deux fois en rinçant la bouilloire chaque fois. La bouilloire est maintenant prête à être utilisée.

1. Appuyer sur le bouton d'ouverture du couvercle pour l'ouvrir et remplir la bouilloire avec la quantité d'eau souhaitée. Ne pas la remplir au-delà de la ligne de remplissage MAX de 1,7 L ou en deçà de la ligne de remplissage MIN de 0,5 L.
2. Appuyer sur le couvercle jusqu'à ce qu'il se fixe en place et déposer la bouilloire sur la base.
3. Brancher à la prise de courant.
4. Abaisser l'interrupteur d'alimentation. Le voyant lumineux violet indiquant la

température de l'eau s'allumera durant le chauffage. La couleur du voyant lumineux indiquant la température de l'eau situé à l'intérieur de la bouilloire change à mesure que l'eau chauffe. Consulter le tableau pour connaître les couleurs du voyant et les températures de l'eau. La bouilloire s'éteint automatiquement une fois l'eau à ébullition et l'interrupteur d'alimentation passe en position OFF (O/arrêt). Débrancher.

### REMARQUES :

- N'utiliser la bouilloire que pour faire bouillir de l'eau. La garantie est annulée si la bouilloire est utilisée pour faire bouillir d'autres sortes de liquides comme le café ou le thé.
- Lorsque la bouilloire est remplie au-delà de la ligne de remplissage MIN de 0,5 L, elle s'éteindra automatiquement de 30 à 90 secondes après que l'eau ait bouilli.

Couleur du voyant	Température de l'eau
Violet	En dessous 45 °C (113 °F)
Bleu	45 °C à 62 °C (113 °F à 144 °F)
Vert	62 °C à 76 °C (144 °F à 169 °F)
Vert pâle	76 °C à 92 °C (169 °F à 198 °F)
Rouge	Au-dessus 92 °C (198 °F)

**REMARQUE :** Ces réglages de température peuvent varier en fonction d'un certain nombre de facteurs comme l'altitude, les impuretés présentes dans l'eau et la quantité d'eau dans la bouilloire. La température réelle peut différer de plus ou moins cinq degrés.

### Si le fond de la bouilloire se décolore :

L'acier inoxydable des éléments chauffants décoloré est normal. Ceci ne nuit pas au fonctionnement de la bouilloire. Ne pas utiliser de tampons à récurer ou nettoyants, car ils pourraient endommager la surface en acier inoxydable.

### Si la bouilloire a chauffé à vide :

L'élément chauffant est protégé par deux dispositifs de sécurité automatiques. Si votre bouilloire est allumée accidentellement et qu'elle ne contient pas d'eau, ou si l'eau est

