
DINING CHAIR

Read these instructions carefully.Ensure that all following listed parts are complete before assembling.

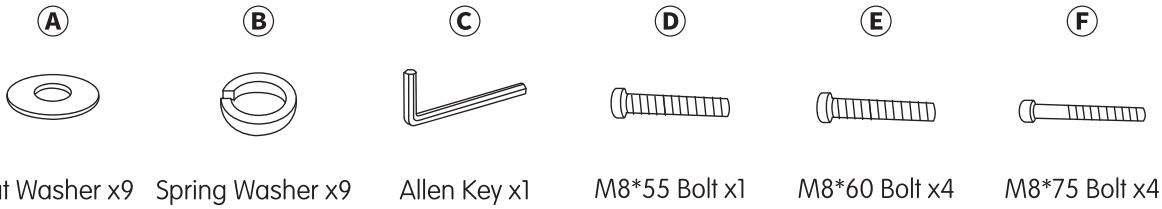

Flat Washer x9 | Spring Washer x9 | Allen Key x1 | M8*55 Bolt x1 | M8*60 Bolt x4 | M8*75 Bolt x4




Chair Back x1 | Chair Seat x1 | Front Leg x2



When operating the electric screwdriver, please exercise caution to prevent over-tightening, as it may result in stripped holes. Be mindful not to scratch any components during use.


Step 1


Peel off the fabric cover attached with Velcro from the bottom of the seat.

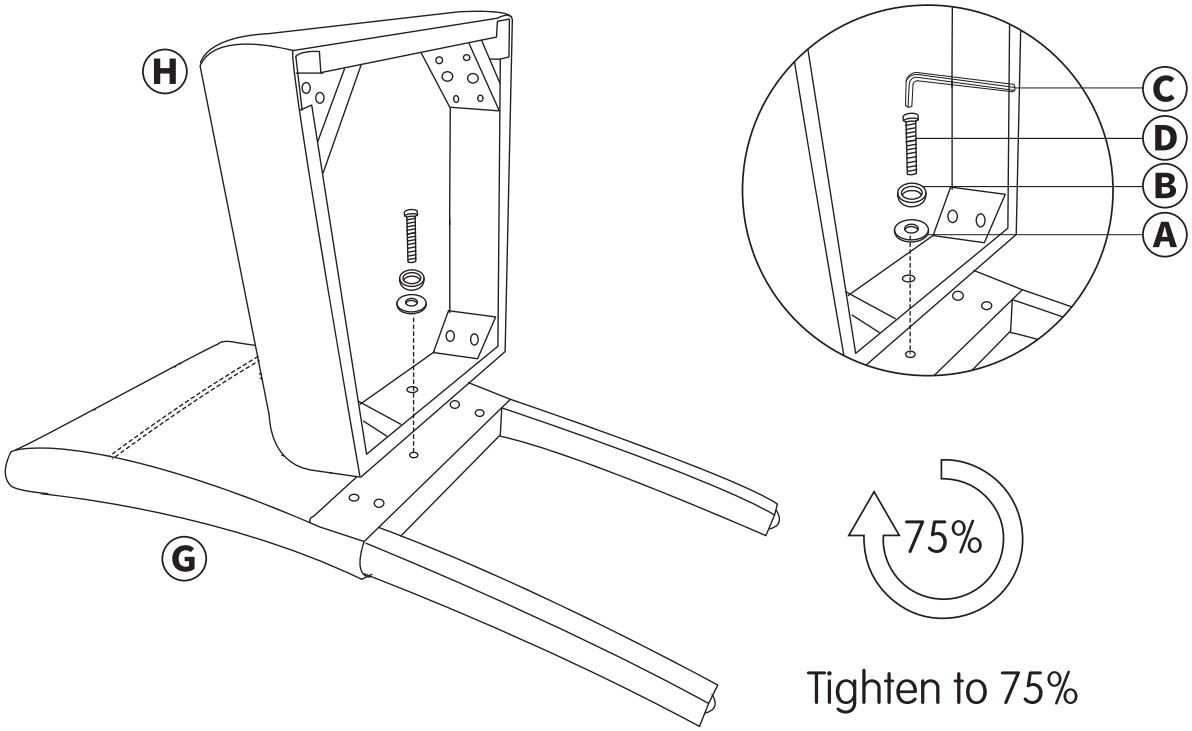

Tighten to 75%


Step 2

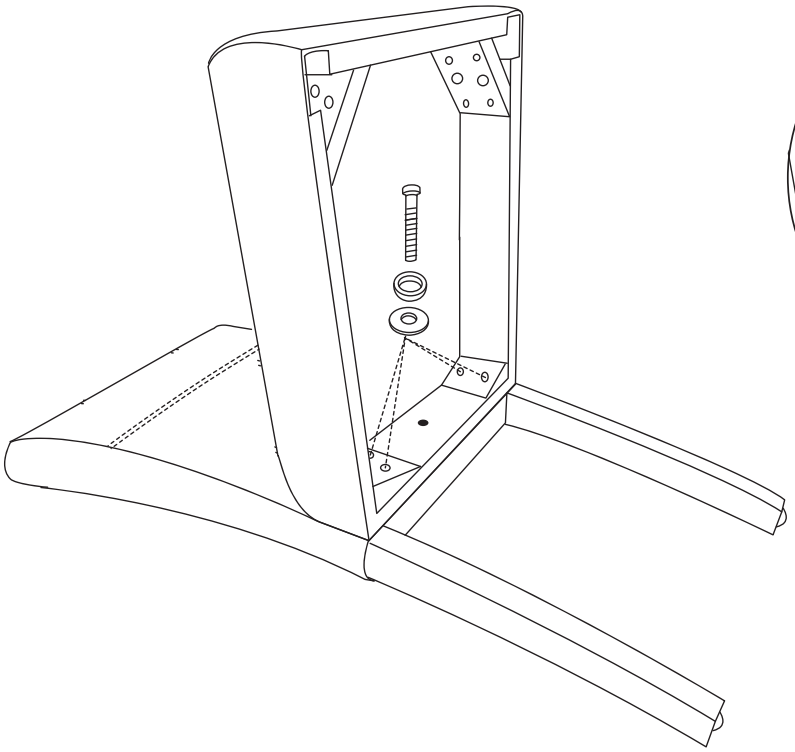


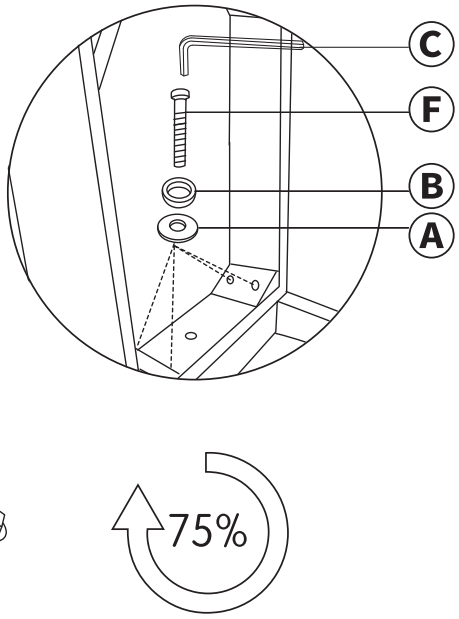

Tighten to 75%


Step 3

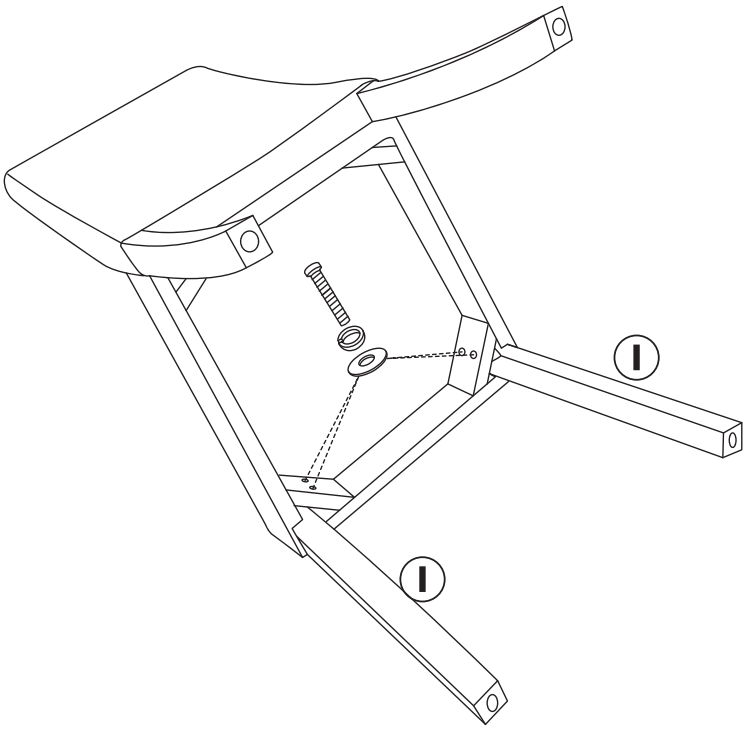


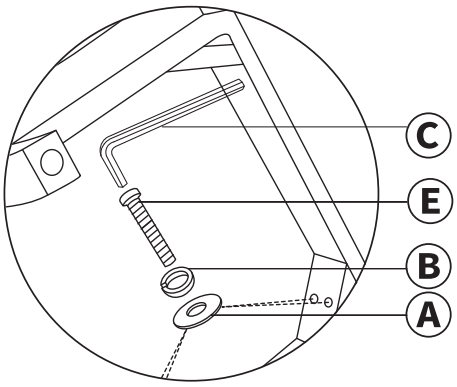


Tighten to 75%

Step 4

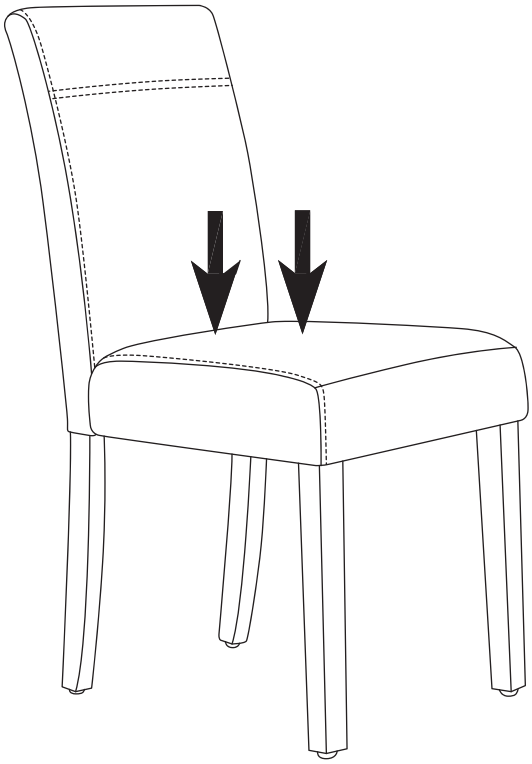

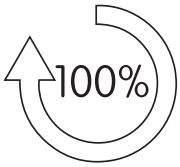



Stand the chair upright and check it is stable on the ground, then tighten all screws completely.

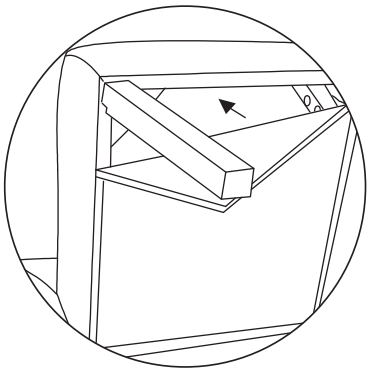

After tightening the screws, attach the fabric cover properly to the chair bottom.

Step 5

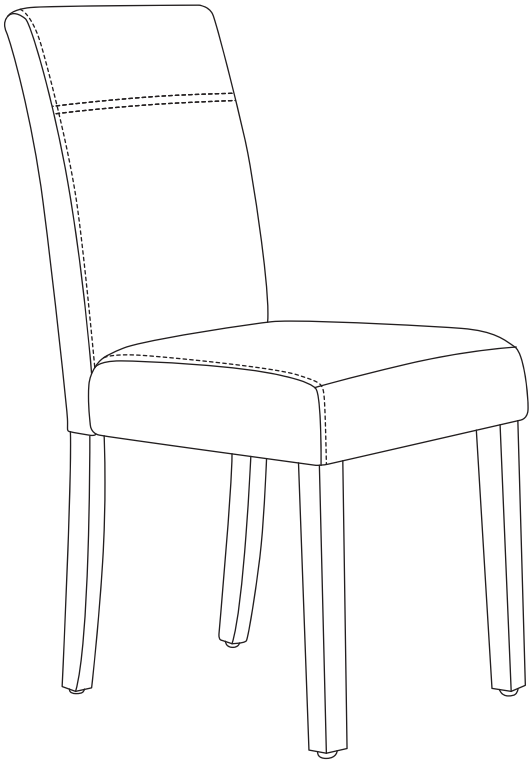

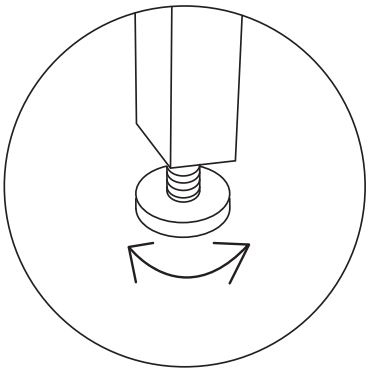

Utilize the adjustable foot pads to level the dining chair as needed.