
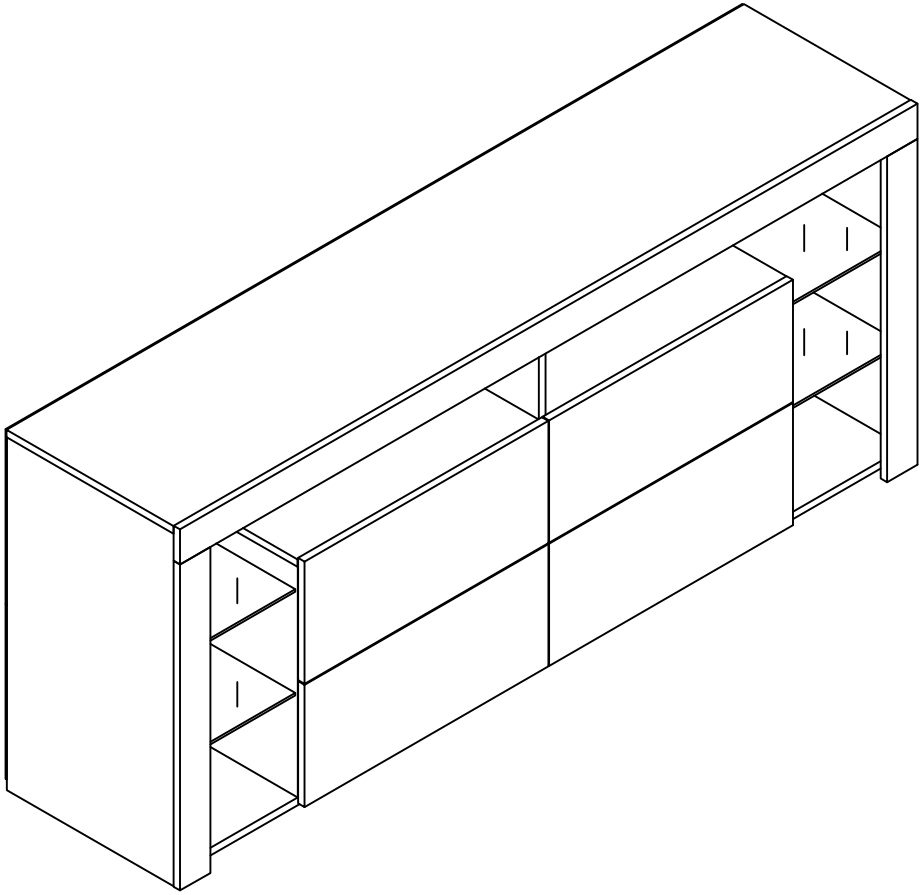
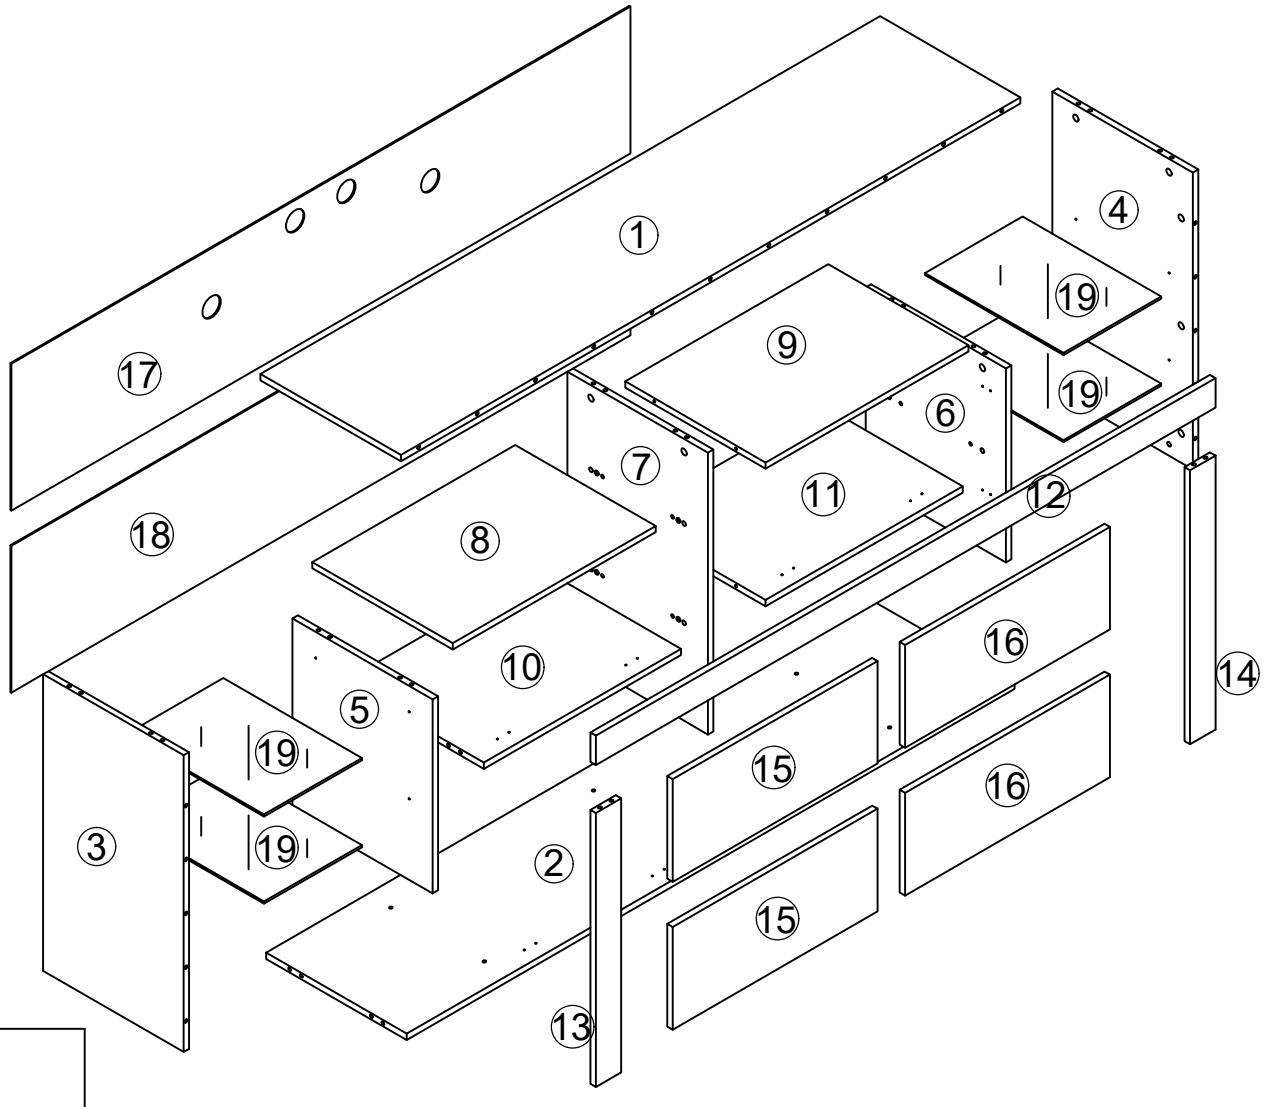







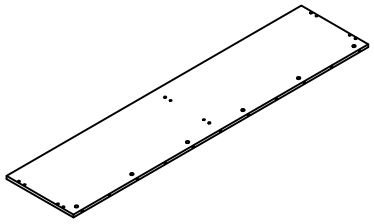
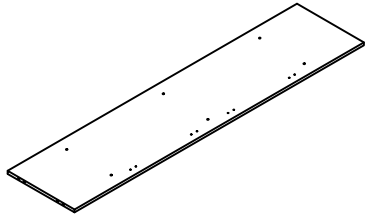
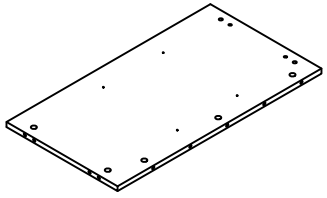
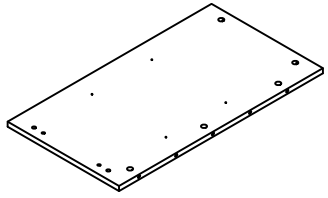
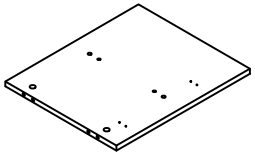
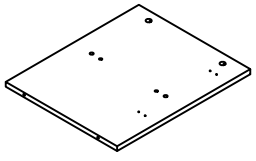
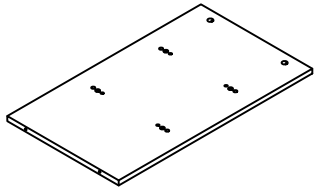
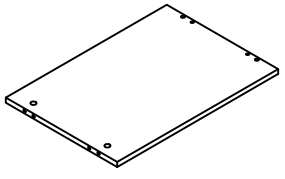
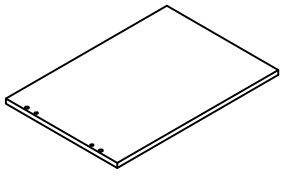
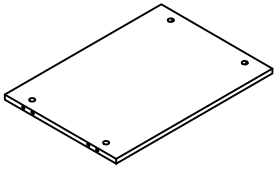
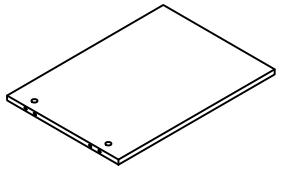
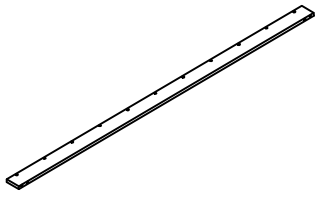
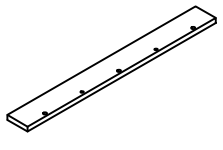
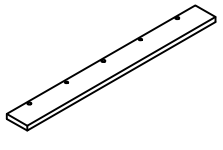
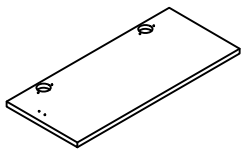
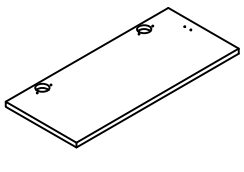
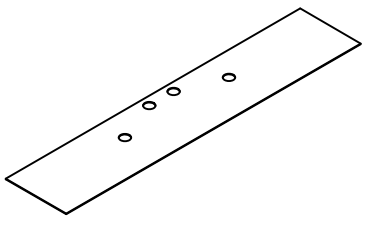
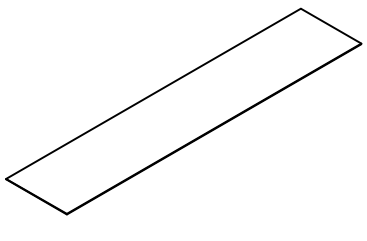


JHY2208089

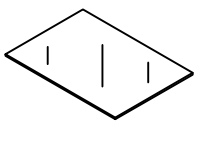

K	L	LED
		
3PCS	4PCS	1PCS


A	B	C 8*40	D 3.5*14	E	F	G	H 7*50	I	J 3.5*25
									
34PCS	34PCS	35PCS	84PCS	16PCS	4PCS	4PCS	10PCS	40PCS	6PCS

1  1700*385 1PS	2  1668*385 1PS	3  705*385 1PS	4  705*385 1PS	5  461*385 1PS
6  641*385 1PS	7  670*385 1PS	8  557*385 1PS	9  557*385 1PS	10  541*385 1PS
11  541*385 1PS	12  1700*70 1PS	13  651*70 1PS	14  651*70 1PS	15  562*244 2PS
16  562*244 2PS	17  1698*349 1PS	18  1698*349 1PS	19  268*380 4PS	


Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!


I

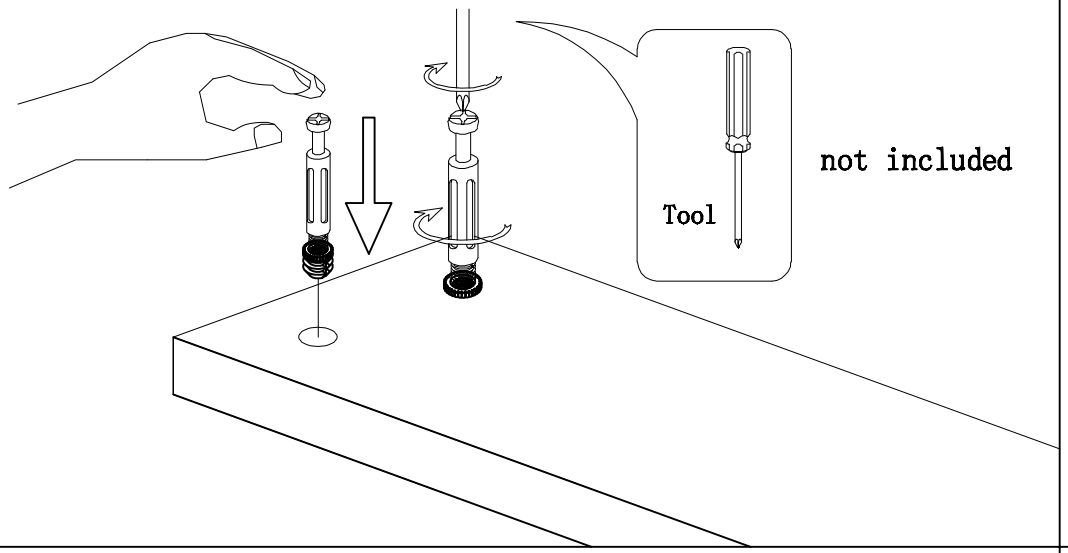

II

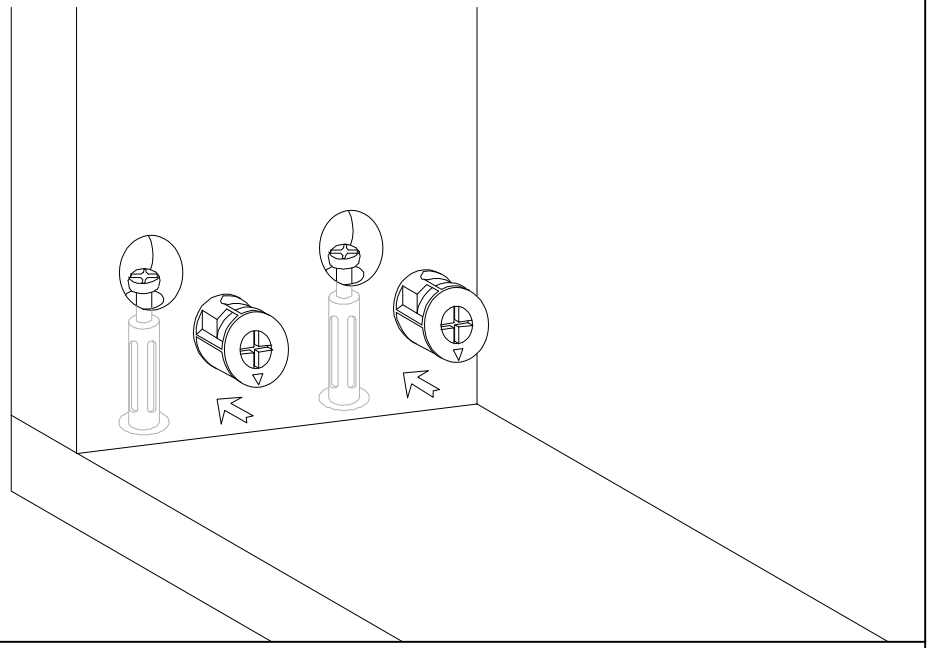


III

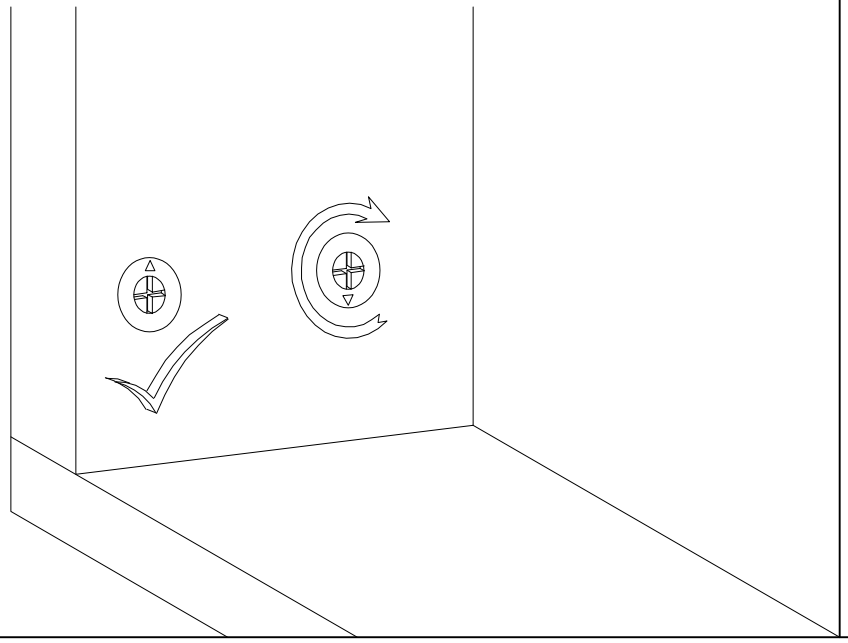


IV

Scan QR code for assembly video

1

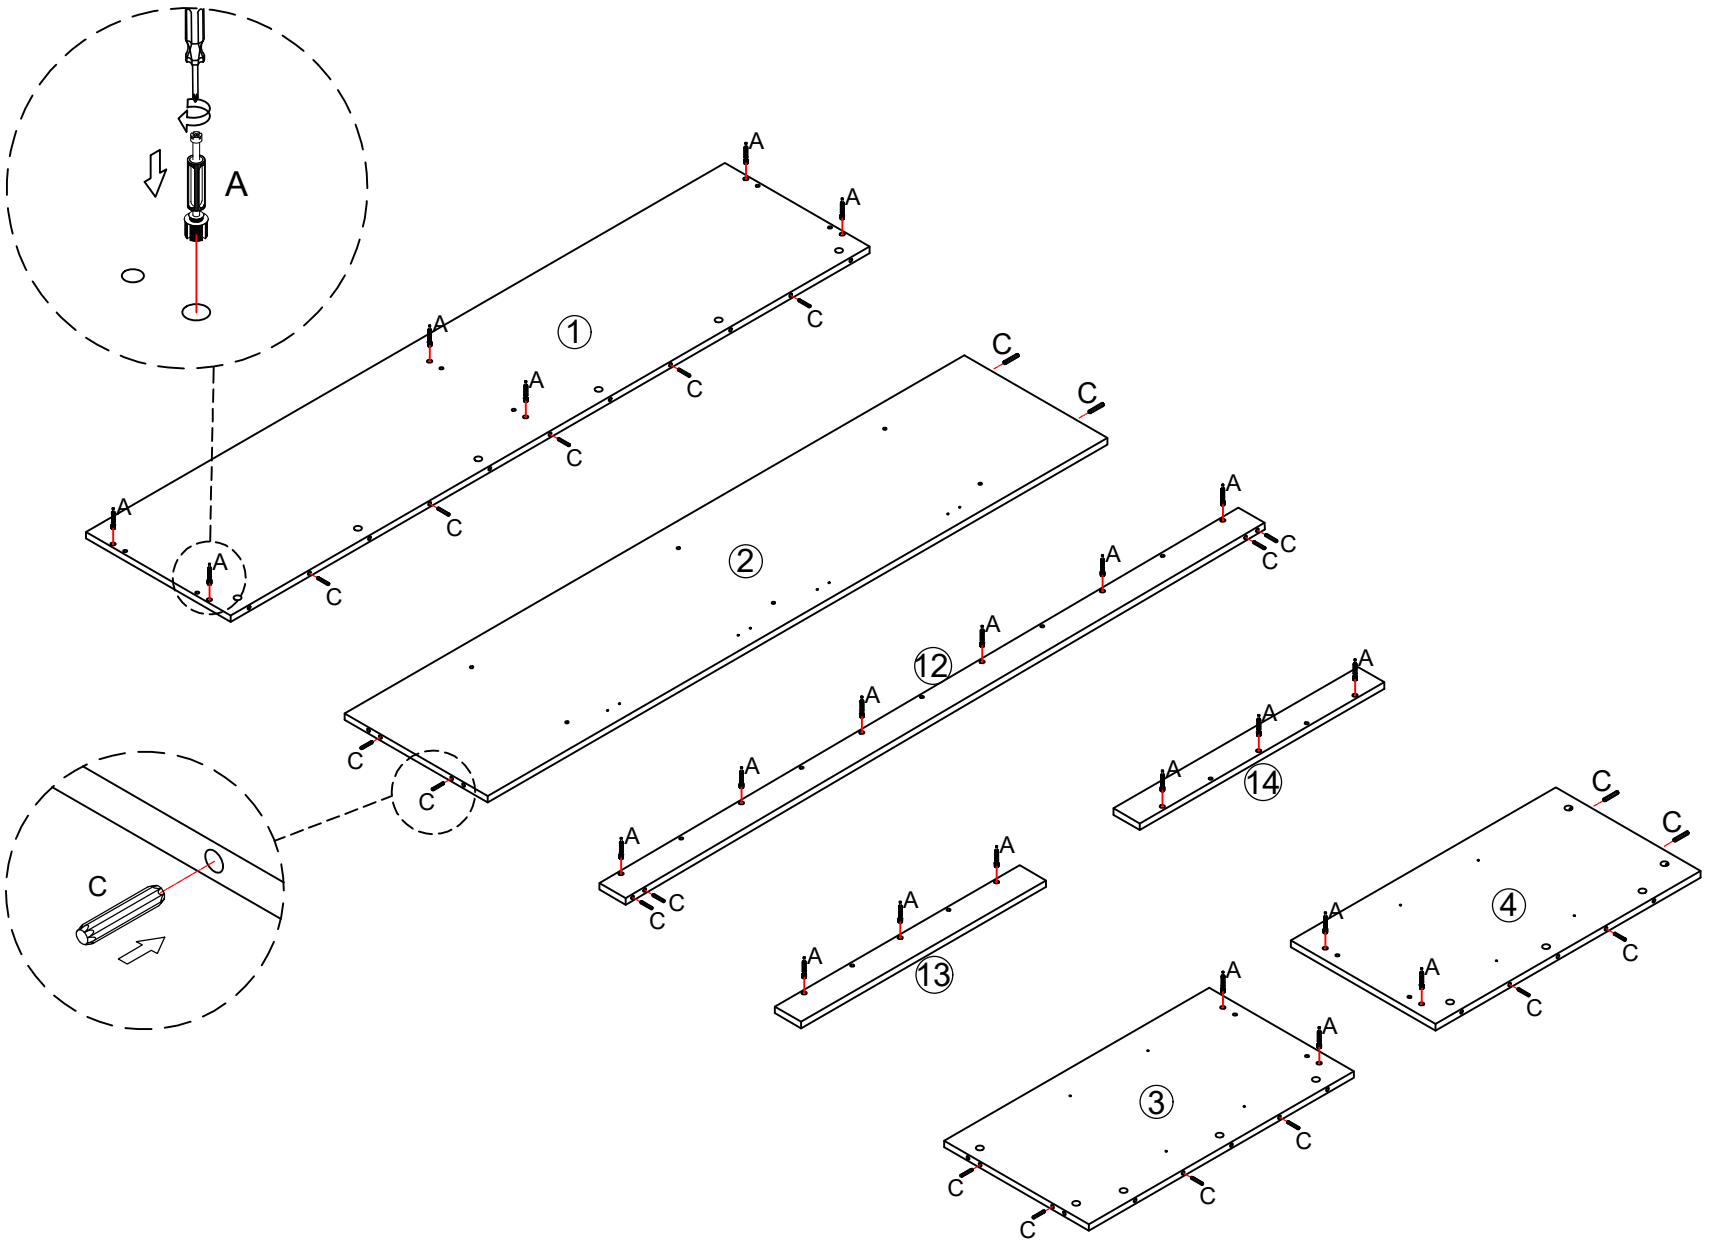


	A*22
	C*21

put A on board ① ③ ④ ⑫ ⑬ ⑭

put C on board ① ② ③ ④ ⑫

②

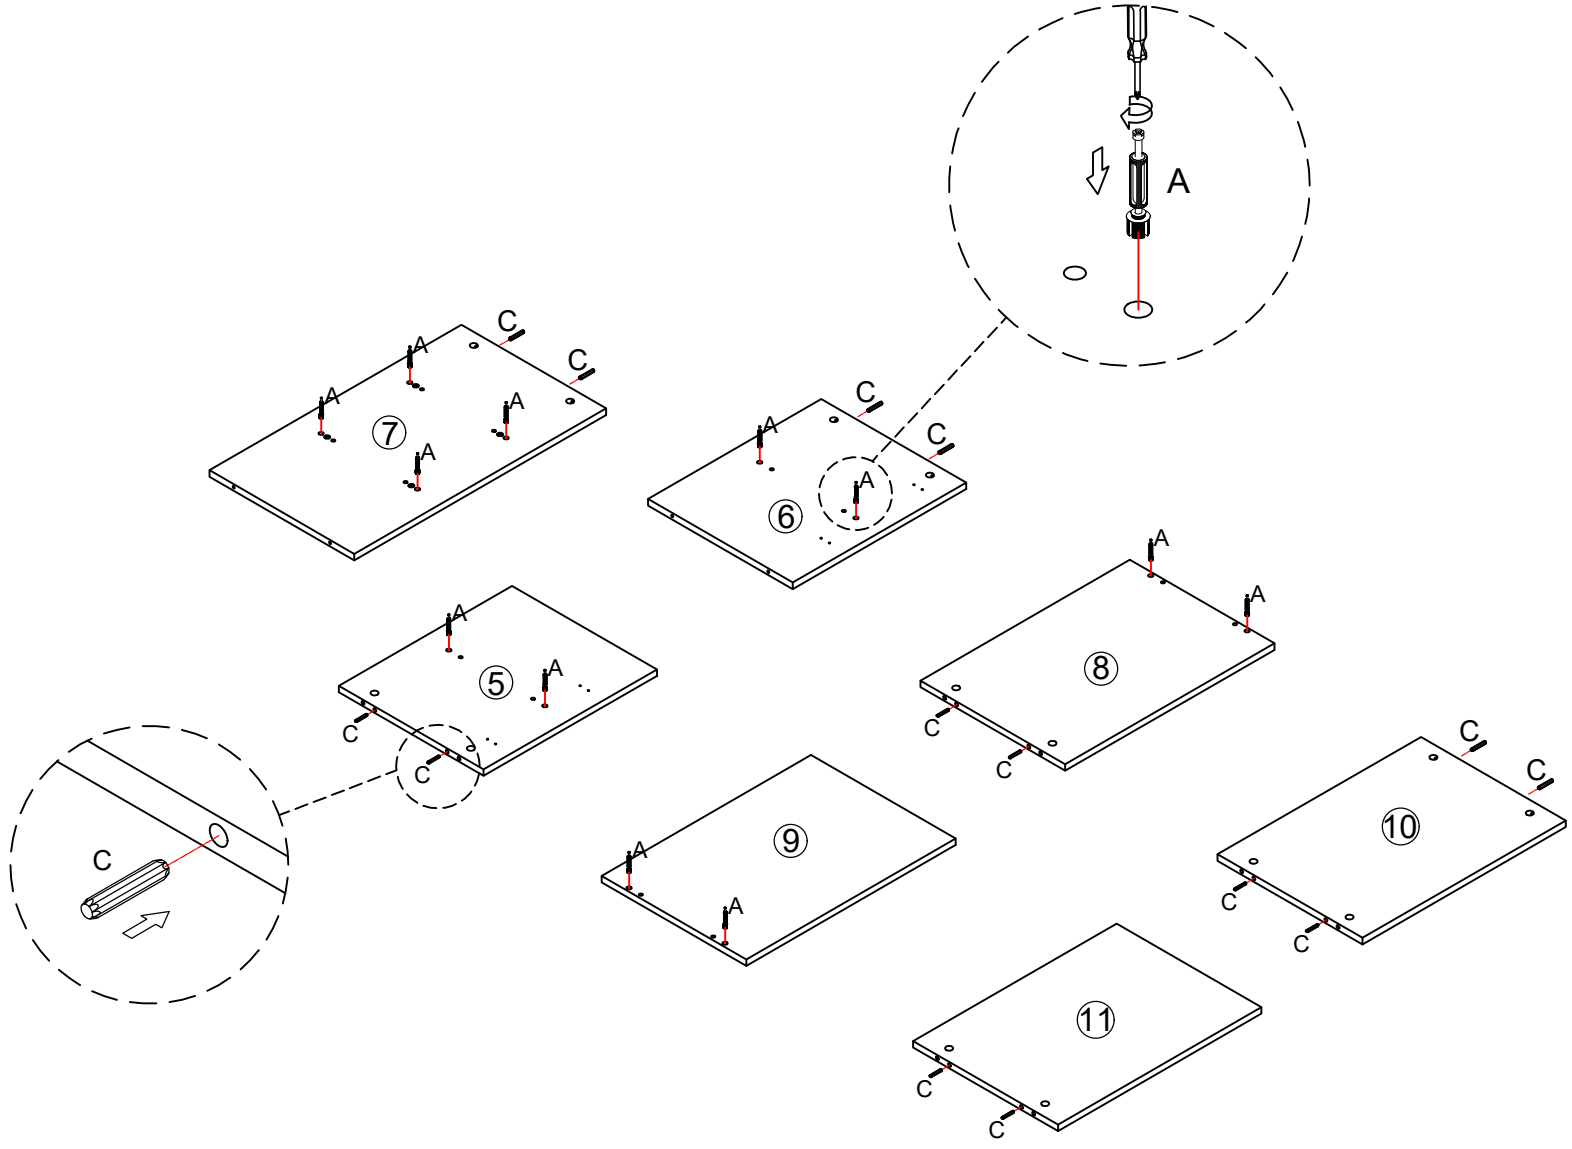



	A*12
	C*14

put A on board ⑤⑥⑦⑧⑨

put C on board ⑤⑥⑦⑧⑨⑩⑪

③

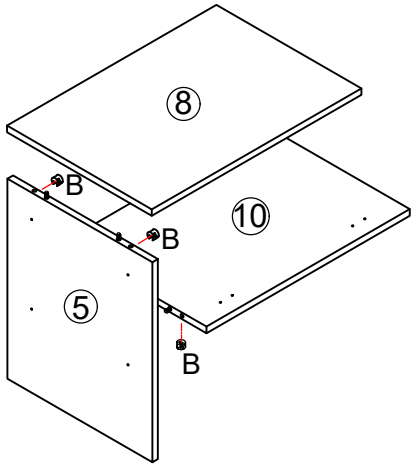

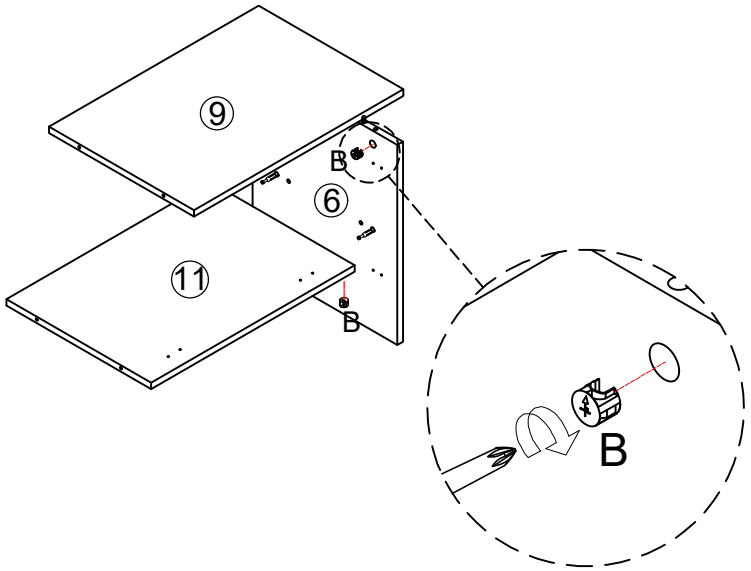


Make sure the arrow on the screw align to the hole on the side.

	B*8


put B on board ⑤⑥⑩⑪


4

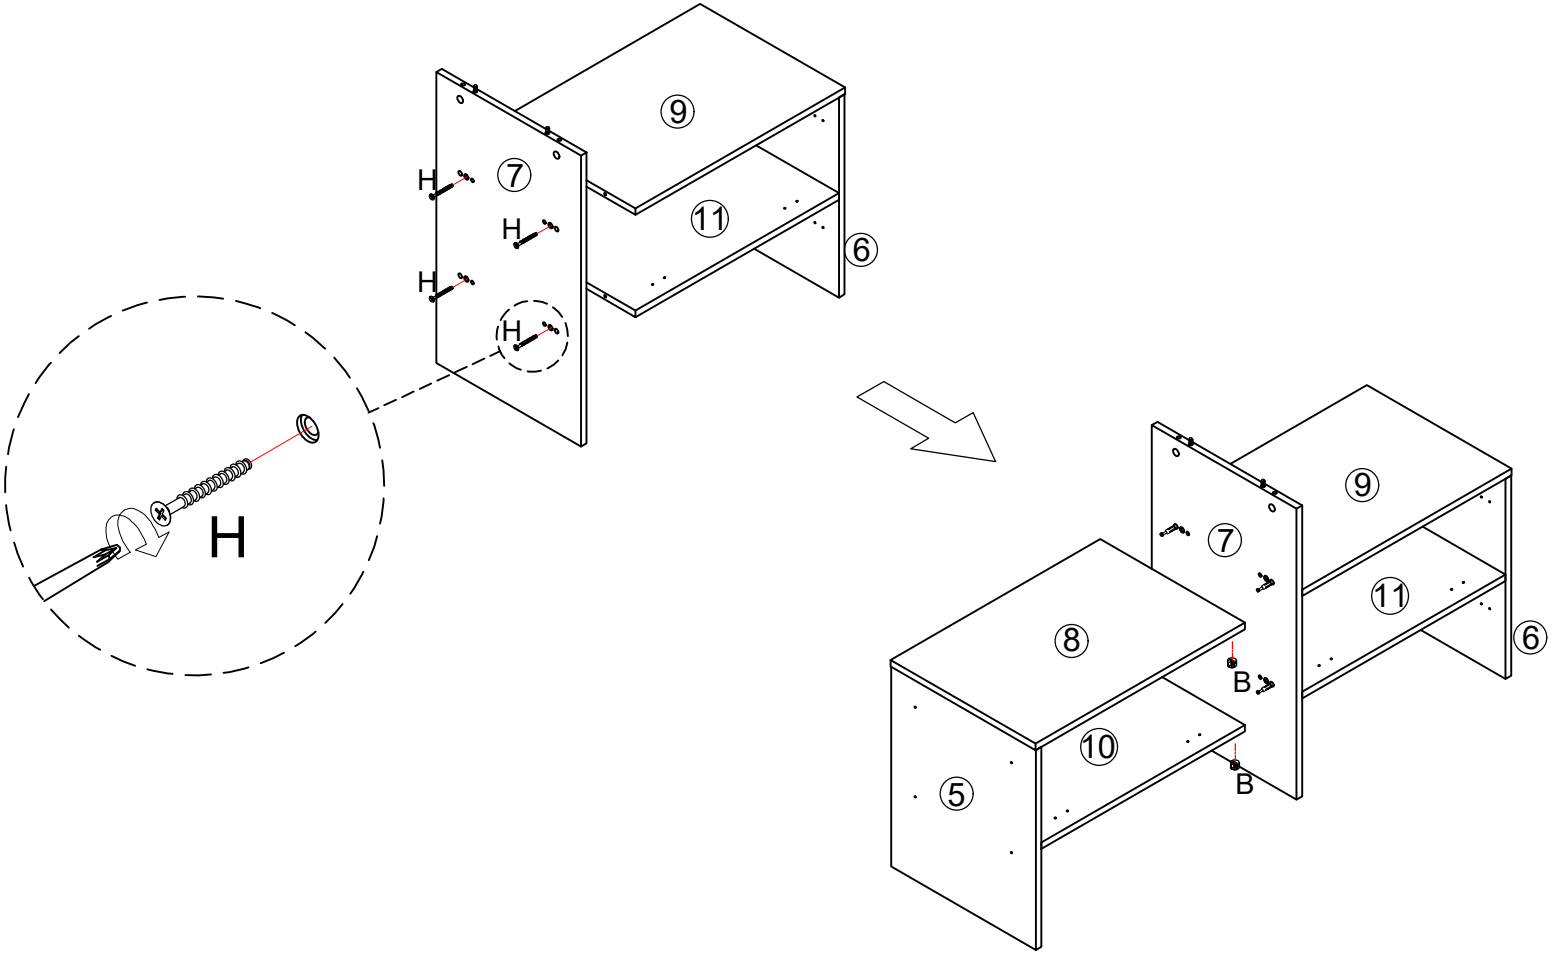



	B*4
	H*4


5

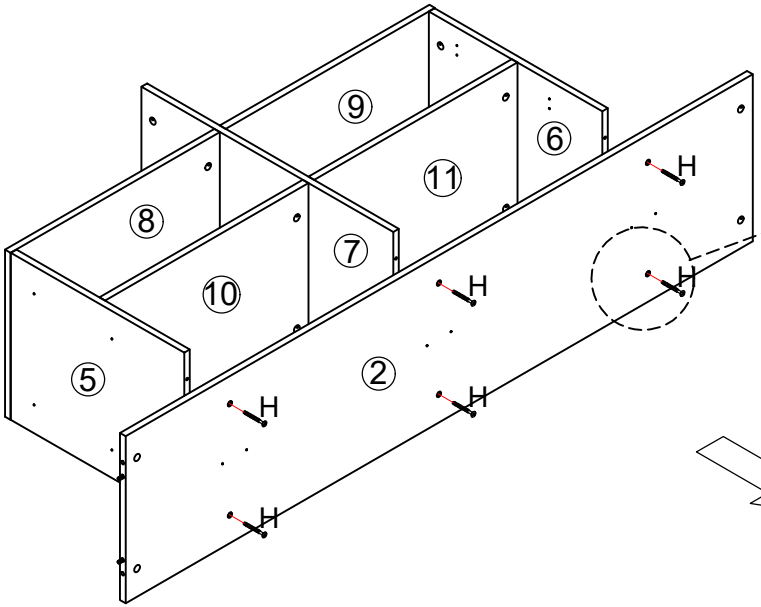

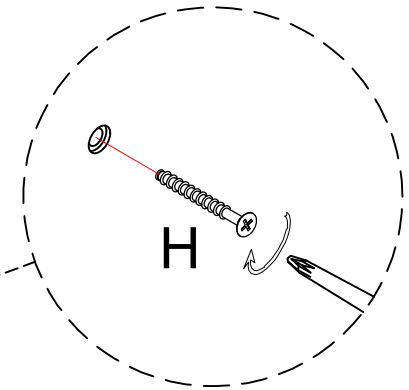


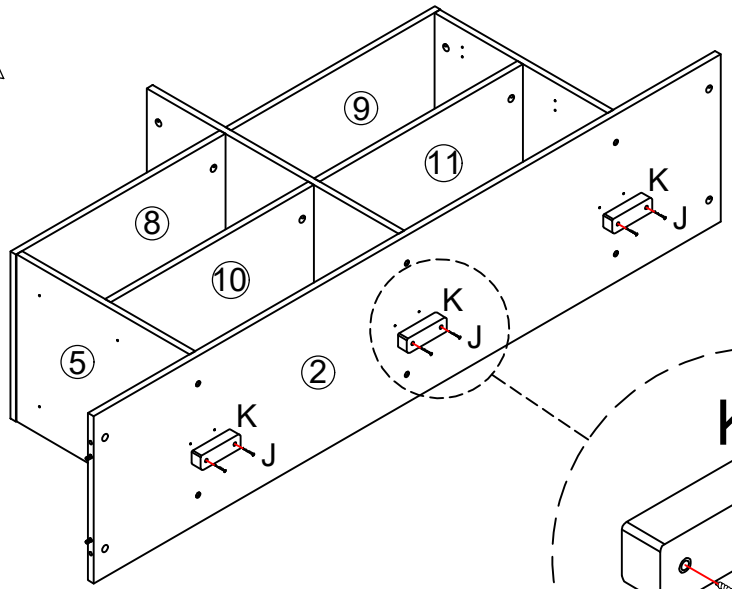

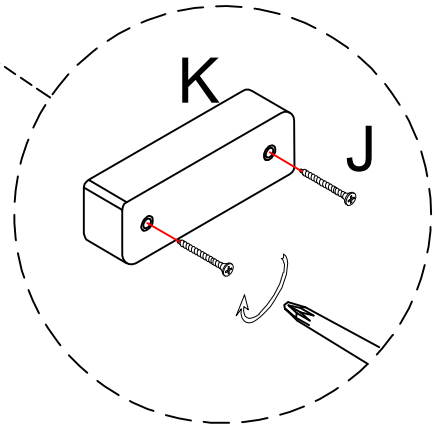

	H*6
	J*6
	K*3

⑥

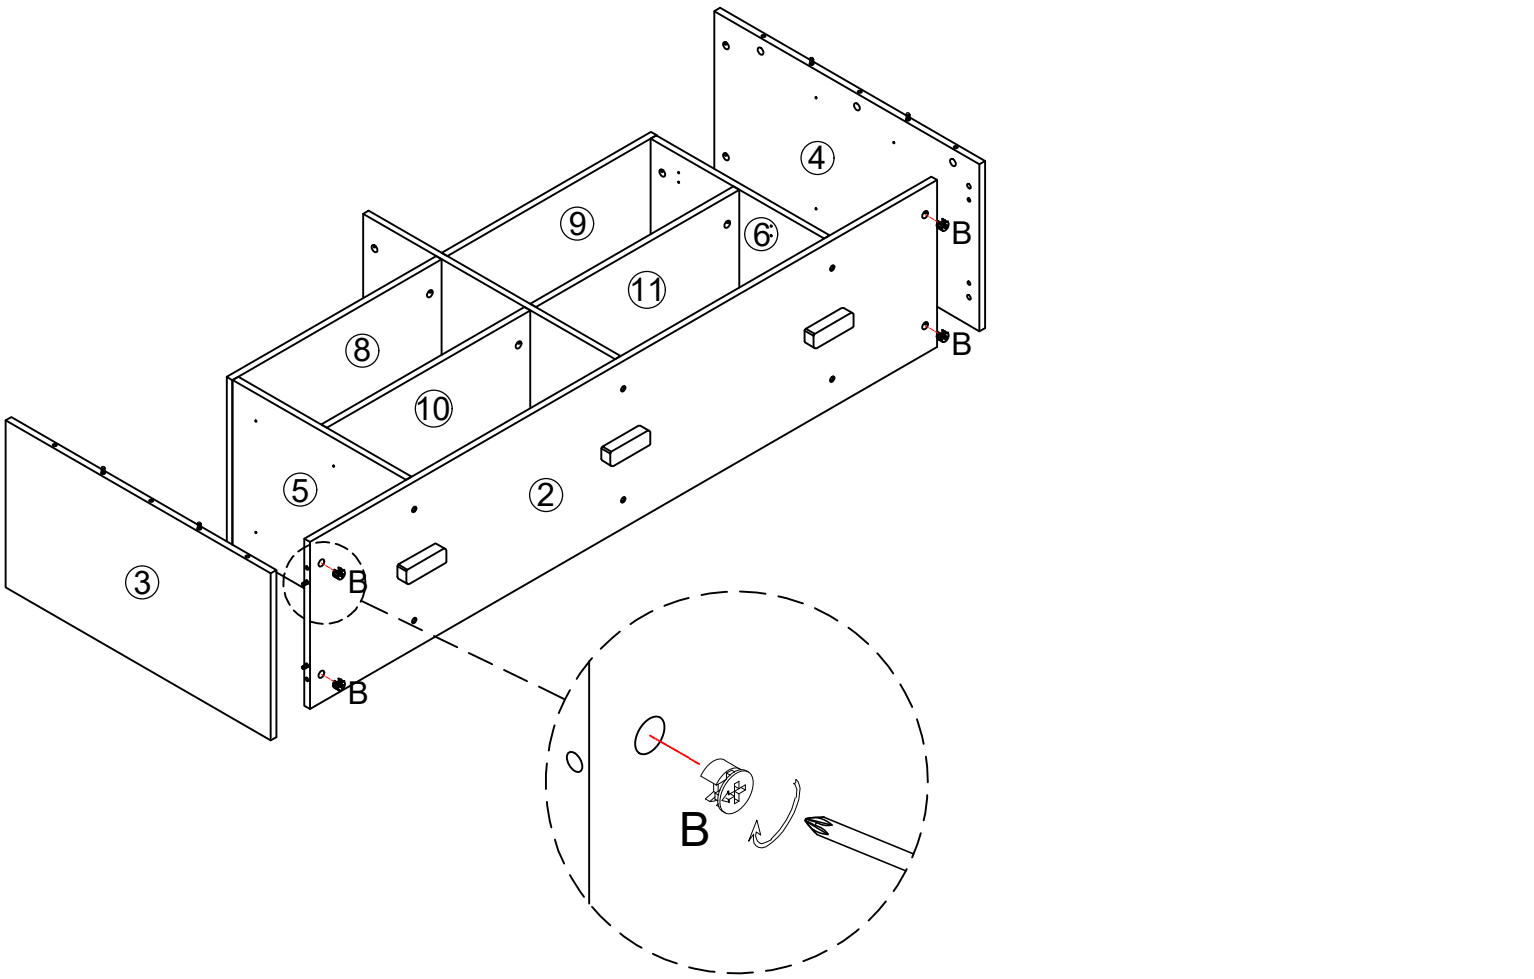


Make sure the arrow on the screw align to the hole on the side.

	B*4
	J*12
	K*6

put B on board②

⑦

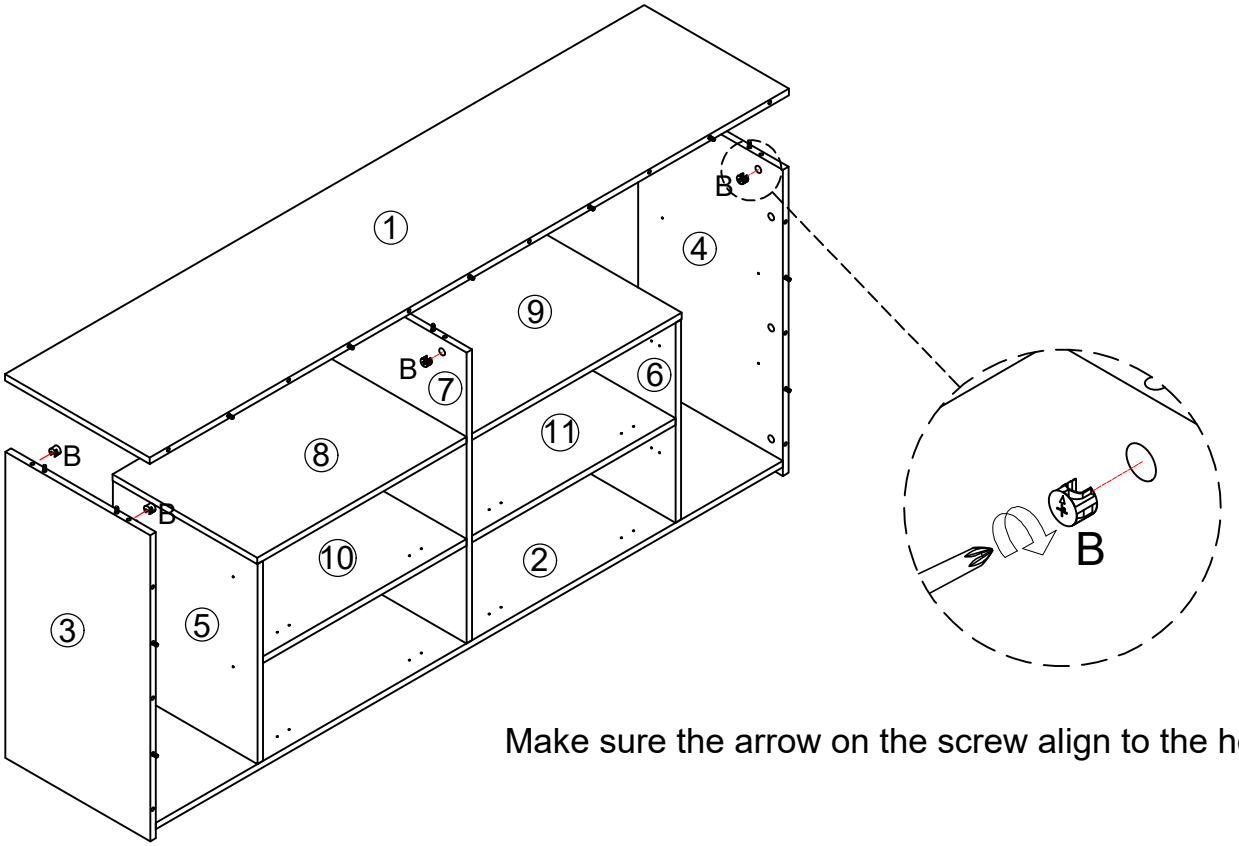



Make sure the arrow on the screw align to the hole on the side.

	B*6

put B on board③④⑦

8

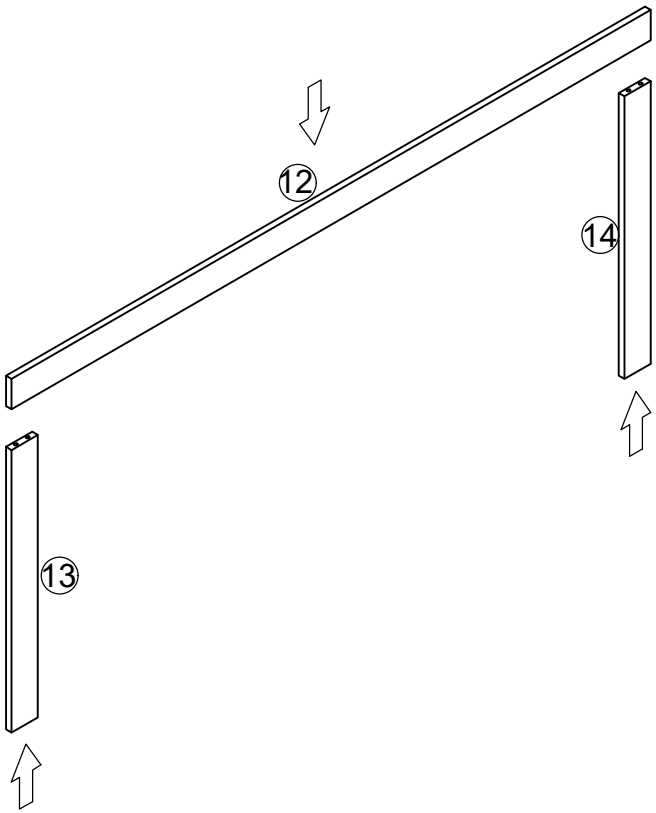

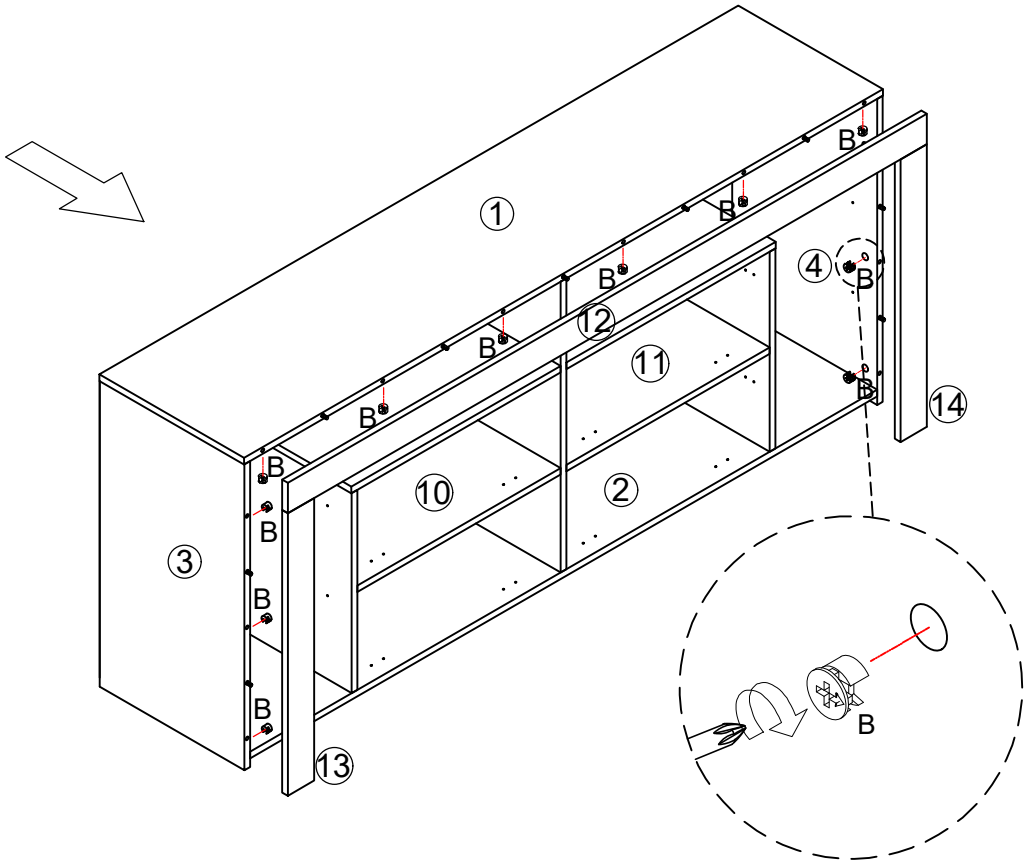




Make sure the arrow on the screw align to the hole on the side.

	B*12


put B on board①③④

9

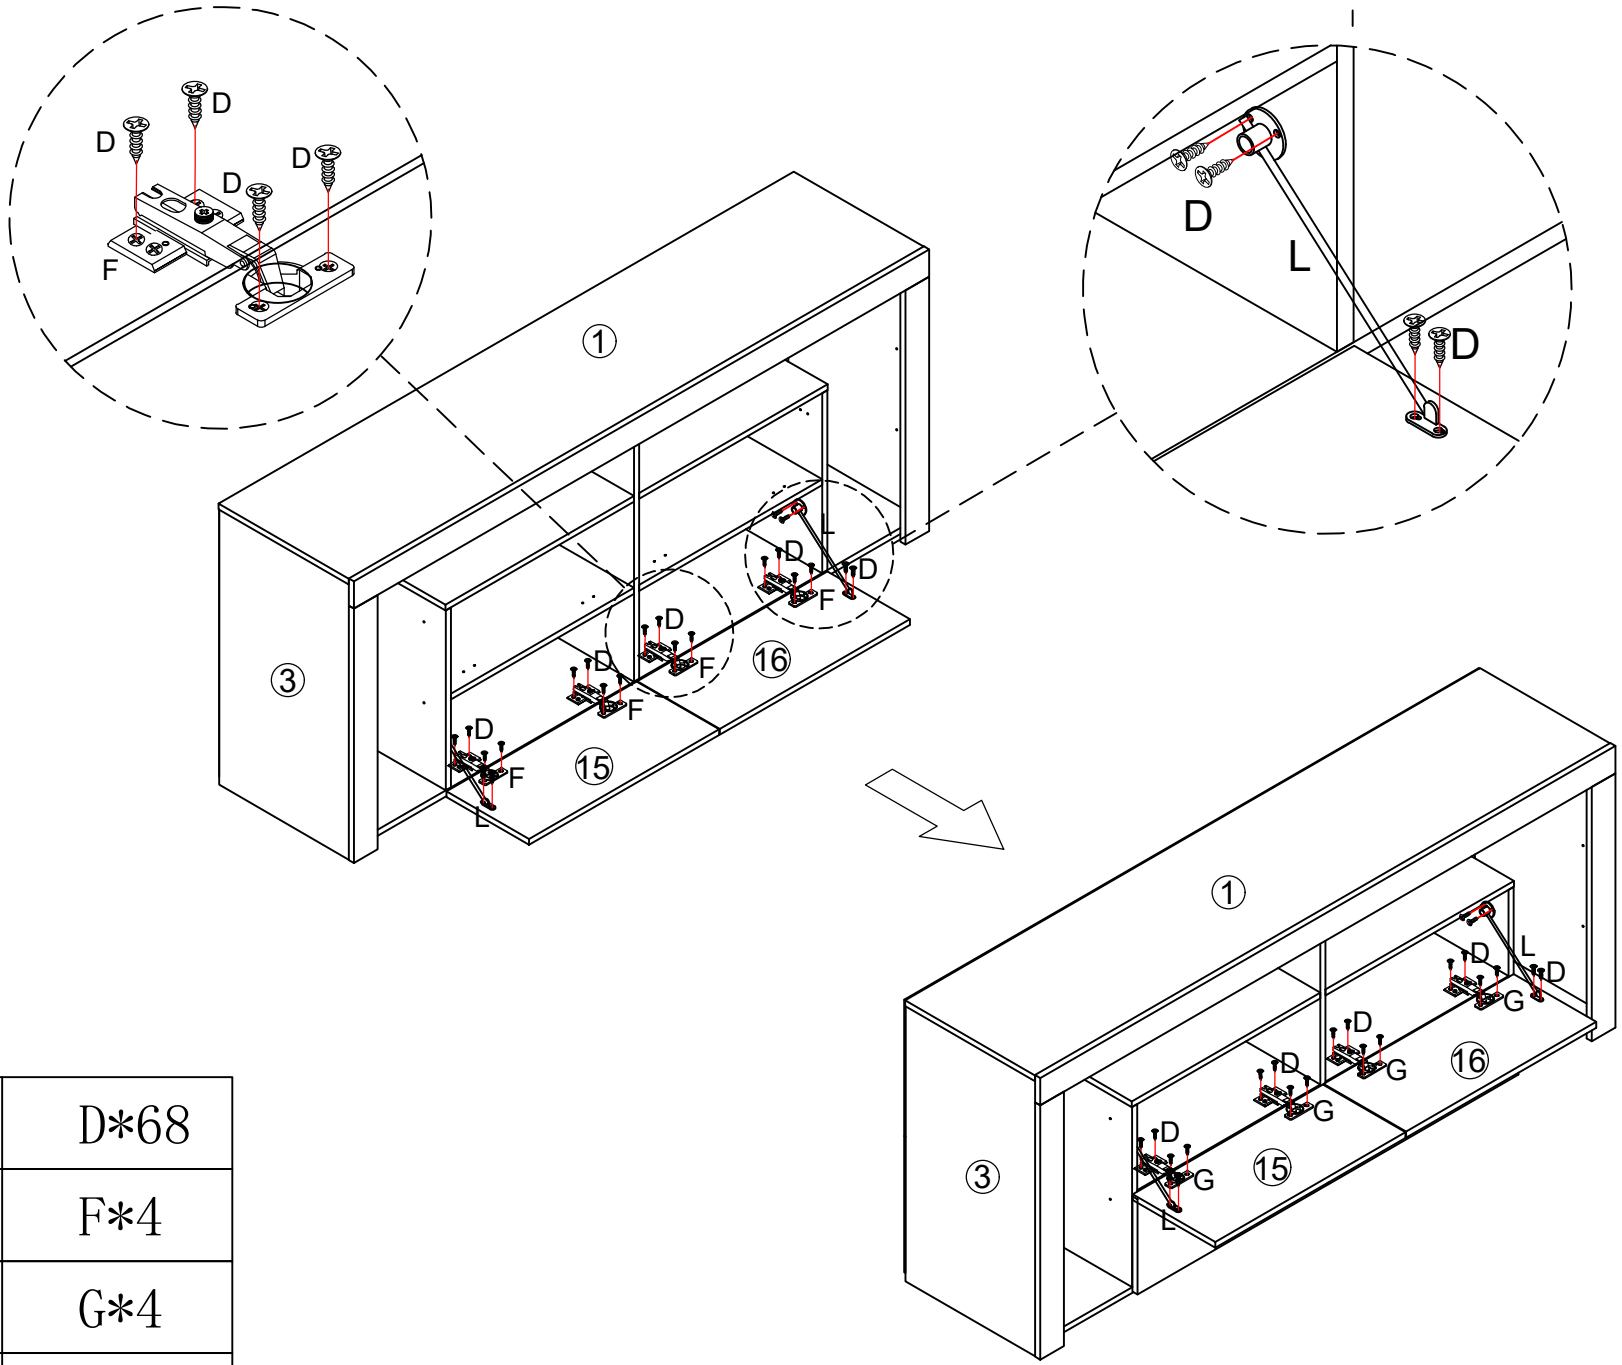


	D*68
	F*4
	G*4
	L*4

10

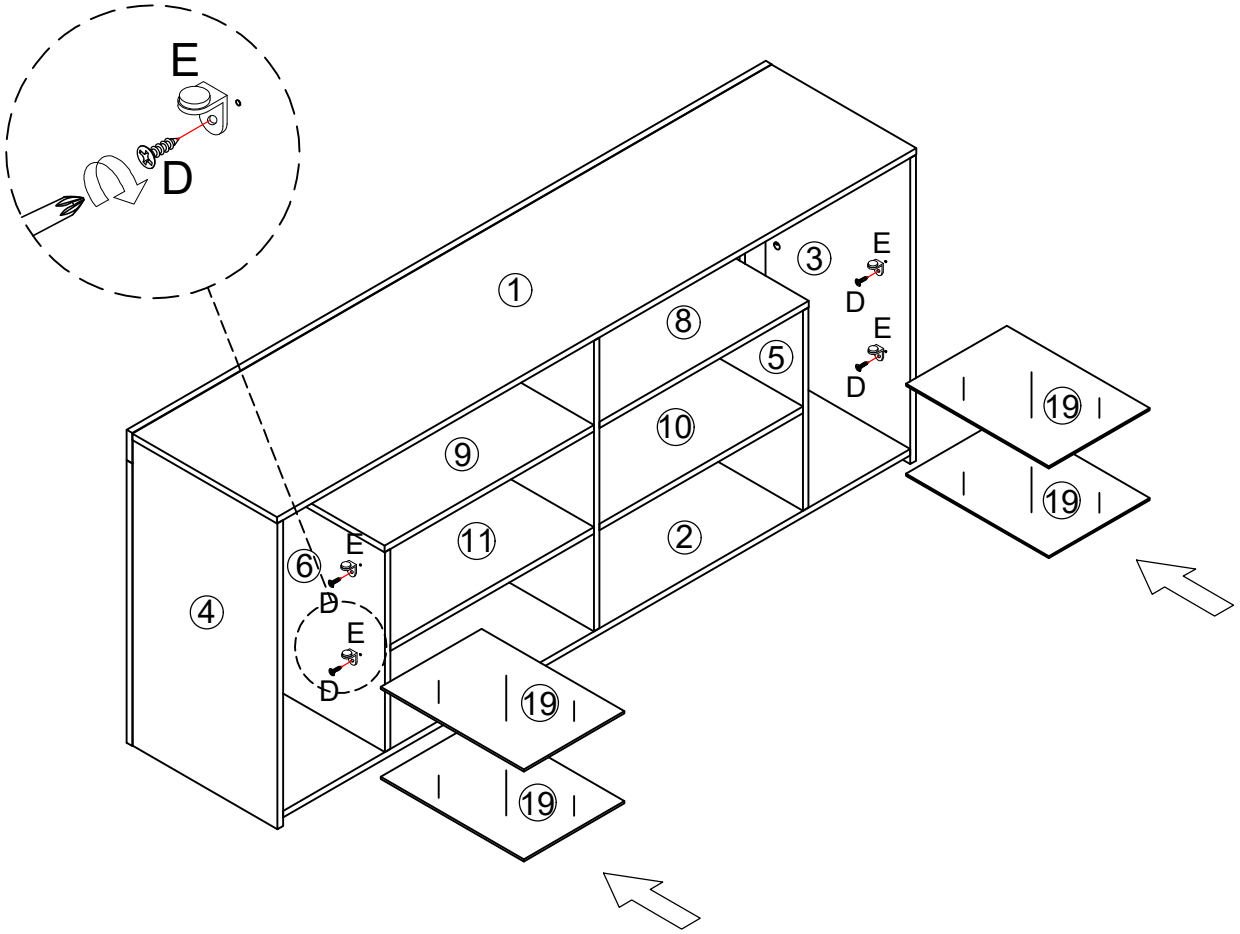


	D*16
	E*16

11

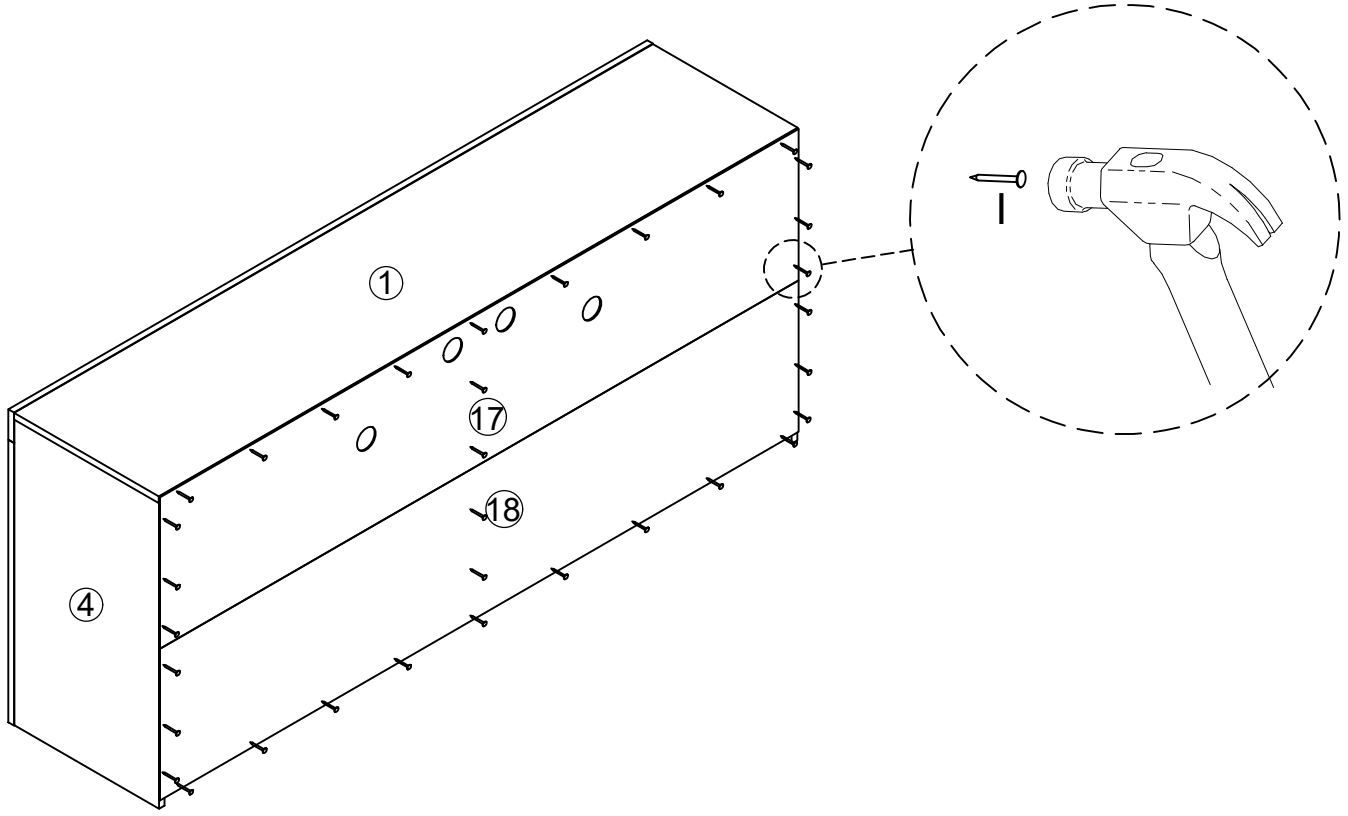


	I*40

12

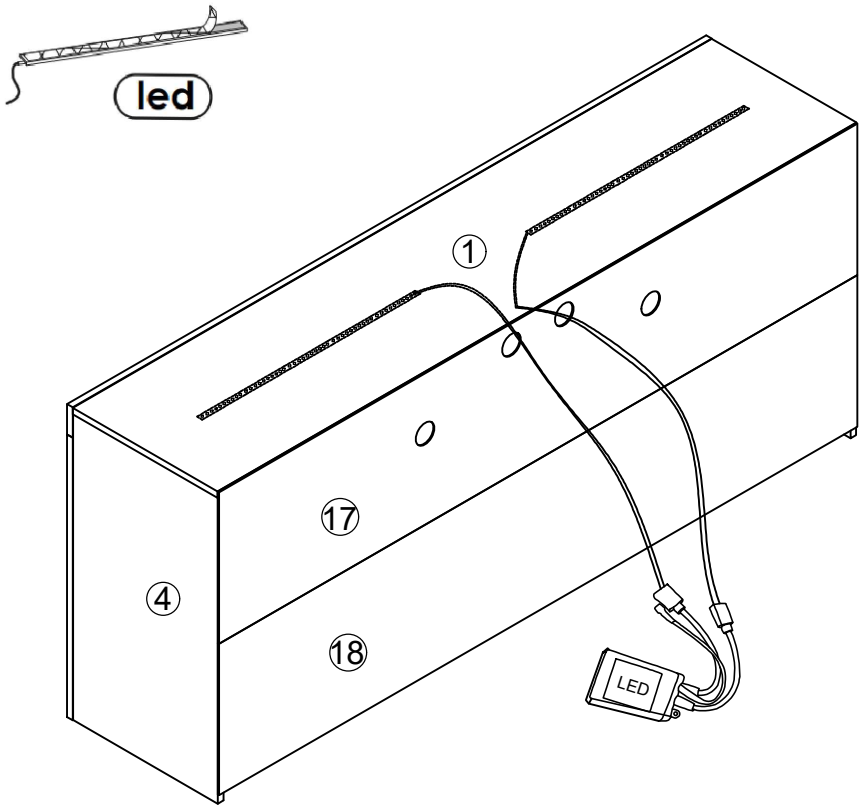

	LED

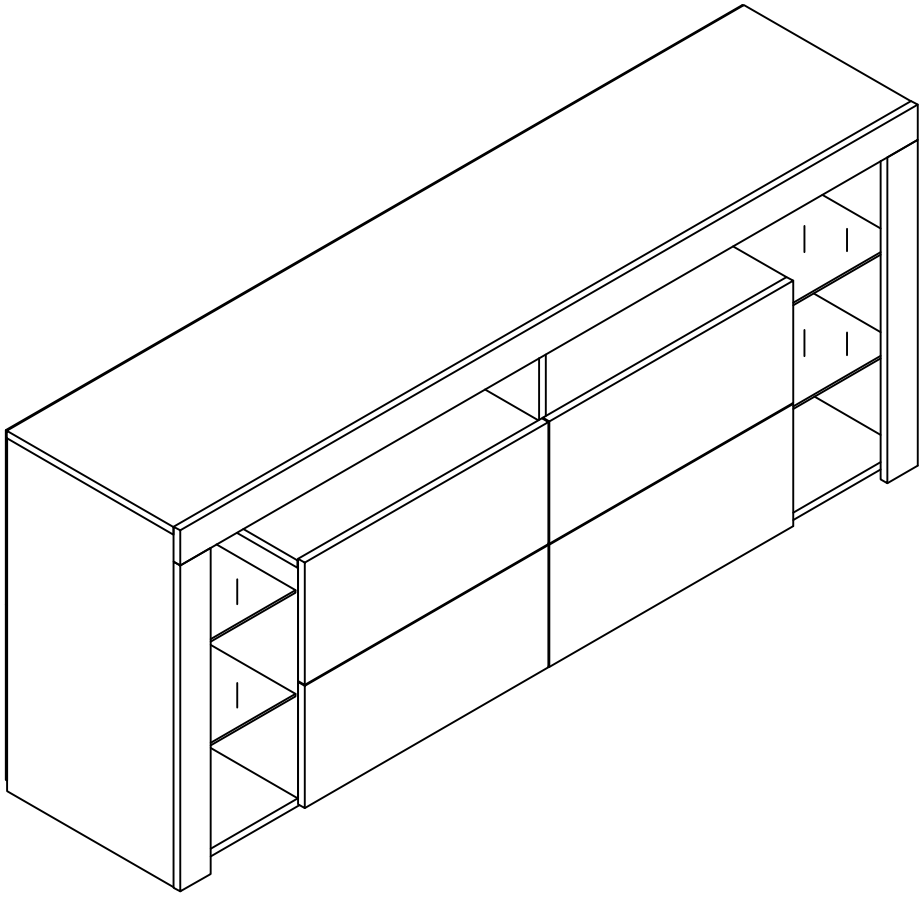

LED Light

If you can’t let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.

2. Please check the remote control, it need you to tear down the plastic septum before use it.

3. Don’t let the remote control too far from the receiver, make sure there is no obstruction between them.

