Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.






- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

KITCHEN BAR





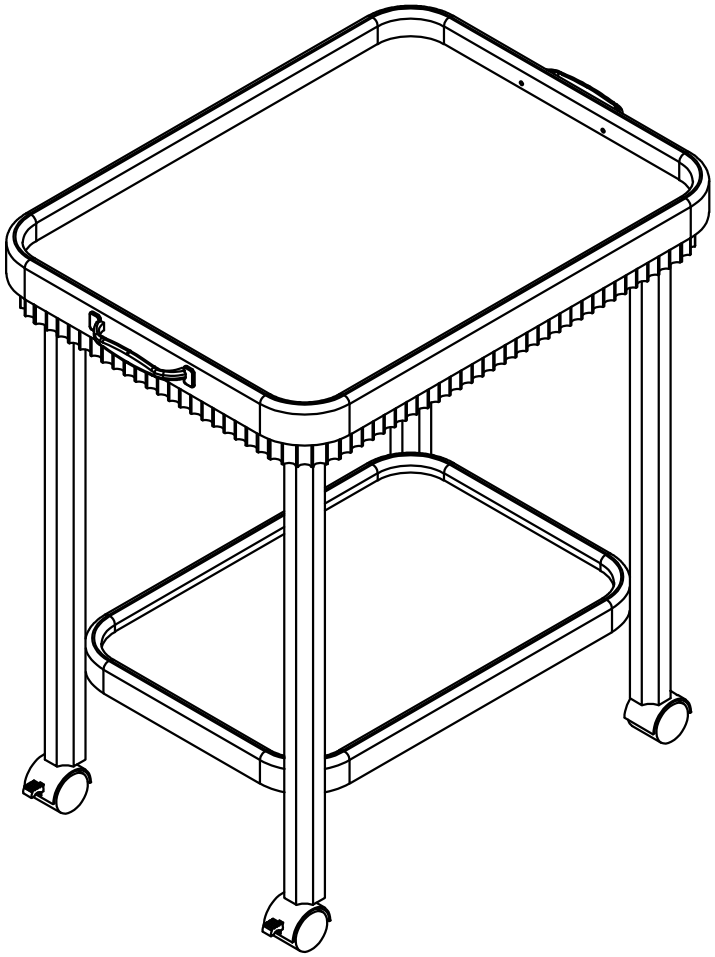


CAUTION: This KITCHEN BAR is NOT a TOY.
Keep your child / children at bay during the assembly process.
Whenever lifting or moving the KITCHEN BAR and to prevent any damage to it, two adults may be needed to execute these actions.

PART LIST (N780P456226)

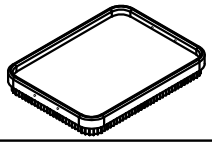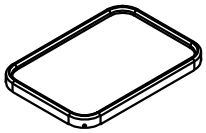Label	Picture	Description	QTY
A		Top Frame	1pc
B		Bottom Frame	1pc
C		Leg	4pcs


HARDWARE LIST (N780P456226)

Label	Picture	Description	QTY
①		Bolt M6 x 45 mm	8+1
②		Flat Washer Ø16 x M6 x 1 mm	8+1
③		Spring washer Ø12 x M6 x 1 mm	8+1
④		Handle	2
⑤		Bolt M4 x 20 mm	4+1
⑥		Locking Caster	2
⑦		Non-locking Caster	2
⑧		Allen wrench M4	1
⑨		Screw Driver (Not Provided)	1

ASSEMBLY PREPARATION


Before Beginning Assembly:

A

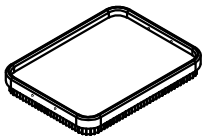

x 1

B

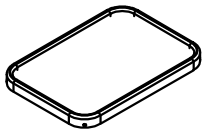


x 1


C



x 4




x 9




x 9



x 9




x 2



x 5



x 2




x 2



x 1


ASSEMBLY PREPARATION

Overview

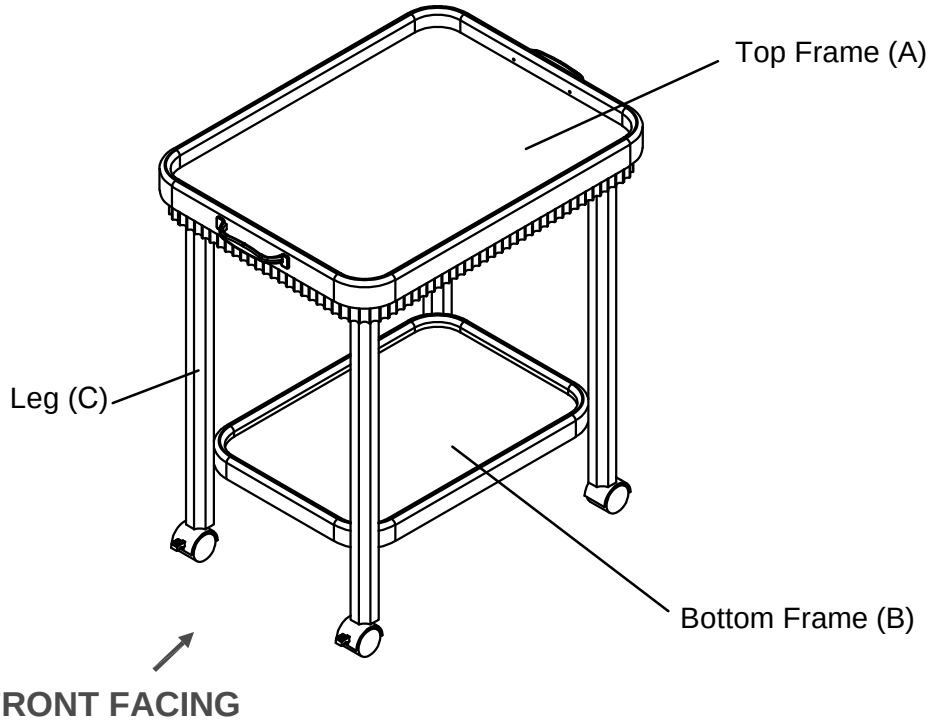


This KITCHEN BAR has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the KITCHEN BAR parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Step 1:

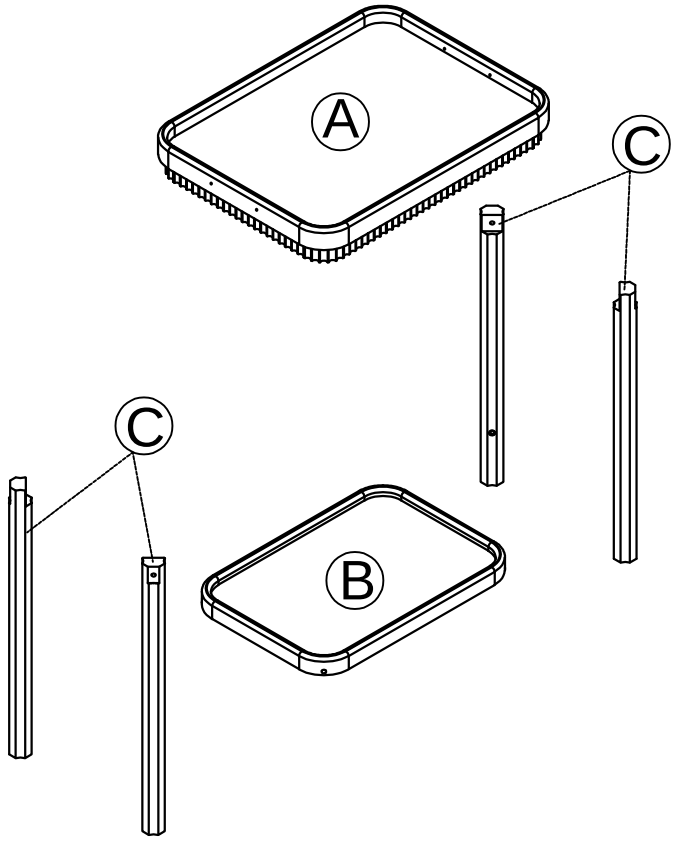


Unpack and place all parts on a clean, non-marring surface.

Step 2:

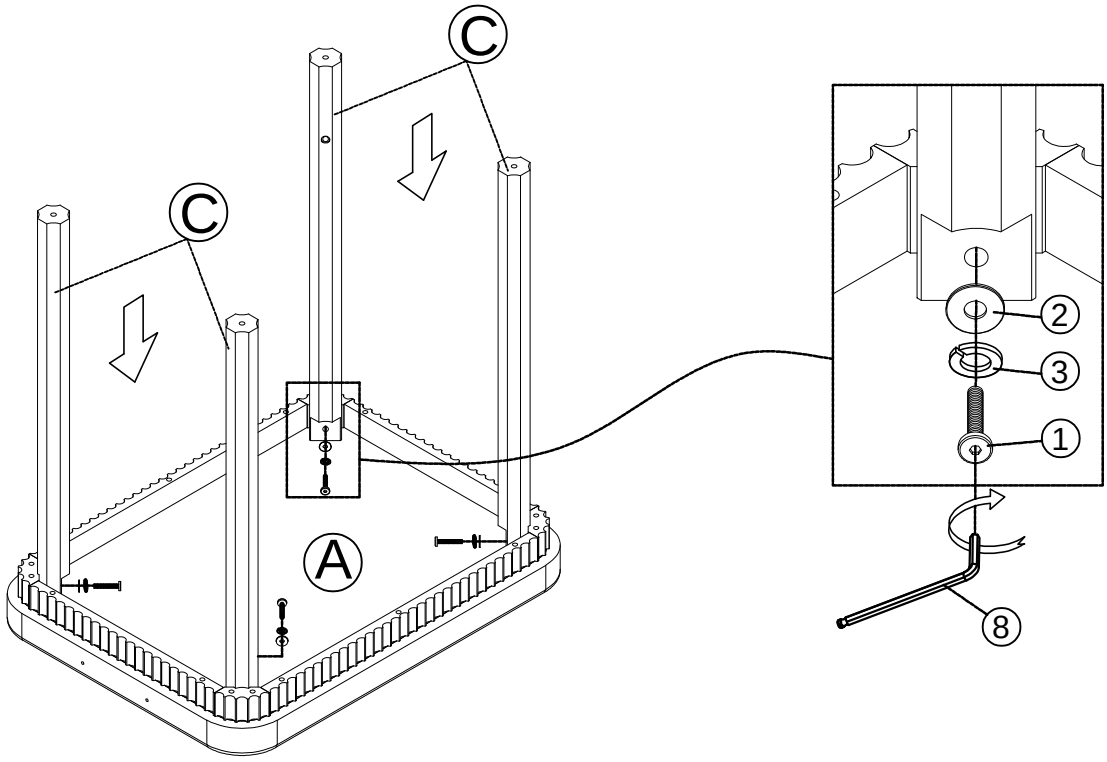


- Attach Leg (C) to the Top Frame (A) using Bolt①*4 and Flat Washer②*4, Spring washer③*4 with Allen Wrench⑧*1 as shown.

Step 3:

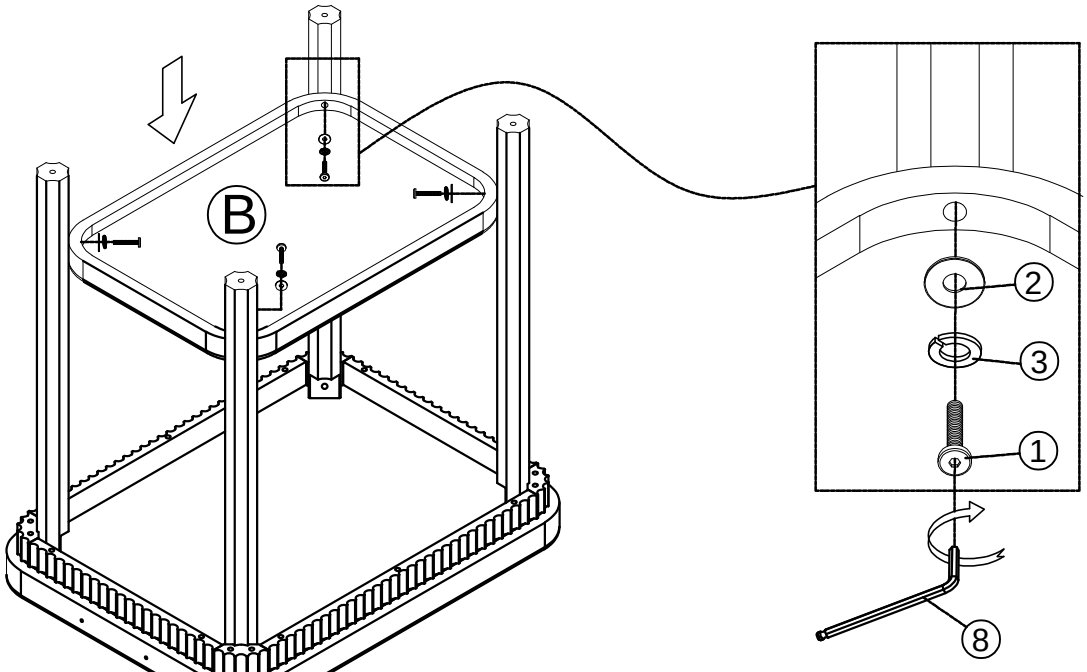


- Attach Bottom Frame (B) to the Step 2 using Bolt①*4 and Flat Washer②*4 , Spring washer③*4 with Allen Wrench⑧*1 as shown.

Step 4:

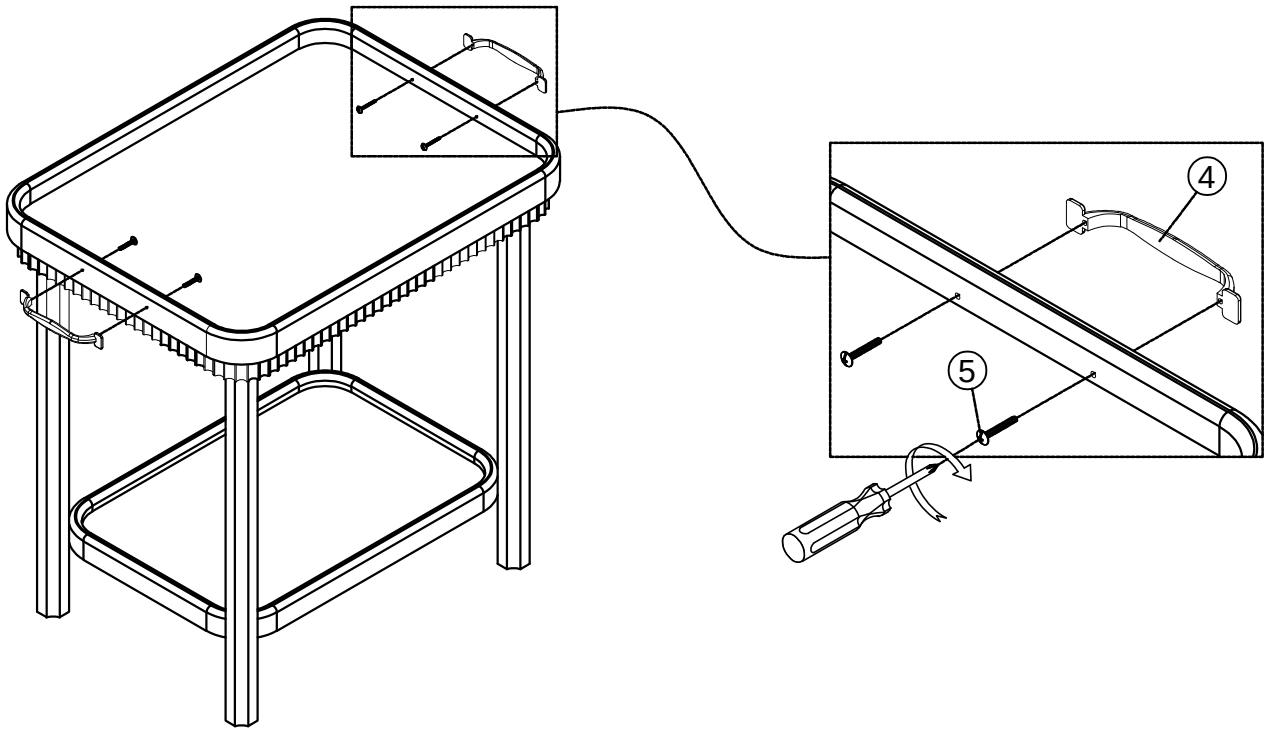


- Attach Handle④*2 to the Step 3 using Bolt⑤*4 and with Screw Driver⑨ as shown.

Step 5:

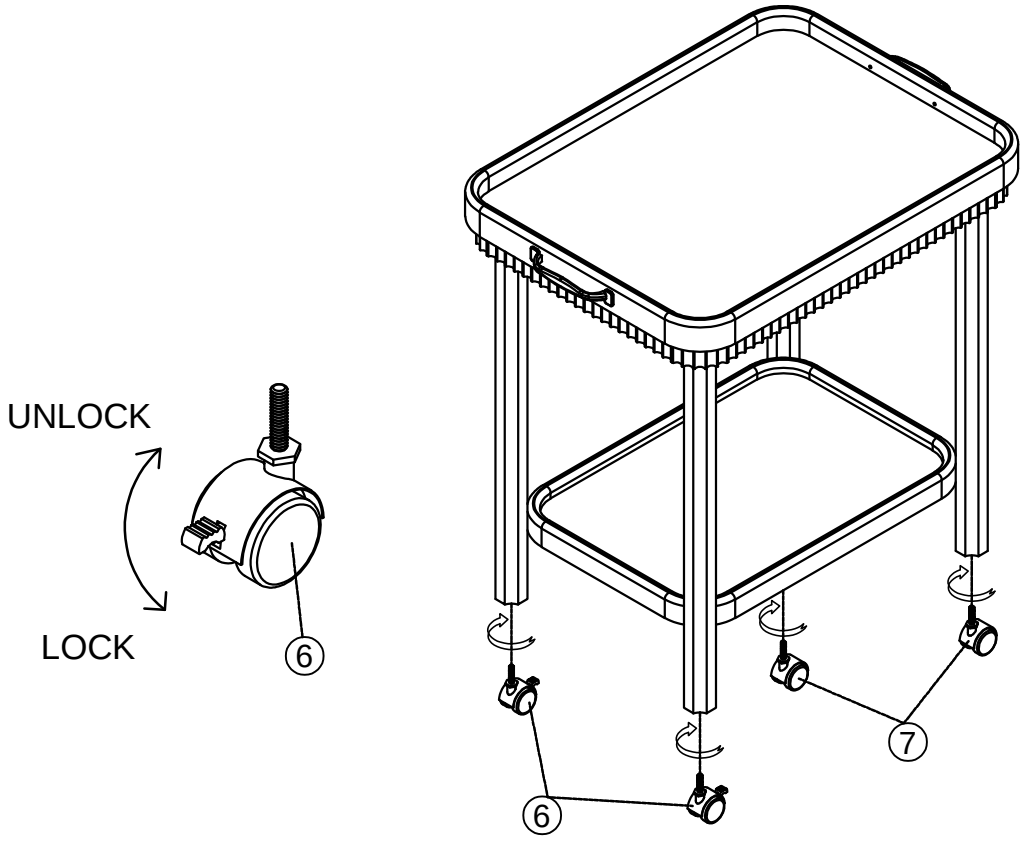

- Attach Locking Caster⑥*2, Non-locking Caster⑦*2 to the Step 4 as show.

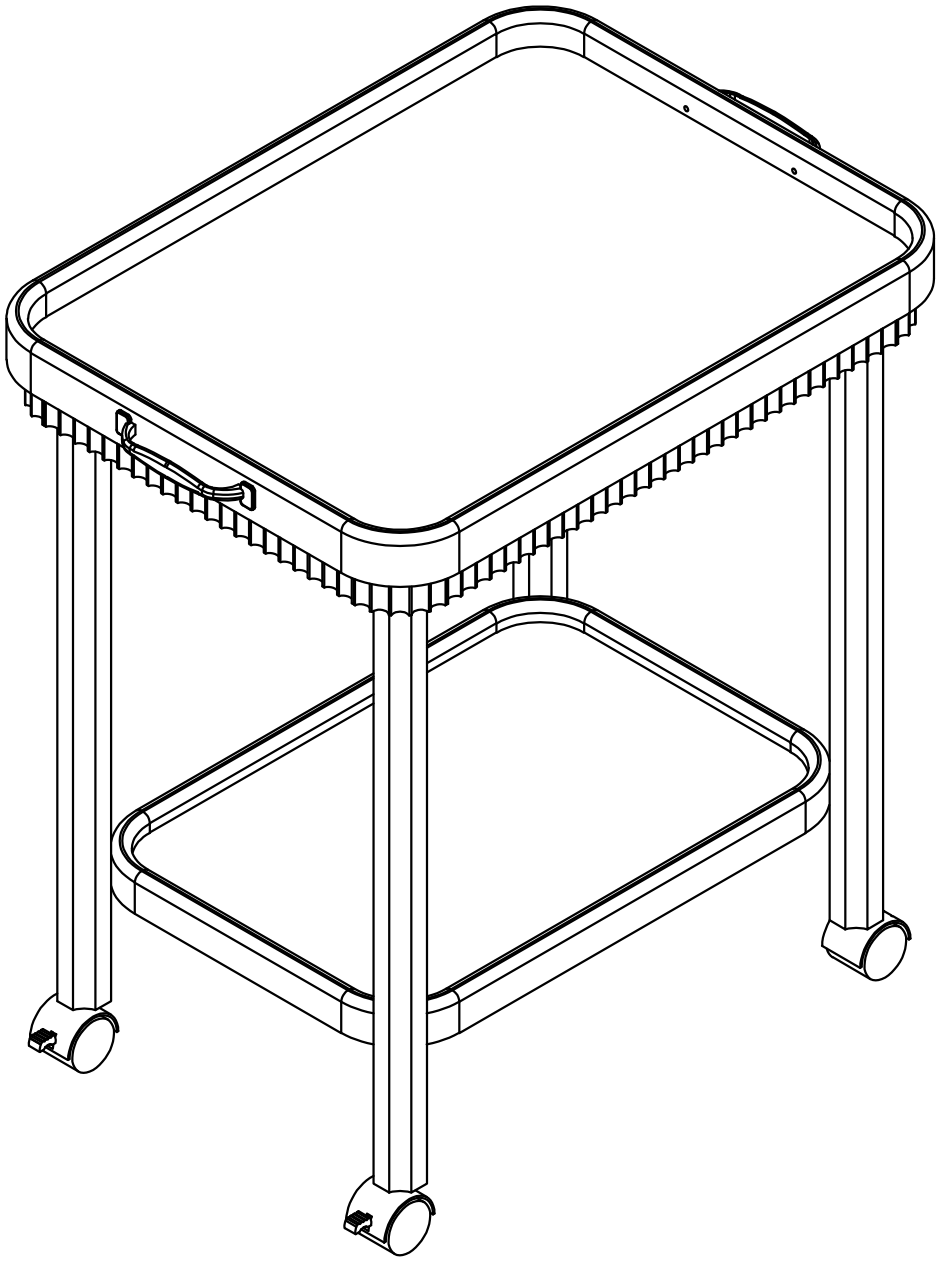

Turn the KITCHEN BAR right side up
Place the KITCHEN BAR on a flat, level surface to make sure it is balance.
Inspect the KITCHEN BAR and make sure all parts are adequately connected. Then EXERT pressure, floorwards onto the KITCHEN BAR with both hands or carrefull sit onto the KITCHEN BAR. This pressure will help align all parts at all joints. Check for wobbles on a LEVEL surface.
If no wobbles are found proceed to tighten the screws or bolts in a sequential manner, until evenly secured.

CAUTION 1: When tightening these screws or bolts, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp.
WARNING ! IF THE KITCHEN BAR IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Your KITCHEN BAR **is** ready to be used.
CAUTION 2: This KITCHEN BAR can only be used on a flat, level surface.