
UTV SAN

Owner's Manual

2WD

CE

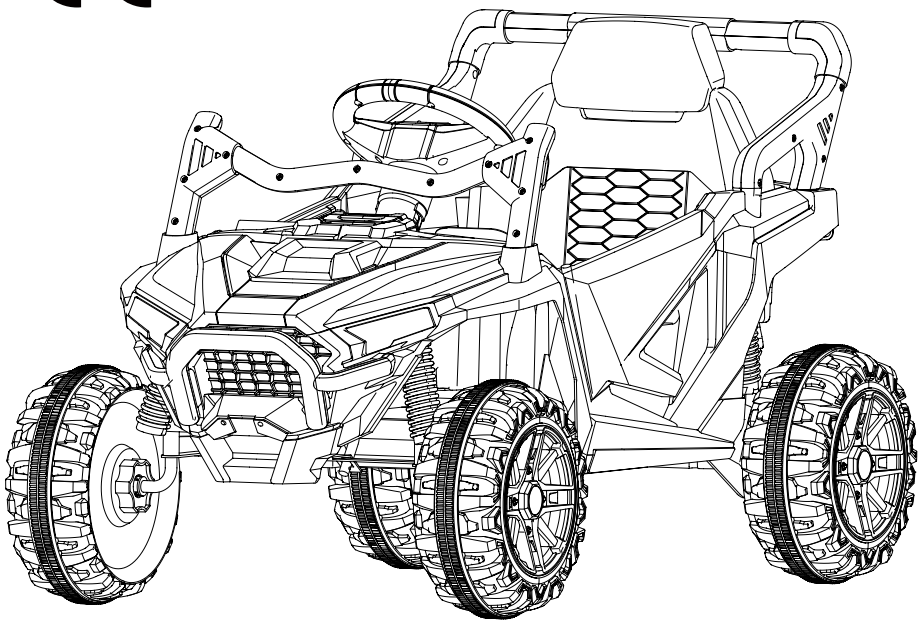

MADE IN CHINA

Product appearance and colors may vary from the photo.

Please read the owner's manual carefully.

CE 1 3+ yrs 30kg 0-3

1 About Your New Ride-On

This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

SPECIFICATIONS:

Battery:	24V4.5Ah
Charger:	input :110-120V-50-60Hz output:DC24-28.8V
Suitable age:	3+ yrs
Load Capacity:	30kg
Speed:	3.5-5.5 km/h
Size of car:	98*57*58CM
Power way:	Charging type
Charge time:	8-10 hours

⚠ WARNING!

This toy must be assembled by an adult.

⚠ WARNING!

The remote control is not a toy, and is only allowed to be operated by adults.

2 User Notice


⚠ WARNING!

- CHOKING HAZARD - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- ADULT ASSEMBLY REQUIRED.
- Always remove protective material and poly bags and dispose before assembly.
- Recommended protective equipment (helmet, gloves, knee-pads, elbow-pads, etc). Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep the child in view while they are in the vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 30kg.
- This toy has no brake.
- Use only battery(ies) and charger specified by the manufacturer. Using another battery or charger may cause a fire or explosion. Do not use the battery or charger for any other product.

⚠ BATTERY INFORMATION


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- For the remote control, rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

3 Parts Diagram

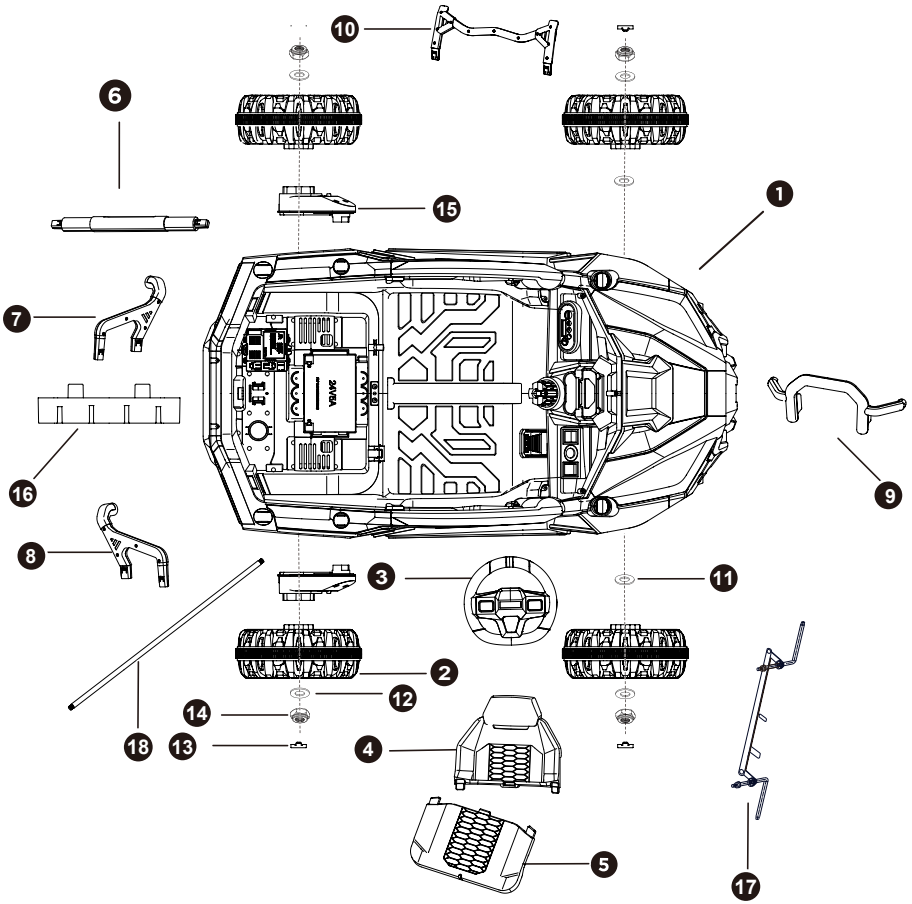

Assembly tools required:

Screwdriver
(Included)



Screwdriver
(Not included)



Scissors
(Not included)



(2 x AAA 1.5v - Remote Control)
*** Batteries Not included**



4 Parts List


1 Vehicle body
x1



2 Wheel
x 4




3 Steering wheel
x1



4 Seat backs
x1



5 seat cushion
x1



6 Rear armeest
x1



middle accessories

7 Rear armeest
x 1



left accessory

8 Rear armeest
x 1



right accessory

9 Ex-paul
x1



10 Windshield
x1



11 M10 washer
x2



Placed in the rear and front axle

12 M8 washer
x6



Placed in the rear and front axle

13 Hub cap
x 4




14 Lock nut
x6



Placed in the rear and front axle

15 Gear box
2WD x2



16 Rear axel
bracket
x 1



17 Bogie
x1




18 Back straight axis
x1



19 Instructions
x1



20 Socket wrench
x2



21 Charger
x1




22 Remote control
x1




23 M4×12 Screw
x 8



5 Assembly Instruction

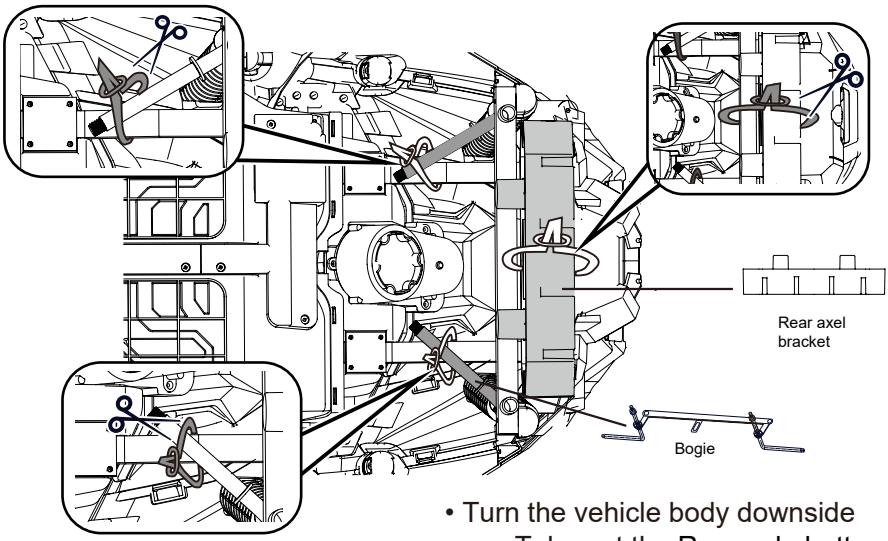


• Turn the vehicle body downside up. Take out the Rear axle bottom support and Bogie

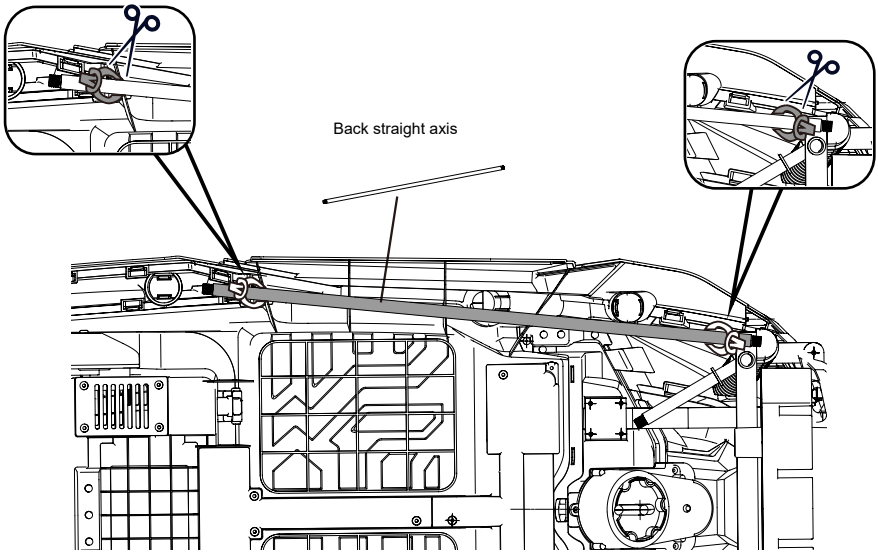


• Turn the vehicle body downside up.
Take out the Back straight axis under the body.

6 Assembly Instruction

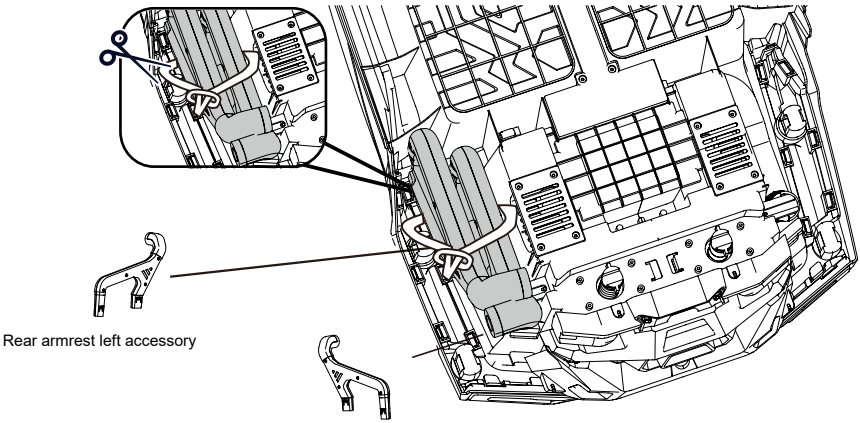


• Turn the vehicle body downside up. Take out the Rear armrest right accessory and Rear armrest left accessory

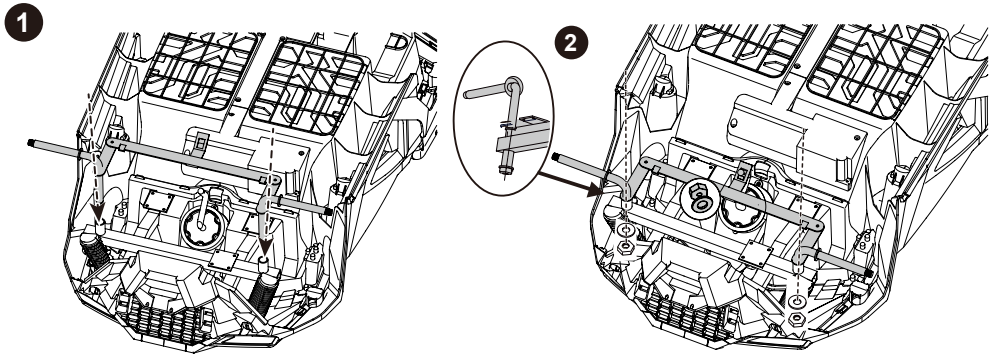

1. Turn the body over and insert the front axle into the sleeve supporting the square tube. Pay attention to the orientation of the front axle. The position of the front section of the steering tab should be towards the direction bar, and let the direction bar go through the hole

2. After passing the front axle end through the sleeve on the support square pipe, slide the washer through the sleeve to the rear end of the front axle


7 Assembly Instruction

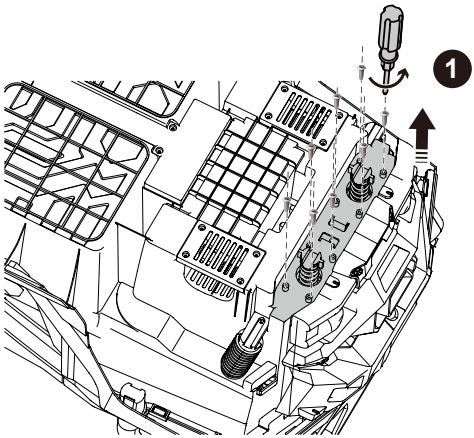



1.Use a screwdriver to take out the screws fixed to the car body.

2. Fasten the rear axle base cover to the bottom of the body end

3.Screw the rear axle undercarriage to the bottom end of the body

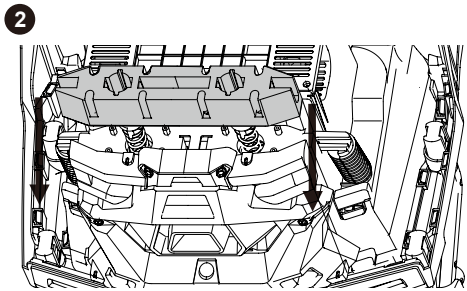

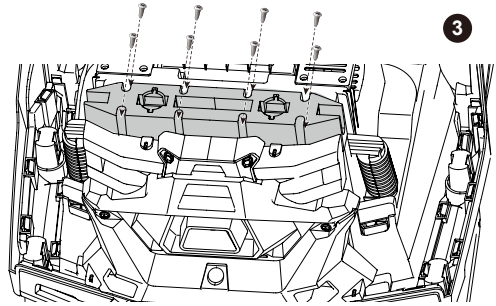


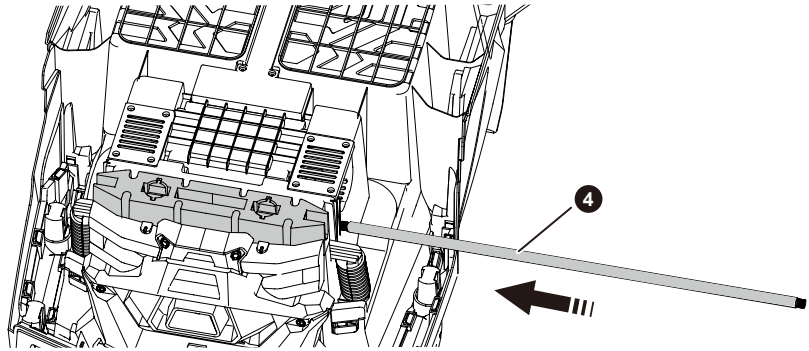

4. Insert the rear axle into the rear axle bottom support and the seam left after the body is fixed

8 Assembly Instruction

Rear botttom View **2WD**

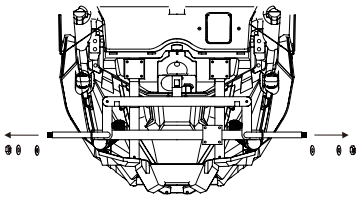


1. Slide a M10 washer onto the front axle.


2. Slide a wheel onto the front axle.

3. Slide a M8 washer onto the front axle.


4. Tighten a lock nut to the end of the front axle with a socket wrench (included)

5.“Snap" the hub cap cover to the front wheel. Repeat for the other front wheel.

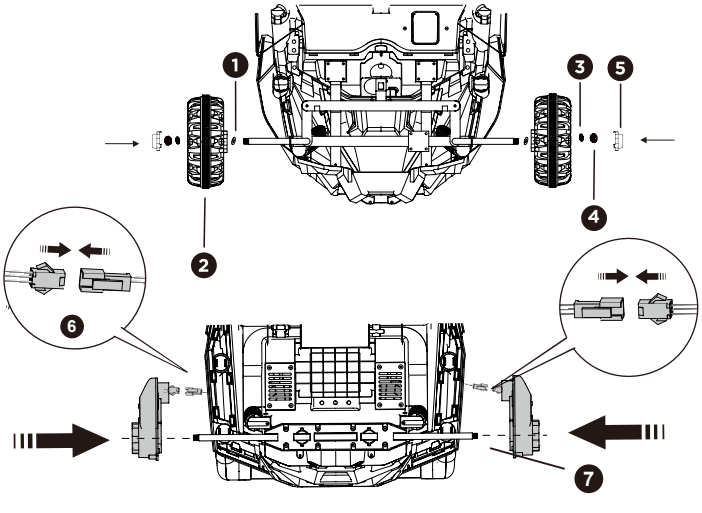


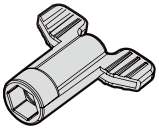

Tools required:
Socket wrench

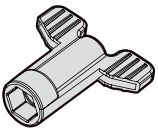

Tools required:
Socket wrench

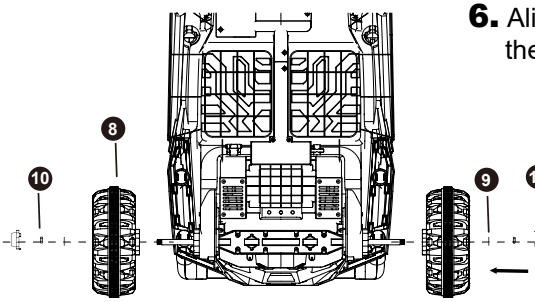

6. Align the motor wire connector and connect the power wire connector

7. Slide a gear box onto front axle, and make its square groove match up with square part on the front axle (fig 1a). Insert the connector on the gear box into the connector on the body (fig 1b).

8. Slide a wheel onto the front axle. Ensure the gear part inside the wheel matched up with gear box.

9. Slide a M8 washer onto the front axle.


10. Tighten a lock nut to the end of the front axle with a socket wrench (included).

11. “Snap” the hub cap to the front wheel.Repeat for the other front wheel.

9 Assembly Instruction

⚠ WARNING!

- **Be sure to connect the battery plug before installing the seat.**

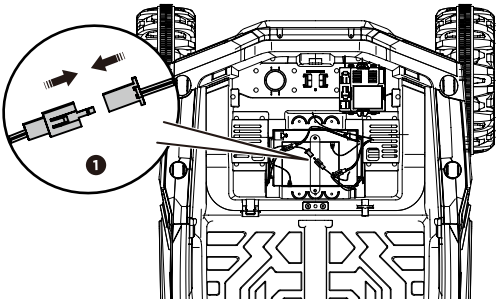



1.Connect the battery cable. Turn on the power switch.press the forward swtich,then press the foot pedal to test. If the car can move properly, itis ok.If it cannot be turn on or go forward, please reconnect all wiresto avoid poor contact.

2. Fit the tabs on seat back into the holes on the body.

3. Insert the tabs on the seat cushion into the holes on the seat back.

4. And secure it with the one screws you just removed in step two.

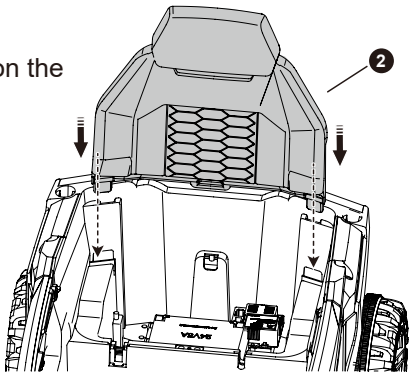


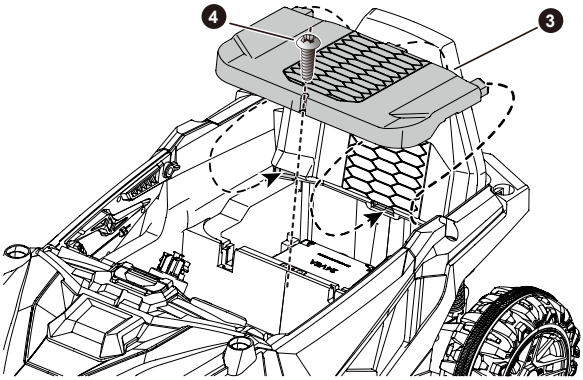

10 Assembly Instruction


1. Take out the left and right accessories of the rear armrest and insert them into both sides of the ， pushuntil you hear it “click into place.

2. Fit the light bar into the holes in the body, push it until you hear it “click” into place.

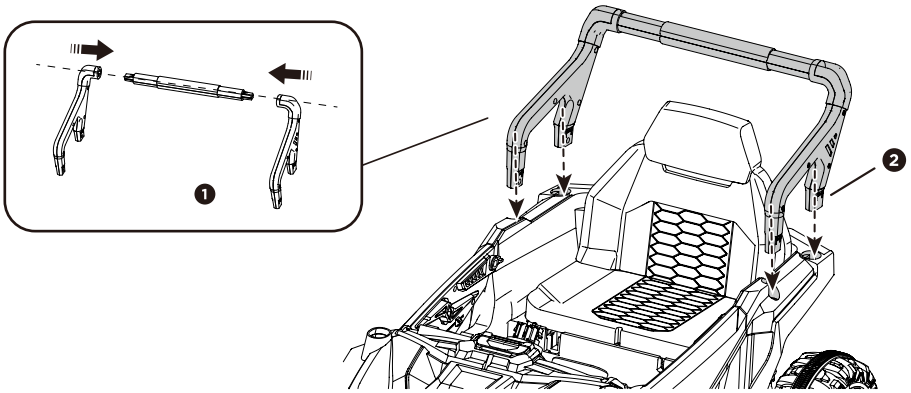


3. Plug the connector on the steering wheel into the connector from the steering wheel holder, and hide the plugged connectors into the hole in the steering wheel holder.

4. Insert the steering wheel to the steering wheel holder, pushuntil you hear it “click” into place.

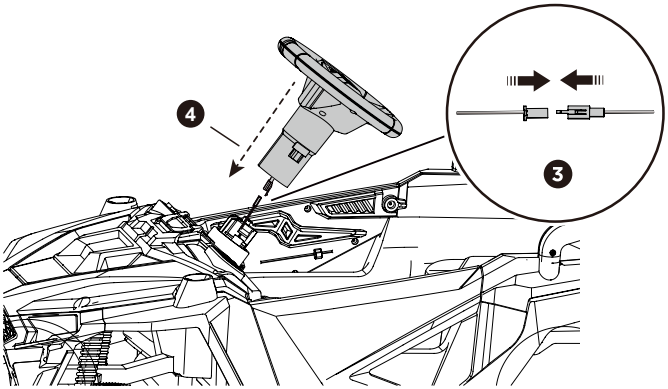


11 Assembly Instruction


1. Fit the windshield to the body.

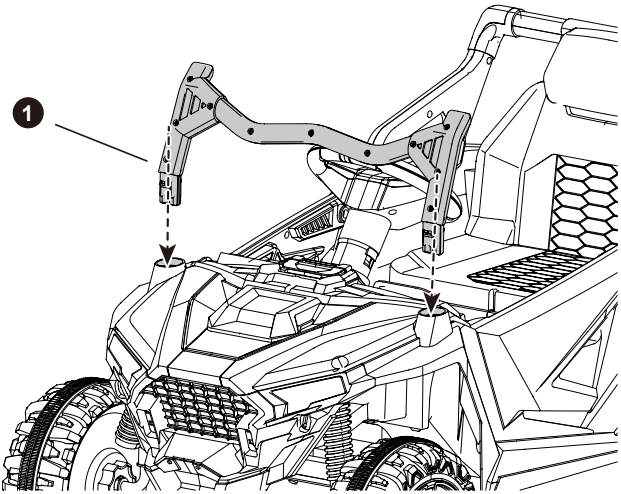


2. Fasten the assembled front bar assembly to the front fastener from front to back by screws. Note that the screws on both sides should be driven into the front fastener from back to front

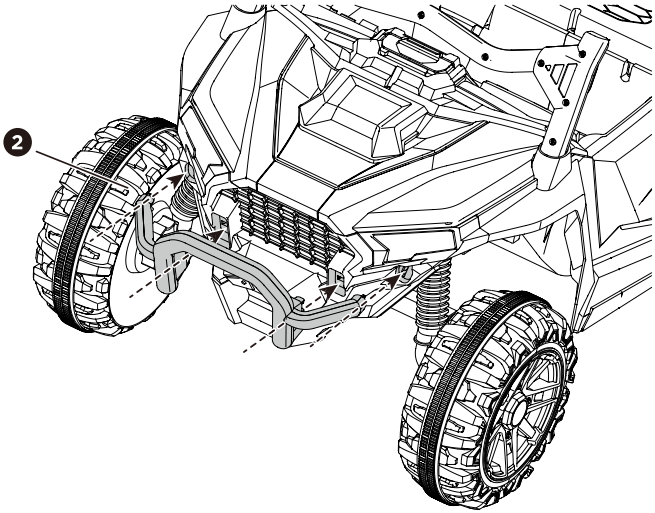


12 Use

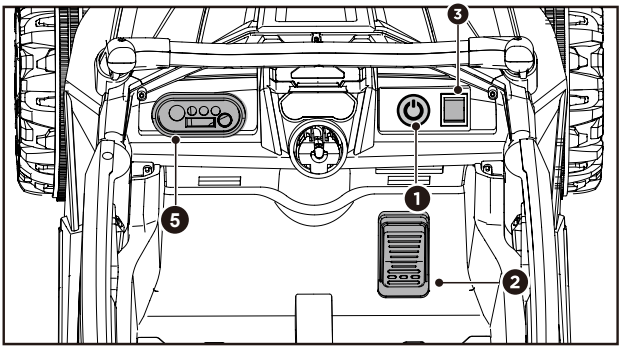

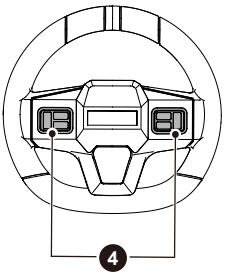

1. **Power button:** Turn the product on and off.
2. **Foot pedal:** Applies power (speed) to the product.
   - To move the product, press the pedal down.
   - To brake or slow down, release pressure from the pedal.
3. **Forward/reverse switch:** Change the direction that product moves from forward to reverse.
   - To move the vehicle forward, shift the lever to top position.
   - To move the vehicle backward, shift the lever to down position.
4. **Sound buttons:** Press for sound playing.
5. **Player**

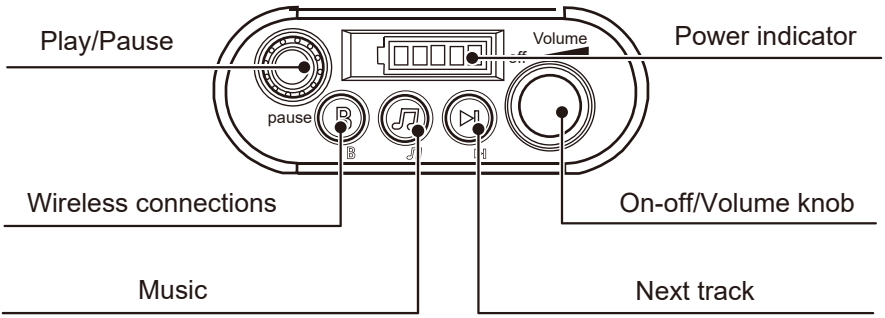


13 Use

⚠ WARNING!

- **The remote control should only be used by an adult.**

Attach the battery to the remote control

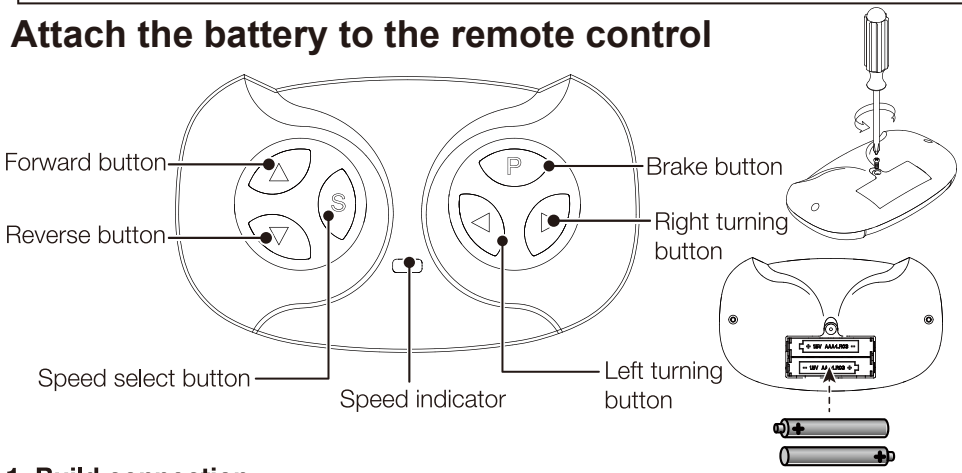

1. Build connection

- Press and hold the forward (Δ) and reverse (∇) buttons on the **controller** for 3 seconds, the speed indicator flashes, mean that the remote control is in the connected state. Then power on the **vehicle**:
- The speed indicator goes to long bright, means the connection successful.

* If the speed indicator no response (keep flashing), means the connection failed. Turn off the remote conntroller (by removing the batteries) and the vehicle. And try again.

2. Brake button

Press the button to stop the vehicle, press it again to release the brake.

3. Speed select button

The switch operates the vehicle to move in low, normal and high speed.

NOTE:


- Leave the remote controller idling for about 10 seconds, it will shut down automatically.


14 Charging

⚠ WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This charging protection will cut all the functions of the vehicle when charging.**

- The vehicle must be OFF when charging.
- When the vehicle begins to run slowly, recharge the battery.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

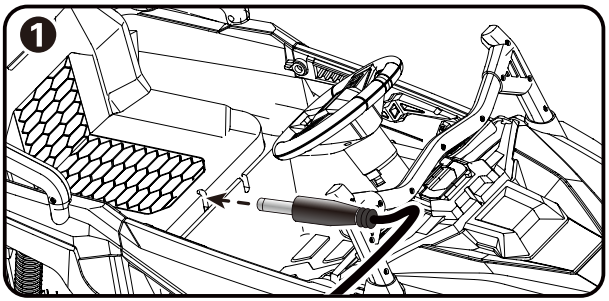

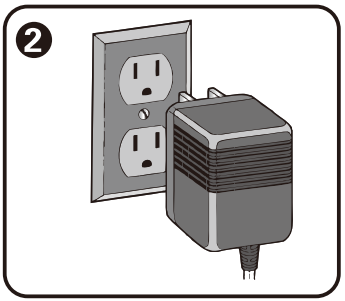

1. Plug the charger port into the input socket (the socket is below the seat).

2. Plug the charger plug into a wall outlet. The battery will begin charging.

NOTE:

- Damage to the battery may occur if it is completely drained.
- Charge the battery for about 8 - 10 hours.
- Do not charge the battery for more than 20 hours.
- **Charge the battery at least once a month even if not operating the vehicle for a long time to maximize the battery life.**
- Do not charge or store the battery upside down.
- Keep the charger and battery away from flames, sparks, or any flammables.

15 Maintaining

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Fuse

The battery features a thermal fuse with a rest fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact after-sales service center.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

RISK OF FIRE. Do not bypass. Replace only with a new fuse.

16 Troubleshooting Guide

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	Battery is dead	Replace battery, please contact after-sales servic e center.
	Electrical system is damaged	Please contact after-sales service center.
	Motor is damaged	Please contact after-sales service center.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, please contact after-sales service center.
Vehicle runs sluggishly	Battery low on power	Recharge battery, please contact after-sales service center.
	Battery is old	Replace battery, please contact after-sales service center.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions, see <User Notice>.

17 Troubleshooting Guide

Vehicle needs a push to go forward	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Please contact after-sales service center.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see <Use>
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Please contact after-sales service center.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Please contact after-sales service center.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help for resolving the problem, please contact after-sales service center.