LuxenHöme

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

CARTON CONTENTS:

Description	Quantity	Sketch
Upper Front Christmas Tree	1	
Upper Back Christmas Tree	1	
Lower Front Christmas Tree	1	
Lower Back Christmas Tree	1	
Truck Base	1	
Christmas Topper Star	1	
Zip Tie	20	
Ground Stake	4	

Before You Start

1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.
2. Retain the instructions for future use and save the carton for storing your tree decoration.

LuxenHome

Instruction Manual


Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

Assembly and Instruction Procedure:

Remove all packaging (i.e., cardboard or plastic) before beginning. We suggest unpacking the decoration on a large cloth.

1.

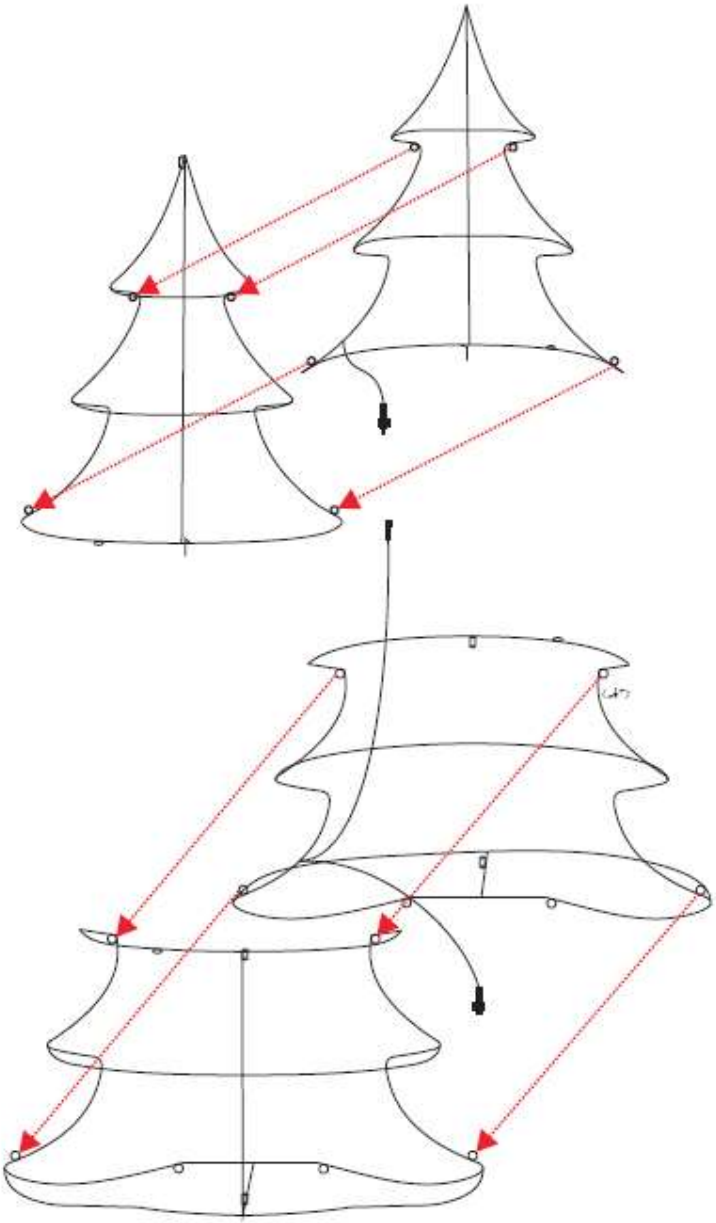


LuxenHome

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

2.

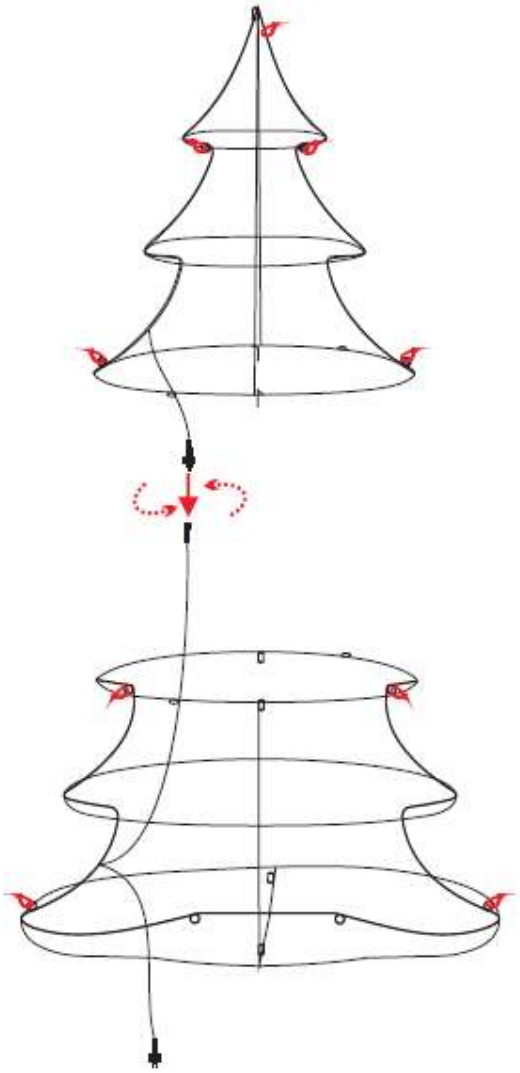


LuxenHome

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

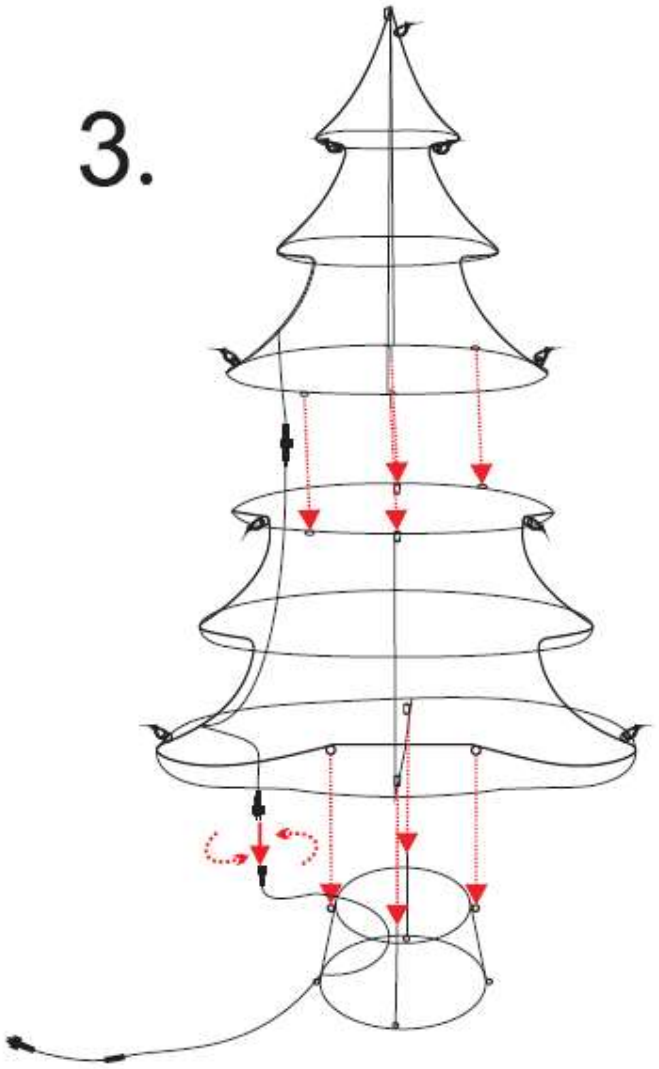


LuxenHome

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

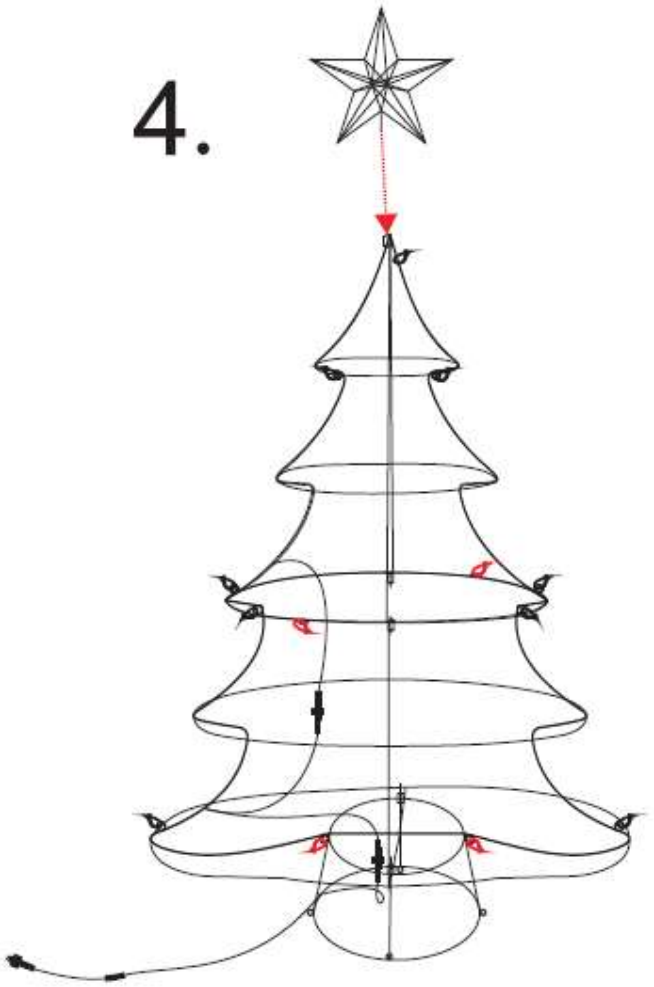



LuxenHome

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074

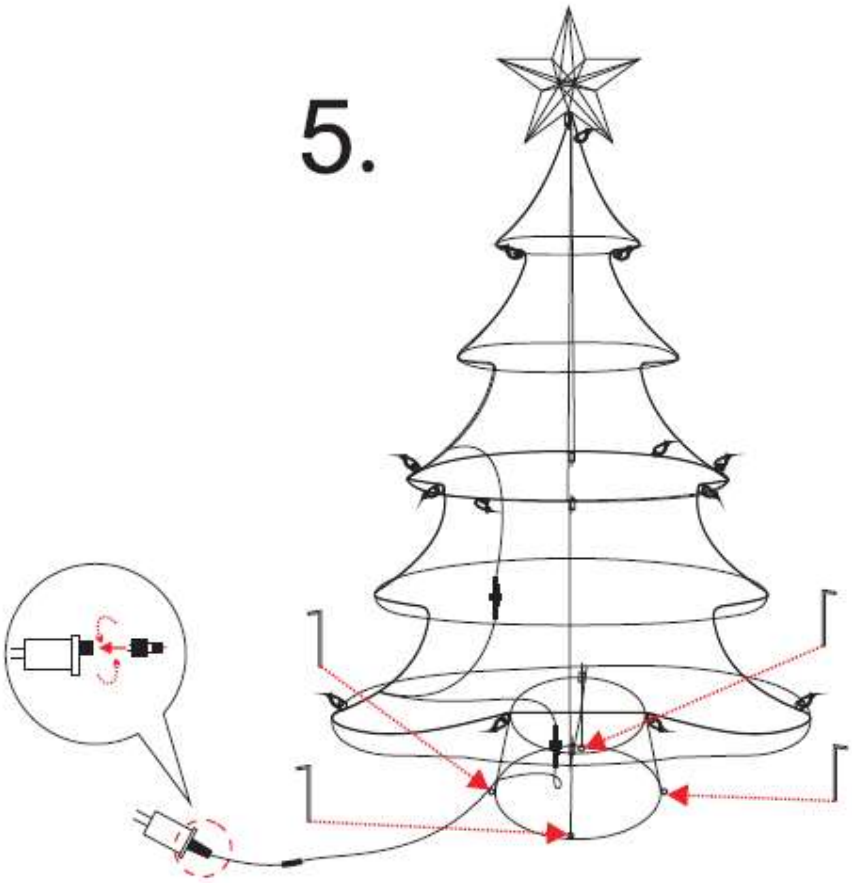

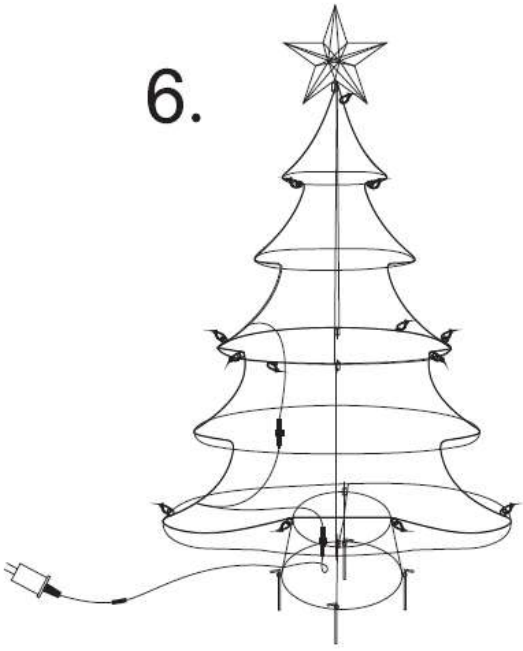

LuxenHome

Instruction Manual

Please save this manual for future reference.

Product Name:	Lighted Christmas Tree Indoor and Outdoor Holiday Decoration
SKU #:	WHHD2074



Warnings:

1. Do not place the tree decoration set near fireplaces, candles, outdoor heaters, or other similar sources of heat.
2. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
3. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

Storage:

1. Disassemble each part by reverse steps of the assembly.
2. Place the decoration set back into the carton.
3. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35˚C (95˚F).