

# EXECUTIVE HIGH BACK CHAIR

## OPERATING INSTRUCTIONS



### FEATURES

#### • BACKREST LOCKING ADJUSTMENT

Turn knob (1) clockwise to lock backrest in position, to unlock, turn knob (1) counter-clockwise and lean back to release anti-kick back mechanism.

#### • SEAT SLIDER

Lift lever (2) to slide seat, release lever (2) when desired position is reached.

#### • TILT TENSION ADJUSTMENT

Turn knob (3) clockwise to increase tilt tension and turn knob (3) counter-clockwise to decrease tilt tension.

#### • SEAT HEIGHT ADJUSTMENT

To raise seat height, remove pressure from seat and lift lever (4) up. To lower seat height, sit on chair and lift lever (4) up.

**NOTE:** It is normal for chair to slightly lower under body weight.

#### • ARM HEIGHT ADJUSTMENT

To adjust arm height, push button (5) in to allow the arms to move up or down freely. Release button (5) once the desired height is reached.

### WARNING

1. Use this product only one person at a time.
2. Do not use this chair unless all bolts screws and knobs are securely tightened.
3. Check that all bolts screws and knobs are tight every three months or as needed.
4. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
5. Do not use chair as a stepladder.
6. Use this chair for its intended purpose only.
7. Use mild detergent only for cleaning.

### LIMITED WARRANTY

Our chairs are warranted\* from the date of purchase against failure due to material and workmanship as follows:

- Lifetime on component parts including pneumatic cylinder, control mechanism, base and casters.
- 3 Years on upholstery fabric and foam against wear and deterioration.
- Leather is not warranted against routine scratching and scuffing, as leather is subject to minor blemishes in use.

*\*All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 300 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of us. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a five year warranty on all parts applies. Fabric is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*

To make a warranty claim, contact Parts Department via e-mail, by Fax, or toll free parts. Provide model number and description of the problem and obtain confirmation number.

At our option we will:

- (a) Supply compatible components of current manufacture.
- (b) Repair the customer's component.


It is the customer's responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by us.




# EXECUTIVE HIGH BACK CHAIR

## OPERATING INSTRUCTIONS


### STEP 1

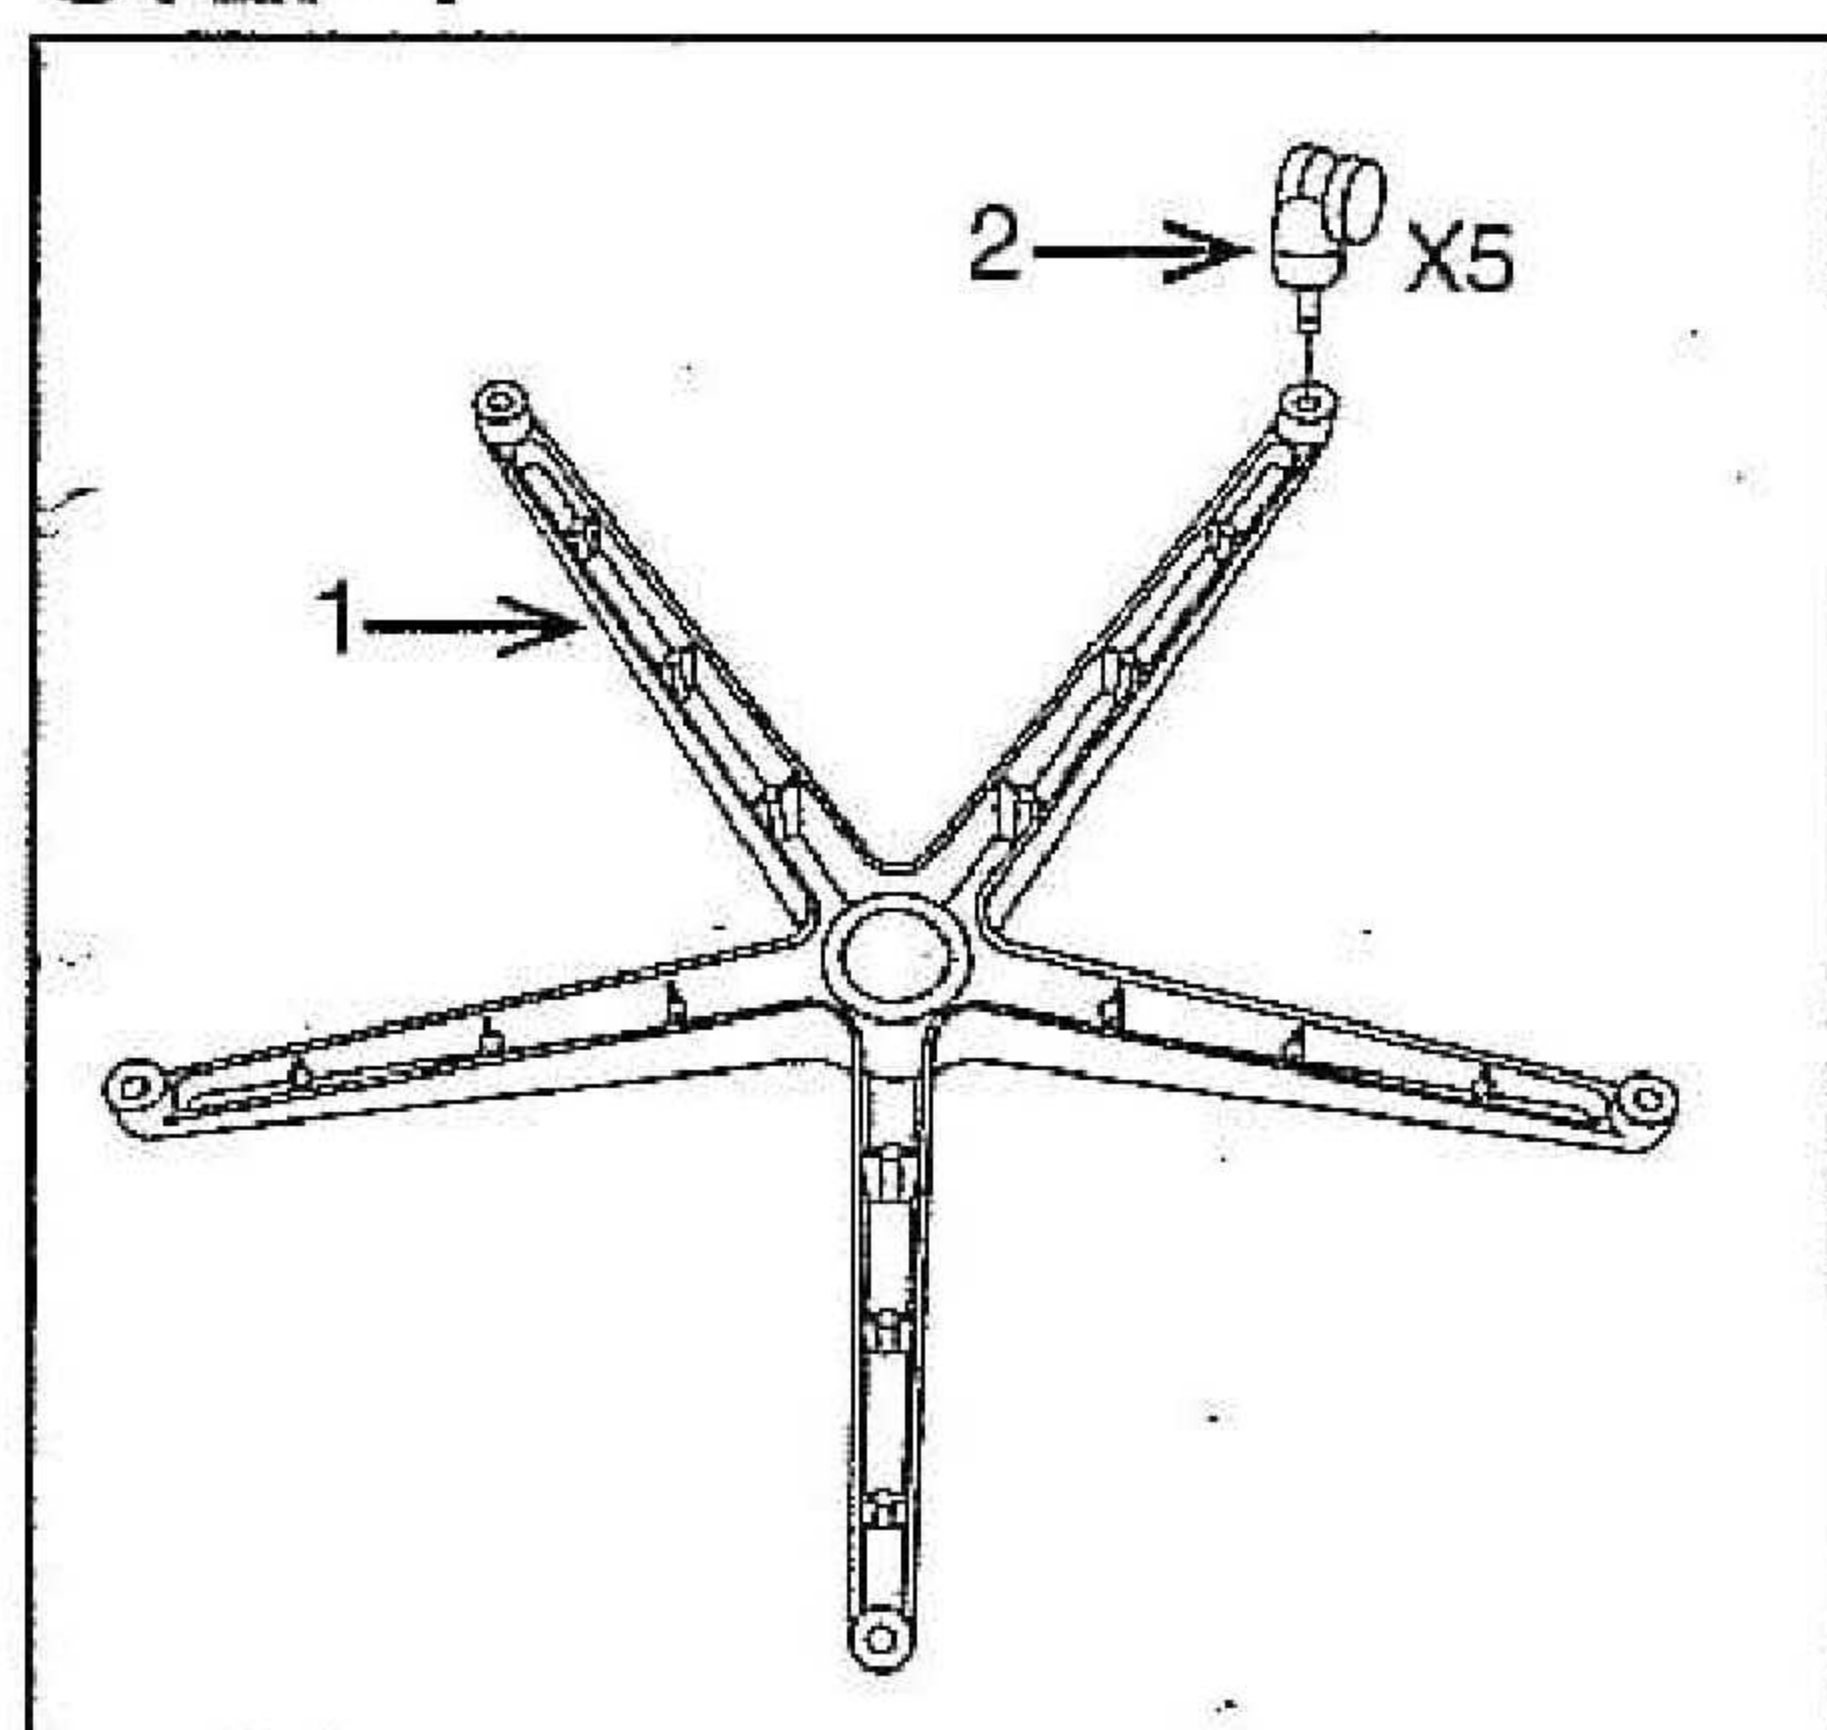


### STEP 2

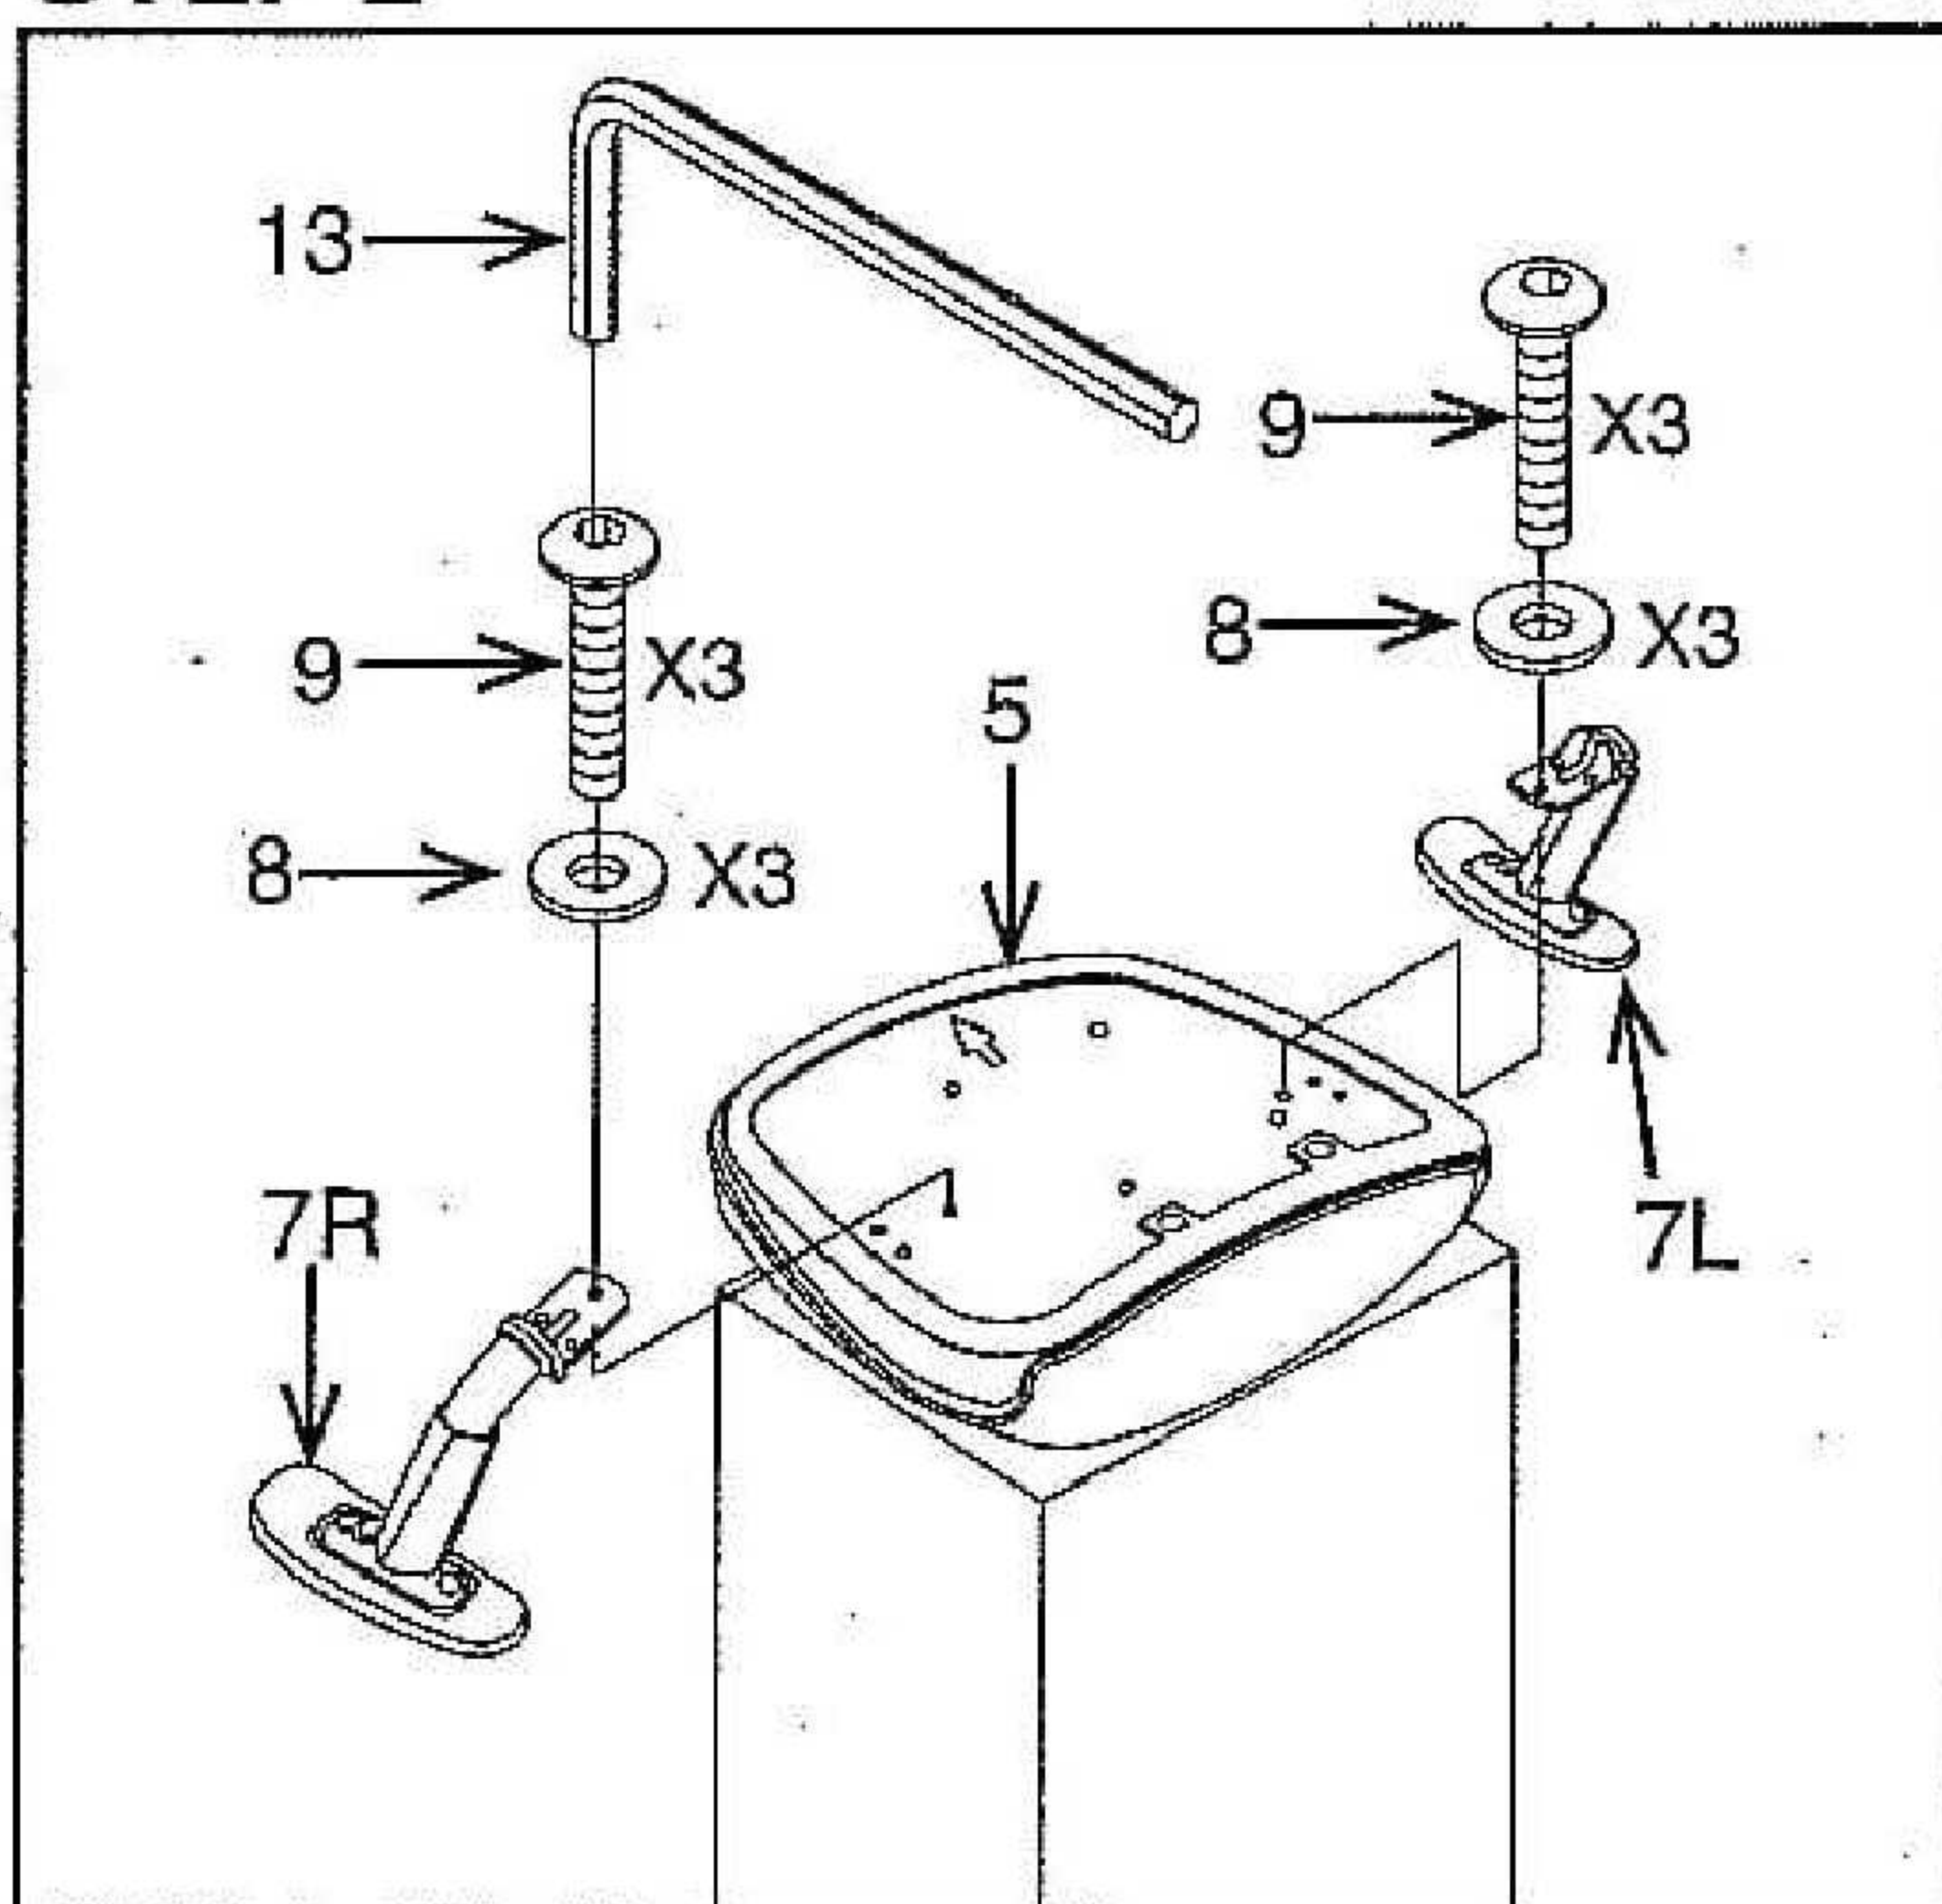


### STEP 3

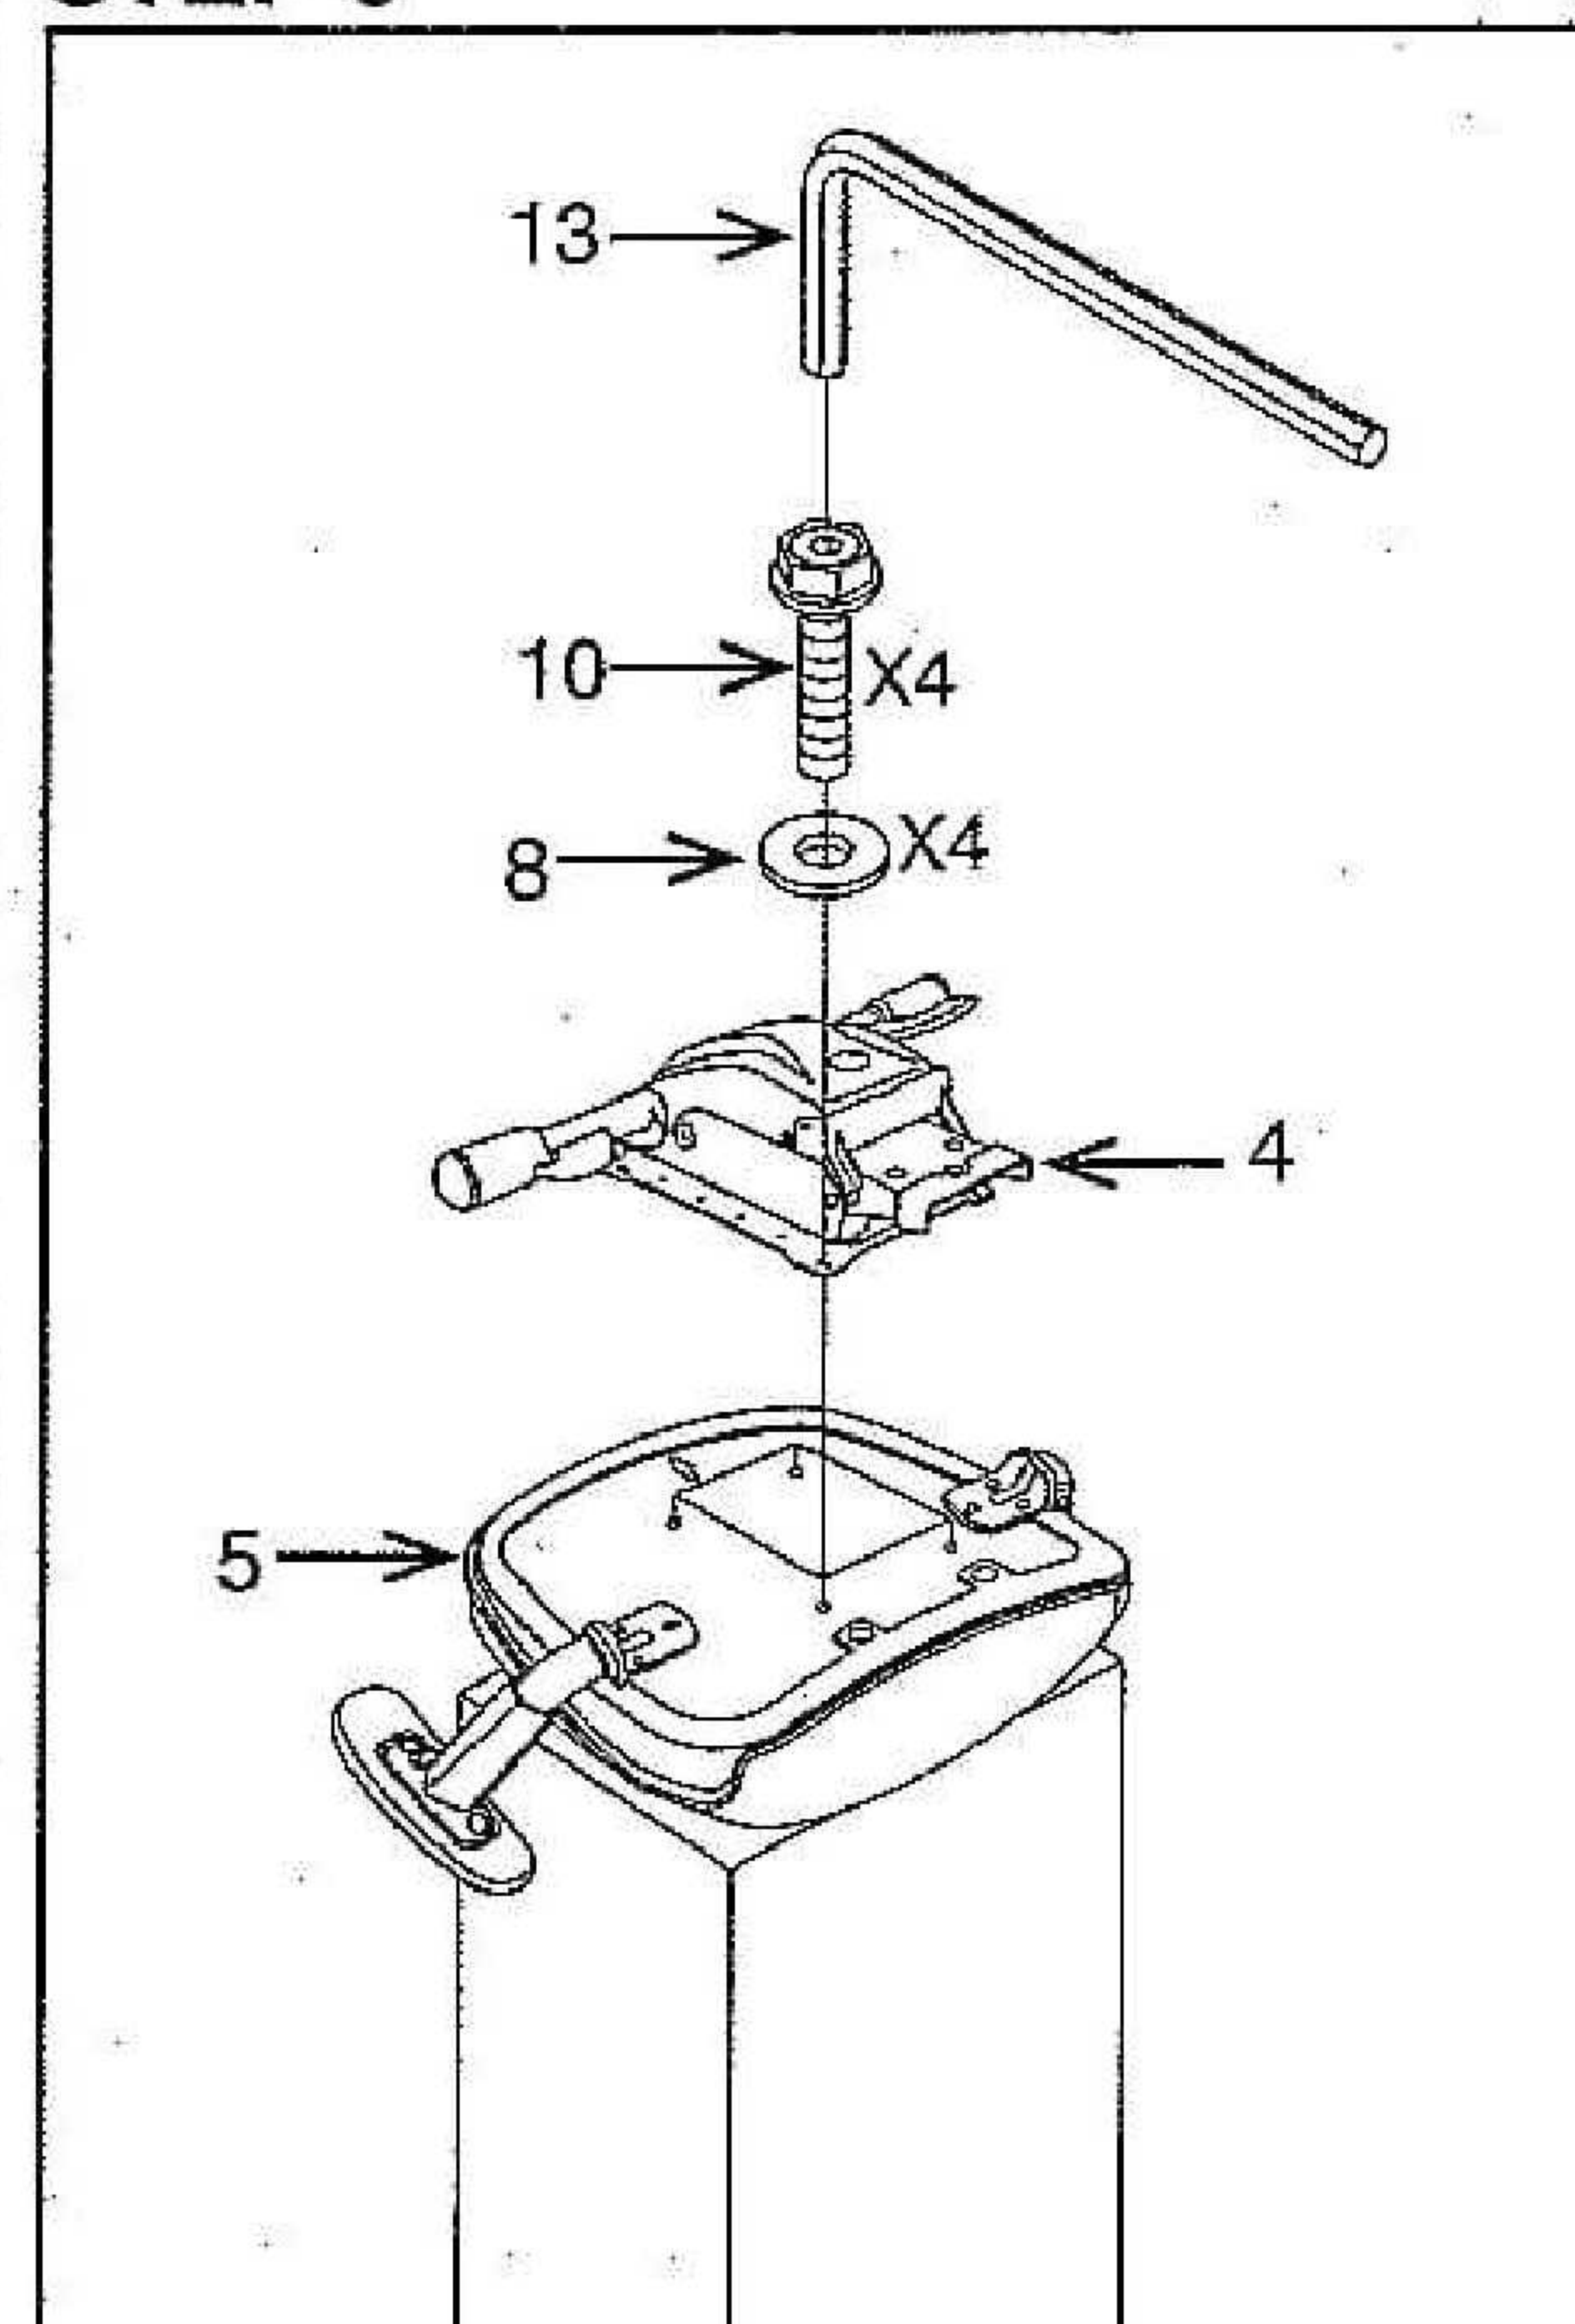

### STEP 4

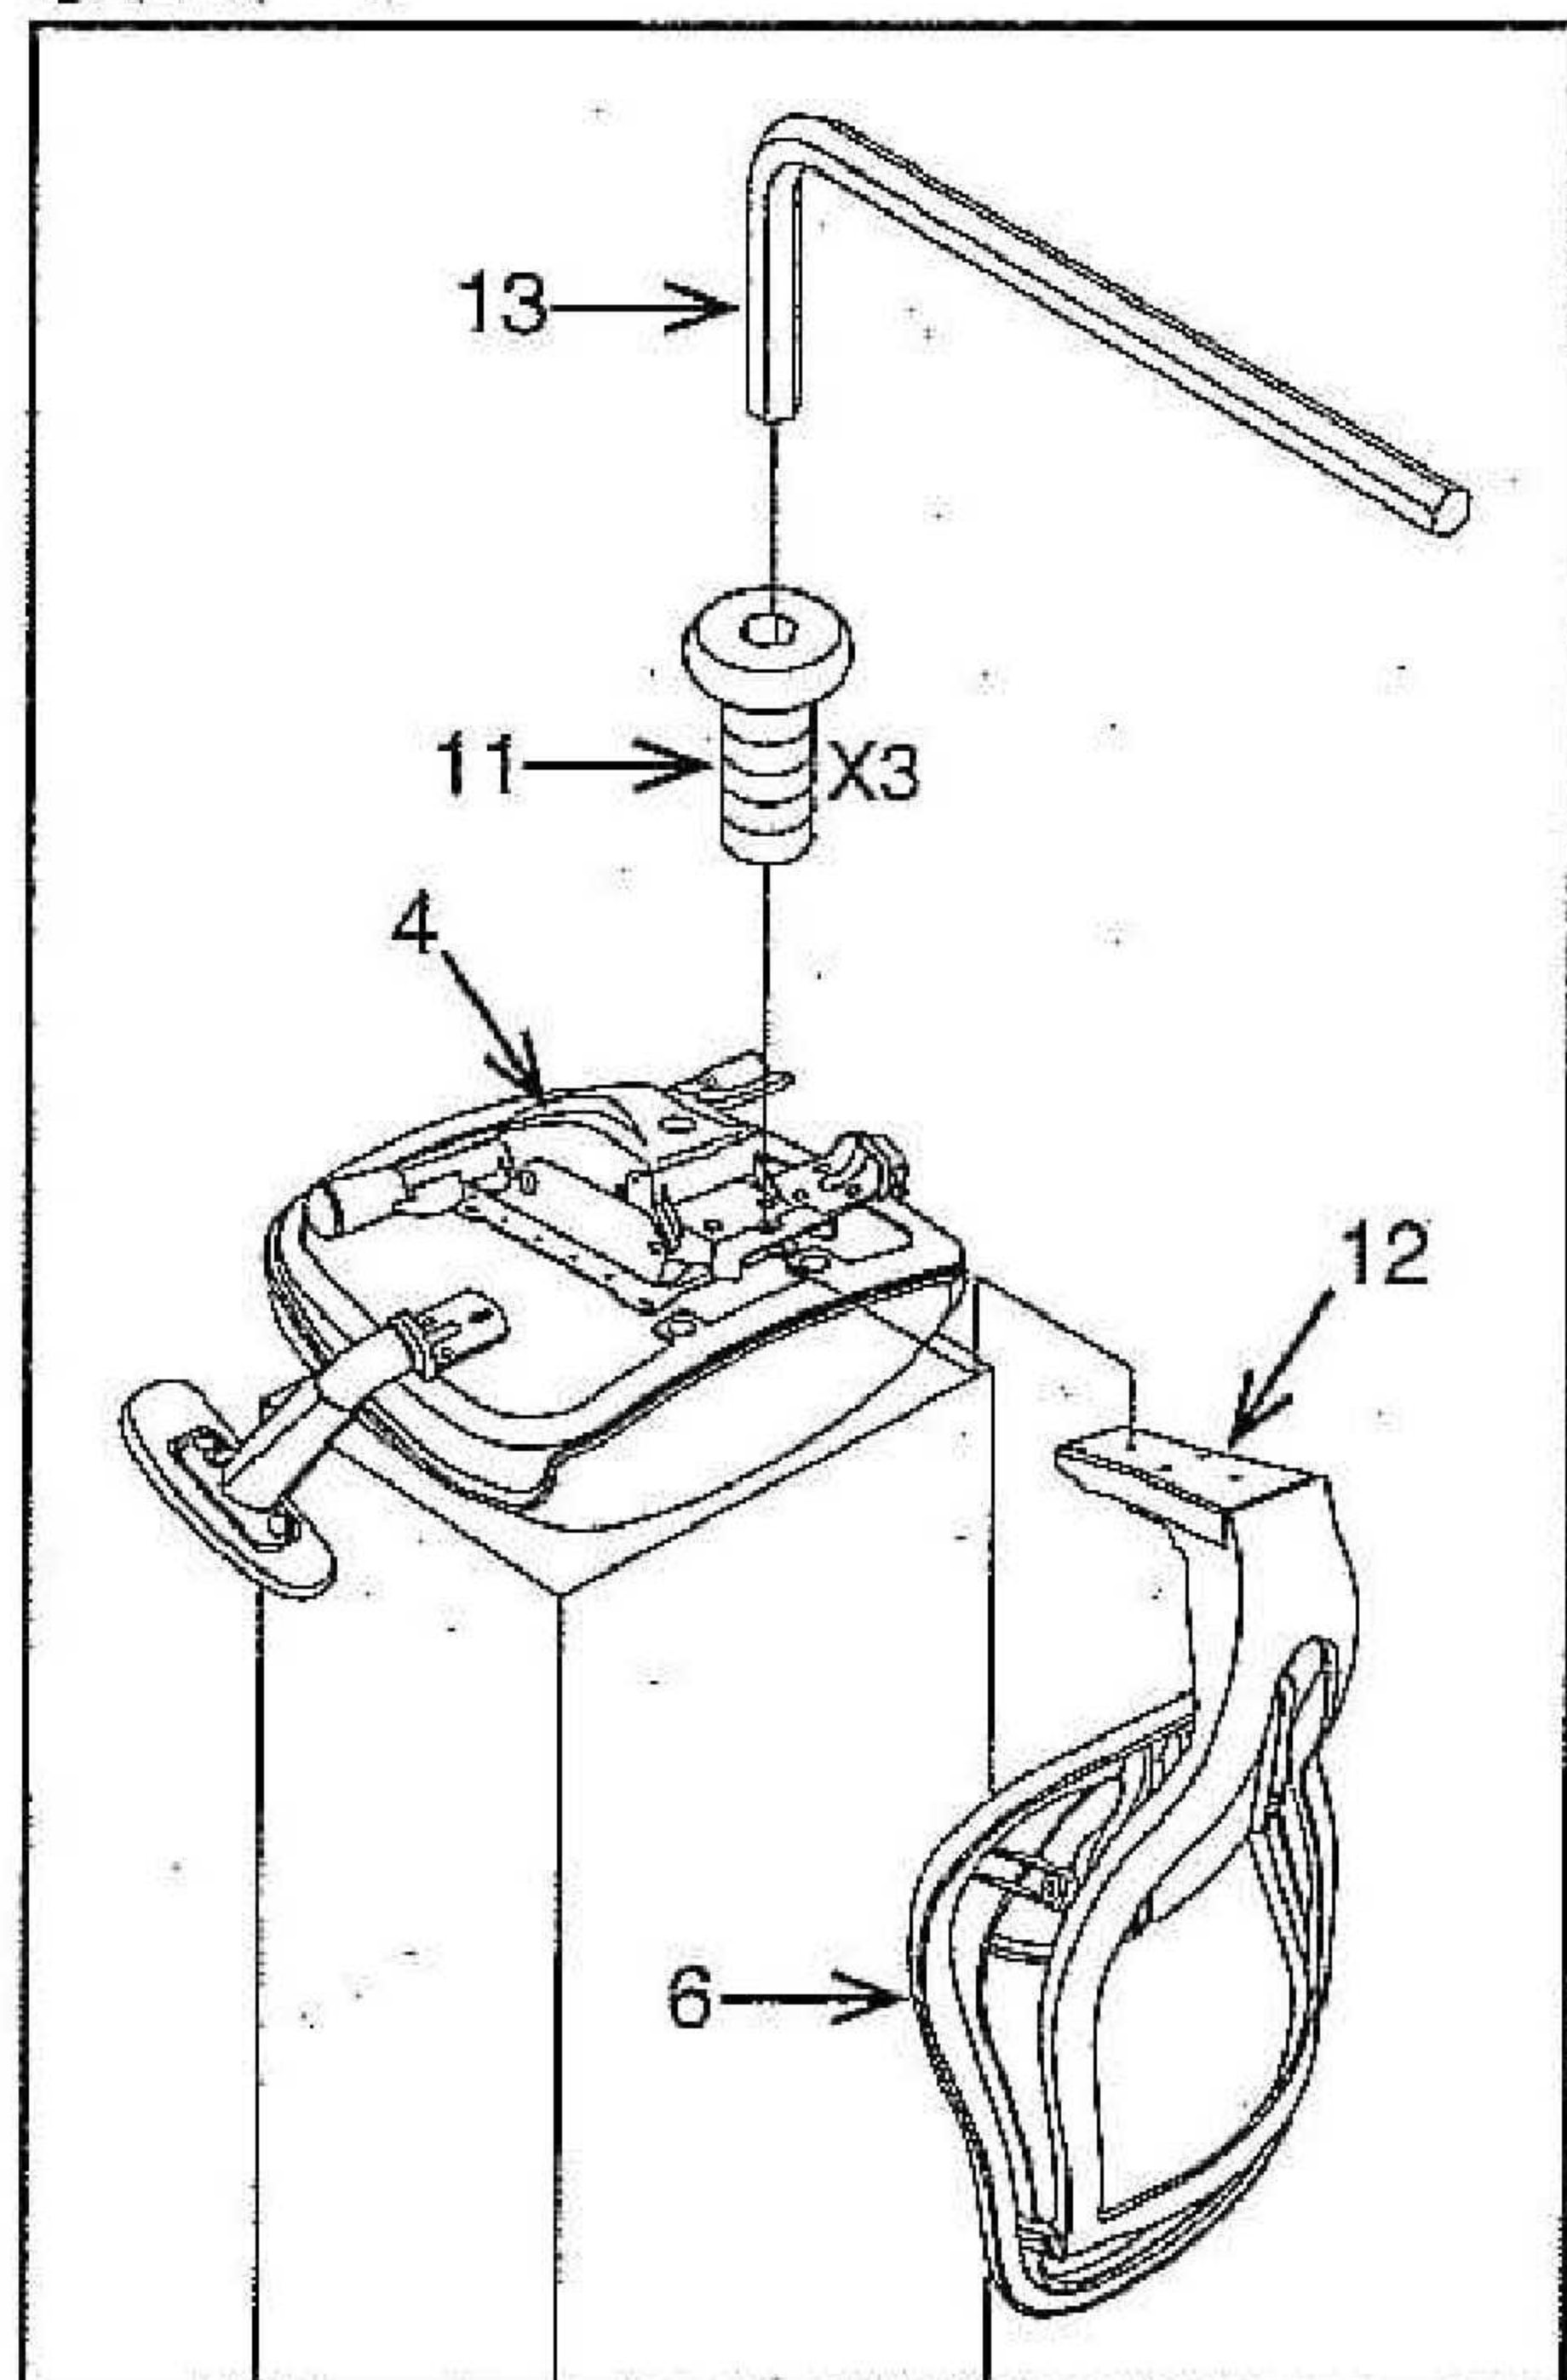

### STEP 5

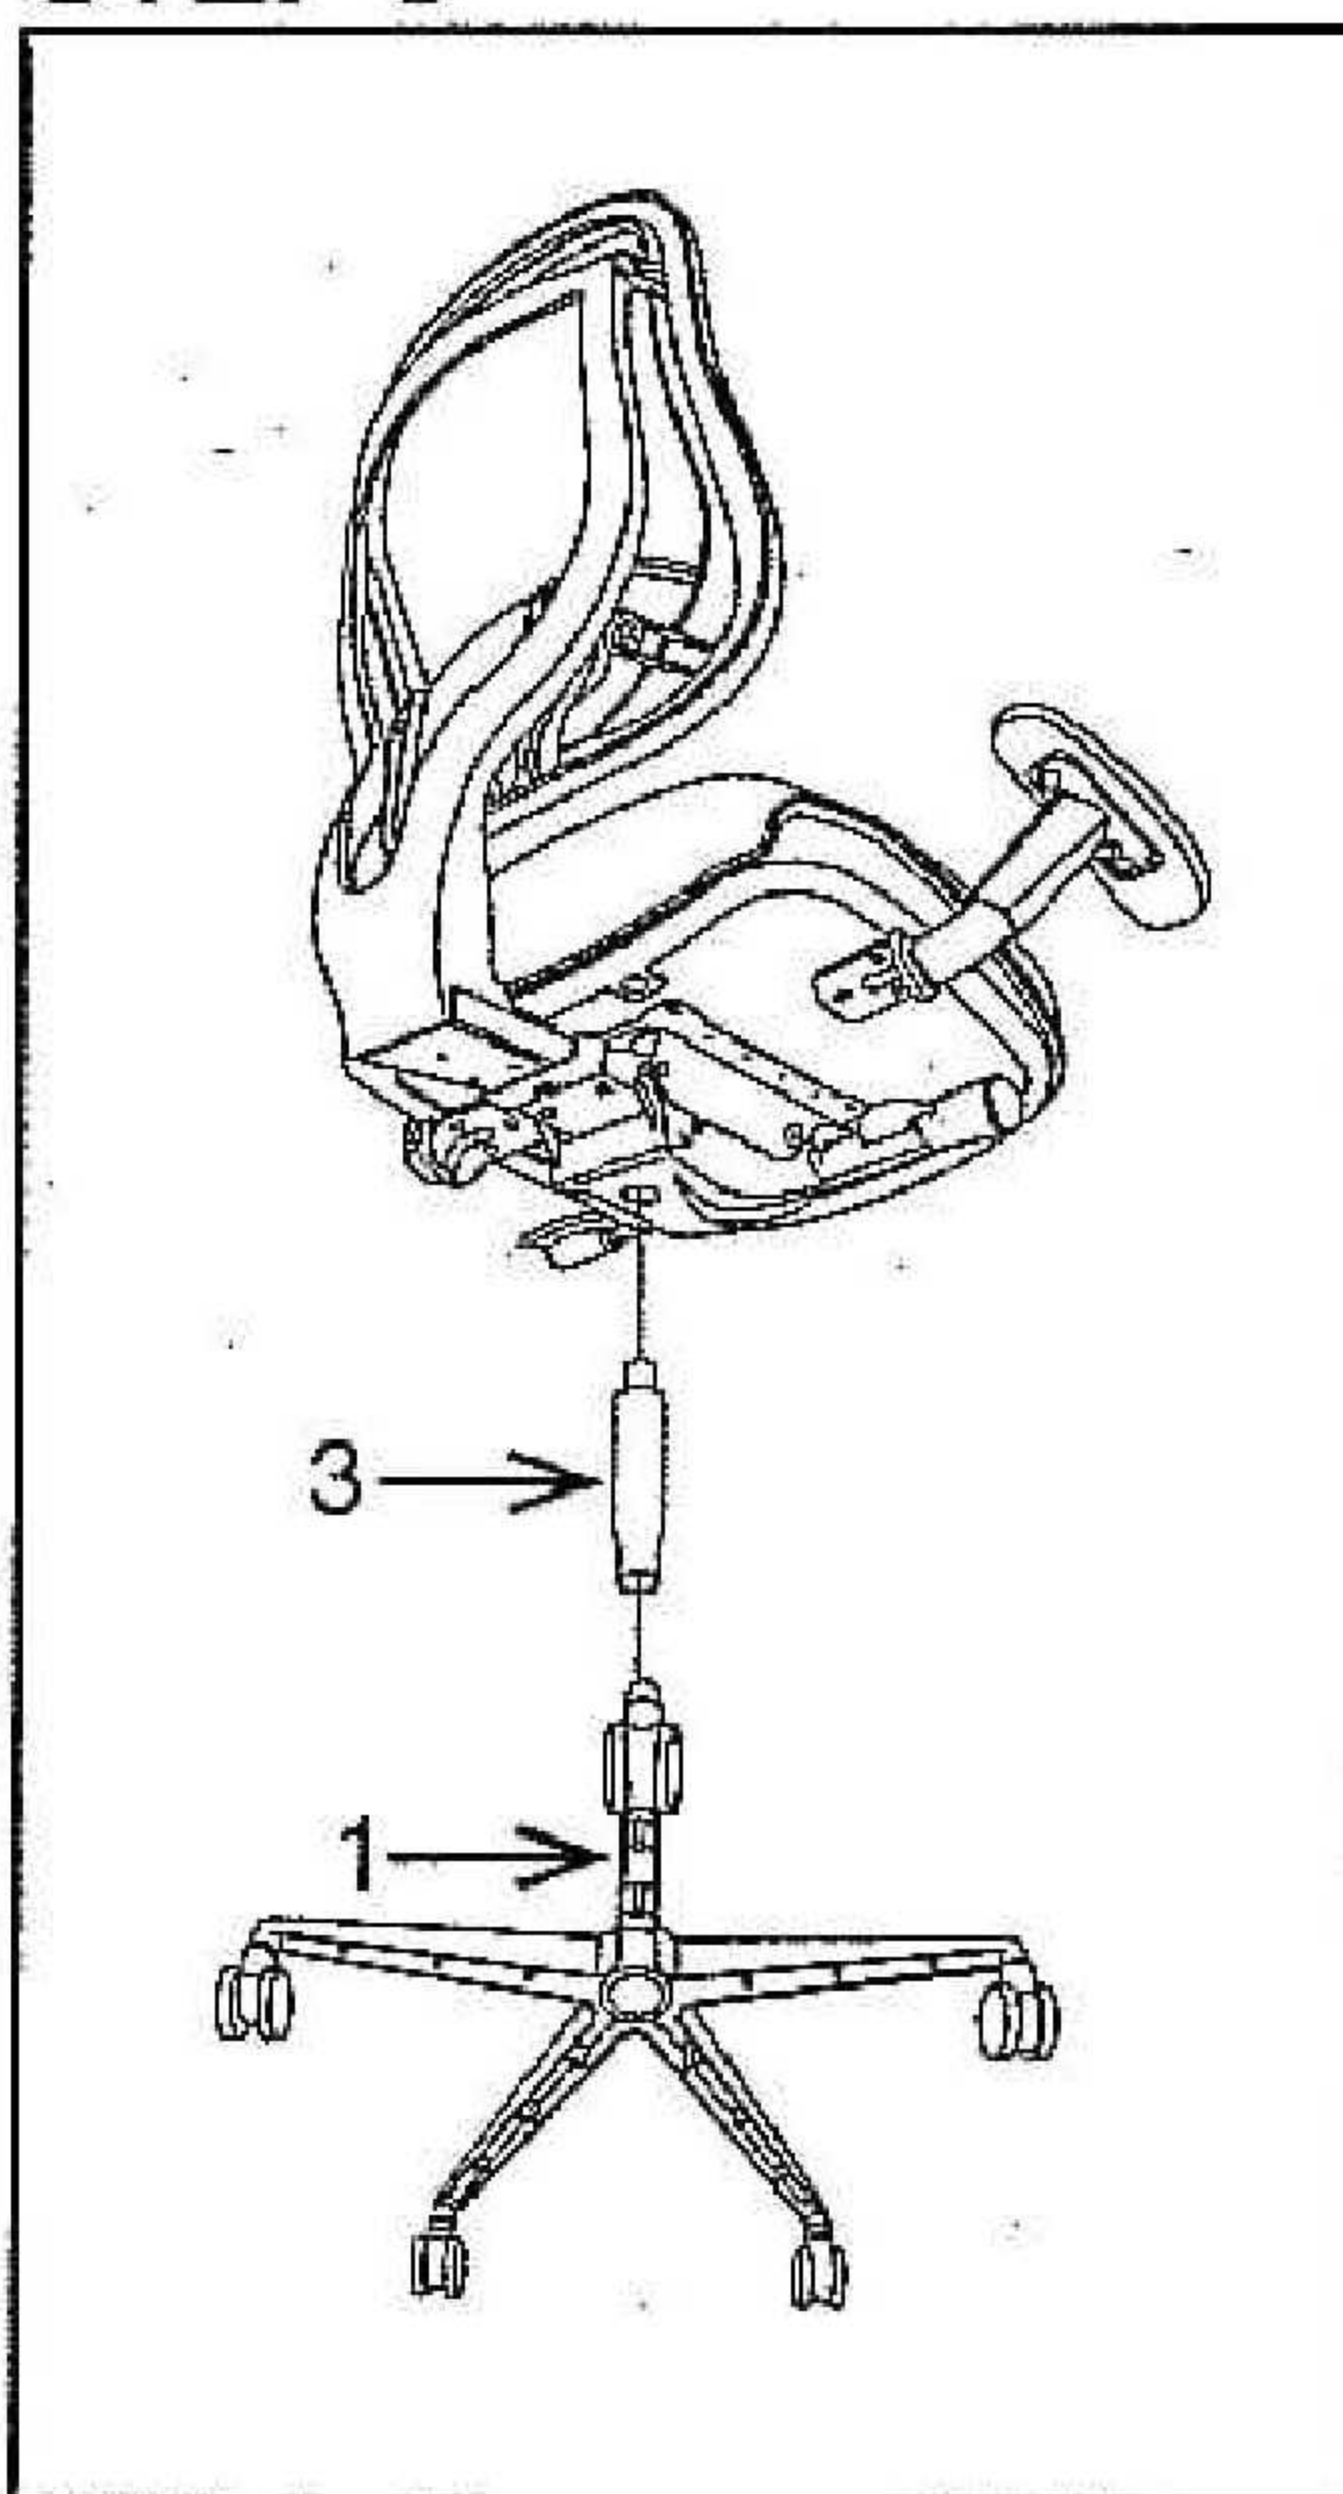

| PART                             | QTY |
|----------------------------------|-----|
| 1. Base                          | 1   |
| 2. Casters                       | 5   |
| 3. Pneumatic Cylinder            | 1   |
| 4. Seat Plate                    | 1   |
| 5. Seat Cushion                  | 1   |
| 6. Back Assembly                 | 1   |
| 7. Arms (7L & 7R)                | 2   |
| 8. Flat Washers                  | 10  |
| 9. Arm Screws                    | 6   |
| 10. Seat Plate Screws            | 4   |
| 11. Back Support Screws          | 3   |
| 12. Back Support (Pre-Installed) | 1   |
| 13. Allen Wrench                 | 1   |

Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.

**STEP 1** Insert five Casters (2) into Base (1), push hard until you feel or hear the Caster (2) snap into place.

**STEP 2** Align the holes in the Arms (7L & 7R) with the holes in the Seat Cushion (5), attach Arms (7L & 7R) to Seat Cushion (5) using three Flat Washers (8) and three Arm Screws (9) for each arm. **FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (13).**

**STEP 3** Attach Seat Plate (4) to Seat Cushion (5) with the arrow towards the front of the chair, using four Flat Washers (8) and four Seat Plate Screws (10), **FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (13).**

**STEP 4** Attach Back Support (12) to rear of Seat Plate (4) using three Back Support Screws (11), **FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (13).**

**STEP 5** Insert Pneumatic Cylinder (3) into Base (1), Place the assembled seat on top of Pneumatic Cylinder (3) and apply downward pressure.

**ATTENTION: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.**



# Chaise exécutive avec un haut dossier

## INSTRUCTIONS DE MONTAGE



### CARACTÉRISTIQUES

#### • RÉGLAGE DU VERROUILLAGE DU DOSSIER

Tournez le bouton (1) vers la droite pour verrouiller le dossier en position; pour le déverrouiller, tournez le bouton (1) vers la gauche et penchez-vous en arrière pour libérer le mécanisme anti-retour.

#### • GLISSIÈRE DE FAUTEUIL

Soulevez le levier (2) pour faire glisser le siège; lâchez le levier (2) lorsque vous arrivez à la position souhaitée.

#### • RÉGLAGE DE LA TENSION D'INCLINAISON

Tournez le bouton (3) vers la droite pour augmenter la tension d'inclinaison et tournez le bouton (3) vers la gauche pour réduire la tension d'inclinaison.

#### • RÉGLAGE DE LA HAUTEUR DU FAUTEUIL

Pour augmenter la hauteur du fauteuil, levez-vous pour ôter toute pression et soulevez le levier (4). Pour abaisser la hauteur du siège, asseyez-vous sur le siège et soulevez le levier (4).

**NOTE:** Il est normal que le fauteuil s'abaisse légèrement sous le poids du corps.

#### • RÉGLAGE DE LA LARGEUR DES ACCOUDOIRS

Pour régler la largeur de l'accoudoir, desserrer le bouton (5) pour permettre aux accoudoirs de bouger librement vers l'intérieur ou l'extérieur. Resserrer le bouton (5) dès que la largeur désirée est atteinte.

### AVERTISSEMENT


1. Seule une personne à la fois peut utiliser ce produit.
2. Ne pas utiliser ce fauteuil à moins que toutes les vis et tous les boulons et boutons soient resserrés.
3. Vérifier à tous les trois mois ou au besoin que toutes les vis et tous les boulons et boutons sont resserrés.
4. Éliminer les matériaux de conditionnement d'une manière convenable. Ne pas utiliser la couverture en plastique pour couvrir la tête à cause du risque d'étouffement.
5. Ne pas utiliser le fauteuil comme un escabeau.
6. Ce fauteuil ne doit servir qu'à l'usage pour lequel il a été conçu.
7. N'utiliser qu'un détergent liquide doux pour le nettoyage.




# Chaise exécutive avec un haut dossier

## INSTRUCTIONS DE MONTAGE


### ÉTAPE 1

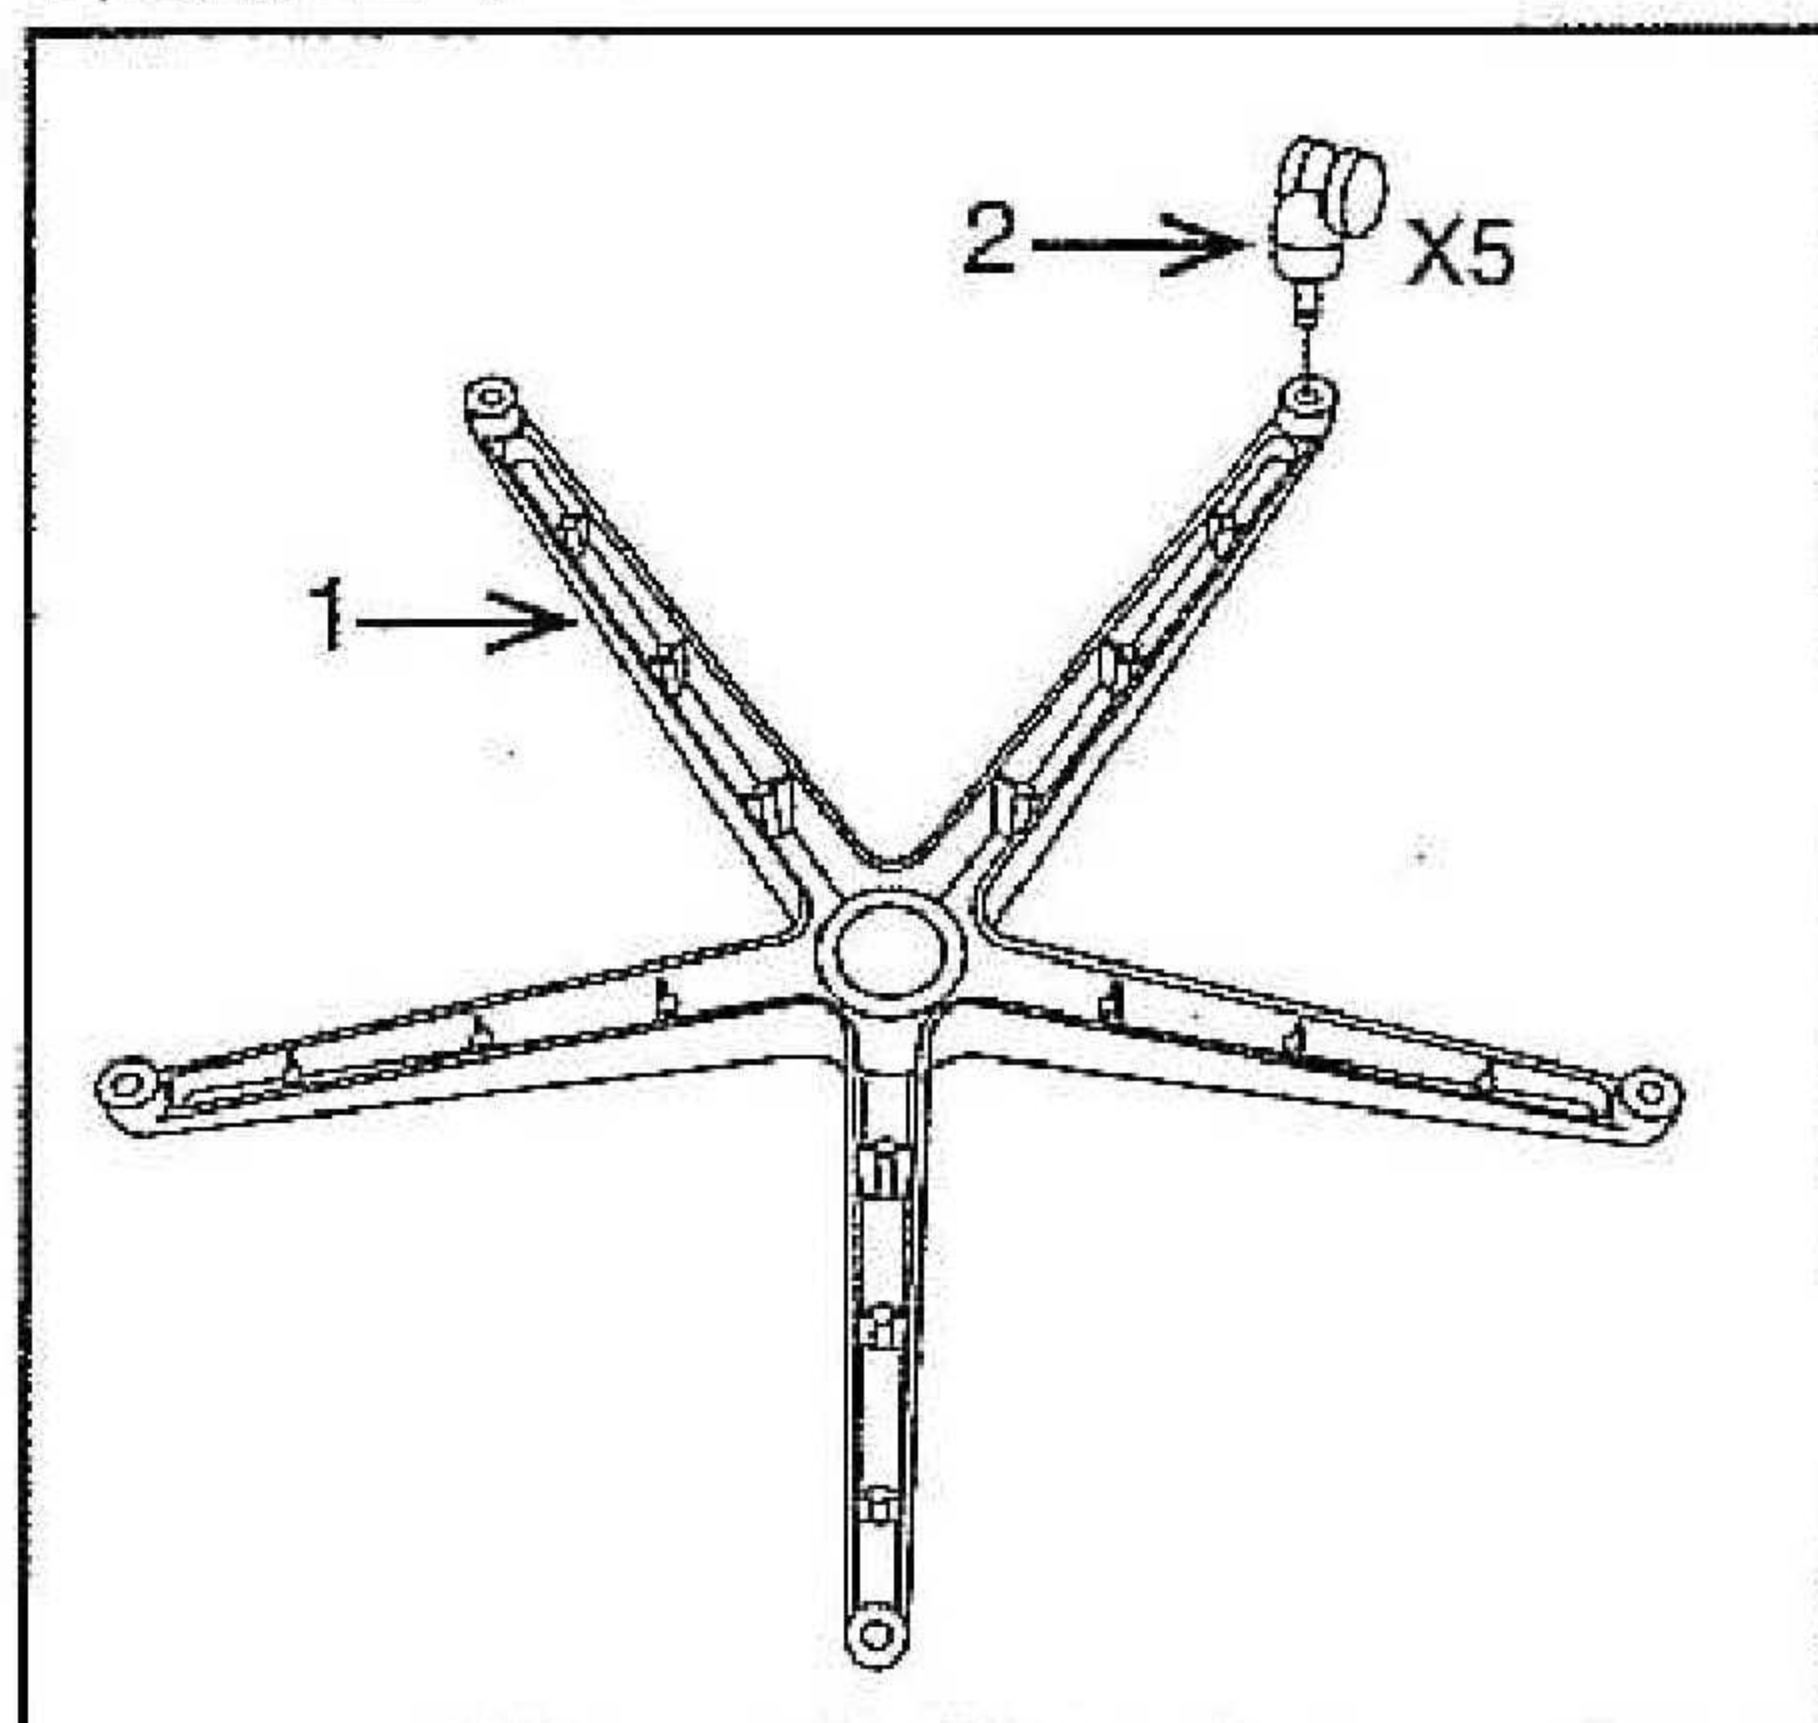


### ÉTAPE 2

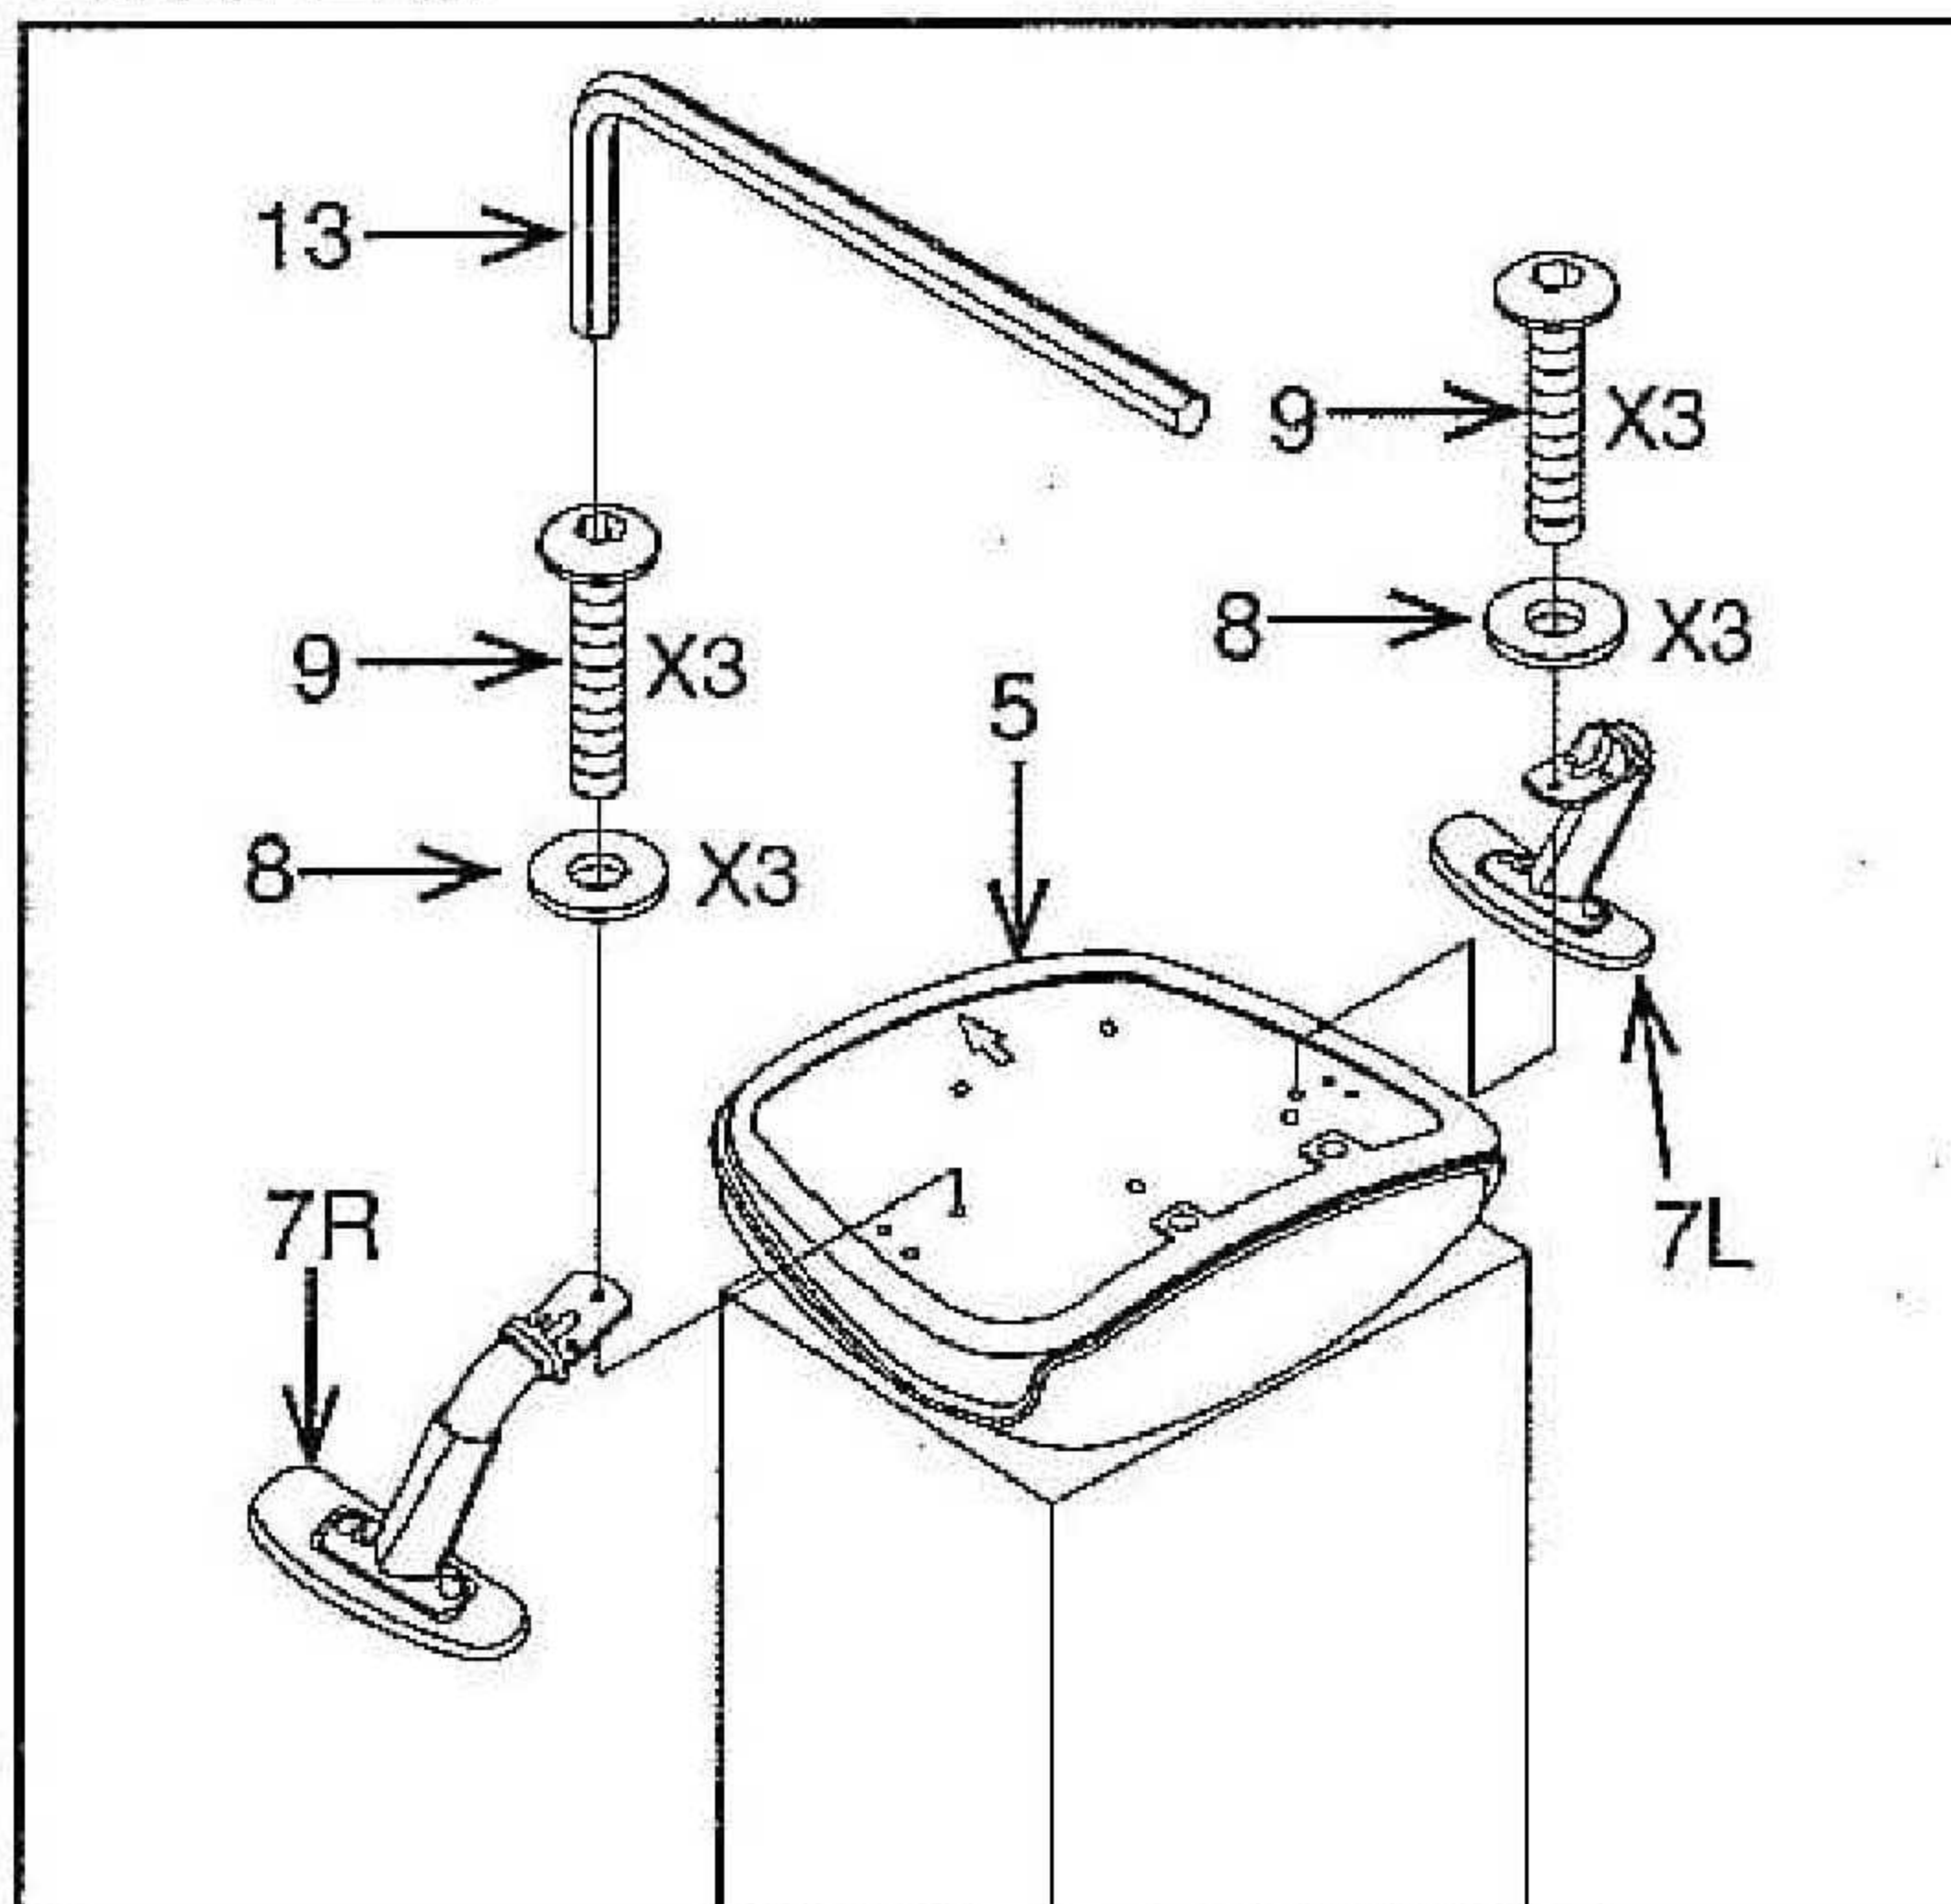


### ÉTAPE 3

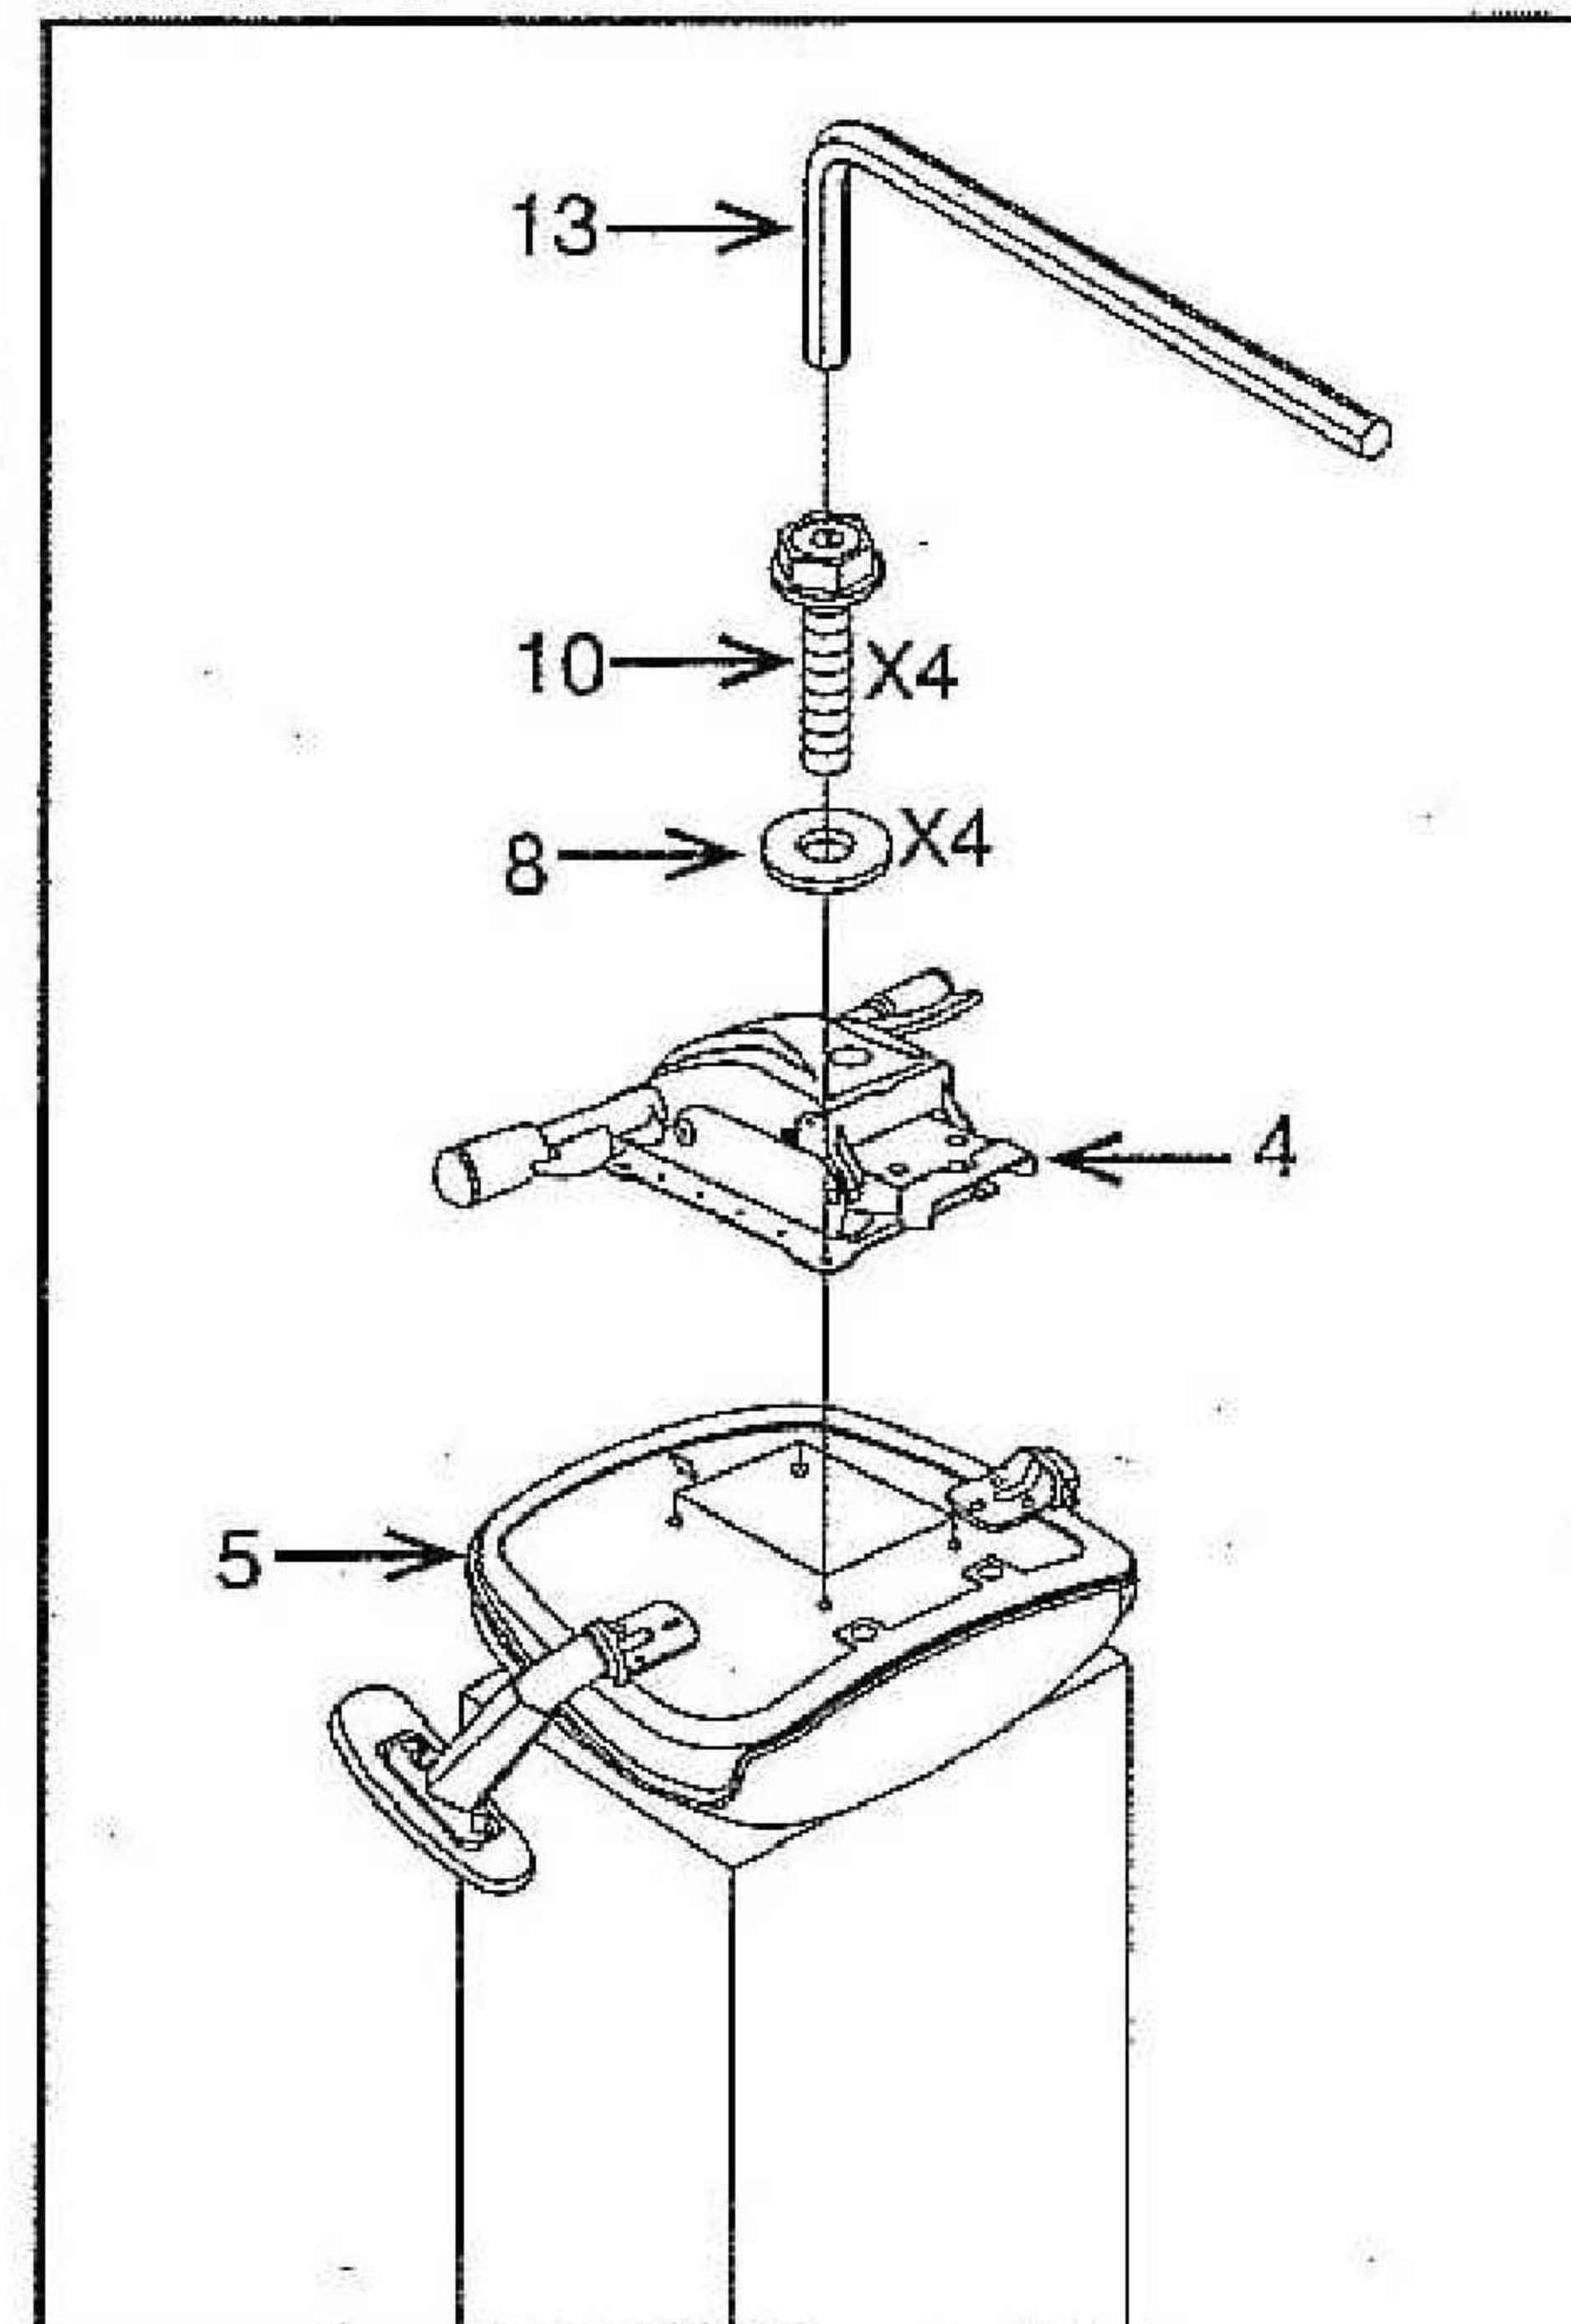

### ÉTAPE 4

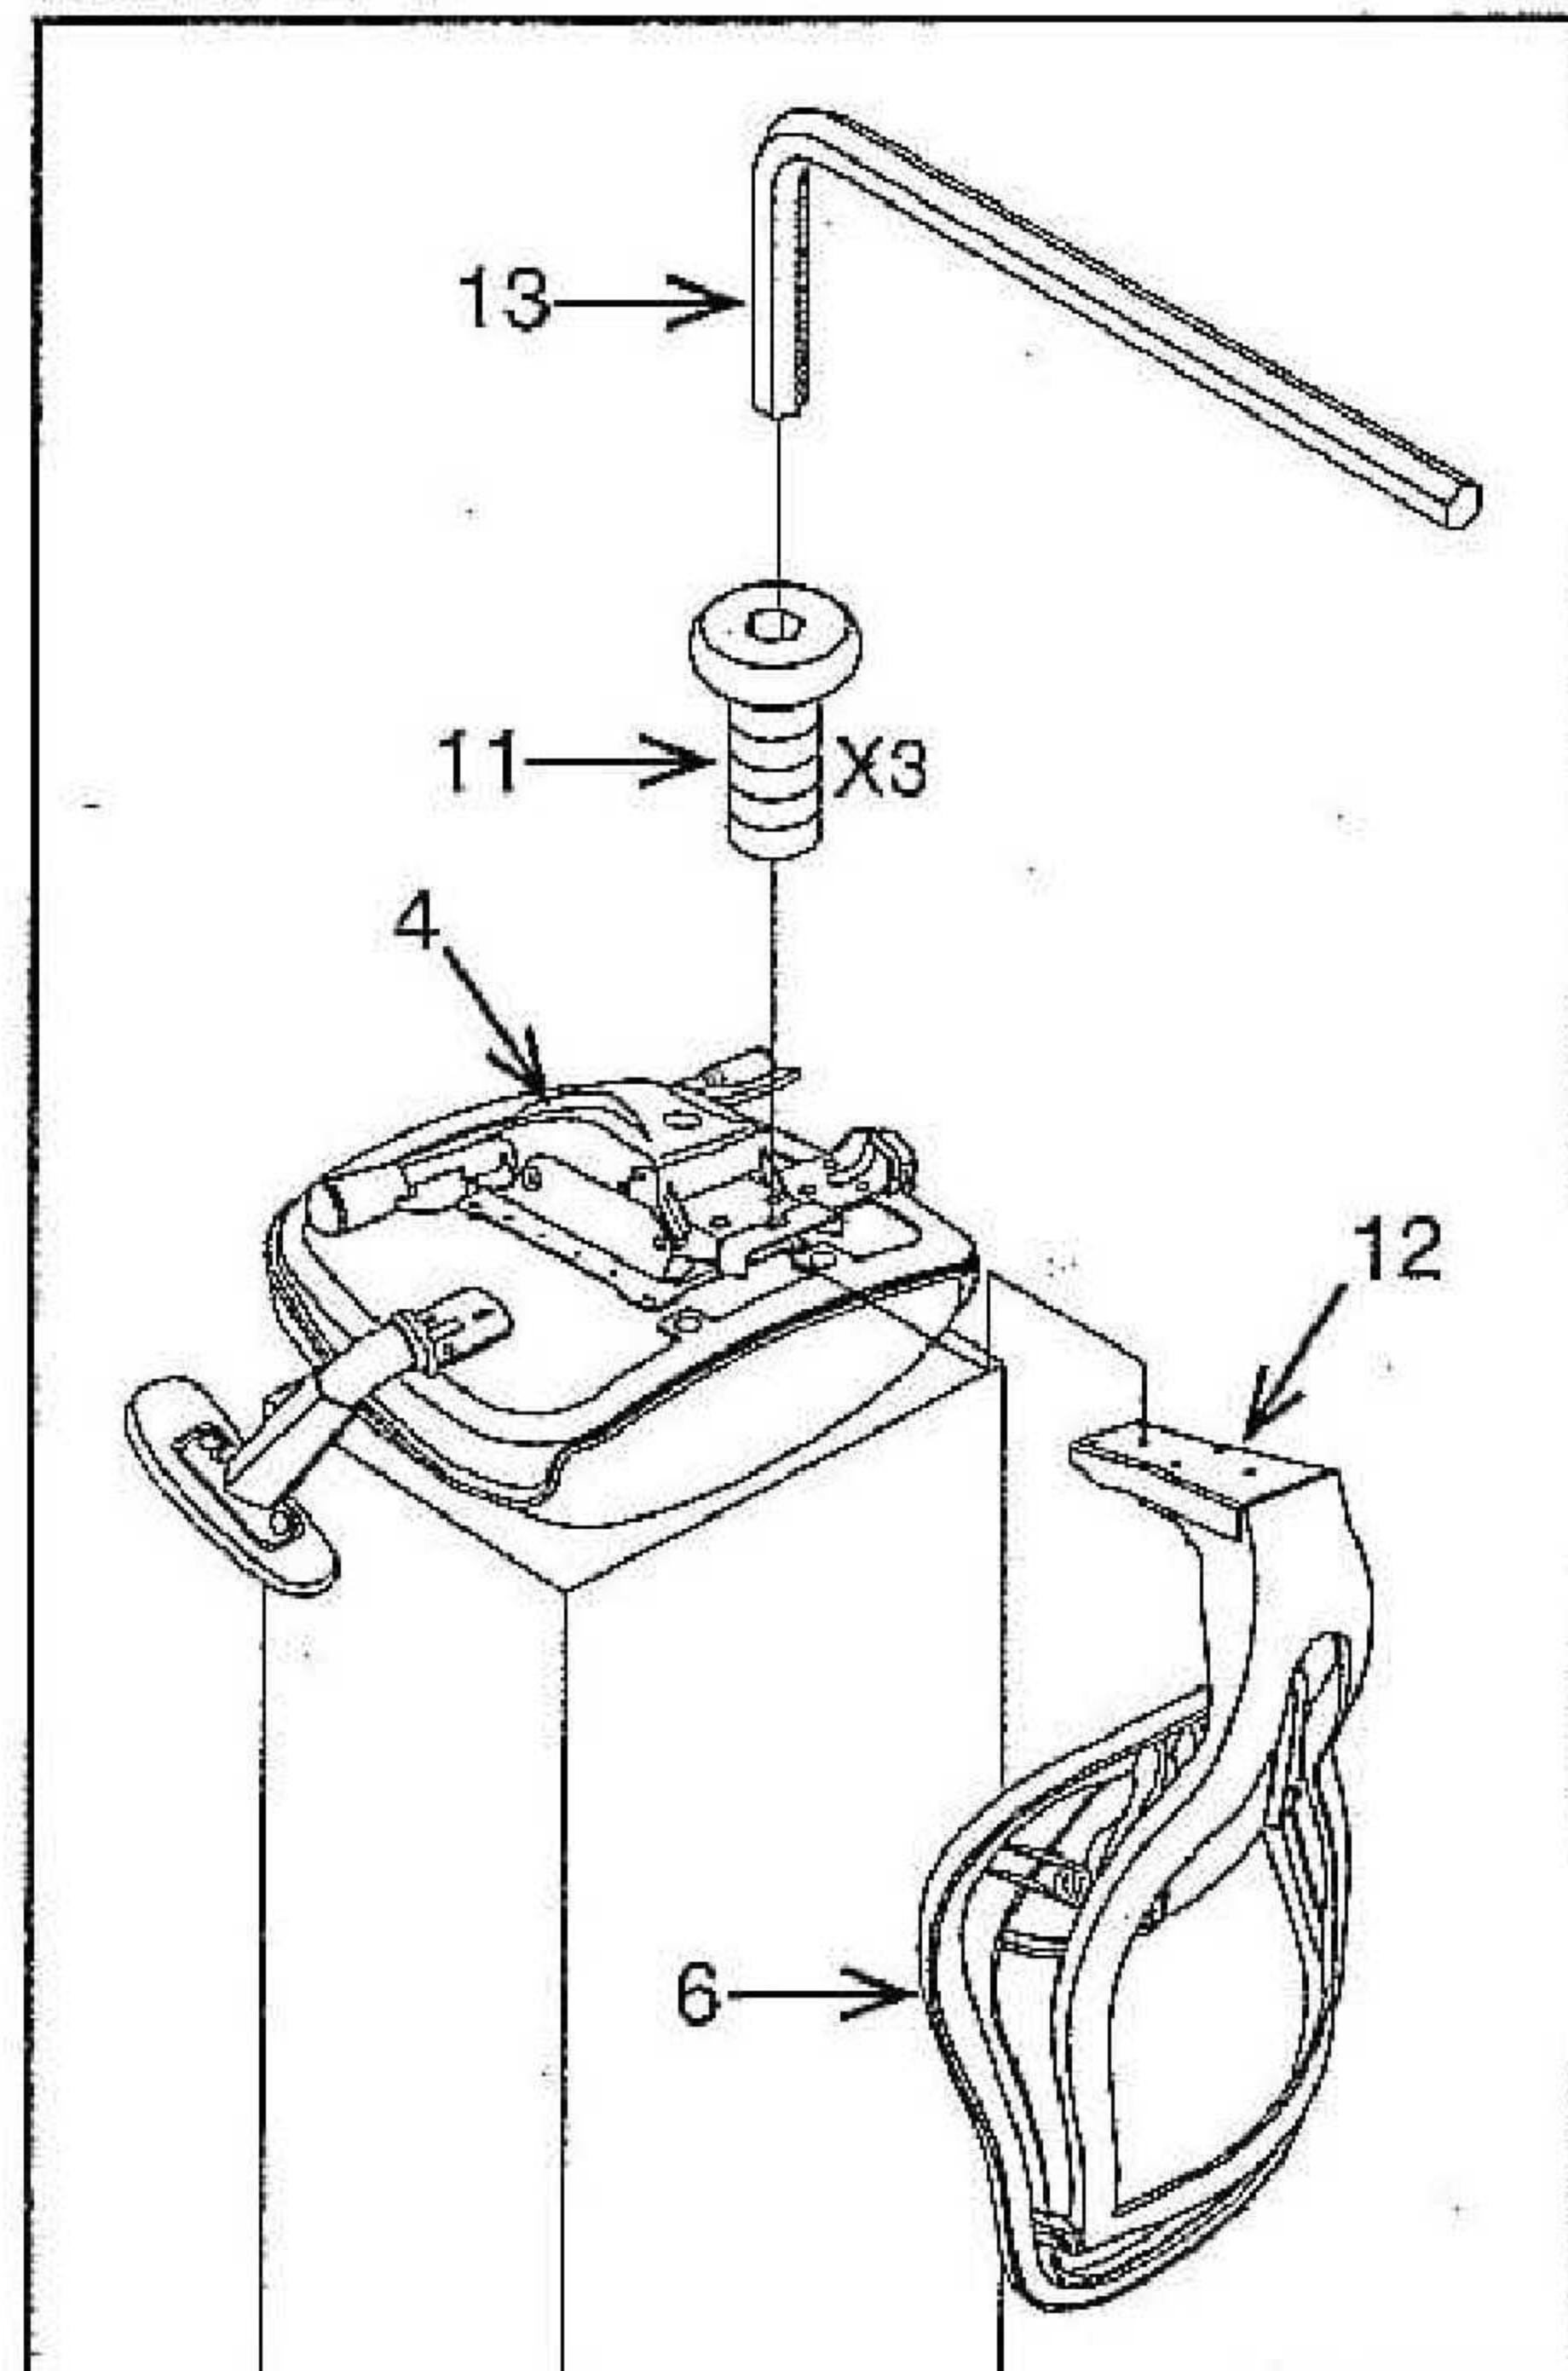

### ÉTAPE 5

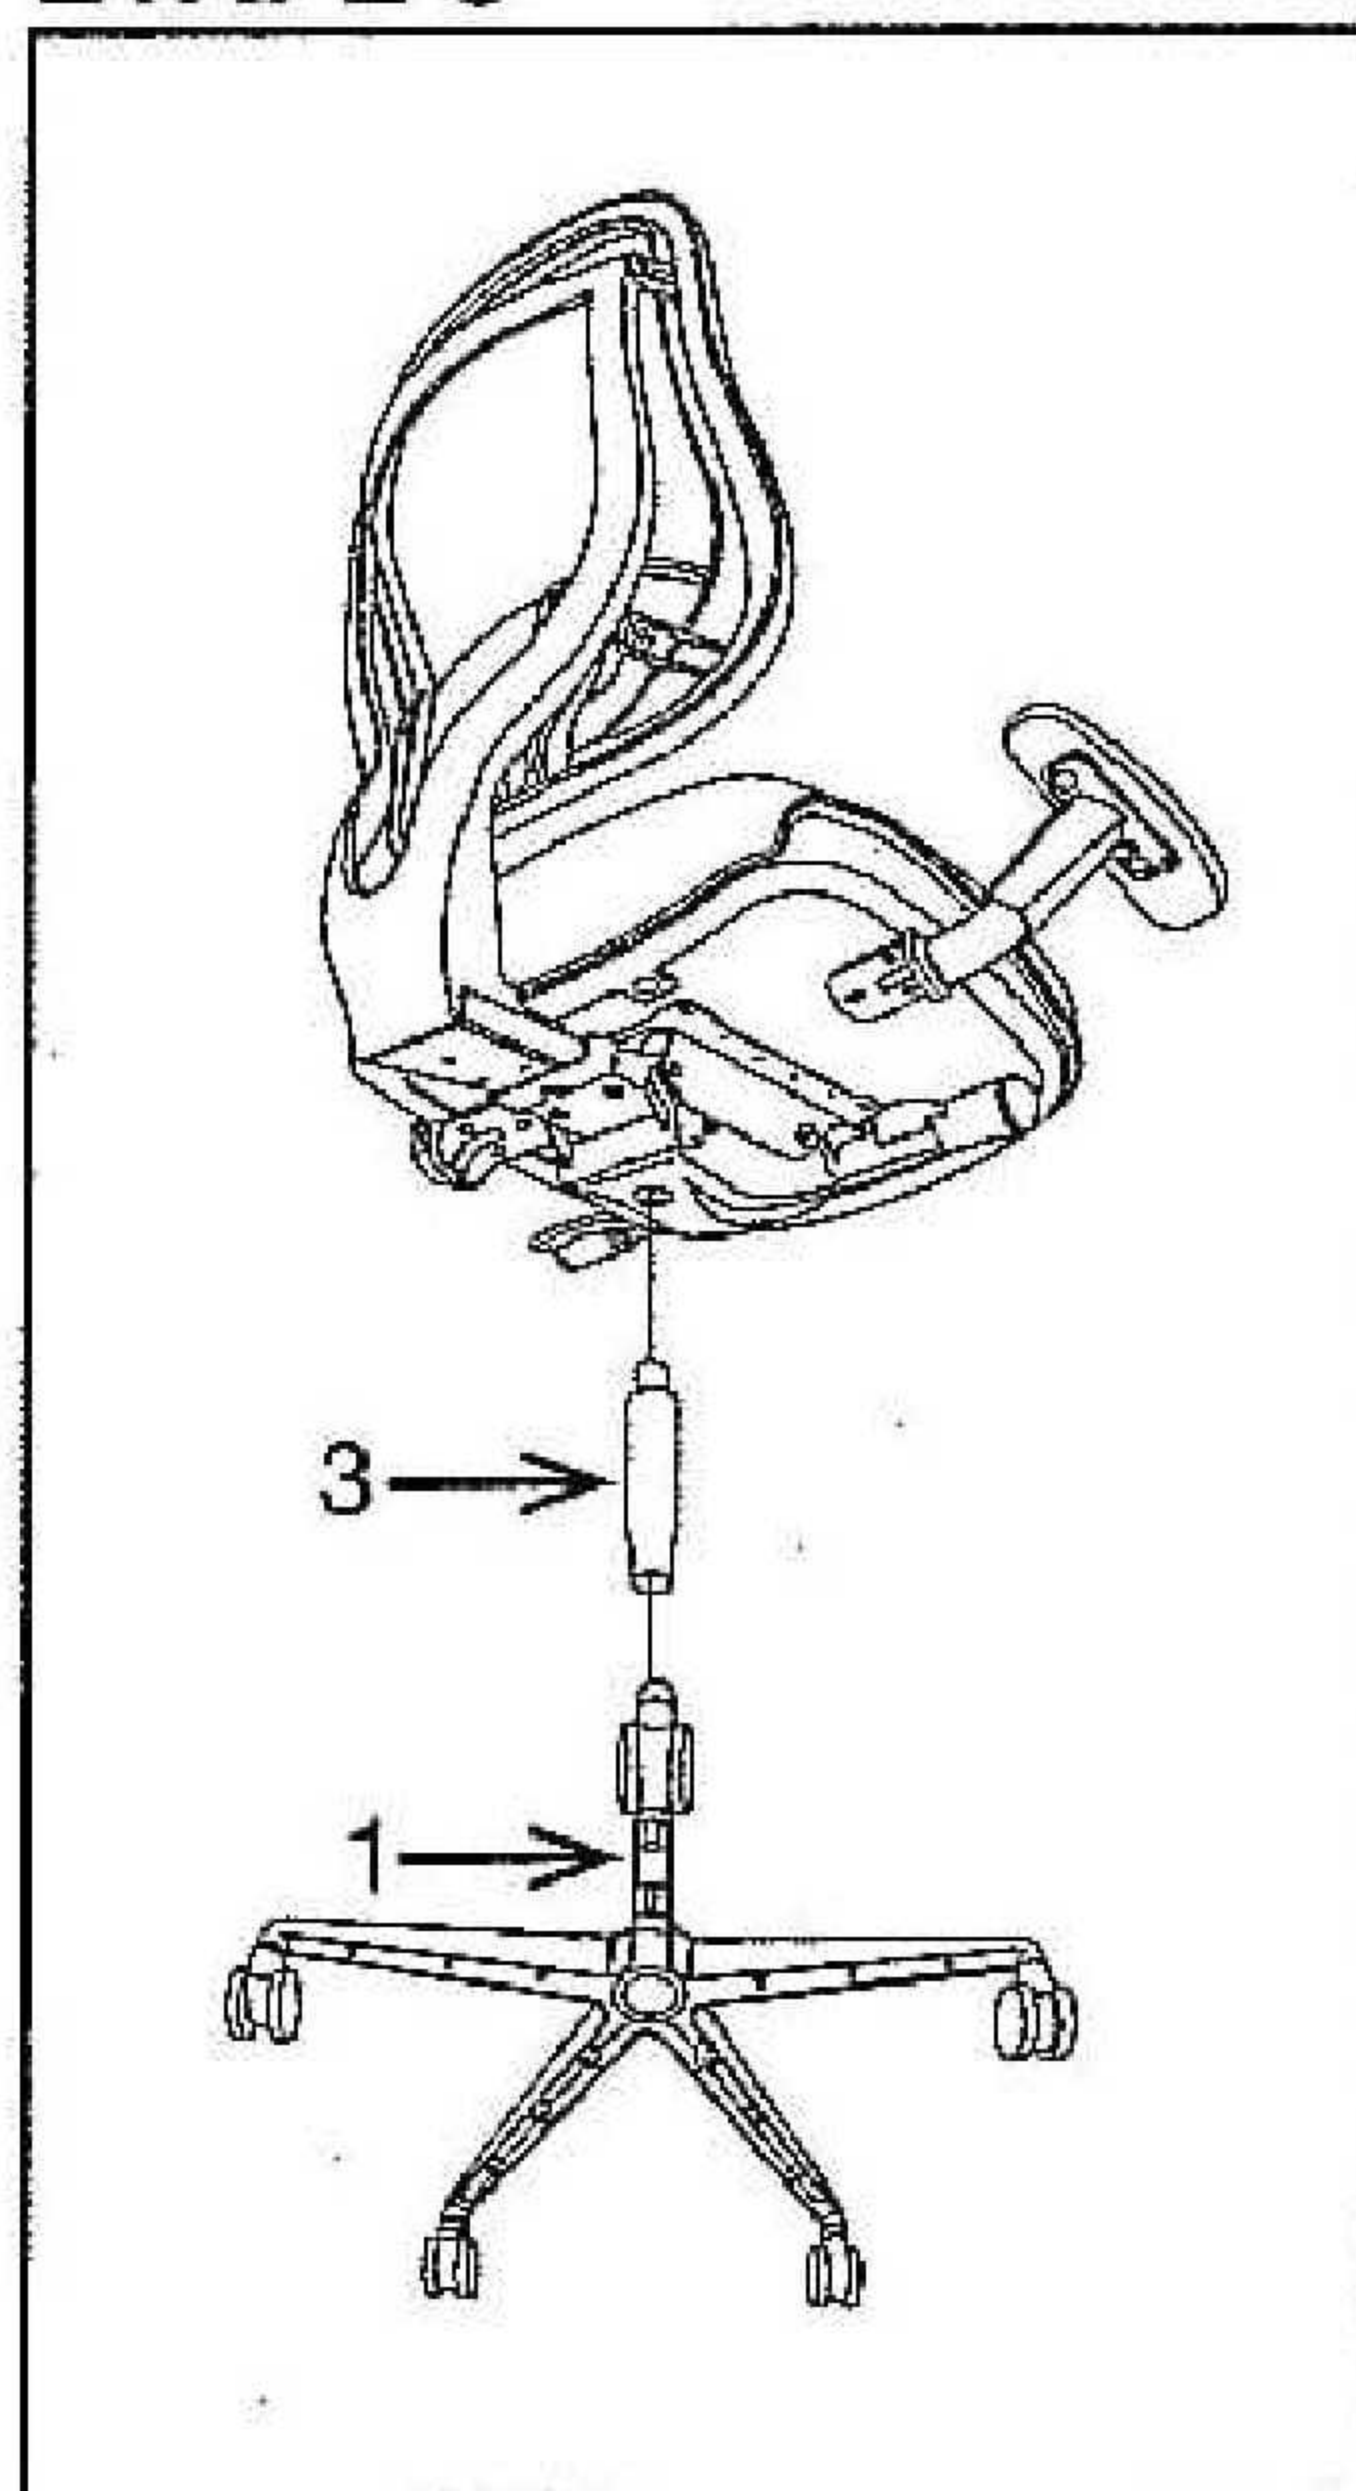

| PIÈCE                                | QTÉ |
|--------------------------------------|-----|
| 1. Base                              | 1   |
| 2. Roulettes                         | 5   |
| 3. Vérin pneumatique                 | 1   |
| 4. Mécanisme                         | 1   |
| 5. Coussin du siège                  | 1   |
| 6. Coussin du dossier                | 1   |
| 7. Accoudoirs (7L et 7R)             | 2   |
| 8. Rondelles plates                  | 10  |
| 9. Vis d'accoudoir                   | 6   |
| 10. Vis de mécanique                 | 4   |
| 11. Vis de support de dossier        | 3   |
| 12. Support de dossier (préinstallé) | 1   |
| 13. Clé Allen                        | 1   |

Enlever toutes les pièces du carton, les organiser selon les numéros de pièce indiqués sur la liste et vous assurer que les quantités des pièces sont correctes.

**ÉTAPE 1** Insérer les roulettes (2) dans la base (1), et vous assurer que toutes les roulettes (2) sont bien insérées.

**ÉTAPE 2** Alignez les trous dans les accoudoirs (7L et 7R) avec les trous du coussin du siège (5). Joignez les accoudoirs (7L et 7R) au coussin du coussin du siège (5) en utilisant trois vis d'accoudoir (9) et trois rondelles plates (8) pour chaque accoudoir. **SERREZ FORTEMENT TOUTES LES VIS EN PLACE À L'AIDE DE LA CLÉ ALLEN (13).**

**ÉTAPE 3** Fixer le mécanisme (4) au coussin du siège (5) avec la flèche vers l'avant du siège. Fixer avec quatre vis de mécanique (10) et quatre rondelles plates (8). **RESSERRER COMPLÈTEMENT TOUTES LES VIS DE MÉCANIQUE (10) AVEC LA CLÉ ALLEN (13).**

**ÉTAPE 4** Fixer le support du dossier (12) à l'arrière de la plaque du siège (4) avec trois vis de support de dossier (11).

**RESSERRER COMPLÈTEMENT TOUTES LES VIS DE SUPPORT DE DOSSIER (11) AVEC LA CLÉ ALLEN (13).**

**ÉTAPE 5** Insérer le vérin pneumatique (3) dans la base (1). Placer le siège assemblé sur le vérin pneumatique (3) et mettre de la pression.

**ATTENTION : AVANT D'UTILISER LE FAUTEUIL, VOUS ASSURER D'AVOIR RESSERRÉ COMPLÈTEMENT TOUTES LES VIS.**