
ENCLO

HIDE IT WITH STYLE

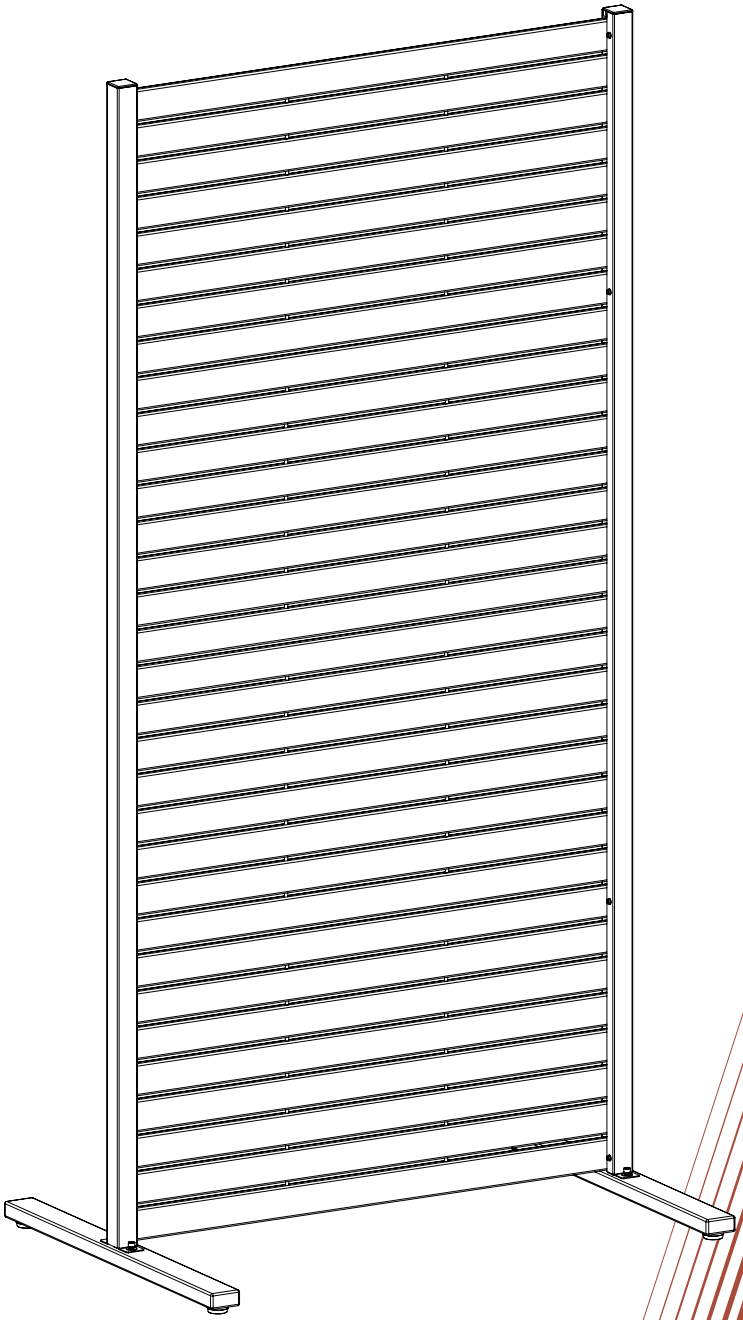

Akoa Hardwood

Freestanding Privacy Screen

36"W x 74"H

30 min Assembly
Approximate time

Assembly Video
Scan the QR Code below

ASSEMBLY INSTRUCTIONS

EC18052

www.encloscreens.com

VER. 011626

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?

› Visit Our Website
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- › Your product number (**EC18052**)
- › Your affected part letters (**pages 4**)
- › Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

704-892-5222 / 877-234-6196 **support@encloscreens.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originall purchased from.**

DETAILED PRODUCT DIMENSIONS & SPECIFICATIONS

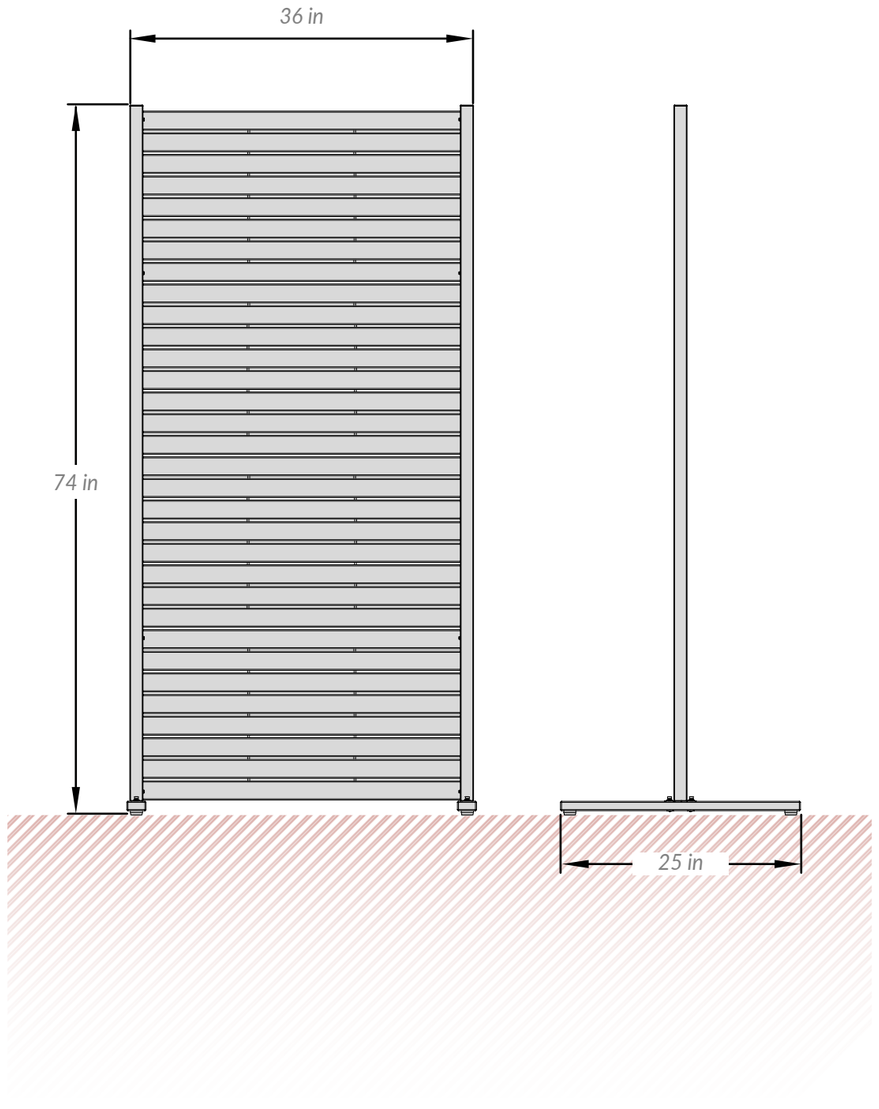

LAY OUT MATERIALS

SCREEN PARTS




A

Left Post (1)
1⅜" x 1⅜" x 72⅜"




B

Right Post (1)
1⅜" x 1⅜" x 72⅜"

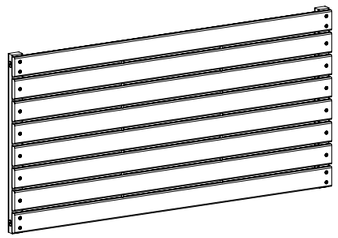


C

Top & Bottom Panel (2)
1¼" x 18" x 35⅝"

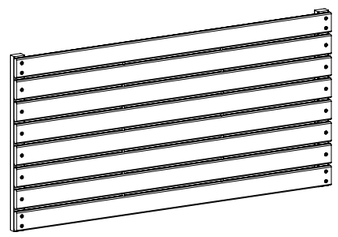


D

Middle Panel (2)
1¼" x 18" x 35⅝"

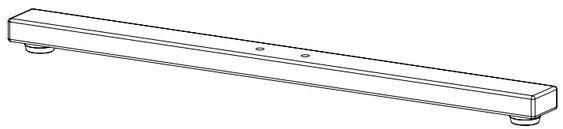

E

Feet (2)
1½" x 2" x 25"

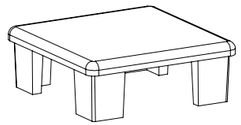


F


Post Caps (2)

LAY OUT MATERIALS

DETAILED VIEW

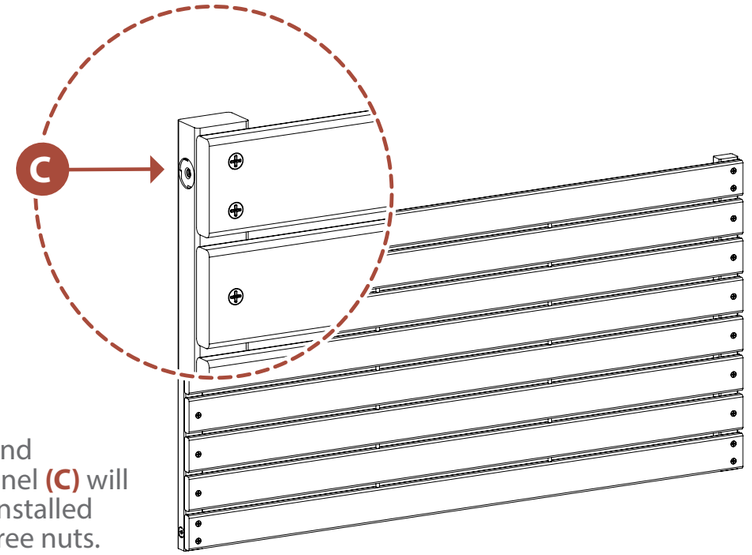


Your Top and Bottom Panel **(C)** will have pre-installed pronged tree nuts.

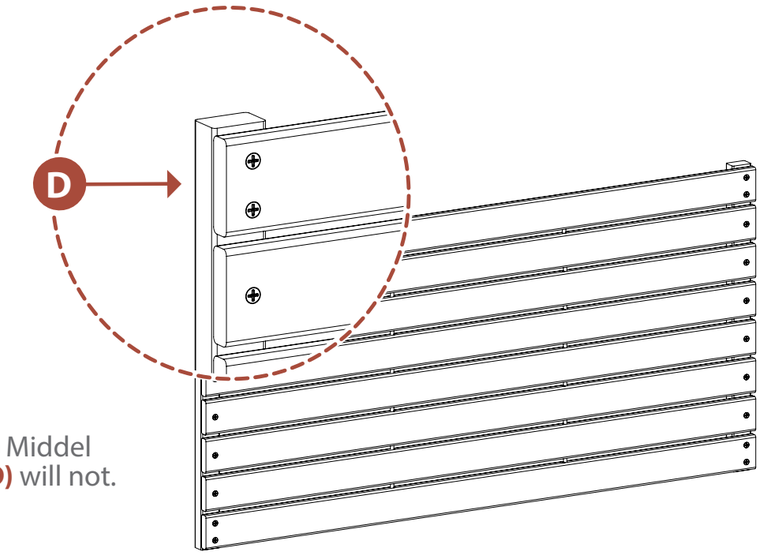

Your two Middel Panels **(D)** will not.

LAY OUT MATERIALS

HARDWARE




G

Hex Bolt (8)




H

Small Washer (8)

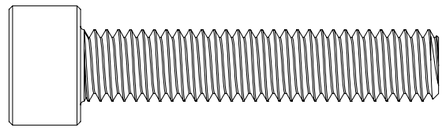

I

Hex Bolt (4)

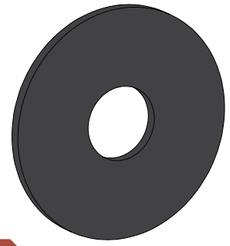


J

Large Washer (4)




K

Lock Washer (4)

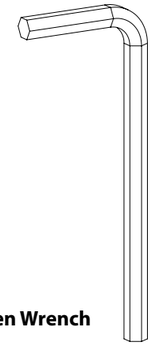


L

5mm Allen Wrench

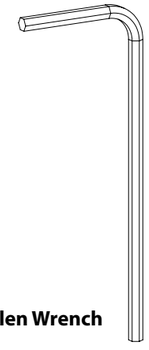

M

3mm Allen Wrench

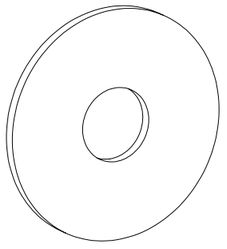


N

Silver Washer (4)
(For Surface Mount Only)


TOOLS AND OPTIONAL HARDWARE

NOT INCLUDED

- We recommend 2 people for a smoother assembly.

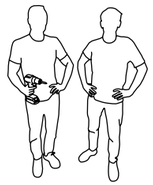

DECK MOUNT

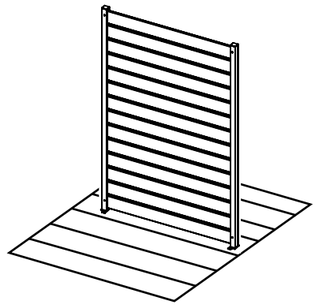




Power Drill

¼" Wood Drill Bit





¼" Lag Screws 3" Length (4)



Matching Driver Bit

PATIO MOUNT

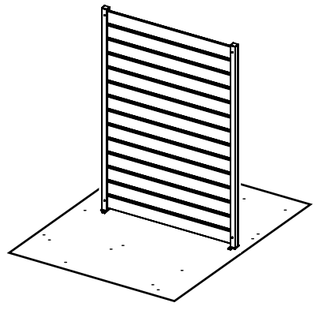


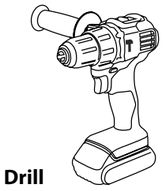


Hammer Drill




¼" Concrete Drill Bit



Hammer




¼" Concrete Wedge Anchor 2¼" Length (4)



Matching Wrench


ASSEMBLING

1

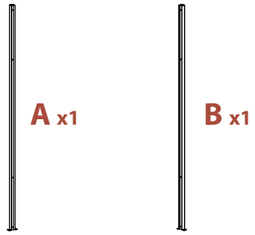

A x1

B x1

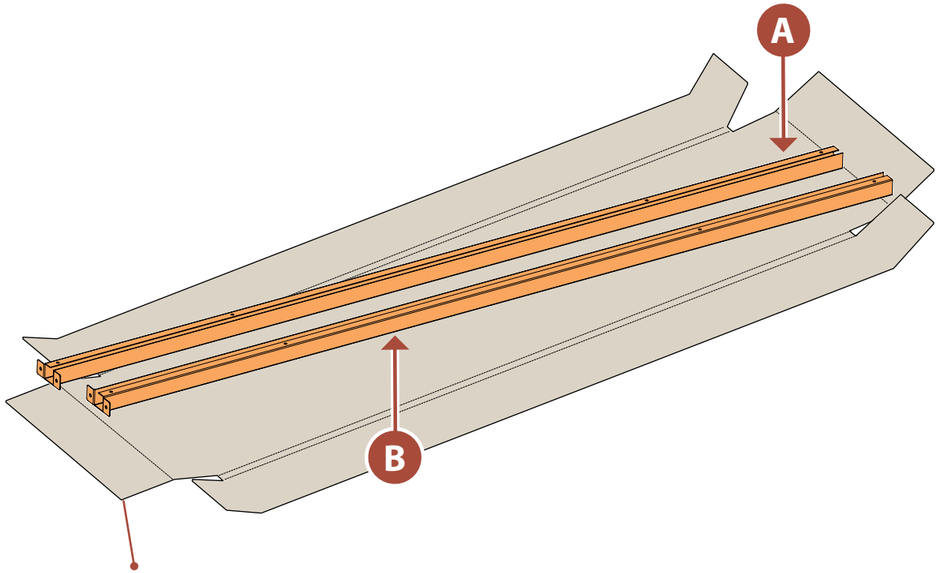


Assemble on box or other smooth surface to prevent scratching.


2



C x1

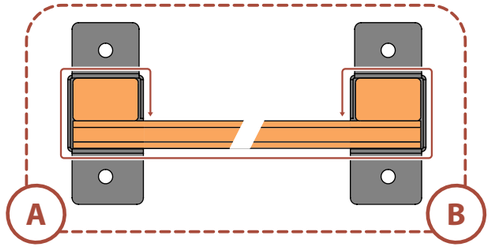


Check your posts to ensure your posts are on the correct side. Slide your first panel in, as shown.

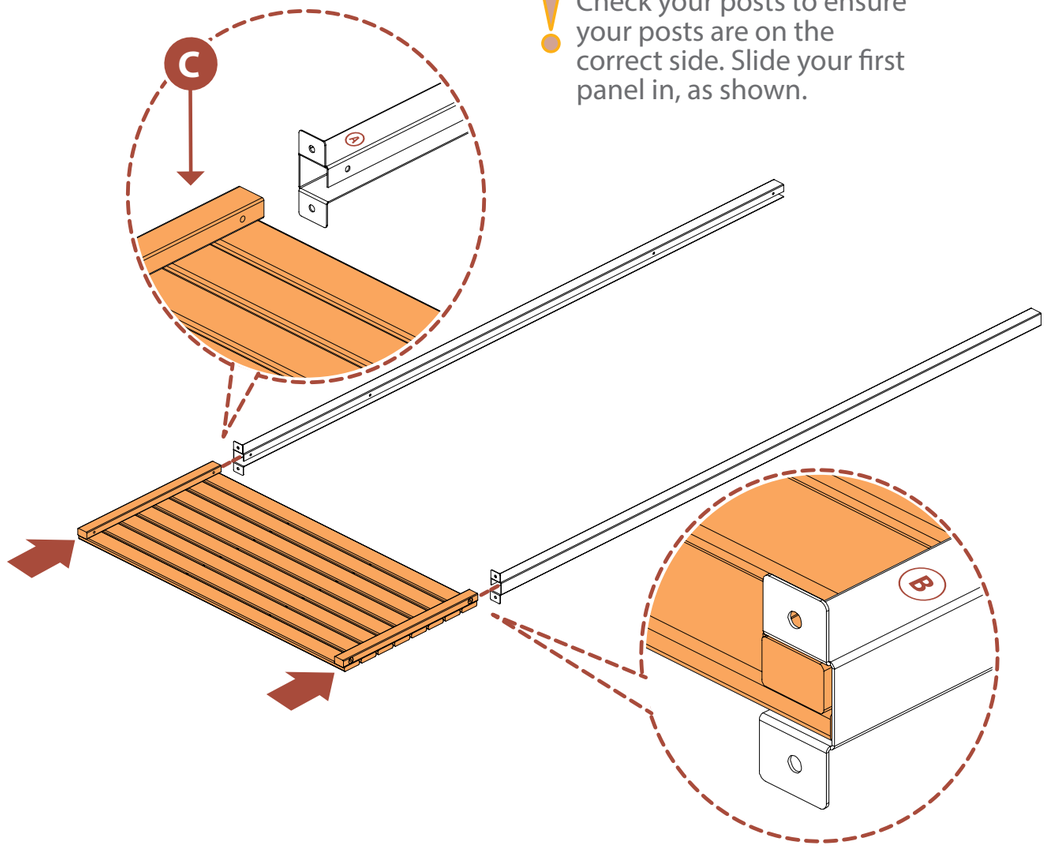

Push in Bottom Panel **(C)** until it is flush with the bottom of your posts.


3









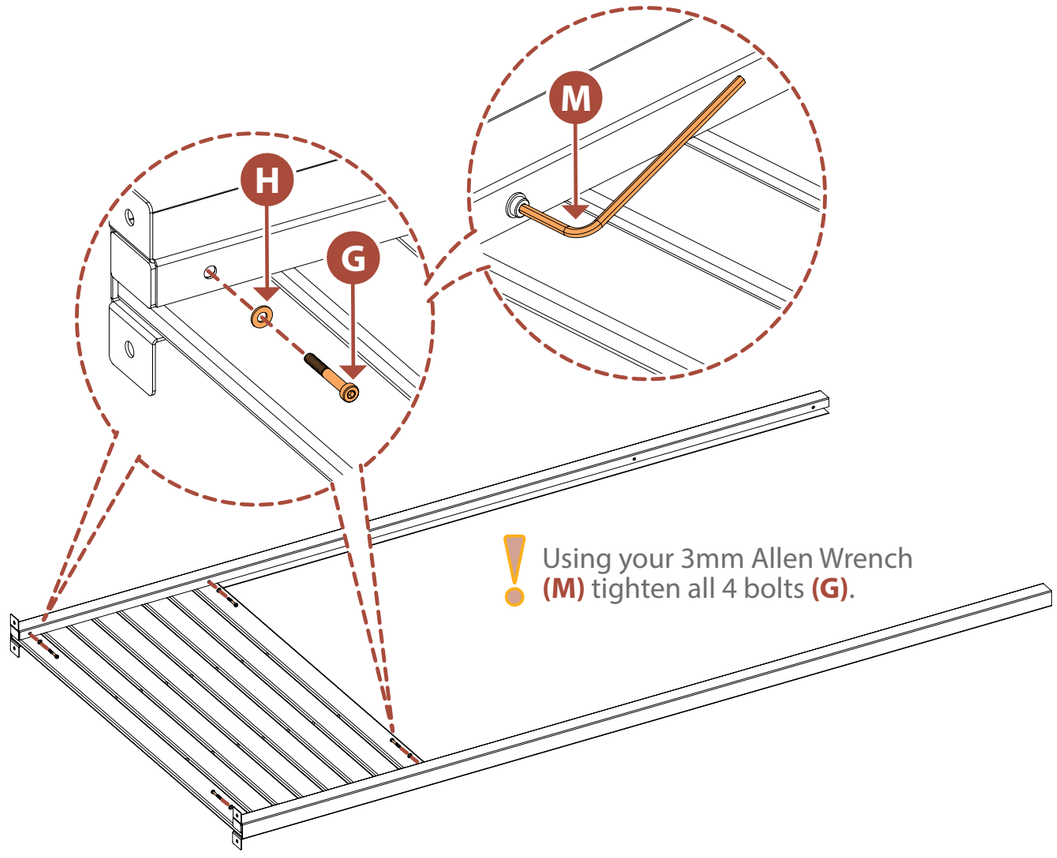

Using your 3mm Allen Wrench **(M)** tighten all 4 bolts **(G)**.

4



5




6


G x4

H x4

M x1

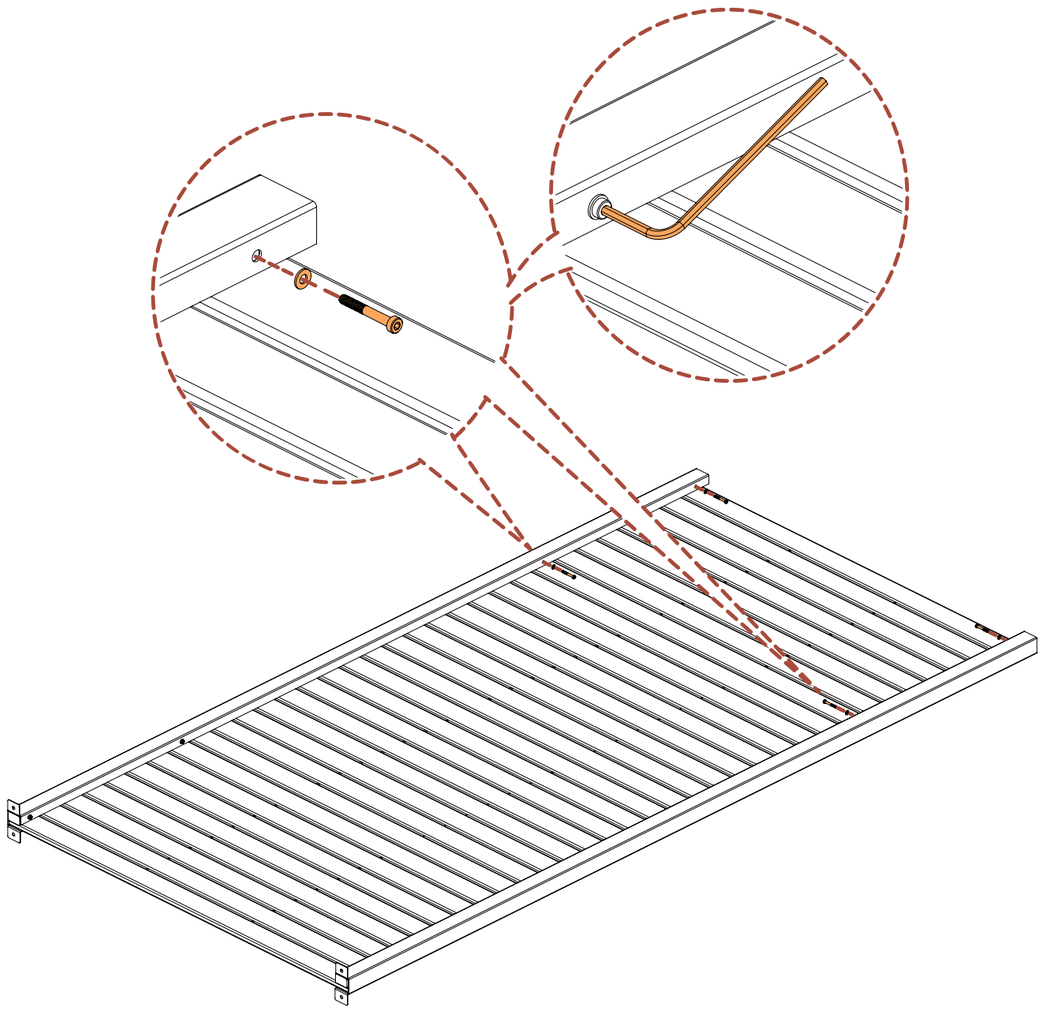


7


E x1



I x2


J x2


K x2

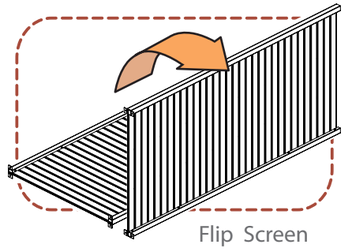

Flip Screen

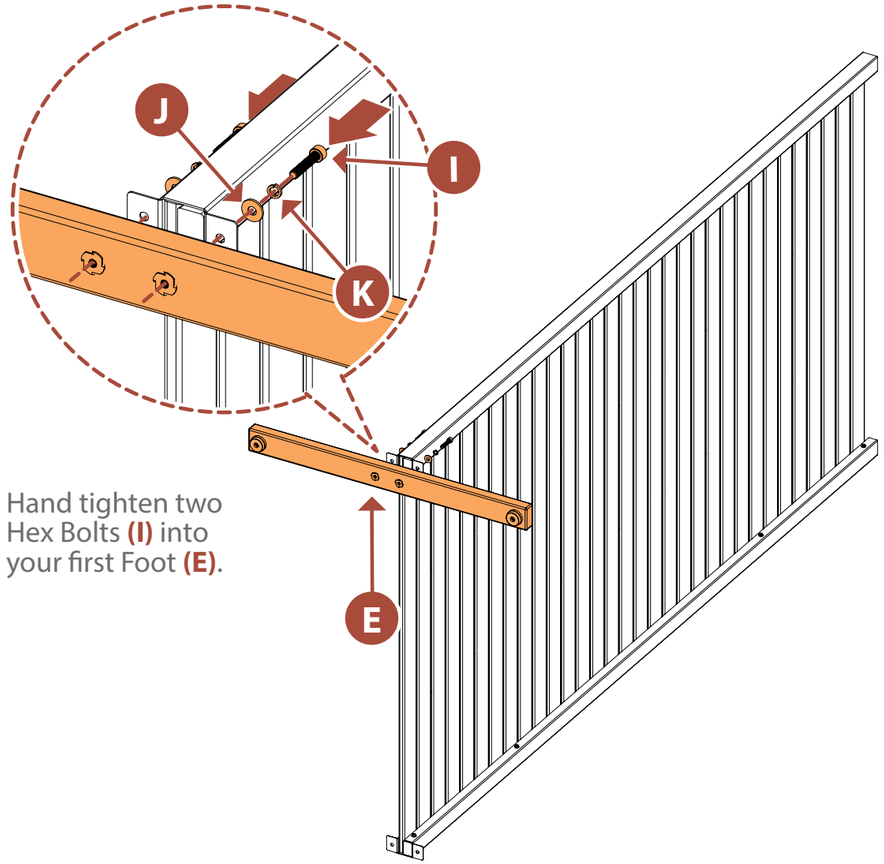

Hand tighten two Hex Bolts **(I)** into your first Foot **(E)**.

8



E x1




I x2




J x2



K x2

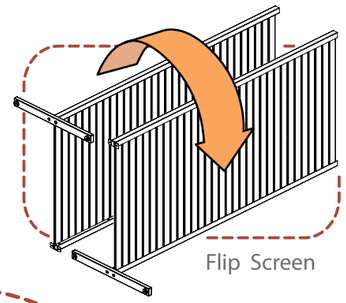


Flip Screen

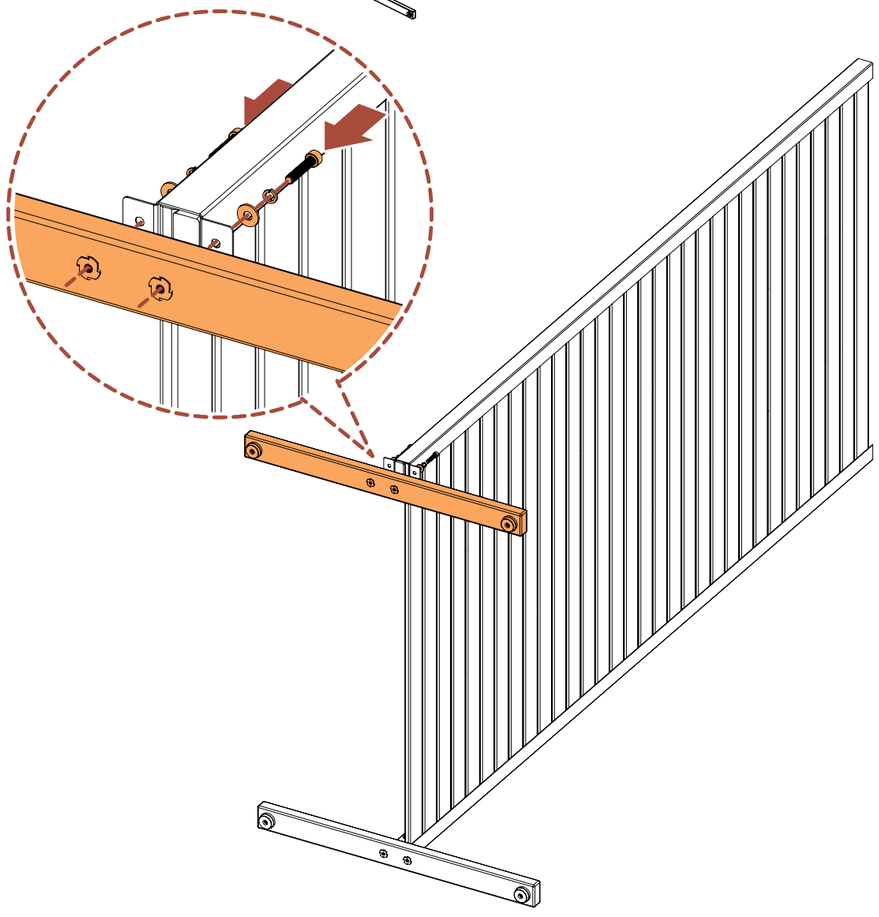

9




L x1

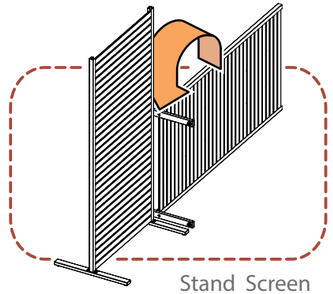

Stand Screen


Stand your screen. Use 5mm Allen Key **(L)** to tighten the feet onto your screen.

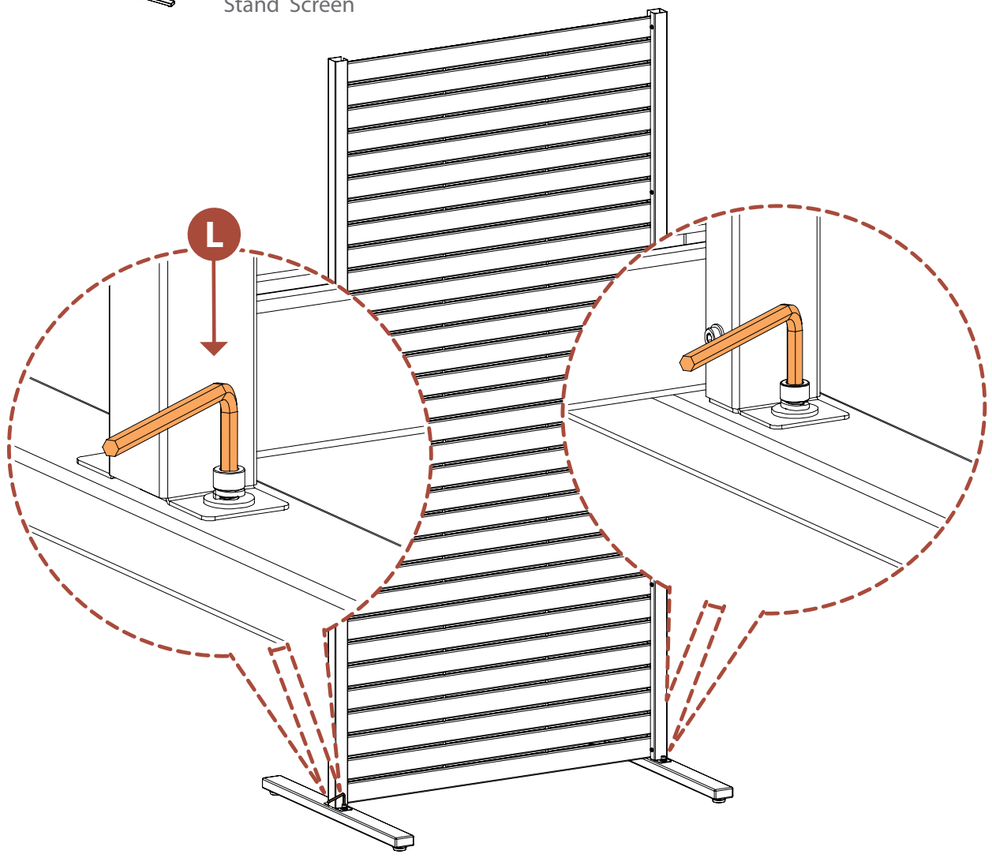

10




F x2

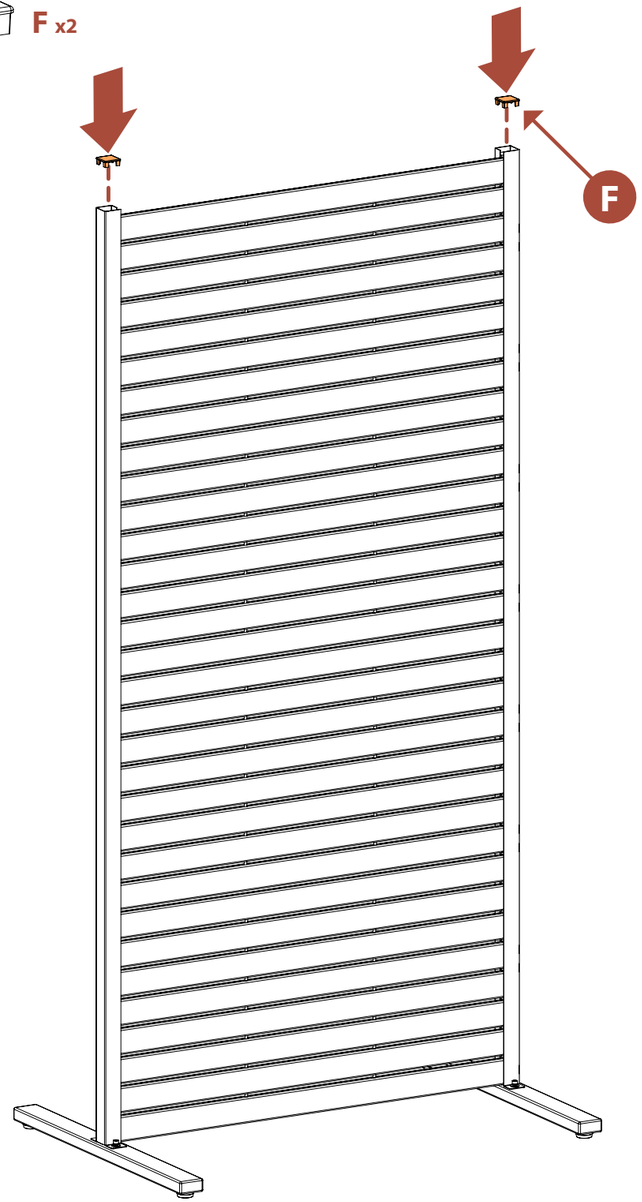

SURFACE MOUNTED (DECK)


MOUNTED 1

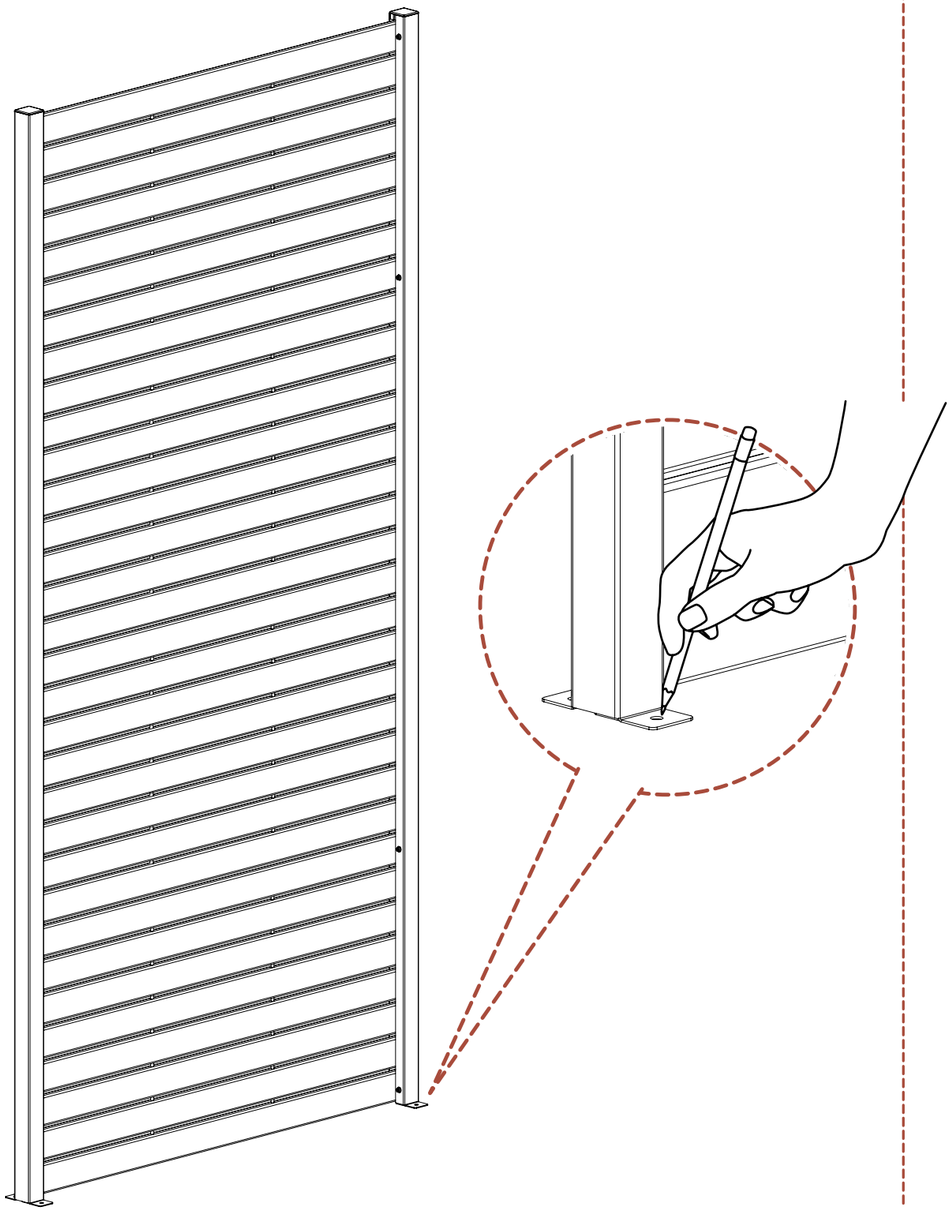


MOUNTED 2

! Refer to mounting hardware instructions to ensure proper installation.


(Surface mounting hardware not included)

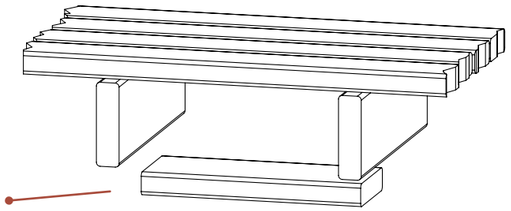

! If mounting to deck boards only, a support block should be added underneath

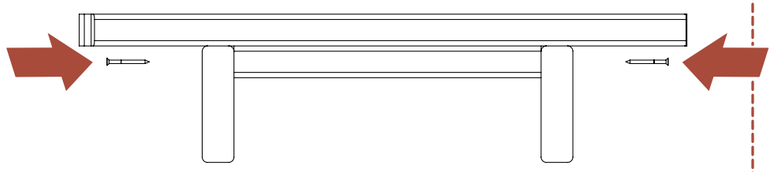

MOUNTED 3

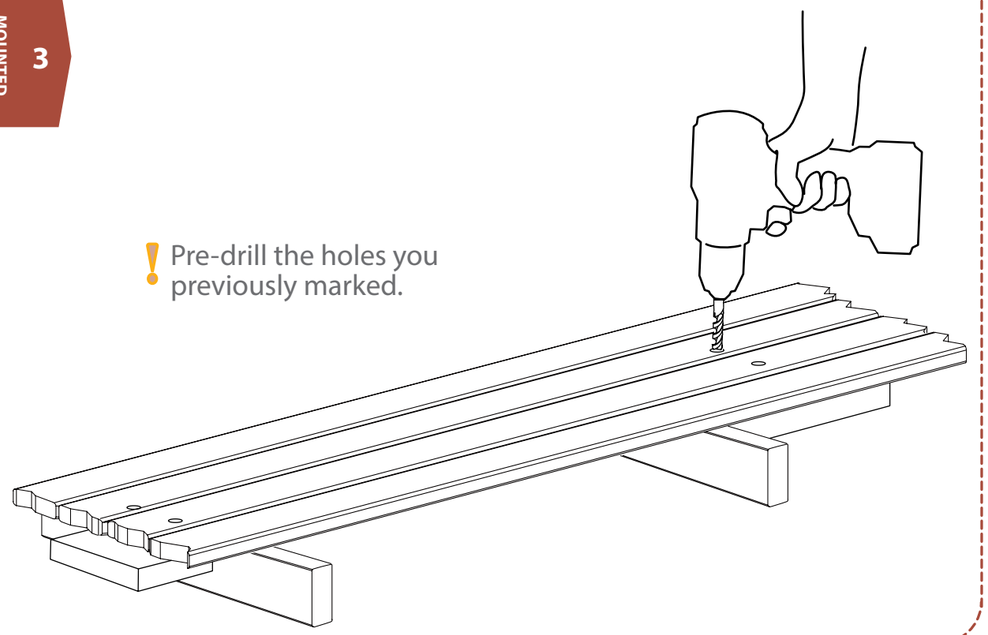


! Pre-drill the holes you previously marked.

MOUNTED 2


! Refer to mounting hardware instructions to ensure proper installation.

(Surface mounting hardware not included)

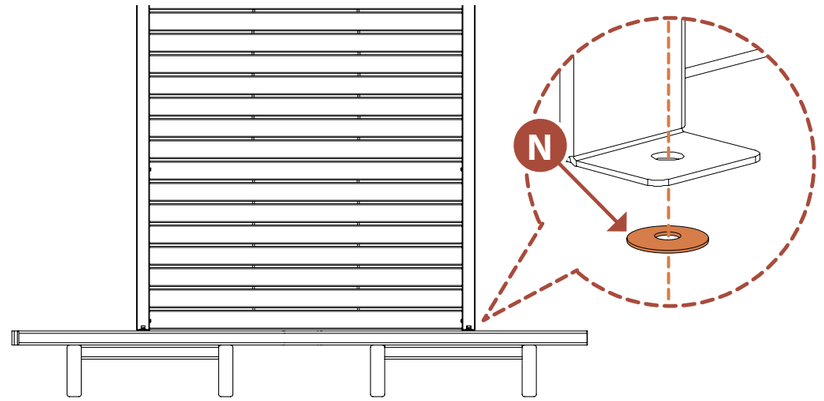


! Place a silver washer under your posts before securing your screen to your deck.


MOUNTED 3

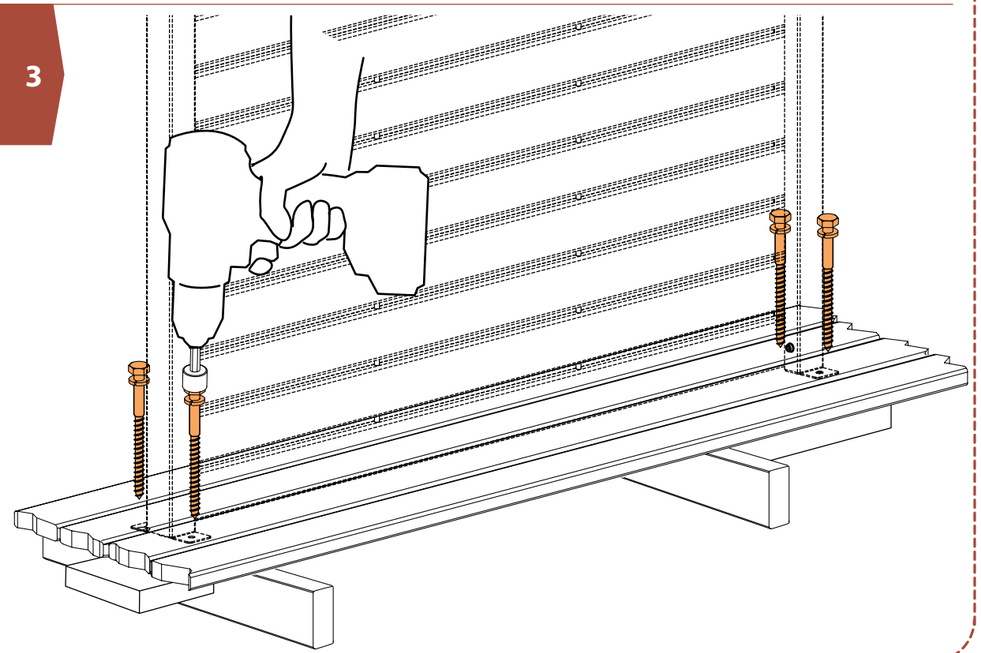


SURFACE MOUNTED (PATIO)

MOUNTED **1**

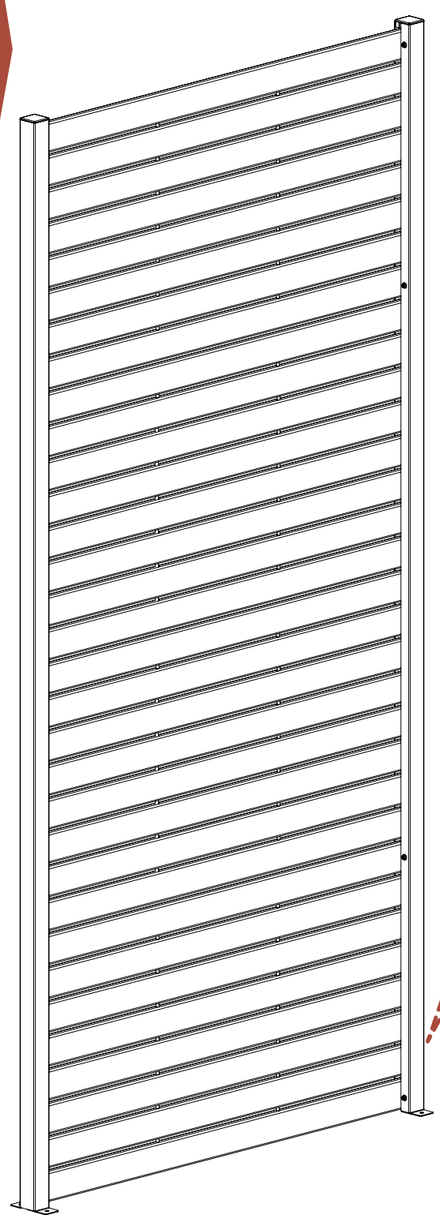

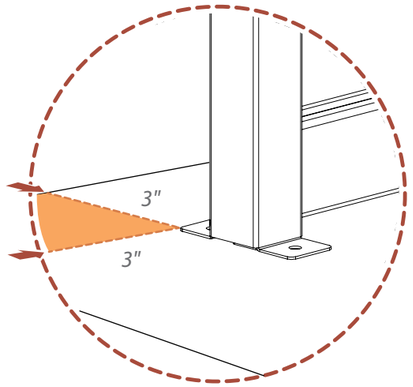

! Ensure there is at least **3"** between the edge of the concrete and the surface mount.

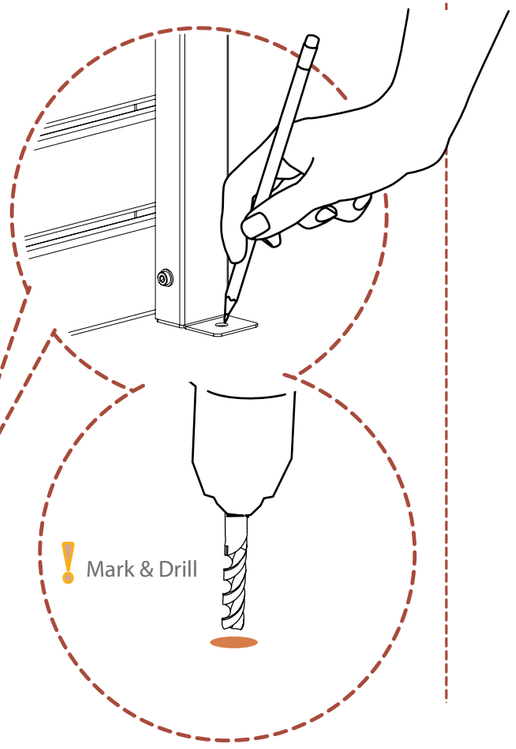


! Mark & Drill

MOUNTED **2**


! Refer to mounting hardware instructions to ensure proper installation.
(Surface mounting hardware not included)

! Using a rubber mallet, lightly tap your concrete anchors in a quarter of the way in.

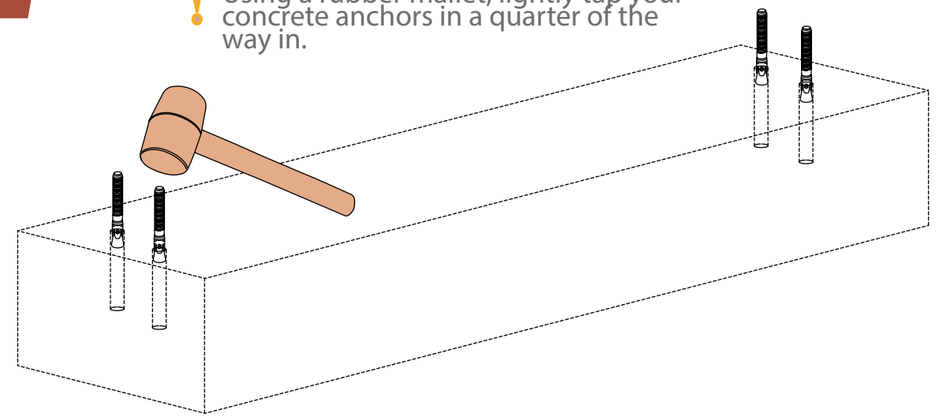

MOUNTED **3**

Place spacer **(N)** between your anchor and your screen.

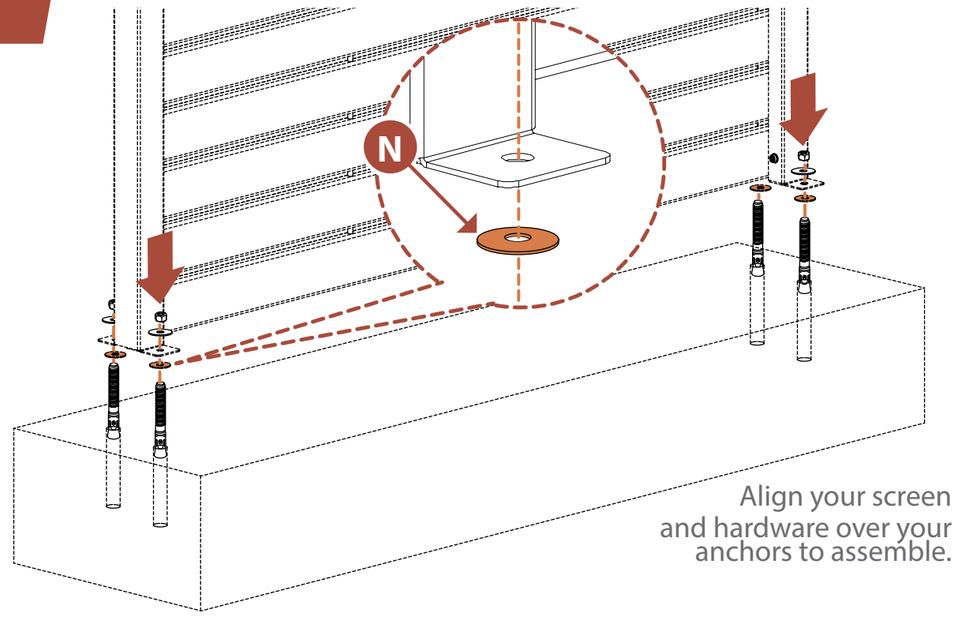


Align your screen and hardware over your anchors to assemble.

MOUNTED 4


Refer to mounting hardware instructions to ensure proper installation.

(Surface mounting hardware not included)

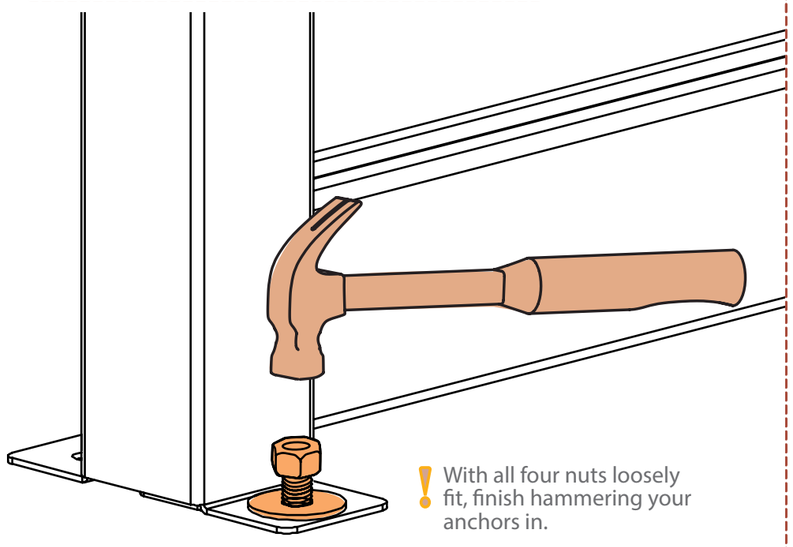

With all four nuts loosely fit, finish hammering your anchors in.

MOUNTED 5

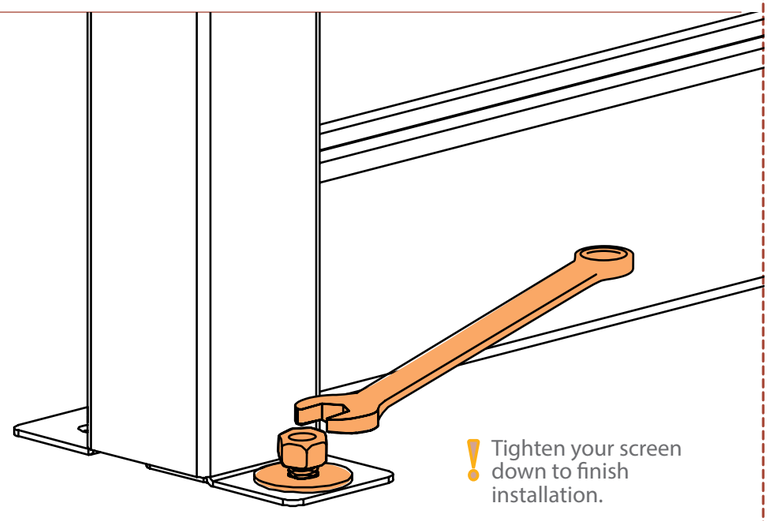

Tighten your screen down to finish installation.

ENCLO

HIDE IT WITH STYLE

www.**enc**loscreens.com

support@**enc**loscreens.com

704-892-5222
877-234-6196

6935 Reames Rd. Ste. K.
Charlotte, NC 28216

ASSEMBLY INSTRUCTIONS

EC18052

VER. **011626**