
ASSEMBLY INSTRUCTIONS

Arched Corner Display Cabinet

MODEL CC-B0009

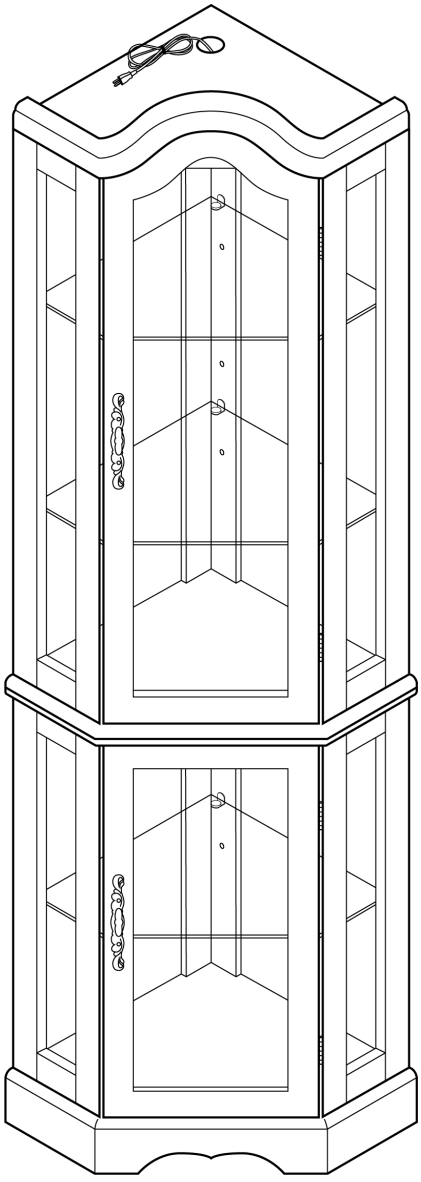

2 ADULTS
Assembly and lifting

24 STEPS
Follow in order

KEEP THIS GUIDE
For future reference

Parts: pages 3-6 | Assembly: pages 7-30 | Care: page 31

PREPARATION

Before You Begin

01 Work with two adults on a clean, soft, level surface. Keep children and pets away.

02 Check all parts and hardware. Do not assemble the cabinet with missing parts or damaged glass.

03 Use a manual Phillips screwdriver for cabinet fasteners. The included Allen key is used for bolts.

04 Use a drill only for wall fixing, with fasteners suitable for the wall.

05 Keep all packaging until assembly is complete. Keep plastic bags and small parts away from children.


KEEP IN MIND

Keep both light assemblies unplugged throughout assembly. Do not trap cords between panels.

PARTS & HARDWARE

Identify the Parts

1. Match each numbered part to the checklist.
2. Separate the upper and lower cabinet components before assembly.

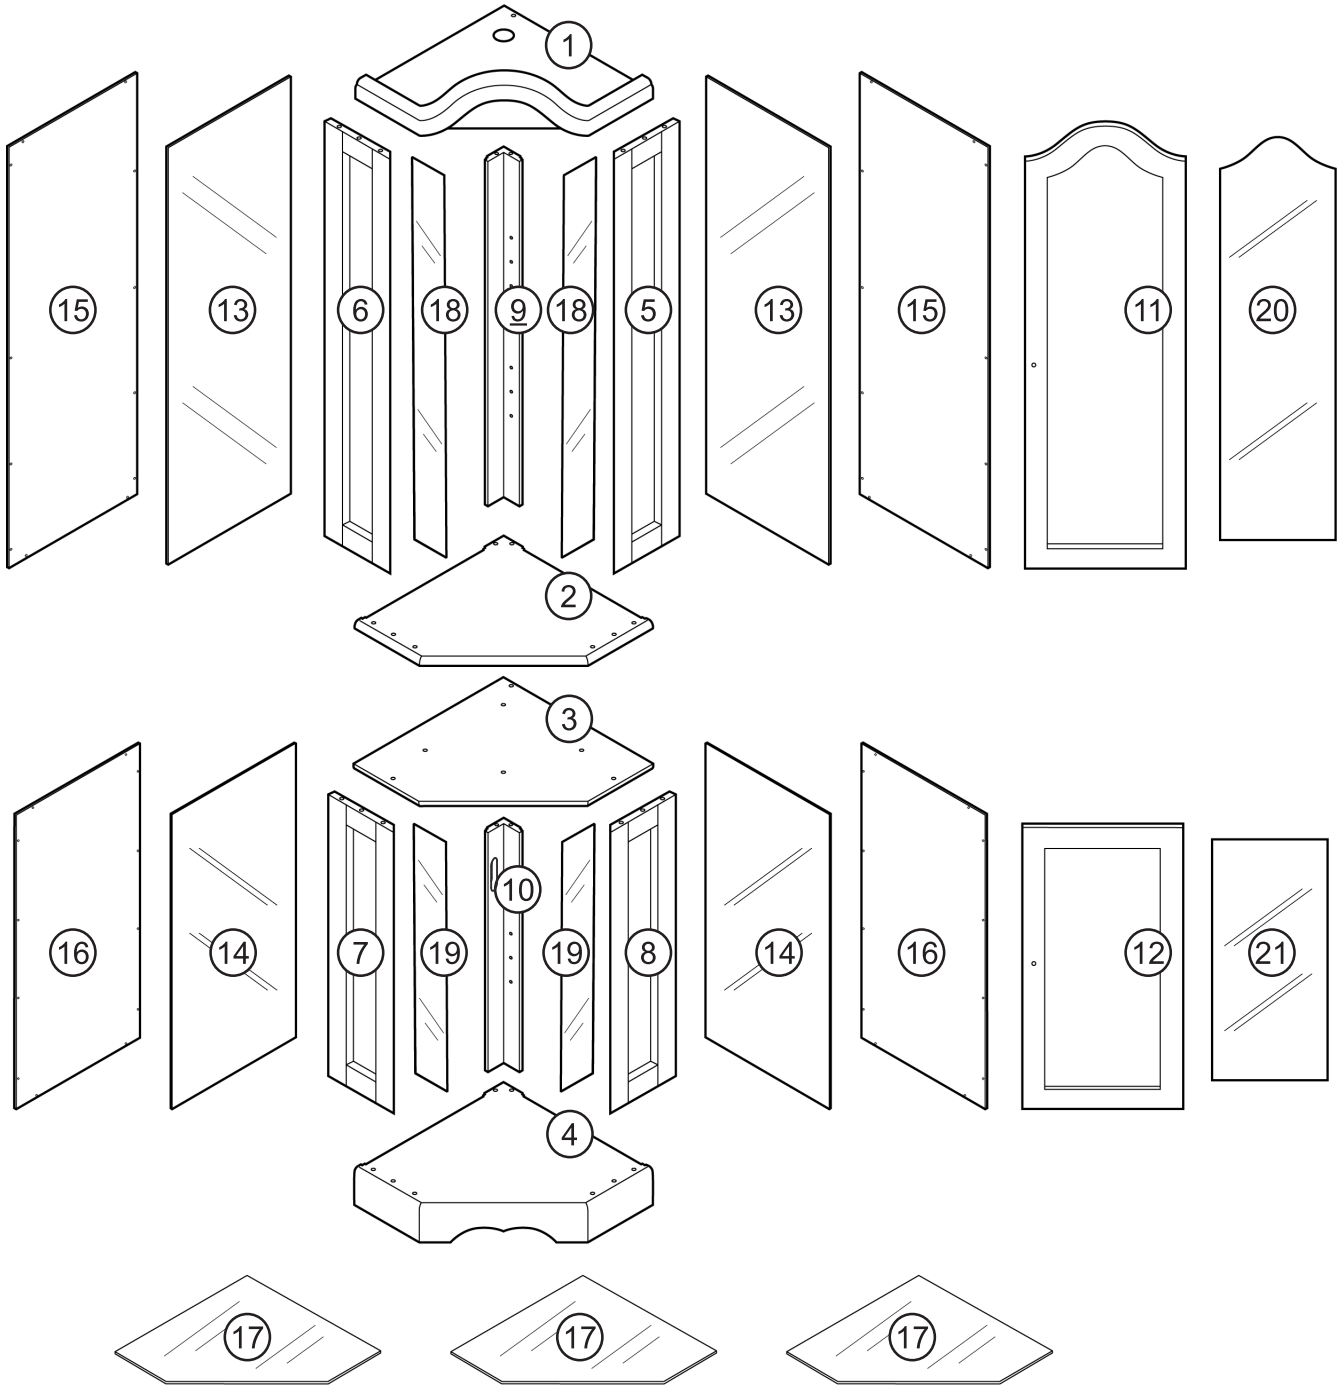

PARTS CHECKLIST

Check the Cabinet Parts

Match each part number and quantity before assembly.

PART	DESCRIPTION	QTY
1	Upper top panel	1
2	Upper bottom panel	1
3	Lower top panel	1
4	Base	1
5	Upper right side frame	1
6	Upper left side frame	1
7	Lower left side frame	1
8	Lower right side frame	1
9	Upper support bar	1
10	Lower support bar	1
11	Upper door frame	1
12	Lower door frame	1
13	Upper mirror panel	2
14	Lower mirror panel	2
15	Upper back panel	2
16	Lower back panel	2
17	Glass shelf	3
18	Upper side glass	2
19	Lower side glass	2
20	Upper door glass	1
21	Lower door glass	1


HANDLE GLASS WITH CARE

Never use cracked or chipped glass. Keep upper and lower parts separate.


PARTS & HARDWARE

Hardware Checklist | A-K

Sort each hardware type by letter. Quantities after “+” are spare pieces.

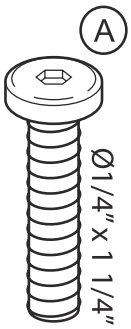


12x + 1x

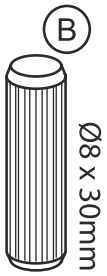


20x + 2x




2x

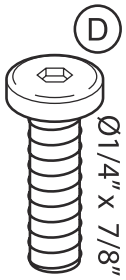


2x

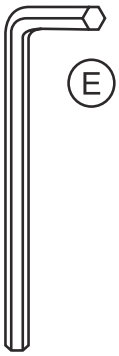

1x

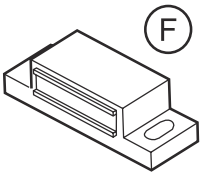

2x

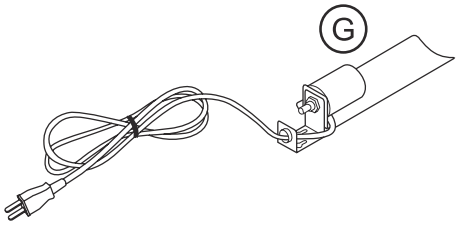


2x



20x + 2x



6x

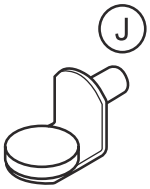

15x + 1x



2x

KEEP IN MIND

Short dowels C and short bolts D are used only to join the upper and lower cabinets.


PARTS & HARDWARE

Hardware Checklist | L-W

Check all hardware before starting. Quantities after “+” are spare pieces.



2x



38x + 3x



38x + 3x




52x + 4x



2x




2x




2x




2x




4x

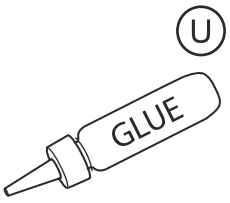

1x

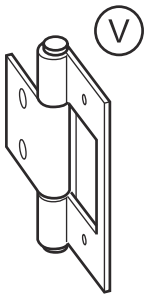

4x

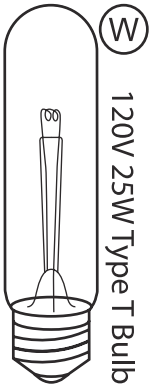

2x

KEEP IN MIND


Bulbs W: 120 V, 25 W, Type T. Follow the actual fixture label when replacing bulbs.

STEP

01 Attach the Catch Plates

1. Attach one plate P to each door, parts 11 and 12, using one screw I per plate.
2. Keep the glass recess facing upward on a soft surface.

P × 2 | I × 2

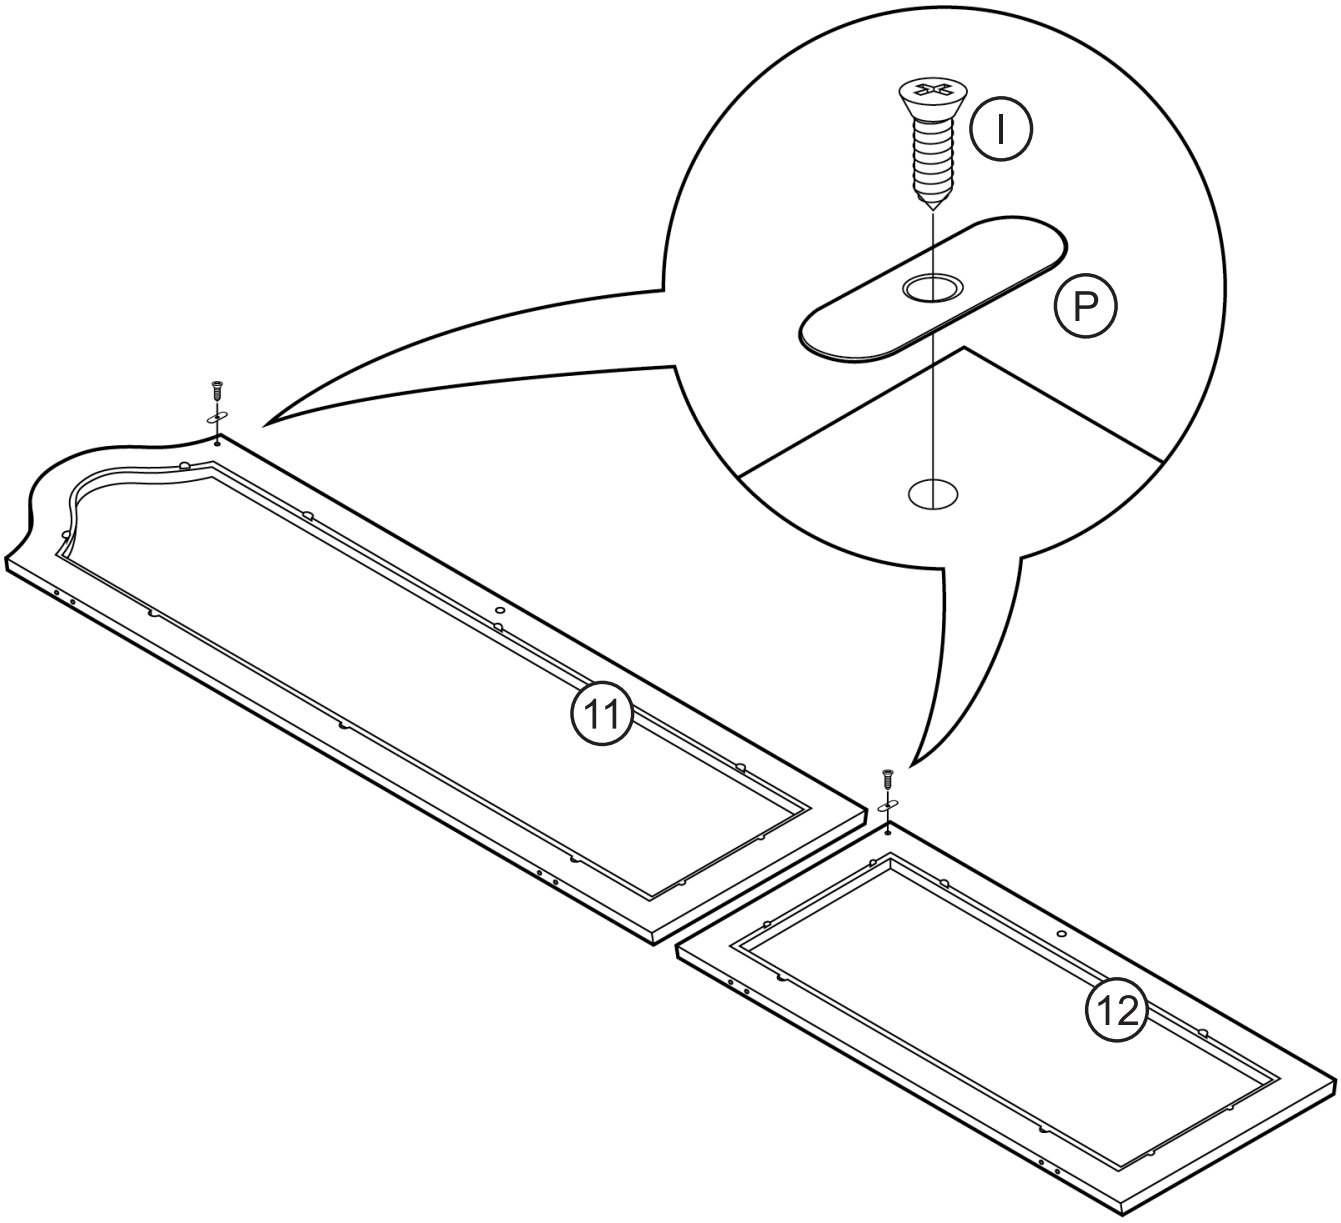

ASSEMBLY CHECK


Keep both door frames flat on a soft surface while working.

STEP

02 Fit the Door Glass

Place glass 20 into door 11 and glass 21 into door 12. Keep both doors flat on a soft surface.

Door 11 + glass 20 | Door 12 + glass 21

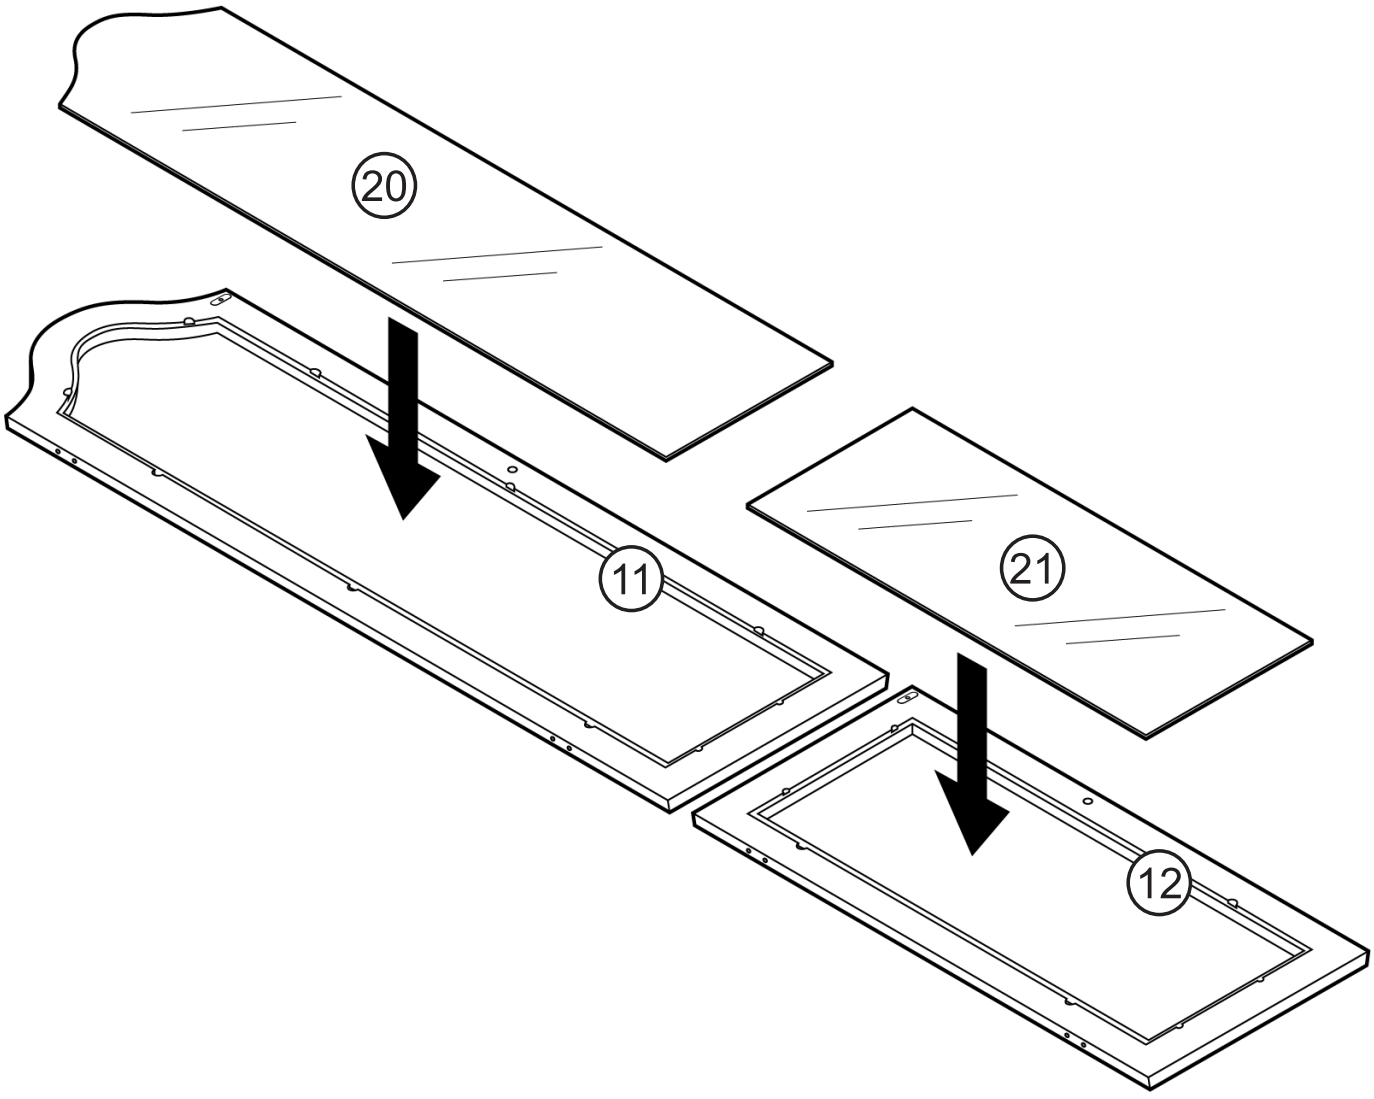

ASSEMBLY CHECK


Use glass 20 for the upper door and glass 21 for the lower door. Do not force the glass into place.

STEP

03 Secure the Door Glass

Install retainers M with screws N at the positions shown. Use 18 of each in total. Tighten gently; do not overtighten against glass.

M × 18 | N × 18

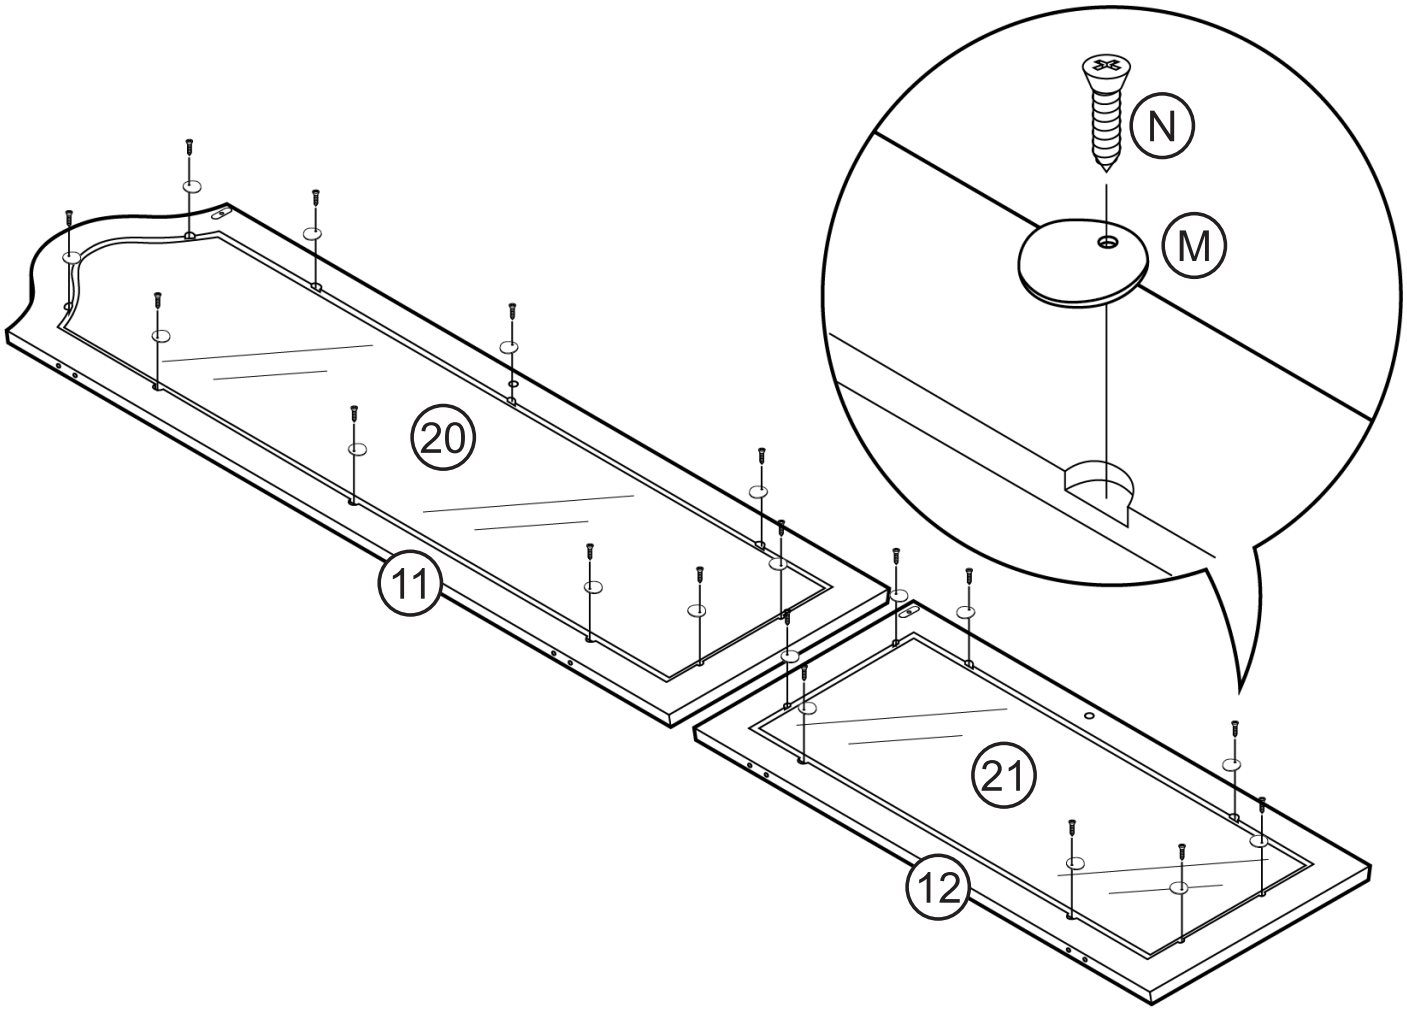

ASSEMBLY CHECK

Use 18 retainers and 18 screws across both doors. Tighten gently to avoid pressure on the glass.


04

STEP

Attach the Door Handles

Attach one handle K to each door (11 and 12) with one screw L.

K × 2 | L × 2

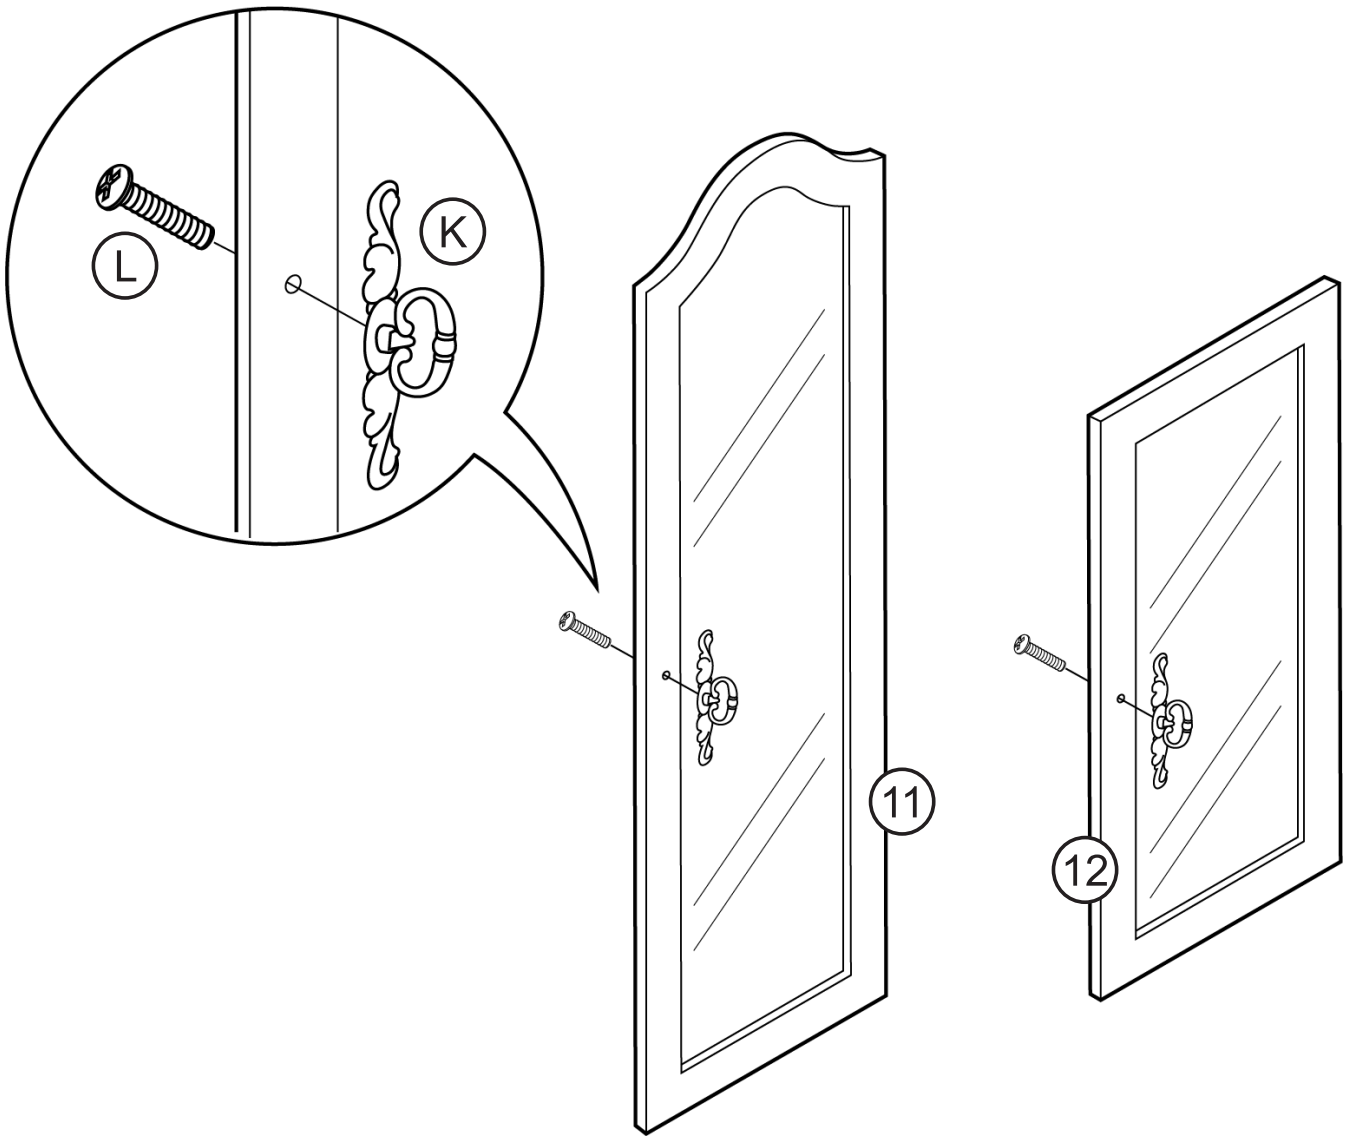

ASSEMBLY CHECK


Support each door while fitting its handle. Tighten the screw by hand.

STEP

05 Fit the Side Glass

Fit the two upper side glass panels 18 into parts 5 and 6. Fit the two lower side glass panels 19 into parts 7 and 8.

Glass 18 × 2 | Glass 19 × 2

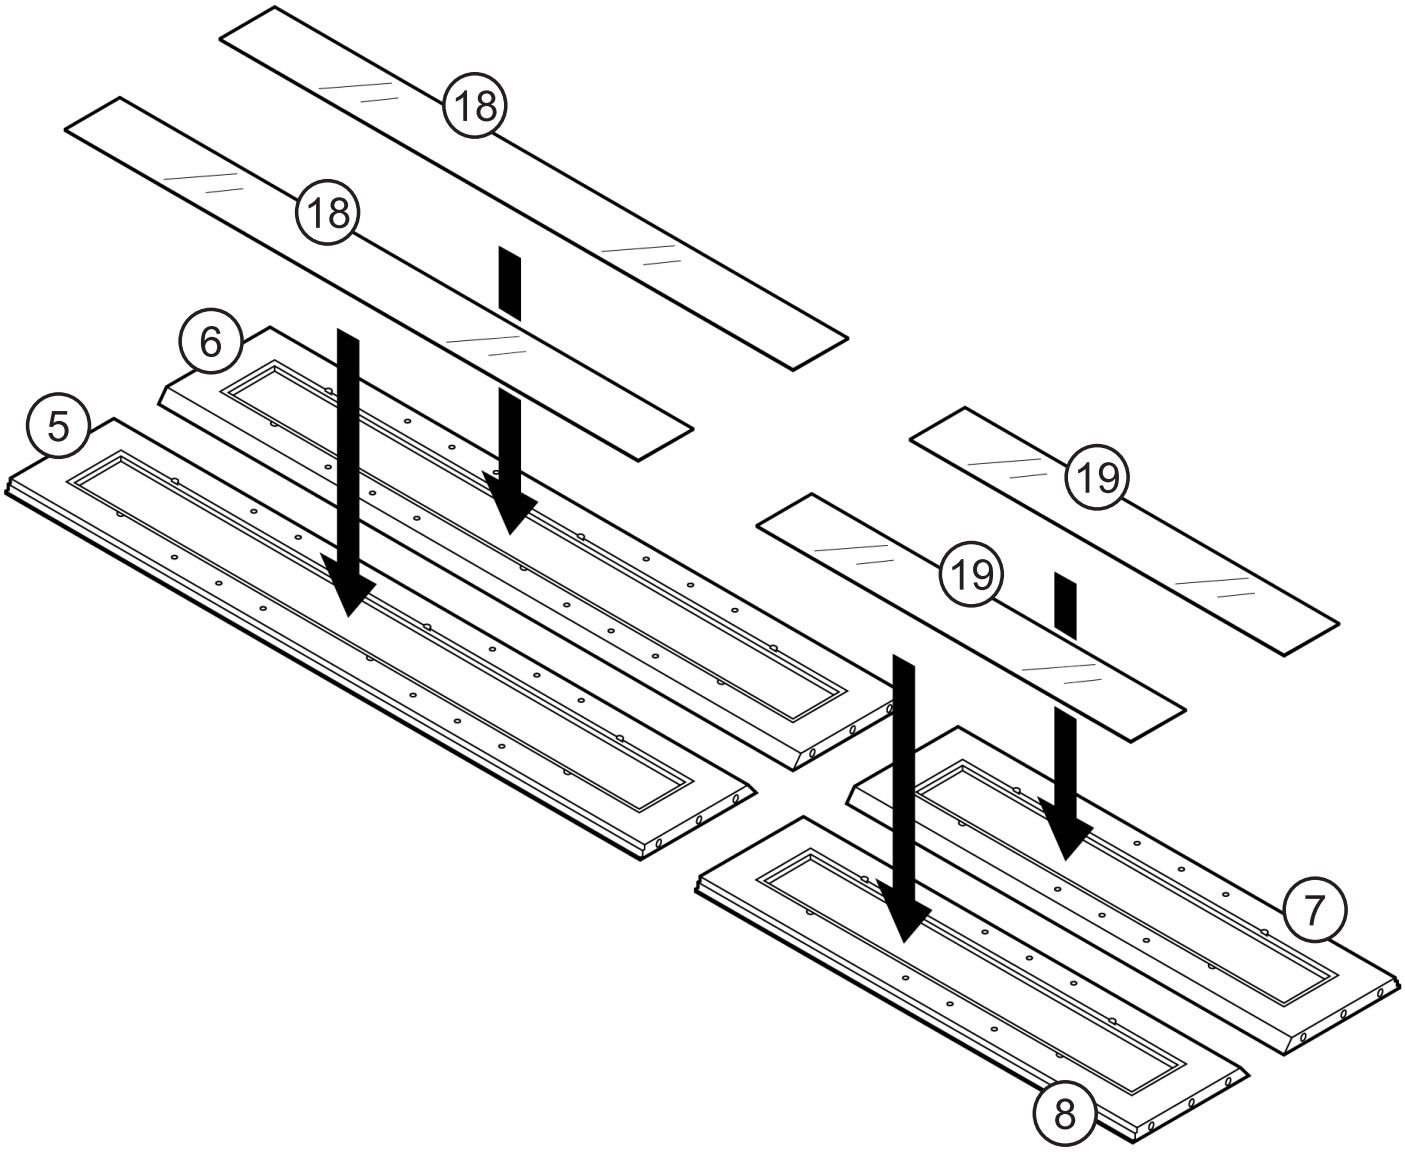

ASSEMBLY CHECK


Upper side frames use glass 18. Lower side frames use glass 19.

STEP

06 Secure the Side Glass

Secure all four side glass panels with retainers M and screws N. Use 20 of each in total. Tighten gently.

M × 20 | N × 20

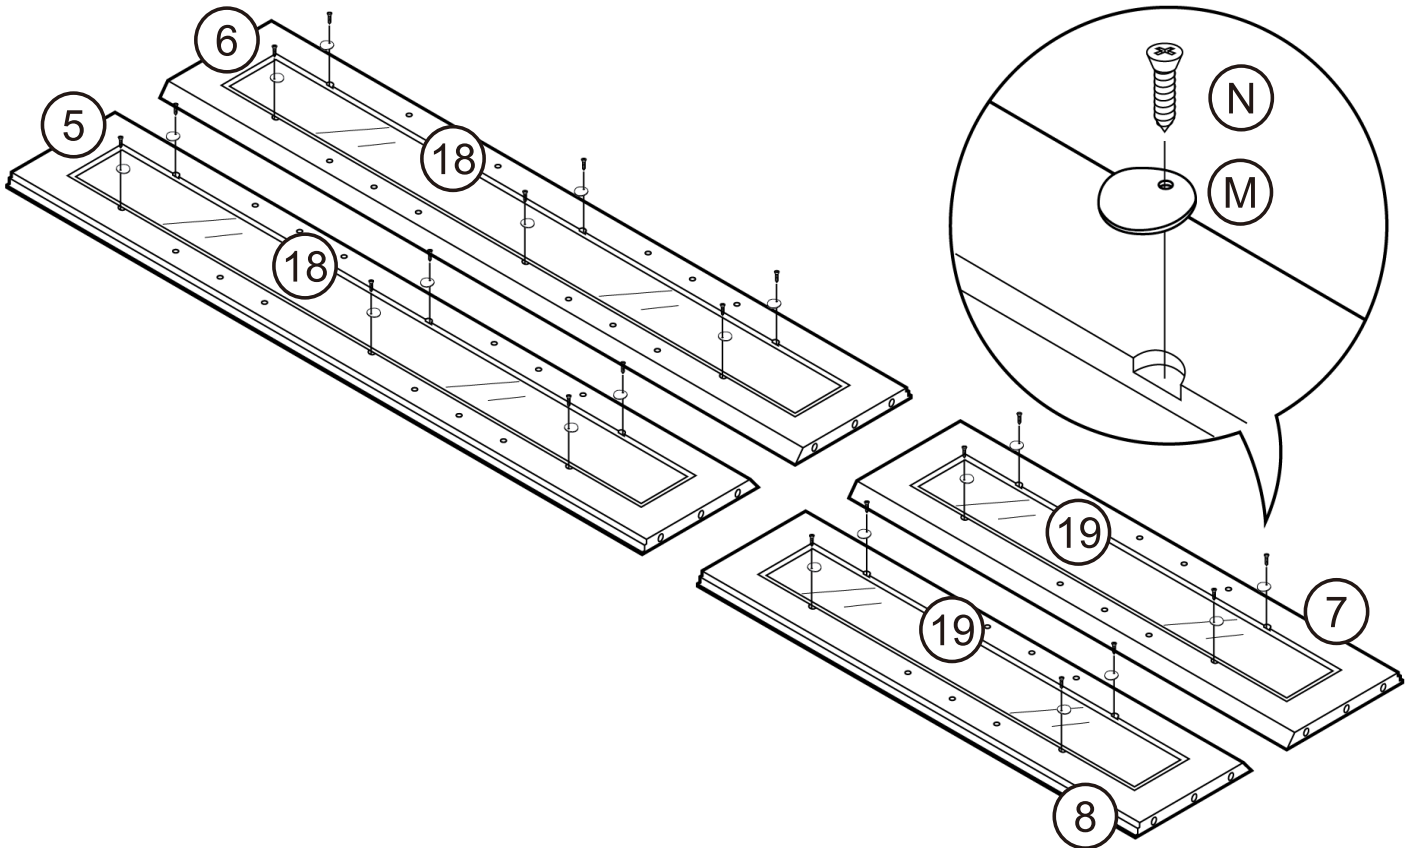

ASSEMBLY CHECK

Use 20 retainers and 20 screws across all four side frames. Do not overtighten against glass.


07

STEP

Attach the Upper Catch

Attach one magnetic catch F to the underside of top panel 1 using two screws H.

F × 1 | H × 2

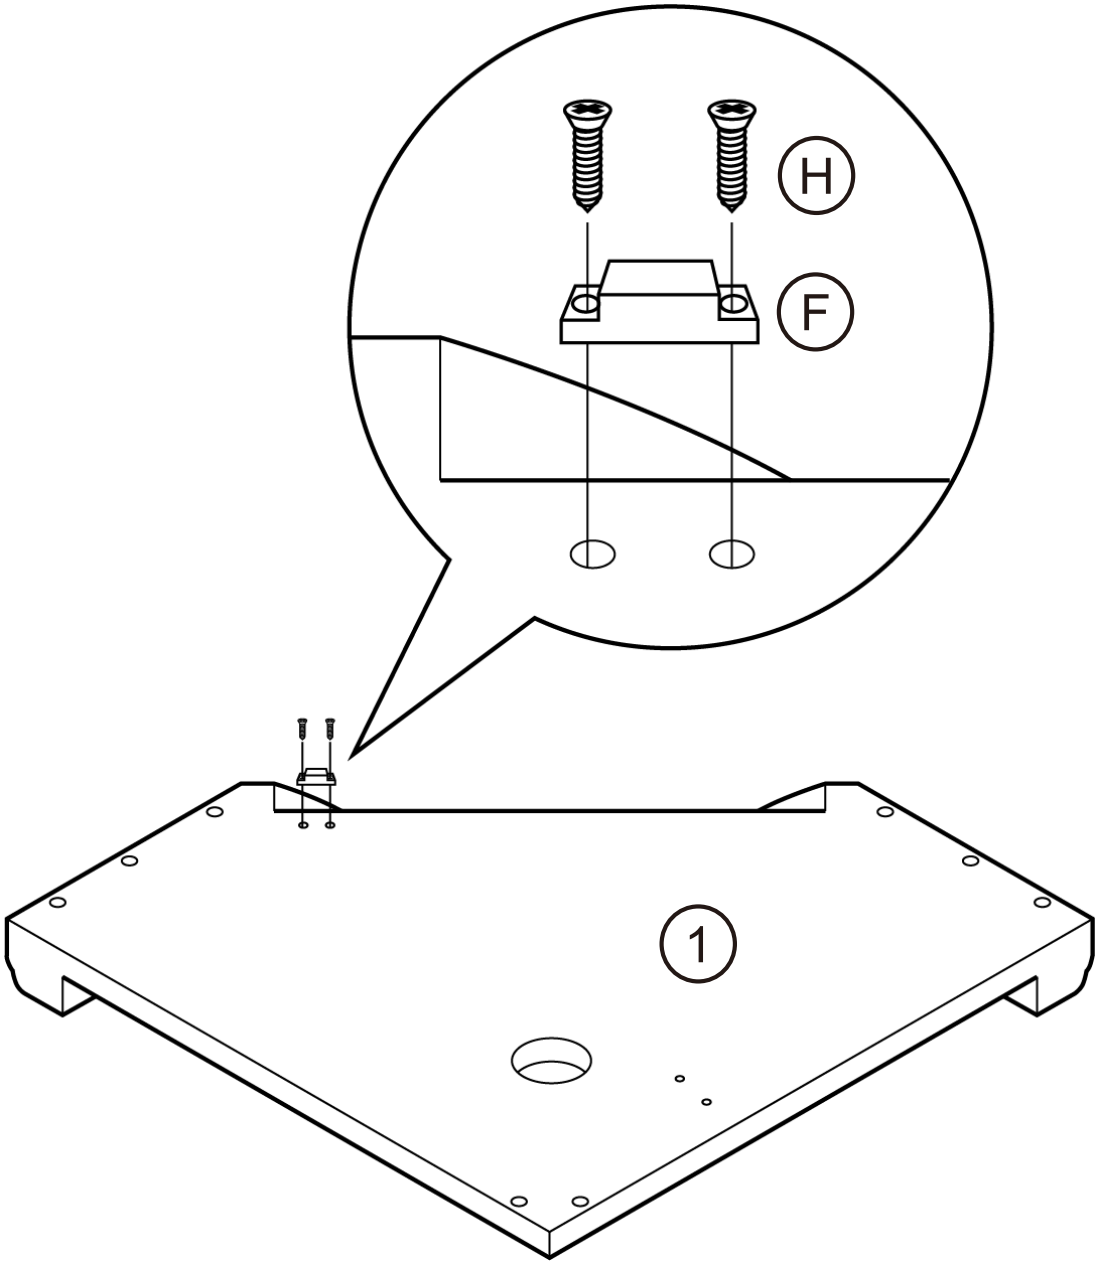

ASSEMBLY CHECK


Work on the underside of the arched top panel 1, in the orientation shown.

STEP

08 Install the Upper Light

With the light unplugged, attach G to the underside of panel 1 using two screws I. Fit bulb W. Keep the cord clear of edges and joints.

G × 1 | I × 2 | W × 1

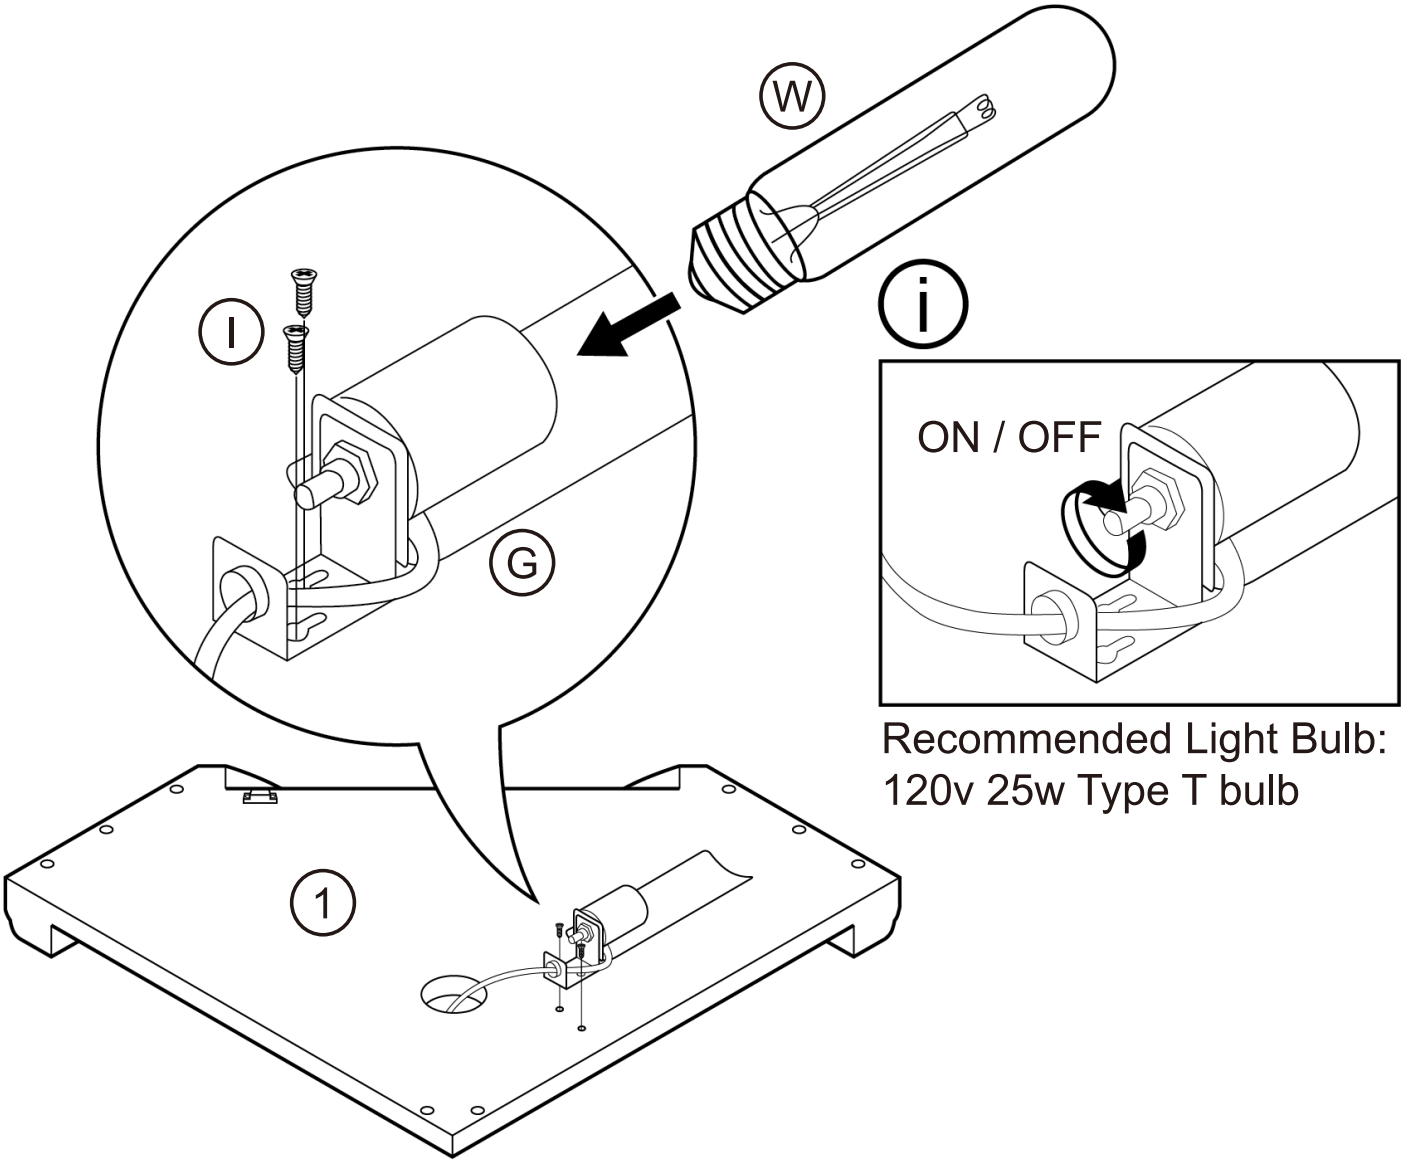

ASSEMBLY CHECK

Keep the light unplugged. Turn the bulb gently into the socket; do not force it.


09

STEP

Attach the Lower Catch

Attach one magnetic catch F to the underside of panel 3 using two screws H.

F × 1 | H × 2

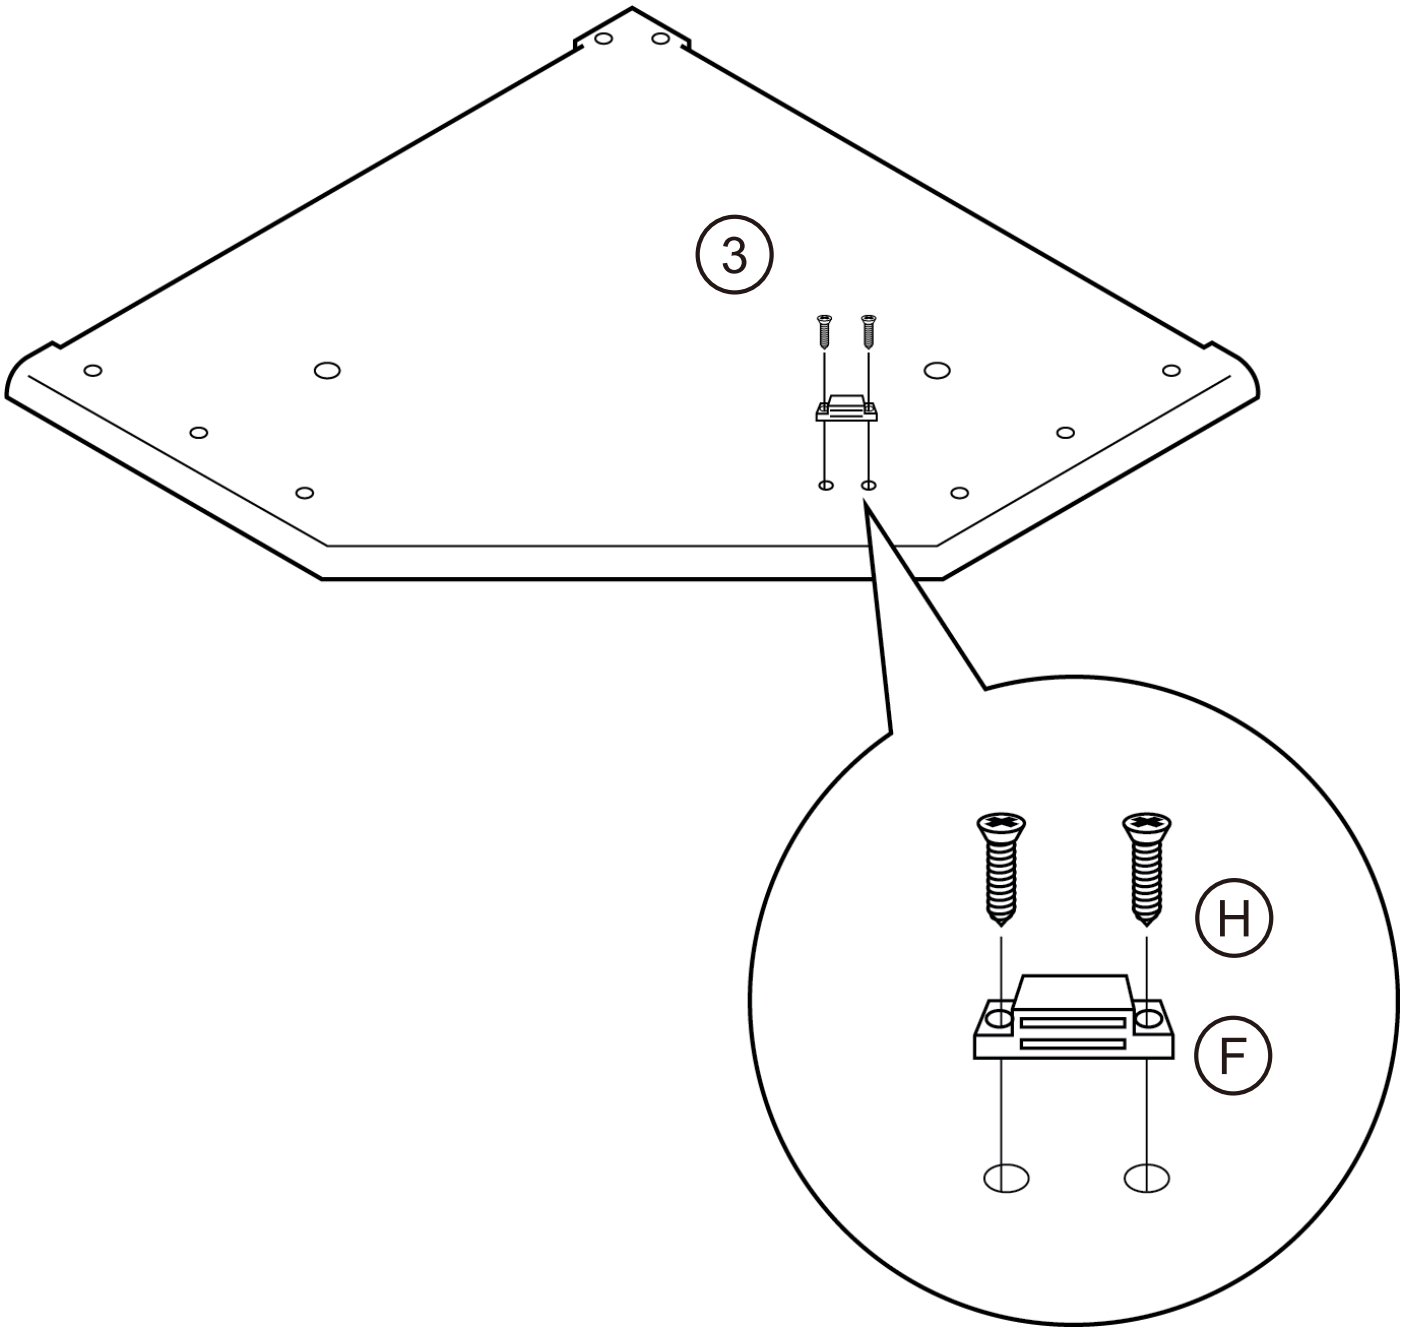

ASSEMBLY CHECK

This catch fits the underside of lower top panel 3.

STEP


10 Install the Lower Light

With the light unplugged, attach G to the underside of panel 3 using two screws I. Fit bulb W. Keep the cord clear of edges and joints.

G × 1 | I × 2 | W × 1


PANEL 3 / UNDERSIDE

Keep the light unplugged.

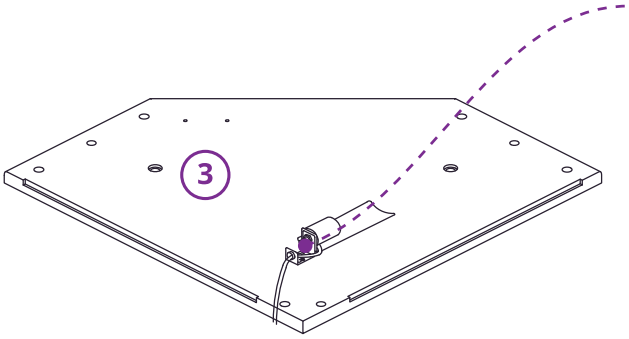

Route the cord clear of edges and joints.

LIGHT ASSEMBLY

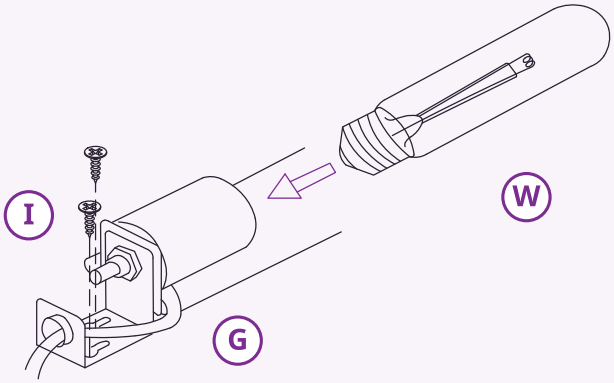

01 Fasten socket G with screws I × 2.

02 Screw bulb W into the socket.

G × 1 I × 2 W × 1

ASSEMBLY CHECK

Keep the light unplugged and route the cord clear of panel edges and joints.

STEP


11 Assemble the Upper Cabinet

Apply glue U to the dowel joints shown. Join side panels 5 and 6 and support bar 9 to bottom panel 2 using five dowels B and three bolts A.

A × 3 | B × 5 | Glue U | Hex key E

UPPER CABINET FRAME

Match all drilled edges before joining.

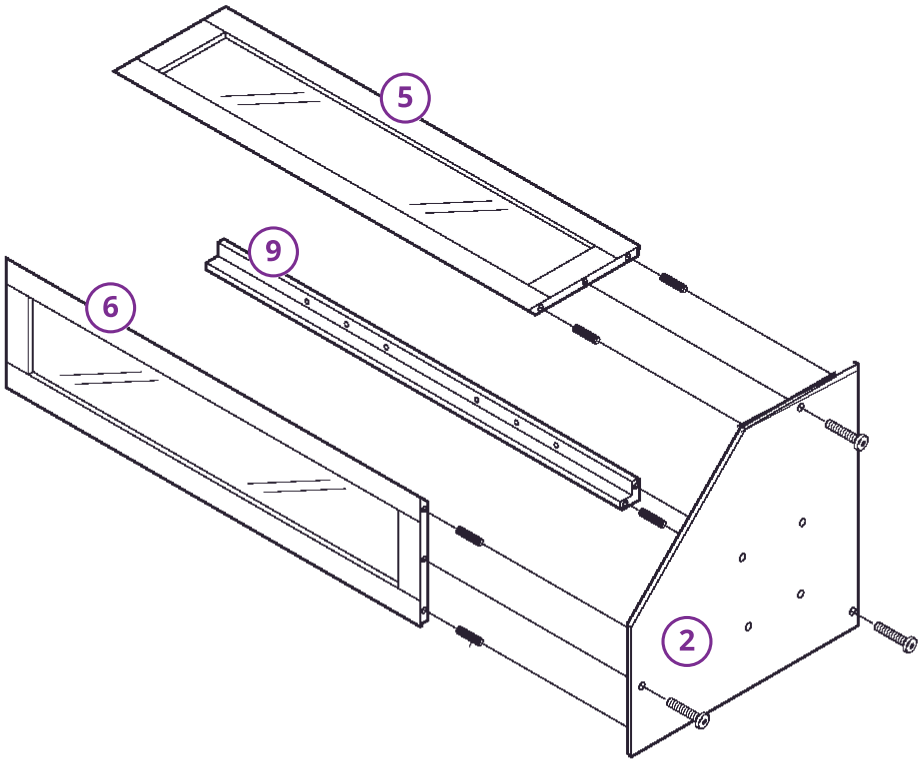

Panels 5 and 6 + support 9
join bottom panel 2.

Keep the orientation shown above.

01 / APPLY GLUE



U

Apply glue to the
5 dowel joints shown.

02 / INSERT DOWELS



B × 5
8 × 30 mm

Two per side panel;
one for support 9.

03 / TIGHTEN BOLTS



A × 3
1/4 × 1 1/4 in

One bolt per panel
or support.

Use Allen key E.

ASSEMBLY CHECK


Use upper side frames 5 and 6 and support bar 9. Match the orientation and drilled edges shown.

STEP

12 Fit the Upper Top Panel

Apply glue U to the dowel joints shown. Fit top panel 1 using five dowels B and three bolts A. Keep the cord clear.

A × 3 | B × 5 | Glue U | Hex key E

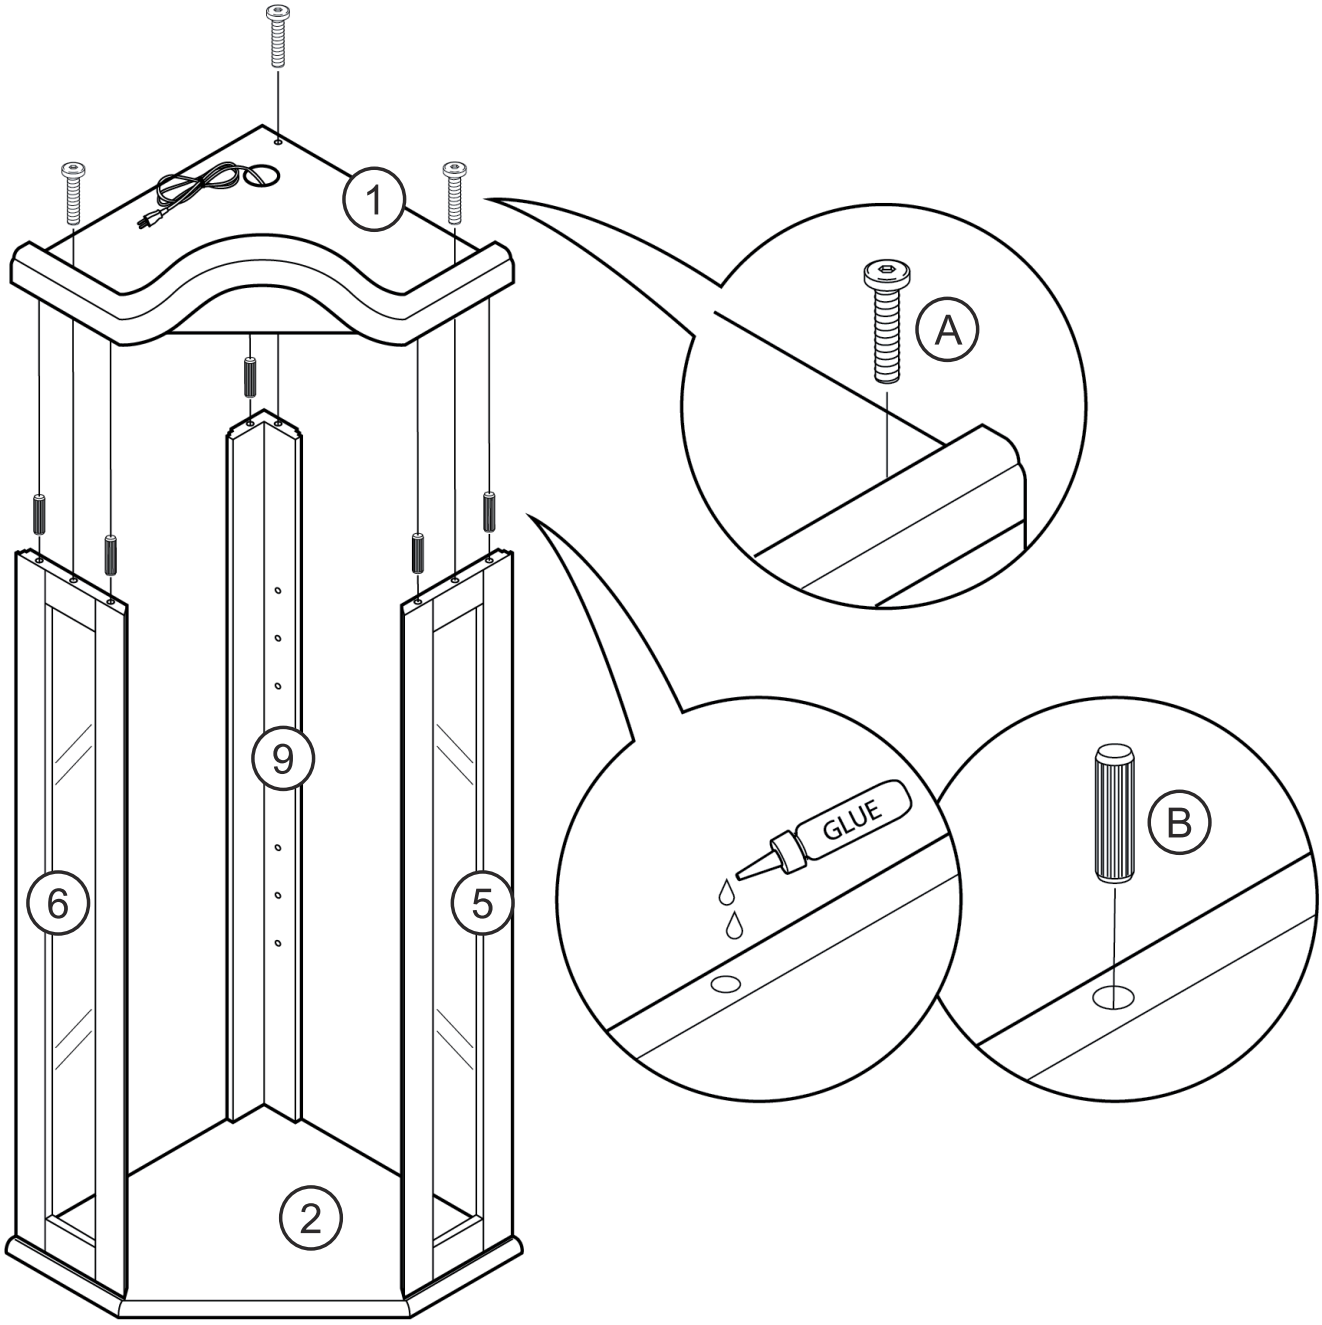

ASSEMBLY CHECK


Before tightening, check that each dowel is seated and the light cord is not trapped.

STEP

13 Fit the Upper Mirrors and Backs

1. Remove the protective film from both upper mirror panels 13. Fit the mirrors with the reflective sides facing the cabinet interior, then place both back panels 15 over them.
2. Secure the backs with 28 screws O in total. At the two strap positions, pass the screws through washers T and anti-tip straps Q as shown.

O × 28 | Q × 2 | T × 2

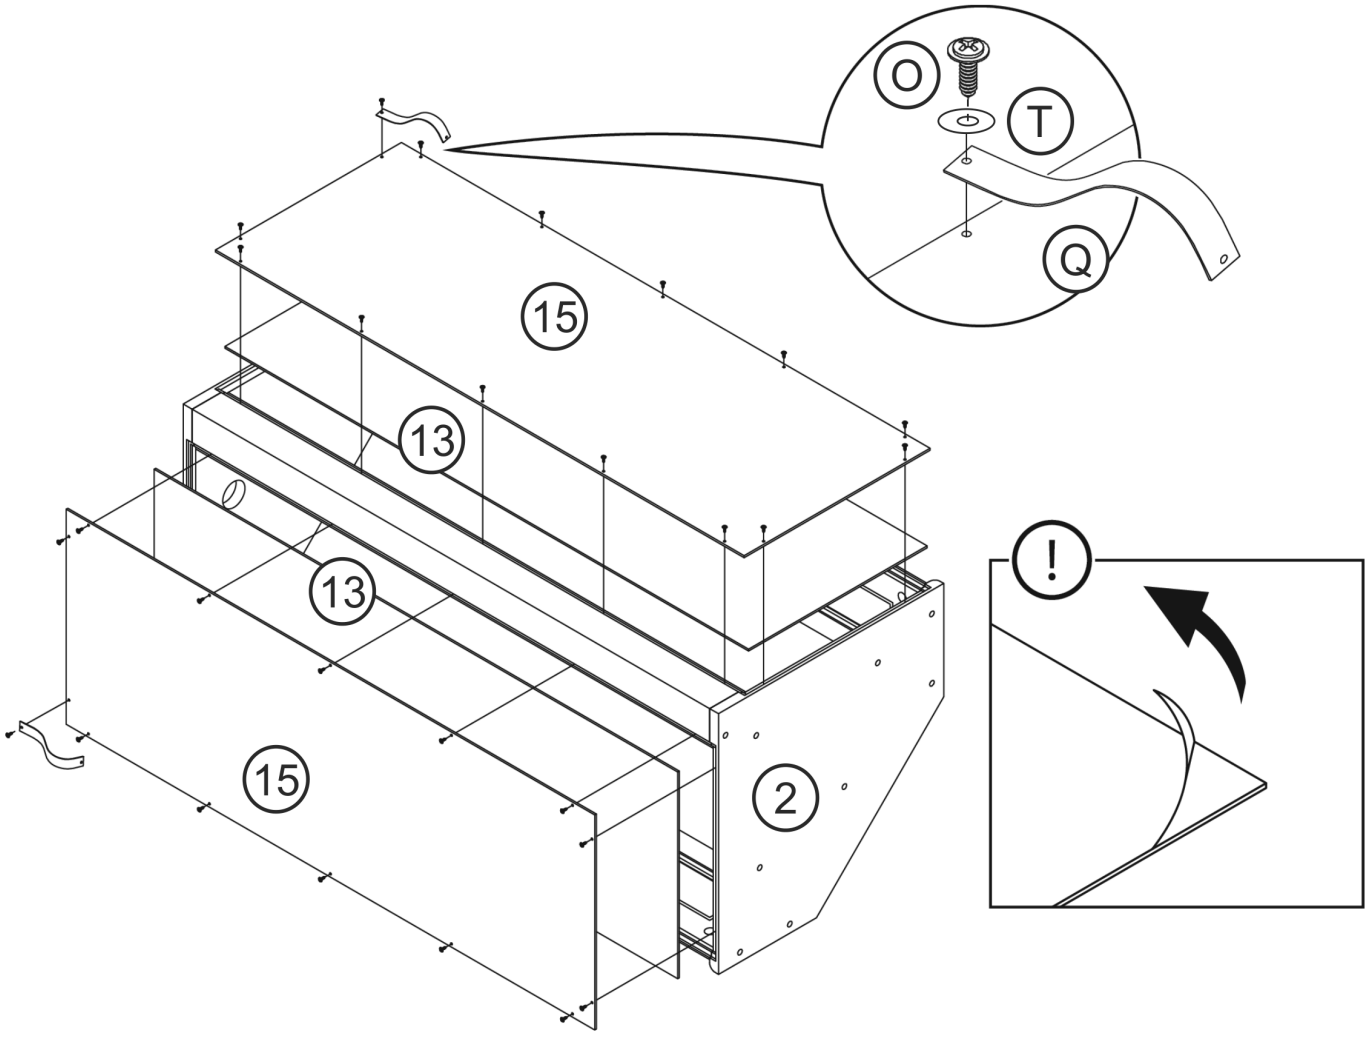

ASSEMBLY CHECK


The 28 screws include the two cabinet-side strap fixing points. Do not add two extra screws.

STEP

14 Attach Upper Door Hinges

Attach two hinges V to upper door 11 using four screws H.

V × 2 | H × 4

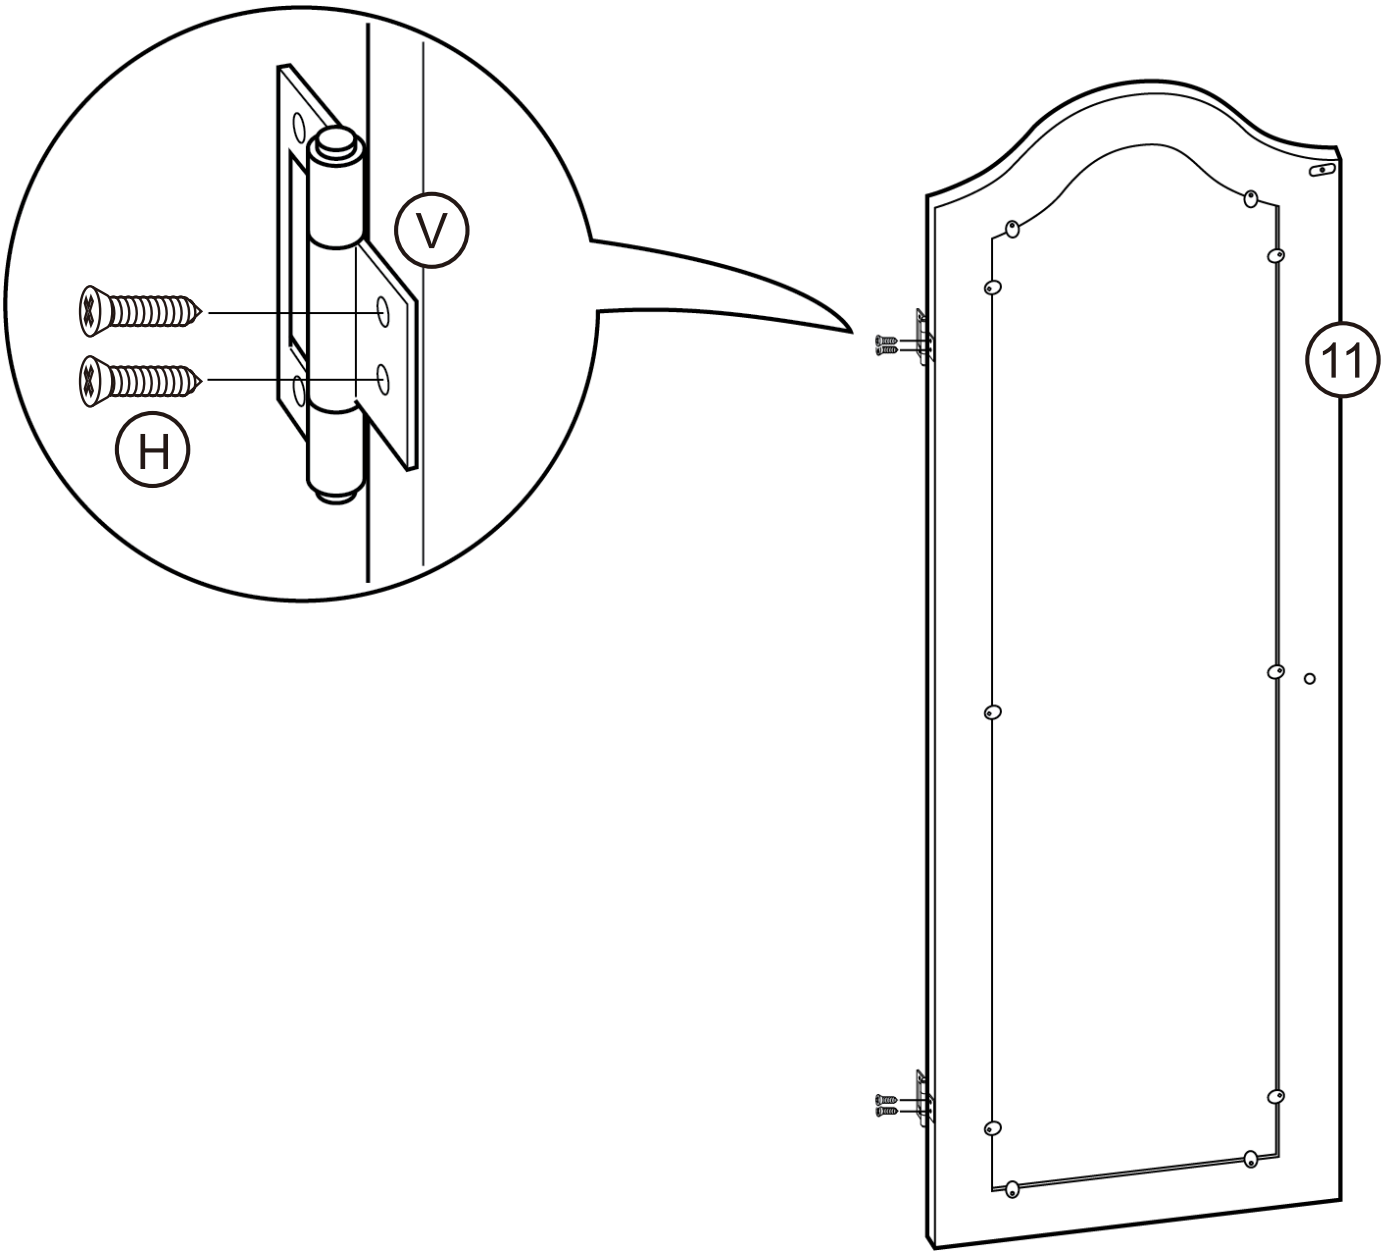

ASSEMBLY CHECK


Match the hinge orientation shown before tightening the screws.

STEP

15 Hang the Upper Door

Have one adult support door 11 while the other attaches its hinges to the cabinet using four screws H. Check that the door closes freely.

H × 4

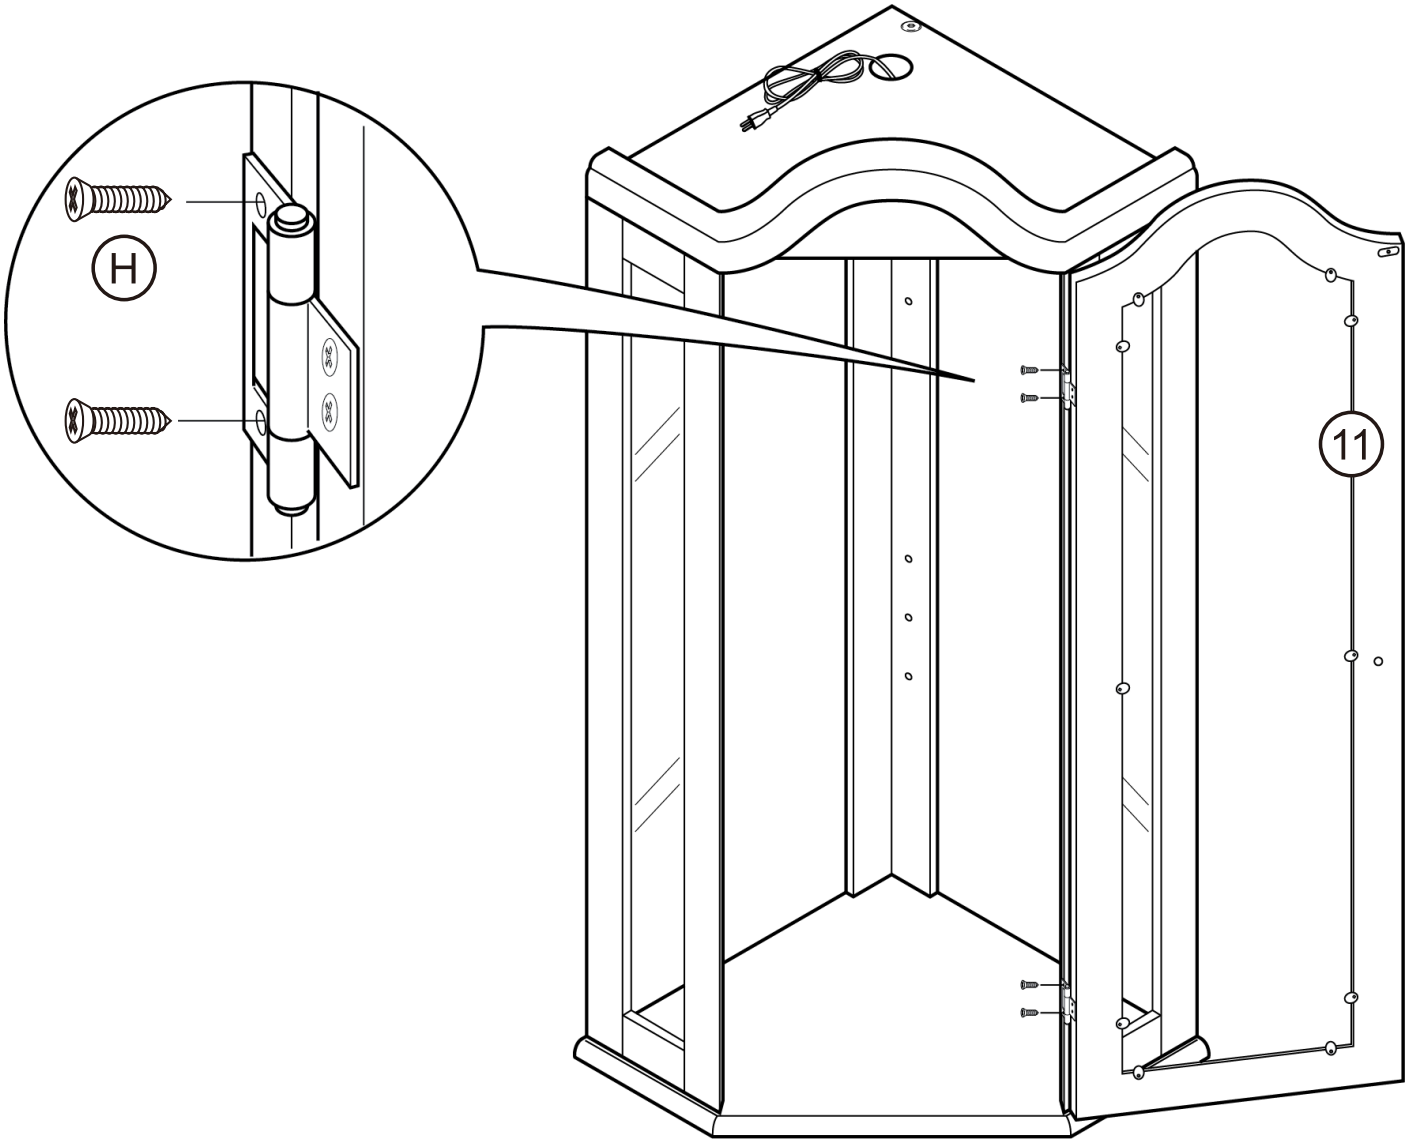

ASSEMBLY CHECK


Support the door until both hinges are secured. Check that it opens and closes freely.

STEP

16 Assemble the Lower Cabinet

1. Apply glue U to the dowel joints shown.
2. Join side panels 7 and 8 and support bar 10 to base 4 using five dowels B and three bolts A.

A × 3 | B × 5 | Glue U | Hex key E

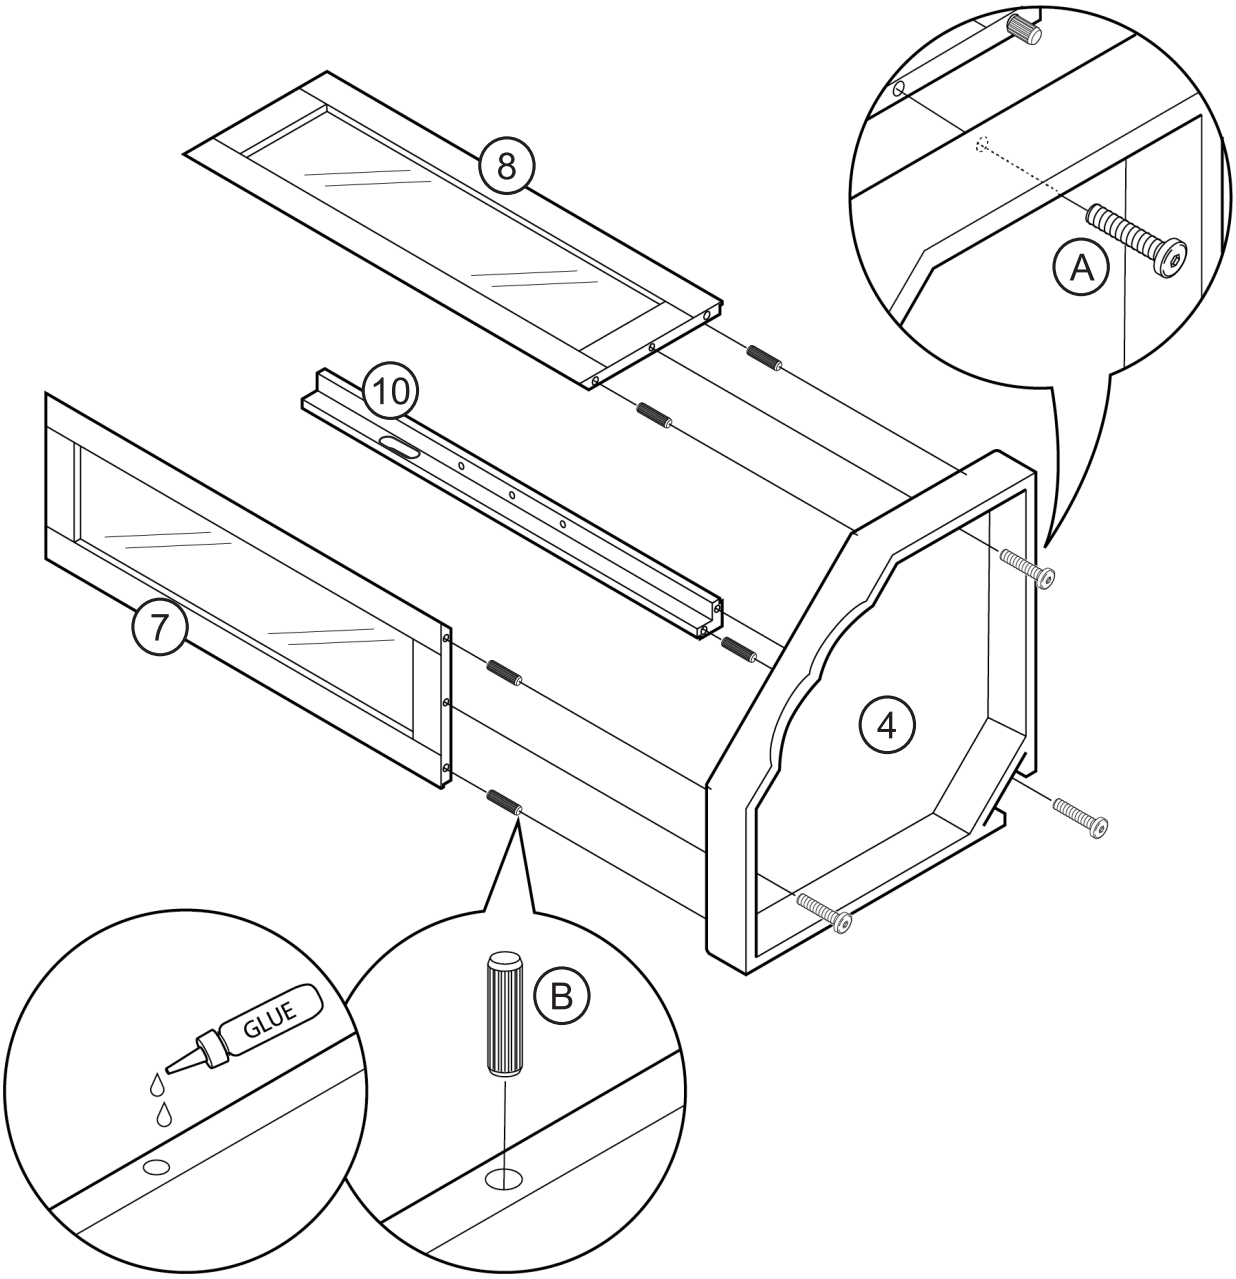

ASSEMBLY CHECK


Use lower side frames 7 and 8 and support bar 10. Keep these separate from the upper cabinet parts.

STEP 17

Fit the Lower Top Panel

Apply glue U to the dowel joints shown. Fit top panel 3 using five dowels B and three bolts A. Keep the light cord clear.

A × 3 | B × 5 | Glue U | Hex key E

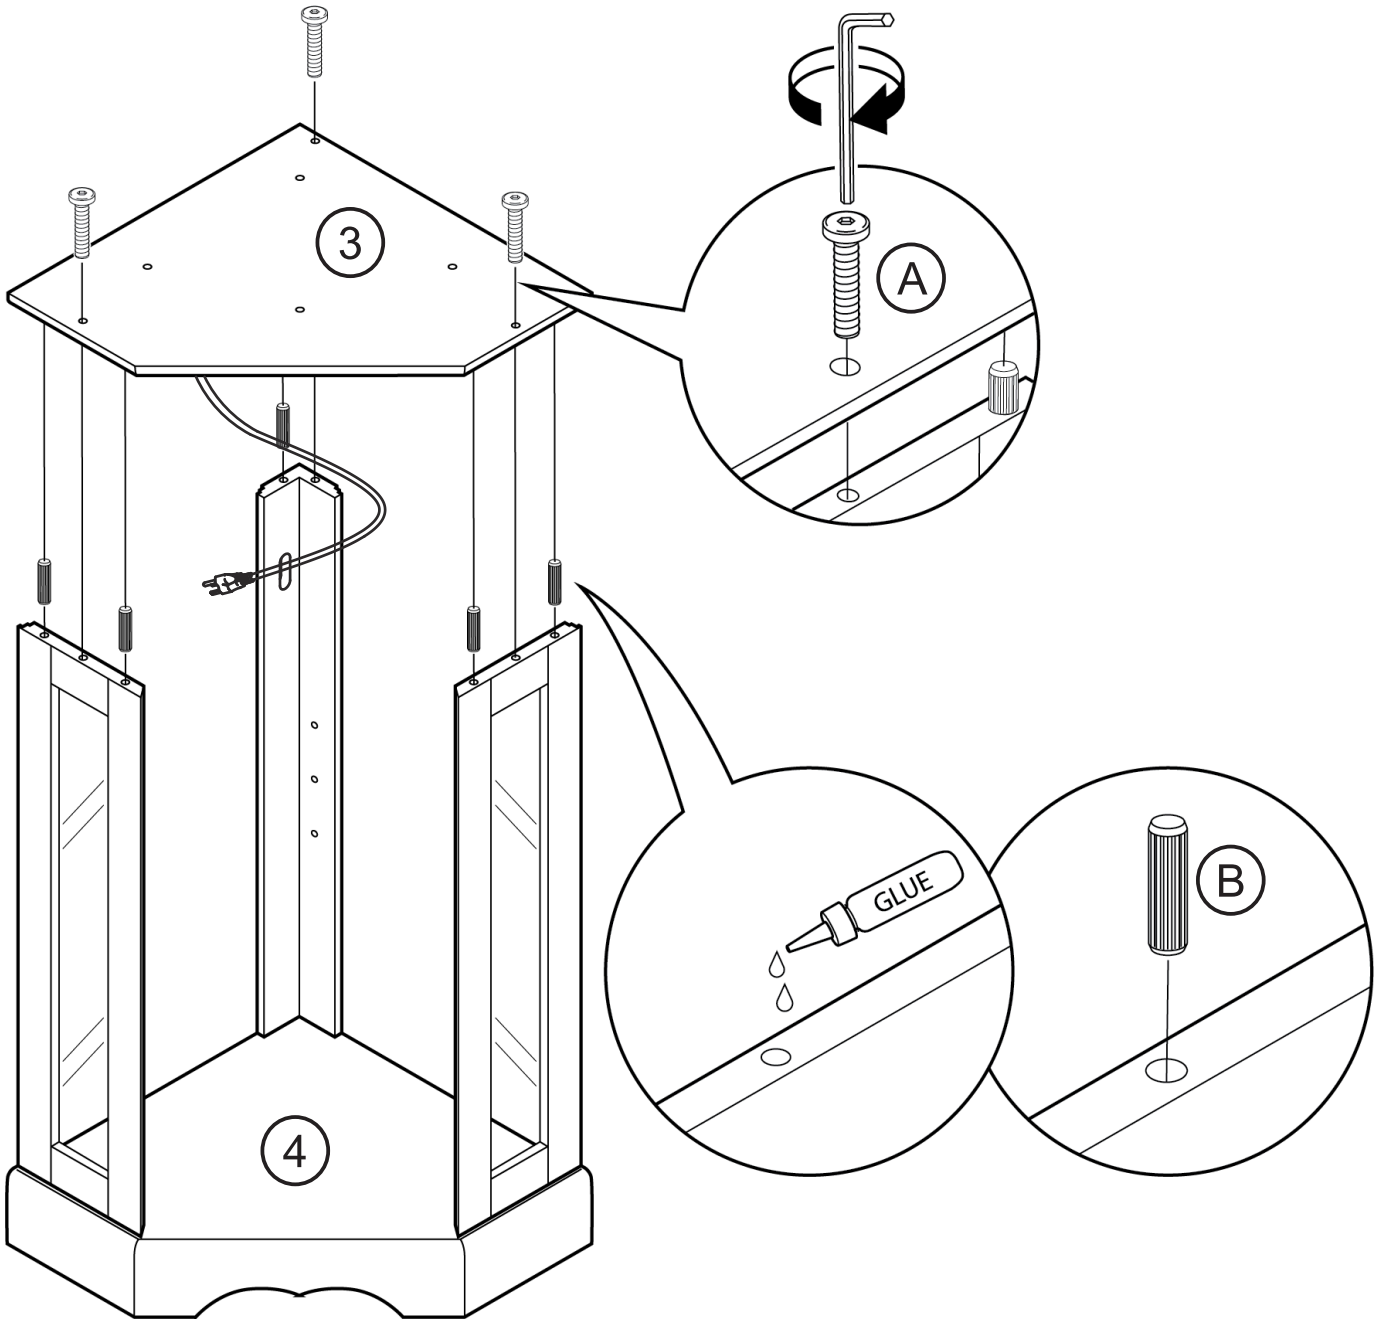

ASSEMBLY CHECK


Before tightening, check that each dowel is seated and the light cord is not trapped.


STEP

18 Fit the Lower Mirrors and Backs

1. Remove the protective film from both lower mirror panels 14. Fit the mirrors with the reflective sides facing the cabinet interior.
2. Place both lower back panels 16 over the mirrors and secure them with 24 screws O.

O × 24

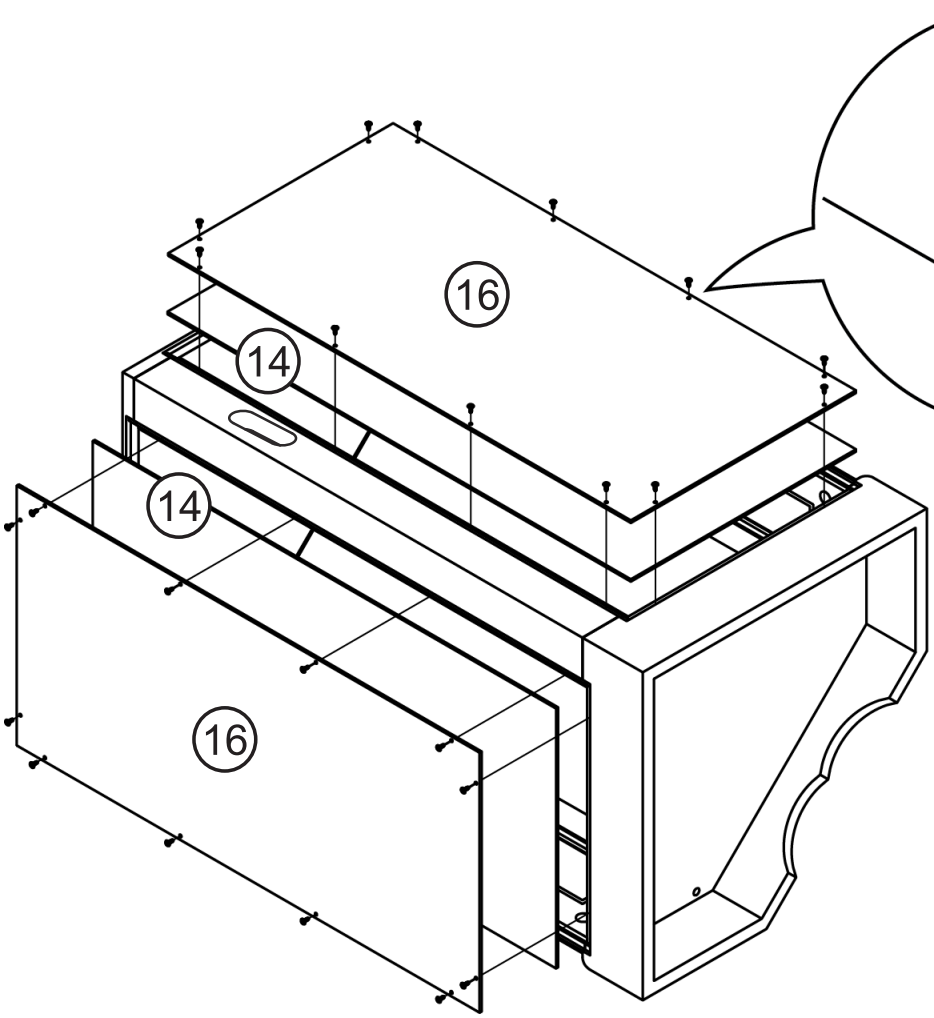

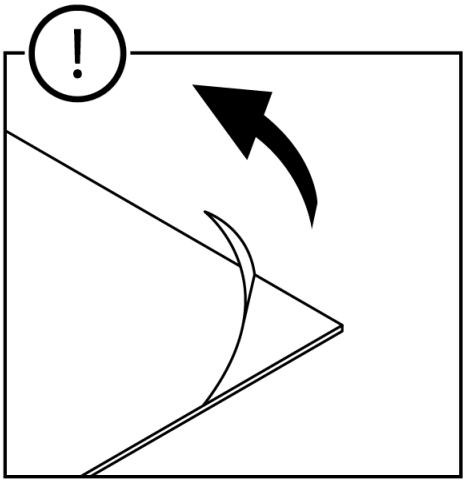

Remove protective film on the mirror panel.

ASSEMBLY CHECK


Fit the mirror panels before the back panels. The reflective faces must face into the cabinet.

STEP

19 Attach Lower Door Hinges

Attach two hinges V to lower door 12 using four screws H.

V × 2 | H × 4

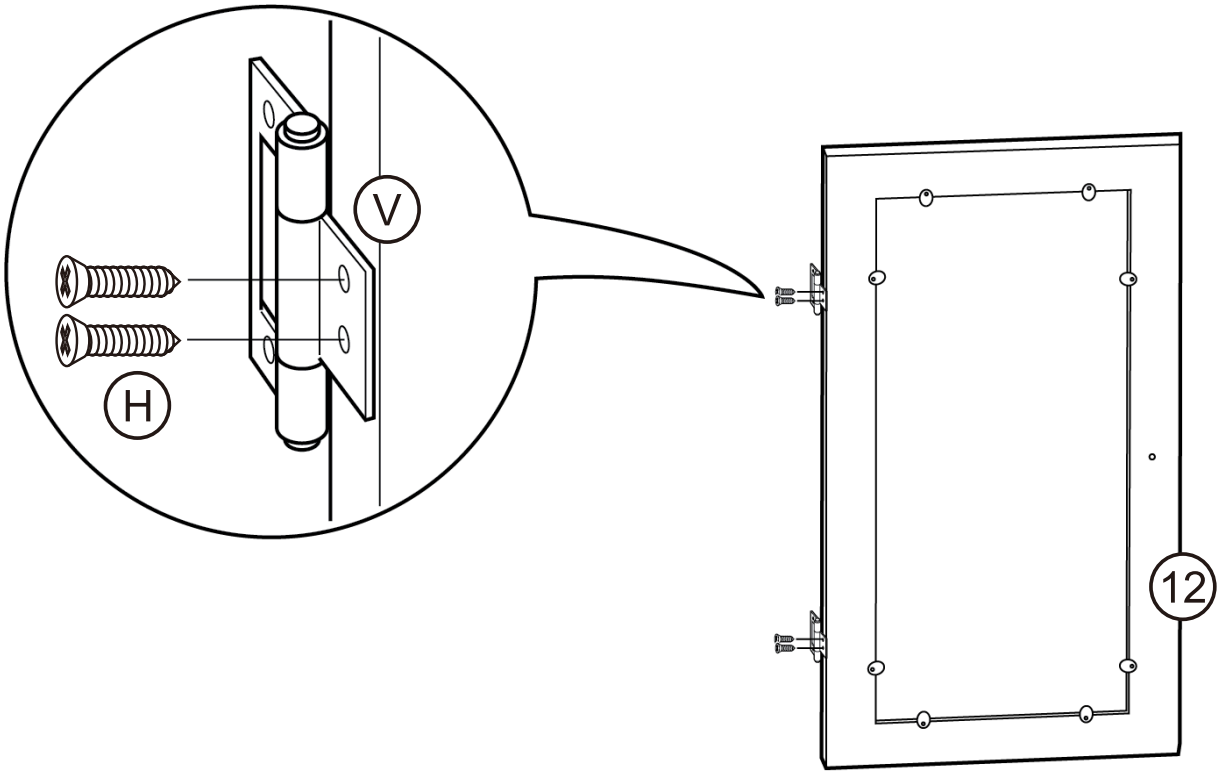

ASSEMBLY CHECK


Use lower door 12. Match the hinge orientation shown.

STEP

20 Hang the Lower Door

Have one adult support door 12 while the other attaches its hinges to the cabinet using four screws H. Check that the door closes freely.

H × 4

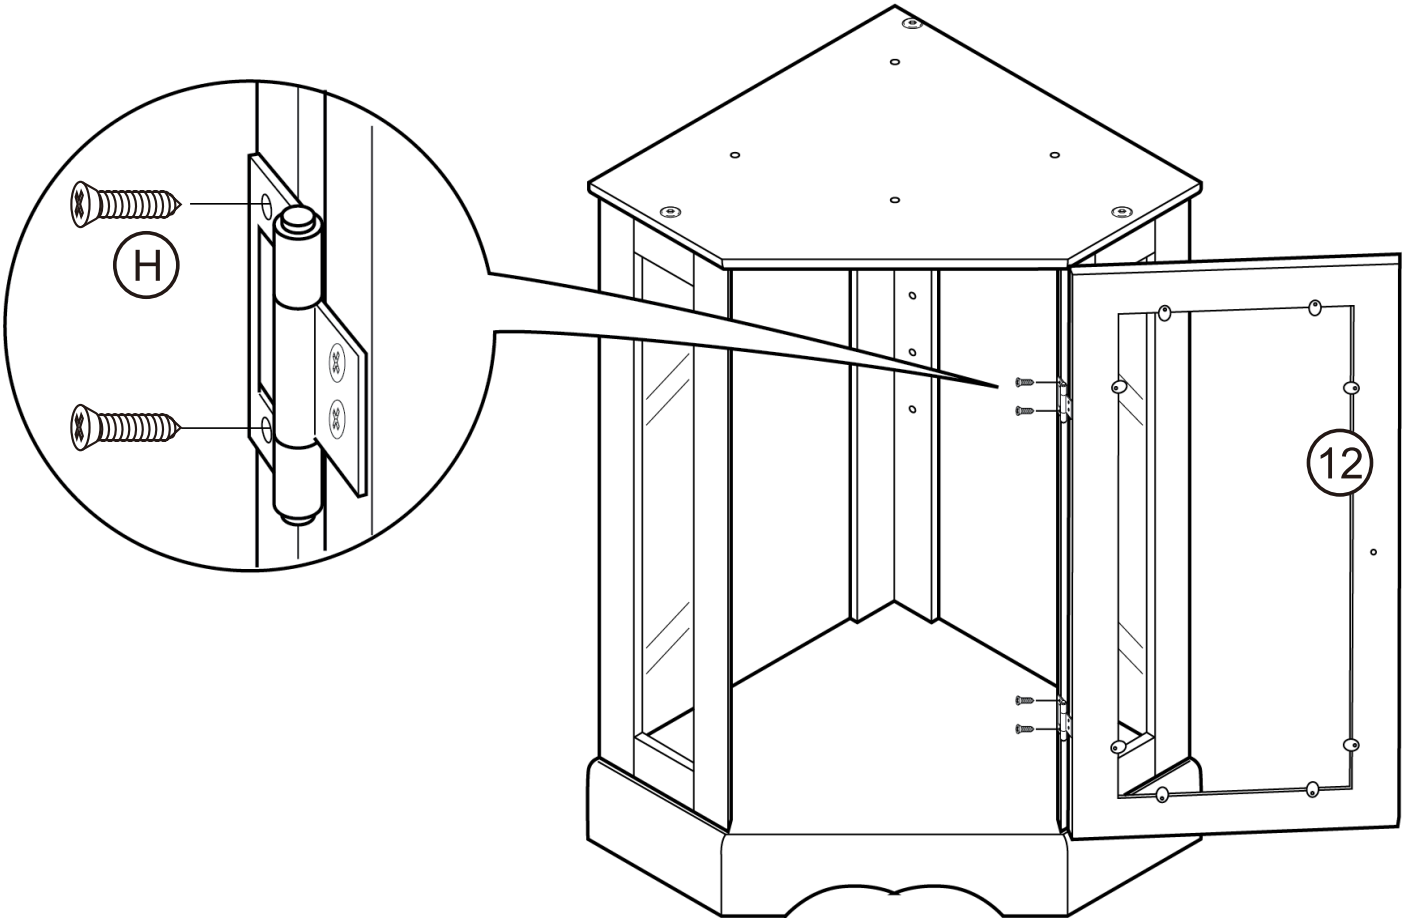

ASSEMBLY CHECK


Support the door until both hinges are secured. Check that it opens and closes freely.

STEP

21 Join the Two Cabinets

1. Insert the two SHORT dowels C into the joining holes in panel 3. With two adults, carefully lower the upper cabinet onto the lower cabinet.
2. From inside the lower cabinet, insert the two SHORT bolts D upward through panel 3. Tighten with hex key E. Keep both light cords clear of the joint.

C × 2: short dowels | D × 2: short bolts | Hex key E

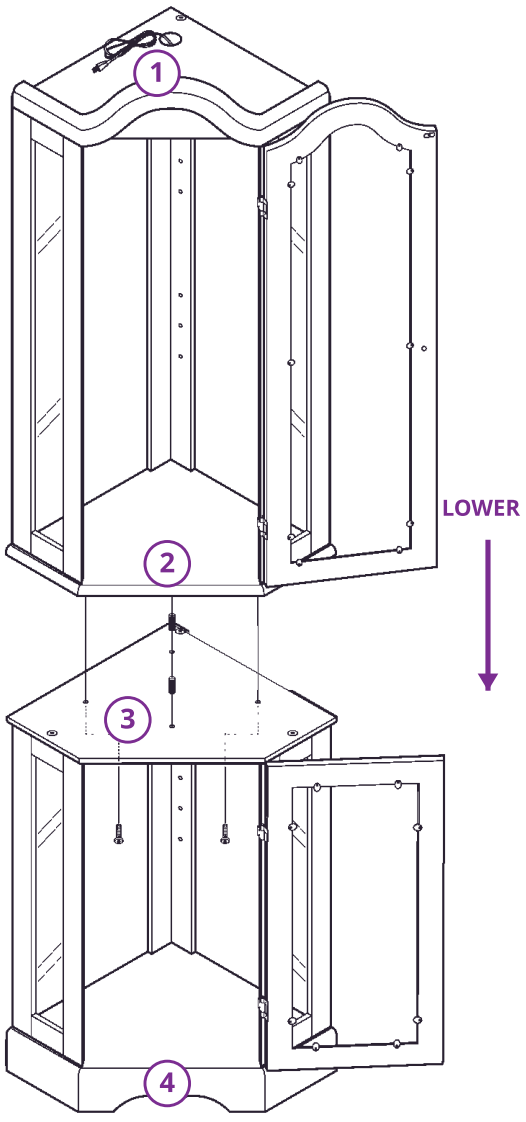


Two adults: align and lower the upper cabinet together.

C × 2

SHORT DOWEL

8 × 20 mm

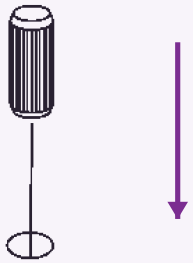


Use the two locating holes shown in the main view.

D × 2

SHORT BOLT

1/4 × 7/8 in

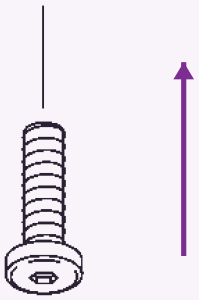

Tighten upward through panel 3.

ASSEMBLY CHECK


Use C (8 × 20 mm) and D (1/4 × 7/8 in). The longer dowels B and bolts A do not fit this connection.

STEP

22 Position the Shelf Supports

1. Insert the 15 shelf supports J into the holes shown.
2. Use five supports for each shelf, with all five at the same height. Check that every support is fully seated.

J × 15

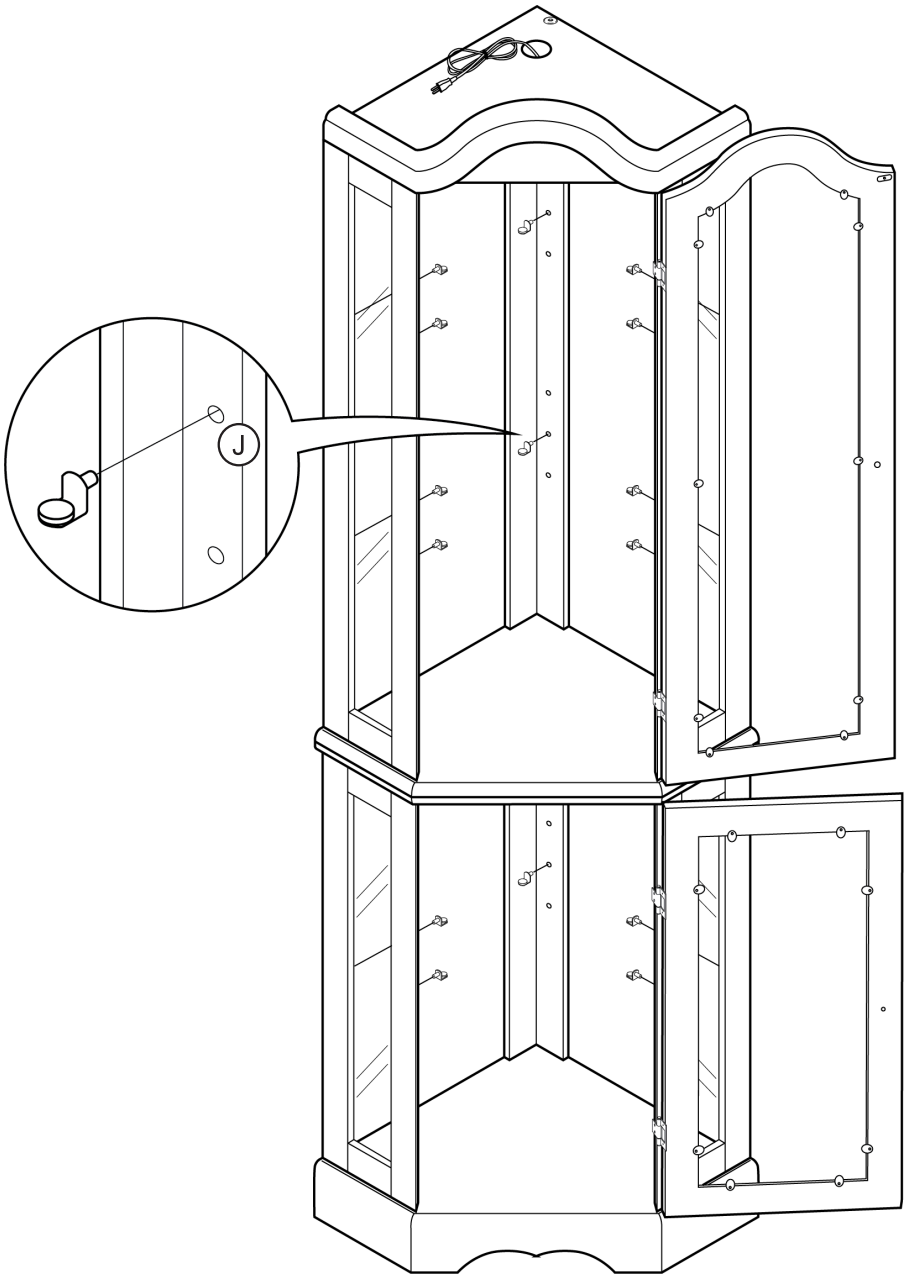

ASSEMBLY CHECK


Each glass shelf needs five fully seated supports at the same height.

STEP

23 Place the Glass Shelves

1. Carefully place each of the three glass shelves 17 onto its five supports.
2. Check that every shelf rests evenly on all five supports. Do not place items in the cabinet until it is secured to the wall.

Part 17 × 3: glass shelves

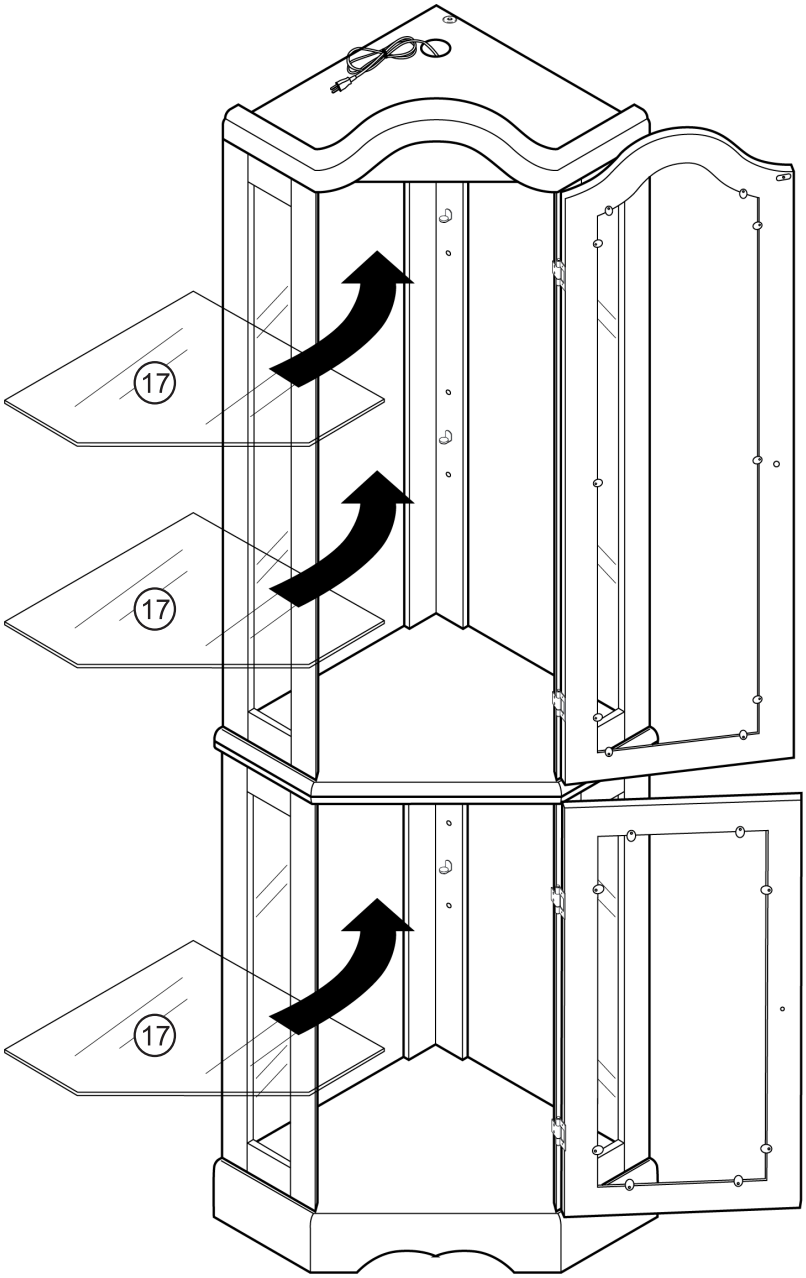

ASSEMBLY CHECK


Do not load the shelves until both anti-tip straps are secured to the wall.

STEP

24 Secure the Cabinet to the Wall

1. Use both anti-tip straps Q already attached in Step 13. Secure them to suitable structural fixing points before using the cabinet.
2. Use washers T and wall screws and anchors suitable for your wall. Use the supplied screws S and anchors R only if suitable; if unsure, ask a qualified installer.
3. Check that both straps are secure and the cabinet is stable before placing items inside.

Q: straps already fitted | T × 2 | Suitable wall fixings

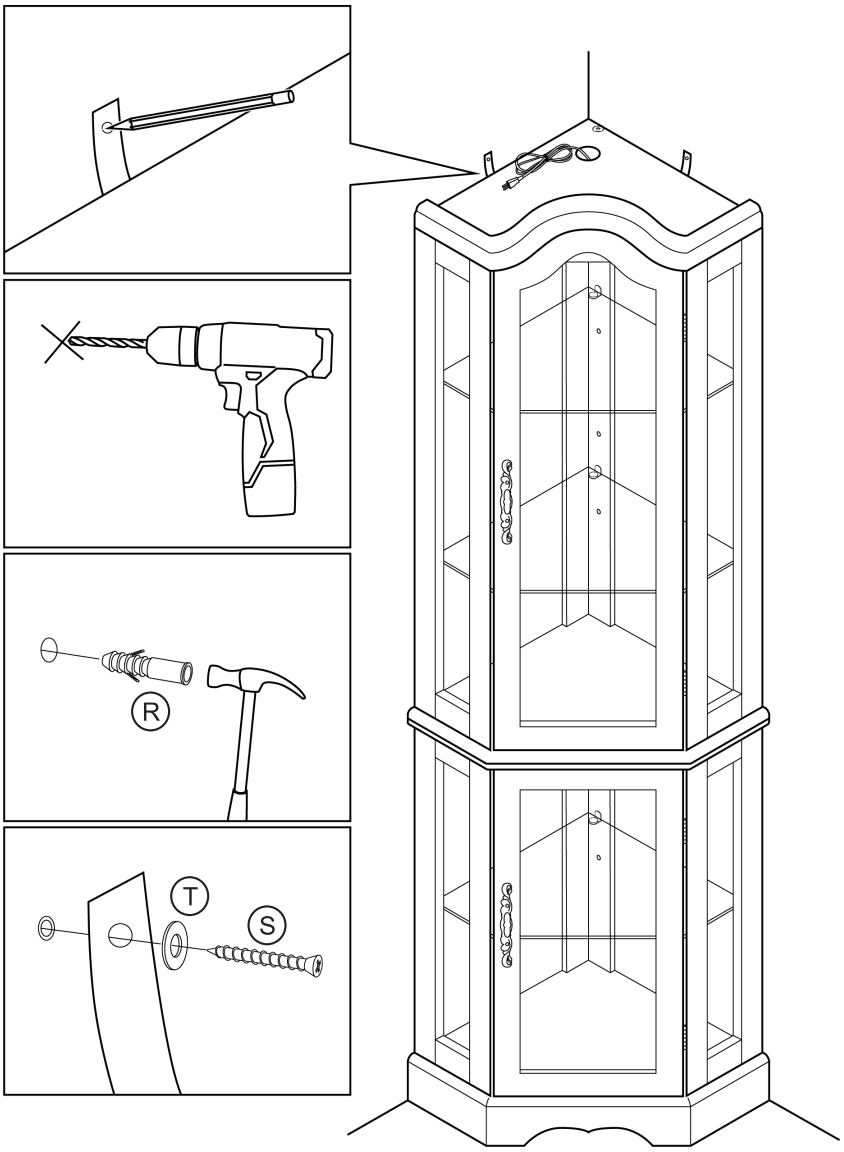

ASSEMBLY CHECK

WARNING: Furniture tip-over can cause serious or fatal crushing injuries. Secure both straps before use.

CARE & SAFETY

Care and Final Safety Checks

01 WARNING: Furniture tip-over can cause serious or fatal crushing injuries. Secure both anti-tip straps to the wall and check stability before use.

02 Do not climb, stand or sit on the cabinet. Keep children from pulling or hanging on its doors.

03 Keep items fully supported on the shelves. Stop using a shelf if its glass is cracked or chipped.

04 Unplug both lights before changing bulbs or moving the cabinet. Let bulbs cool first.

05 Keep cords away from sharp edges and joints. Use replacement bulbs that match the fixture label.

06 Need help? Contact loojanehome@163.com with model CC-B0009, the part number and your order details.