
Installation Instructions for Tent

STEP 1




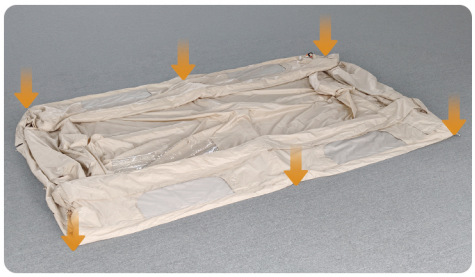

Lay out the tent and drive the ground stakes into the anchor points at the four corners of the tent base

STEP 2



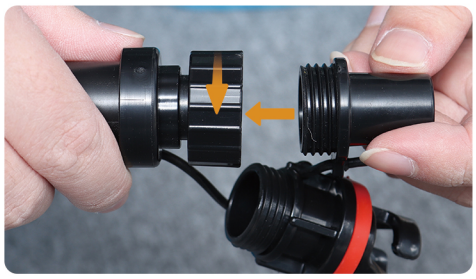

Connect the air hose to the air pump,then attach the appropriate inflation nozzle to the other end of the air hose.

STEP 3





Tighten the bottom cap of the tent's 2-in-1 inflation valve. and make sure the cap of the red pressure relief valve above is tightened.

Tips：When you need to deflate the inflatable tent, simply open the bottom cap of the tent's 2-in-1 inflation valve.

STEP 4





Attach the inflation nozzle to the tent's 2-in-1 inflation valve, then start inflating.

STEP 5





Continue inflating until the pressure gauge on the pump reads between 6 and 8 psi, or until you can hear air escaping from the pressure relief valve.

Tips：While inflating, regularly straighten the tent fabric to avoid kinking the air tubes, as this may cause localized overpressure and result in air tube rupture.


STEP 6





Remove the inflation nozzle and securely tighten the top cap of the 2-in-1 inflation valve.

STEP 7

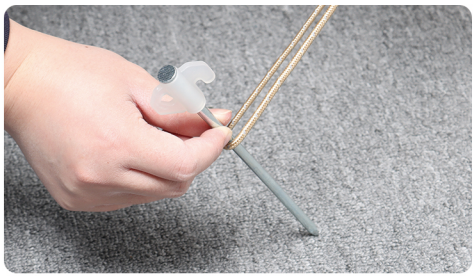



Extend the guylines on the tent and secure them to the ground with stakes.

WARNING

- Do not use open flames inside the tent to prevent fire.
- Stay away from sharp objects to avoid puncturing the tent.
- Do not set up tents in low-lying areas to avoid standing water.
- Make sure the tent is fully secured to prevent it from blowing away in windy weather.
- Check that all components are in good condition before use, including tent fabric, supports,nails, etc.
- Do not approach tall trees or isolated objects during thunderstorms to reduce the risk oflightning strikes.
- The air pressure of the air beams should be between 6 and 8 psi.
- If you use a furnace, stove, etc., ensure proper ventilation in the tent.
- Keep the tent away from open flames, cigarettes, and other flammable materials.
- Follow local rules and camp legally- respect and abide by local laws and regulations.
- The chimney opening on the top is not pre-cut. If necessary, please cut it yourself with a utility knife.
- Do not unscrew the red pressure relief valve while the tent is in use.
- **While inflating, regularly straighten the tent fabric to avoid kinking the air tubes, as this may cause localized overpressure and result in air tube rupture.**