
Cogace

To Be the Creator of Your Kitchen

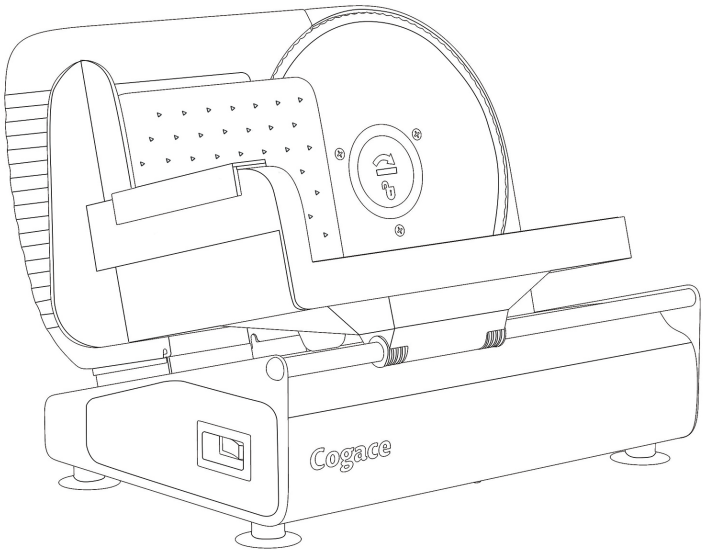

ForceBlade Slicer
Instruction Manual

Model:Q218

Manual Contents

Safety Information > 2

Instructions for Use > 2

Important Warning > 3

Power Safety Precautions > 4

Packaging Contents > 4

Blade > 5

Description of the Food Slicer > 5

Disassembly / Assembly of Components > 6

Usage > 7

Cleaning > 8

Blade Cleaning > 9

Blade Removal / Installation > 9

Storage of the Slicer > 10

Technical Specifications > 10

Recommendations > 10

After-sales Service > 10

Additional Warnings > 11

NOTE:For assembly,disassembly,operation,use,cleaning,and common FAQs,please refer to the product video on the purchase page.If you still have questions,feel free to contact our online customer service for assistance.

Safety Information

Important Safety Warnings Before Use

Please read the instructions in this manual carefully, as they contain important information regarding the safe installation, use, and maintenance of the appliance.
Keep this manual in a safe place for future reference.

●Packaging materials (such as plastic bags, polystyrene boxes, etc.) should not be placed within reach of children to avoid potential hazards.

Carefully read these instructions before use.
●Use this device only for the intended purposes described in this manual. The warnings and important safety instructions in this manual do not cover all possible situations and conditions. When installing, maintaining, and operating the appliance, it is essential to exercise common sense, caution, and care.
●**Repair Warning:** Do not attempt to repair the appliance yourself; improper handling may lead to injury.
●**Risk of Injury:** Avoid contact with all moving parts. Before changing attachments or approaching moving parts during operation, ensure the appliance is turned off and unplugged.

Instructions for Use

Ensuring Safe Operation

●**Pre-Use Inspection:** Before each use, check the mechanical integrity of the appliance and all its components. Ensure the body and all parts are free of cracks or damage. The protective cover and plug of the power cord should not show any signs of cracking or breakage.
●**If Any Abnormalities Are Found:** If any of the above issues are found, immediately unplug the unit from the outlet and take it to an authorized dealer for necessary inspection.
●**Voltage Matching:** Before inserting the power plug, ensure the grid voltage matches the voltage indicated on the nameplate.

Safety Precautions for Operation

●**Prevent Overheating:** Do not obstruct the appliance's ventilation during operation.
●**Water Protection:** Never immerse the appliance, power cord, or plug in water or any other liquid.
●**Properly Unplug the Power:** Never pull the power cord to unplug the appliance.
●**Environmental Requirements:** Do not use or store the appliance outdoors, in humid environments, or near water.
●**Placement of the Appliance:** Place the appliance on a stable, durable, and level surface (e.g., avoid placing it on easily damaged surfaces such as painted furniture or tablecloths). Do not place items such as bottle caps or cans on the appliance.

Ensuring the Safe Placement of the Appliance

●**Applicable User Groups:** This appliance may be used by children aged 8 and older, individuals with physical or intellectual disabilities, or those lacking experience or knowledge, as long as they are supervised or have received guidance on safe usage and fully understand the associated risks.
●**Child Safety:** Keep children away from the appliance and ensure they do not play with the power cord.
●**Suitable Users:** The appliance should only be operated by adults who are properly trained and have read this manual thoroughly.
●**Cleaning and Maintenance:** These tasks must be performed by adults. The appliance should not be cleaned or maintained by individuals with physical, sensory, or intellectual disabilities, or those lacking experience or knowledge.
●**Electrical Safety:** The appliance is not a toy. Keep it out of children's reach at all times, whether in use or in storage, and ensure they do not tamper with it.
●**Accessibility of Power Outlet:** Ensure the power outlet remains easily accessible while the appliance is in operation for quick disconnection if needed.
●**Avoid Flammable Materials:** Keep flammable materials, such as curtains and furniture, away from the appliance.

Post-Use Operations and Safety Precautions

●**Disconnect the Power:** After each use, unplug the appliance from the power outlet.
●**Keep Away from Water Sources:** The appliance should be kept at a safe distance from sinks and faucets.
●**Authorized Inspection and Repair:** The appliance must only be inspected or repaired by authorized dealers. Repairs performed by unauthorized personnel will void the warranty.
●**Usage Limitations:** This appliance is intended solely for its intended purpose, which is to slice food for household use. Any other use is considered improper and dangerous, and the manufacturer is not responsible for damages resulting from improper, or unreason-able use.
●**For Household Use Only:** If the appliance malfunctions, please contact an authorized service center and avoid attempting repairs on your own. Unauthorized repairs will void the warranty, even if it is still within the warranty period.

Important Warning

To reduce the risk of fire, electric shock, and personal injury, follow these basic precautions when using the appliance:
●**Power Cord Maintenance:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to ensure safety.
●**Storage and Use Environment:** Do not store or operate the appliance outdoors, and avoid using it near water sources, in damp basements, or by swimming pools.
●**Power Connection:** Do not connect the appliance to the power supply using external timers or remote control systems.


Device Installation Precautions

- **Installation Location:** Do **NOT** install the appliance in the following locations
  - ◯ Near heaters;
  - ◯ Close to flammable materials;
  - ◯ In damp, greasy, or dusty areas;
  - ◯ In direct sunlight or near water sources;
  - ◯ In places where there is a risk of gas leaks;
  - ◯ On uneven surfaces.
- **Cleaning Precautions:** lways unplug the appliance before cleaning. Do **NOT** operate the appliance continuously for more than **5 minutes** to prevent overheating. If extended use is necessary, allow a minimum rest period of 5 minutes between cycles, and continuous operation should be limited to 3 minutes.

Power Safety Precautions


- Do not place the power cord within reach of children.
- Avoid placing the power cord on the floor to prevent tripping or accidentally pulling the appliance.

Packaging Contents

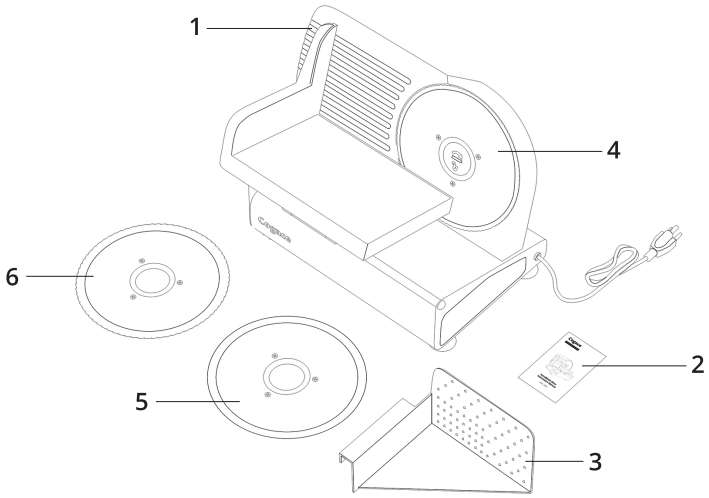


1. Appliance
2. User manual
3. Food pusher
4. Universal blade
5. Ham blade
6. Bread blade


Blade

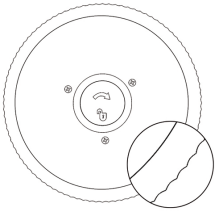

●Universal blade
The universal serrated edge is suitable for most food slicing applications.

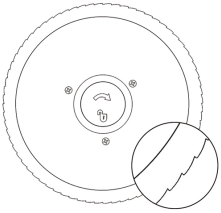


●Bread blade
The specialized serrated edge is designed specifically for slicing bread.

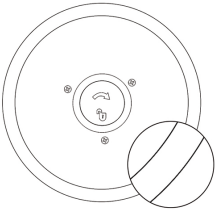

●Ham blade
The sharp, circular edge is designed to meet the need for thin slicing of food.

Description of the Food Slicer

A

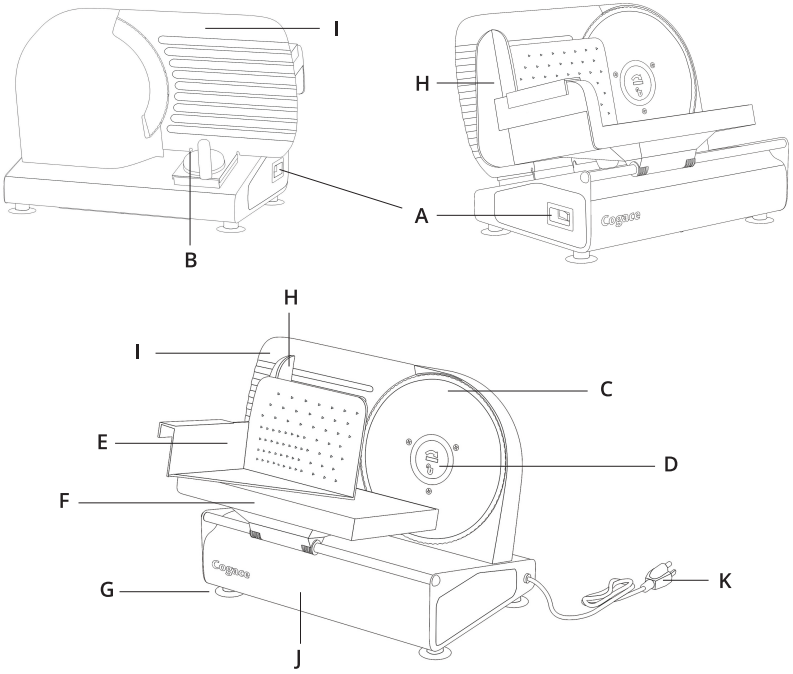


A. Switching on/off button
B. Cut thickness adjustment knob
C. Blade
D. Engagement/release blade washer
E. Food pusher
F. Sliding carriage
G. Feet
H. Finger guard
I. Food shield
J. Motor body
K. Power Plug

Disassembly / Assembly of Components

The blade is very sharp; handle it with care.
Before installing or removing the blade from the device, ensure the appliance is unplugged from the outlet.


B

- Place the slicer on the work surface.
- Ensure that all feet (G) are correctly resting on the work surface.
- Ensure the work surface is level and stable.

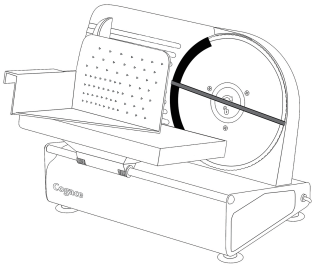


C

- 1.Before use, turn the knob to the maximum setting of 15mm to create enough space between the original blade (C) and the food shield (I).
2.Remove the rubber protective pad, secured with a rubber band, from the original blade (C). Failure to do so may prevent the machine from functioning properly.

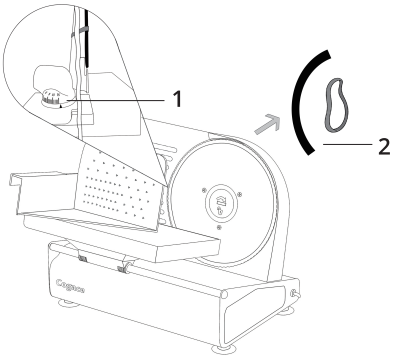


D

- Ensure the sliding carriage is in the correct position before operation.

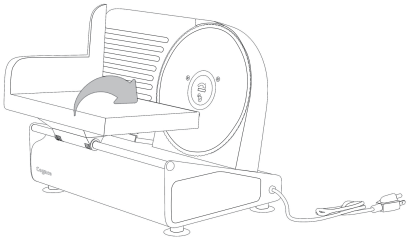

E

- Position the food pusher (E) on top of the sliding carriage (F).
- The slicer is now ready for use.

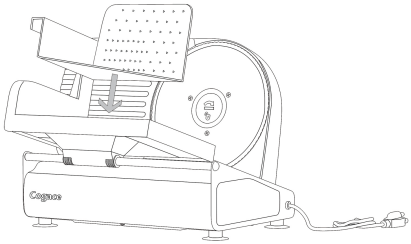


Usage

The included blade can be used to slice foods such as bread, meats, cheeses, ham, and vegetables. Do not slice frozen foods.


●Adjust the cutting thickness by turning the adjustment knob (B).
●The adjustable cutting thickness ranges from 0 to 15 millimeters.
●Plug the power cord into the outlet, ensuring that the voltage matches the specifications indicated on the device's rating label.

F

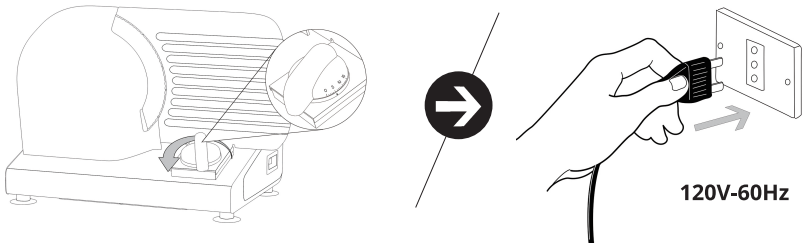

●Pull the carriage platform backward as far as it can slide. Place the food to be sliced on the stainless steel cover of the sliding carriage (F). Next, place the food pusher (E) onto the sliding carriage (F) and adjust it until it holds the food firmly in place.

G

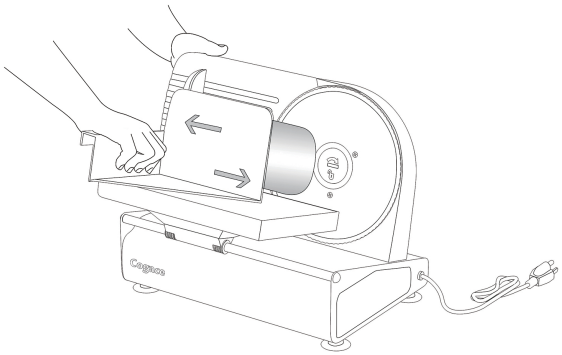


●To start the blade (C) rotation, press the Switching on button (A). If the indicator light on the power switch is illuminated, the slicer is in normal operating condition.
●Place a plate or dish below the blade to collect the slices.
●Grasp the food presser (E) with your right hand while keeping your thumb protected behind the thumb guard and pusher (H). Apply even pressure for best slicing results.
●Slide the carriage platform toward the blade. Move back and forth steadily with even pressure. Repeat for additional slices.
●After use, press the power off button (A). When the power indicator light turns off, the slicer will be powered off. Turn the slice thickness knob to 0 and allow the blade (C) to come to a complete stop. Then, unplug the appliance..

Cleaning

●**Unplug the Appliance:** Always unplug the appliance from the power outlet before cleaning.


Ⓛ

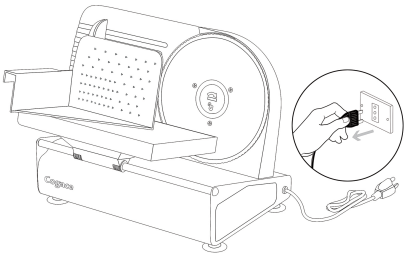

For Effective Cleaning


Ⓜ

●**Adjust the Dial:** Rotate the knob (B) to the "0" position.

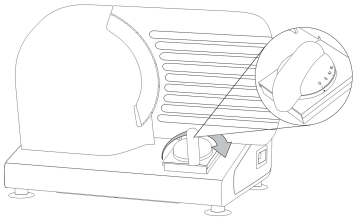

●**Remove Components:** Remove the food pusher (E) and rotate the sliding carriage (F) to the non-working position.

Ⓝ

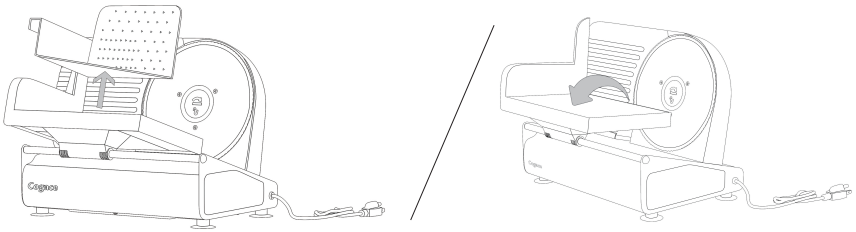

●**Clean the Appliance:** Use a damp cloth to clean the motor body (J), sliding carriage (F), and food shield (I). Avoid using abrasive cleaners to prevent damage.

Cleaning Precautions:

●The motor body (J) should never be immersed in water or any other liquids.

●Do not wash the moving blade, as it is very sharp. Exercise caution while handling it. Make sure all parts are completely dried before reassembly.

- ○ The removable parts, such as the food pusher (E), can be washed with water and regular dish soap. After cleaning, they must be thoroughly rinsed and completely dried before reassembly.
- ○ Clean the area behind the blade (C) with a damp cloth.

●Do not use abrasive cleaners or scouring pads for cleaning.

●Avoid using metal or sharp objects to remove food residues from the blade.


Blade Cleaning

No need to disassemble the blade (C) during cleaning:

- Rotate the knob (B) to "0" (see illustration "M").
- Remove the food pusher (E) and rotate the sliding carriage (F) to the non-working position.
- Dampen a cloth with alcohol or cooking oil.
- Press the damp cloth against the blade surface and gently move outward from the center, as shown in the illustration.
- It is recommended to lubricate the blade with petroleum jelly before storing the slicer.

DO NOT CLEAN THE MOVING BLADE.
THE BLADE IS VERY SHARP,
SO PLEASE HANDLE IT WITH CARE.


P

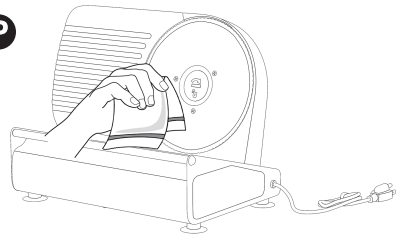

Blade Removal / Installation

- It is recommended to regularly clean the back of the blade (C) carefully.
- Ensure the appliance is unplugged from the power outlet.
- Rotate the knob (B) to the "0" position (refer to illustration “M”).
- Remove the food pusher (E) and rotate the sliding carriage (F) to the non-working position.(refer to illustration “N”).
- Use a coin to turn the blade washer (D) clockwise and remove it.
- Remove the blade (C) for cleaning.
- When reassembling, position the blade correctly and secure it by turning the blade washer (D).

Q

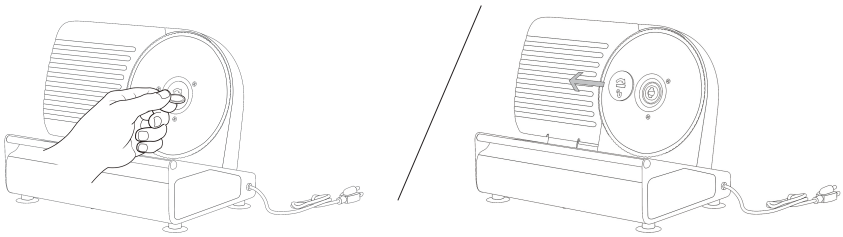

- Wear gloves to protect your hands and hold the blade securely.
- Exercise caution to avoid injury from the sharp blade! Never clean the moving blade. The blade is extremely sharp, so handle it with care.
- After cleaning, ensure that the blade (C) is reassembled correctly.
- Ensure that the blade washer (D) is properly hooked. Do not overtighten the washer.

Storage of the Slicer

●Disconnect the plug from the power outlet.
●Rotate the knob (B) to the “0” position (see illustration “M”).
●Remove the food pusher (E) and ensure the sliding carriage (F) is in the correct position before operation.
●Wrap the power cord around the designated area beneath the motor body (G)

Technical Specifications

Item No.	Blade	Voltage Rating	Power Rating	Dimension	Weight
Q218	7.5 Inch	120V 60Hz	200W	14.8*10.0*10.8Inch	9.33lbs

Recommendations

●Do not slice marinated or frozen meats.
●Do not slice meat with bones, foods with large seeds, rolled roasts without removing strings or wrappers (e.g., aluminum foil) or hard inedible food parts.
●Allow cooked meats (such as roast beef) to cool for 15 to 20 minutes and remove any strings before slicing.
●If the blade is cutting unevenly, have it sharpened by a professional.
●A protective layer of food-grade oil is applied to all blades before leaving the factory. This oil is harmless to the human body and is not an indication of blade contamination. Simply clean the blade before use to ensure proper operation.

After-sales Service

● If there are any quality issues within 30 days, we offer a replacement service.
● The product comes with a 1-year free quality guarantee.
If you have any questions, you can reach out for after-sales consultation and feedback through the purchase platform or channels.

Additional Warnings

Before connecting the device, ensure that the data on the nameplate matches the data from the power distribution network. The nameplate is located on the bottom of the device. If the outlet is incompatible with the power plug, have a qualified professional replace it with a suitable one. Also, ensure that the cross-sectional area of the power cord meets the device's power requirements. The use of adapters, multi-sockets, or extension cords is not recomo mended. If absolutely necessary, only use simple or multifunctional adapters and extension cords that comply with current safety standards, and be mindful not to exceed the load limits.
When using electrical appliances, some basic rules must be followed, especially:

- Do not touch or use the device with wet hands, wet feet, or bare feet.
- Do not pull out the plug by tugging on the power cord or the device itself.
- Children or individuals without supervision must not use the device.

In the event of a malfunction or failure, turn off the power and do not attempt to disassemble it. Repairs should be carried out exclusively by authorized dealers.

Failure to adhere to the above guidelines may jeopardize the safety of the device. If you decide to stop using this device, cut the power cord after unplugging it to prevent it from being reused. It is also recommended to dispose of potentially hazardous components, especially those that children might mistakenly treat as toys.
Installation must be carried out according to the manufacturer's instructions. Improper installation may result in damage to persons, animals, or property, for which the manufacturer cannot beheld responsible.
To avoid the risk of overheating, it is advisable to fully unwind the power cord and use the device as recommended in the "Instructions for Use." Do not keep the device connected to power for extended periods. When the device is not in use, please unplug it from the outlet.