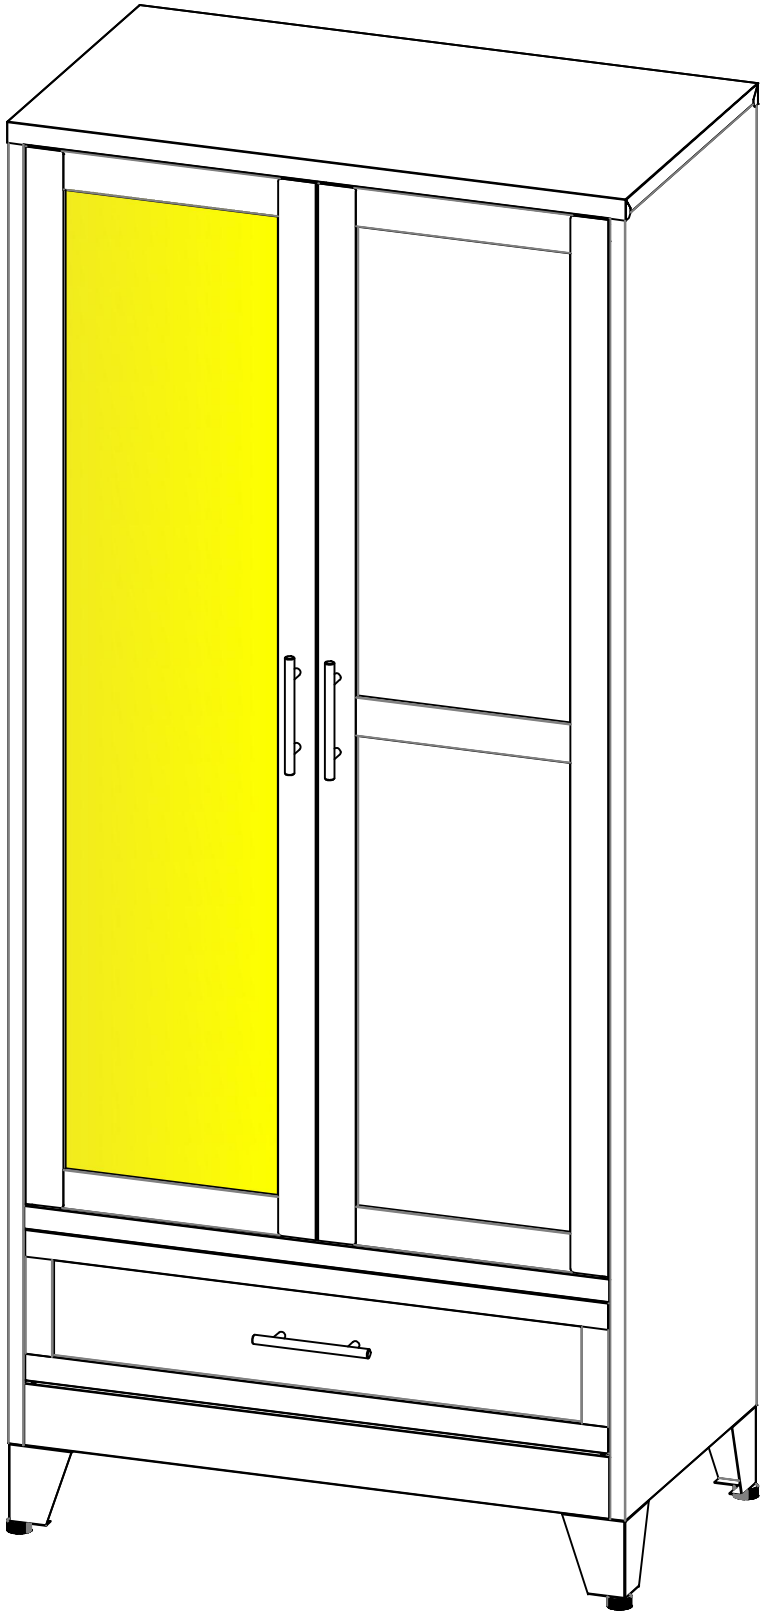
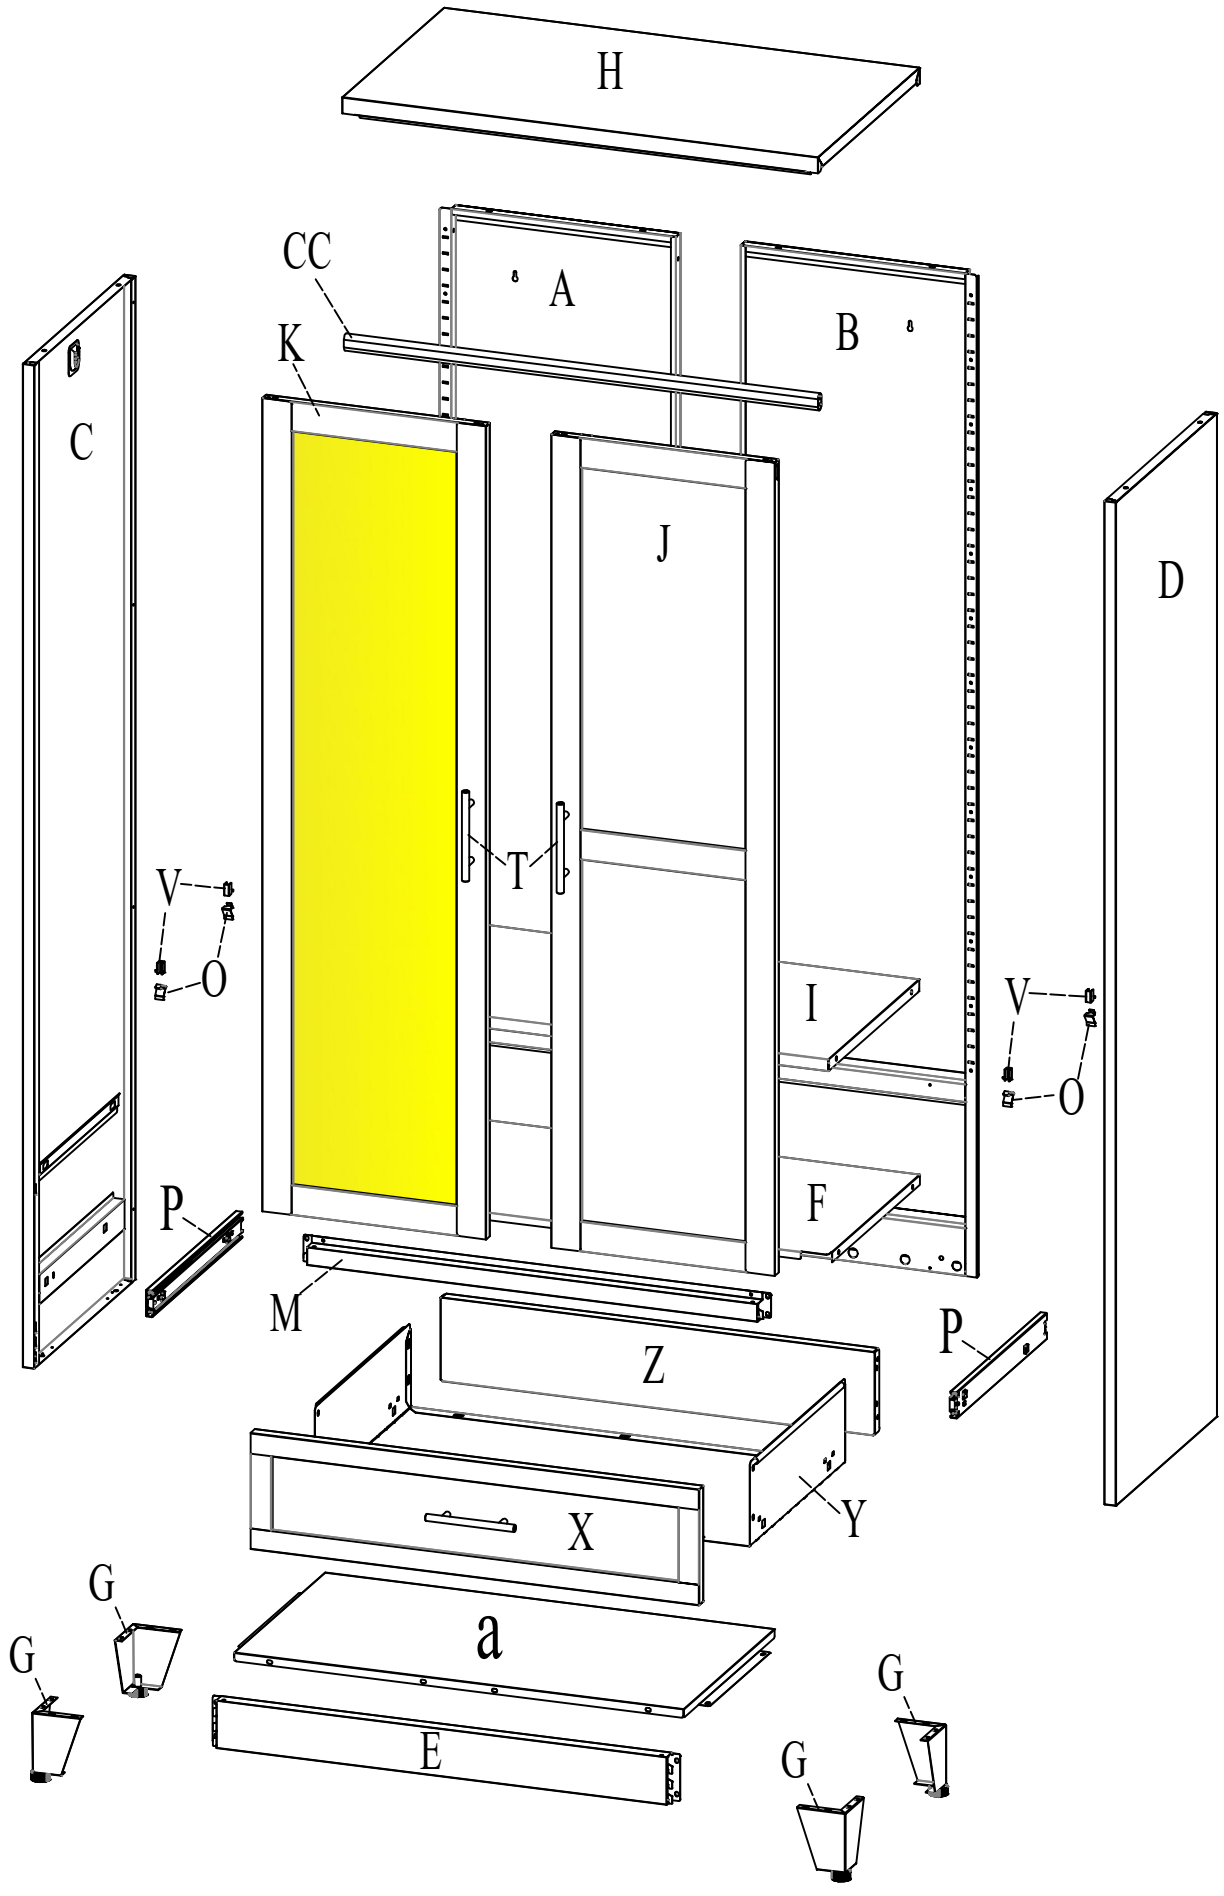


Important!













Thank you for your purchase. Please open it carefully.


If you encounter any problems, please contact us.

Service tenet - to enable customers to enjoy high-quality service.



H
CC
A
B
K
C
J
D
T
V
O
I
V
O
P
F
M
P
Z
X
Y
G
G
a
G
G
E


PARTS LIST LISTEDESPIECES LISTADEPIEZAS

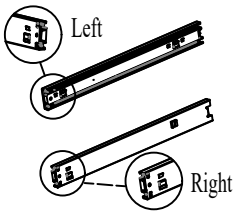Nom Nombre		Part Piece Pieza	Qty Qte	Spare	Name Nom Nombre		Part Piece Pieza	Qty Qte	Spare
A	Left Back Panel		1		P	Left and right slide		1	
B	Right Back Panel		1						
C	Left Side		1		Q	Magnet		4	
D	Right Side		1		S	Door Pivot Pin Shim\		2	2
E	Kick Plate		1		T	Haft		3	
F	Mid-waist plate		1		U	Door handles screws		4	
G	Standing leg		4		UU	Desk panel screws		2	
H	Top Panel		1		V	Laminate fastening buckle		4	2
I	Shelves		1		W	Set screw		2	
J	Right Door		1		X	Drawer panel		1	
K	Left Door		1		Y	Drawer box		1	
L	13/32"Screw		4		Z	Drawer backstop		1	
M	Middle beam		1		CC	Clothes hanger		1	
N	13/32"Screw		63	2	a	Bottom Panel		1	
O	Shelf Support		4	2					

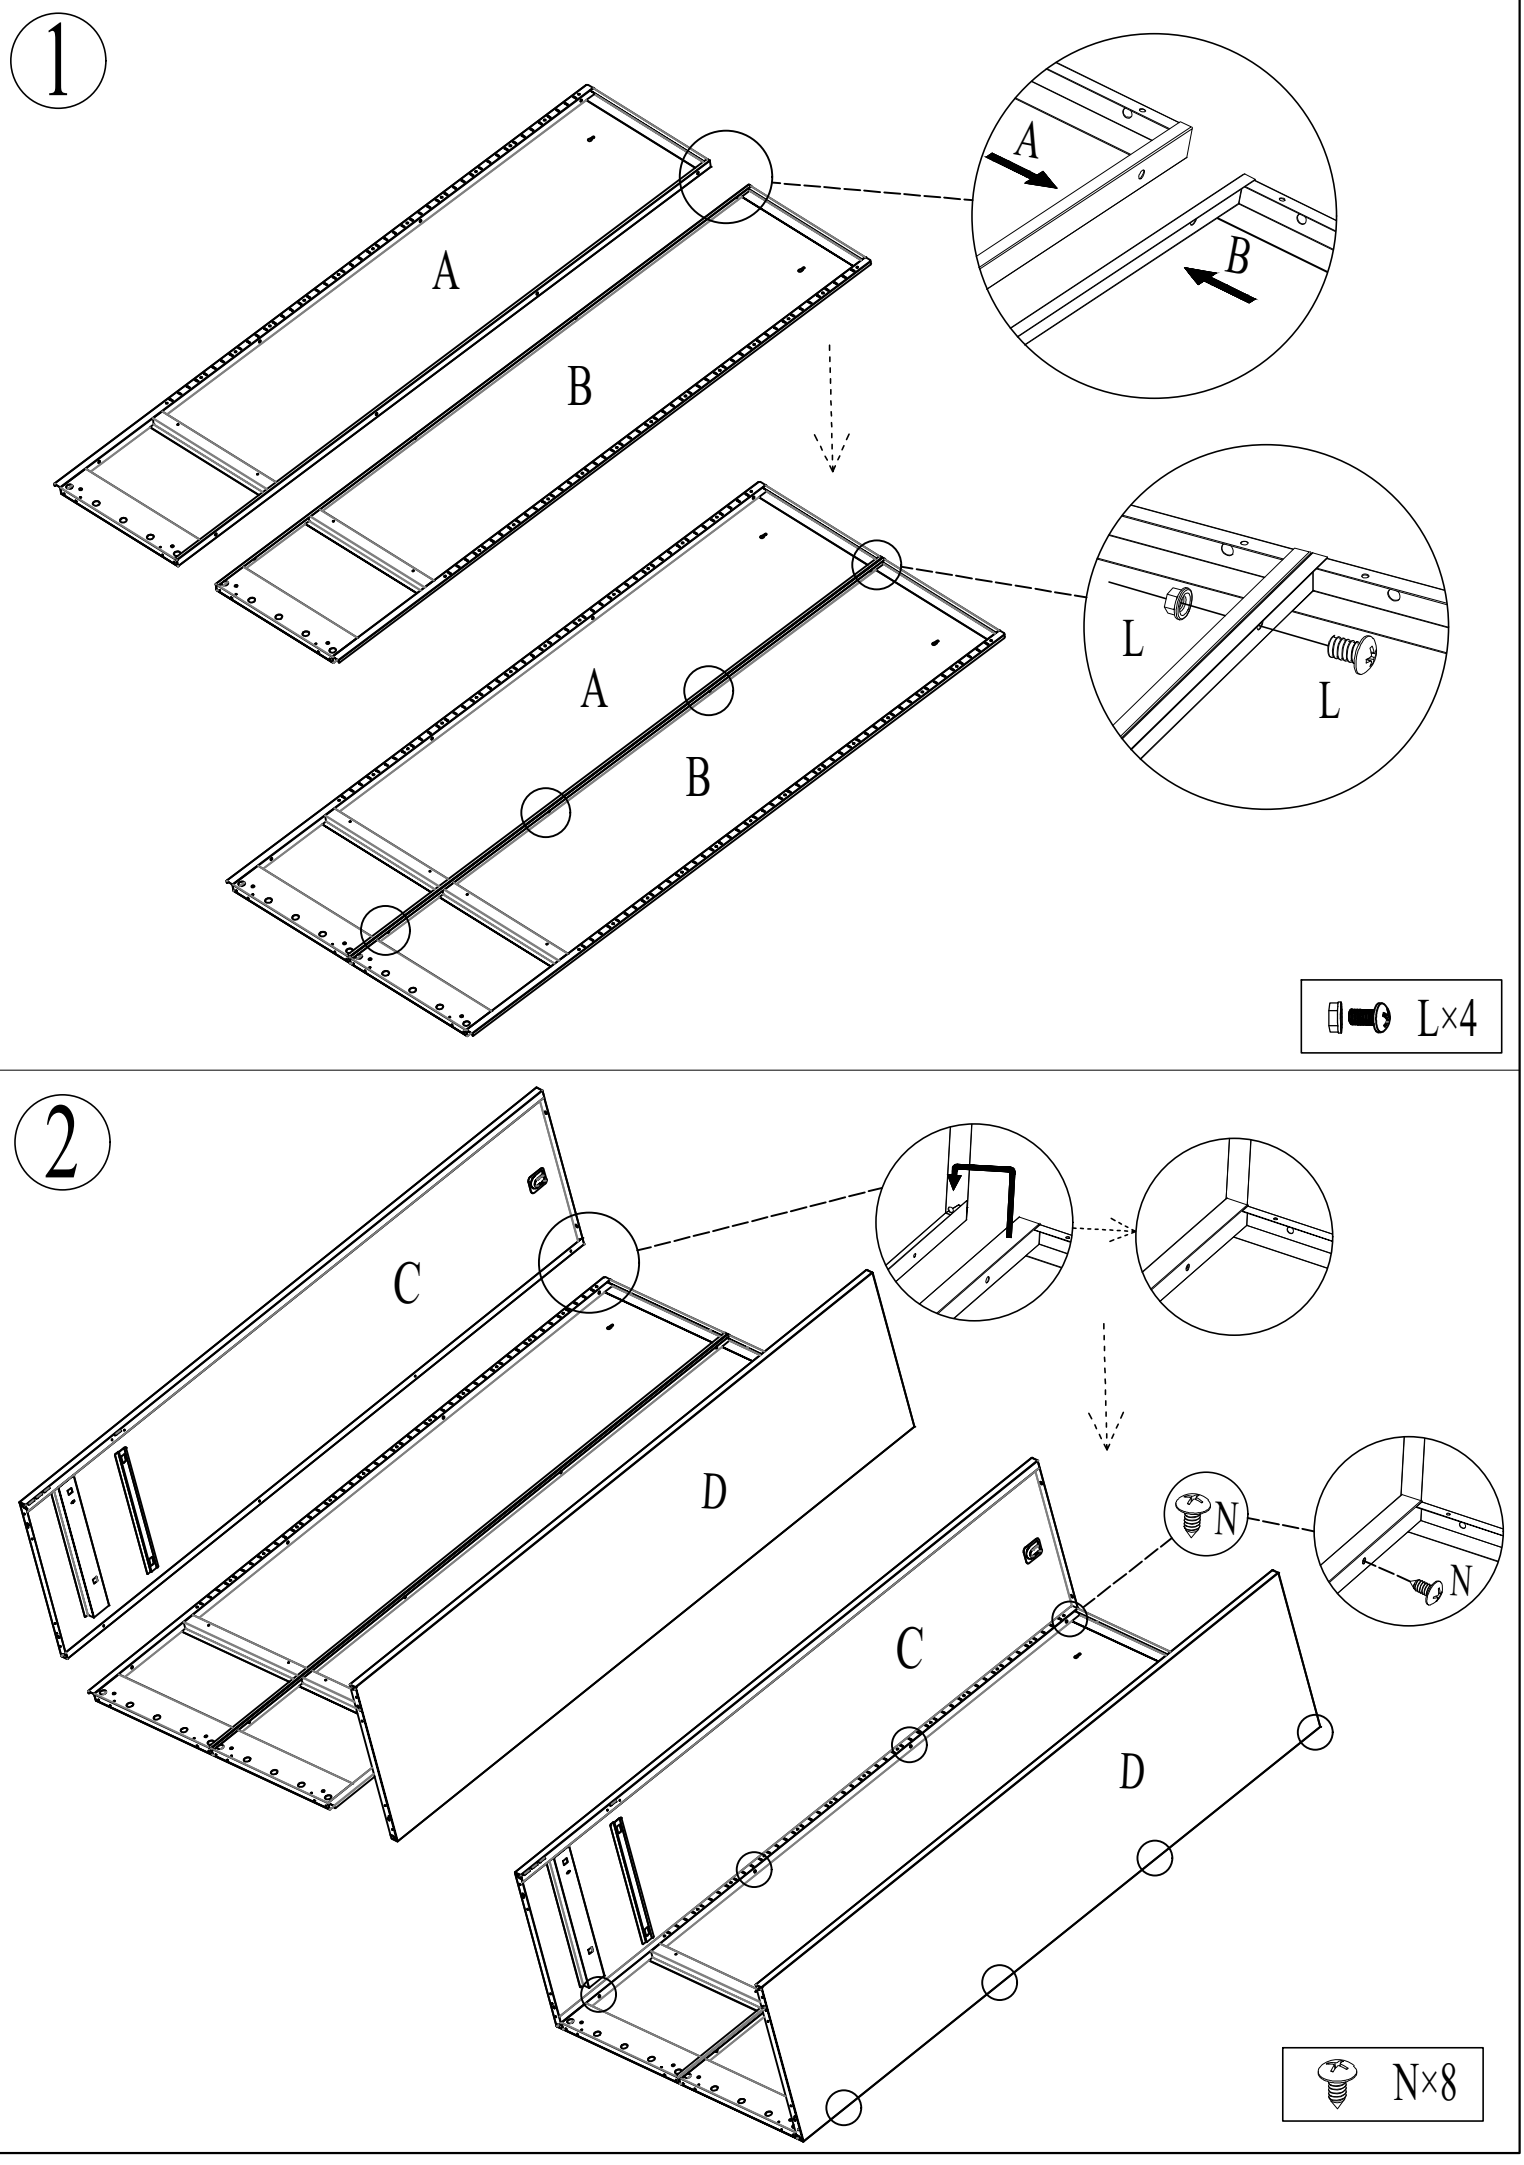

1
A
B
A
B
A
B
L
L
L×4
2
C
D
C
D
N
N
N×8

3

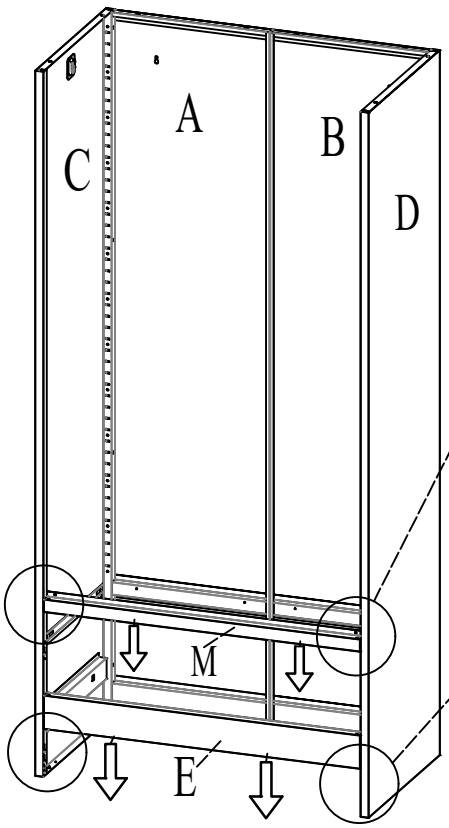

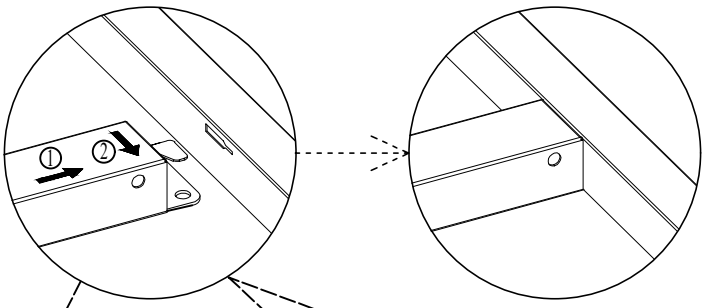



Snap the one buckles on either side of Part M into the one holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.

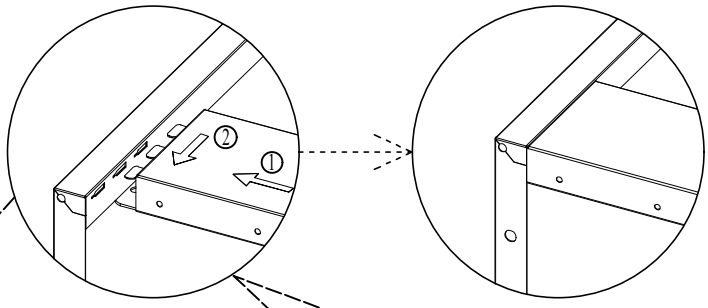


Snap the three buckles on either side of Part E into the three holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.

4

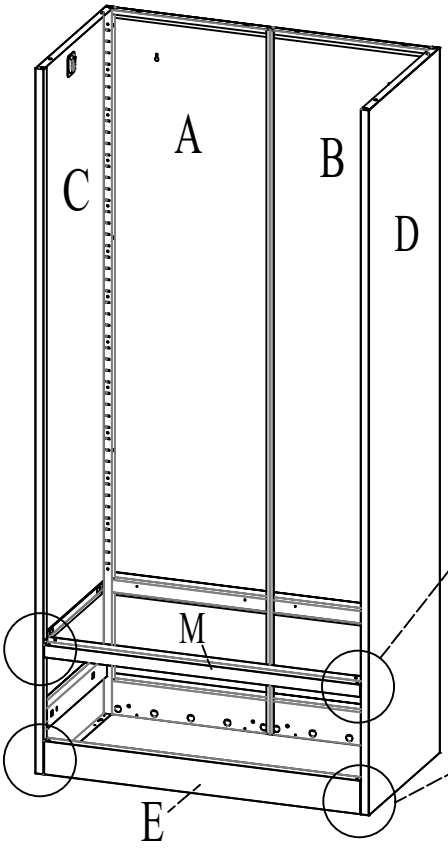


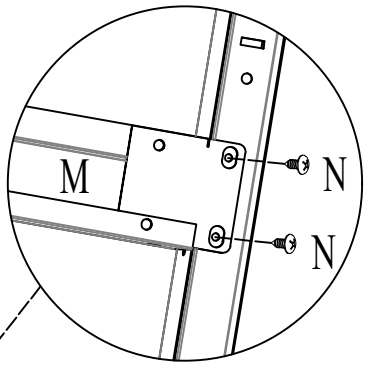

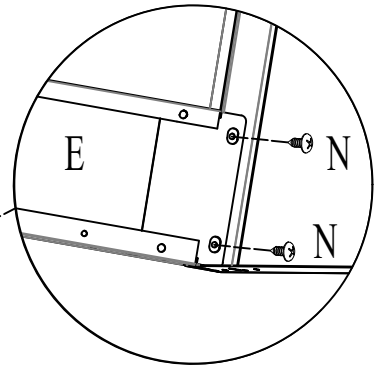


 N×8

5

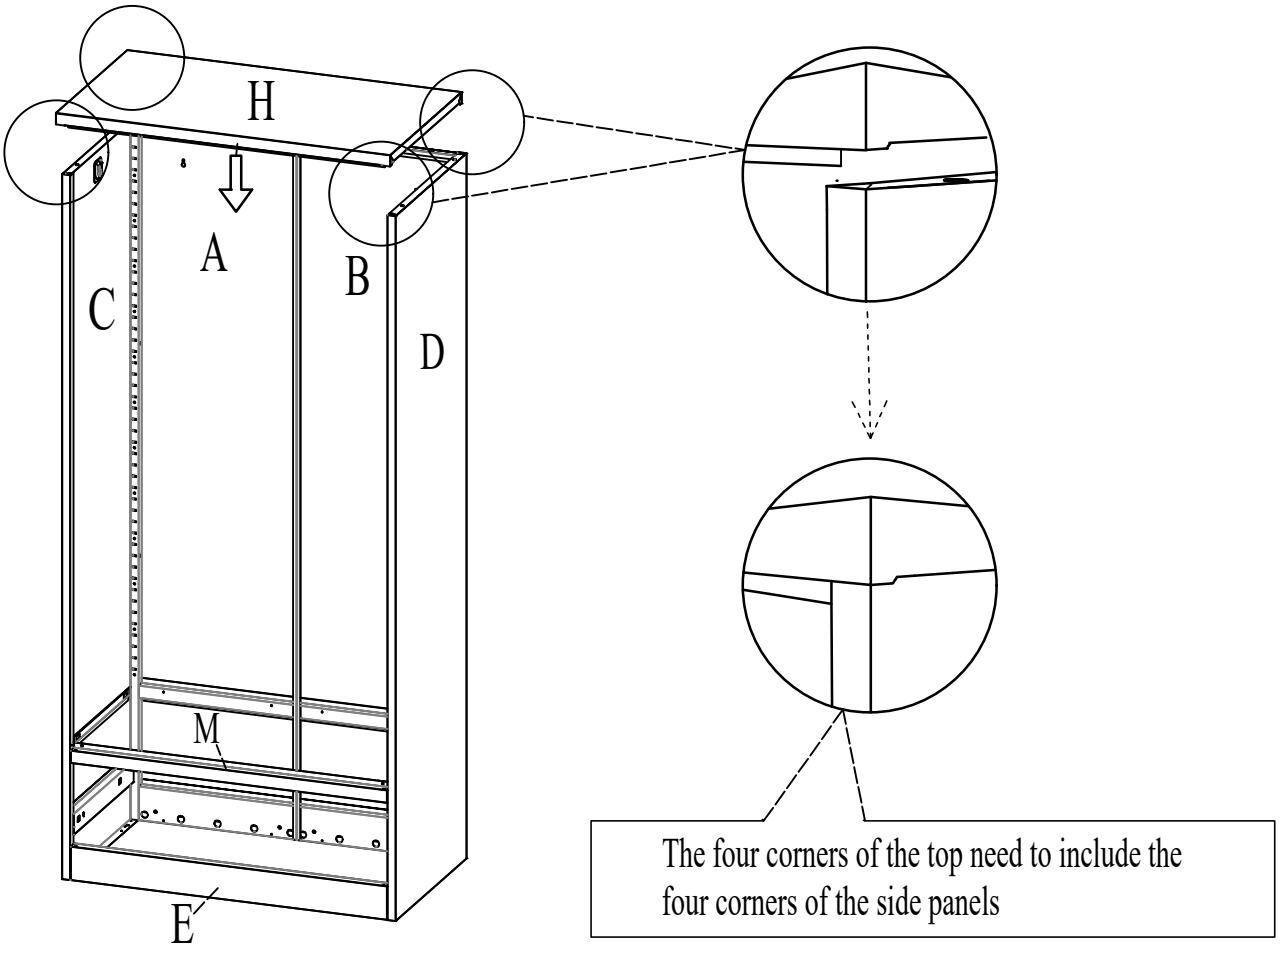

H
A
B
C
D
M
E
The four corners of the top need to include the four corners of the side panels

6

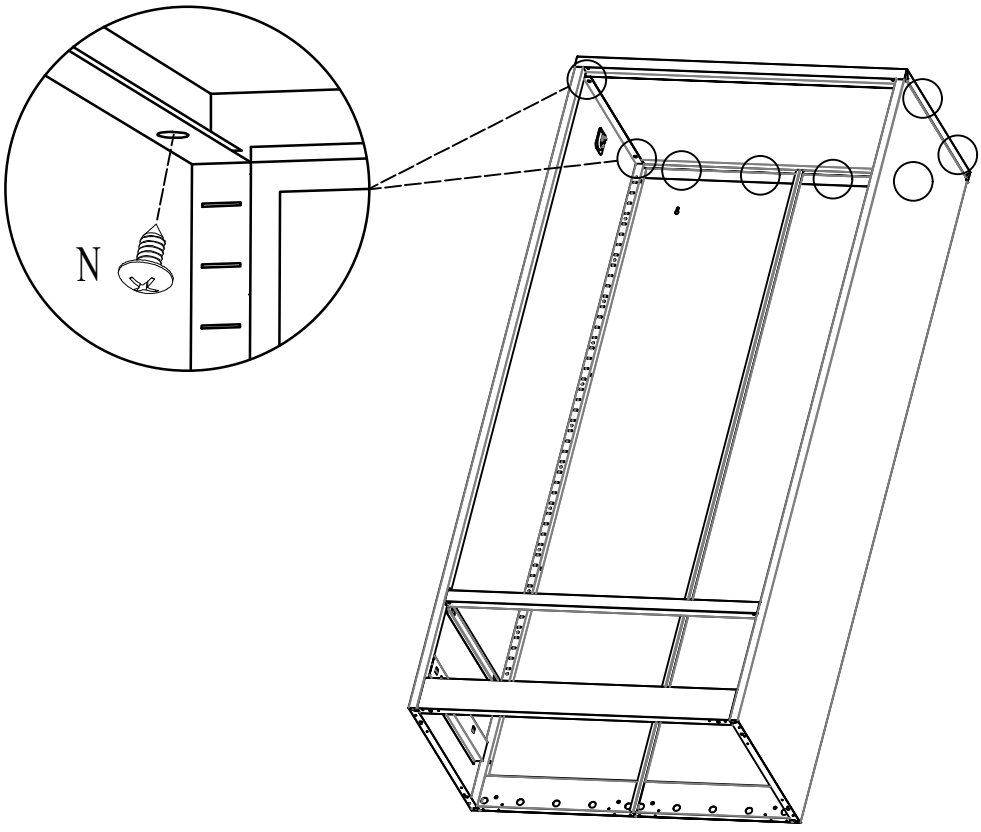

N

N×8

7

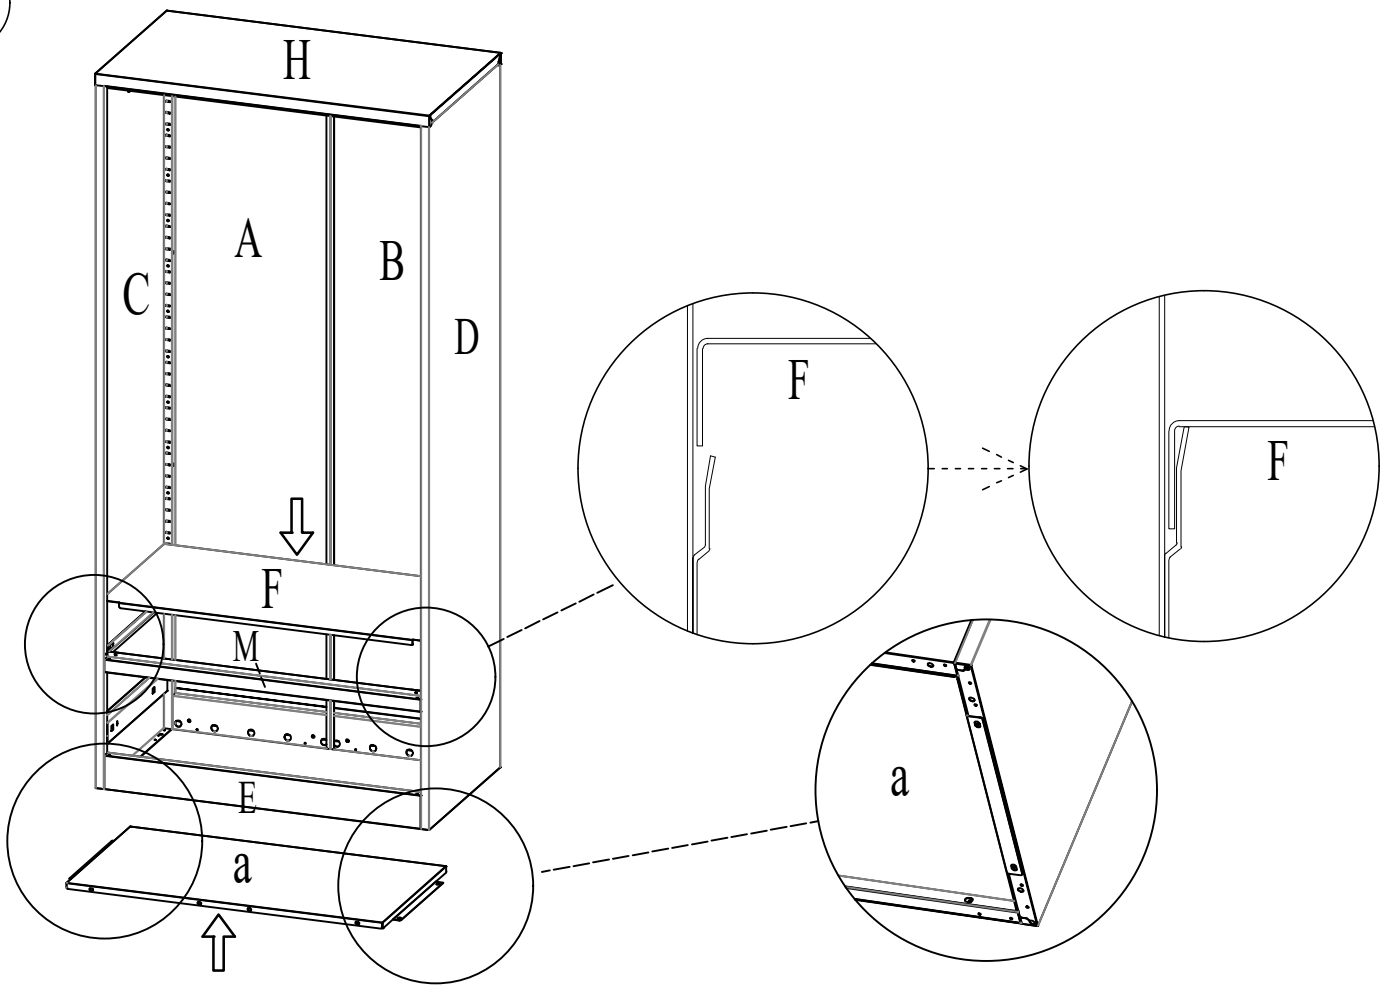


8

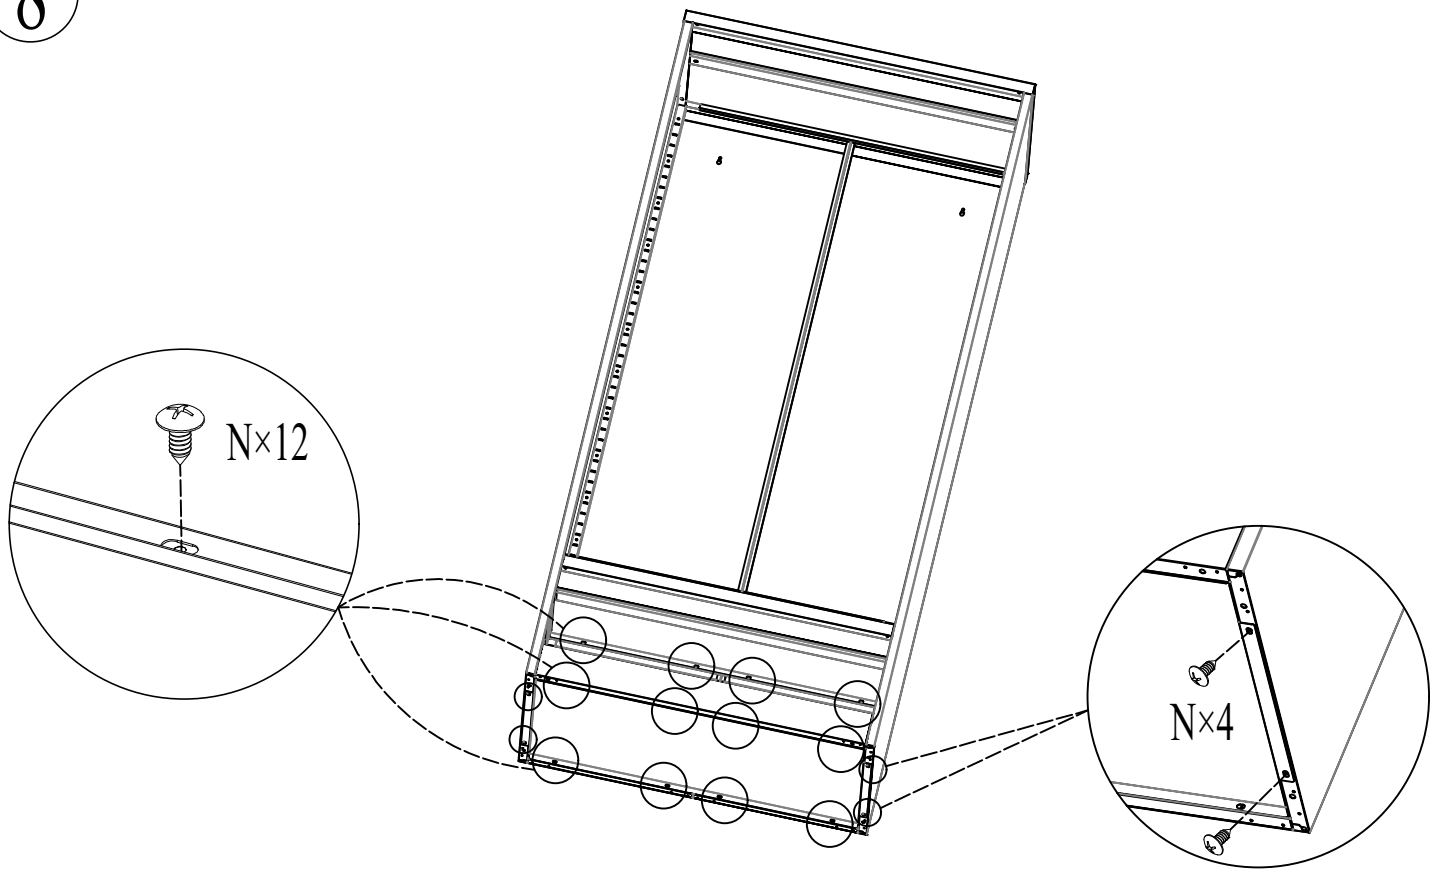

N×16


9

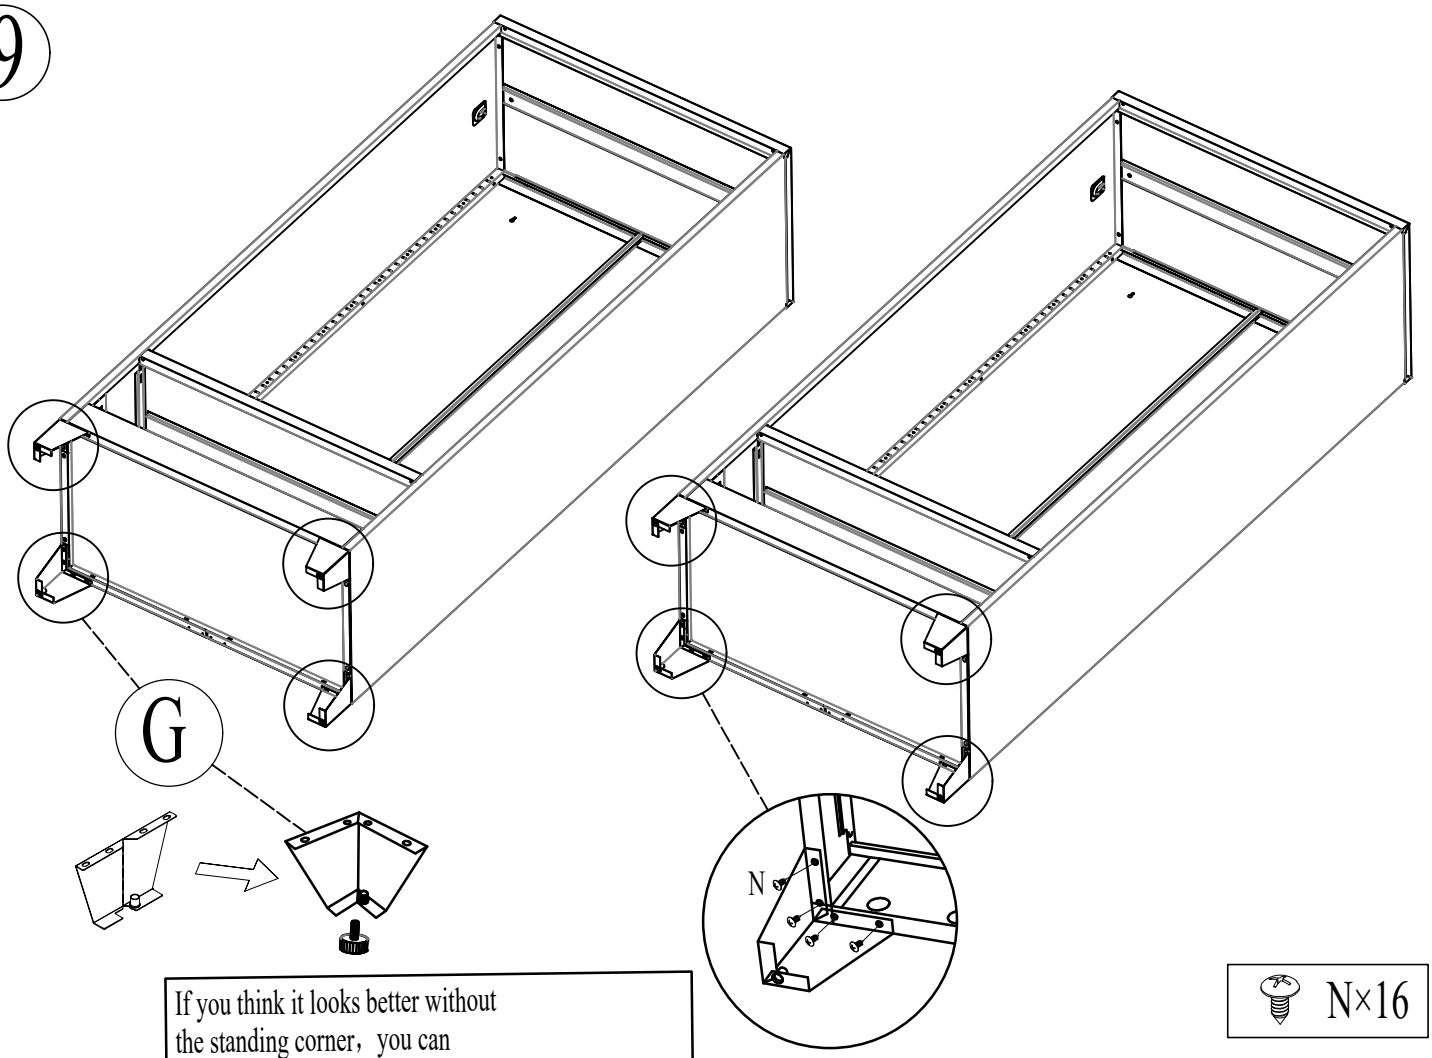


If you think it looks better without the standing corner，you can choose to skip this step (9) and the next step (10)

N×16

10

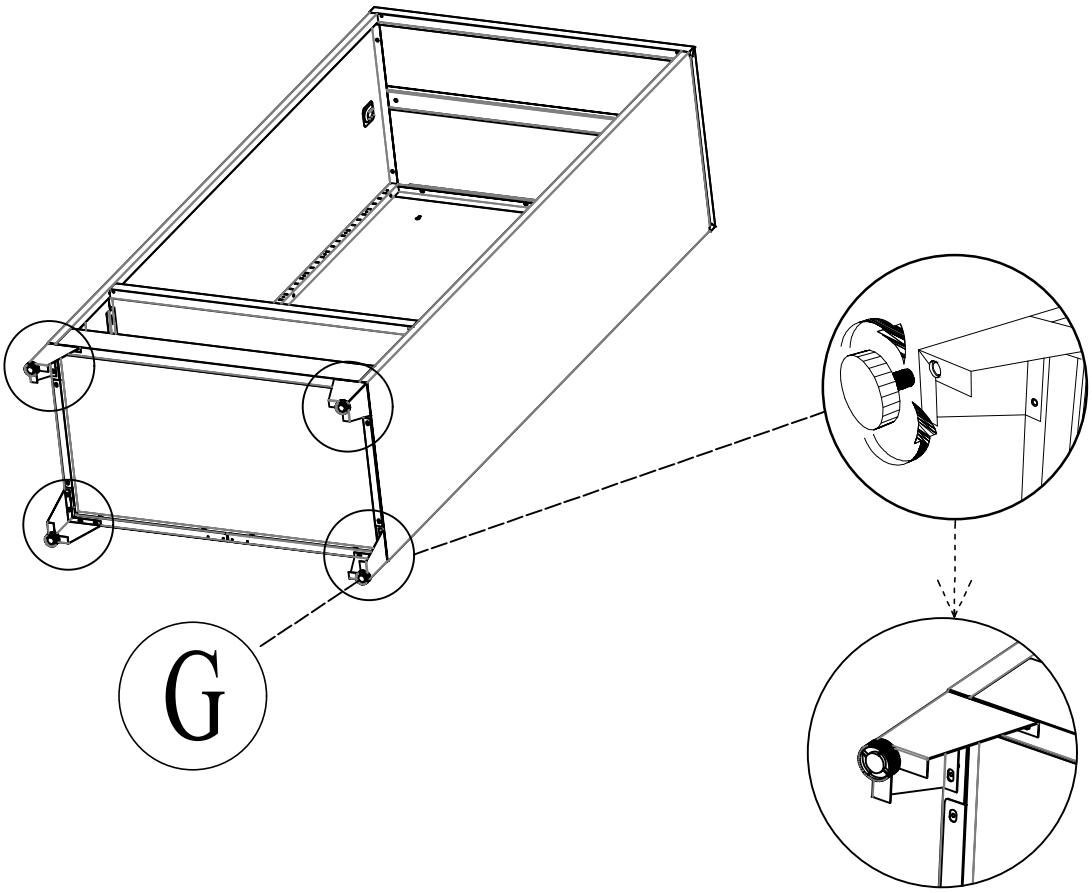


11

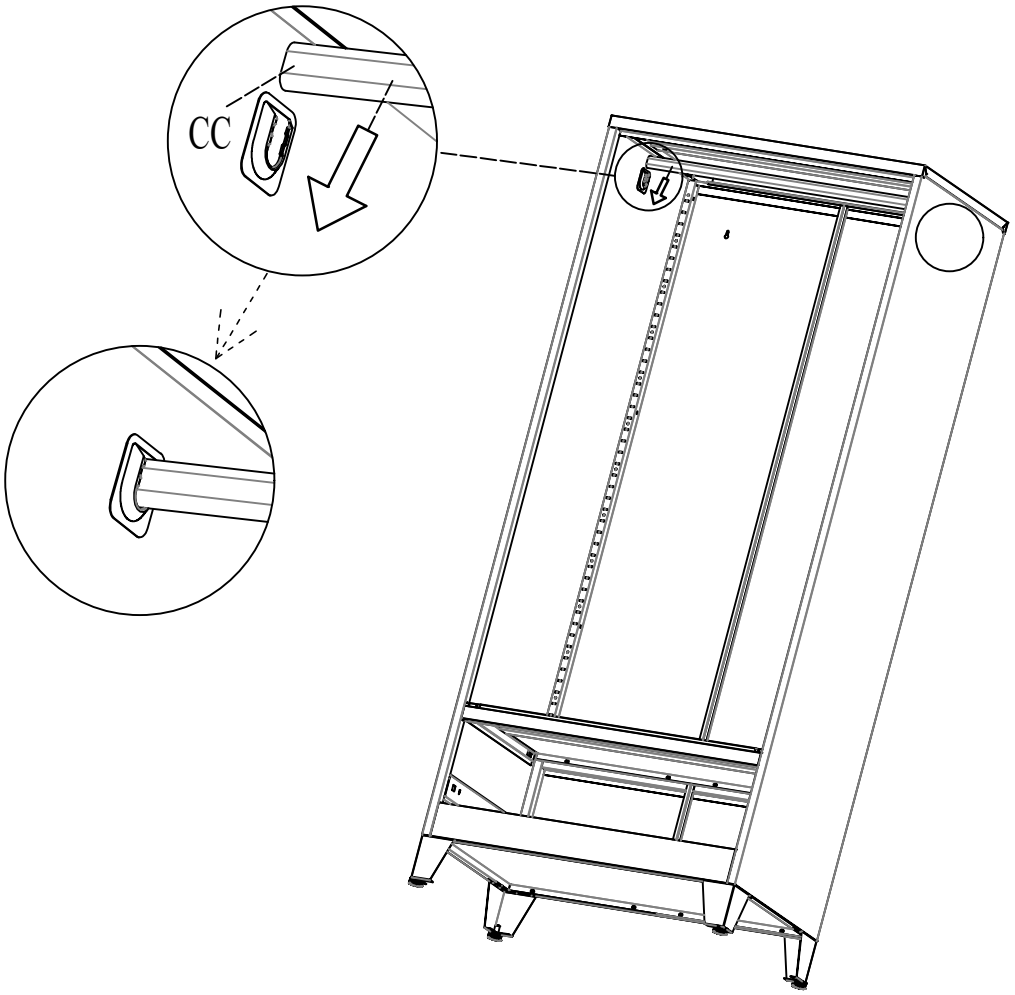


CC ×1


12

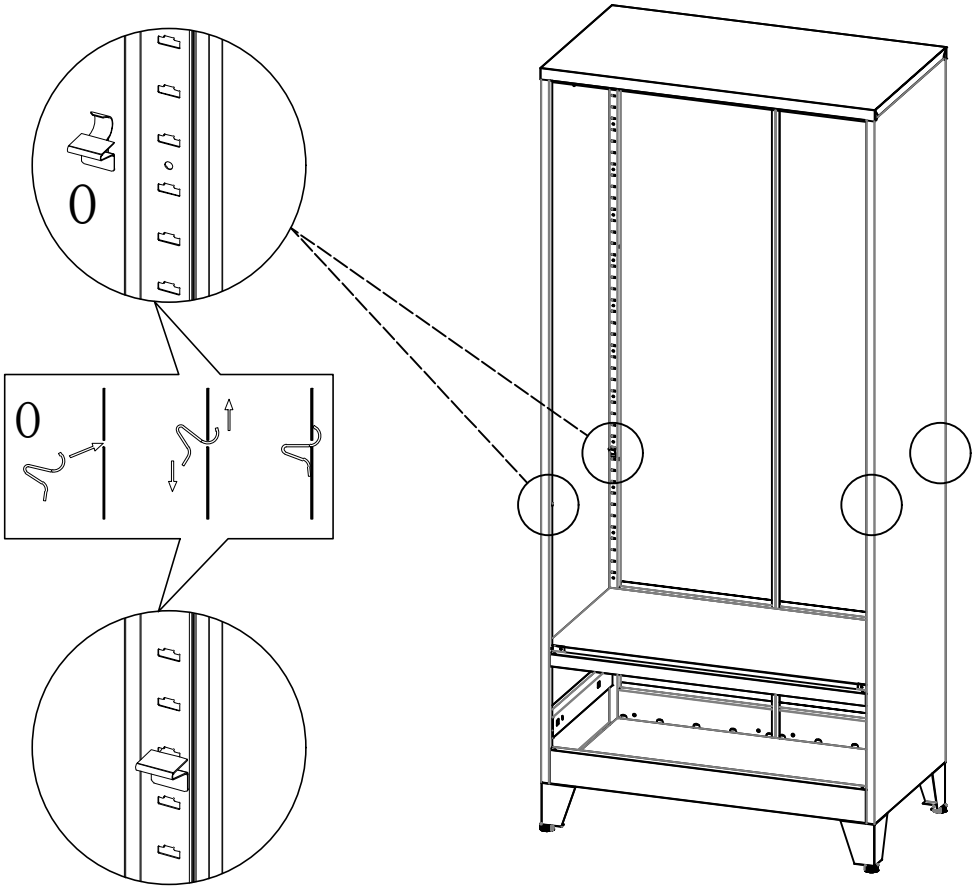


O×4

13

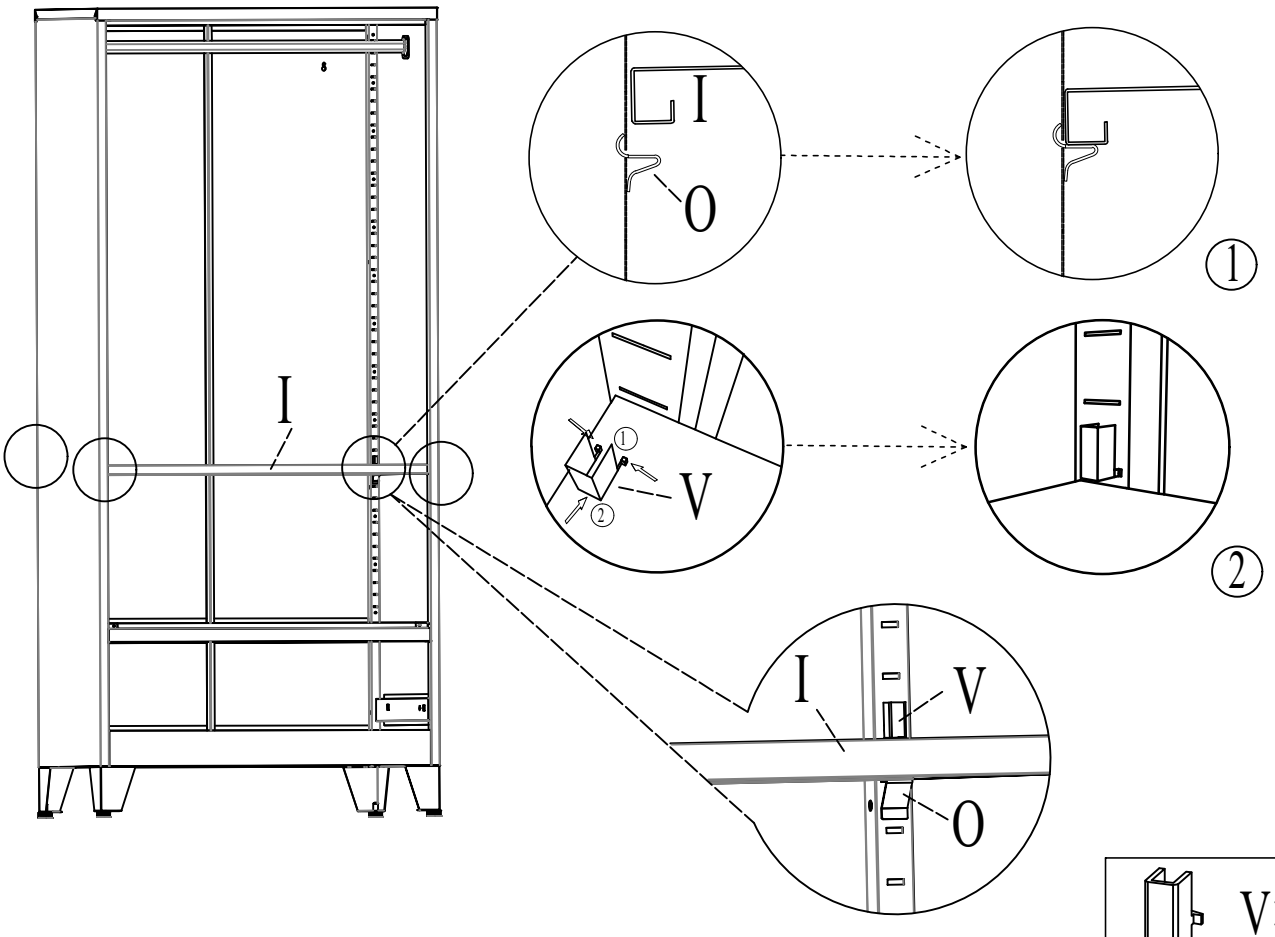





14

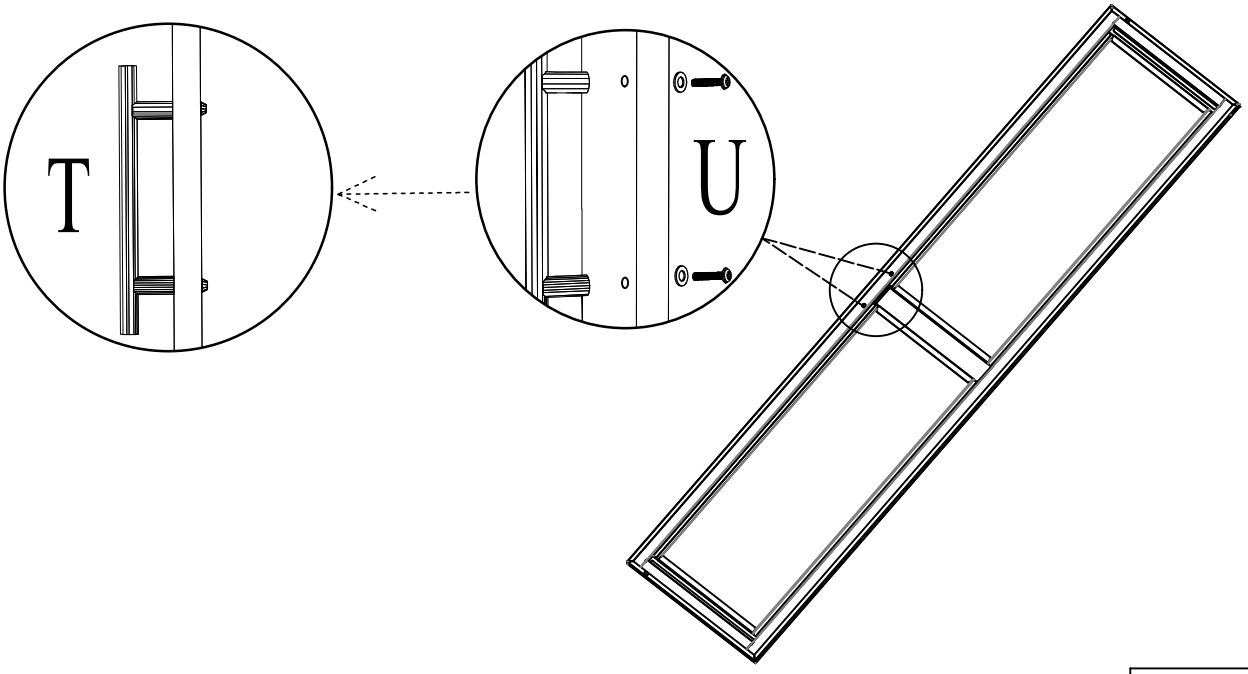


Follow this step to install other door panels

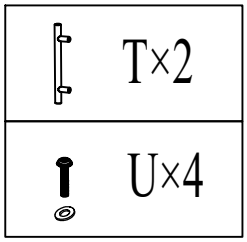


15

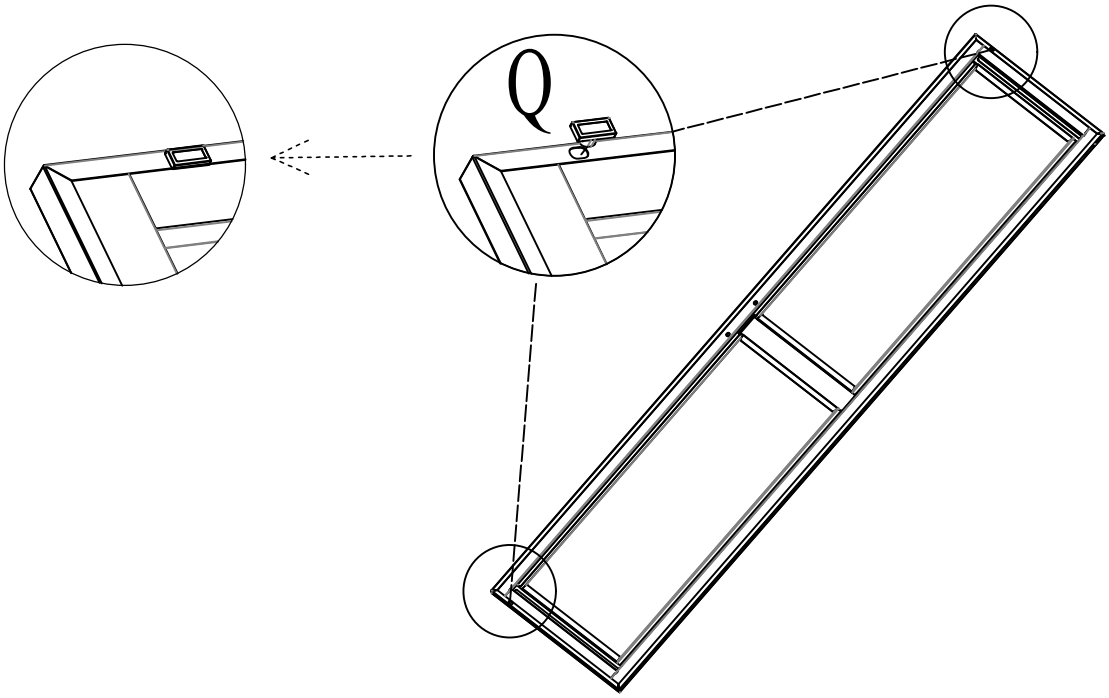

Follow this step to install other door panels



Q×4

16

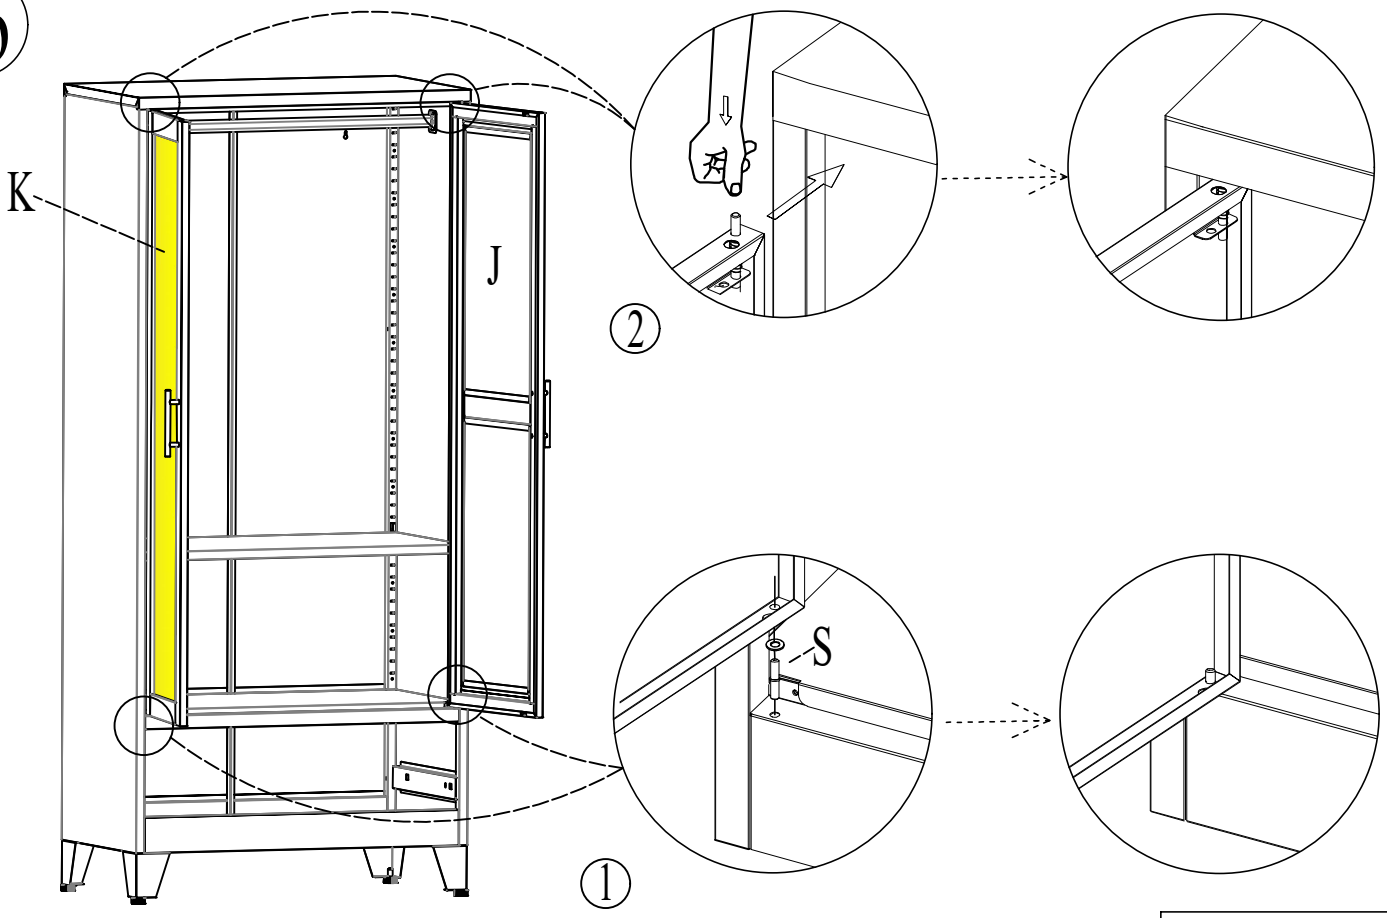



S×2


17

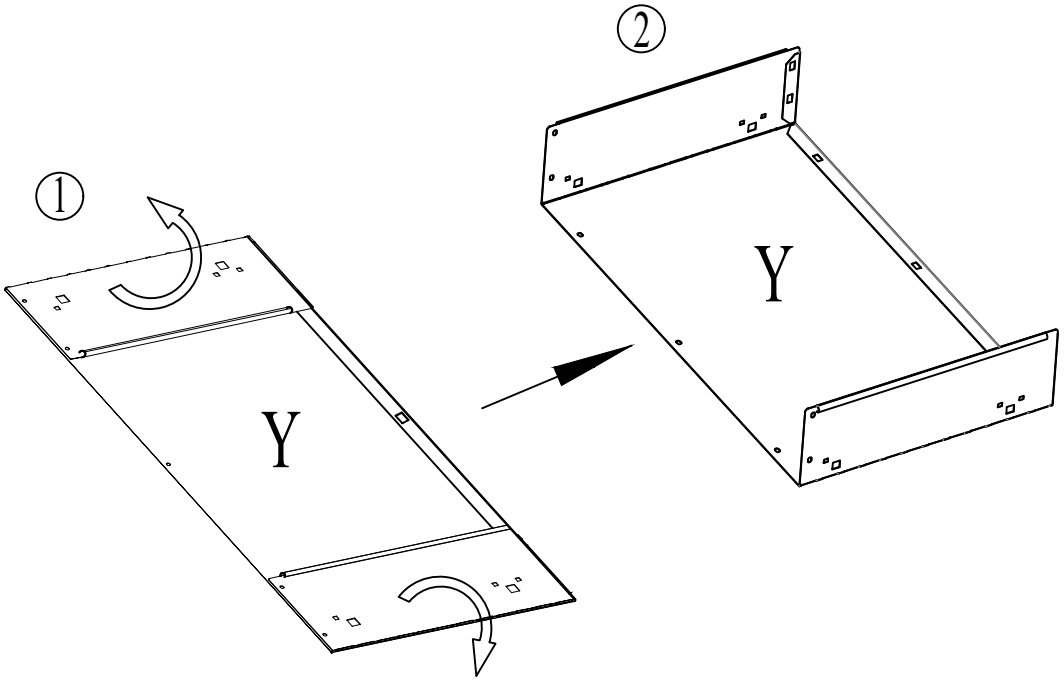

18

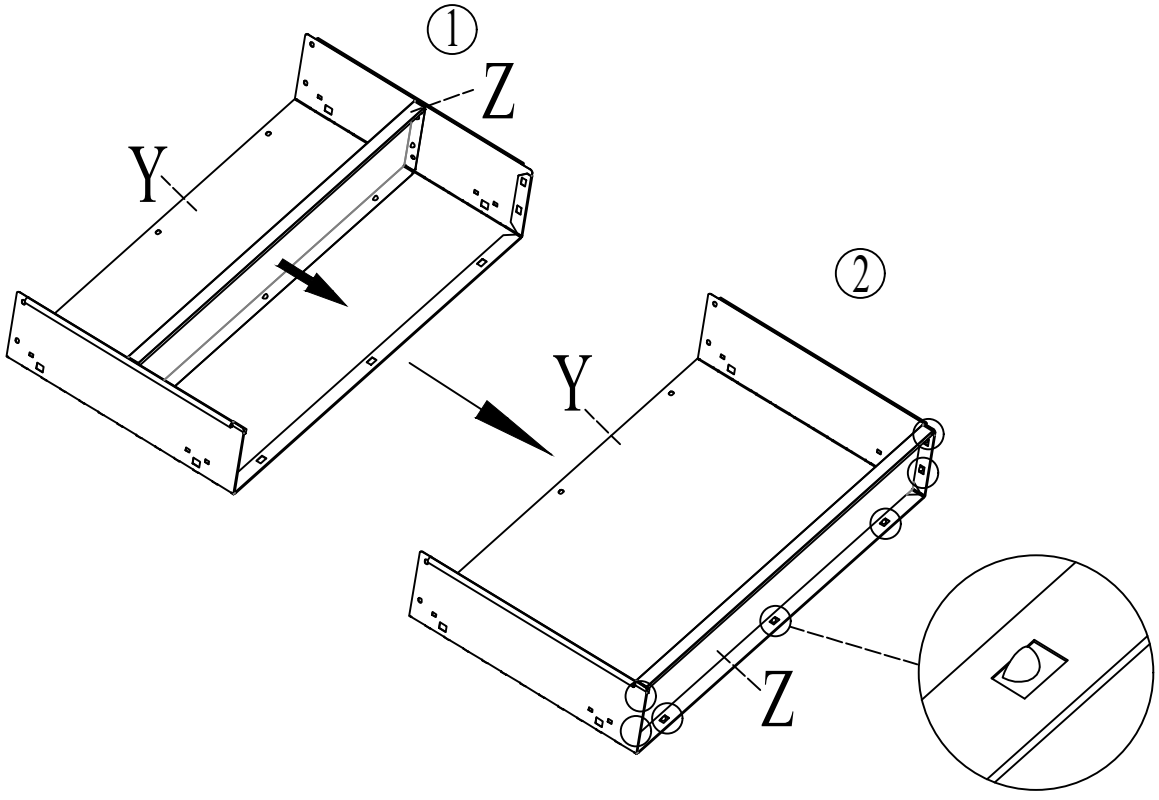


19

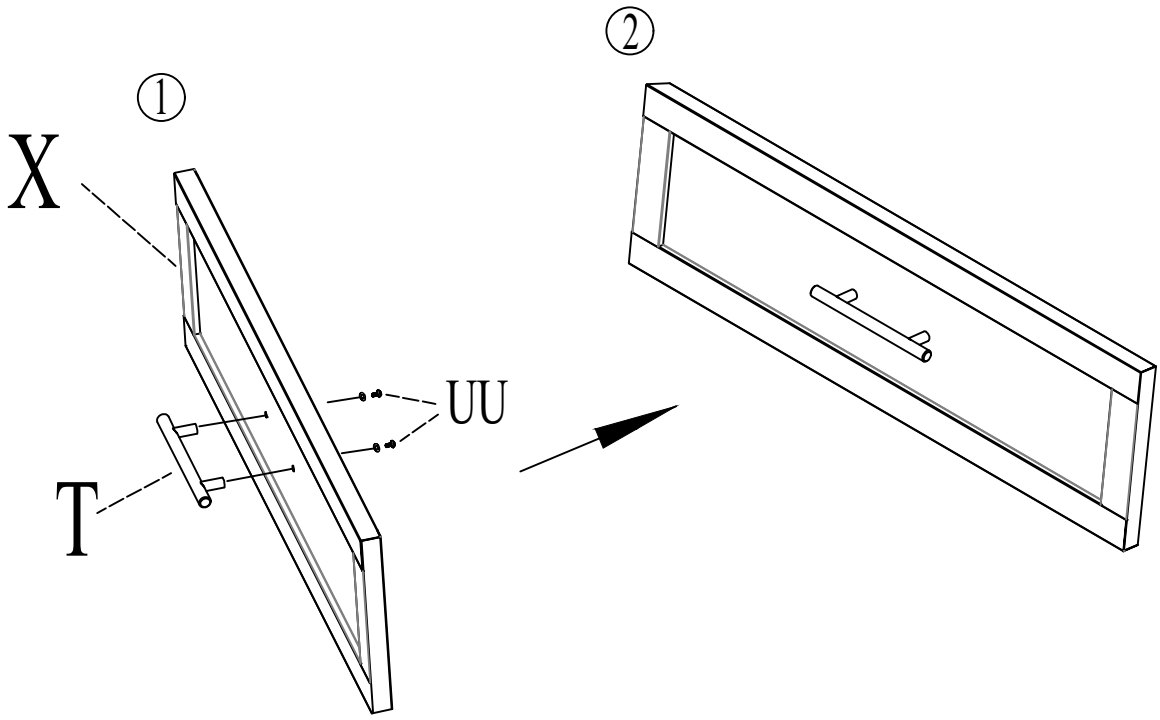


	T×1
	UU×2

20

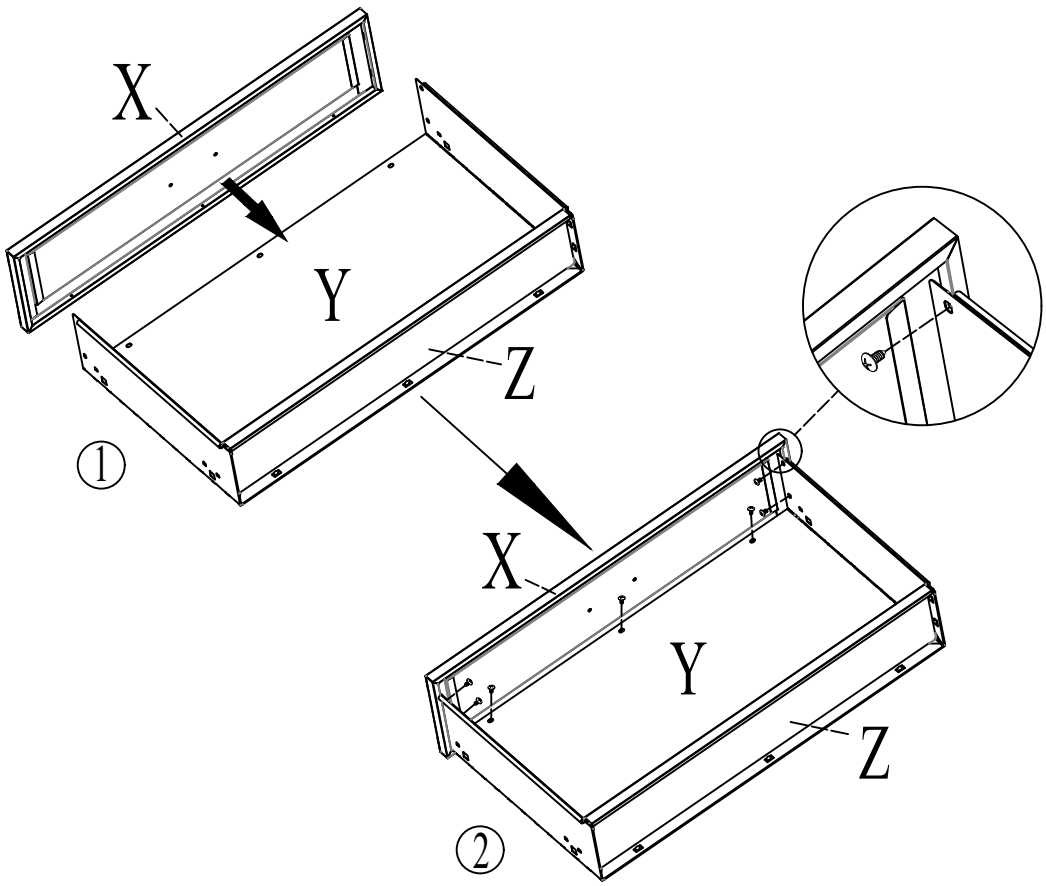


N×7


21

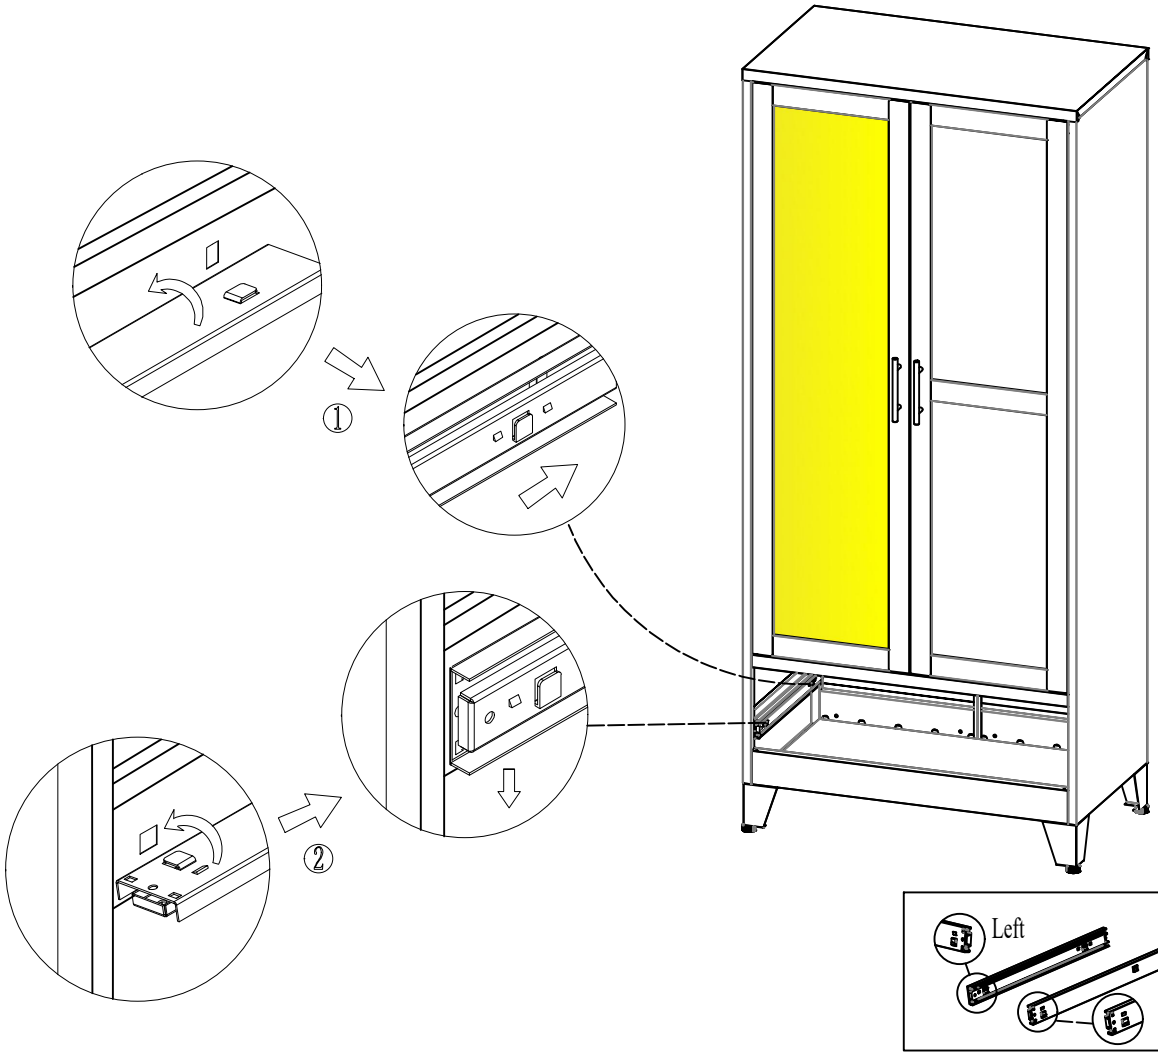

22

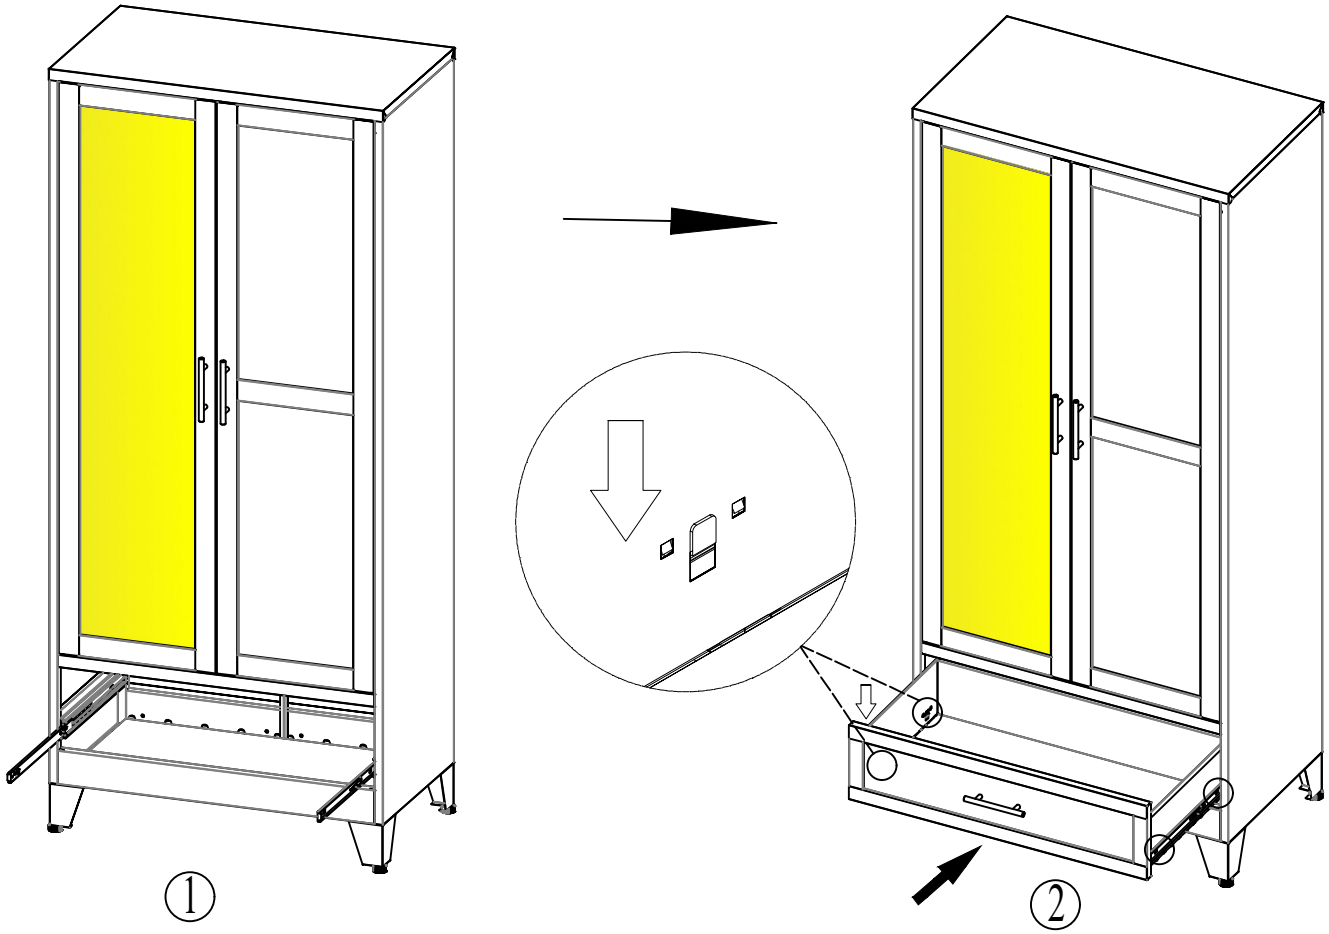


23

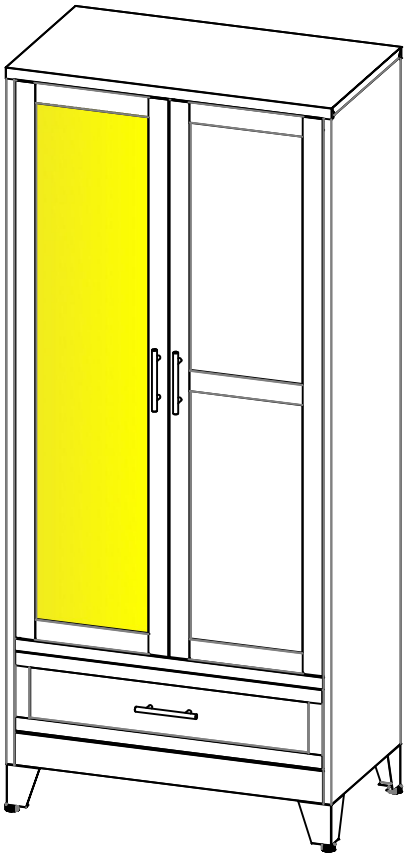

24


The cabinet can be fixed to the wall as needed.

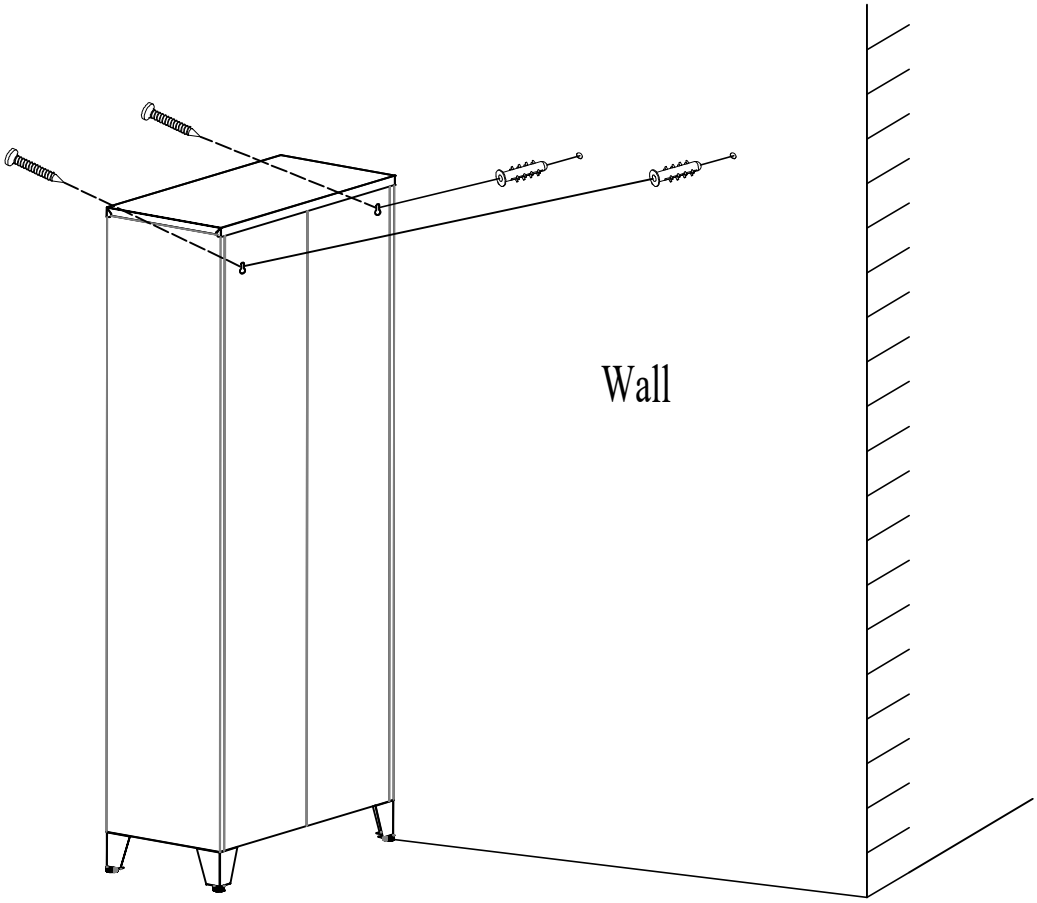


W× 2

Problems and Solutions

Question 1: when encountering uneven height of two door panels,
adjust the bottom adjustment foot to make it flat.

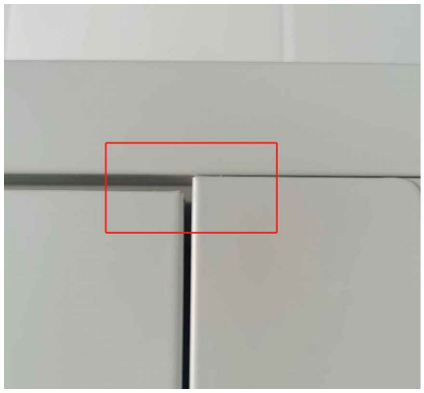

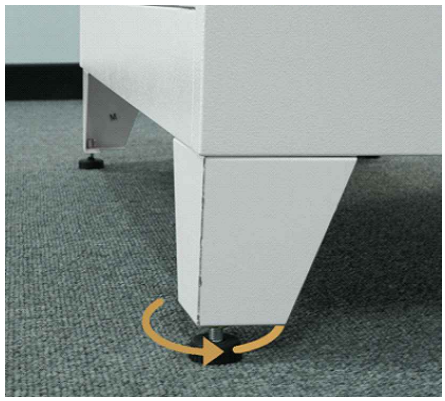

Question 2: When the door is closed, it still protrudes outward.
That's because the door is made of steel plate and has stretchability.
You can adjust it according to the method shown in the picture.



