
Home & Kitchen

Stoves & Electric Fireplace
23 IN

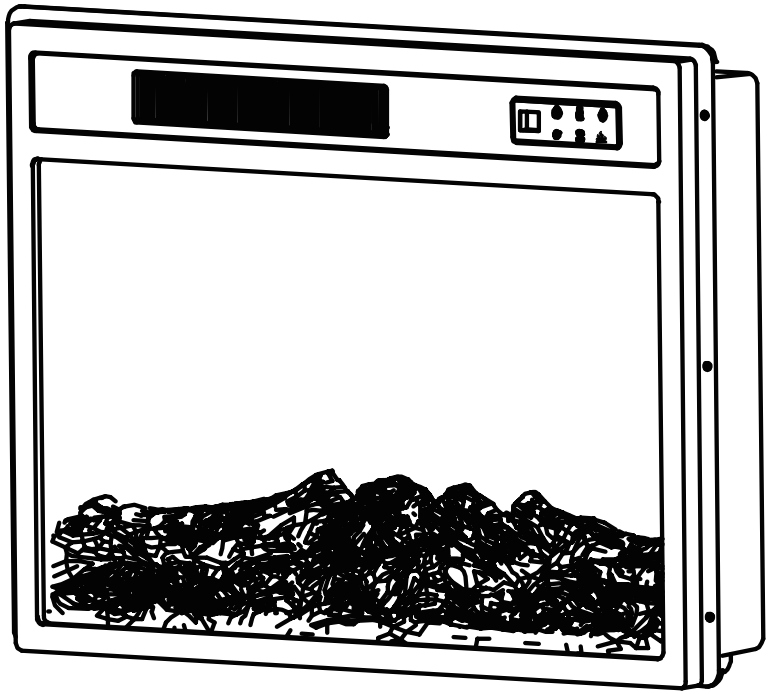

TV-stand and fireplace shipped via two packages.
please do not feel confused if only one was received.

(24/7):service@kmcgloble-us.com
(USA) +1 213 816 4788

ATTENTION ⚠

1. The product must be assembled and used according to the manual. The seller is not liable for any damage caused by incorrect assembly or misuse.
2. Do not sit or stand on the product.
3. Place the item on a flat surface.
4. Keep small parts away from children to avoid choking hazards.
5. Keep product away from corrosive gases, liquids and dusty environment.
6. Keep the original box(es) until assembly is complete or no quality issues need to be confirmed.

AFTER-SALE SERVICE

If you have any suggestions or encounter quality issues with our products, please contact us first. Our after-sales team will respond within 24 hours, and we will do our best to provide a solution until you are satisfied.

GUARANTEED CUSTOMER SERVICE

Your shopping experience is very important to us!
If you feel unsatisfied or have any questions, just contact us without any hesitation!
If you want to share how wonderful our smart product makes your home, you can share your pictures with us!
For further information, contacts immediately:

service@kmcgloble-us.com

ATENTION ⚠

1. Read all instructions before using this heater.
2. Do not use this heater outdoors.
3. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.
4. Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or the like. Arrange the power cord away from traffic areas and where it will not be tripped over.
5. To disconnect the heater, turn controls to off, then remove the plug from the outlet
6. Connect to properly grounded outlets only. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. To prevent a possible fire, do not block firebox air intakes or the exhaust in any manner. Do not operate the firebox on soft surfaces, like a bed, where openings may become blocked.
8. There is a thermostat limiter inside the heater. When the inner temperature over heats or abnormal heating occurs, the thermostat protective device cuts off the power supply to avoid fireplace damaged or risk of fire.
9. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire. electrical shock, or injury to persons.

SAVETHESE INSTRUCTIONS

WARNING:

There are no user serviceable parts inside the fireplace/heater, If the unit appears to malfunction,turm the unit ofandunplug the unit from the wall immediately, and contact Customer.

WARNING:

This heater is hot when in use.To avoid burns, do not let bare skin touch hot surfaces. if provided,use handles whenmoving this heater, Keep combustible material,such as furiturepillows, bedding, papers,clothes and curtainsat least3 f.t(0.9 meters) from the front of the heater and keep them away fromthe sides and rear.

WARNING:

Extreme caution is necessary when any heater is used by or near children or invalidsand whenever the heater is leftoperating and unattended.

WARNING:

Always unplug the heater when not in use.

WARNING:

Do not operate any heater with a damaged cord or plug oratter the heater malfunctions, has been dropped or damagedin any mannerReturn the heater to an authorized service facility for examination,electrical or mechanical adiustment orrepair.

WARNING:

Do not insert or allow foreian obiects to enter any ventilation or exhaust openingsas this may cause an electric shock orfire.or damage the heater.

SAVETHESE INSTRUCTIONS

WARNING:

A heater has hot and arching or sparking parts inside.Do not use in areas where gasoline, paint, or flammable liquidsare used or stored.

ACAUTION:

While the heater is in usethe top center of the fireplace can get hot to the touch,and may cause serious injury or burns.Always supervise small children around the fireplace/heater,Do not place any cloth or decorations over the heater outletof the fireplaceor otherwise obstruct the heater outlet of the fireplace.as this may cause a fire and serious injury mayresult.

WARRANTY

We are confident that you will be delighted with this purchase. Should this product be defective in workmanship ormaterials, or fail under normal use, we will repair or replace it for a period of up to one 1) vear from the dateof purchase.

This warranty gives you specific rights and you may also have other rights which vary from state to state.

HARDWARE



M4×12mm

Ⓐ × 6+2




M3×10mm

Ⓑ × 12+2





Ⓒ × 6

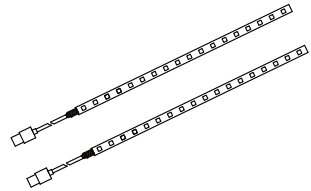

LED lamp band

PARTS

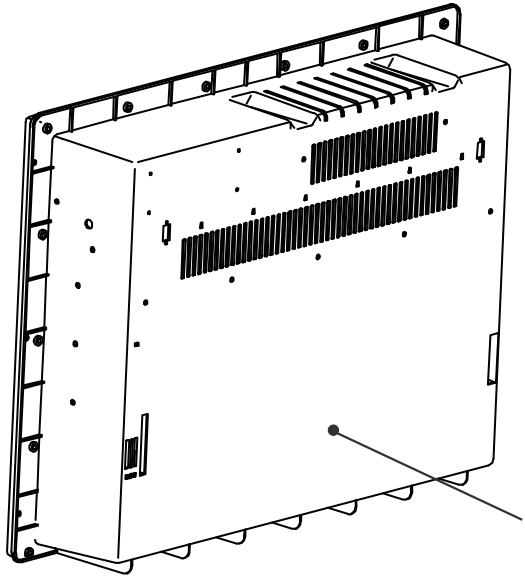


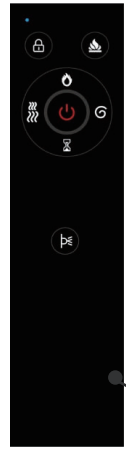

⚠ACAUTION:

This insert has front panel made of GLASS! ALWAYS use extreme caution when handling glass. Failure to do so couldresultin personal injury or property damage.

DIMENSION

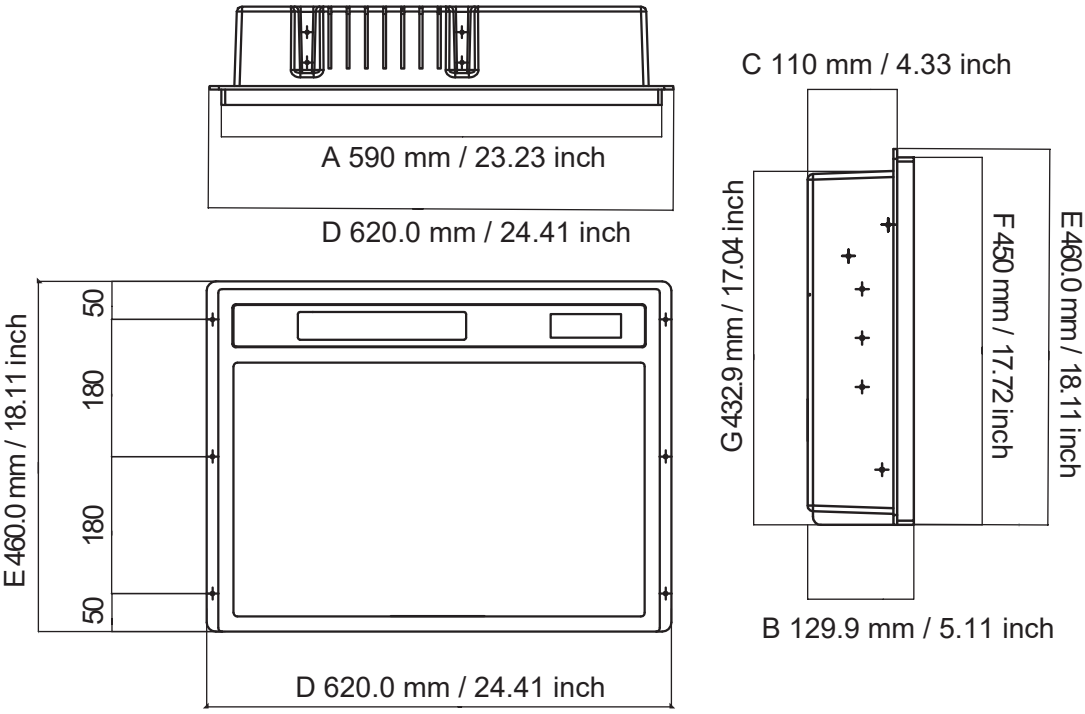
A 590 mm / 23.23 inch
D 620.0 mm / 24.41 inch
E 460.0 mm / 18.11 inch
50
180
180
50
D 620.0 mm / 24.41 inch
C 110 mm / 4.33 inch
G 432.9 mm / 17.04 inch
F 450 mm / 17.72 inch
E 460.0 mm / 18.11 inch
B 129.9 mm / 5.11 inch


PRODUCT ASSEMBLY


1

Install the led light strips with the TV

Attention: The Fireplace and TV stand come in two packages.May deliver on different days.

The position of the lamp interface should face the middle of board 1.

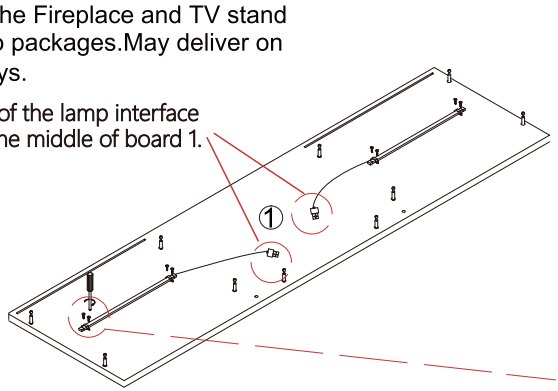

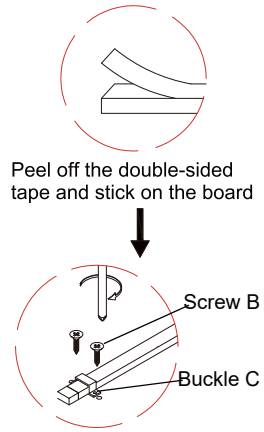

Attention: The LED light strip comes with fireplace in another package. Please install the light strip after receive all the two packages. Thanks.

2

Installing the fireplace insert


Carefuly set the fireplace insert into the back of the TV stand.

INOTE:

D0 NOT attempt to install the insert from the front of the mantel - it will not fitTo enhance the impact resistance of the wooden panel,pre-drilled holes were not provide. Please determine thedrilling positions yourself and install the fireplaceaccordingly.

The panel material is easy to drill.


"Wanna show off your hard work? Share a picture ofyour completed project with other members. Whoknows, it might not be as bad as you thought"

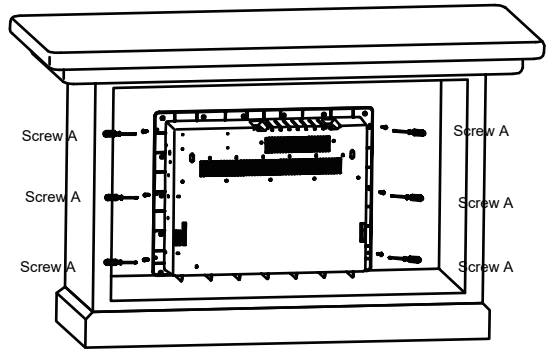

3

Align the USB connector with the fireplace


Connect the lamp strip to the fireplace by threadingit through holesback of the TV stand.

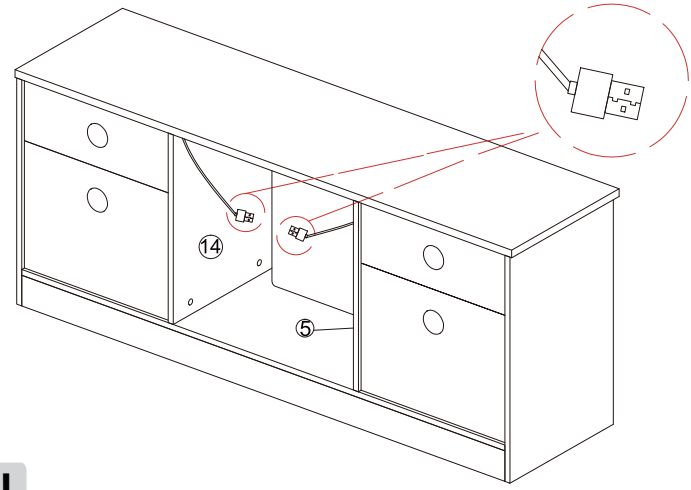


OPERA TION

Identifying the control panel

The control panel is located on the top right corner of the fireplace/heater unit.

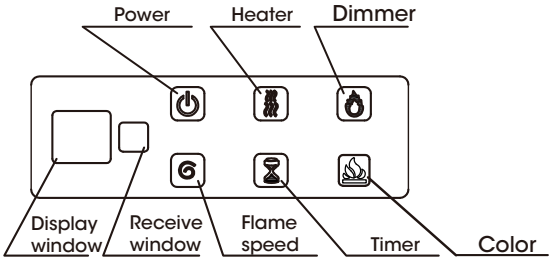

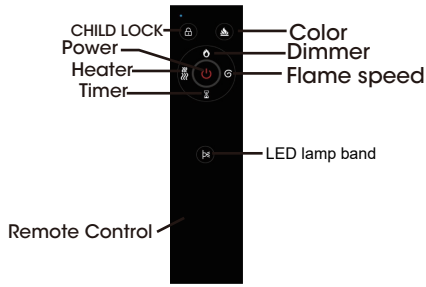

Using the remote control

The operation of the remote control buttons work the same as the buttons on the front panel of the fireplace/heater.Review the Operation section for more information on the functionalitv of these buttons.

Note: Need to bring AAA batteries,open the remote control back,put the battery, cover the back.

POWER	Turn the appliance ON/0FF
FLAME SPEED	Stepper motor speed regulation is divided into five levels, the digital tube shows the lowest u1 file and the highest u5 file.
DIMMER	Dimming function, Brightness adjustment is divided into 5 levels, the digital tube display L1file is the darkest, L5 file is the brightest, the default L5.
TIMER	Timing button, maximum timing 8H, 3S no operation after the digital tube out.
HEATER	Heating button, LL (FAN HEAT1) HH (FAN HEAT2) 0F (heating off) cycle.
CHILD LOCK	Child lock function: Press the child lock button on the remote control inany state, the child lock function takes eect. In this state, pressing any is invalid (Except for the power.press the child lock button on the remote control again to unlock the child lock function.)
COLOR	Electric fireplace flame color change function, electric fireplace flamecolor change function, flame light board has 3colors of lamp beads, R= Red, Y= Yellow, B= Blue. The first time when the flame LED light color is on the power on the default color "R-Red", color code for "1", every time you press the keypad or remote control of the flame color change key, the buzzer will be a short sound, the flame color (1-2-3-4-5-6-7) order change once, the digital tube corresponds to display the flame color code. Every time you press the keypad or the remote control's flame color change key the buzzer will sound briefly, and the flame color (1-2-4-5-6-7) will change once in sequence, and the digital tube will display the flame color code correspondingly (1=R,2=Y,3=B, 4=R+Y, 5=Y+B, 6=R+B,7=R+Y+B.).
LED	Controls the color of the RGB strip.RGB light with extension function: electric fireplace motherboard reserved RGB light withinterface, need external RGB light belt, RGB color change control button on the remote controlboot default RGB light belt is off state, RGB has 15 colors: 01. Red 02. Yellow green 03. Green 04.Peacock Blue 05. Blue 06. Purple 07 Cold white 08. Sky blue 09. Emerald green 10. Light pink 11.Pink 12. Gold 13. Green Yellow 14. Light blue 15. Automatic light change, 00 is off the light.

* When pressing the current key for the first time during intermittent operation, the current mode of thekey function is confirmed without enabling the current key function, and the current key function is enabledonly when the key is pressed a second time.

PRODUCT ASSEMBLY

⚠ AWARNING:

Do not move or remove the mesh trim panel, when the appliance is plugged in and operating. This will cause theremote control and touch panel to no longer function.

⚠ ANOTICE:

When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unlessthe heater is not used for a long period of time.

⚠ ANOTICE:

To improve operation, aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly.Give the unittime to respond to each command.

USING THE REMOTE CONTROL

Installing Remote Control Batteries:

The first thing to do with the remote is to remove the battery bracket when replacing batteries, use AAA batteriesPlease replace the batteries in the following order.

1.Remove the battery brackefrom the remote.



2.Insert AAA batteries into the battery bracket, ensuring the button side faces the correct direction and frmly securing them in place.



3.Press the battery bracket into the remote control until it snaps into position.



4. Turn the remote over and aim it towards the fireplace or heater unit. Press the power button on the upper portion and observe the flames. If nothing happens,check to ensure the battery is installed correctly,and try again.

WARNING: DO NOT INGEST BETTERIES

1. Non-rechargeable batteries are not to be recharged.
2. Batteries are to be inserted with the correct polarity.
3. Exhausted batteries are to be removed from the product.
4. Always purchase the correct size and grade of battery most suitable for the intended use.
5. Replace all batteries of a set at the same time.
6. Clean the battery contacts and also those of the device prior to battery installation.Remove batteries from equipment when not used for an extended period of time.

NOTE:
Battery disposal Please always dispose of batteries at a suitable recycling point.

NOTE:
Battery disposal
Please always dispos
of batteries at a
suitable
recycling point.

USING THE REMOTE CONTROL

⚠WARNING

Always disconnect from the power supply before cleaning the heater. First turn off the main power. Then remove theelectrical plug from the wall outlet.

⚠WARNING

Do not use this fireplace insert if any part of it has been under water. mmediately call a qualified service technician toinspect the firebox and replace any part of the electrical system which has been underwater. The blower motor and flame motor are pre-lubricated for a durable using time and need no further lubrication ormaintenance.To remove any accumulation of dust or debris, the soft brush attachment of a vacuum cleaner shouldoccasionally be used to clean the outlet grille of the fan heater.

1. Use a soft, clean cloth that will not scratch the surface when dusting.
2. Use a clean soft cloth dampened with warm water to clean the fireplace surface. Do not use household orabrasive cleaners,as these products may damage the surface.
3. When cleaning the glass viewing screen use a non-abrasive damp cloth with liquid cleaner or soft soap ifnecessary, Do not use cleaning powders or any other substance with abrasives since these substances willscratch alass.
4. Under no circumstances should this product be operated with a broken or chipped glass panel
5. Do not strike or slam the glass.
6. In the event that your appliance is stained or otherwise damaged during use, we recommend that you callaprofessional to it.
7. When not in use please unplug the cord from the outlet to prevent

TROUBLESHOOTING

Problem	Solution
The unit does not turn on.	Check that the unit is fully plugged into a standard 120Voutlet. Press the power button on the control panel.
The unit is on, but there is no flame effect.	Open the back panels to check if the famespindle has fallen off from the spindle motor.
There is a visible flame effect, but the heaterdoes not continue to blow warm air after repeatedlyfurning on the heater.	Turn on/off the heater button several times tomake sure it is in the"ON"position.
The heater does not work, but the powerand heater switches-are in the"ON" position.	Turn all switches to the"OFF"position and unplug the unitfrom the wall outlet for 5 minutes. After 5 minutesplug theunit back into the wall outlet. and operate as normal.Make sure that no objects are blocking the air vents on thetop and on the front of your fireplace.

Problem	Solution
Remote control is not working.	Change the remote batery.Operate remote transmitherat a slow measured pace. Press the remote controlbutons with an even mofion-and gentle pressure.Repeatedly pressing buttons in rapid succession maycause the transmitter to malfunction.Stand closer to yourfireplace.Remove objects that may block your remotecontrol's ability to communicate with your fireplace.

AFTER-SALE SERVICE

(24/7):service@kmcgloble-us.com
(only us) +1 213-816-4788

Please feel free to send us the text or email. We will reply to you within 24 hours. Also please feel free to contact usif you have received the defective items.