White Lighted Angel



Illustrated assembly guide

MODEL KS7612

Finished dimensions
45.28 in L x 11.81 in W x 61.42 in H

Keep the power disconnected while joining the frame and light connections. Use the supplied power source for your item.

Before you begin

Arrange the components on a clean surface. Two lower body panels, upper body, arms, wings, hair piece, halo, gold sash and bow, LED cords, adaptor, ties and stakes.



Have scissors ready when zip ties are used. Cut only excess tie ends; keep scissors clear of the light wires.

Assembly sequence


Follow the numbered steps. Check each frame and cord connection before applying power.

1 Join the lower body panels




Connect the two lower body panels at the top. Secure their sides together with zip ties.

2 Fit the arms

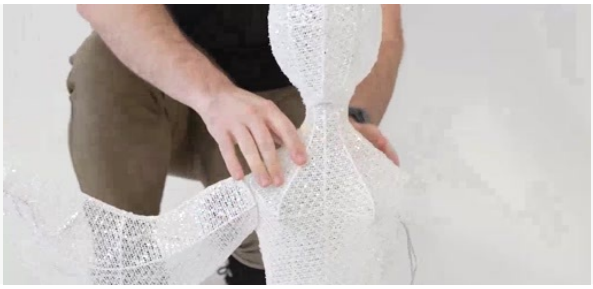

Attach one arm to each side of the upper body at the matching frame points.

3 Join upper and lower body

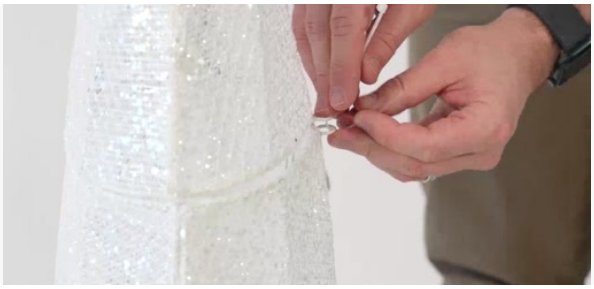

Hook the front of the upper body onto the lower body, then zip-tie the back. Trim excess tie ends clear of wires.

4 Attach the wings and lights



Fit the wings at the back. Connect the wing LED cord to the cord plug at the middle of the body.

Assembly sequence

Follow the numbered steps. Check each frame and cord connection before applying power.

5 Add the hair, halo and sash



Attach the hair piece and halo. Hook the gold bow and sash detail onto the front as shown.

6 Position and illuminate



Use the included ground stakes outdoors if needed. Check the frame and cord connections, then connect the supplied adaptor and test the lights.

Warranty?
Troubleshooting?

Scan the QR code for
instructions, support, & registration.

XProductSupport.com/product/KS7612

Instructions, support & warranty

Scan the mini card or click below to:

Watch the instructional video
Create a support ticket
Register your item for warranty

XProductSupport.com/product/KS7612