Mosbrisa®

Instruction Manual

HIPS Patio Glider



1. Please find the assembly guidelines on Page 3-8.











2. You can scan the QR code of our official website and leave a message to register for the 4-year warranty.

3. Defects may occur due to violent impacts during the shipping process. If you find any defective parts, please get in touch with us through Amazon messages or any of the contact methods below. We will respond within 8 hours and provide free replacement parts or other services you need.

Fortunecandy Inc.

✉ customerservice@fortune-candy.com

Connect with us on fortune-candy.com

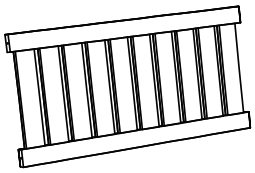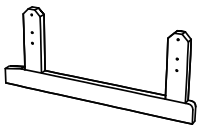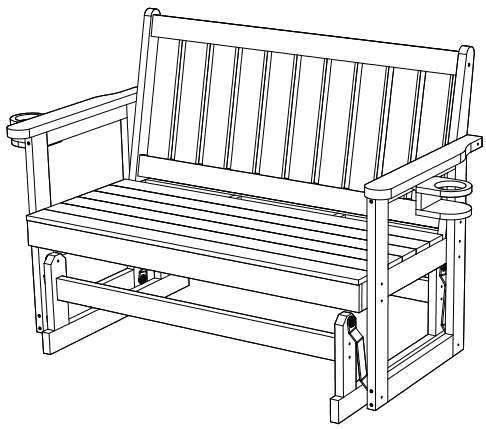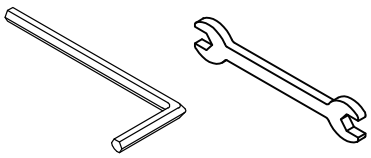
				
A x 1	B x 1	C x 1	D x 1	E x 2
				
F x 2	G x 2	H x 2	I x 2	J x 1
			 M6*45	 M6*55
K x 1	L x 2	AA x 4	BB x 8	CC x 8
 M6*45	 M6*65	 M6*30		
DD x 14	EE x 2	FF x 2		
 M6*80				
GG x 12	Tools			

Precautions before Assembly


1. If any parts are missing, scratched, or damaged, please get in touch with the seller or Fortune Candy customer service for a partial refund and replacement parts.

2. In each assembly step, the screws only need to be tightened 80%, which will make it easier to assemble different parts. In the last step, please tighten the screws and nuts as tight as possible.

* We provide excellent after-sales service, which is appreciated by many buyers. Your satisfaction is our main goal.

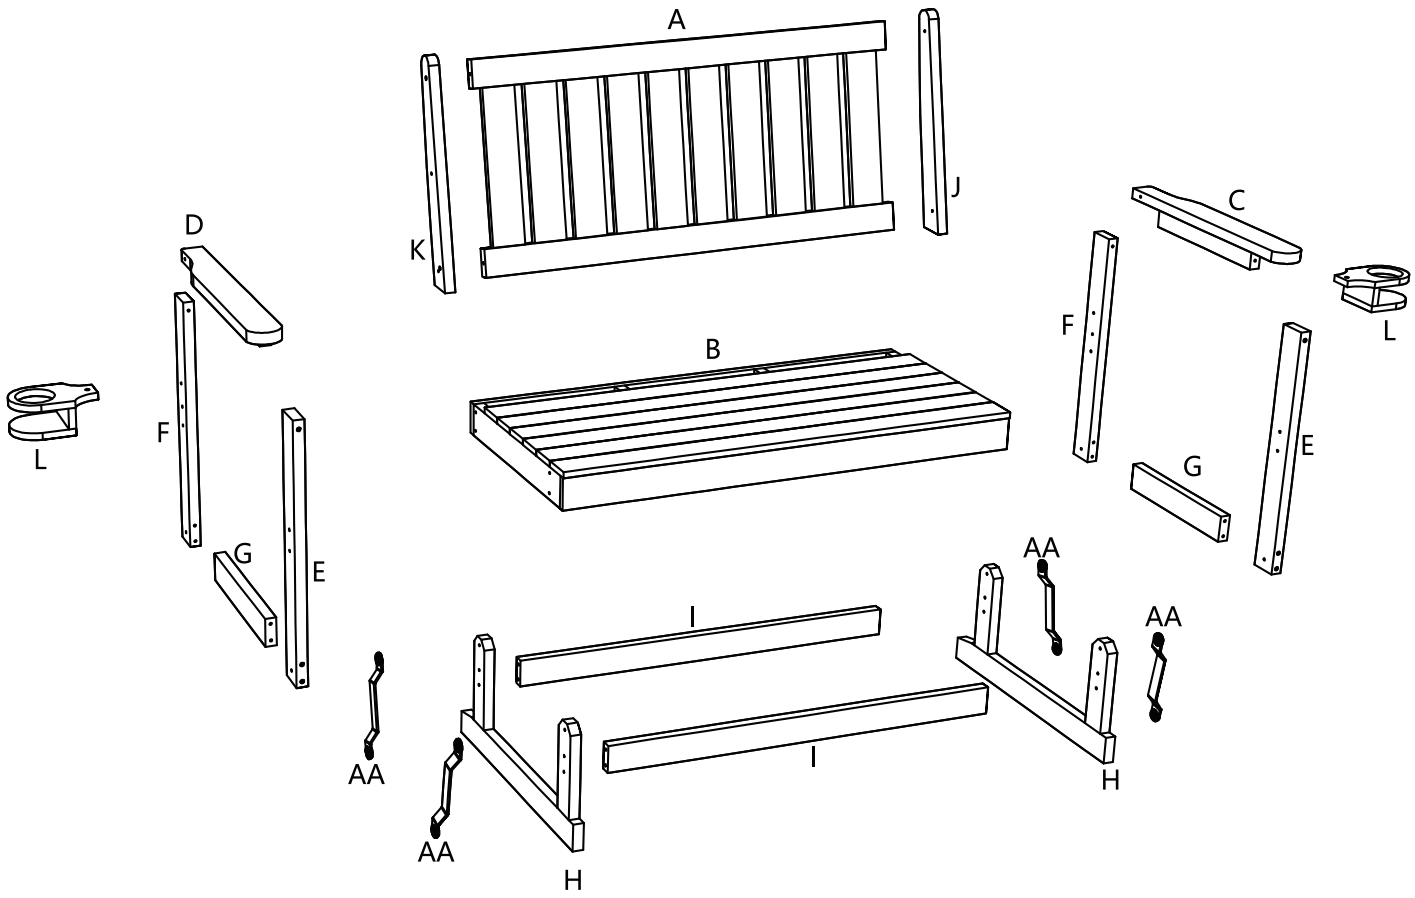

A
J
K
C
D
L
F
B
L
F
E
G
G
E
AA
AA
I
AA
I
H
AA
H

1

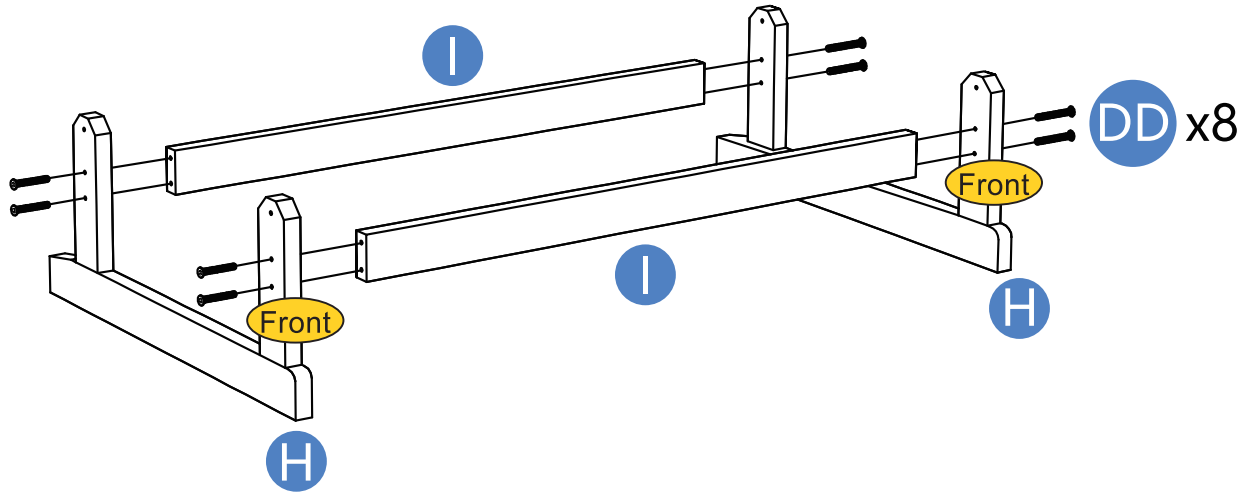


1. Assembling the base of the glider.
   ⚠ The shorter end of the two H parts is at the front, and the longer end is at the back. Please pay attention to the label with the word "Front".

2

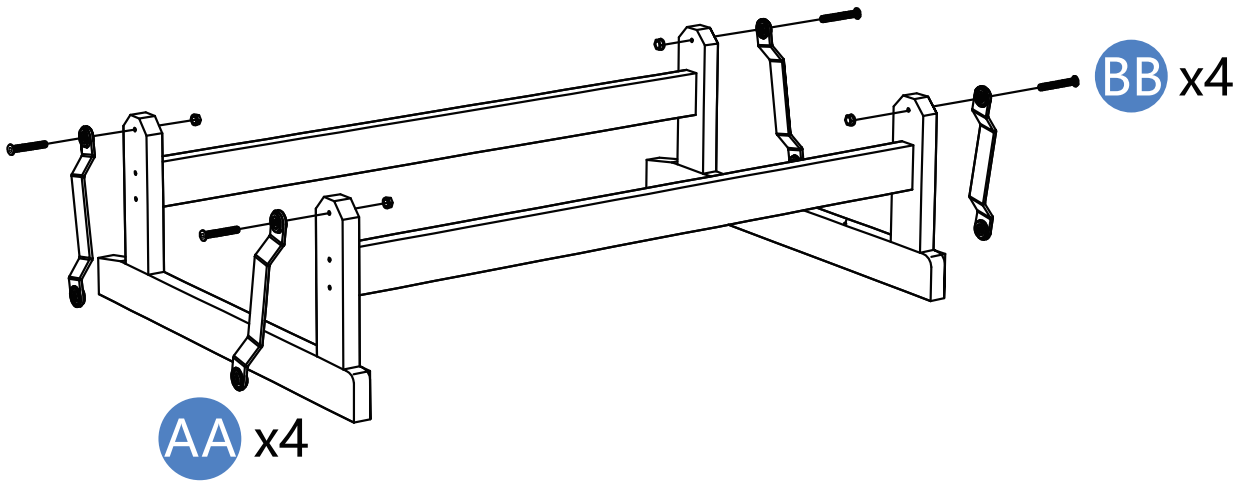


2. Assembling the metal connectors.

3

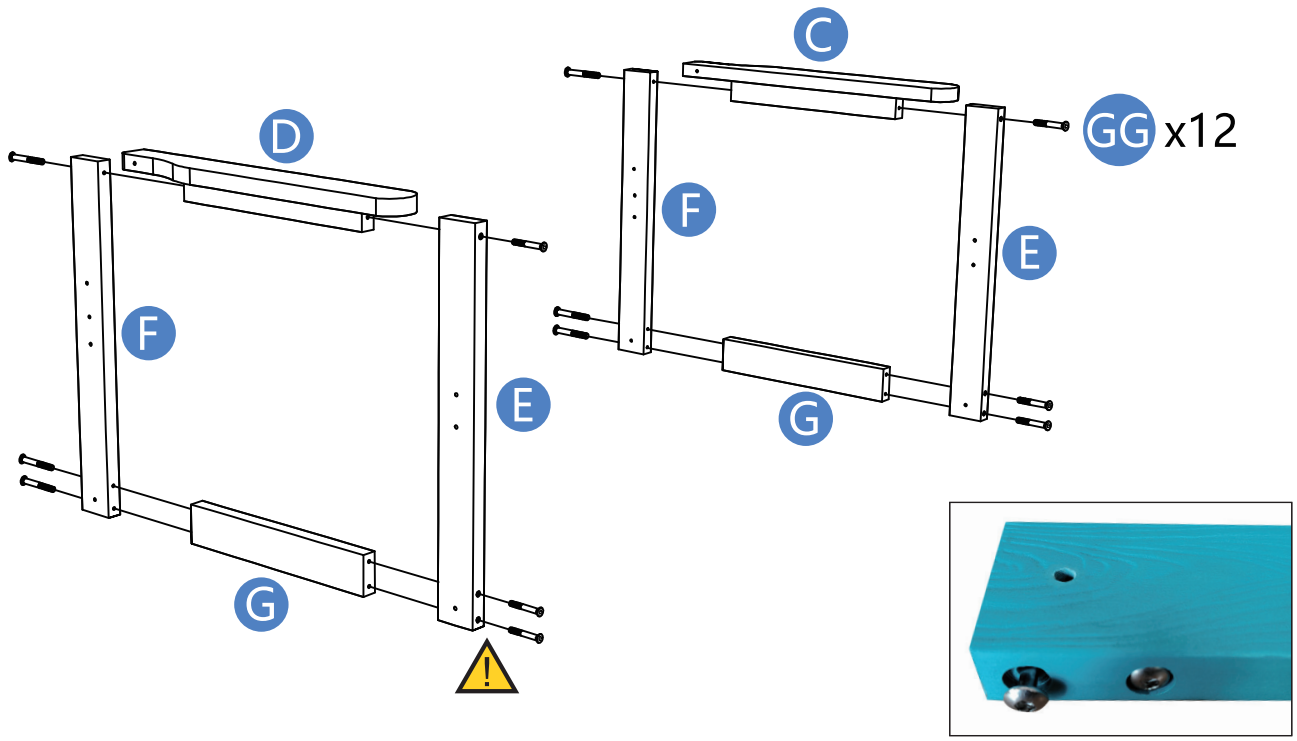


3. ⚠ Please identify the placement directions of Parts E & F. The side with two screw holes is the bottom, and the side with recesses for the screw head faces outward. Part G has no front and back sides.

4

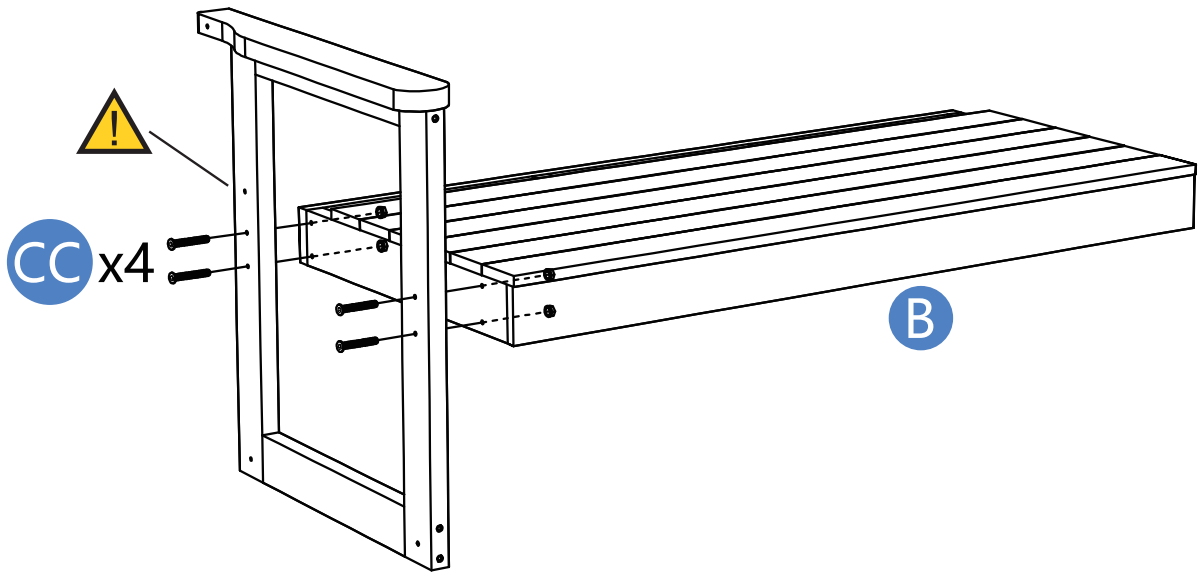


4. ⚠ The third hole is for the backrest. Please do NOT tighten the nuts.

5

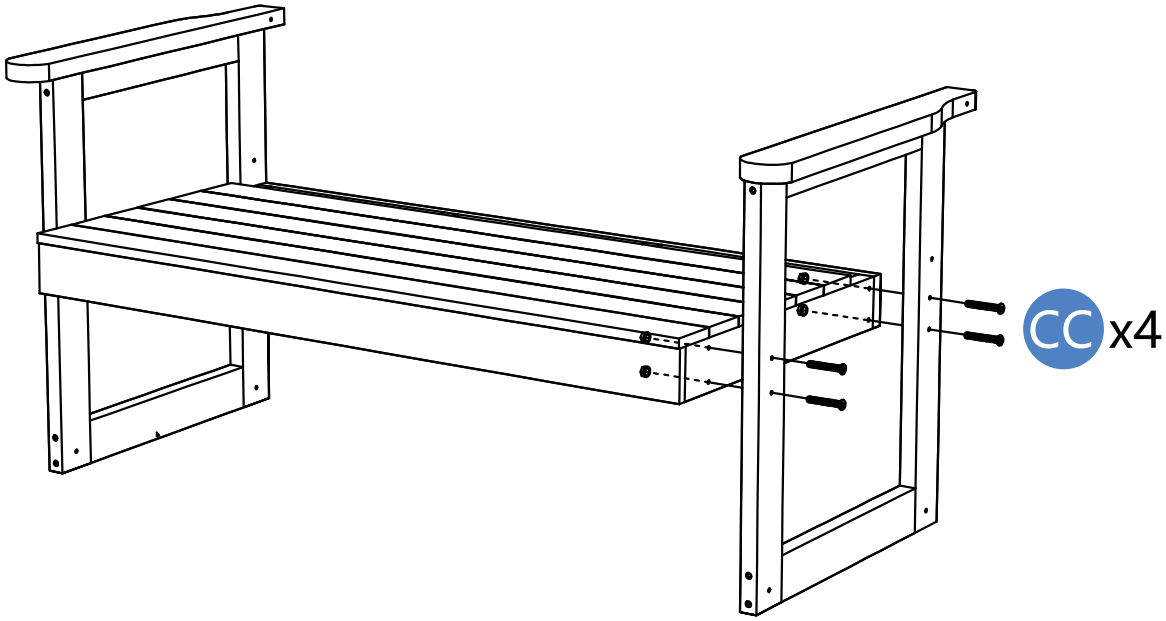


5. The third hole is for the backrest. Please do NOT tighten the nuts.

6

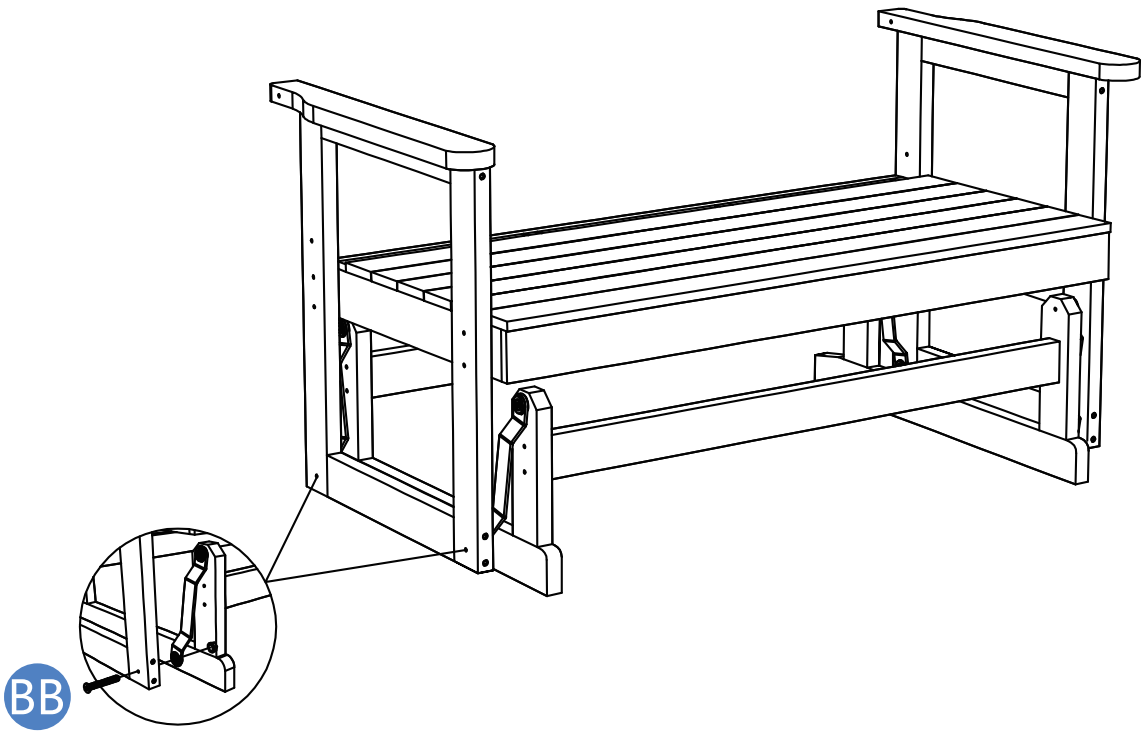


6. We recommend that two people work together for this step.


7

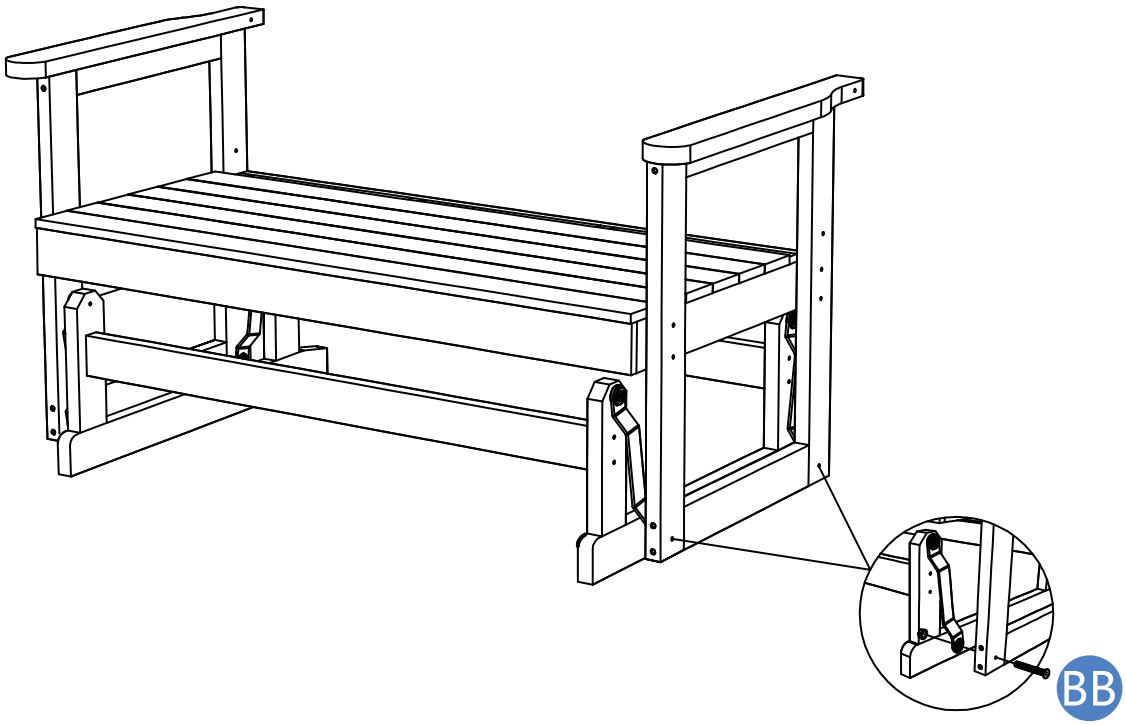

7. We recommend that two people work together for this step.


8

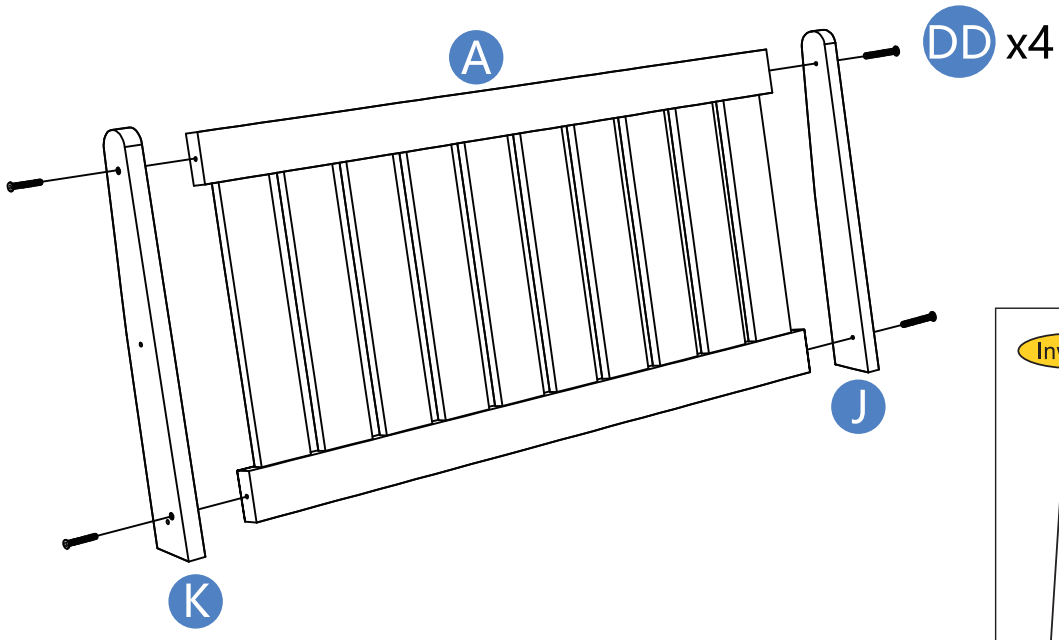

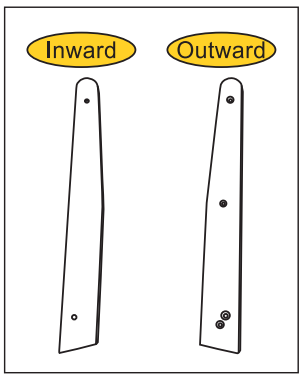


8. Assembling the backrest. Please identify the placement directions of Parts K & J. The side with four holes faces outward.

9

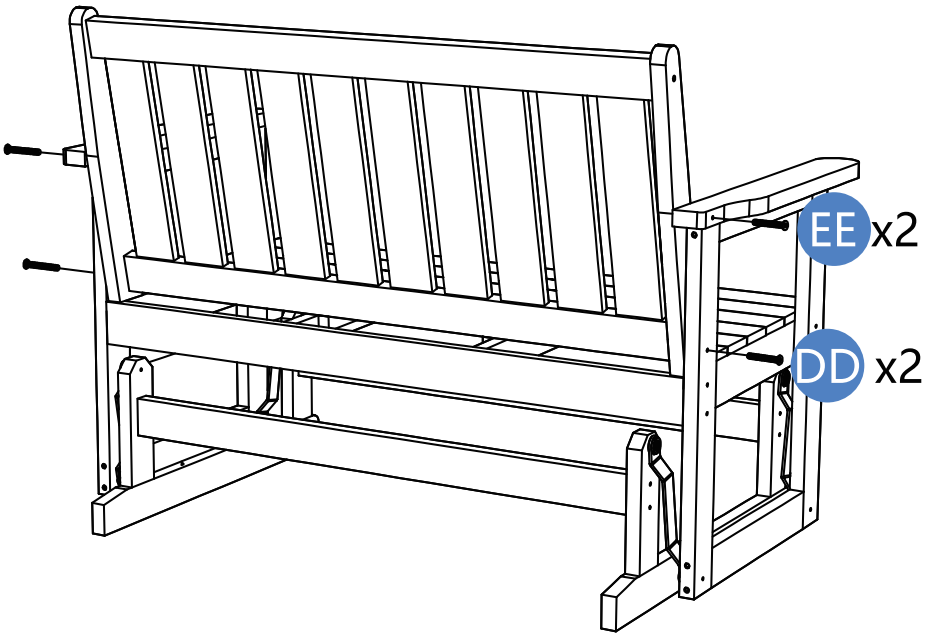

9. You can move the parts a little to let the screws go through the holes. Please tighten the nuts to the tightest after confirming all the parts are installed correctly.

10

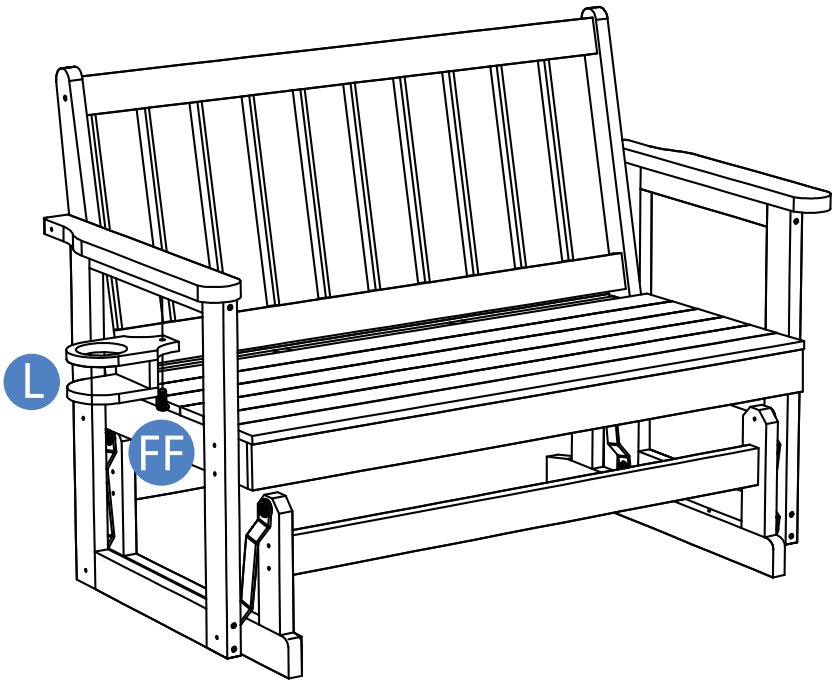

10. Assembling the cup holders. Now, the assembly is complete.

FAQs for This Product :

Q: How to maintain this product?

A: Please check the nuts regularly for looseness and tighten them. This product is entirely weather-resistant and very suitable for outdoor use.
HIPS (High-impact polystyrene) is the most durable material for outdoor furniture.

Q: How to register for the warranty?

A: Please scan the QR code on the first page to go to our official website, https://fortune-candy.com, and use the online chat tool to send your order number; then we will register your product for warranty. You can also send an email to customerservice@fortune-candy.com.

Q: How to contact us to send replacement parts?

A: If you find any defects, scratches, or missing parts, the easiest way is to tell us which part you need using Amazon messages. In this way, we can find out which product you purchased and your delivery address. You can also send an email to customerservice@fortune-candy.com. Please tell us your order number, shipping address, and which part is needed. No matter how you contact us, we will reply within 8 hours and give you a satisfactory solution.