
ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

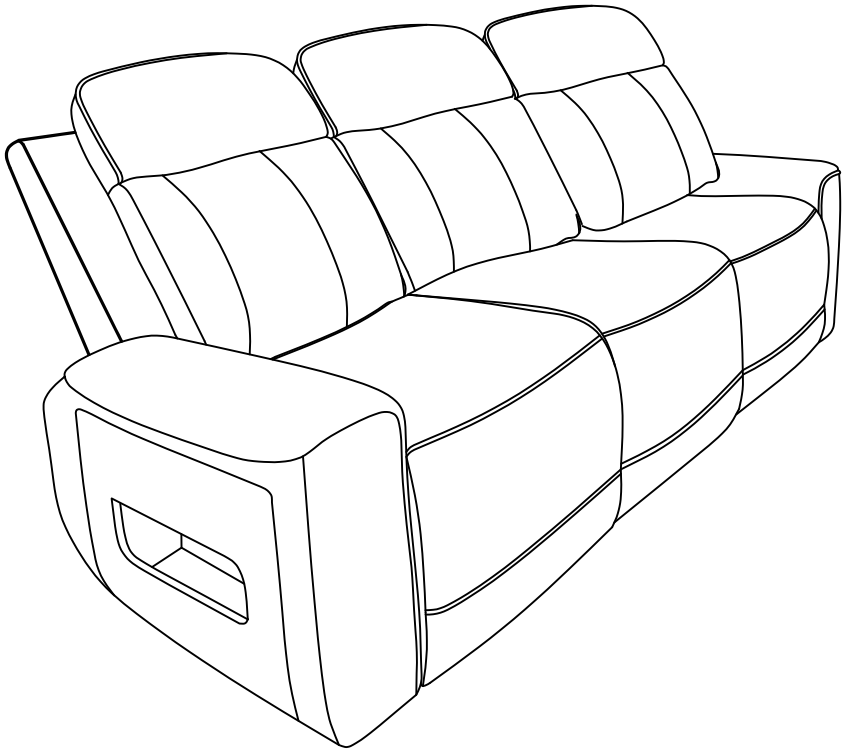

Fine Furniture for every stage of life

609615PP
DUAL POWER RECLINER SOFA

REVISION 0: 09/07/2026

ITEM :609615PP

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:


1.Remove hardware from box and sort by size.
2.Please check to see that all hardware and parts are present prior to start of assembly.
3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.


WARNING!
1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2.This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME	15 MINUTES

PARTS IDENTIFICATION

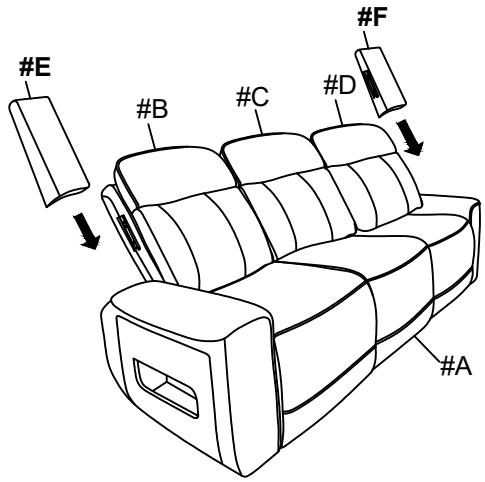

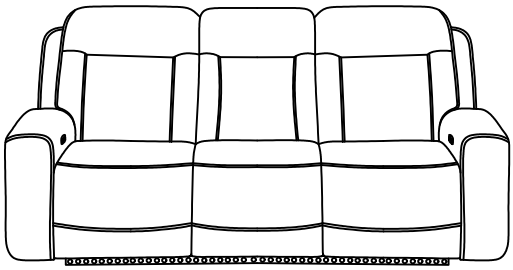


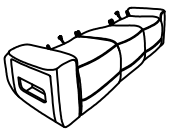A BASE		**1 PC**	**B LEFT BACK**		**1 PC**
C MID BACK		**1 PC**	**D RIGHT BACK**		**1 PC**
E LEFT EAR		**1 PC**	**F RIGHT EAR**		**1 PC**
G PLUG-IN POWER SUPPLY		**1 PC**			


ITEM :609615PP

ASSEMBLY INSTRUCTIONS


STEP 1

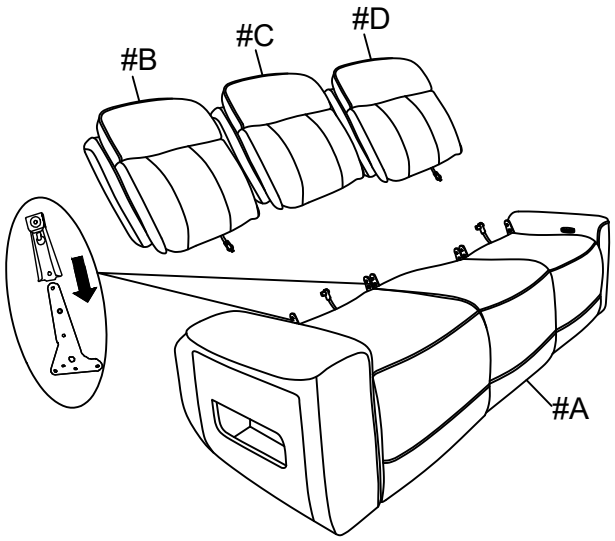


STEP 2

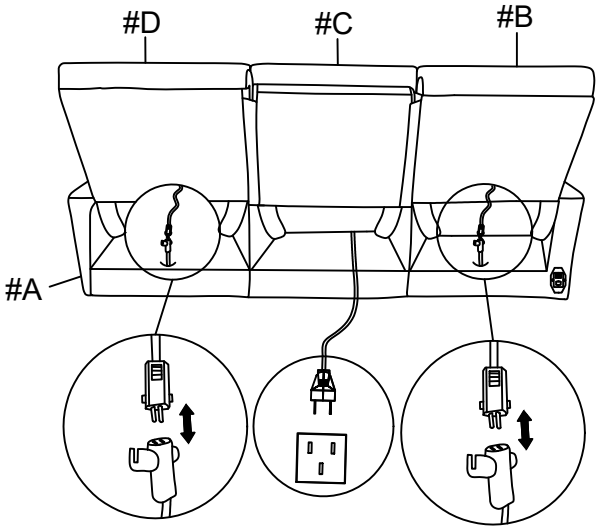


STEP 3

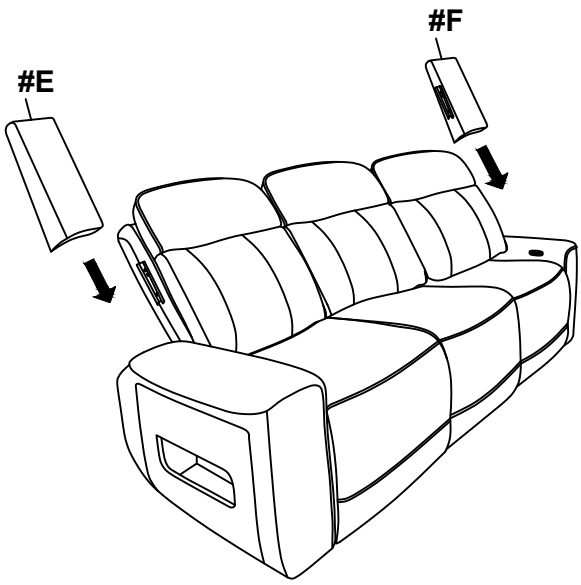


STEP 4

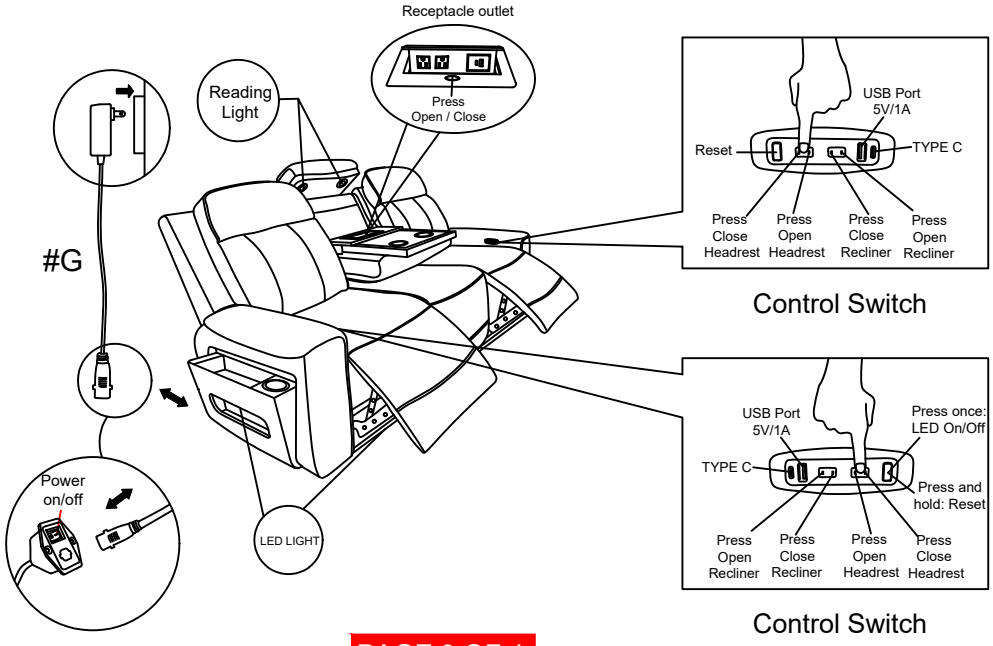

609615PP

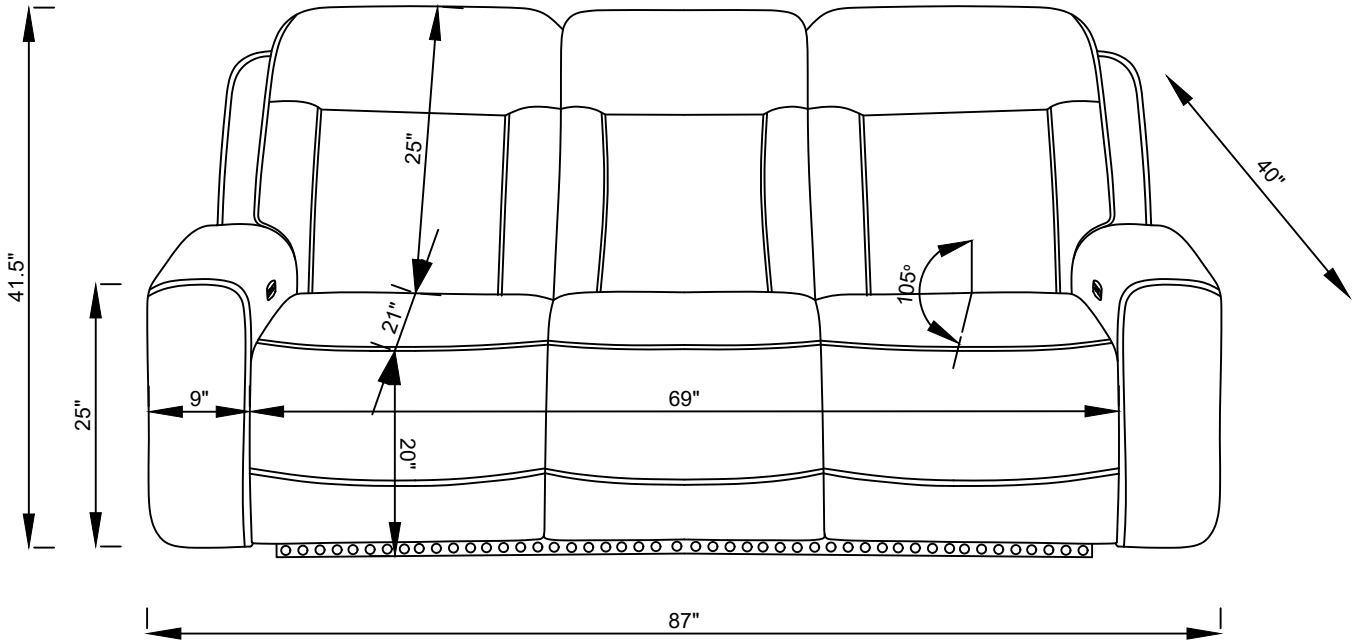

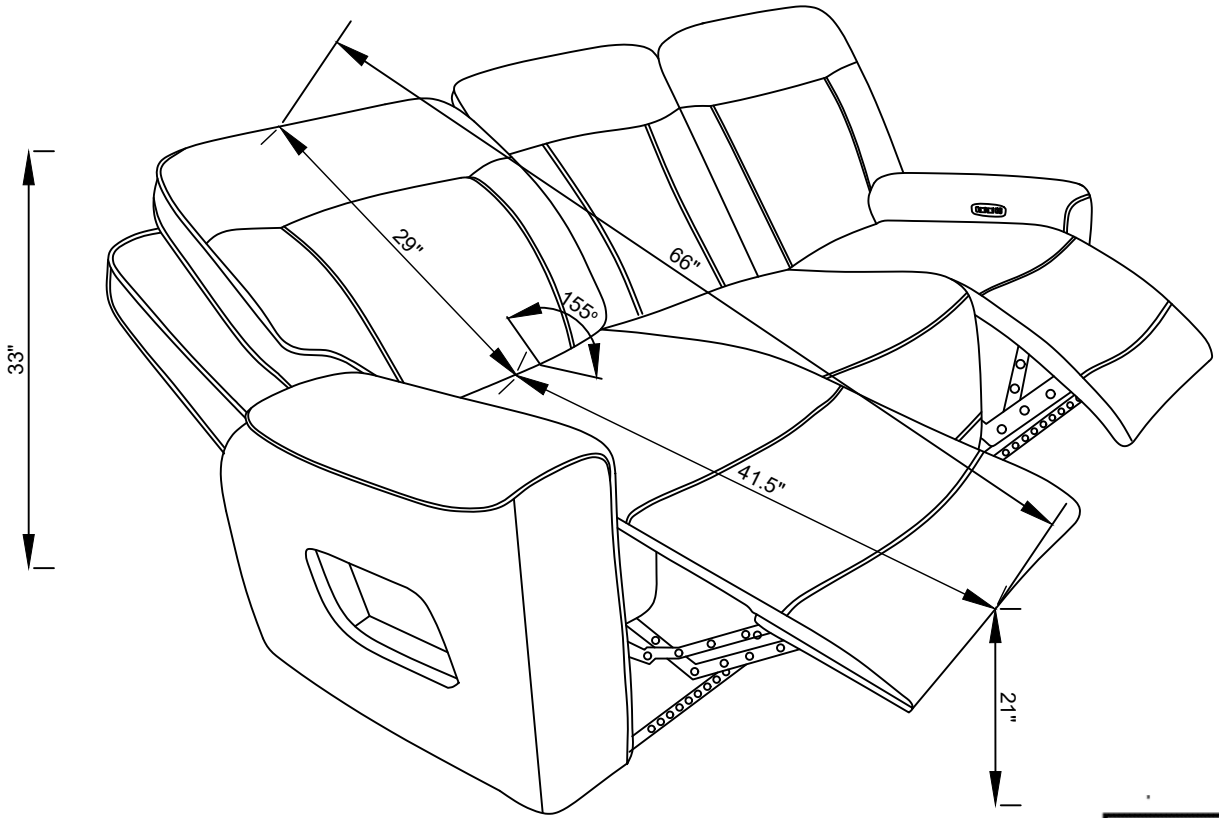



Note: Dimension tolerance ±5%