# TV STAND

## Assembly Instructions - Please keep for future reference

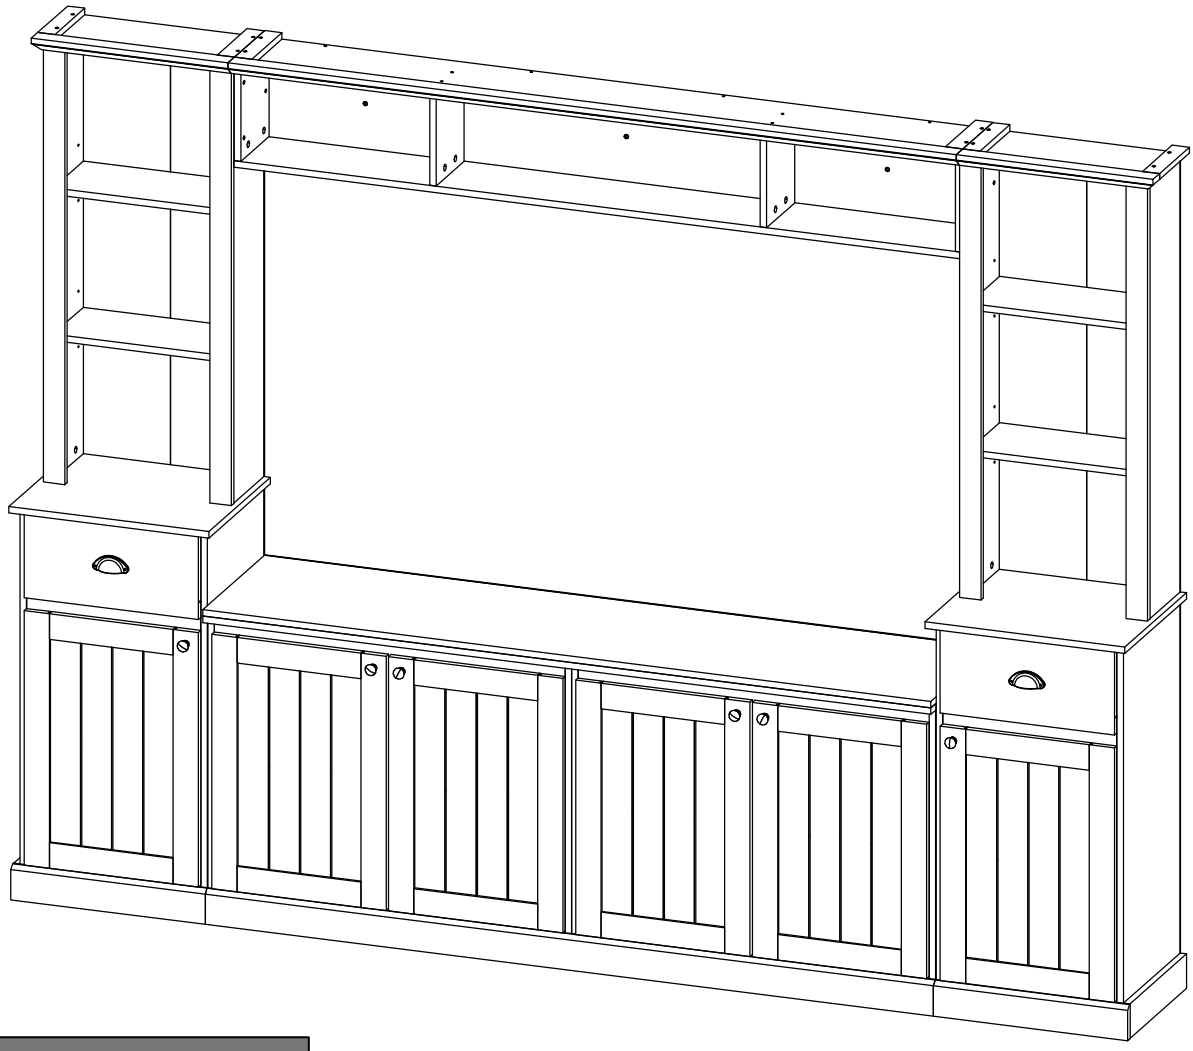

## Dimensions

Width-102.91inch

Depth-14.96inch

Height-76.77inch

## Important – Please read these instructions fully before starting assembly

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

•Check you have all the components and tools listed on the following pages.

•Remove all fittings from the plastic bags and separate them into their groups.

•Keep children and animals away from the work area, small parts could choke if swallowed.

•Make sure you have enough space to layout the parts before starting.

•During assembly do not stand or put weight on the product, this could cause damage.

•Assemble the item as close to its final position (in the same room) as possible.

•Assemble on a soft level surface to avoid damaging the unit or your floor.

•Parts of the assembly will be easier with 2 people.

•To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

•Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

•From time to time check that there are no loose screws on this unit.

•This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

•Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

•Regularly check and ensure That all bolts and fittings are tightend properly.

## WARNING
**In order to help prevent overturning – please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Components - Fittings

## Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

| | | | |
|---|---|---|---|
| A1 Cam lock x 70+2 | A2  Cam bolt x 70+2 | A3  Cam cap x 70+2 | B 8*30mm Dowel x 96+2 |
| C 6*50mm Screw x 24+2 | D Allen key x 1+1 | E 3.5*16mm Screw x 4+2 | F 3.5*16mm Screw x 116+2 |
| G 4*38mm Screw x 8+2 | H  16mm Nail x 92+2 | I Nail leg x 14+2 | J  Metal shelf support x 32+2 |
| K L bracket x 10 | L1 6*12mm Joint nut x 12 | L2  6*20mm Screw x 12 | M  Hinges x 12 |
| N1L 300mm runner x 2 | N1R 300mm runner x 2 | N2L 300mm runner x 2 | N2R  300mm runner x 2 |
| O1 4*35mm Screw x 3 | O2  6*50mm Wall plug x 3 | P 4*19mm Screw x 6+2 | Q Handle x 6 |
| R Handle x 2 | S1  Wall support x 4 | S2 3.5*16mm Screw x 2 | S3  6*40mm Wall plug x 2 |
| S4  4*35mm Screw x 2 | S5  Cable tie x 2 | T Sticker x 39 | |

## Tools required

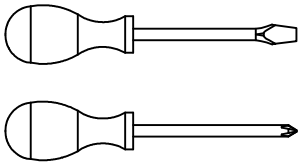

Philips screwdriver
(medium & large)

# Using Camlocks

## Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

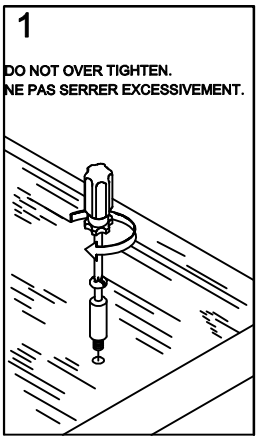


## Step 2

Push the male camlock into the entry hole.

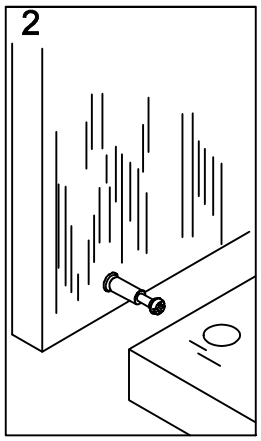


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

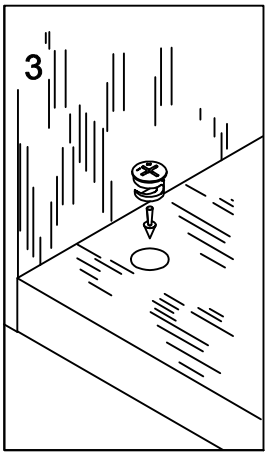


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

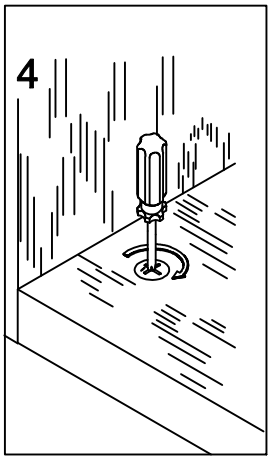

# Components - Parts

**Please check you have all the panels listed below**

| | | |
|---|---|---|
| 1 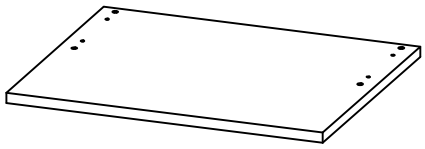 | 2 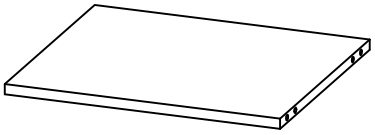 | 3  |
| Top Panel (L&R)<br>466*380*15 2 PCS | Bottom Panel (L&R)<br>405*350*15 2 PCS | Side Panel (L1)<br>900*350*30 1 PC |
| 4  | 5  | 6 |
| Side Panel (R1)<br>900*350*15 1 PC | Side Panel (L2)<br>900*350*15 1 PC | Side Panel (R2)<br>900*350*30 1 PC |
| 7 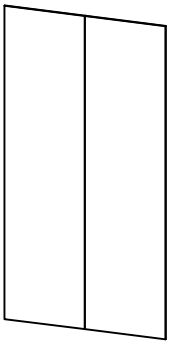 | 8 | 9 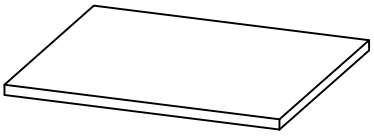 |
| Back Panel (L&R)<br>842*436*2.5 2 PCS | Front Bone (L&R)<br>405*50*15 2 PCS | Shelf Panel (L&R)<br>405*349*15 2 PCS |
| 10 | 11 | 12  |
| Leg Panel (L)<br>453*80*15 1 PC | Leg Panel (R)<br>453*80*15 1 PC | Top Panel (Center)<br>1696*380*30 1 PC |

# Components - Parts

| | | |
|---|---|---|
| 13  | 14  | 15  |
| Bottom Panel (Center)<br>1664*350*15 1 PC | Side Panel (L3)<br>718*350*15 1 PC | Side Panel (R3)<br>718*350*15 1 PC |
| 16  | 17 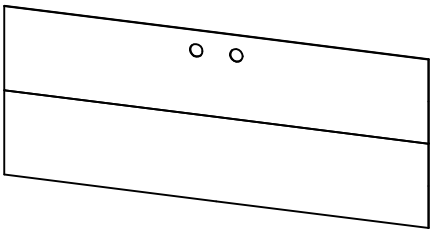 | 18 |
| Center Panel<br>638*350*30 1 PC | Back Panel (Center)<br>1695*668*2.5 1 PC | Front Bone (Center)<br>817*50*15 2 PCS |
| 19  | 20  | 21 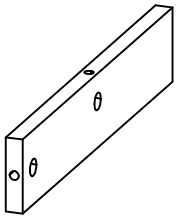 |
| Shelf Panel (Center-L)<br>832*349*15 1 PC | Shelf Panel (Center-R)<br>817*349*15 1 PC | Leg Center<br>350*65*15 1 PC |
| 22 | 23  | 24 |
| Leg Panel (Center)<br>1696*80*15 1 PC | Box Top Panel (L)<br>458*224*30 1 PC | Box Side Panel (L1)<br>1000*189*15 1 PC |

# Components - Parts

| | | |
|---|---|---|
| 25 | 26  | 27 |
| Box Side Panel (R1)<br>1000*189*15 1 PC | Box Top Panel (R)<br>458*224*30 1 PC | Box Side Panel (L2)<br>1000*189*15 1 PC |
| 28 | 29 | 30 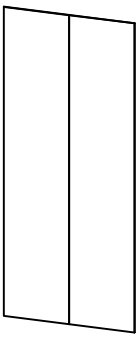 |
| Box Side Panel (R2)<br>1000*189*15 1 PC | Box Side Rail (L&R)<br>1000*50*15 4 PCS | Box Back Panel (L&R)<br>1022*436*2.5 2 PCS |
| 31  | 32 | 33 |
| Box Shelf Panel (L&R)<br>405*188*15 4 PCS | Box Top Panel (Center)<br>1696*226*30 1 PC | Box Bottom Panel (Center)<br>1696*190*15 1 PC |
| 34  | 35  | 36  |
| Box Side Panel (L3)<br>208*189*15 1 PC | Box Side Panel (R3)<br>208*189*15 1 PC | Box Center Panel<br>208*173*15 2 PCS |

# Components - Parts

| | | |
|---|---|---|
| 37  | 38 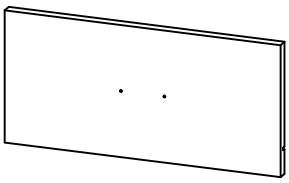 | 39 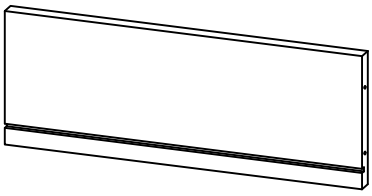 |
| Box Back Panel (Center)<br>1664*208*15 1 PC | Drawer Front<br>406*193*15 2 PCS | Drawer Back<br>350*130*15 2 PCS |
| 40 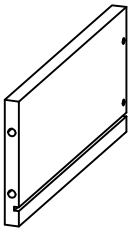 | 41 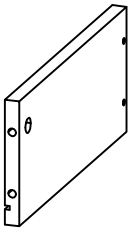 | 42 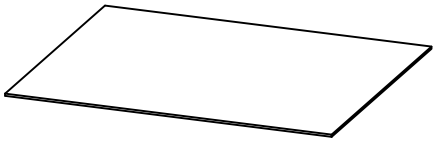 |
| Drawer Side (L)<br>298*130*15 2 PCS | Drawer Side (R)<br>298*130*15 2 PCS | Drawer Bottom<br>360*292*2.5 2 PCS |
| 43 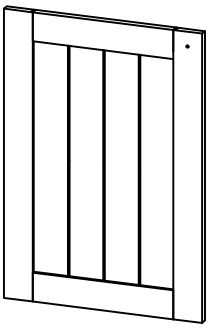 | 44 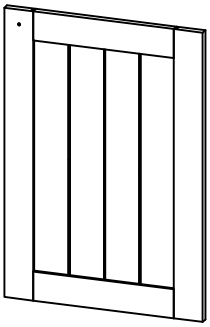 | |
| Door Panel (1)<br>588*406*15 3 PCS | Door Panel (2)<br>588*406*15 3 PCS | |

# Assembly Instructions

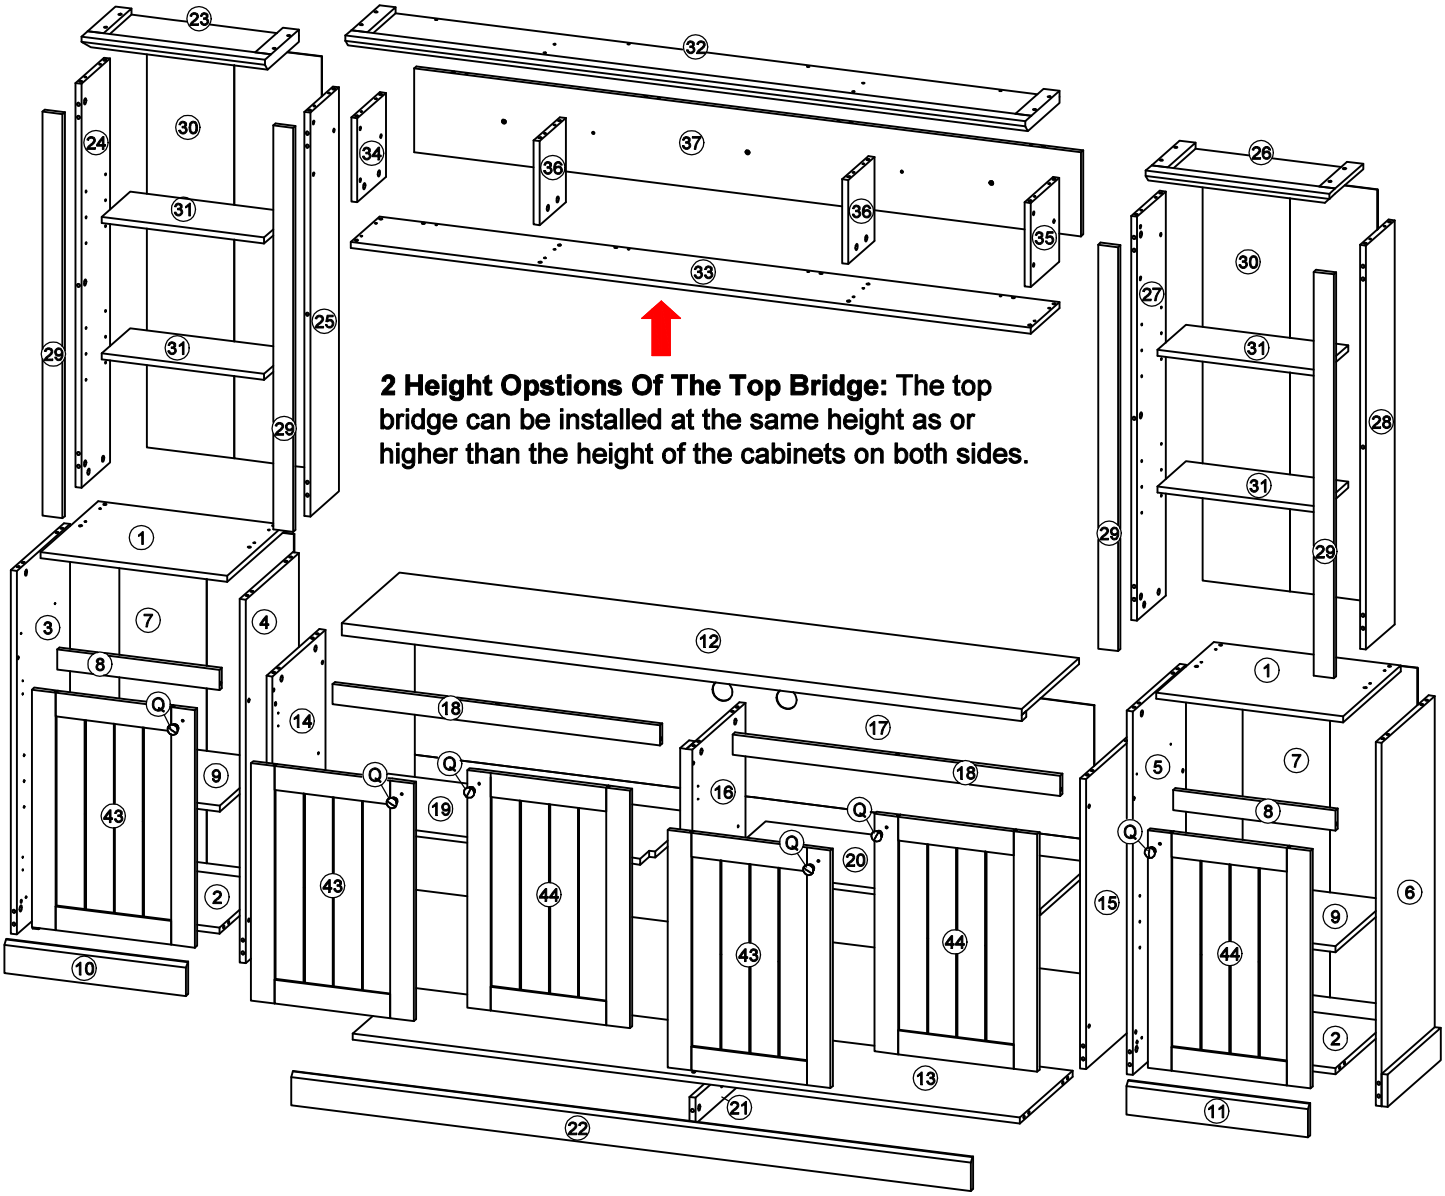


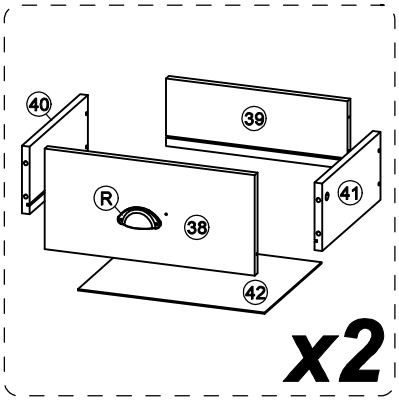

STEP 1

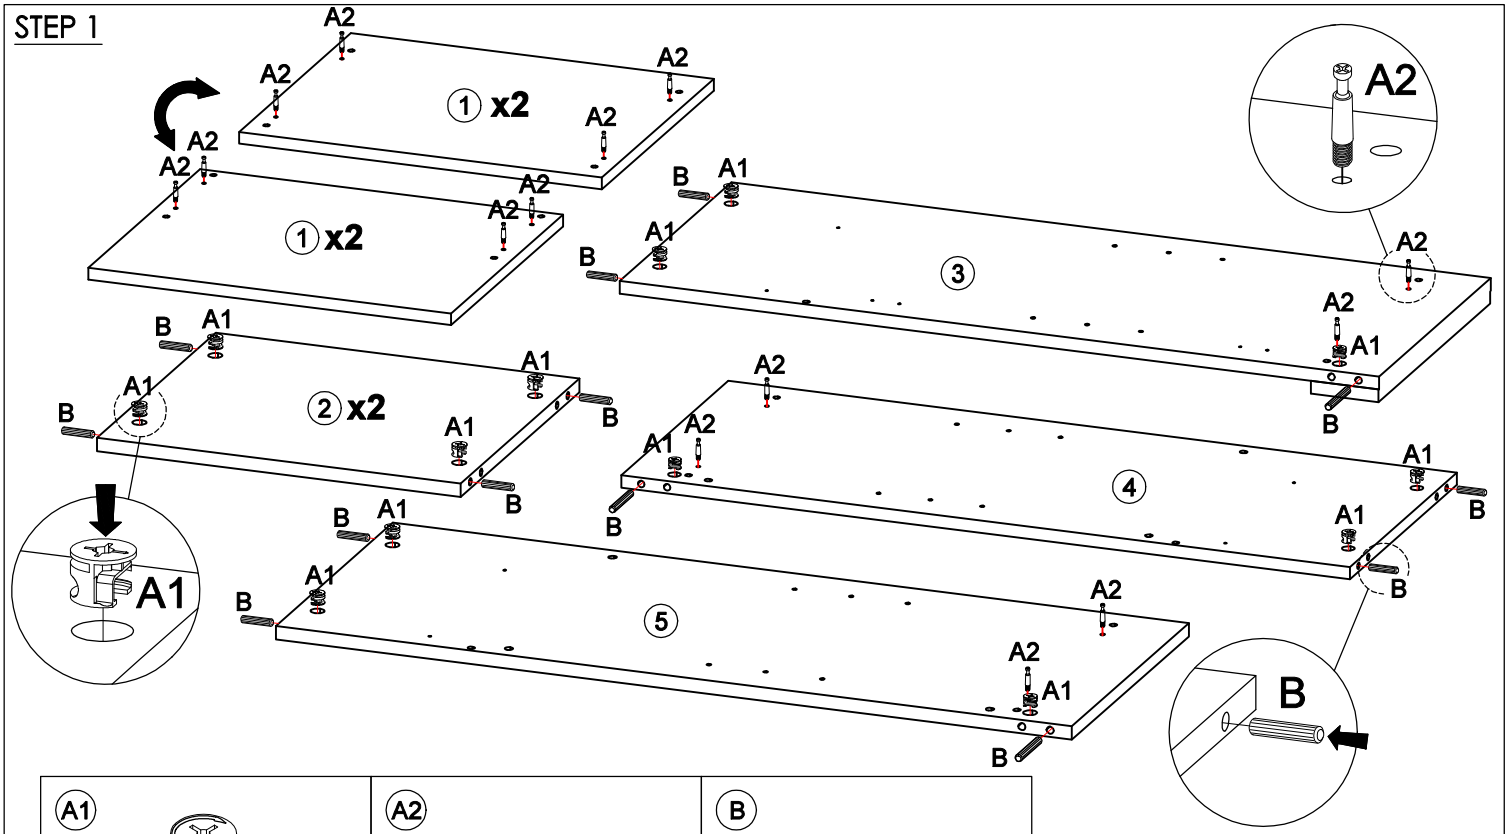


| A1 | A2 | B |
|---|---|---|
| |  |  |
| Cam lock x 17 | Cam bolt x 22 | 8*30mm Dowel x 17 |

STEP 2

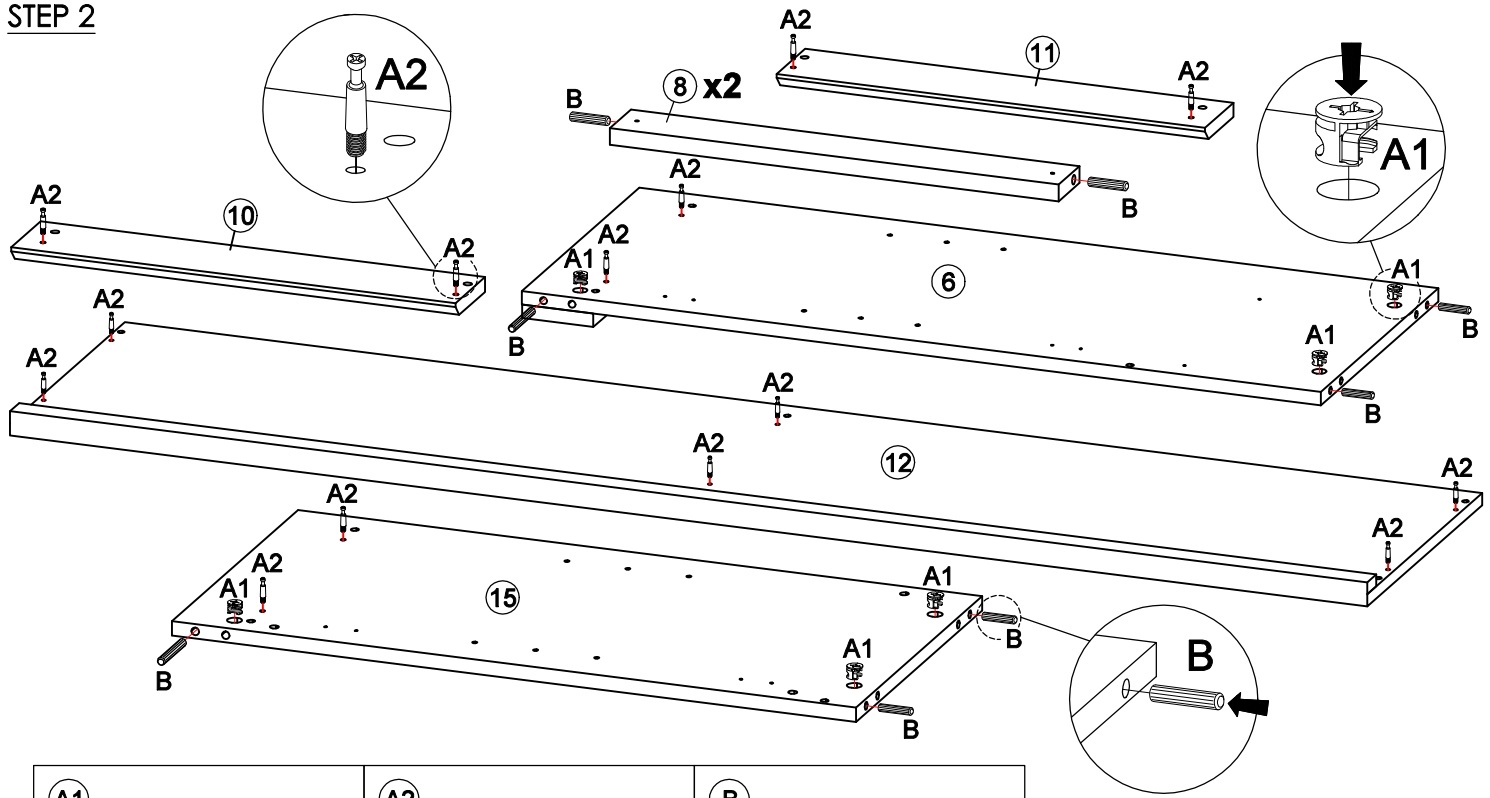


| A1 | A2 | B |
|---|---|---|
| |  | |
| Cam lock x 6 | Cam bolt x 14 | 8*30mm Dowel x 10 |

STEP 3

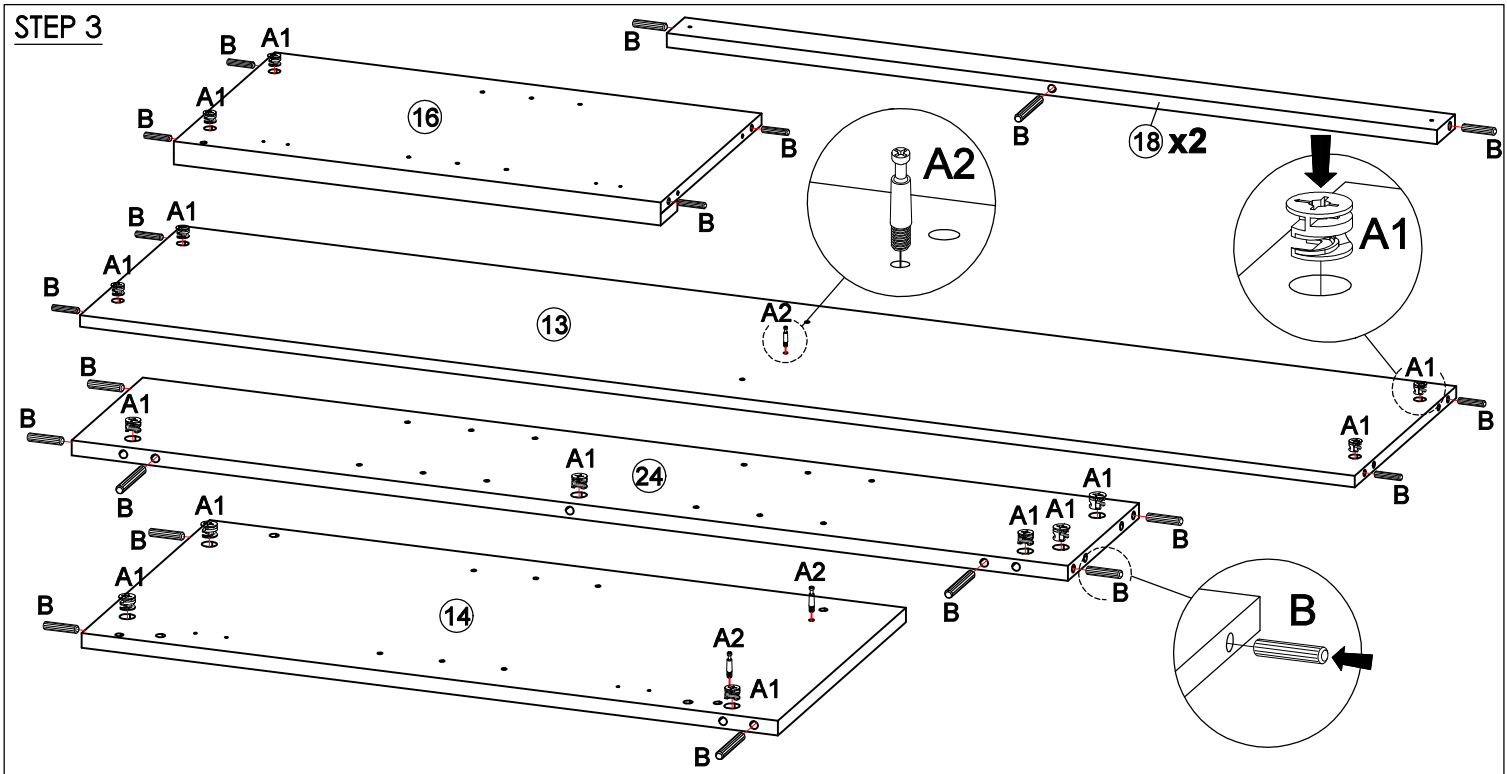


| A1 | A2 | B |
|---|---|---|
| |  |  |
| Cam lock x 14 | Cam bolt x 3 | 8*30mm Dowel x 23 |

STEP 4

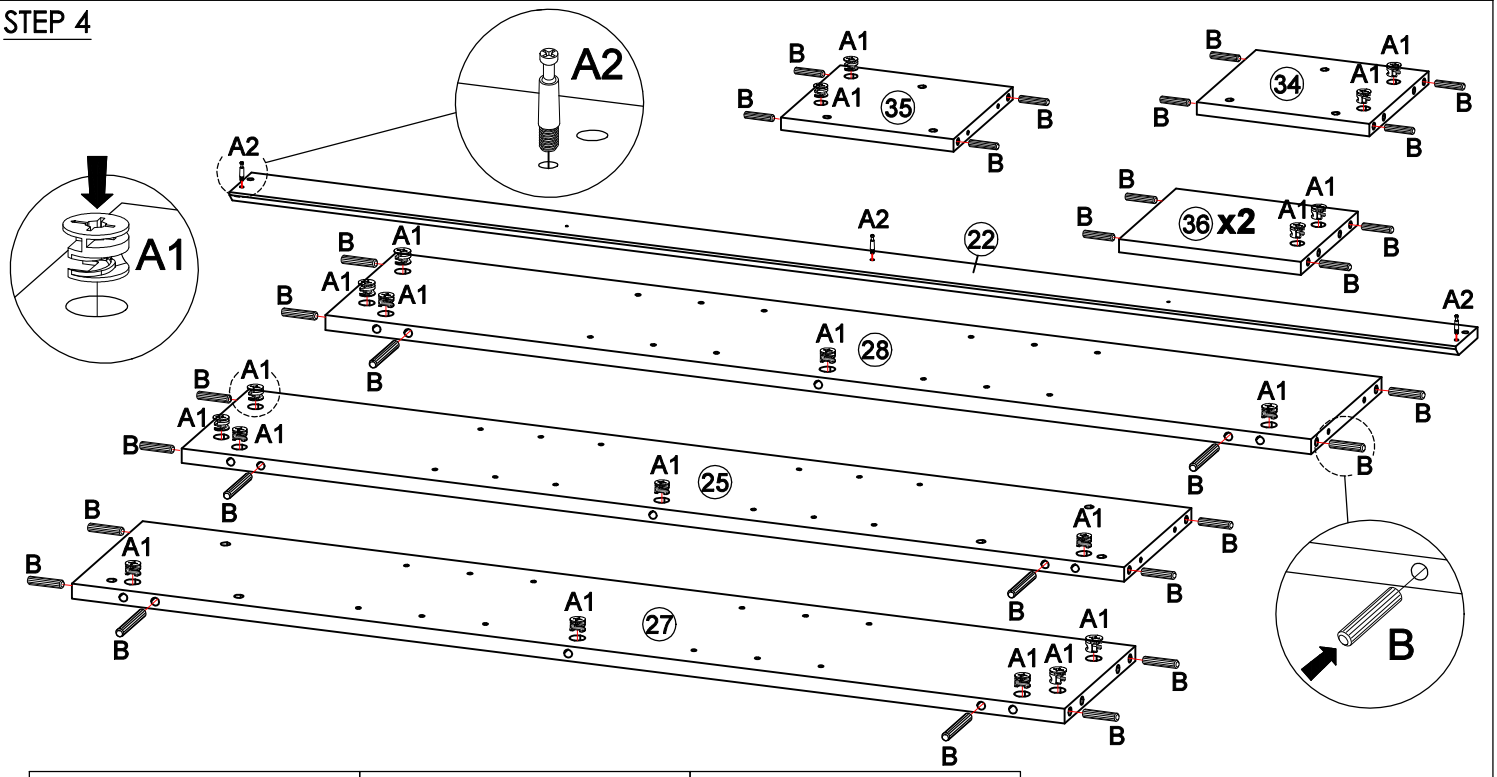


| A1 | A2 | B |
|---|---|---|
| |  |  |
| Cam lock x 23 | Cam bolt x 3 | 8*30mm Dowel x 34 |

STEP 5

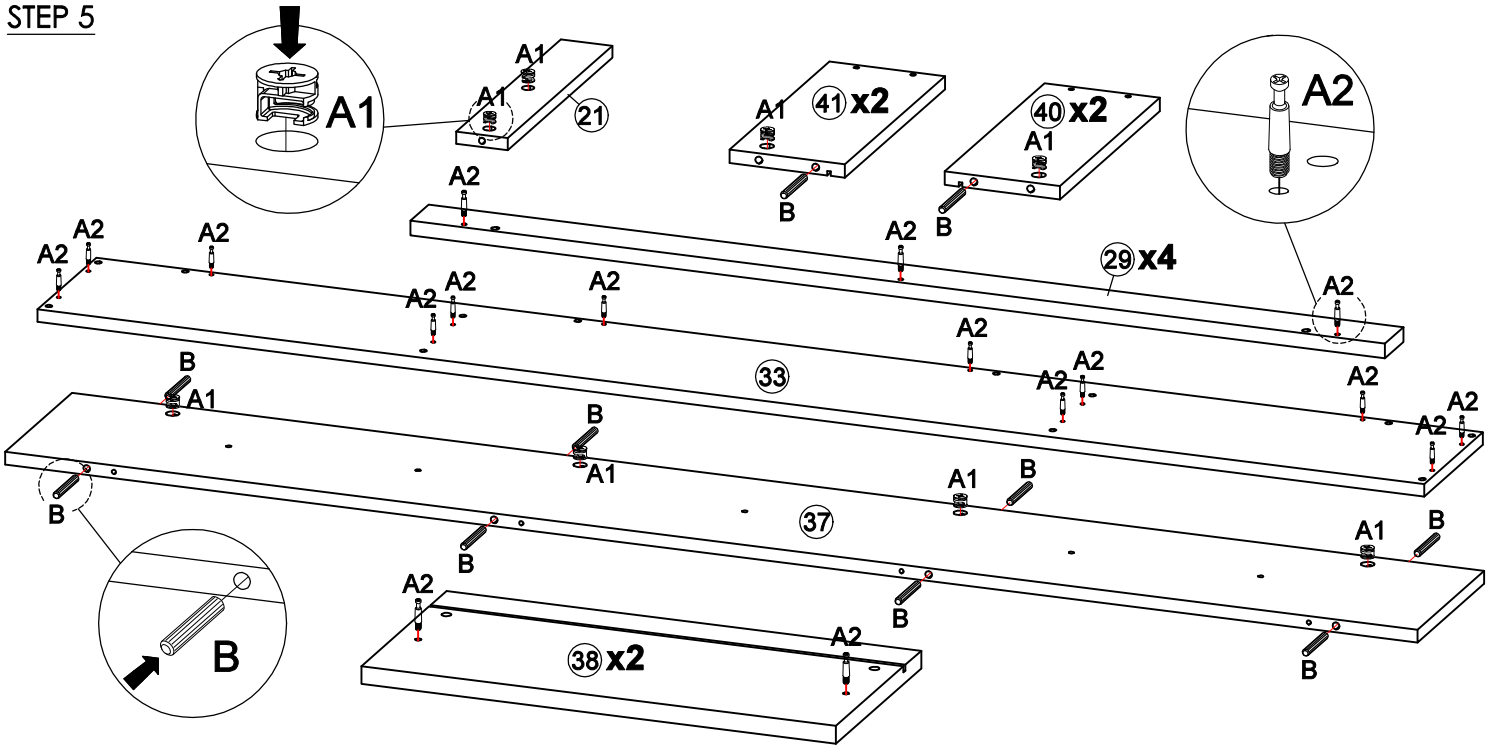


| A1 | A2 | B |
|---|---|---|
| |  |  |
| Cam lock x 10 | Cam bolt x 28 | 8*30mm Dowel x 12 |

STEP 6

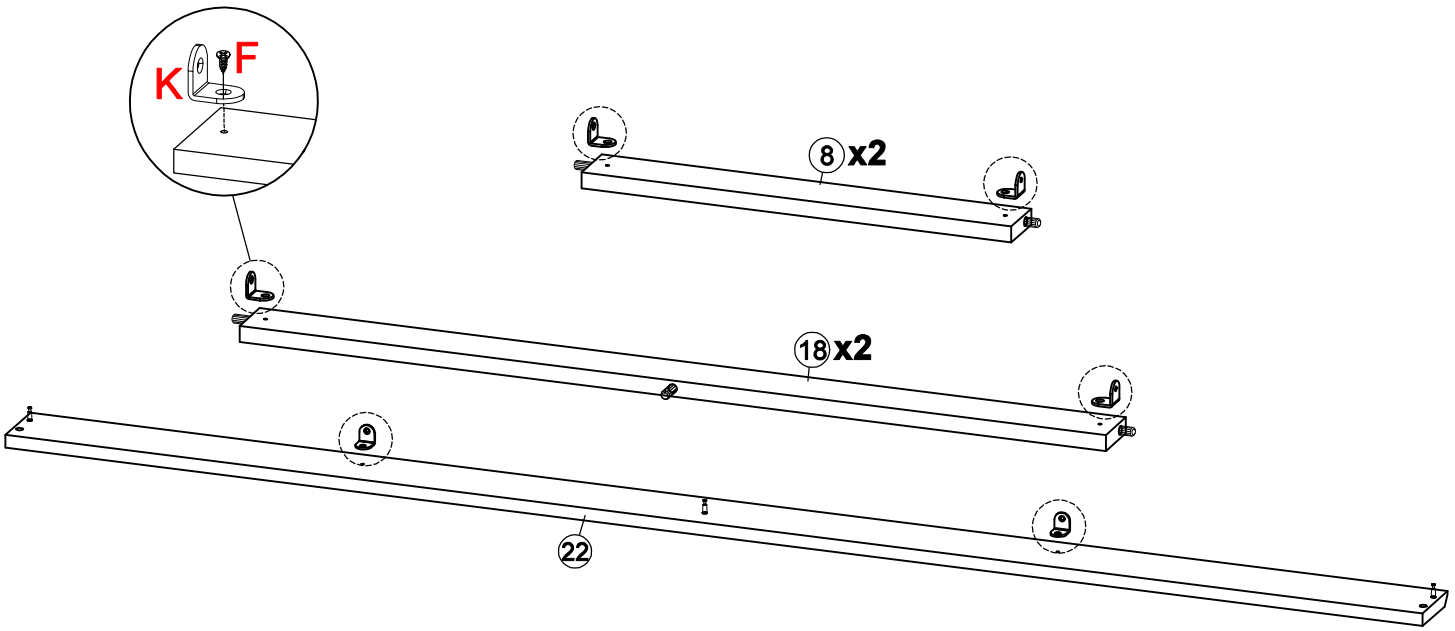


| F | K |
|---|---|
| | |
| 3.5*16mm Screw x 10 | L bracket x 10 |

STEP 7

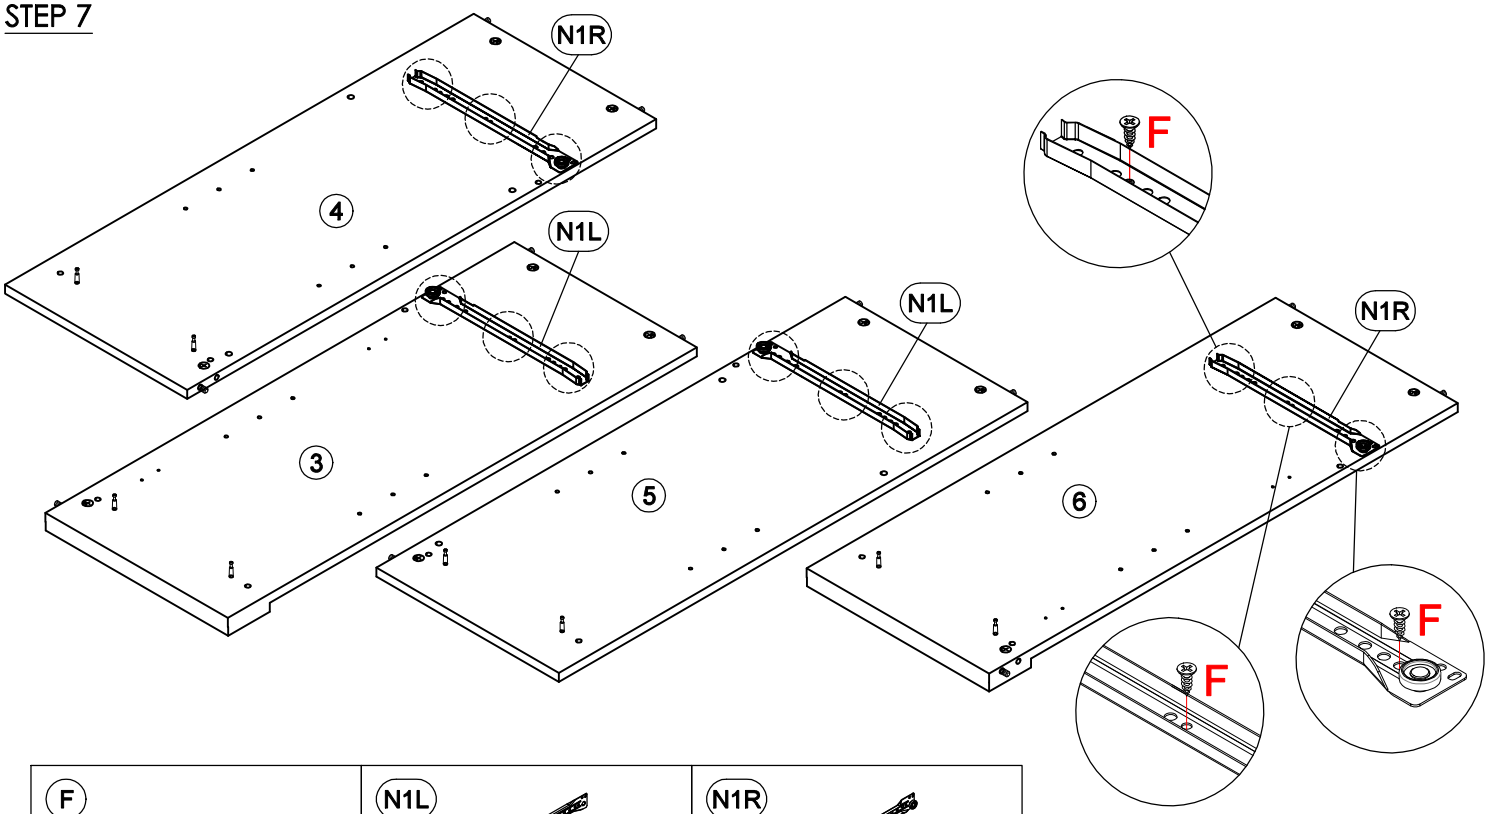


| F | N1L | N1R |
|---|---|---|
| 3.5*16mm Screw x 12 | 300mm runner x 2 | 300mm runner x 2 |

STEP 8

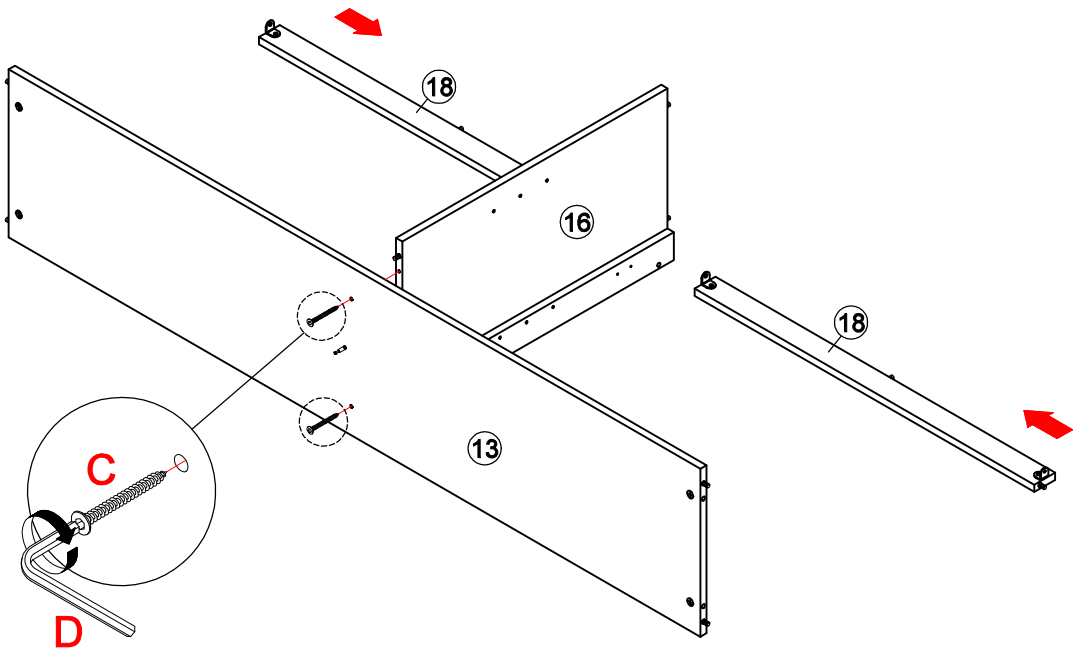


| C | D |
|---|---|
| 6*50mm Screw x 2 | Allen key x 1 |

STEP 9

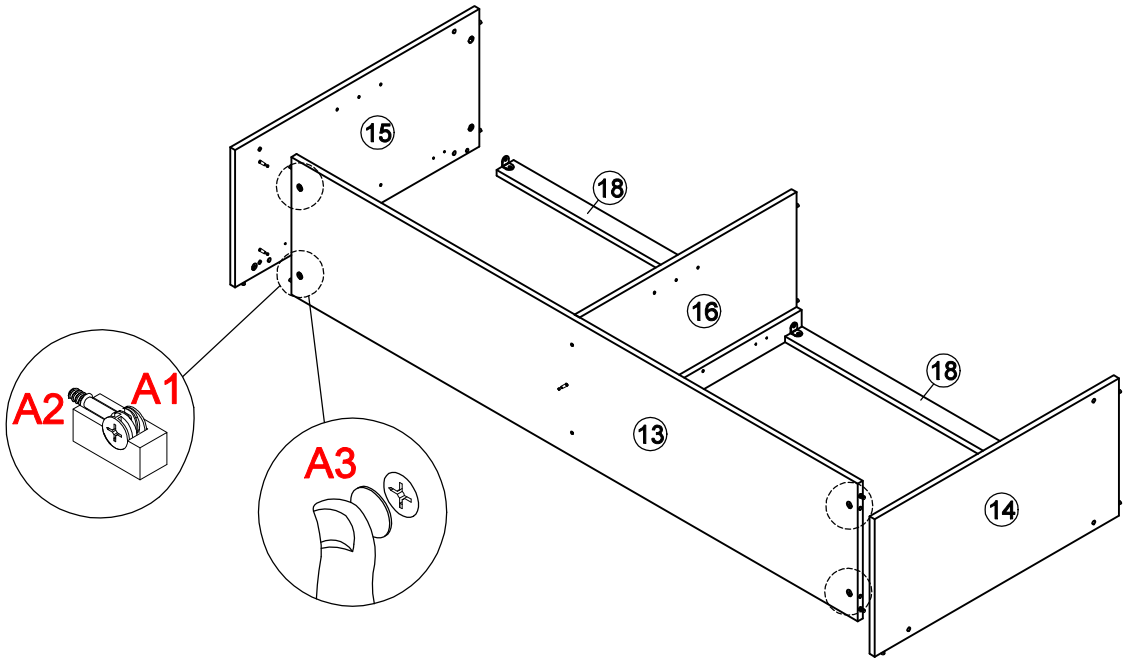


A3



Cam cap x 4

STEP 10

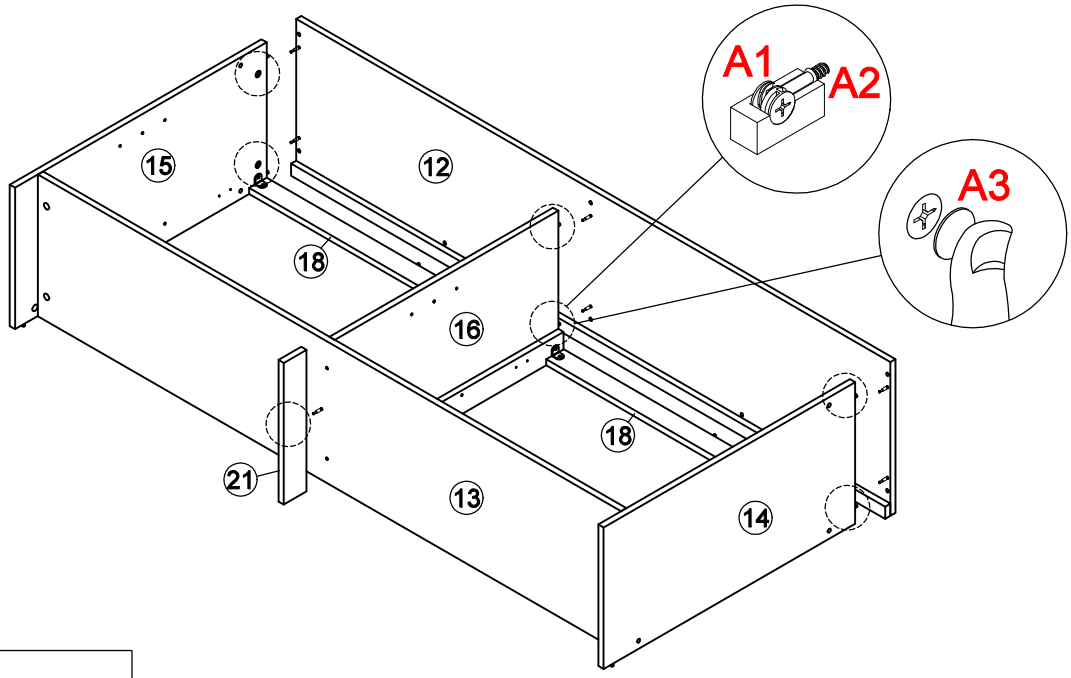


A3



Cam cap x 7

STEP 11

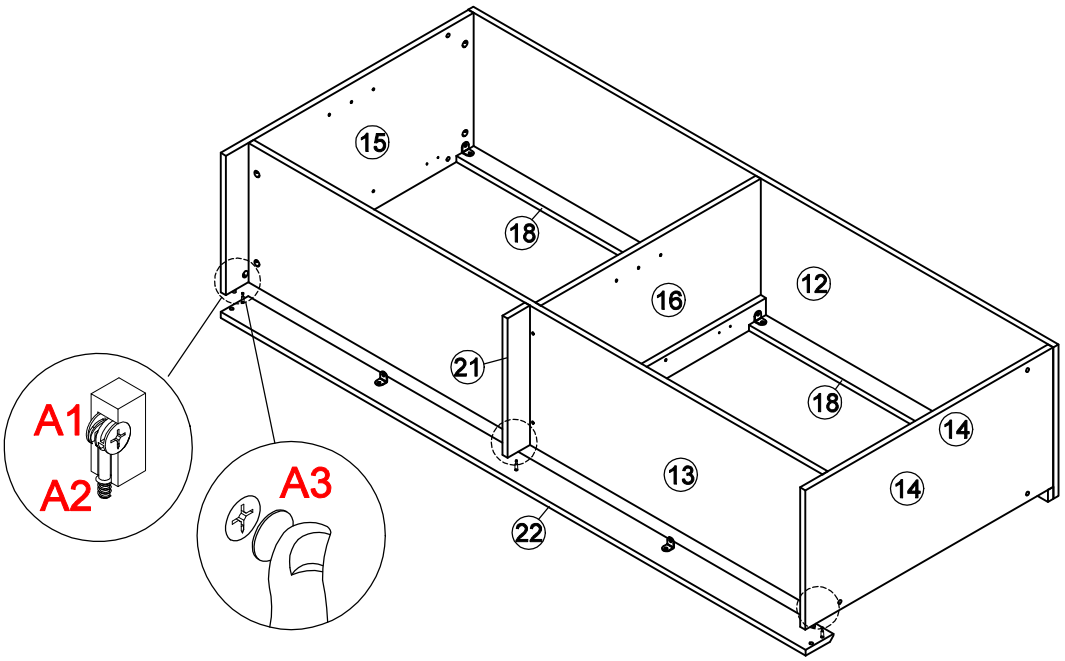


A3



Cam cap x 3

STEP 12

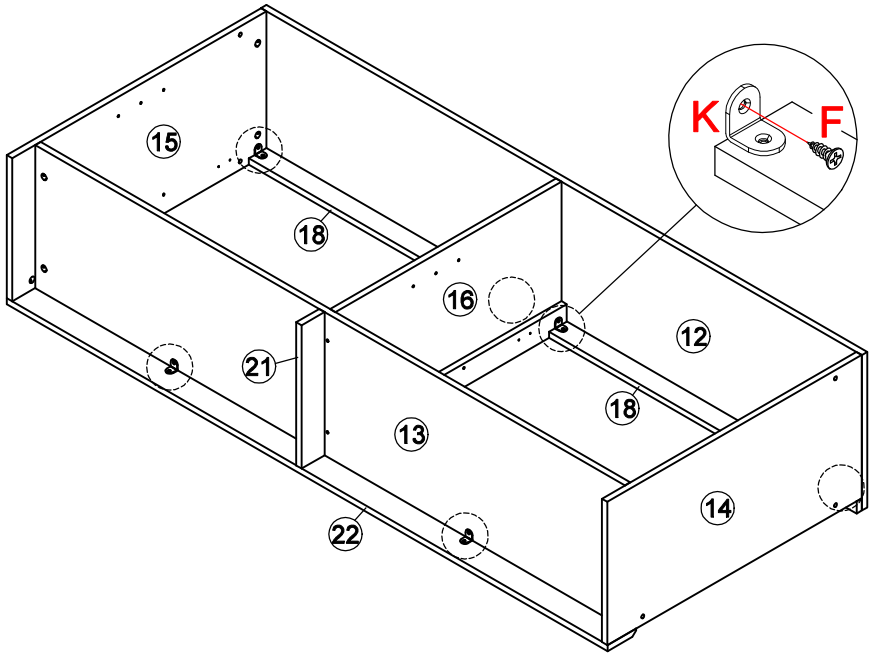


F



3.5*16mm Screw x 6

STEP 13

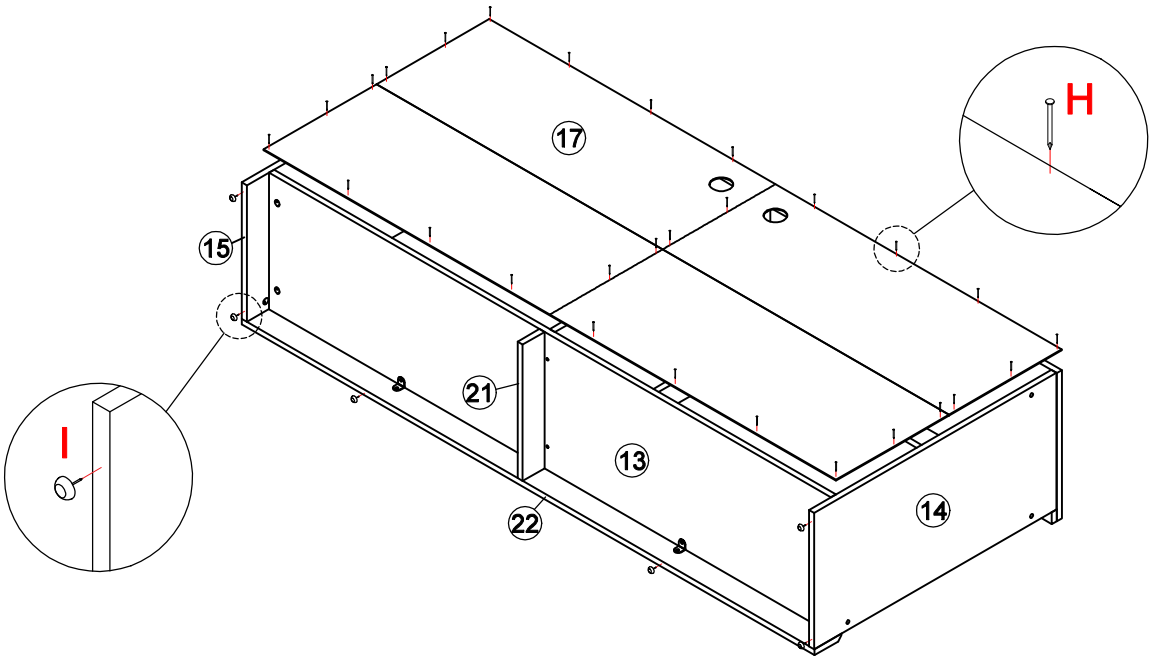


| H | I |
|---|---|
|  | |
| 16mm Nail x 28 | Nail leg x 6 |

STEP 14

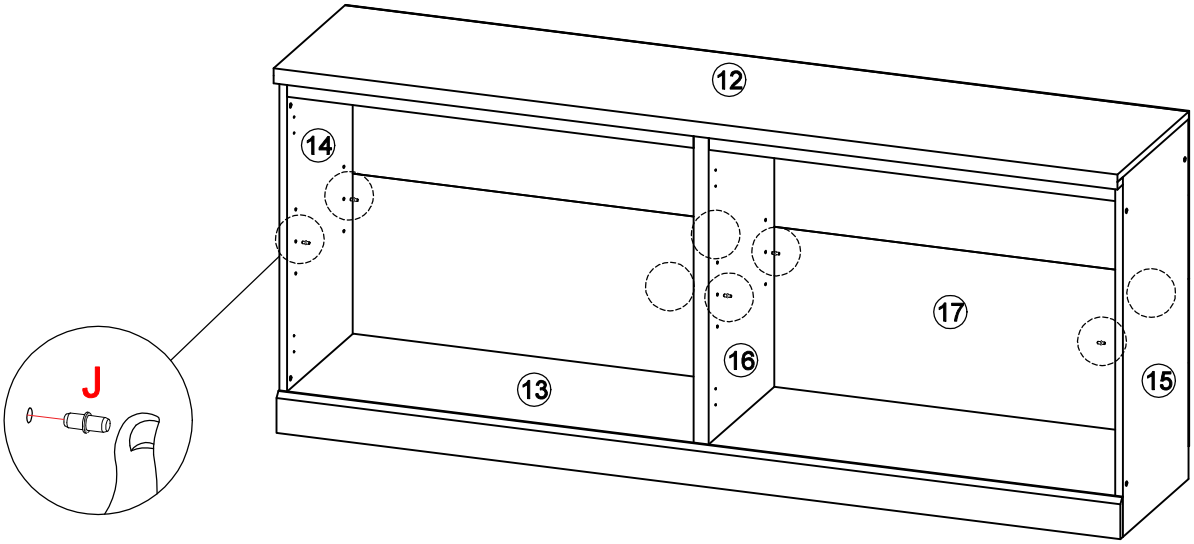


| J |
|---|
|  |
| Metal shelf support x 8 |

STEP 15

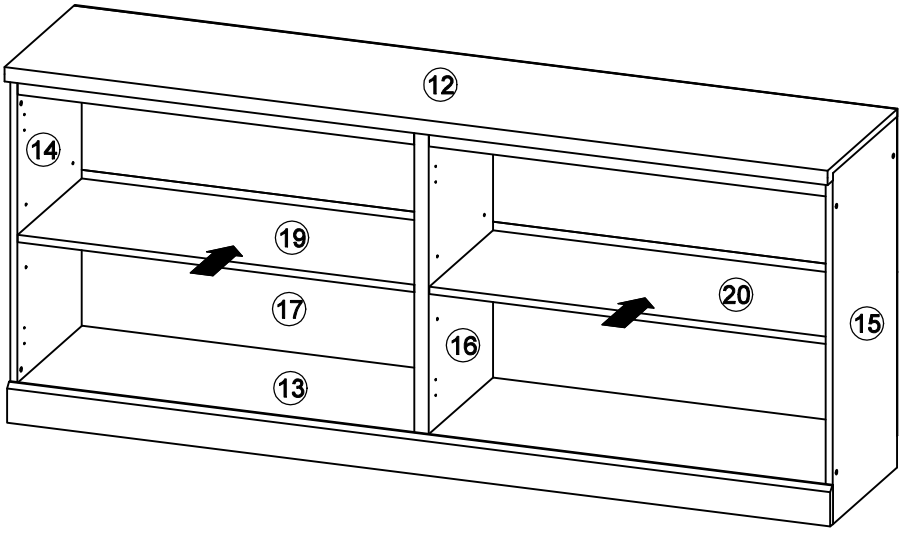


STEP 16

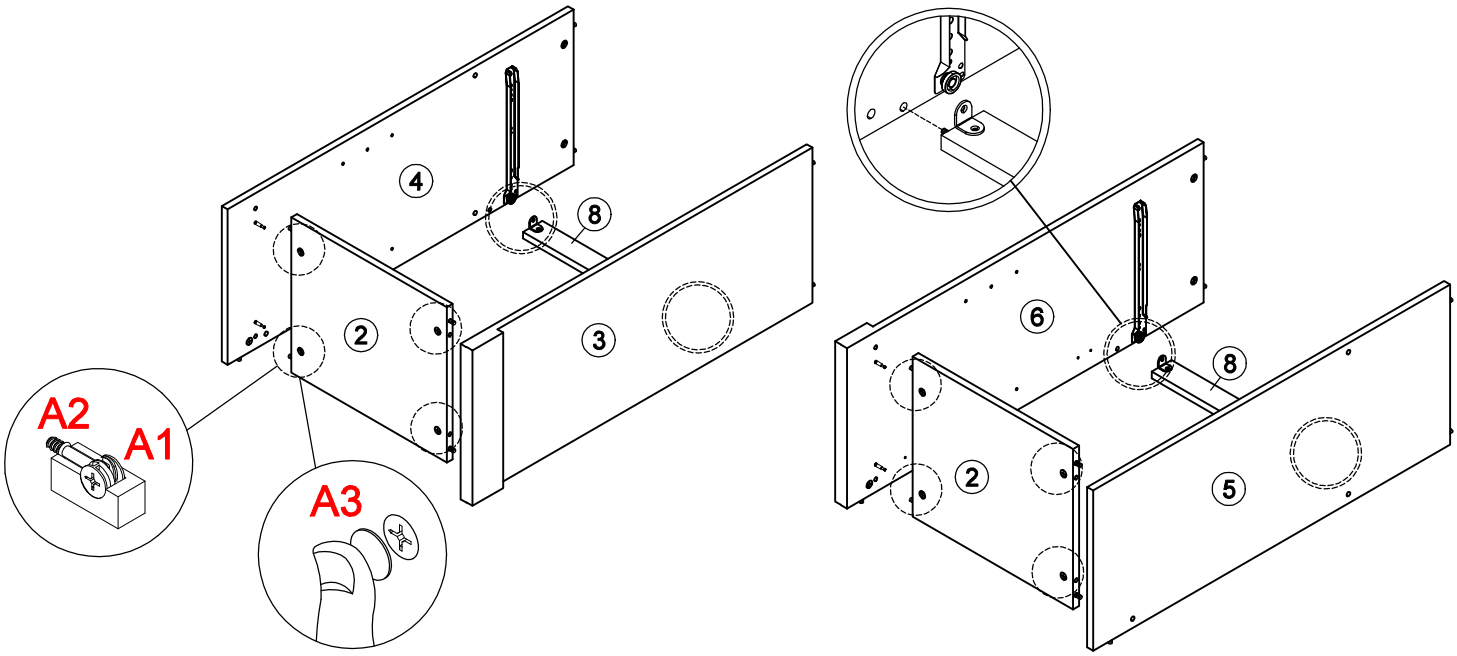


A3

Cam cap x 8

STEP 17

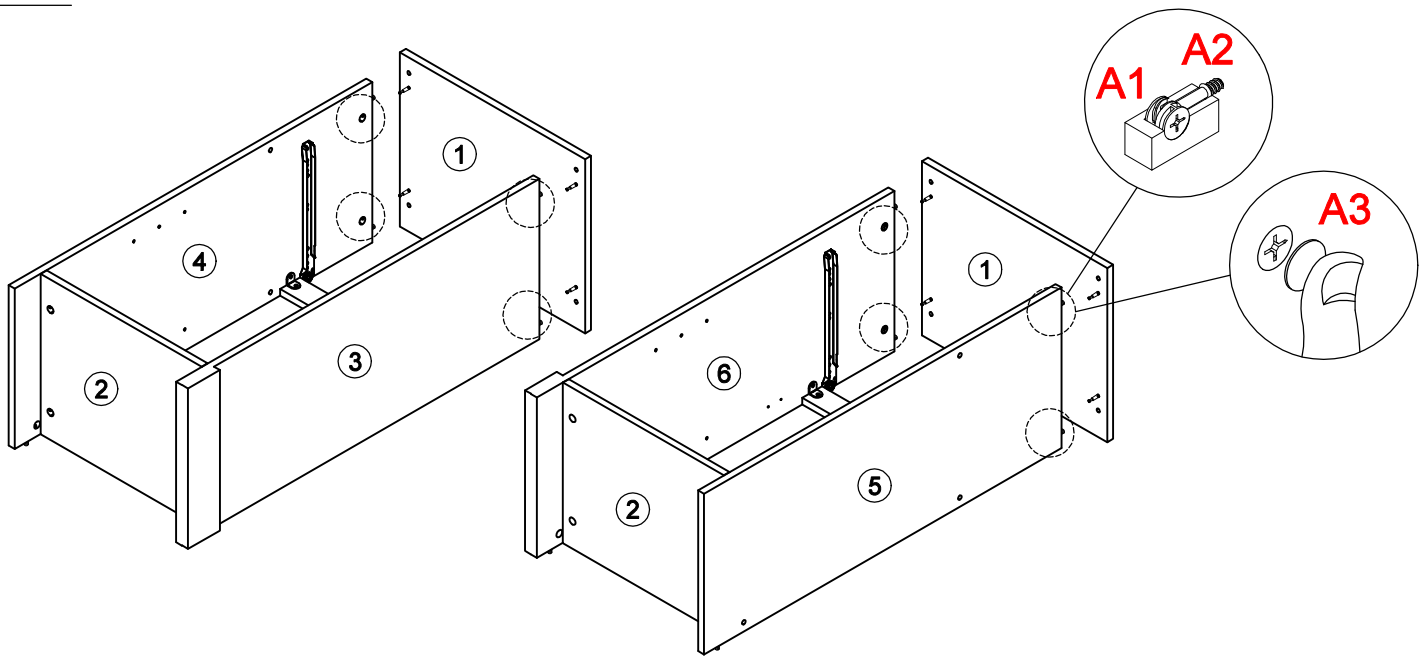


A3



Cam cap x 8

STEP 18

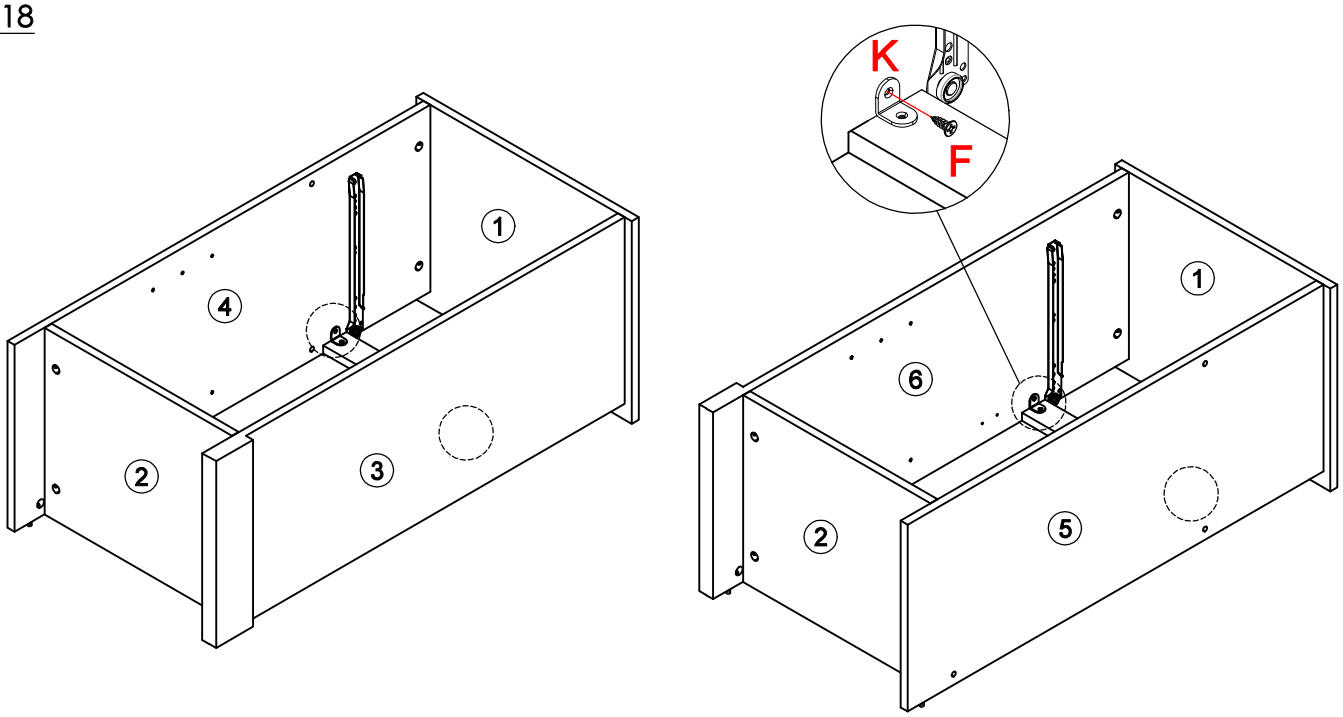


F

3.5*16mm Screw x 4

STEP 19

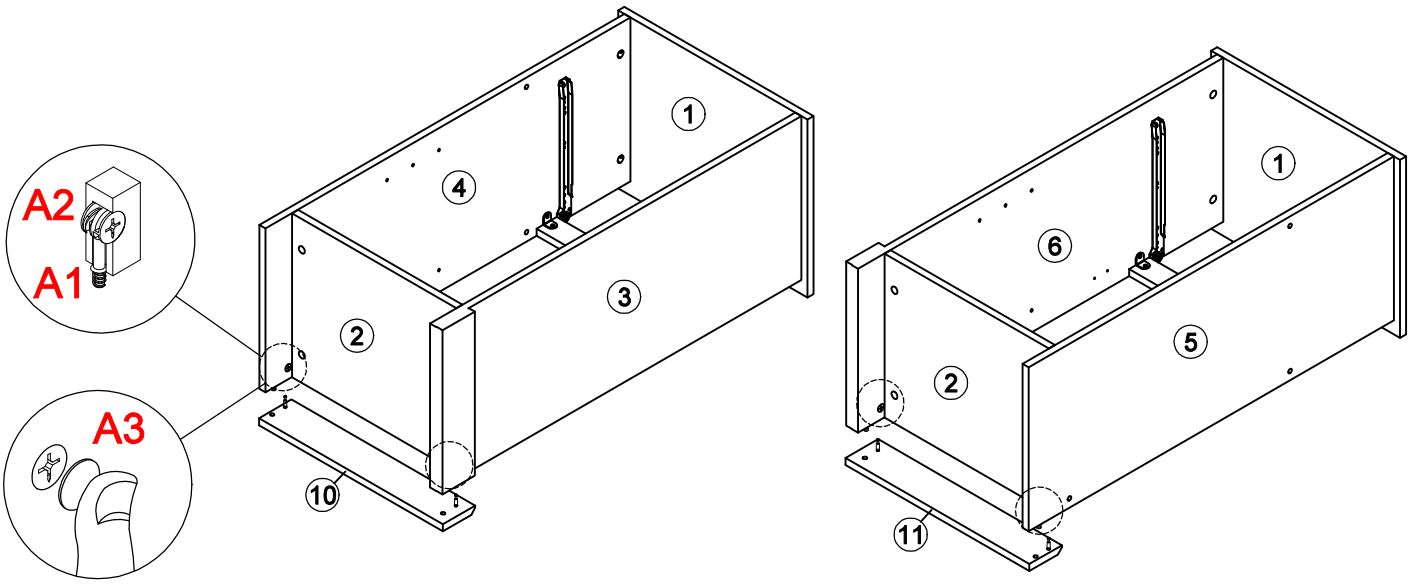


| A3 |
| --- |
|  |
| Cam cap x 4 |

STEP 20

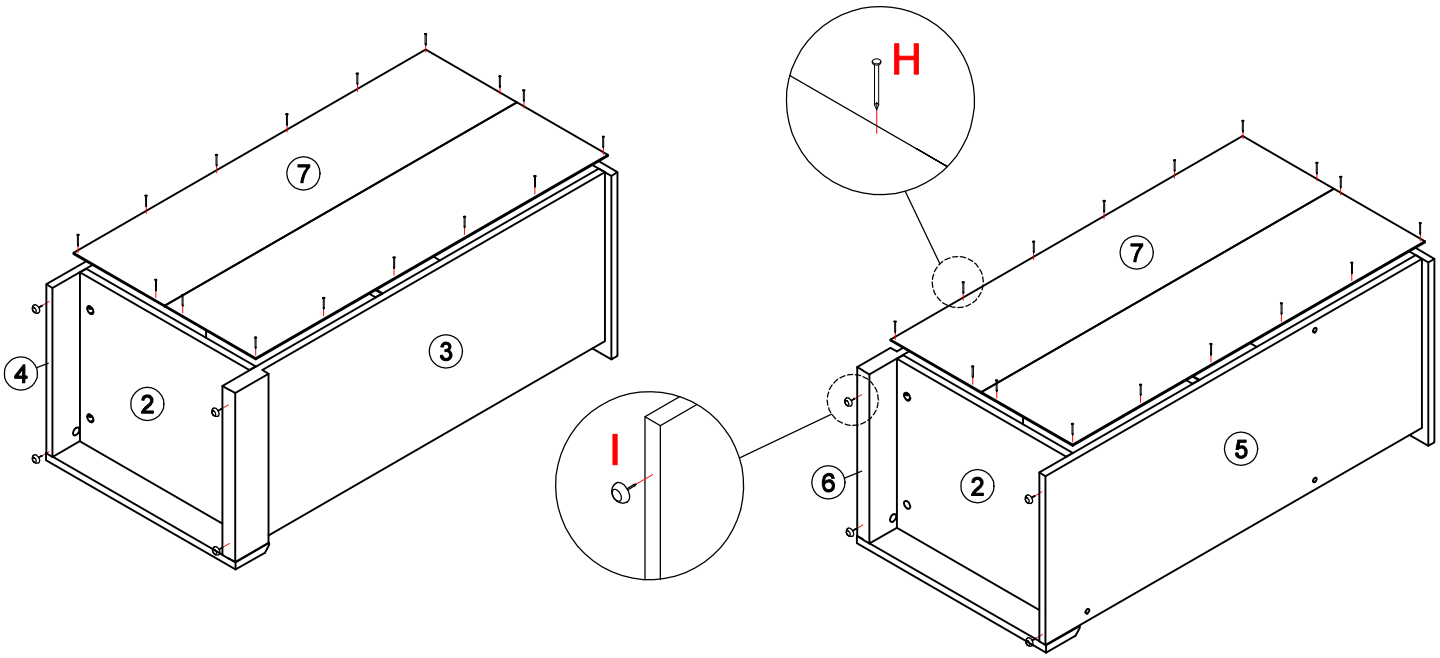


| H | I |
| --- | --- |
|  | |
| 16mm Nail x 32 | Nail leg x 8 |

STEP 21

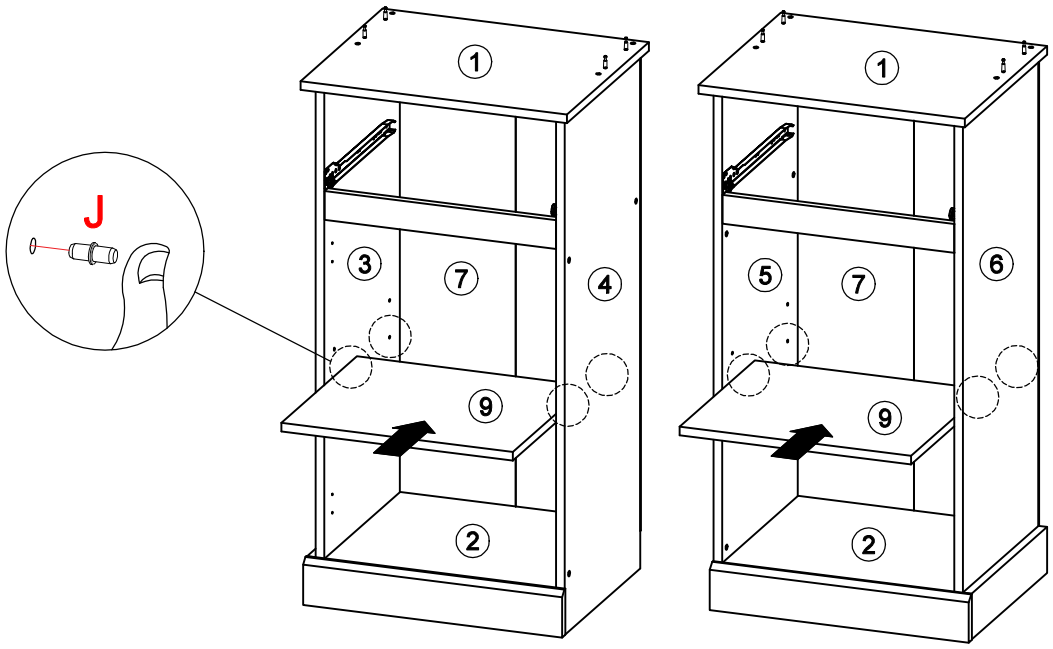


| J |
| --- |
|  |
| Metal shelf support x 8 |

STEP 22

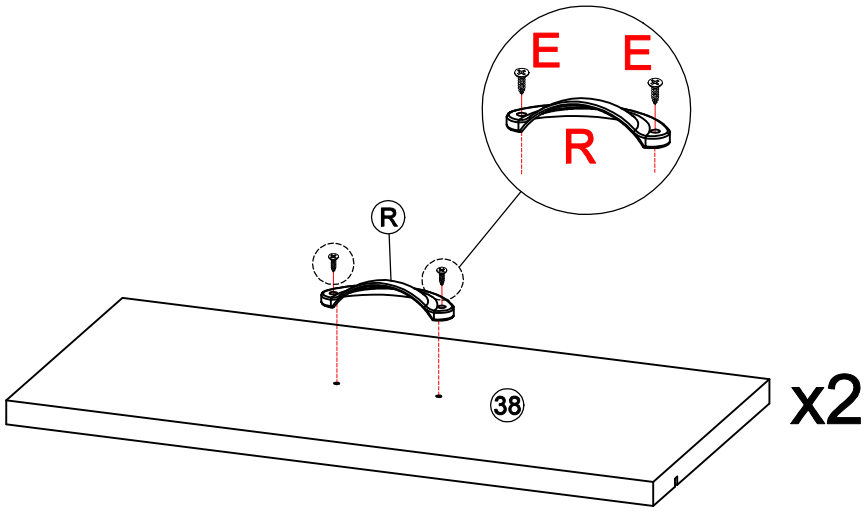


| E | R |
| --- | --- |
|  | |
| 3.5*16mm Screw x 4 | Handle x 2 |

STEP 23

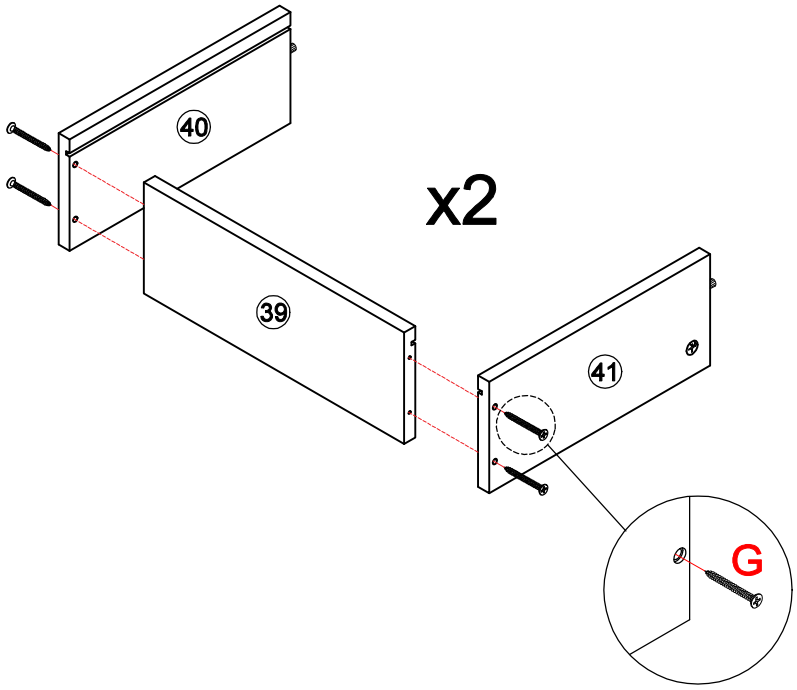


G



4*38mm Screw x 8

STEP 24

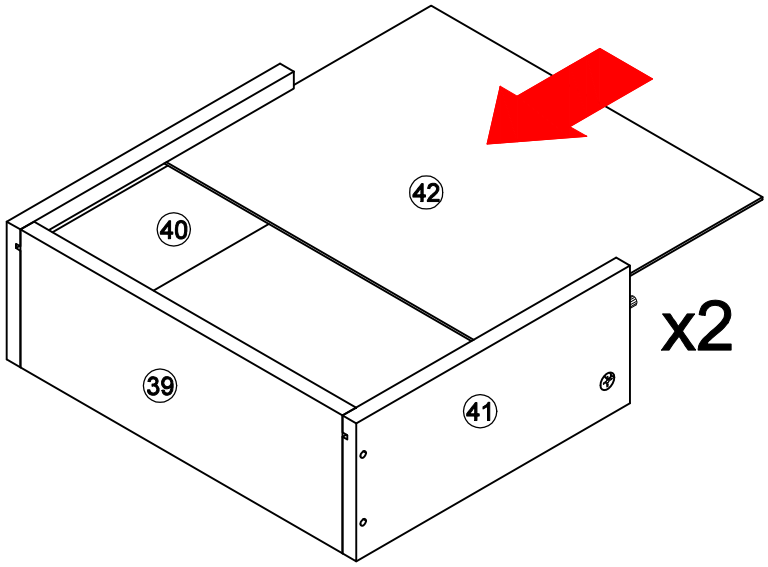

STEP 25

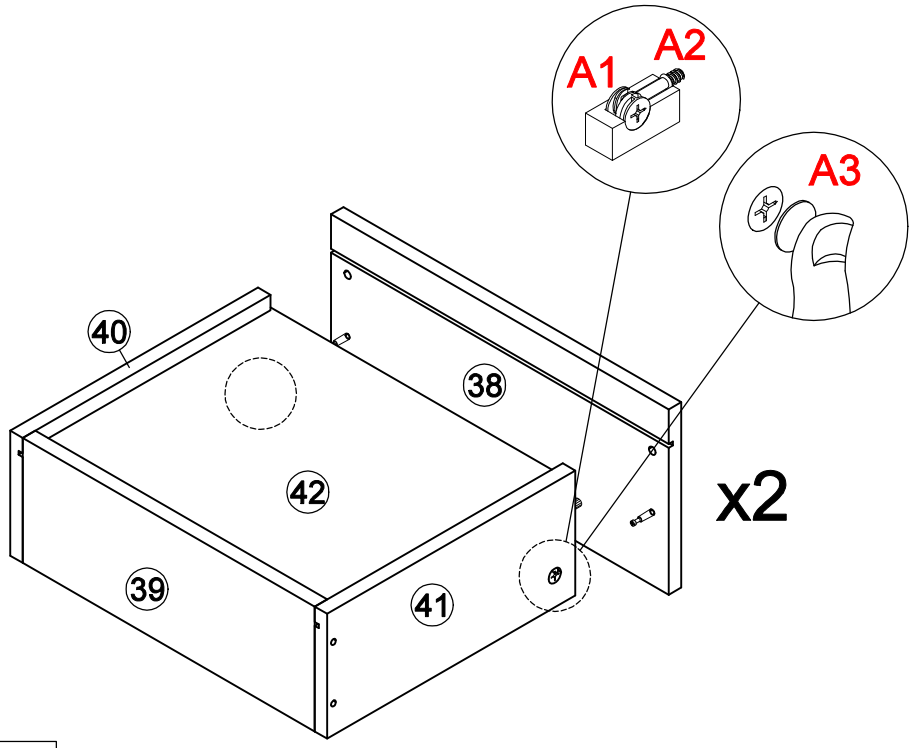


| A3 |
| --- |
|  |
| Cam cap x 4 |

STEP 26

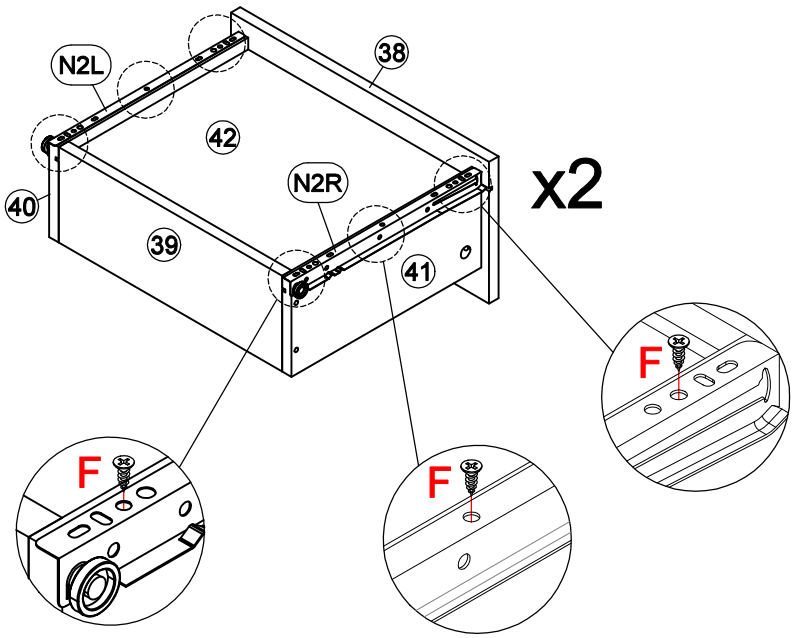


| F | N2L | N2R |
| --- | --- | --- |
| | |  |
| 3.5*16mm Screw x 12 | 300mm runner x 2 | 300mm runner x 2 |

STEP 27

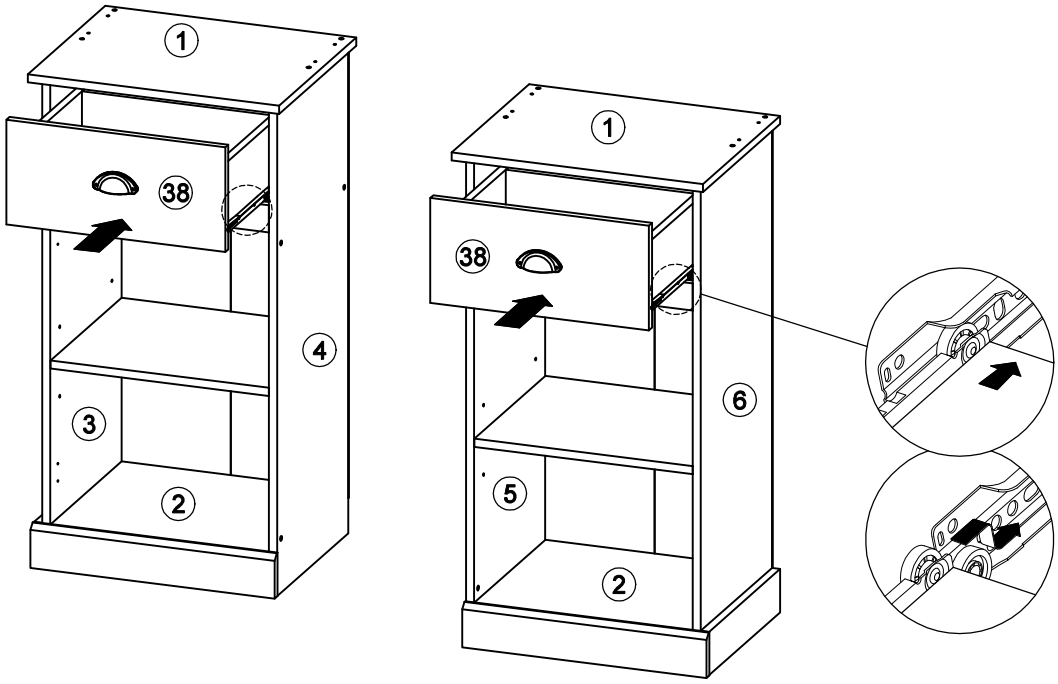


STEP 28

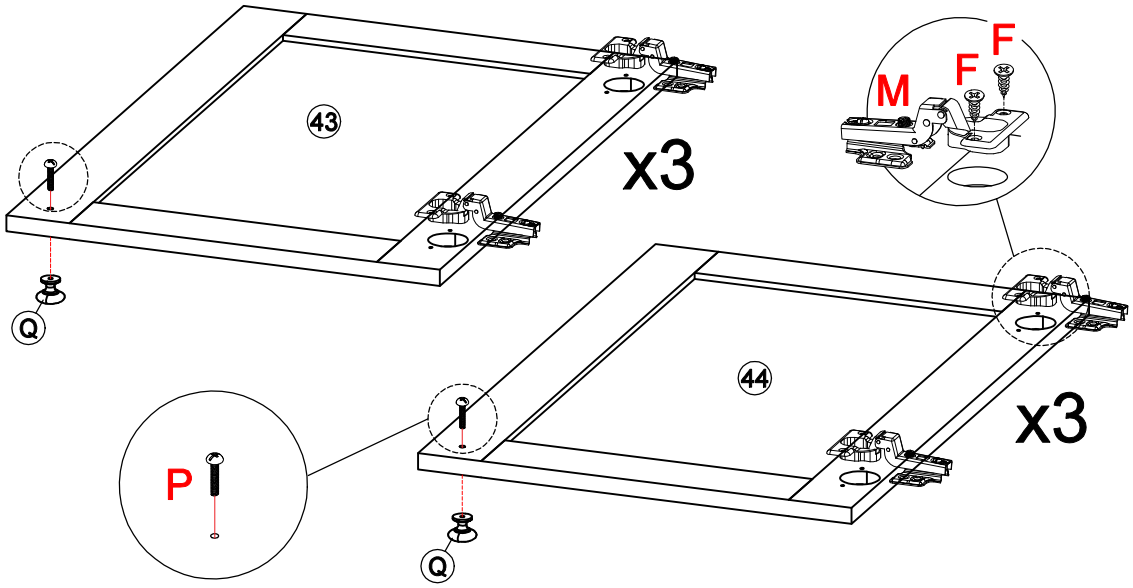


| F | M | P | Q |
|---|---|---|---|
| 3.5*16mm Screw x 24 | Hinges x 12 | 4*19mm Screw x 6 | Handle x 6 |

STEP 29

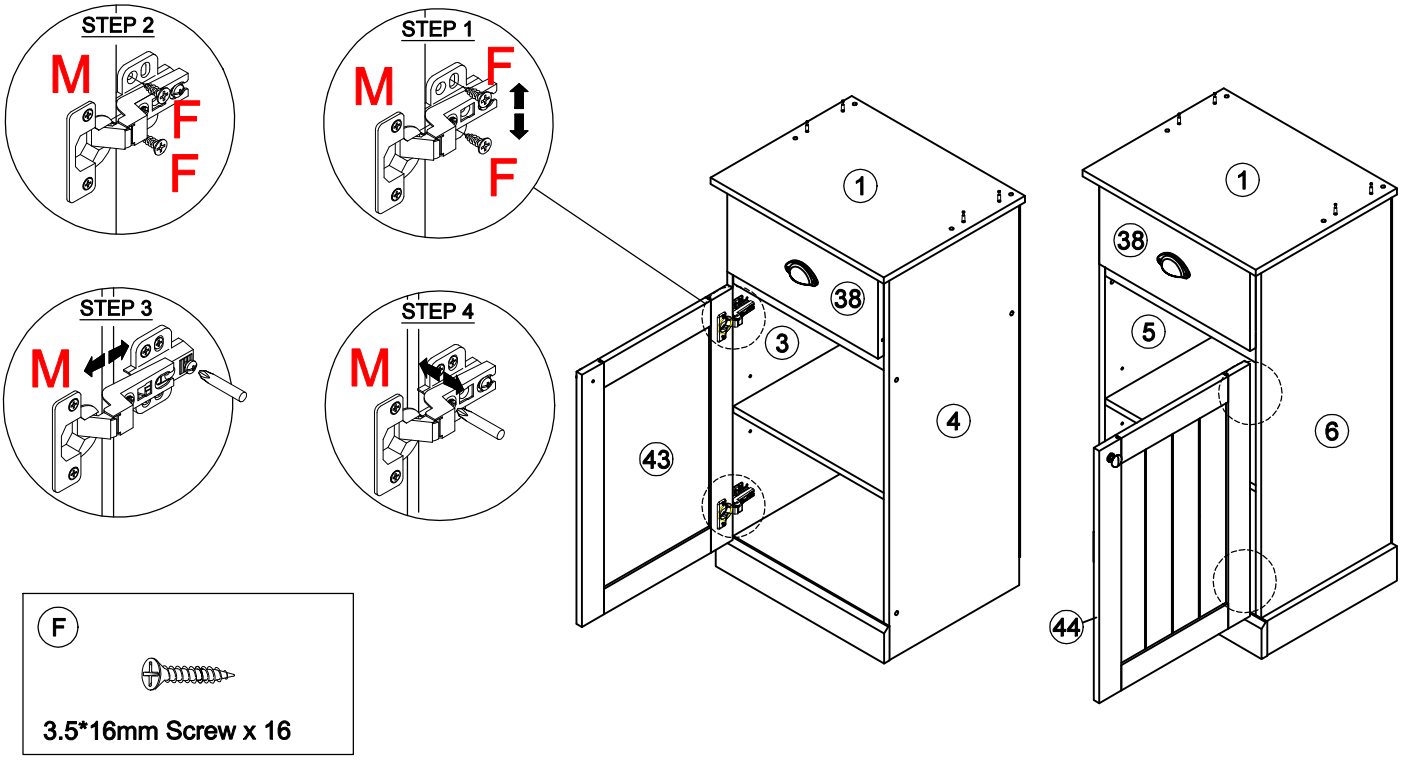


F

3.5*16mm Screw x 16

## HINGE ADJUSTMENT GUIDE

It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

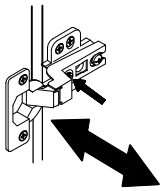

To adjust the door horizontal loosen the screw as shown by turning clockwise or anti-clockwise.

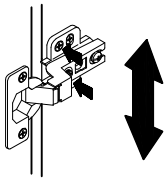

To adjust the door vertically loosen the screw as shown and move up and down as needed.

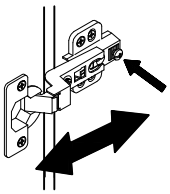

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

STEP 30

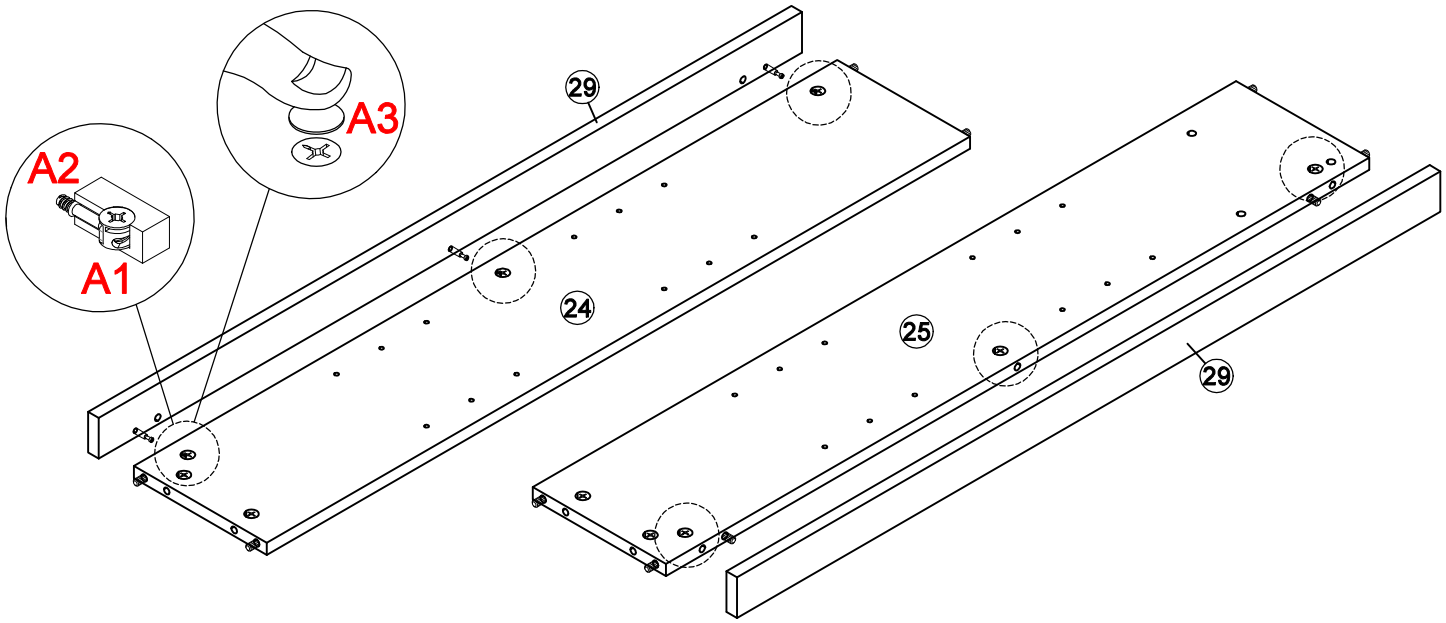


A3



Cam cap x 6

STEP 31

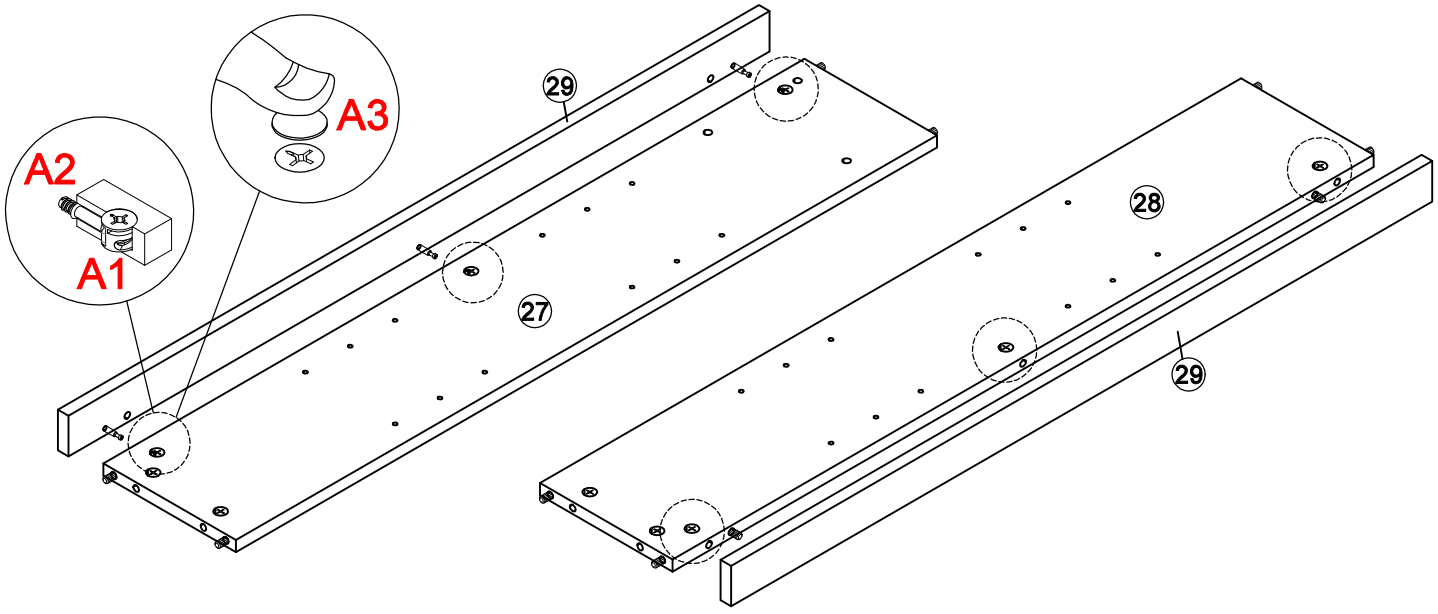


A3



Cam cap x 6

STEP 32

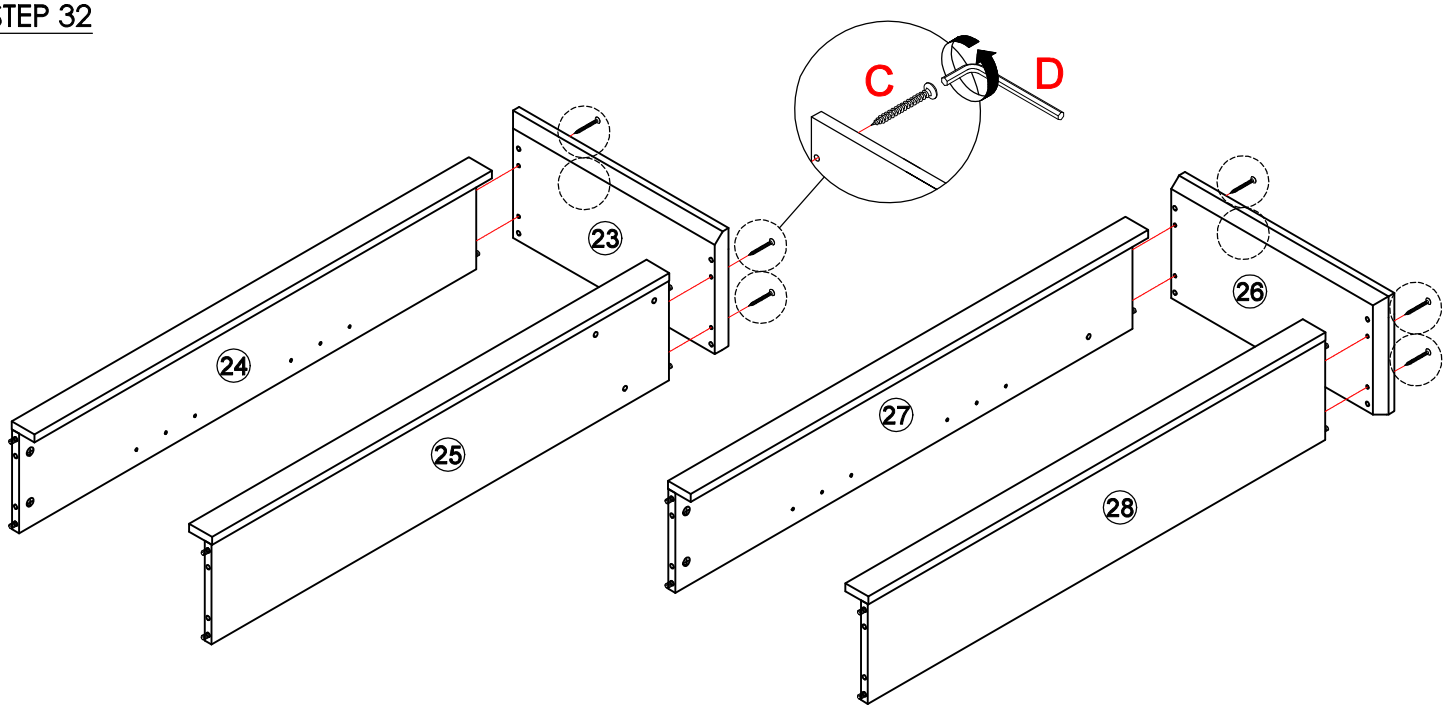


| C | D |
|---|---|
| 6*50mm Screw x 8 | Allen key x 1 |

STEP 33

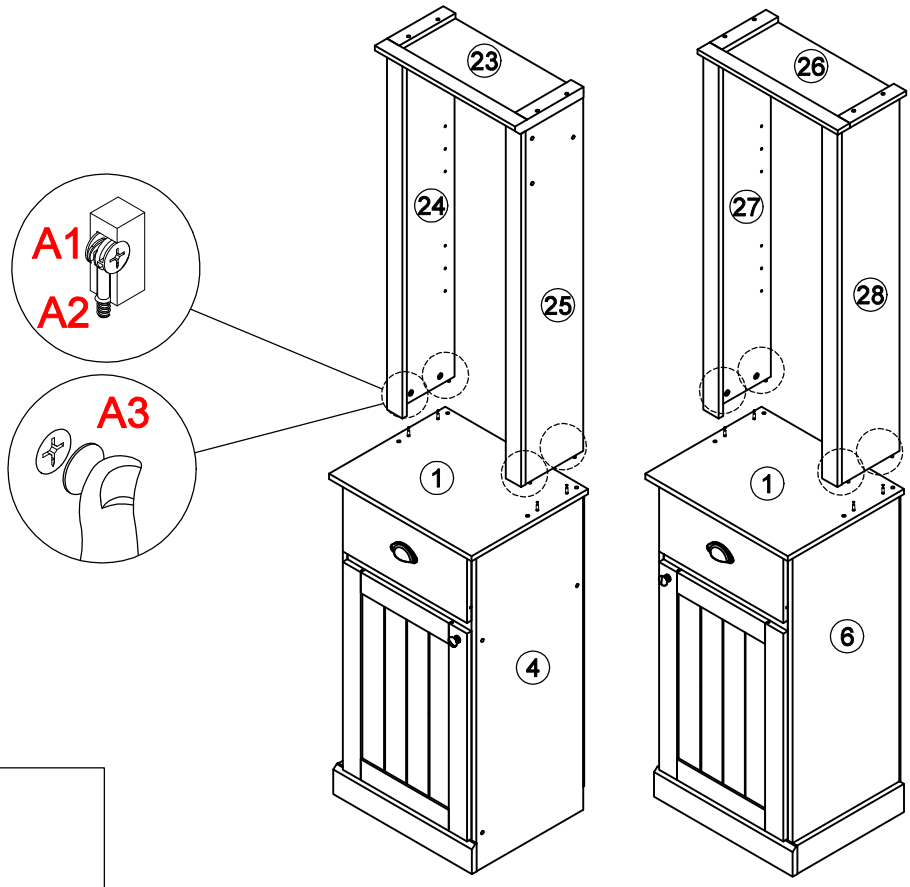


| A3 |
|---|
| Cam cap x 8 |

STEP 34

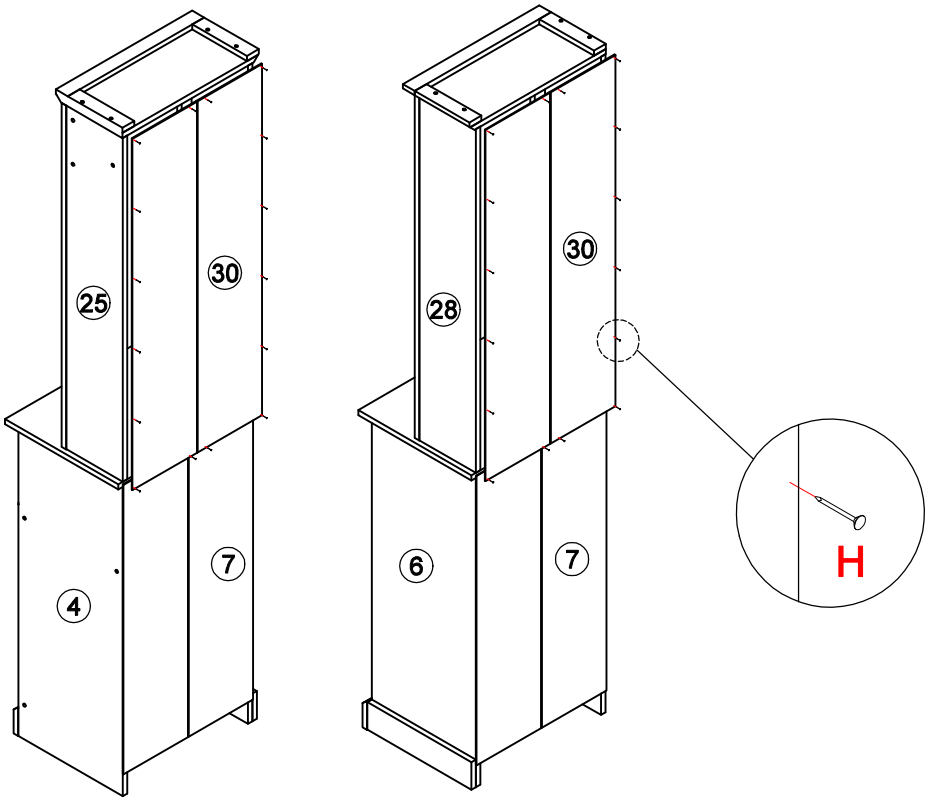


H



16mm Nail x 32

STEP 35

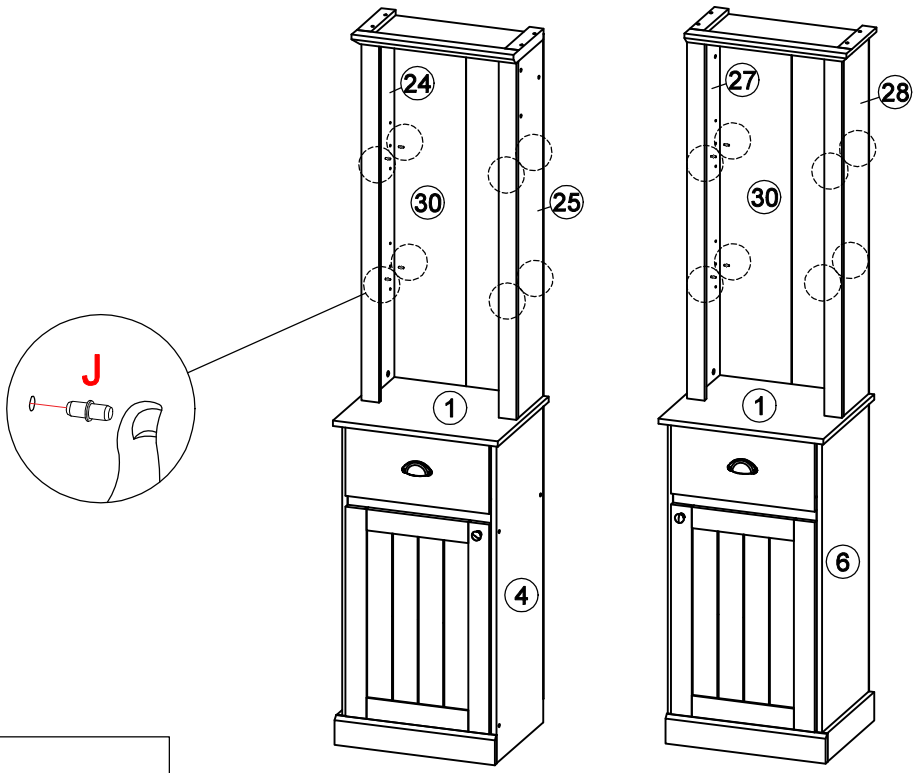


J



Metal shelf support x 16

STEP 36

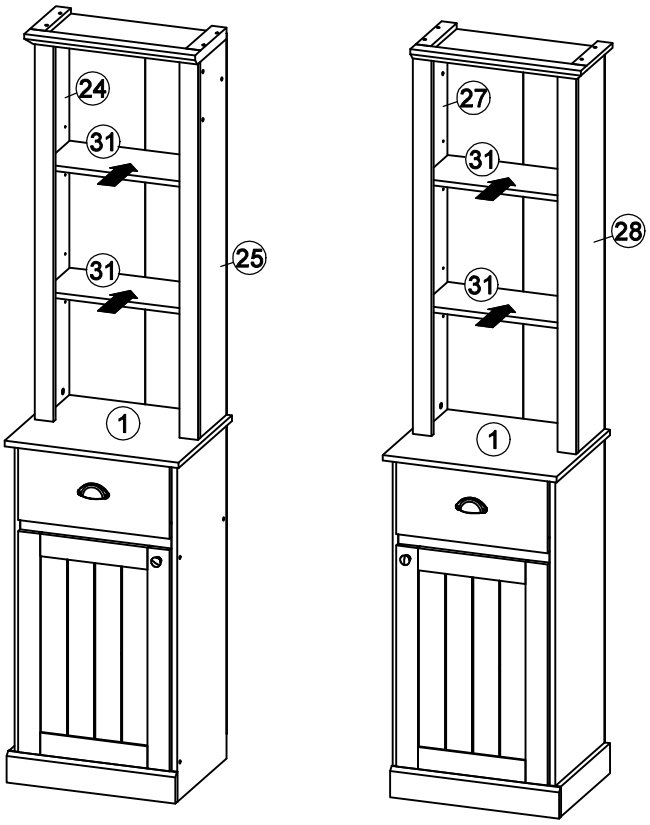


STEP 37

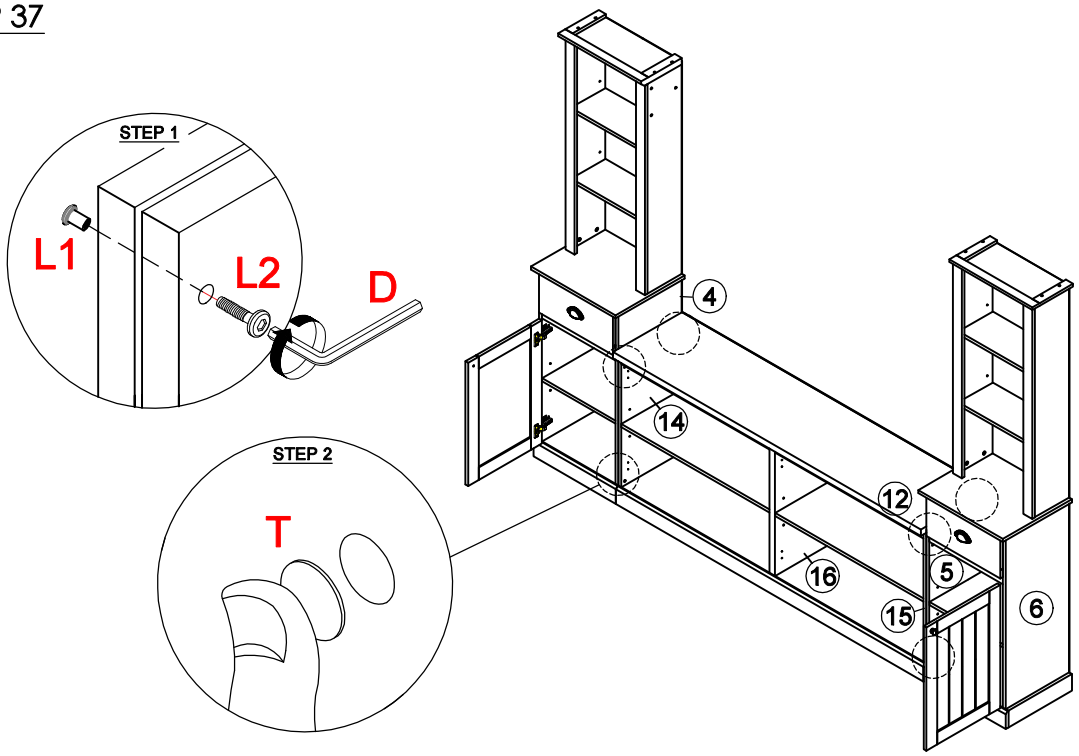


| D | L1 | L2 | T |
|---|---|---|---|
| Allen key x 1 | 6*12mm Joint nut x 6 | 6*20mm Screw x 6 | Sticker x 12 |

STEP 38

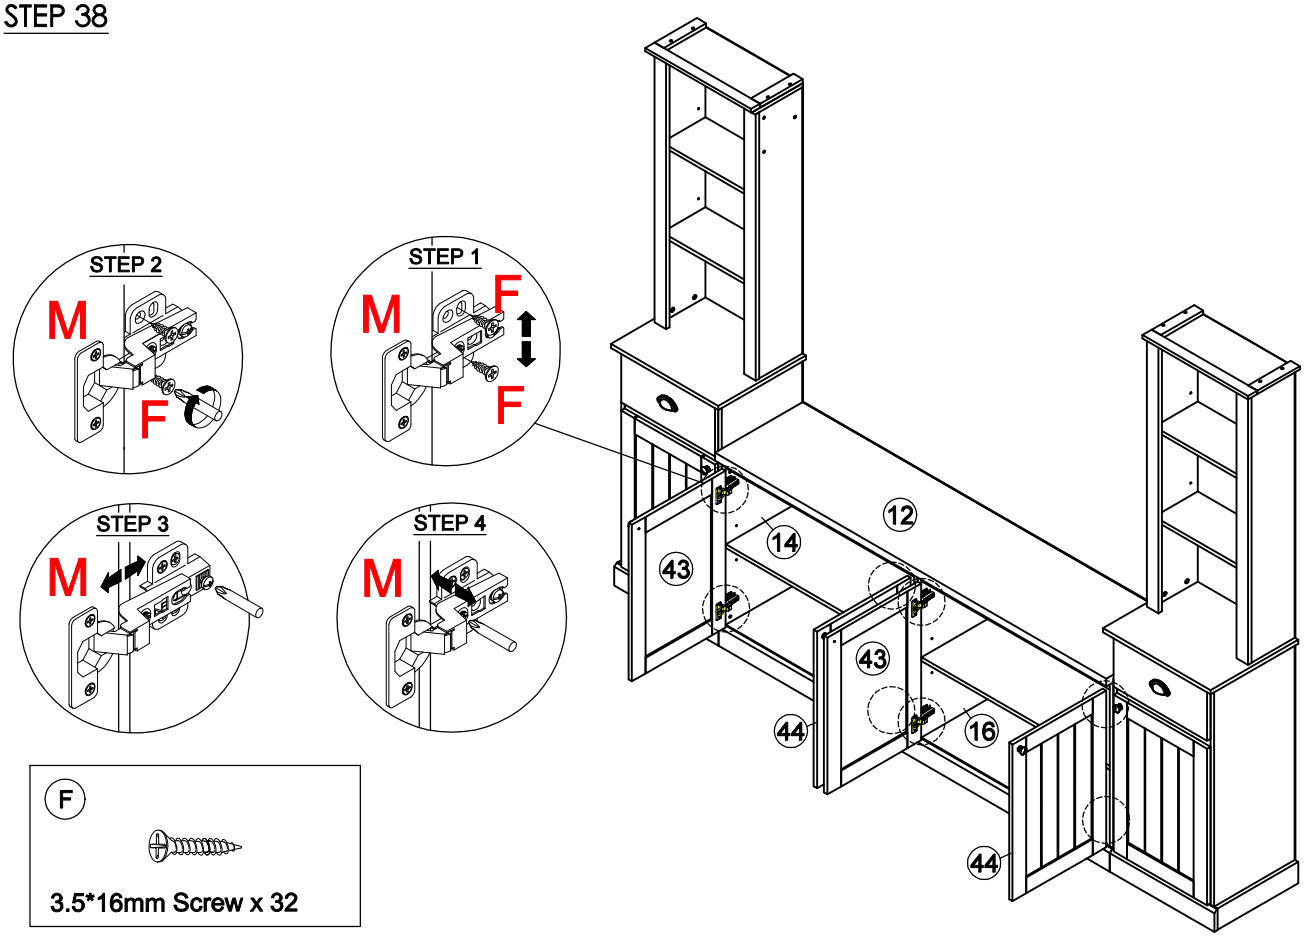


F

3.5*16mm Screw x 32

## HINGE ADJUSTMENT GUIDE

It may be necessary to adjust the hinges so that the doors align.
Use the instructions below as a guide.

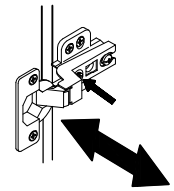

To adjust the door horizontal loosen the screw as shown by turning clockwise or anti-clockwise.

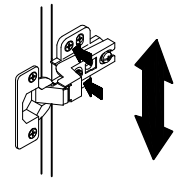

To adjust the door vertically  loosen the screw as shown and move up and down as needed.

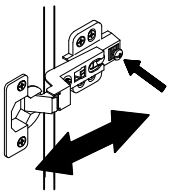

To adjust the gap  from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

STEP 39

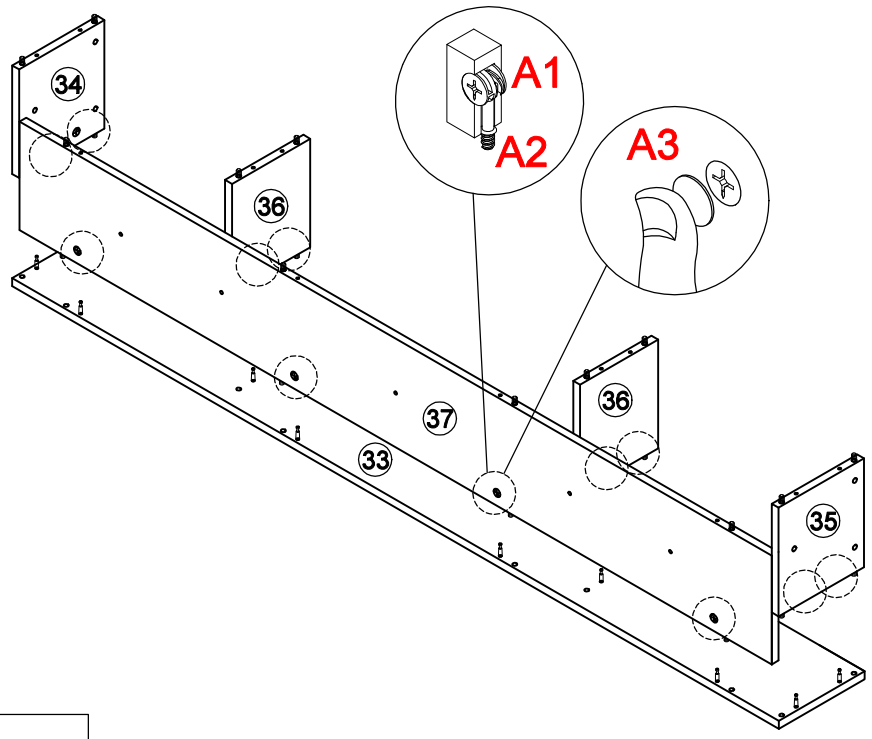


| A3 |
| --- |
|  |
| Cam cap x 12 |

STEP 40

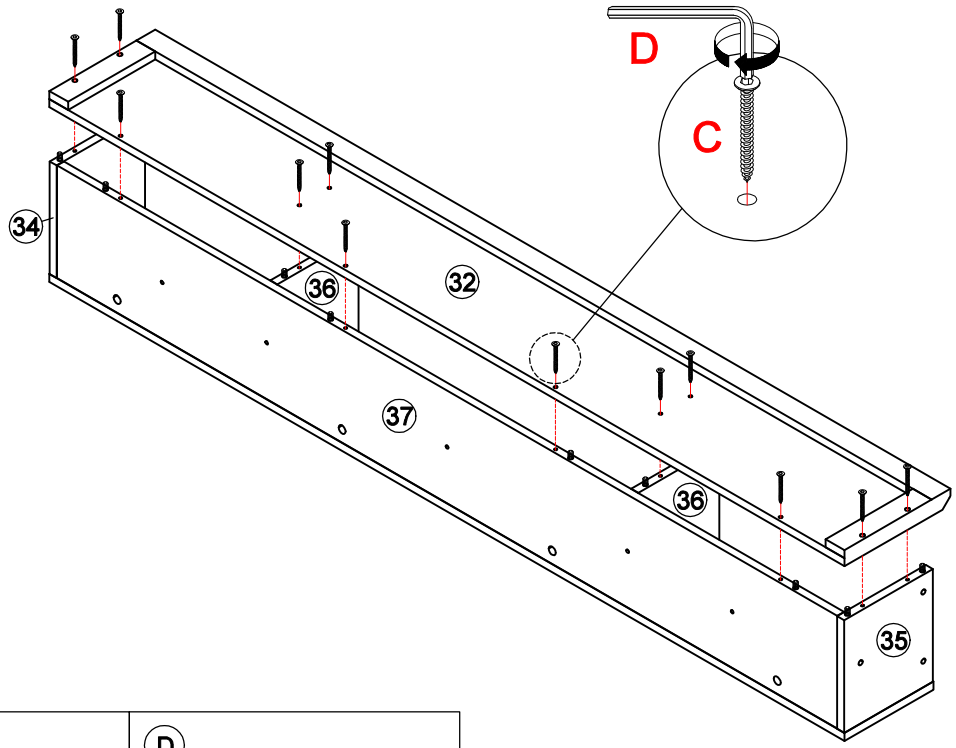


| C | D |
| --- | --- |
| | |
| 6*50mm Screw x 12 | Allen key x 1 |

STEP 41

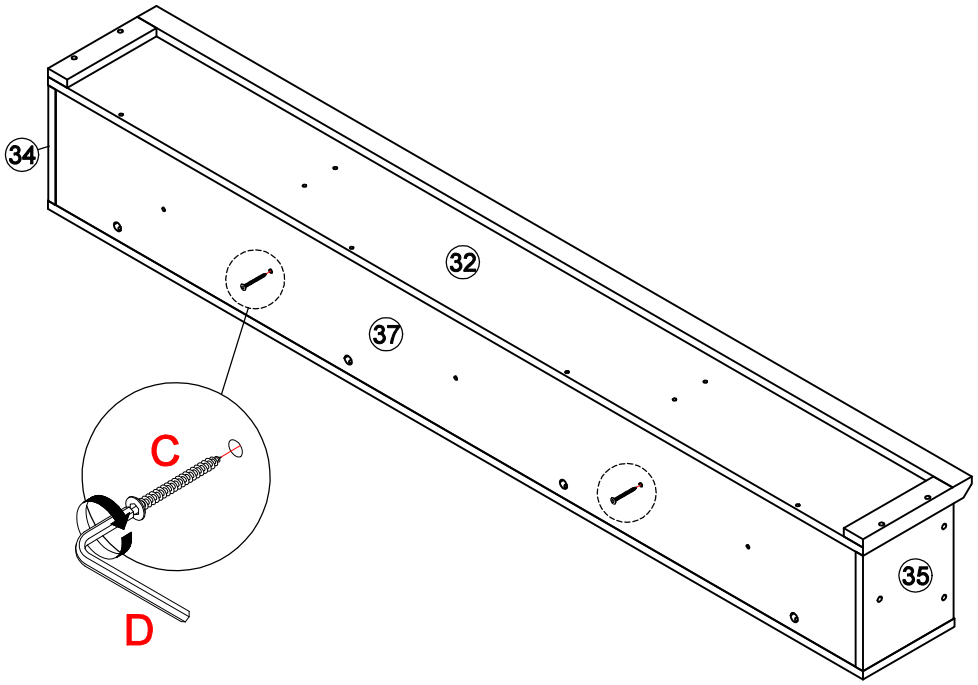


| C | D |
|---|---|
| 6*50mm Screw x 2 | Allen key x 1 |

STEP 42

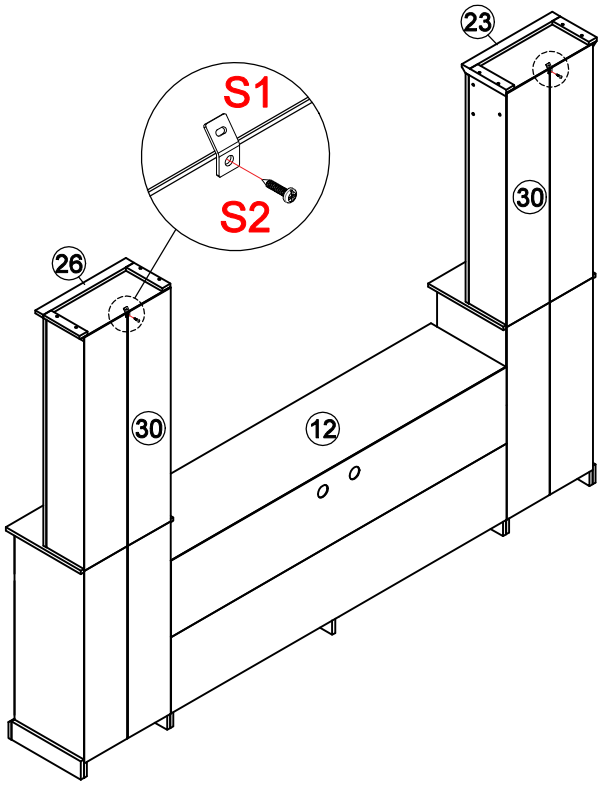


| S1 | S2 |
|---|---|
|  Wall support x 2 | Screw x 2 |

STEP 43

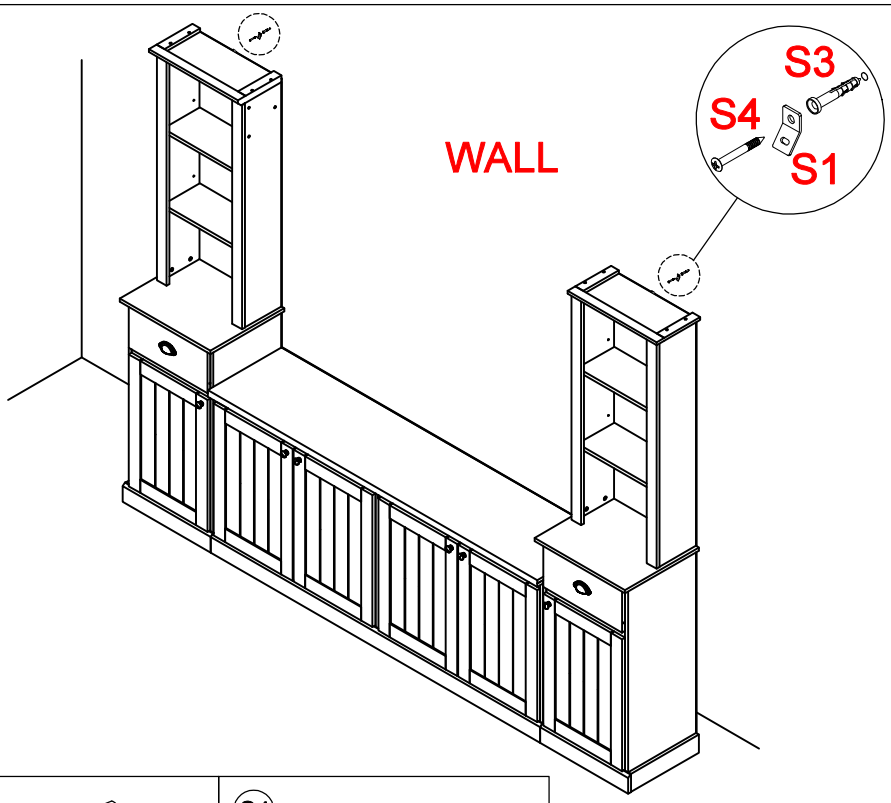


| S1 | S3 | S4 |
|---|---|---|
| Wall support x 2 | Wall plug x 2 | Screw x 2 |

STEP 44

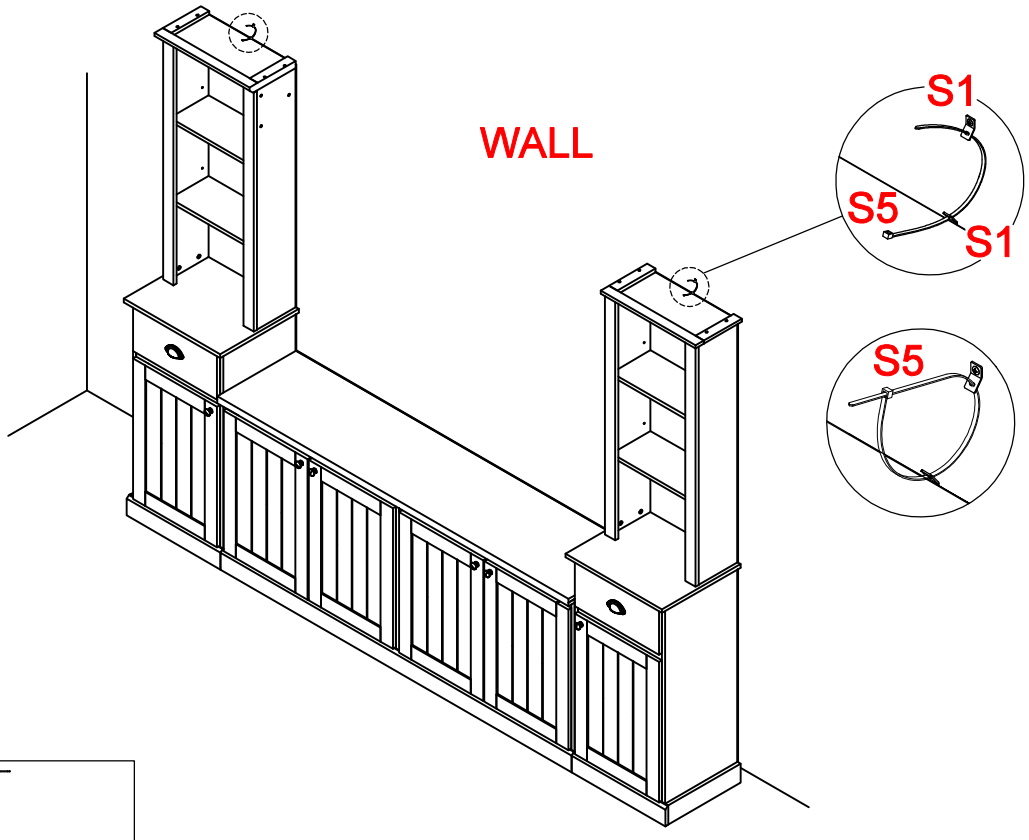


| S5 |
|---|
| Cable tie x 2 |

STEP 45

# OPTIONS 1

**There is 2 ways of installation.**

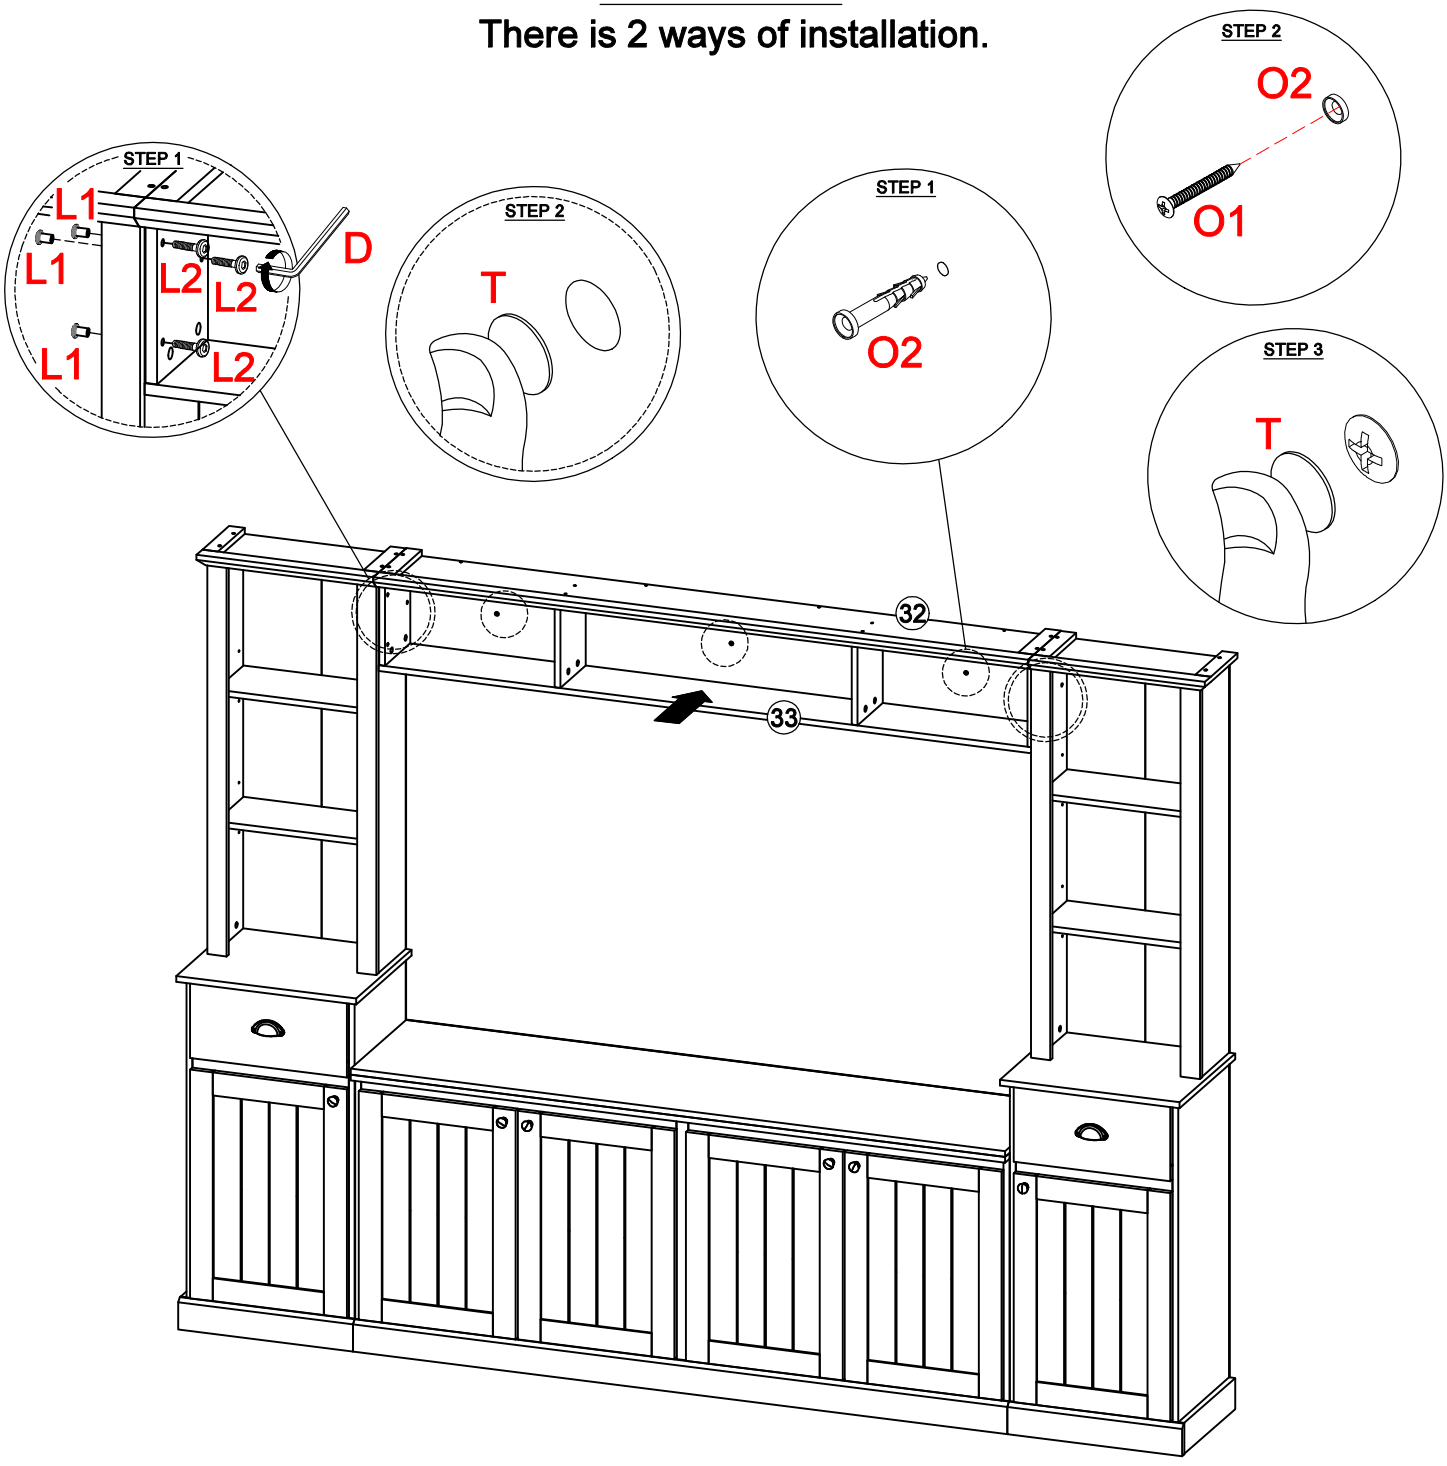


| | | | |
|---|---|---|---|
| (D) Allen key x 1 | (L1) 6*12mm Joint nut x 6 | (L2)  6*20mm Screw x 6 | (O1)  Screw x 3 |
| (O2)  Wall plug x 3 | (T) Sticker x 15 | | |

STEP 45

# OPTIONS 2

Can be fix on wall separately on height needed.

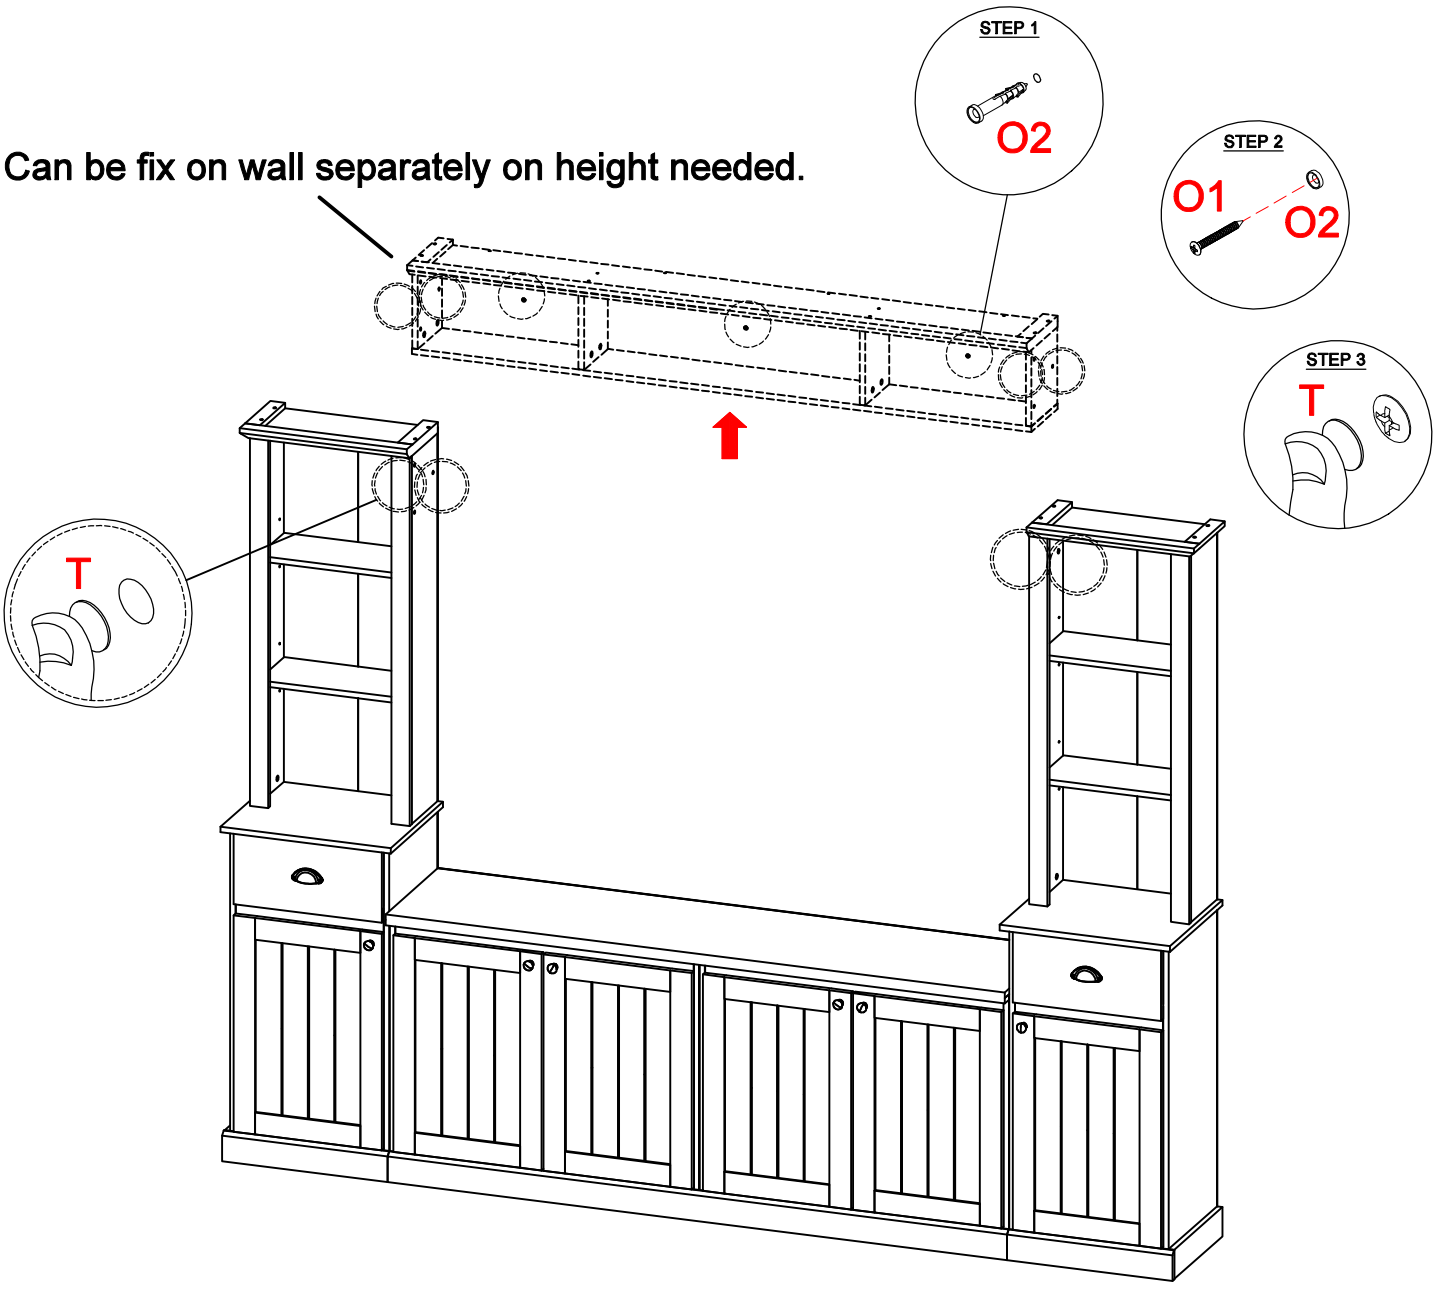


| O1 | O2 | T |
|---|---|---|
| Screw x 3 | Wall plug x 3 | Sticker x 27 |

## OPTIONS 1

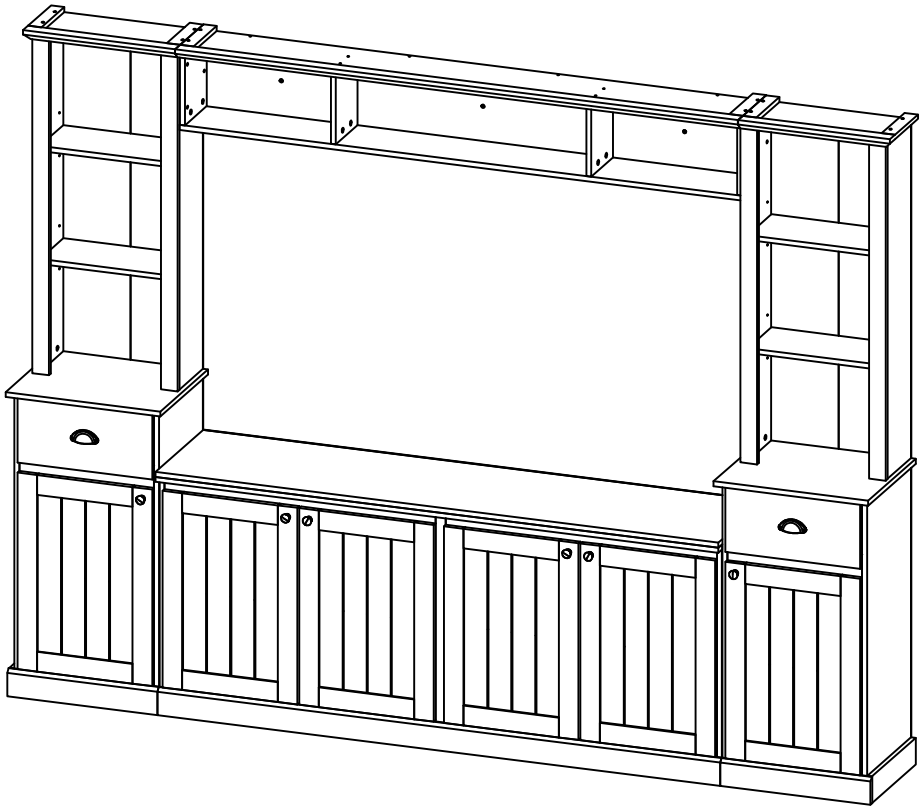

## OPTIONS 2

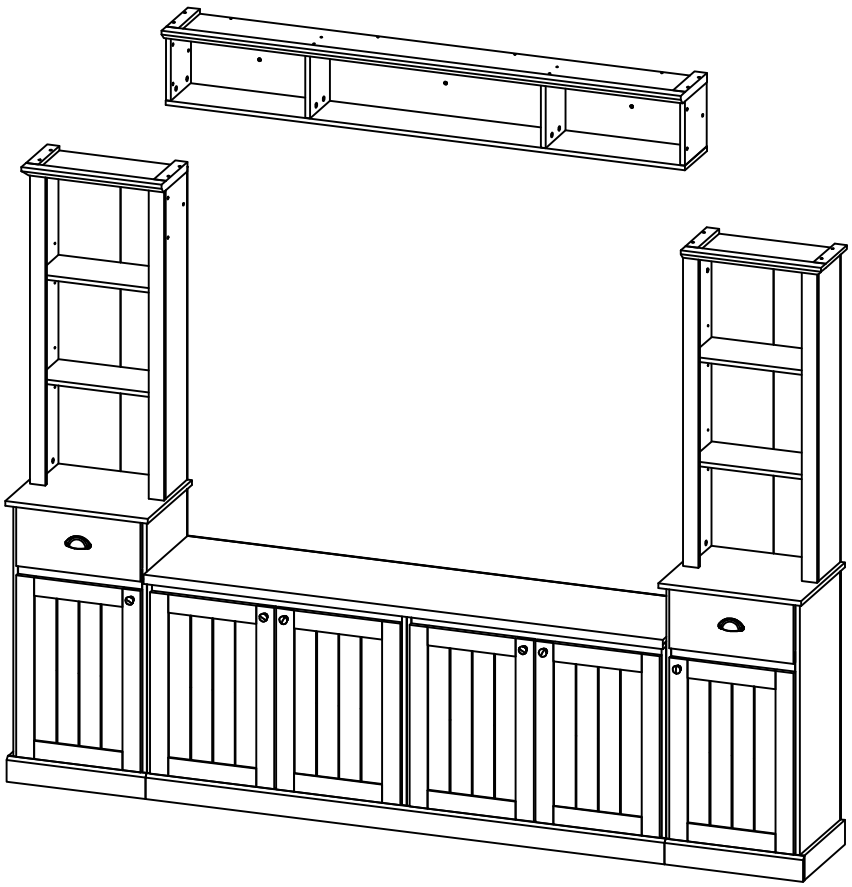



Finish