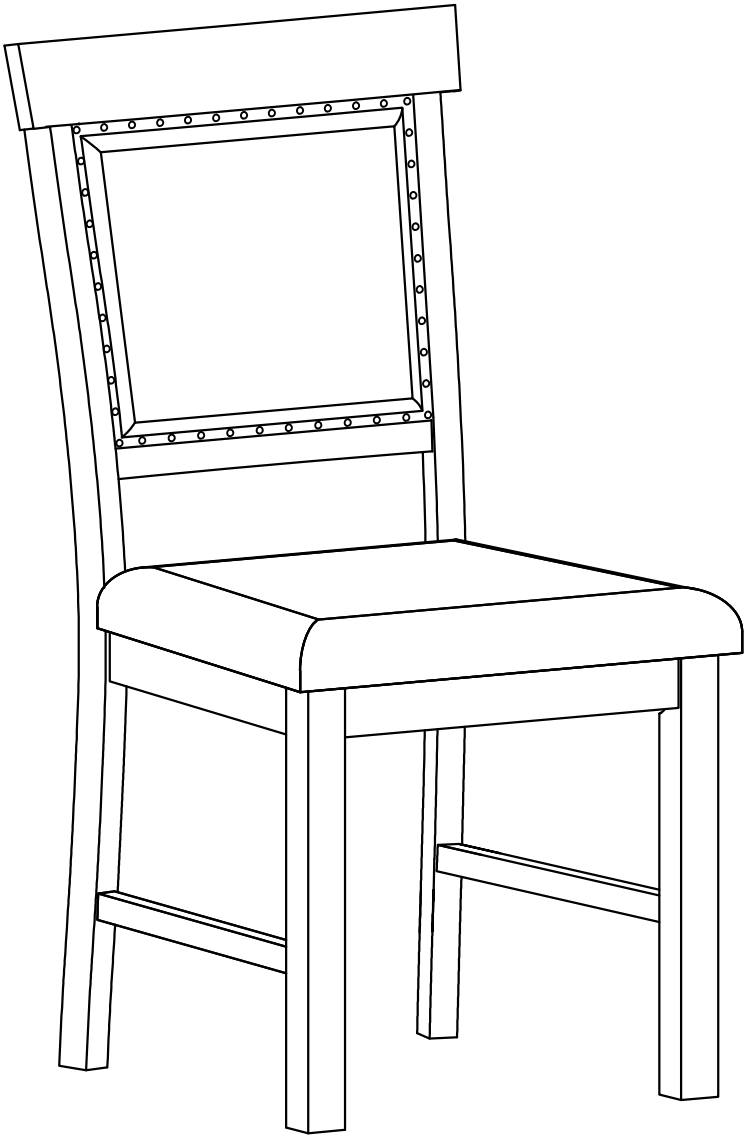
ASSEMBLY INSTRUCTIONS

Dining Chair



ASSEMBLY INSTRUCTIONS

Please read these instructions fully before starting assembly：

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.

2. Kindly follow the assembly instructions step by step.

3. Do not tighten all screws and bolts until the table is fully assembled.

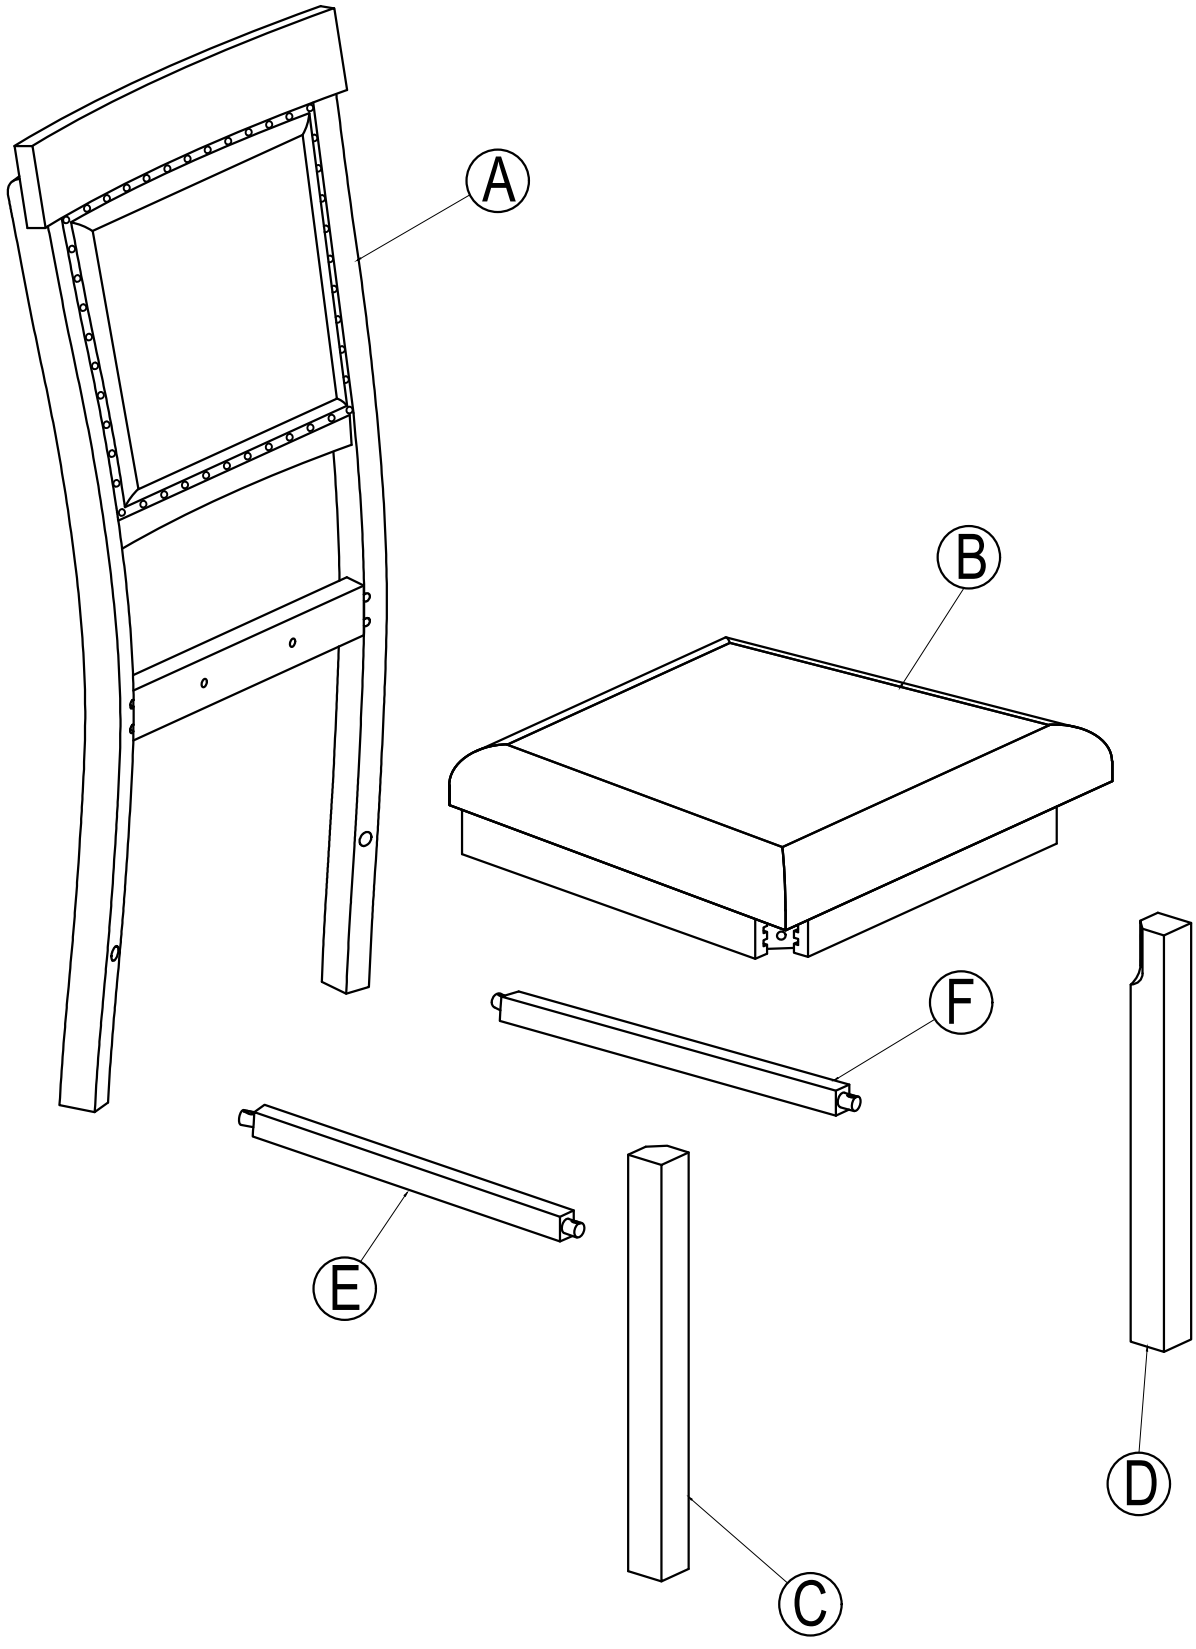
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.

5. Parts of the assembly will be easier with 2 people.

Care and maintenance：







Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTIONS









ASSEMBLY INSTRUCTIONS

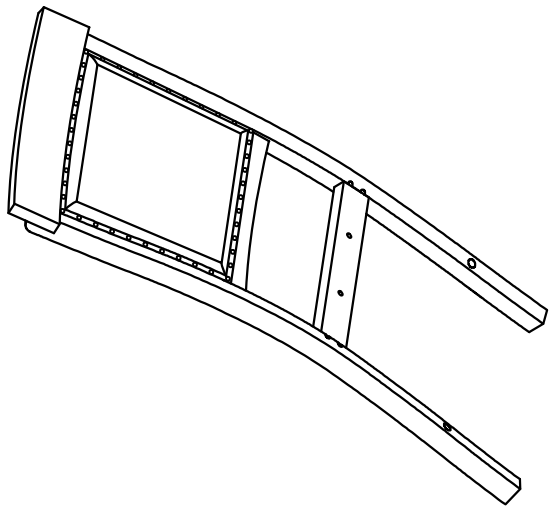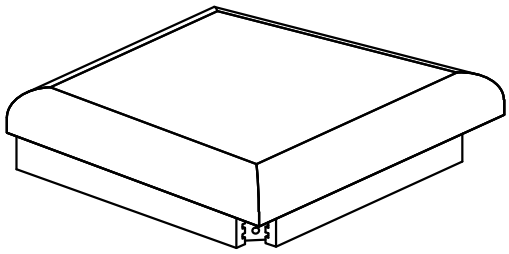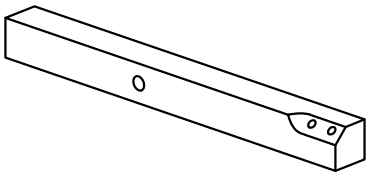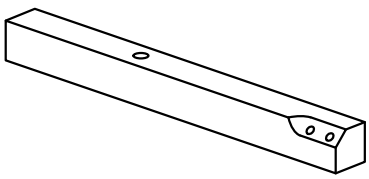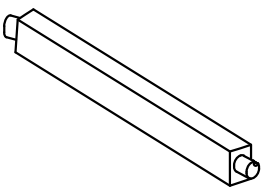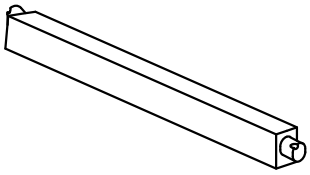Part List

A 	B 
BACK FRAME (4 pcs)	SEAT FRAME (4 pcs)
C 	D 
LEG LEFT (4 pcs)	LEG RIGHT (4 pcs)
E 	F 
LEFT SIDE STRETCHER (4 pcs)	RIGHT SIDE STRETCHER (4 pcs)


ASSEMBLY INSTRUCTIONS

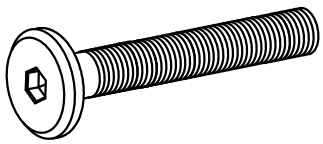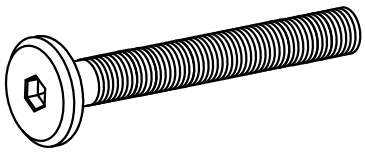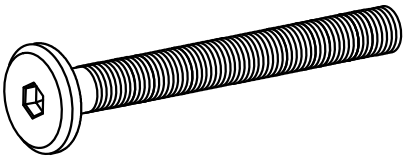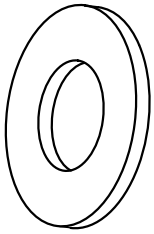Hardware List

①  Ø 1/4" x 40mm	②  Ø 1/4" x 55mm
BOLT (8pcs)	BOLT (16 pcs)
③  Ø 1/4" x 75mm	④  Ø5/16" x 13mm
BOLT (16 pcs)	FLAT WASHER (40 pcs)
⑤  Ø5/16" x 19mm	⑥  4mm
LOCK WASHER (40 pcs)	ALLEN KEY (1pc)
⑦  Ø4 x 38mm	
WOOD SCREWS (16 pcs)	


ASSEMBLY INSTRUCTIONS

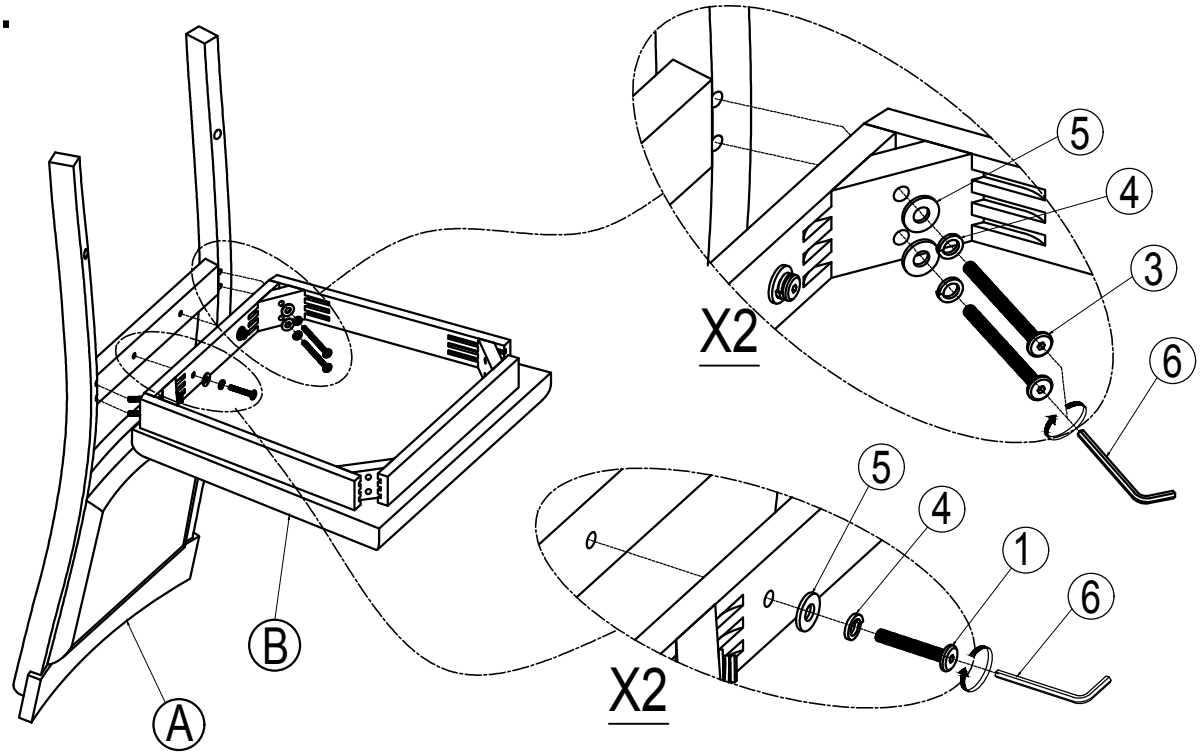STEP 1:



BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	FLAT WASHER Ø5/16" x 13 mm	LOCK WASHER Ø5/16" x 19mm	ALLEN KEY 4 mm x 75mm
①x 2	③x 4	④x 6	⑤x 6	⑥x 1

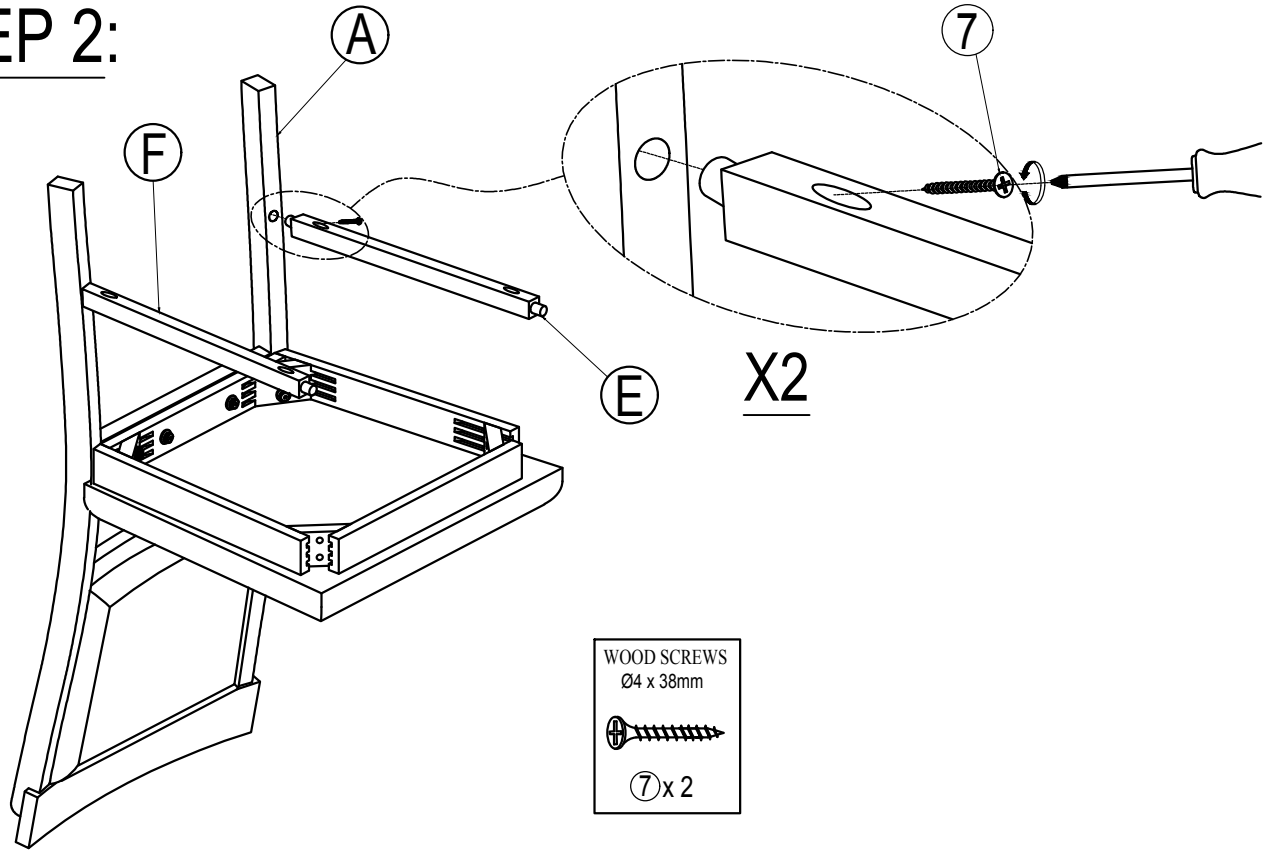
STEP 2:



WOOD SCREWS Ø4 x 38mm
⑦x 2

ASSEMBLY INSTRUCTIONS

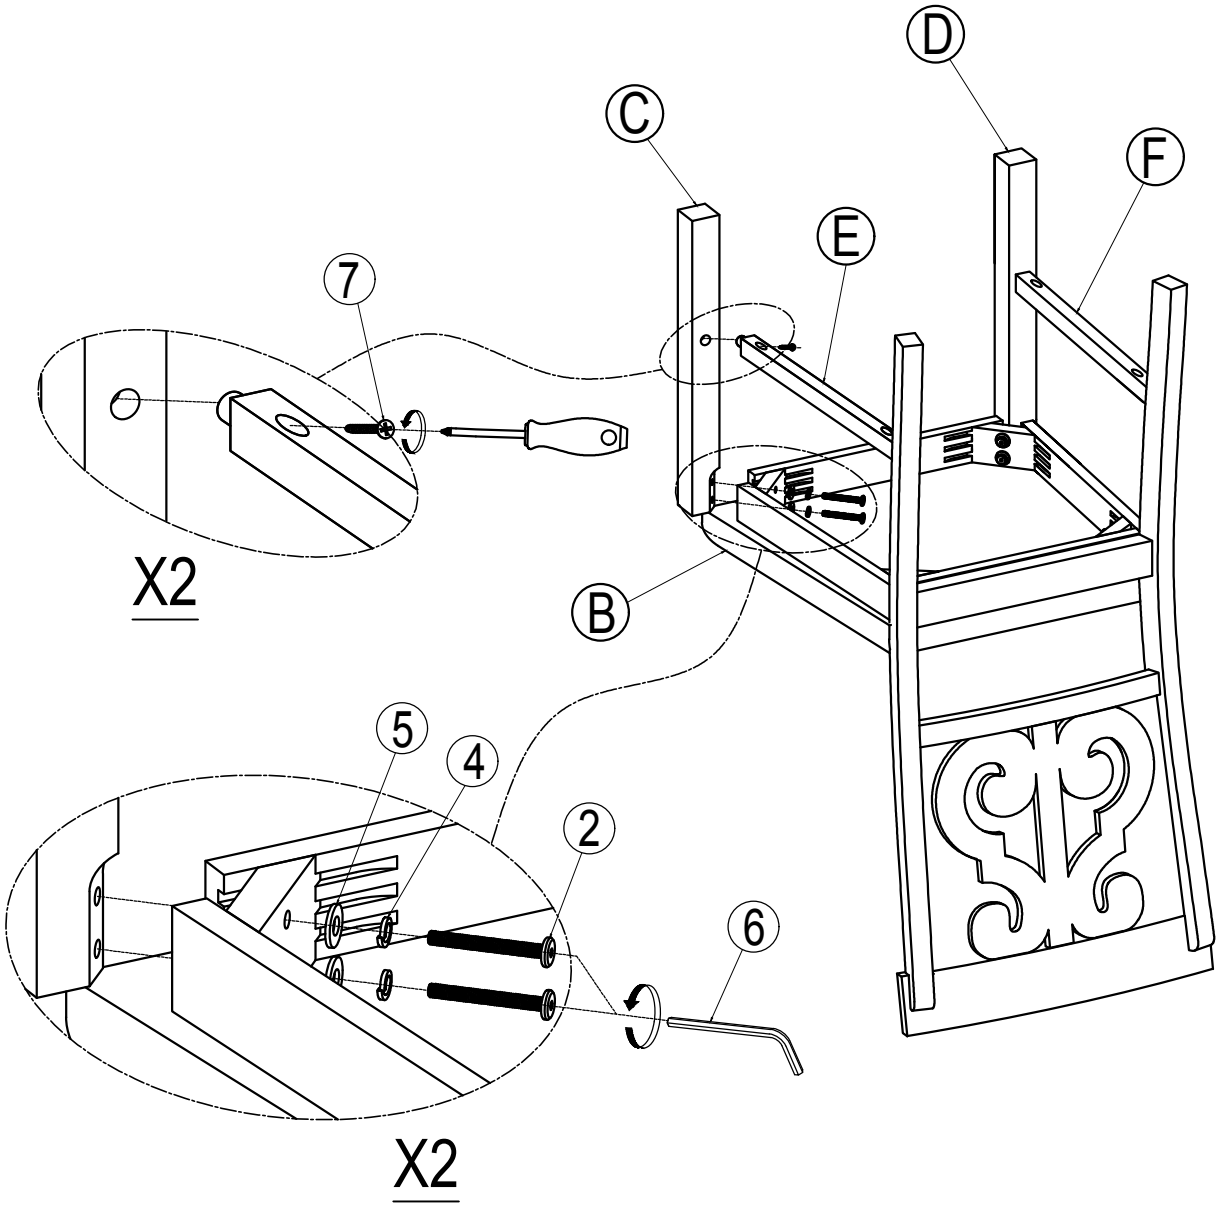STEP 3:



BOLT	FLAT WASHER	LOCK WASHER	ALLEN KEY	WOOD SCREWS
Ø 1/4" x 55 mm	Ø5/16" x 13 mm	Ø5/16" x 19mm	4 mm x 75mm	Ø4 x 38mm
②x 4	④x 4	⑤x 4	⑥x 1	⑦x 2

ASSEMBLY INSTRUCTIONS

COMPLETE

