



USER MANUAL

Bidet Seat

Contents

- Thank you for you purchasing our washing cover plate. please read the manual carefully and use product correctly
- Please keep it in a convenient place

Before use

Product description ---------- 1

Component description ---------- 1

Installation and use

Installation steps ---------- 2

Function introduction ---------- 4

Other matters

Cleaning and maintenance ---------- 5


Product dimension ---------- 6

Product technical specification ---------- 7


Faults and solutions ---------- 7

Warranty Card ---------- 8

Product description

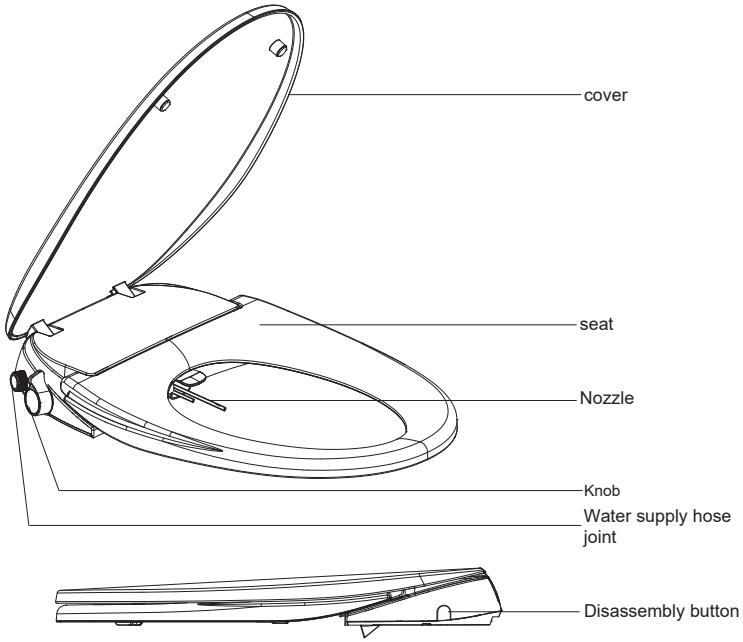

Component description

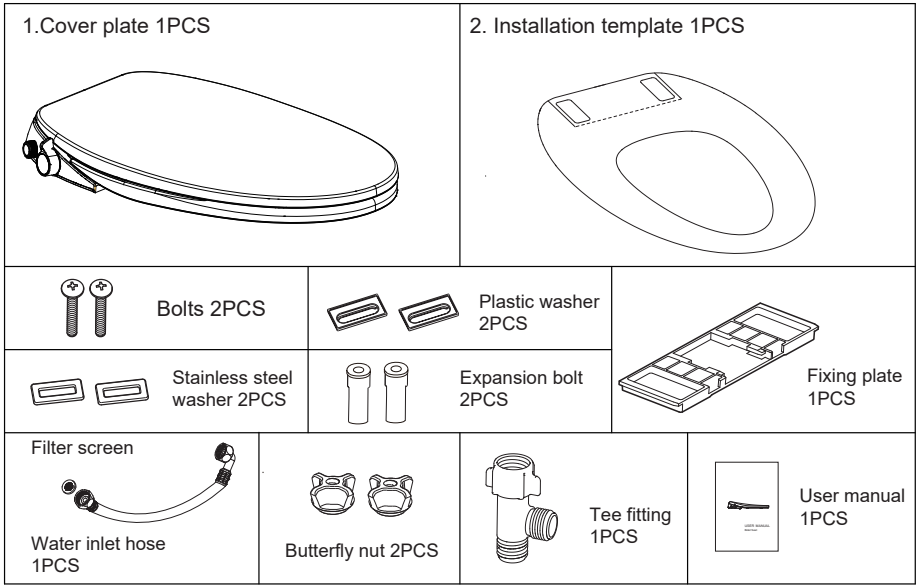

NOTE: Drawings may not exactly define contour of the product.

Installation steps

•Installation tools



Cross screwdriver　　Monkey wrench　　Barrel and rag

•Attention before installation


1.Water pressure range: 0.07-0.75MPa, please follow the instructions.
2.Corner valves shall be located close to the location where this product is installed and disassembled.
3.Please use the braided hose that comes with the product to prevent water leakage.
4.When installing braided hose,be careful to prevent the black gasket falling out.

• Installation Procedure


1.Loosen the nut connecting and remove the old cover.




2.Place the mounting template on the ceramic as shown. Align it with the rim of toilet.

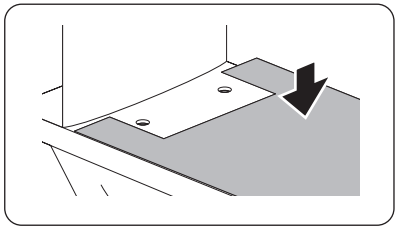

3.①Insert the expansion bolt into ceramic hole;
②Place fixing plate in notch part of template;
③Place adjusting sheet and plate in fixing plate;
④Align expansion bolt hole , and tighten up;

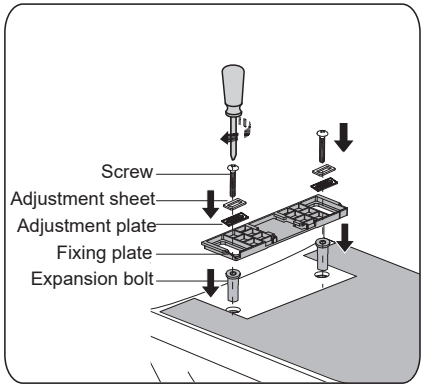


For toilet that its ceramic hole doesn't fit the expansion bolts, apply the butterfly nut at the bottom of the toilet, then tighten it up to secure the fixing plate.

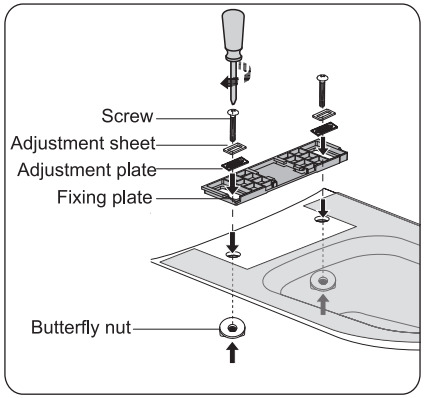


Installation steps

5.Slightly push the cover into fixing plate until you heard "click" , indicating that the cover has been installed in place.

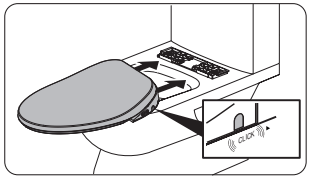


6.Close the water valve;

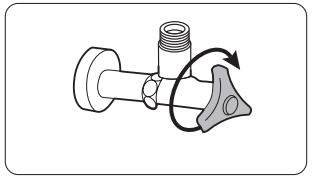

7.Install braided hose;


European ceramic




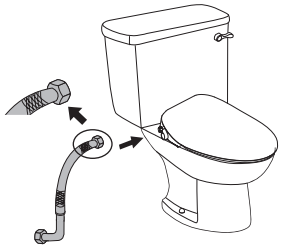

①When the ceramic is similar to the figure above,we suggest connecting the straight end of the hose to the cover


American ceramic

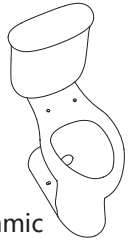

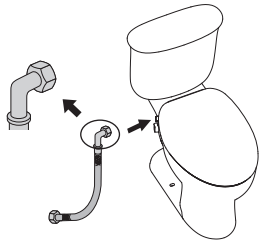


②When the ceramic is similar to the figure above,we suggest connecting the elbow end of the hose to the cover

8.Connecting flexible hose ;

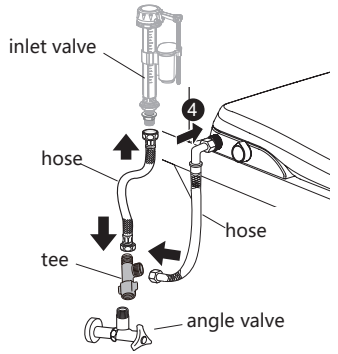


Normally,the tee is installed on the angle valve

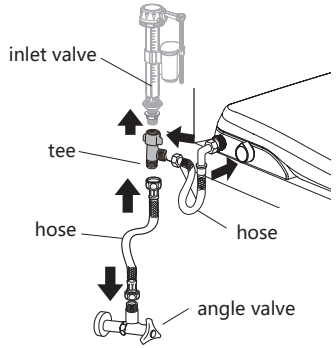


if the angle valve and wall is too close,you can installed the tee under the inlet valve

Installation steps

9.Open the vavle to check water leakage;

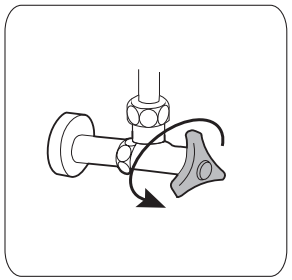

10.Turn on the knob to check whether the nozzle is protruding;

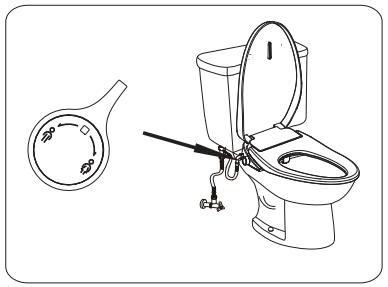


Prohibition


1. It is strictly prohibited to move the product from the toilet cover, otherwise easy to cause mechanical failure.
2. It is strictly prohibited to connect hot water above 40℃ and cold water that may lead to icing.

Function introduction

• Konb functin

1、Rinse functin

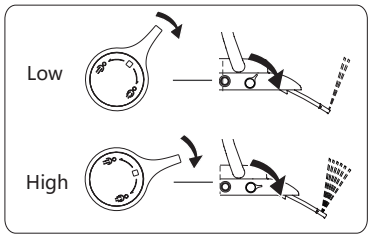

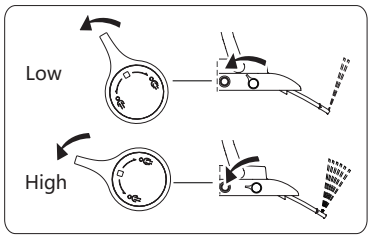

Bidet/Hip rinsing


Rotating knob to adjust amount of water

Note: Please open the knob to the maximum before use,and then adjust the amount of water and rinsing force through the konb。


Cleaning and maintenance

• Manual cleaning of spray tube

- Gently pull out the nozzle and dip the neutral detergent with a soft cloth, sponge or small brush.
- Gently support the nozzle, wipe the spray tube and nozzle.

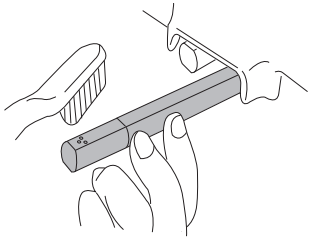

• Clean filter screen

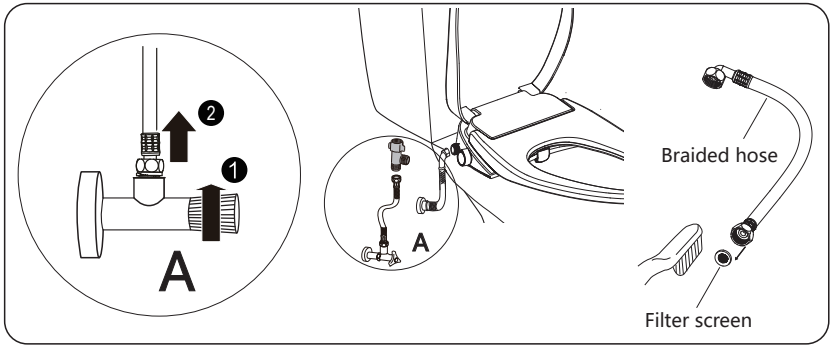


Tips:

- Make sure that the corner valve close off before you clean the filter screen;
- Clean the filter screen when the water flow is less than normal hours.
- During cleaning process, the product must be thoroughly separated from the water inlet hose;
- Reinstall the filter screen in reverse order after cleaning.

• Product surface cleaning

- Wipe the product surface with a sponge or soft cloth dampened with room temperature water or a neutral detergent.
- Lift the upper cover and the seat ring when cleaning other parts with cleaning agents.
- Do not put cover on before the cleaning agent in the ceramic toilet is completely washed, otherwise the surface may be corroded by the evaporation of cleaning agent.

Product dimension drawing

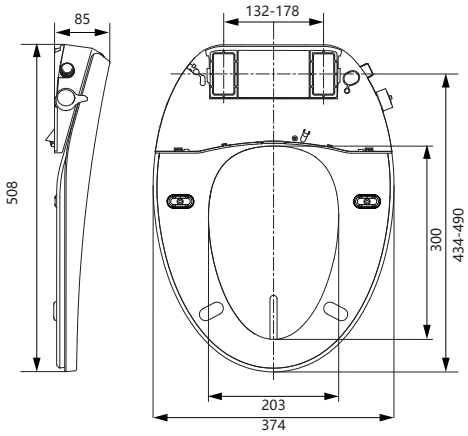

size: mm

Product technical specification

Items		Description
Model		TB001-110
Water supply pressure		0.07 - 0.75MPa(Static pressure)
Water supply temperature		Water at room temperature
Ambient temperature		0 ~ 40℃
Cleaning device	Water amount regulation	Stepless regulation
	Protective device	Anti-siphon valve + anti-backflow valve
Others	Antibacterial material	Nozzle
	Control operation	Knob

Faults and solutions

Phenomenon	Possible cause	Solution
Low flushing	Knob is not completely turned on.	Increase knob regulating angle.
	Water pressure too low	Contact relevant departments to solve water pressure problems
Turn on knob and no the water comes out	Vavle off	Open the vavle
	The filter of the water inlet pipe is blocked	Clean the filter of the water inlet pipe
	Nozzle clogging	Remove the nozzle and clean
Spary rod cannot reset	Water quality is too bab to blocking the spary rod	Clean spary rod
Base leaking	Water pressure too high	Contact relevant departments to solve water pressure problems

Warranty Card

To dear customers:

Thank you for choosing our E-bidet! If any problem occurs during use, please simply remove and check the problems pursuant to the user's manual. When you cannot remove such problems, contact your local supplier or call the service hotline.

I. Information:

Customer information	Customer name		
	Address		
	TEL		
Supplier information	BCANHOME		
	Email:SUPPORT@bcanhome.com		
Model		Product series number	
Purchase date	Y M D	Warranty period	One-year free warranty since the purchase date

II. Notes to warranty card:

1. Please complete the warranty card.
2. Warranty cards and invoices are important for the warranty service. If the product failure occurs during warranty period, please show the warranty card and the invoice when the dealer or after-sales service personnel of the Company provide on-site maintenance and repair.
3. The warranty card cannot be reissued, please keep it properly.

III. Rules on free maintenance

During the warranty period, the Company will provide repair free of charge according to the use instructions, precautions for normal use.

IV. Paid maintenance is required in the following circumstances that do not fall within the scope of free maintenance:

1. Out of warranty.
2. The valid invoice and warranty card cannot be provided during the warranty period.
3. Failure or damage caused by transportation, collision after purchase.
4. Product damage during abnormal use, failure and damage during the warranty period caused by human factors or natural disasters, such as fire, earthquake, flood, lightning or environmental pollution, etc.
5. Failure or damage caused by unauthorized disassembly, modification or maintenance due to user's cause or responsibility.
6. Failure or damage caused by violation of maintenance regulations in use, such as improper use of cleaning agent or wiping and maintenance methods not compliant with maintenance requirements.
7. The consumable items (such as sealing rings, etc.) or products have failed or damaged due to sand and impurities.
8. Conduct the secondary transfer according to the customer's requirements.

Make sure all the accessories are together beforeinstalling. If there are missing parts or damagedparts, please contact customer service.

Email Address:SUPPORT@bcanhome.com

BCANHOME WhatsApp

Thank you for being our valuable customers!

Please feel free to get in touch with our after-sale service team if you have any problems, we will get back to you as soon as we can.