
Shoe storage cabinet

SKU W5869P508204

Assembly instructions-Please keep for future reference

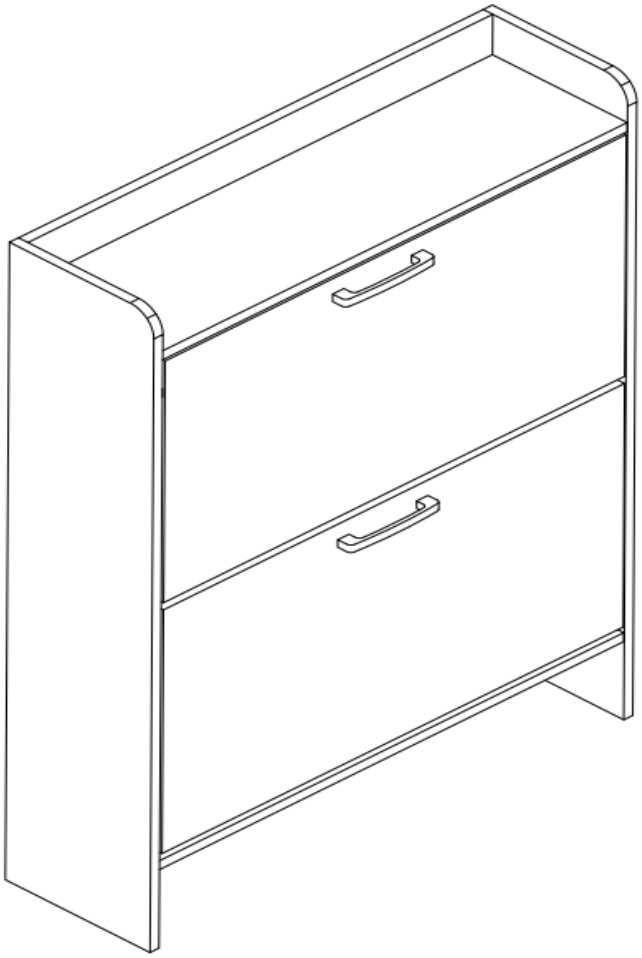


Cabinet	Length	Width	Thickness
Size	44"	20"	7"max


⚠ WARNING




This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.
Serious or fatal crushing injuries can occur from furniture tipover.
To prevent tipover, the tipover restraint (Hardware H) MUST be permanently fixed to the wall according to the instructions.
NEVER allow children to climb or hang on drawers, doors, or shelves.

Important: Please read these instructions fully before starting assembly.

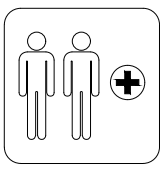


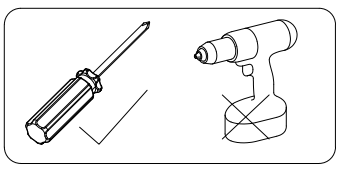


Important-Please read these instructions fully before starting assembly

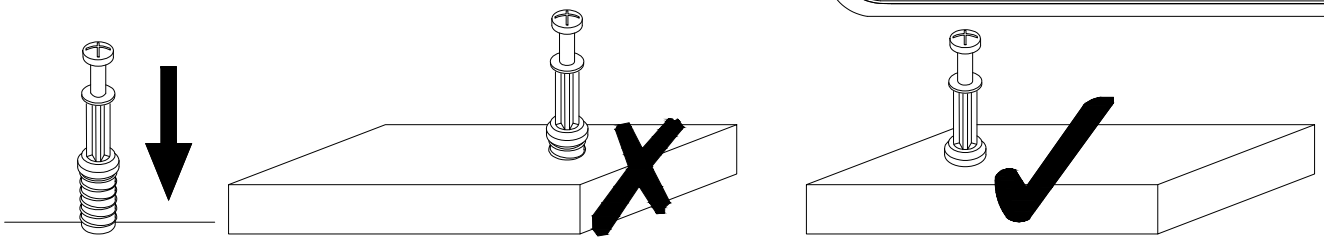


QUICKFIT:Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

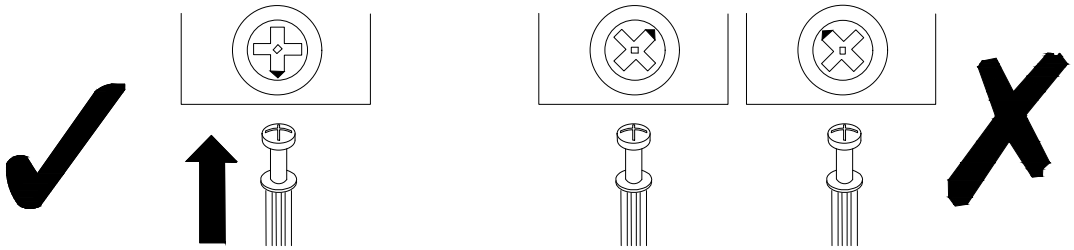


LOCK:When fitting cam lock,ensure starting position is correct before you insert connecting quickfit.

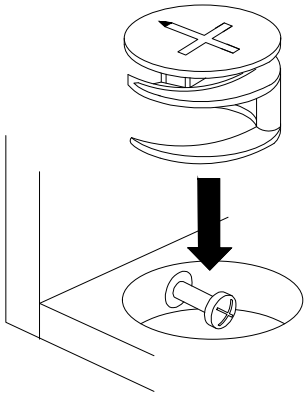


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

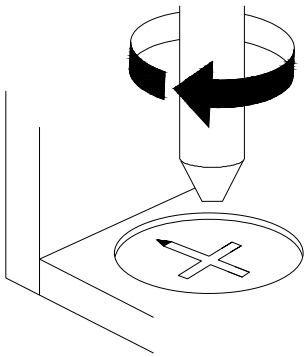

Turn cam lock clockwise to tighten.

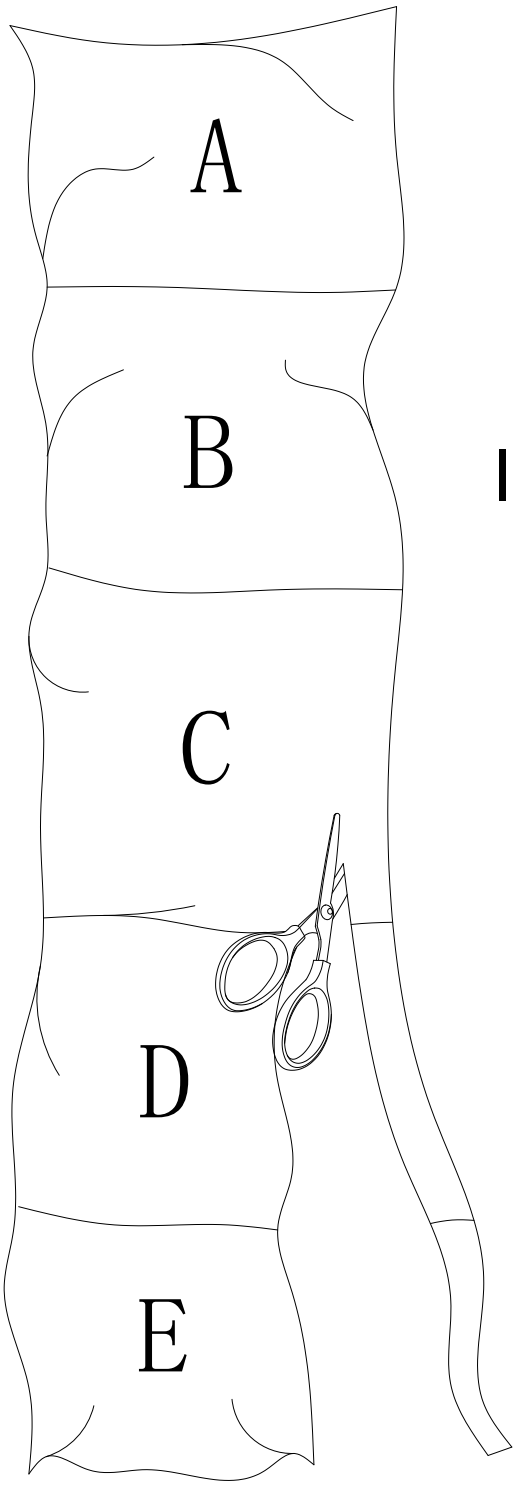


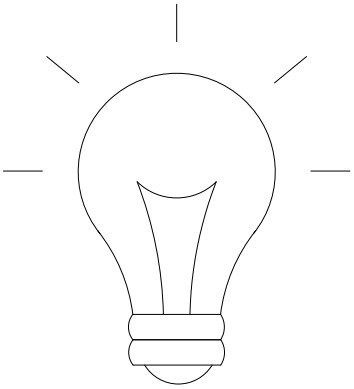

IMPORTANT NOTICE








To avoid errors and confusion during assembly, please identify and count all hardware and accessories before you begin. Unroll the accessory bag onto a flat, protected surface. Carefully open each compartment and lay out the hardware to verify quantities against the parts list.





Assembly Instructions

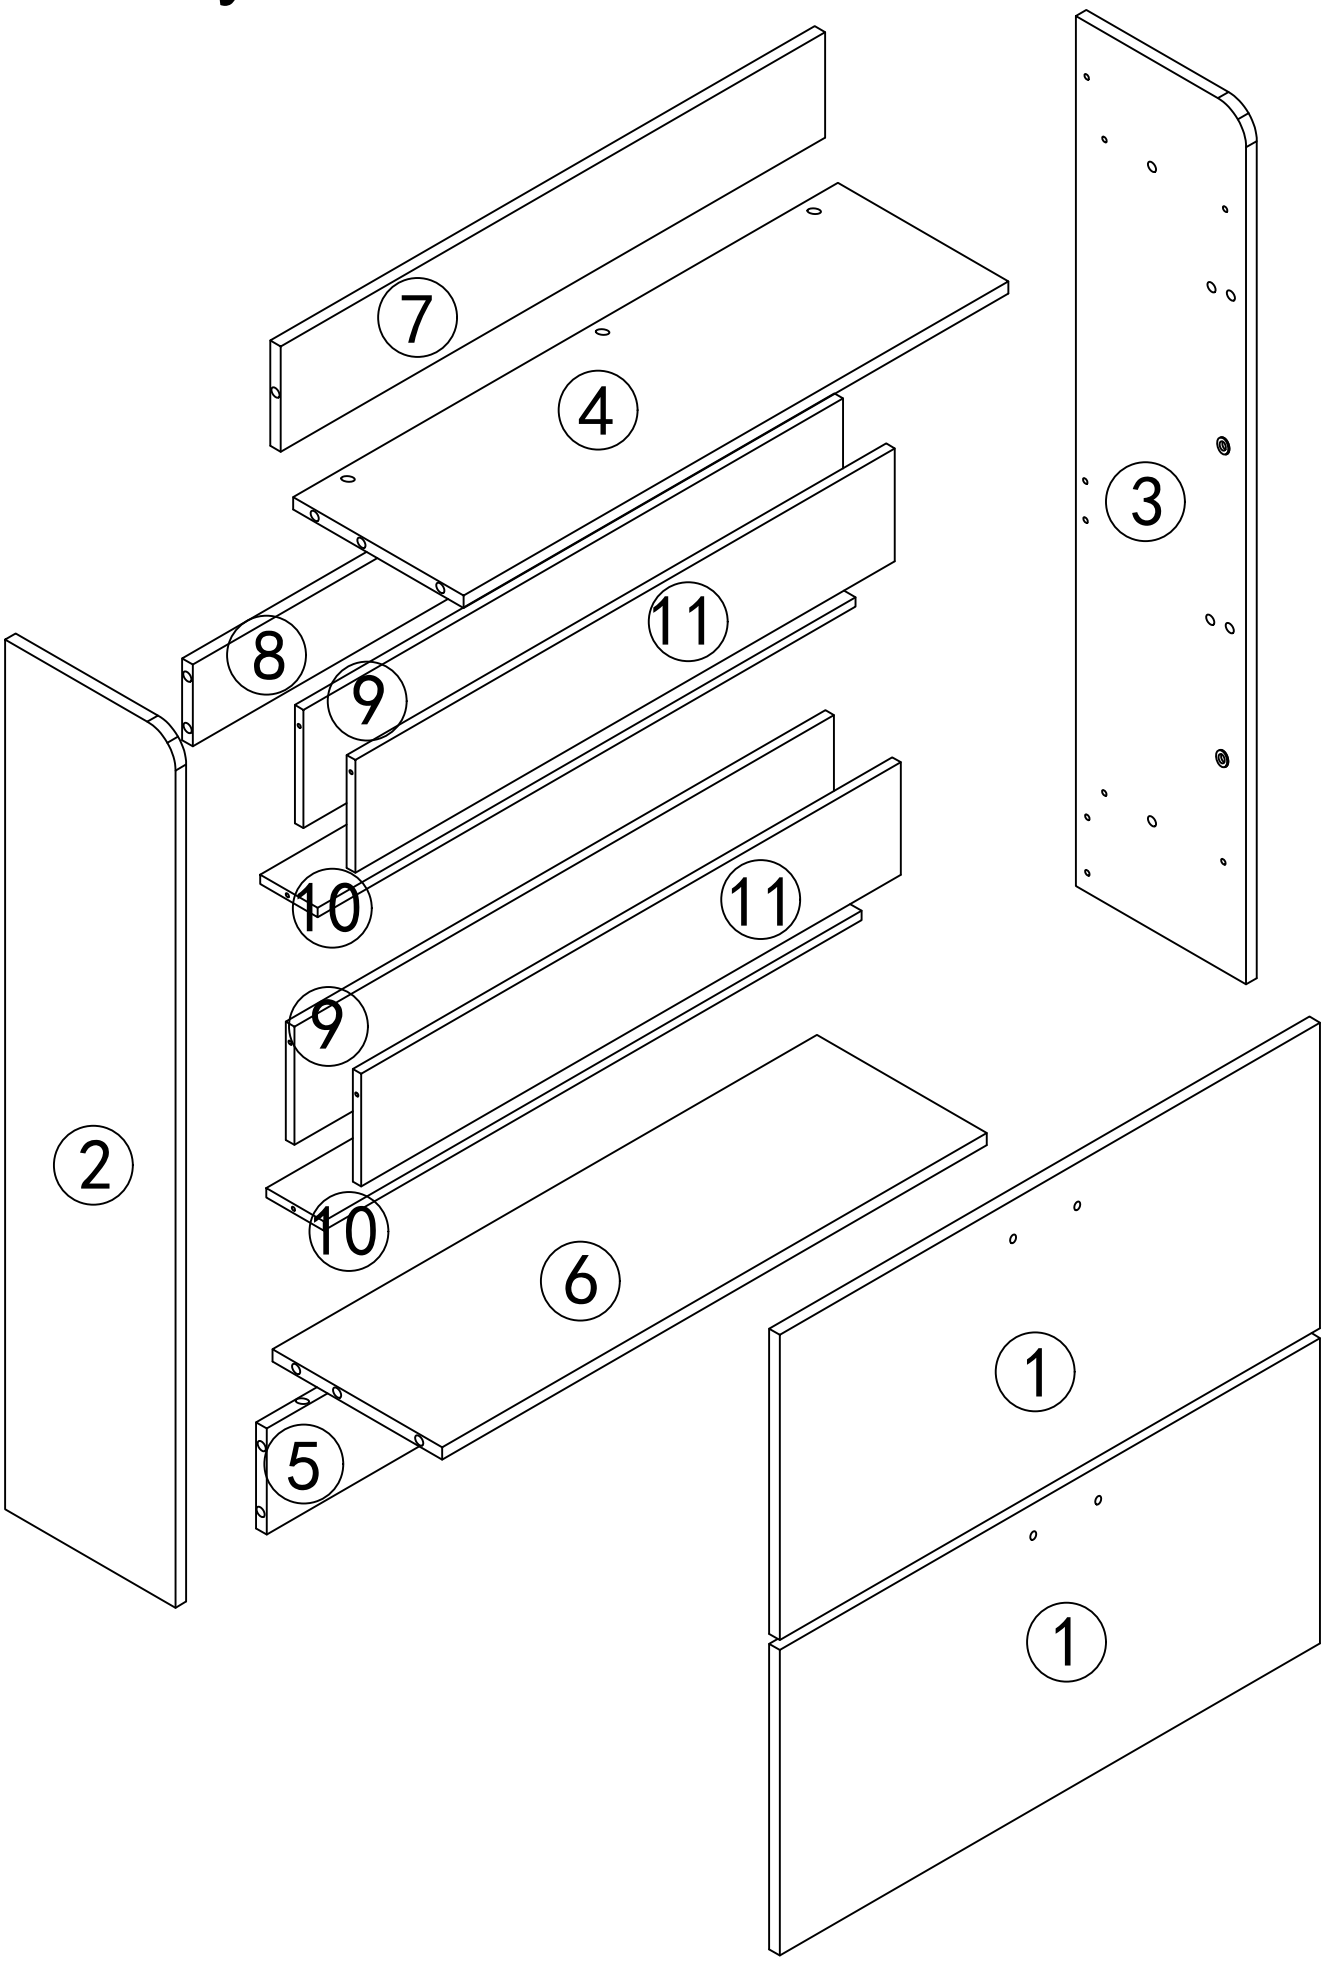









Parts List


BOX:1/1

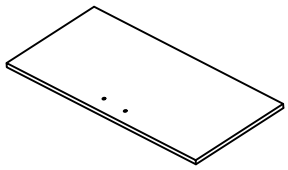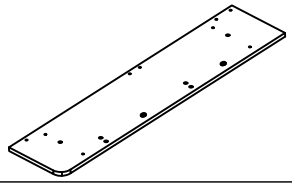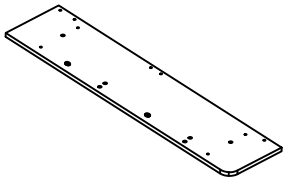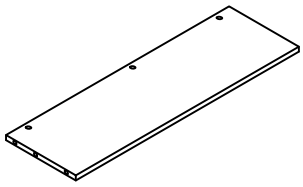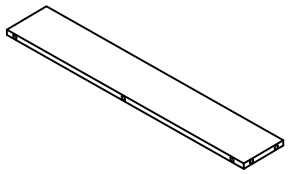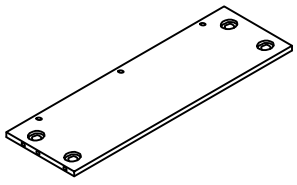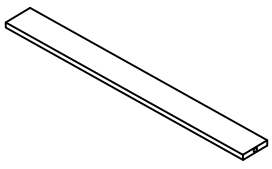NO.	PARTS	QTY
①		×2
NO.	PARTS	QTY
②		×1
NO.	PARTS	QTY
③		×1
NO.	PARTS	QTY
④		×1
NO.	PARTS	QTY
⑤		×1
NO.	PARTS	QTY
⑥		×1
NO.	PARTS	QTY
⑦		×1

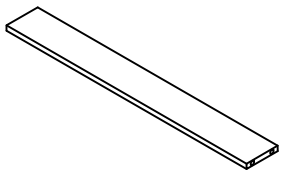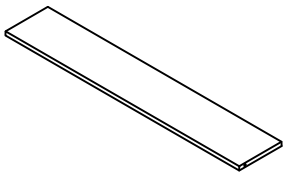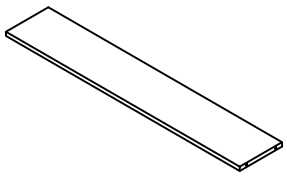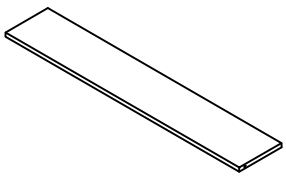NO.	PARTS	QTY
⑧		×1
NO.	PARTS	QTY
⑨		×2
NO.	PARTS	QTY
⑩		×2
NO.	PARTS	QTY
⑪		×2


Hardware List N707P479321

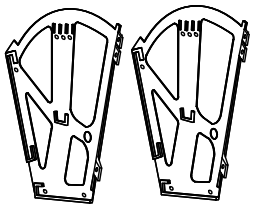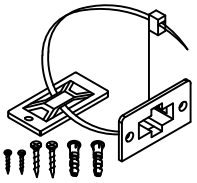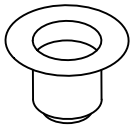A  ST x24	B  φ15 x24	C  φ8 x4	D  x2
E  M4*12mm x4	F  x2	G  M3.5*14mm x28	H  x1
J  x4	K  x4	L  M4*10mm x4	

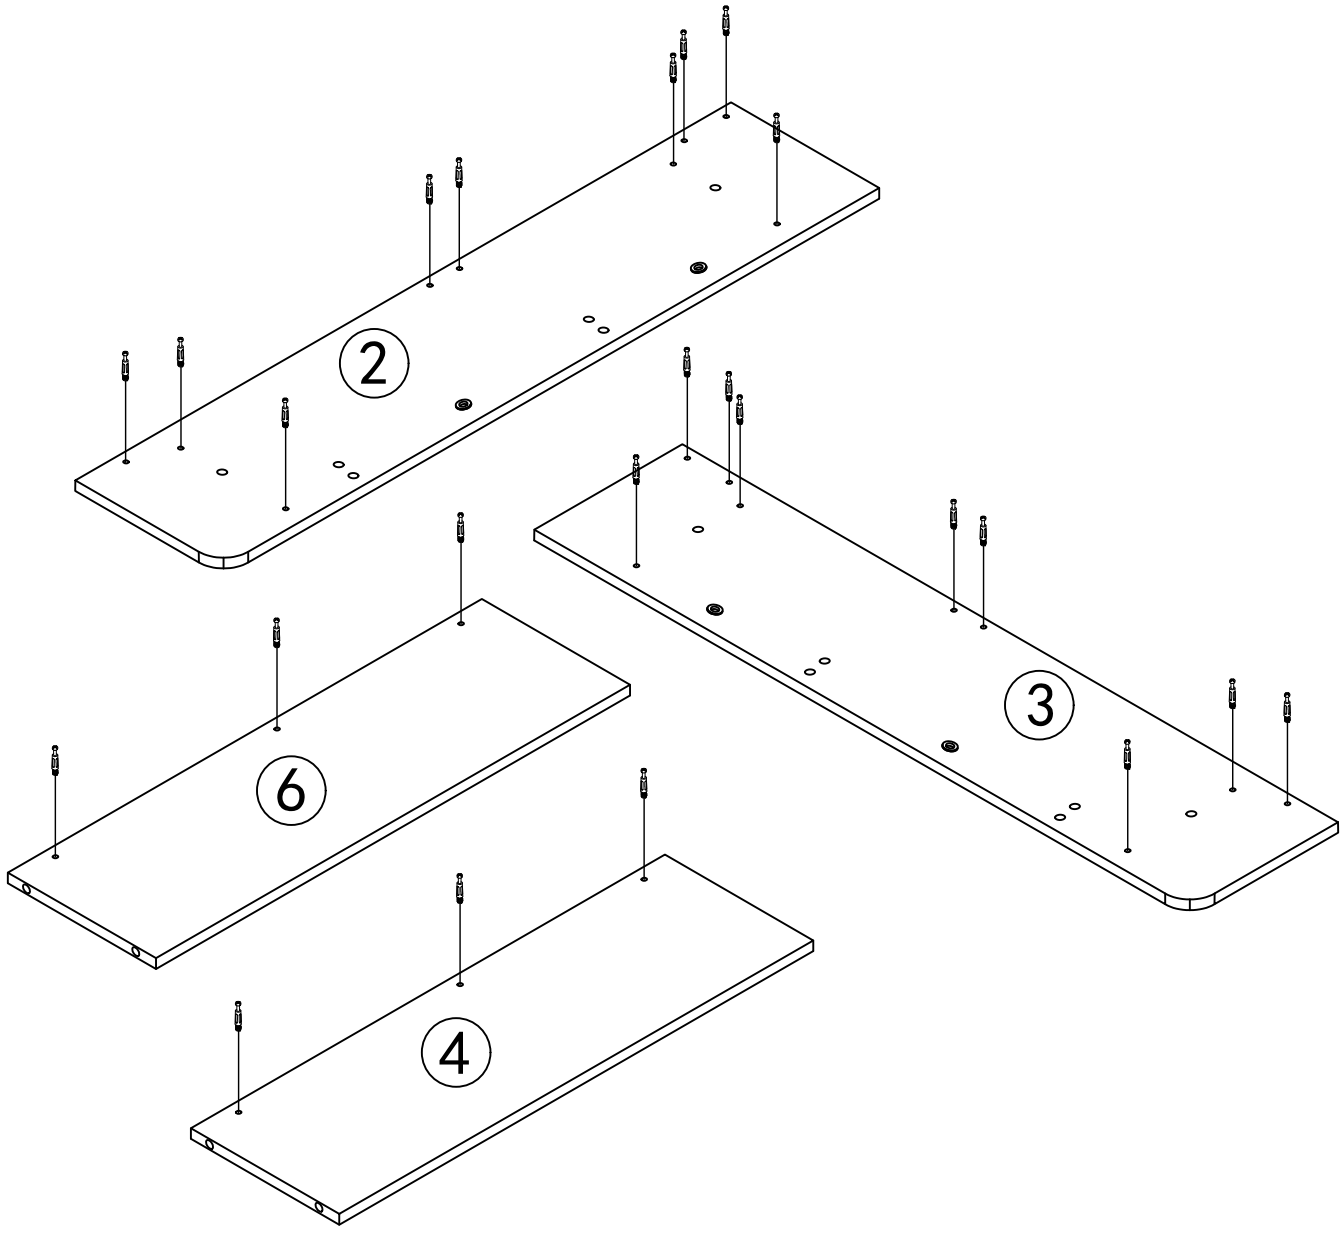


A		X 24

2

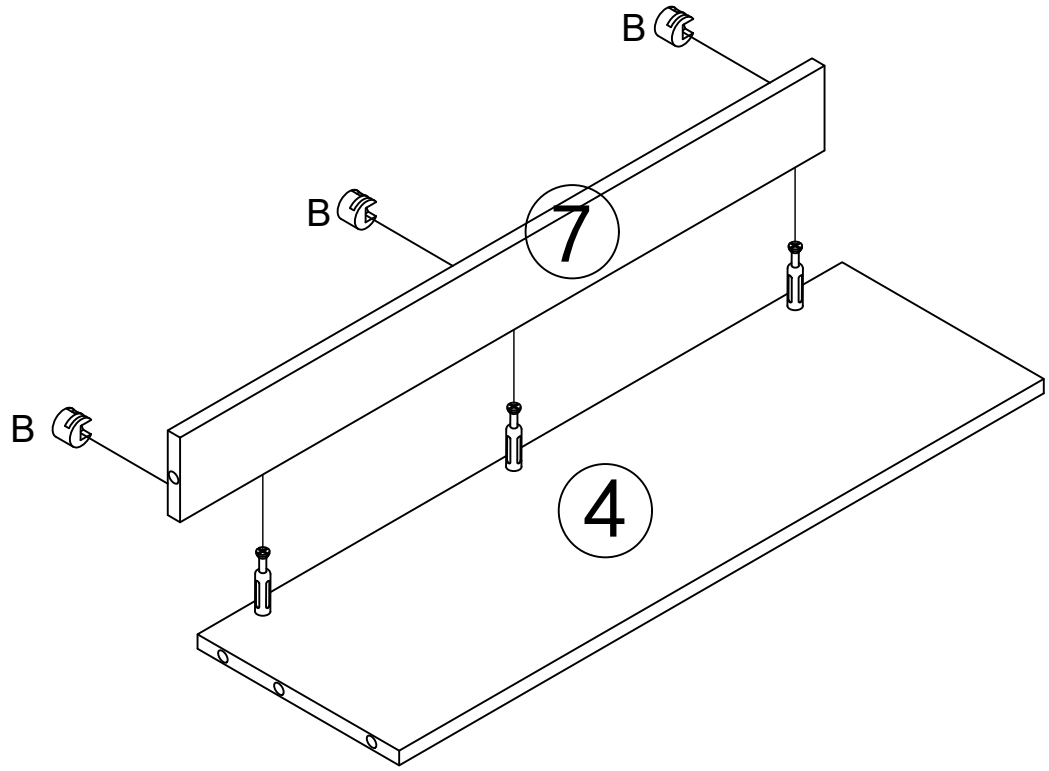


B	X 3

3

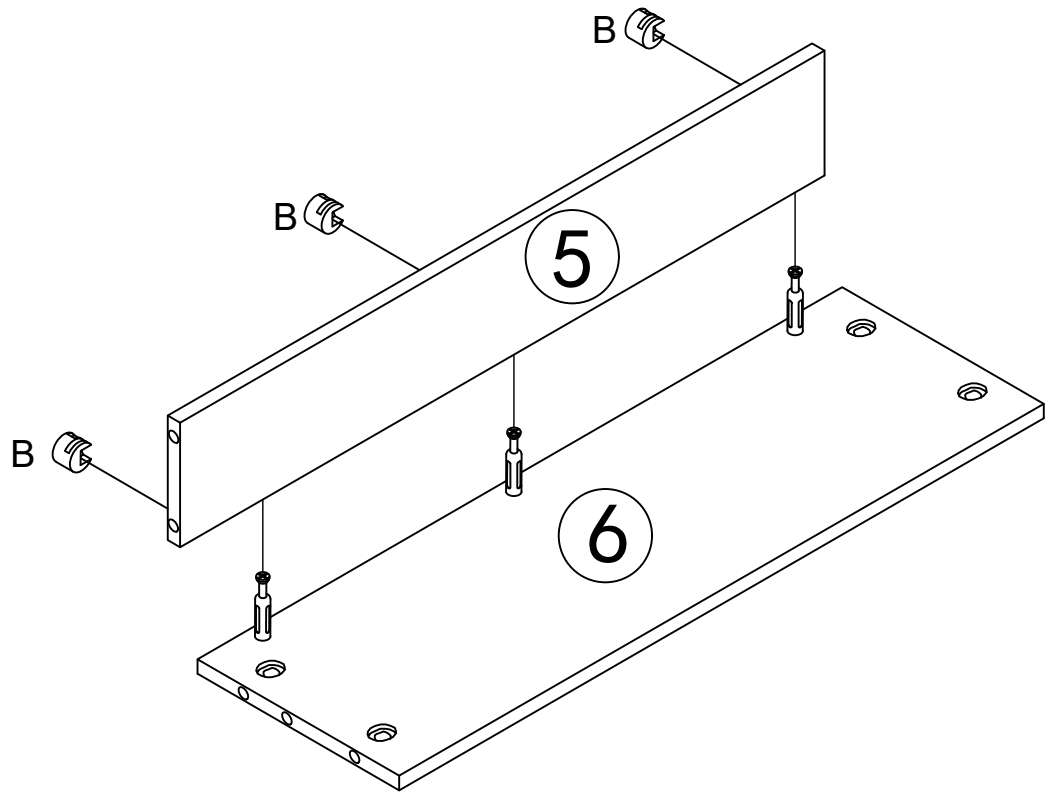


B	X 3

4

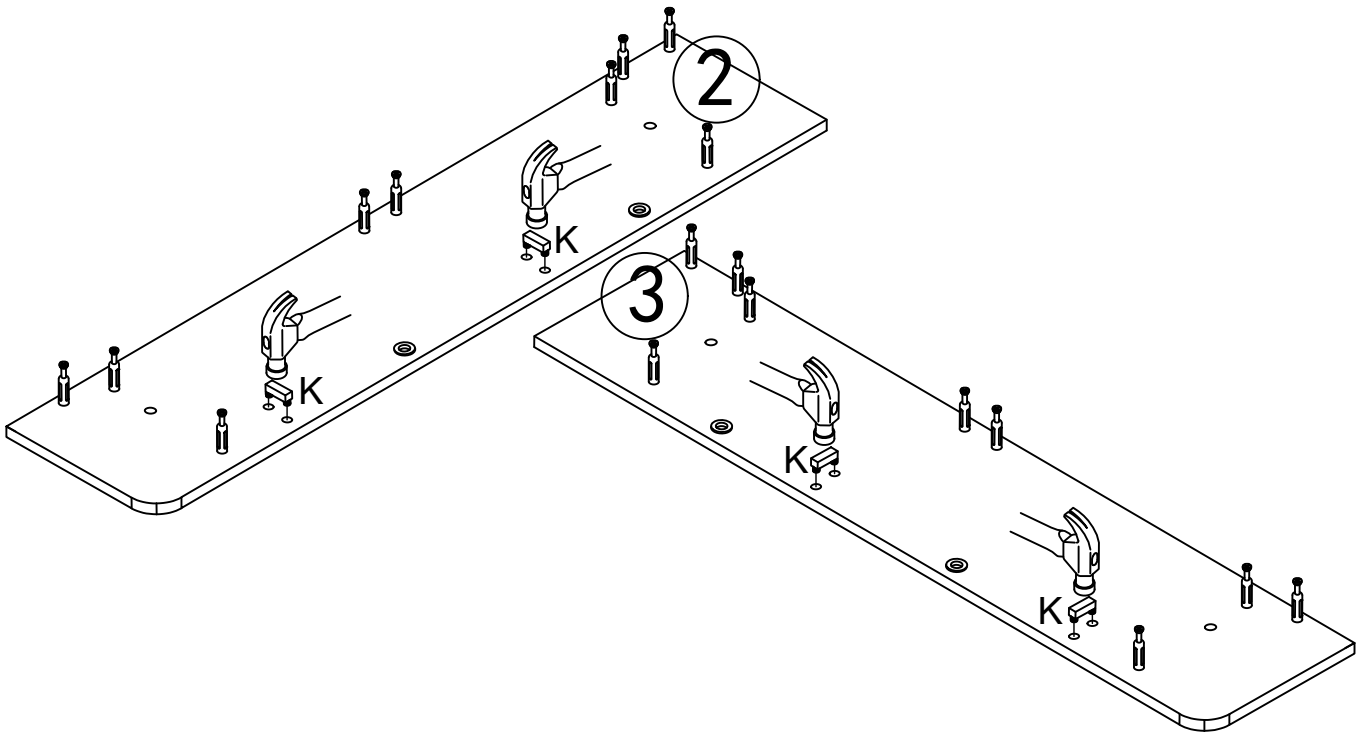


K		X 4

5

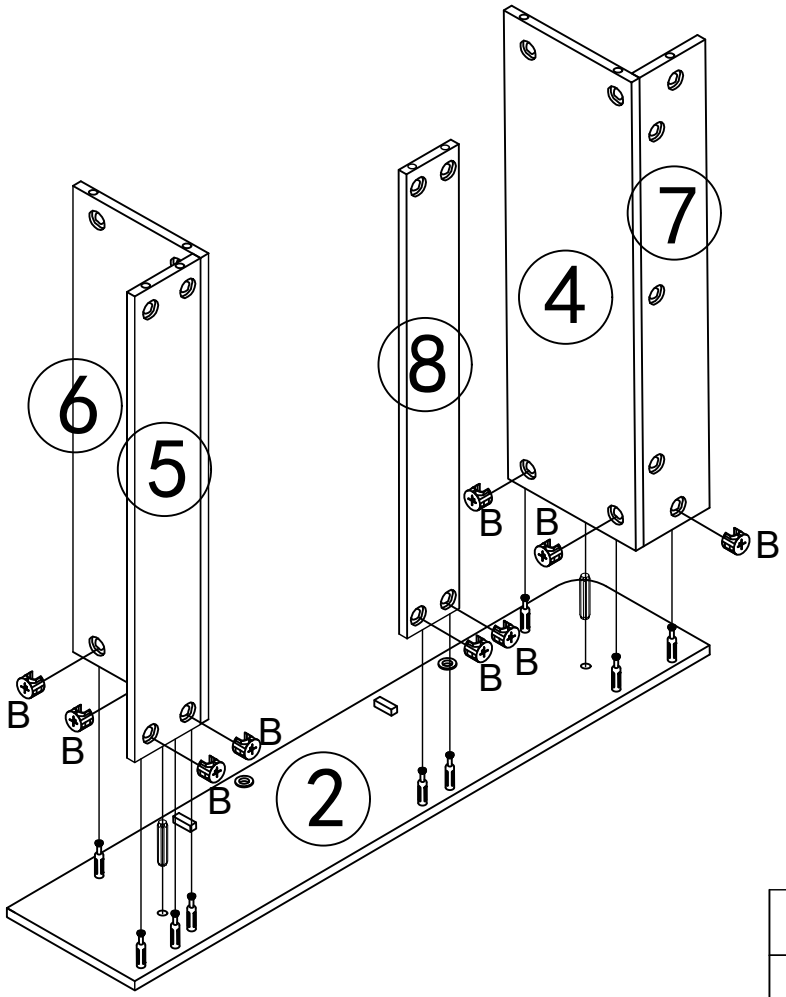


B		X 9
C		X 2

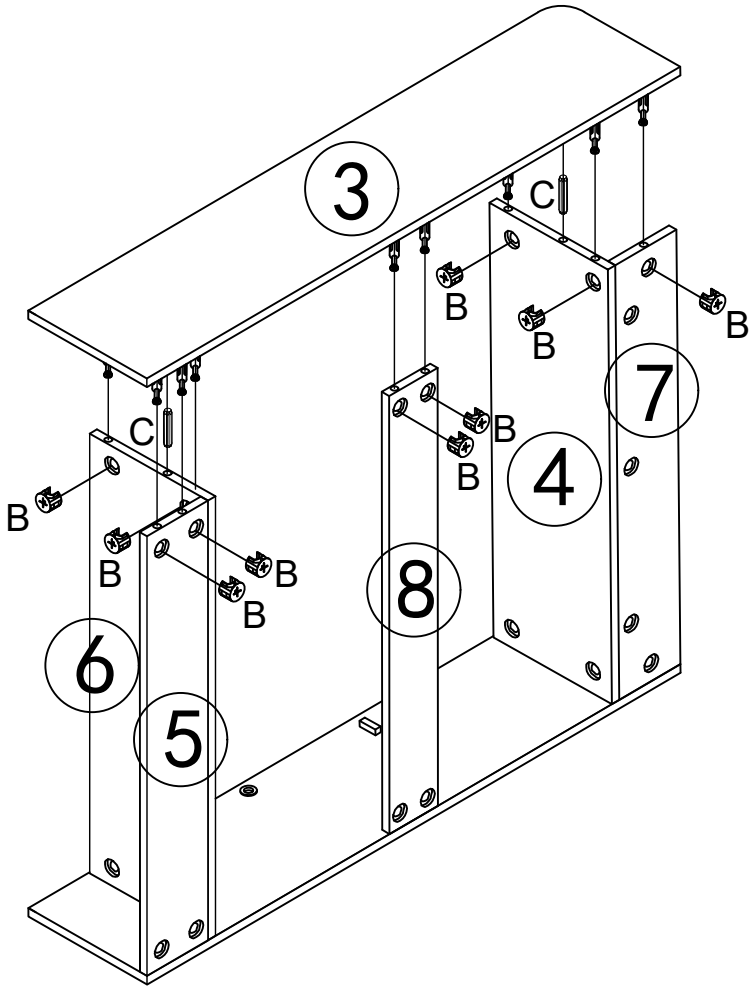

B		X 9
C		X 2


×2

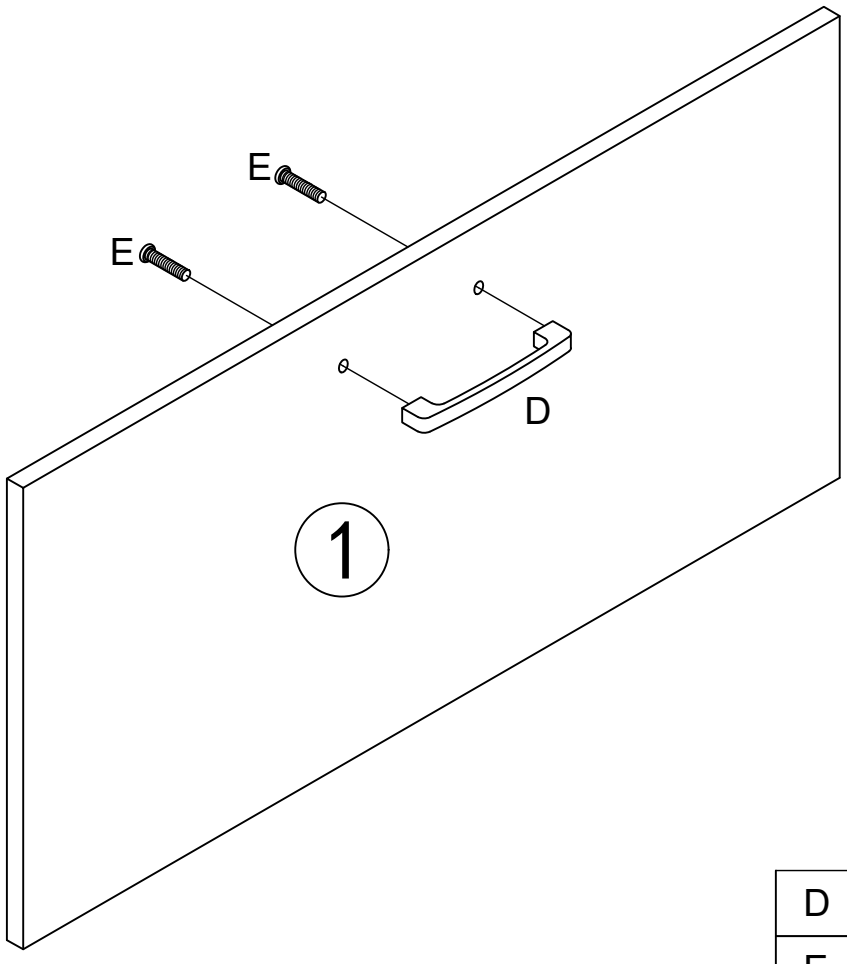

D		X 2
E		X 4

8


×2

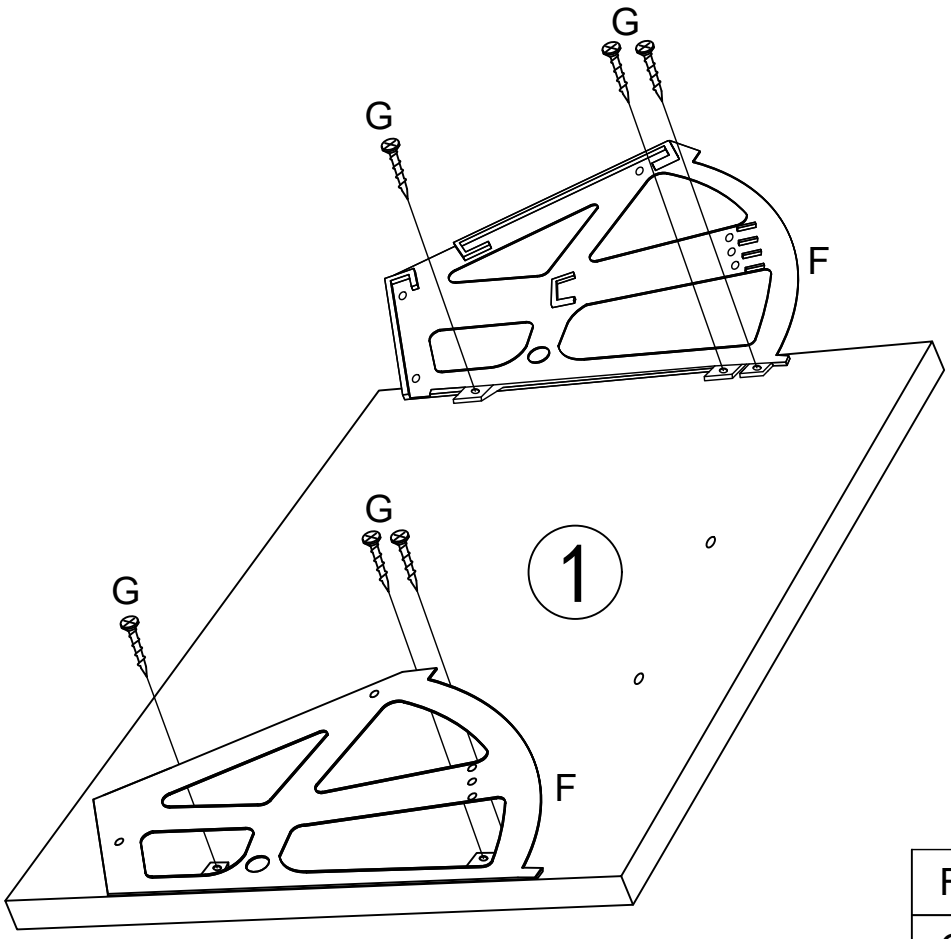

F	X 2
G	X 12

9

×2

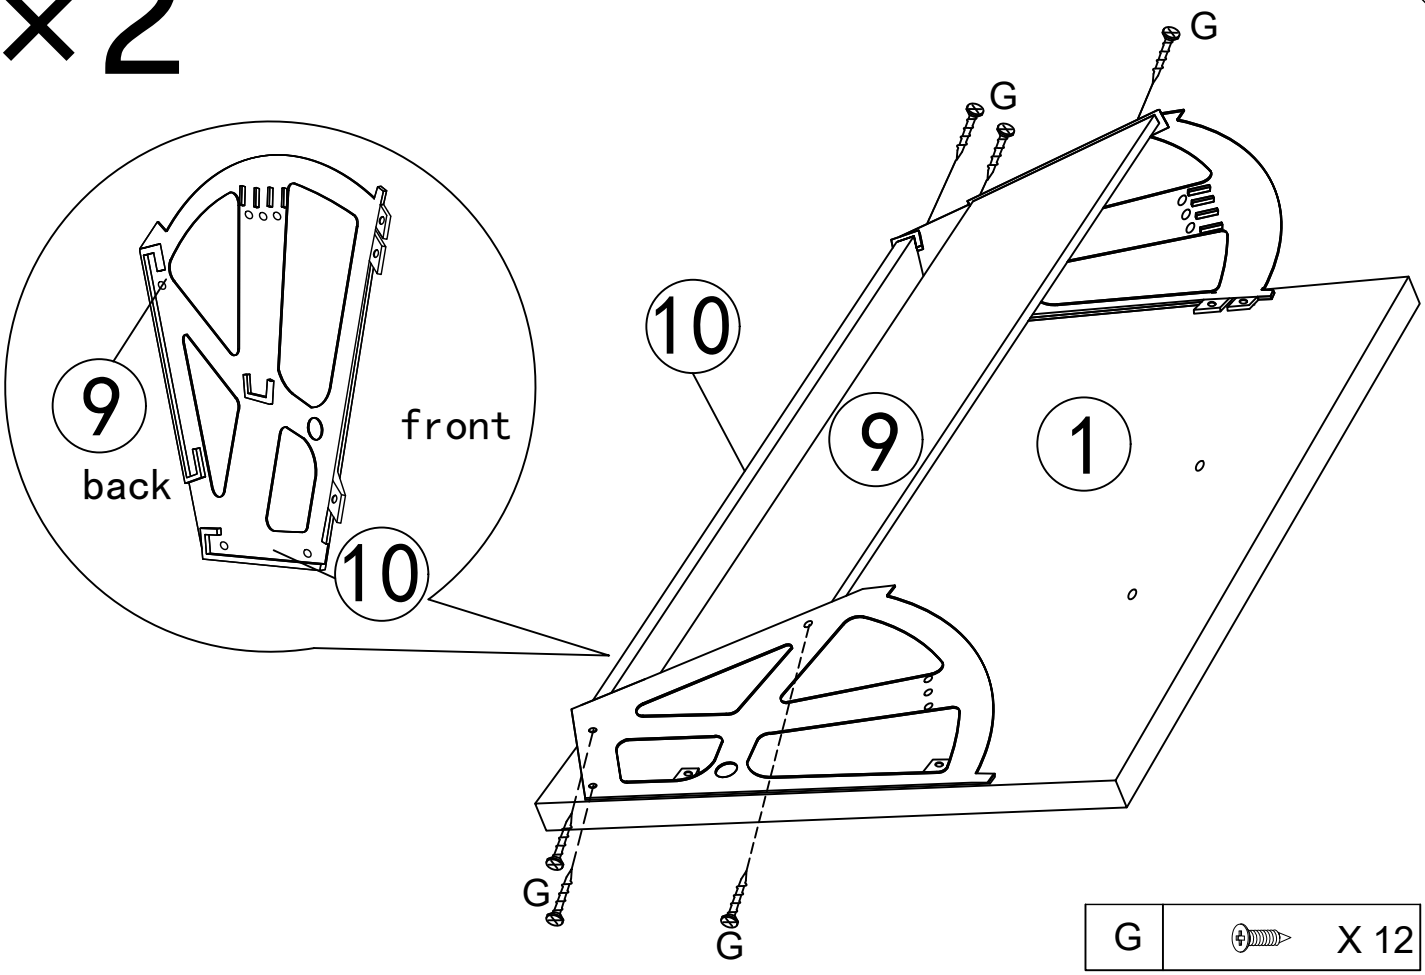



G	X 12

Installing the Anti-Tip restraint System


Instructions:

1. Align the cabinet to its final position against the wall.
2. Mark and drill holes on the wall to install the wall anchors and brackets (Hardware H).
3. Fasten the restraint strap securely to prevent the unit from tipping forward.

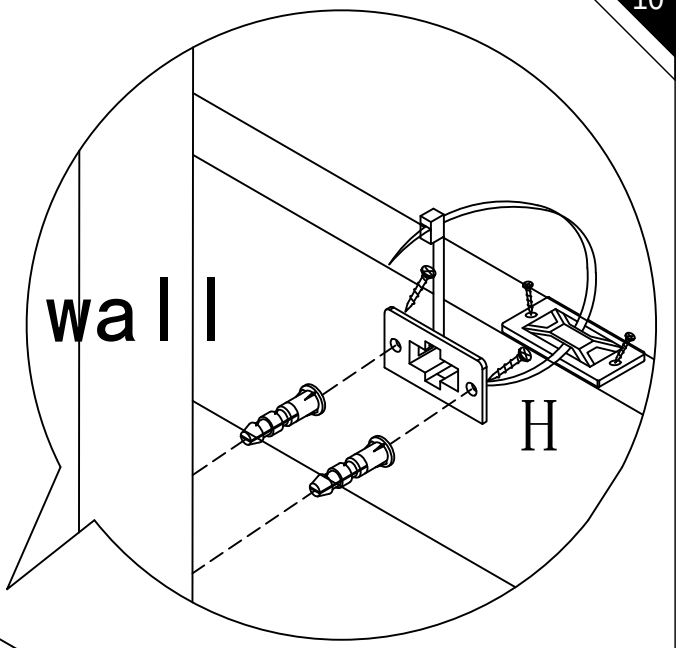


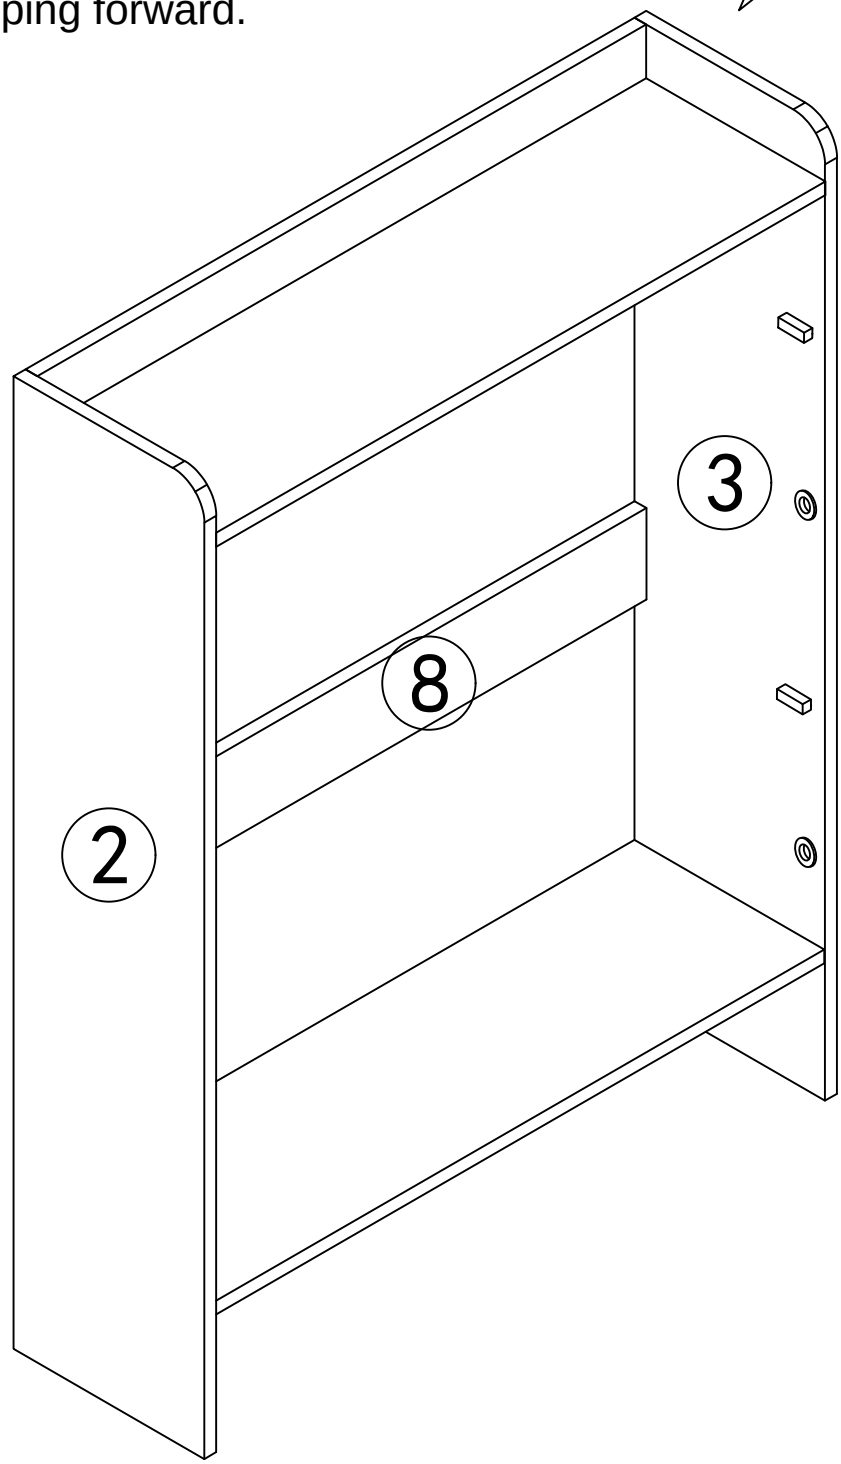


H		X 1

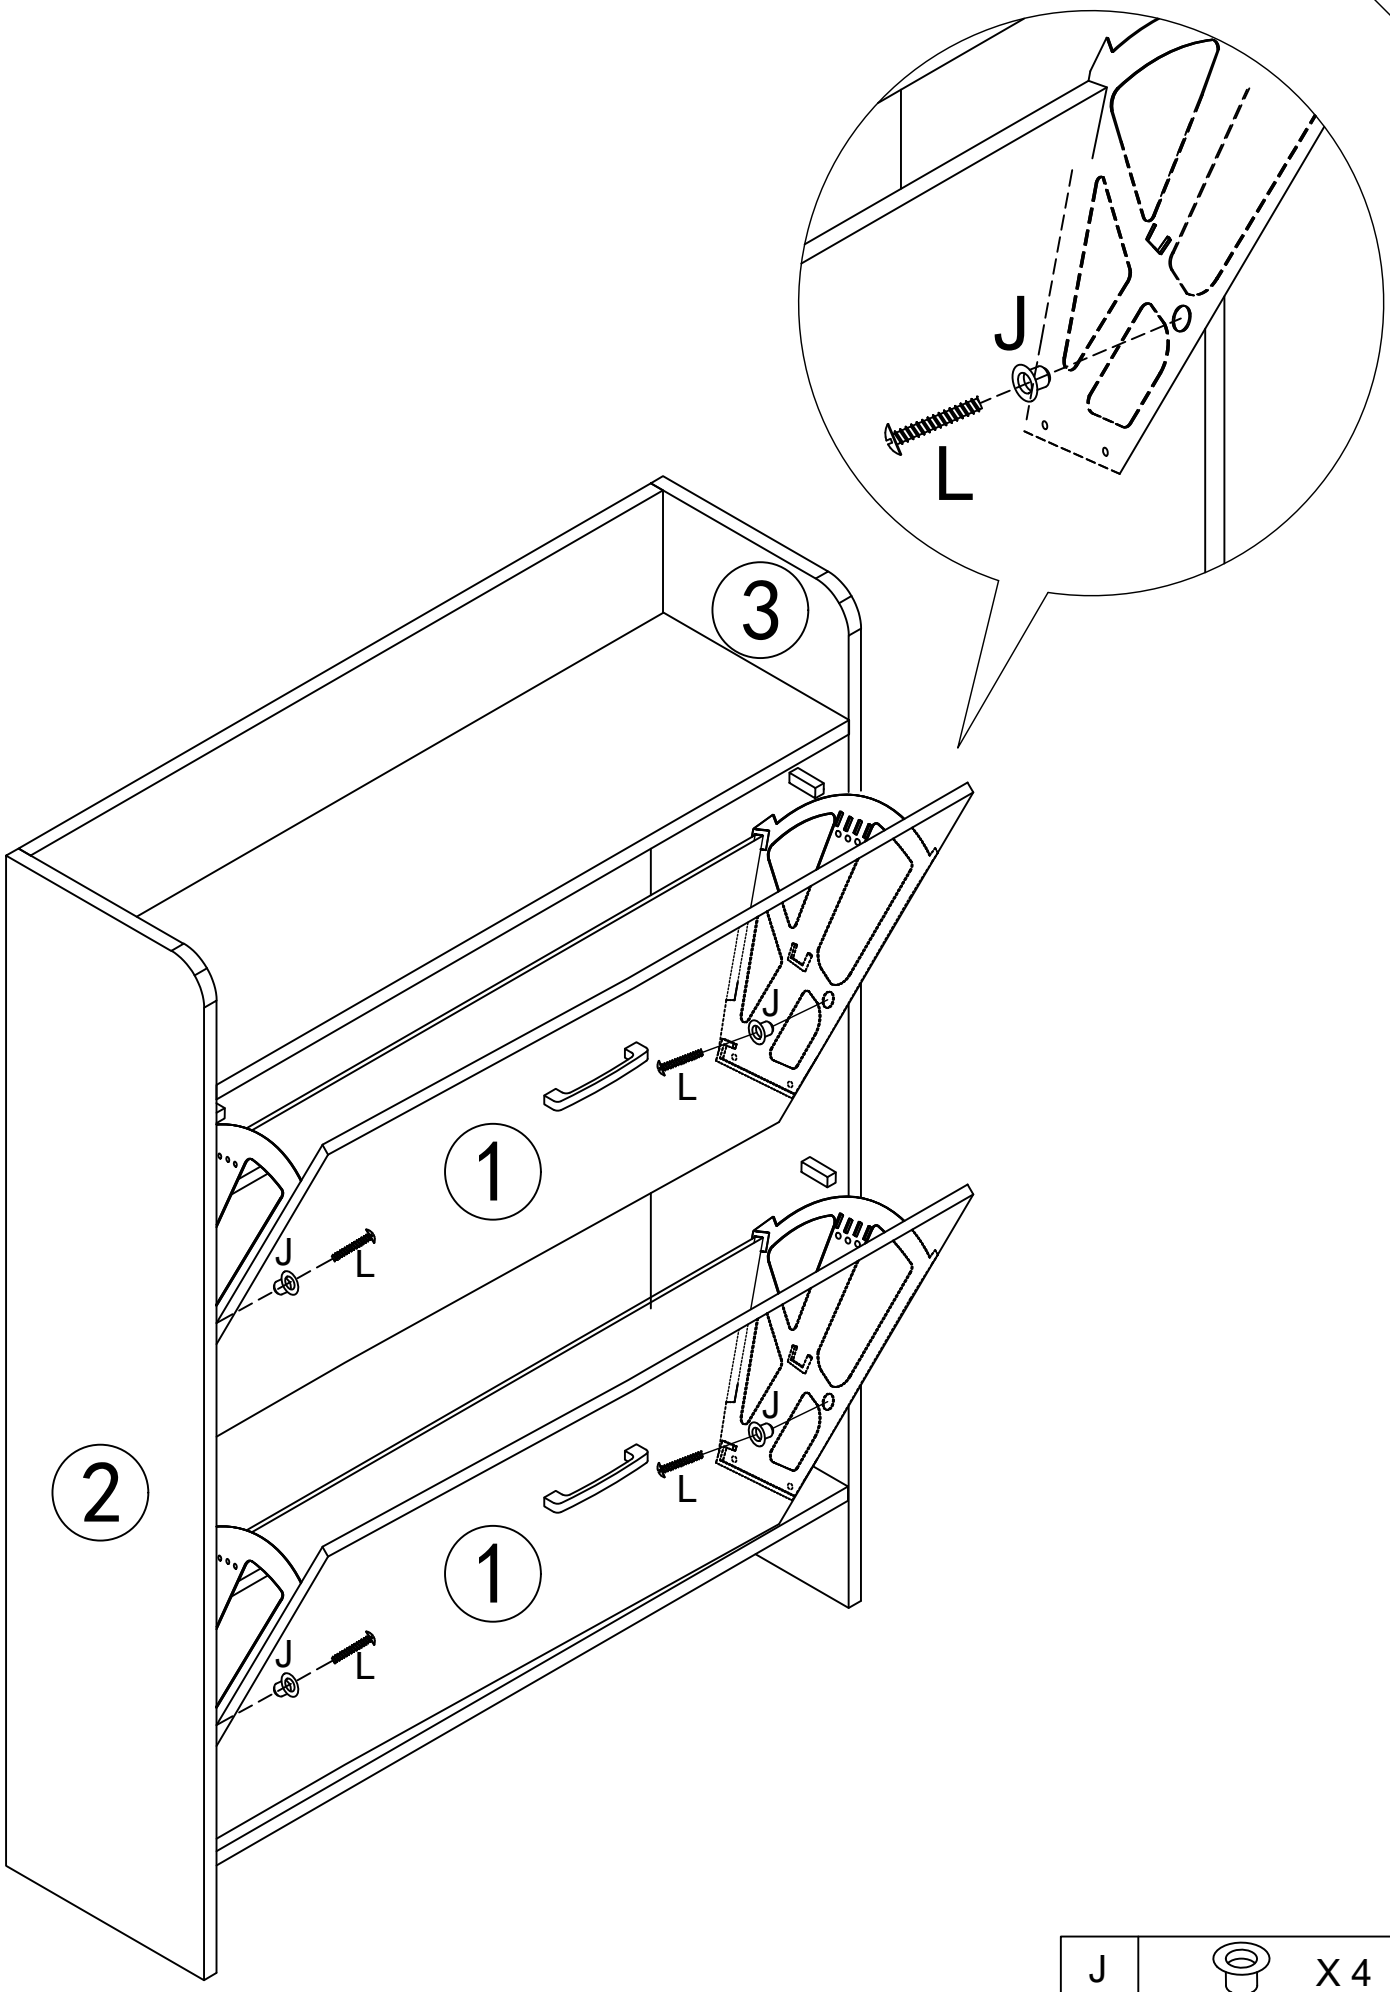

J		X 4
L		X 4

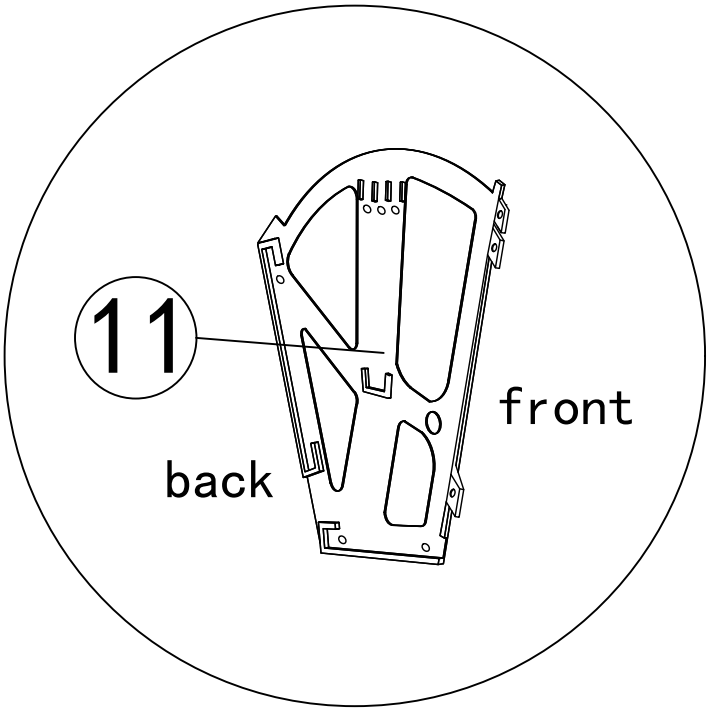

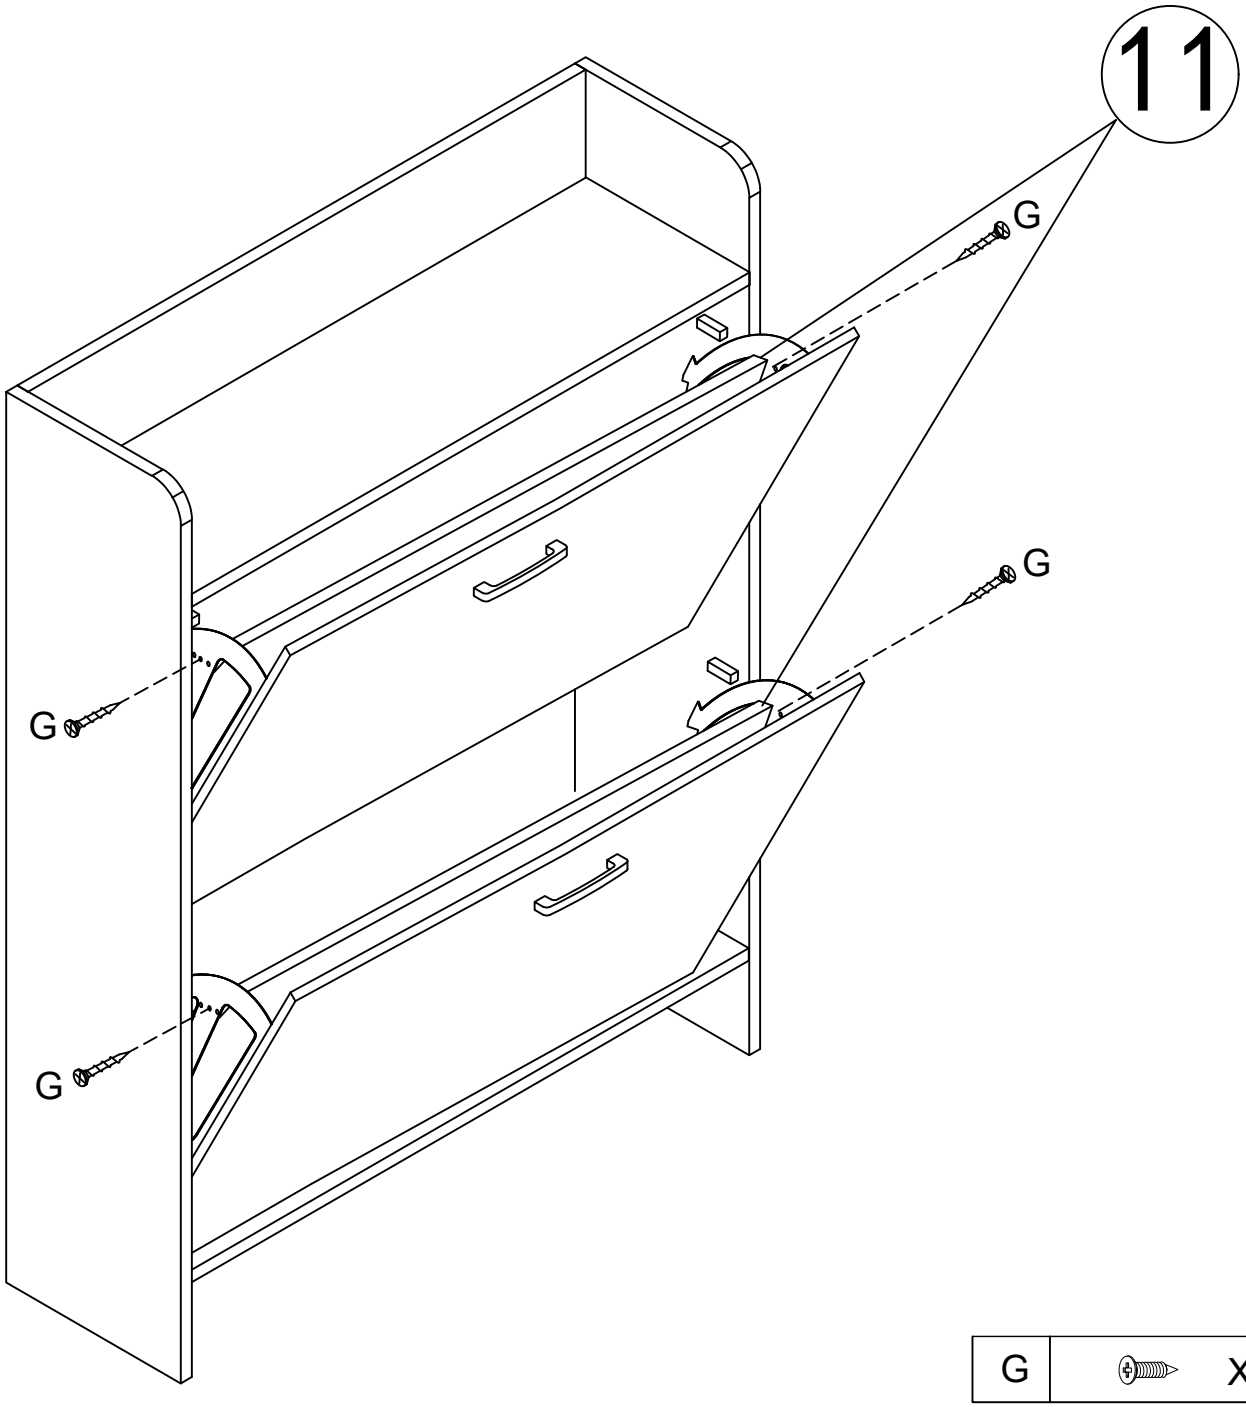

G	X 4



Care & Maintenance

Caution : You must read this before you proceed

Care & Maintenance

- For residential use only. Not intended for commercial use.
- Furniture can scratch floors. We recommend using furniture pads to protect your floor surfaces.
- Do not place hot items directly on the furniture surface.
- Do not clean furniture with harsh cleansers, abrasives, or chemical polishes.
- Avoid placing furniture in direct sunlight to prevent fading.
- Do not place furniture near heating or cooling vents.
- Do not write on the furniture surface without a padded barrier to protect it.
- For indoor use only. Do not expose the product to outdoor elements.
- Stains may be removed with a mild soap solution and a damp cloth
- Do not allow children to climb, stand, or jump on this furniture.
- Dust regularly and clean spills immediately using a clean, non-colored, lint-free cloth.