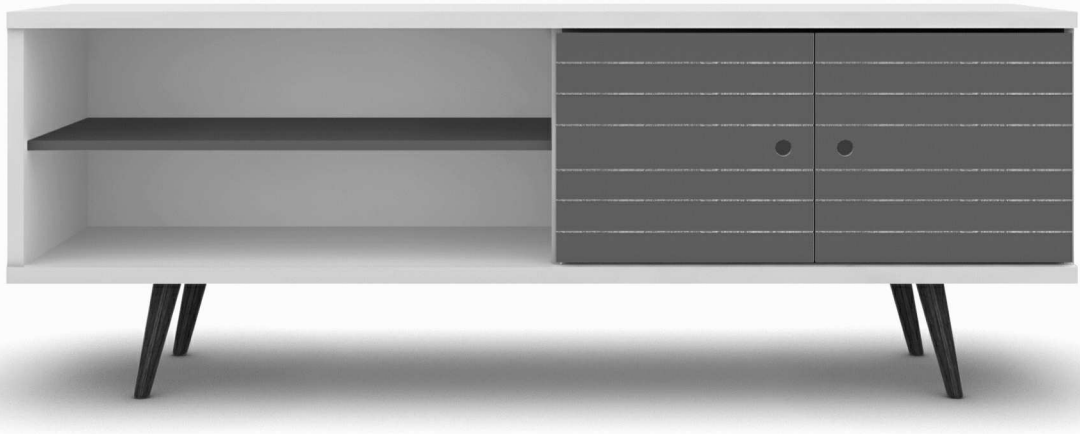

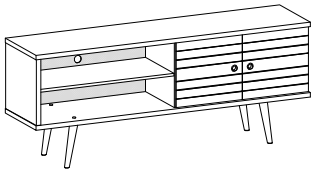

TV Stand 62.99

INCLUDED IN THE PACKAGE

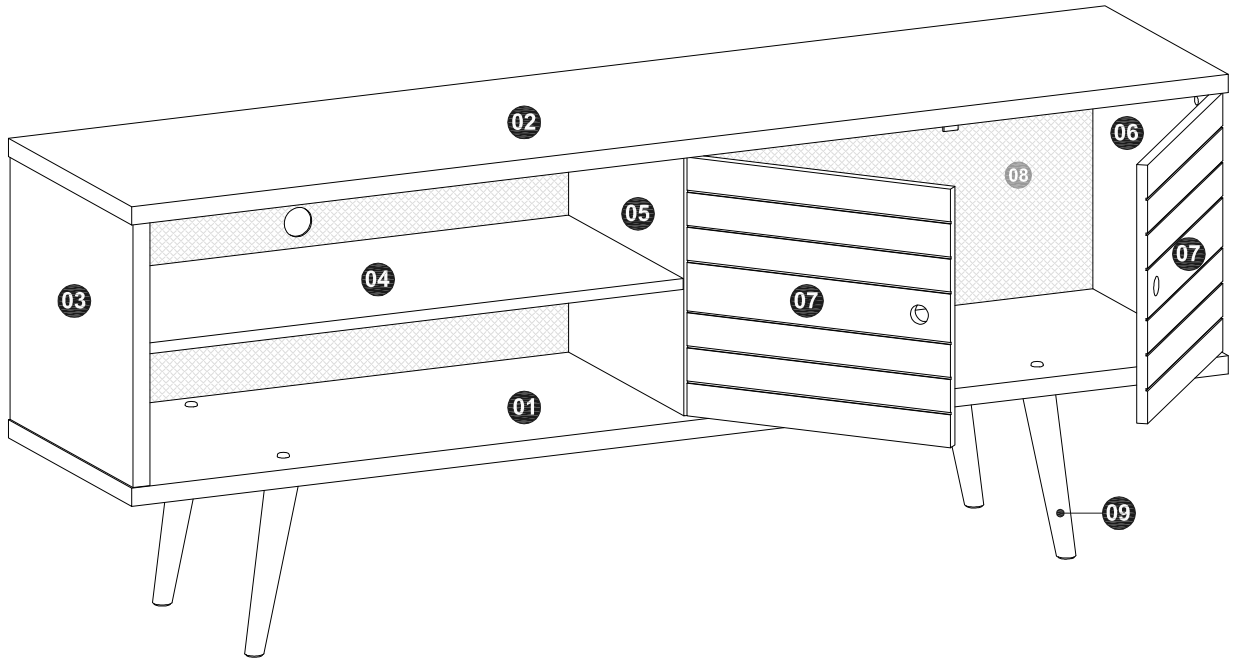

REAR VIEW

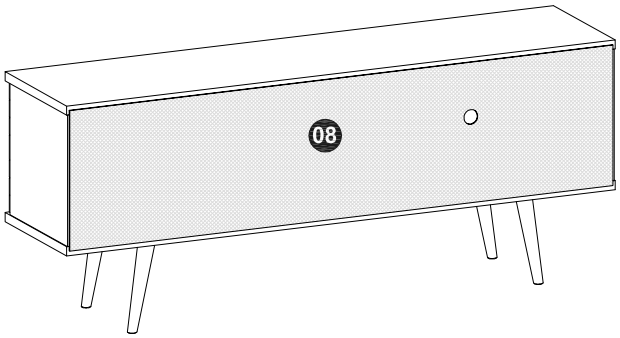

FRONT VIEW

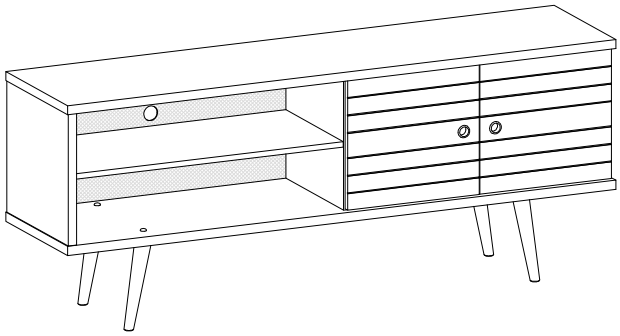

n.° ID	Parts Identification (Description)	Quantity
01	*Base*	1
02	*Top Panel*	1
03	*Left Side Panel*	1
04	*Shelf*	1
05	*Partition*	1
06	*Right Side Panel*	1
07	*Door*	2
08	*Back Panel*	1
09	*Wood Feet*	4

TOOLS NEEDED

INCLUDED IN THE PACKAGE

A *4x*

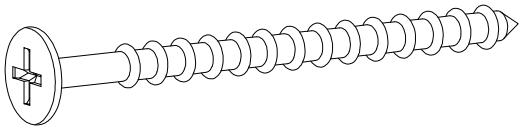

B *4x*



C *16x*

D *6x*



E *8x*



F *8x*

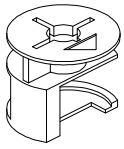

G *6x*



H *45x*

I *4x*

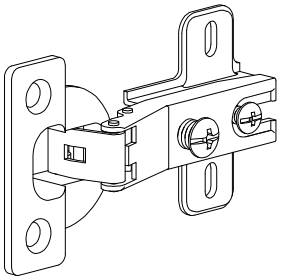

J *16x*

K *4x*

L *1x*

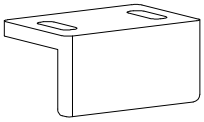

M *2x*



N *2x*

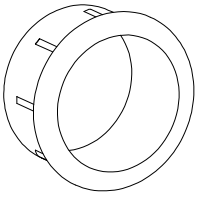

STEP 1

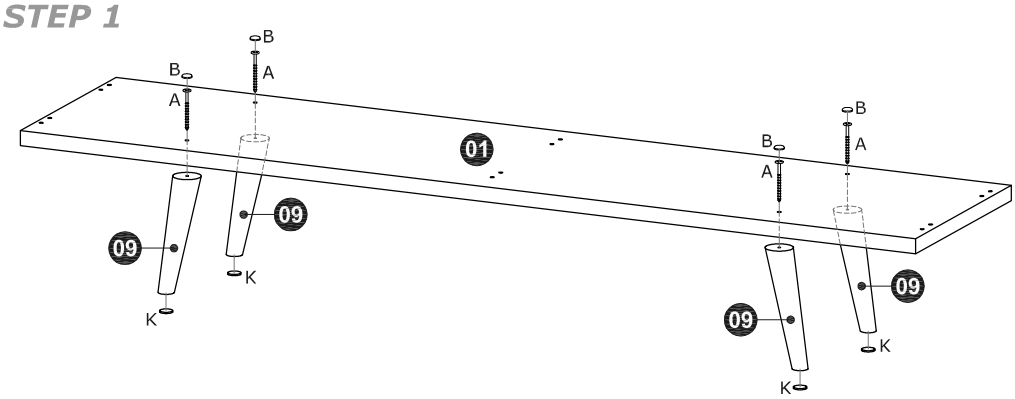

- *Fix the feet (9) under the Base (01) with bolts (A).*
- *Apply the protective felt (K) on the bottom of the feet (09).*
- *Apply the plastic covers (B) on top of the bolts (A).*

STEP 2

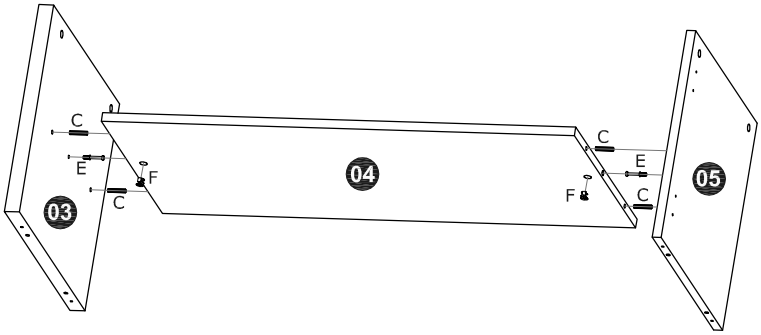

- *Connect the Shelf (04) into Left Side Panel (03) and Partition (05) with dowels (C) and Minifix hardware (E + F).*

STEP 3

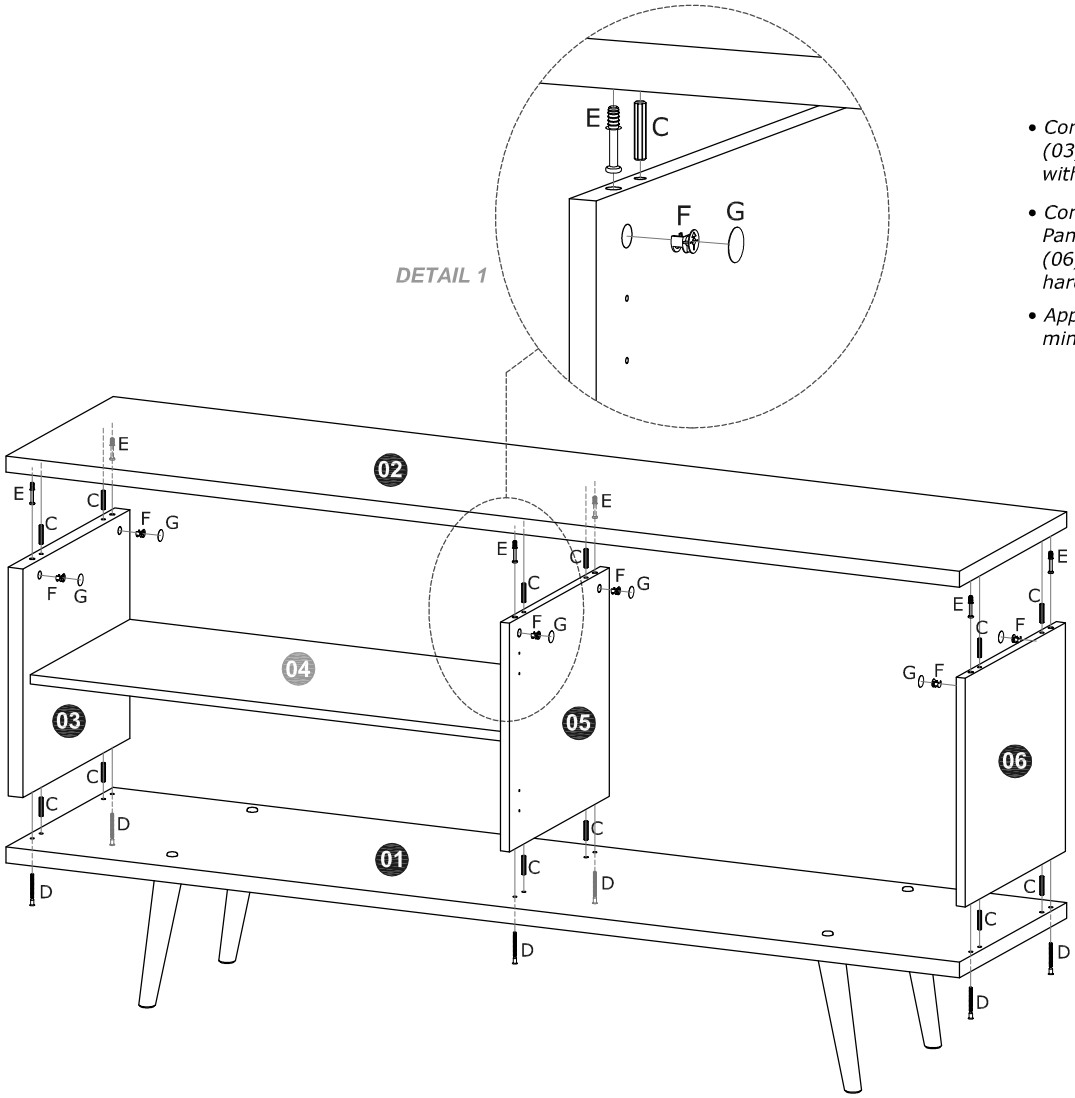

- *Connect Side Panels and Partition (03), (05) and (06) into Base (01) with dowels (C) and bolts (D).*
- *Connect Top Panel (02) onto Side Panels and Partitions (03), (05) and (06) with dowels (C) and Minifix hardware (E + F).*
- *Apply adhesive covers (G) on the minifix hardware (F).*

STEP 4

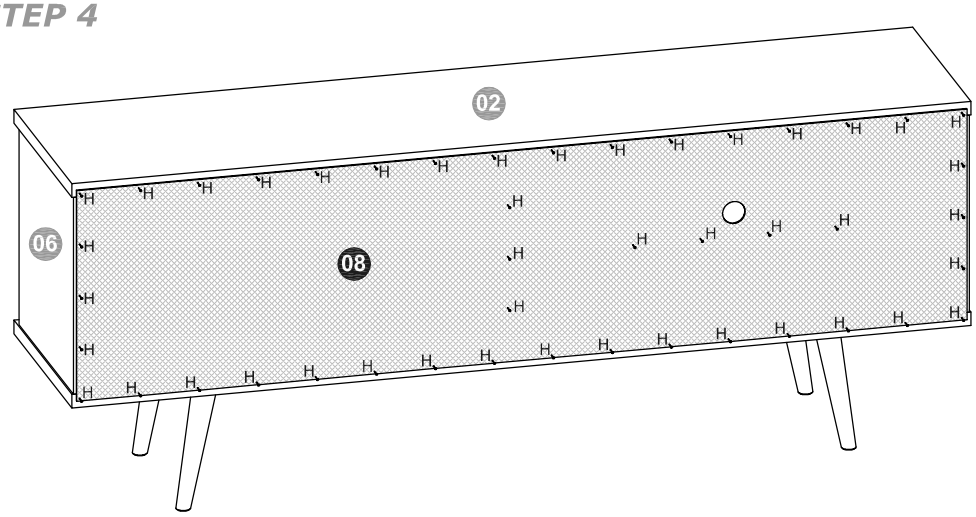

- *Connect Back Panel (08) with nails (H).*

STEP 5

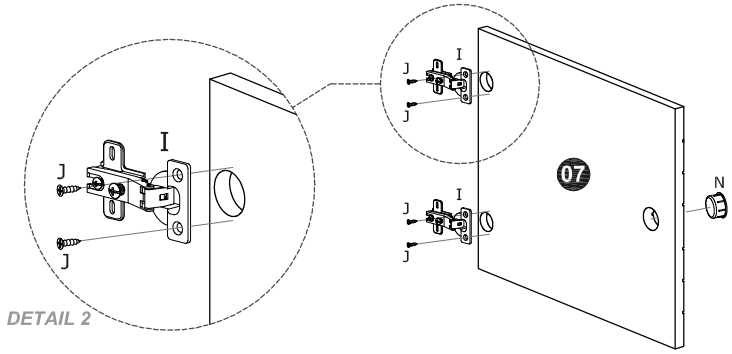

Preparing the Doors (07):

- *Insert the plastic ring (N) in the Doors (07).*
- *Fix the hinges (I) in the two Doors (07) with bolts (J), as shown in DETAIL 2.*

STEP 6

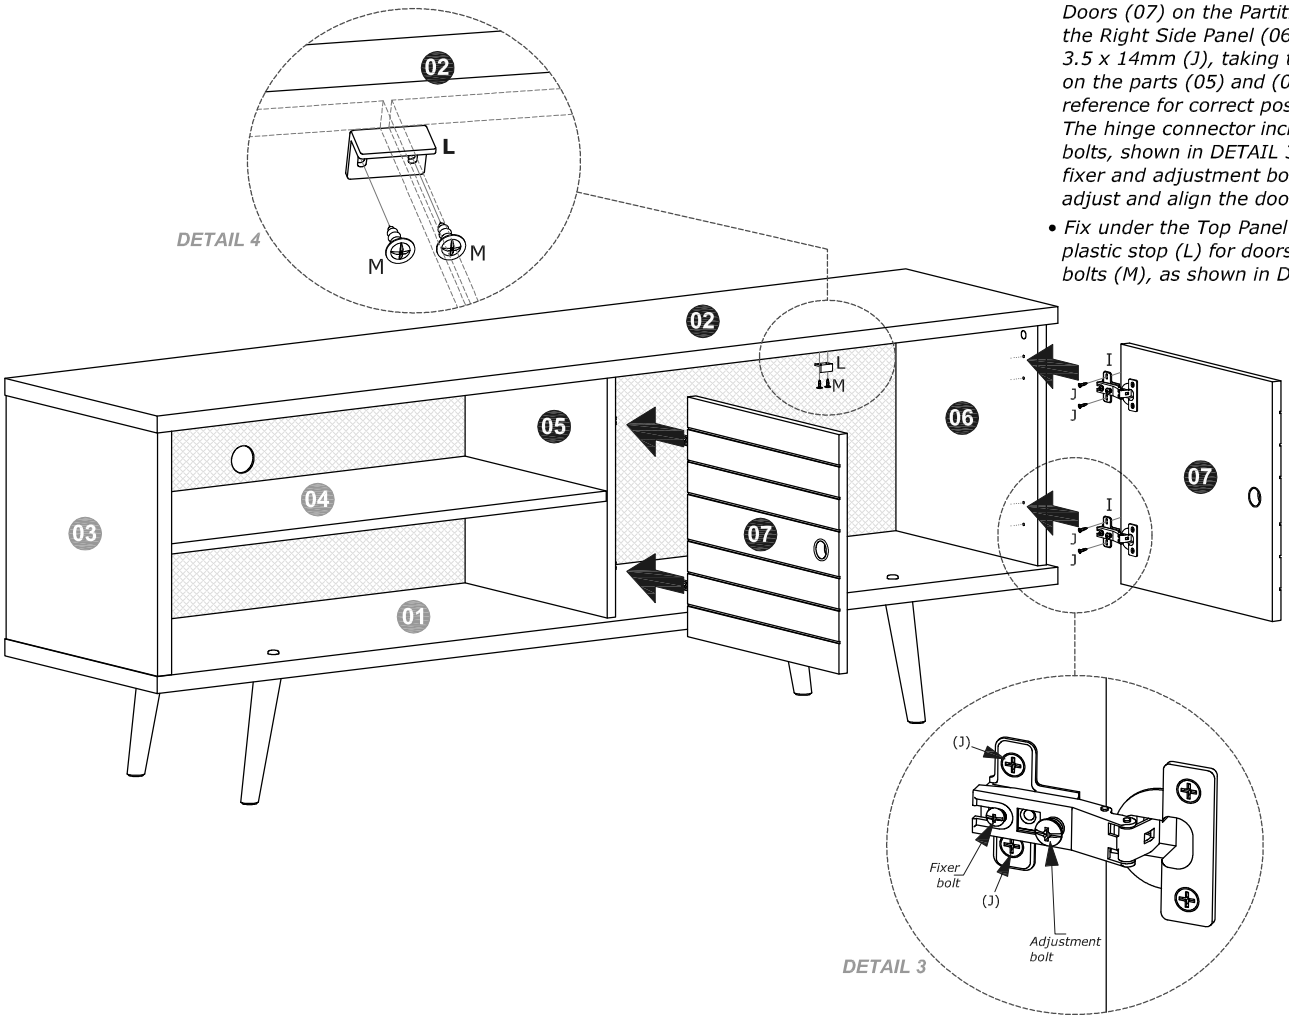

Installing the Doors (07):

- *Fix the hinge connectors (I) of the Doors (07) on the Partition (05) and the Right Side Panel (06) with bolts 3.5 x 14mm (J), taking the markings on the parts (05) and (06) as reference for correct positioning. The hinge connector includes two bolts, shown in DETAIL 3. Use the fixer and adjustment bolts to tighten, adjust and align the doors.*
- *Fix under the Top Panel (02) the plastic stop (L) for doors with bolts (M), as shown in DETAIL 4.*