

Drifter Lantern™ Instructions

Congratulations on the purchase of your Drifter Lantern.™
Setting up your Lantern is simple, follow the steps below:

Specs:



10-12 hr run time on full brightness




2-3 hr AC charging




Use a slightly damp cloth to spot clean (if needed). Wipe dry with a clean dry cloth.

Rated IP65 - Rain and splash resistant

Parts Included in Package:




5.5 ft. Indoor Power Cord
with 120V USB Wall Adapter

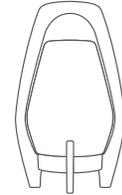

Glass Lantern with LED Base
Unit and Wood Handle

Instructions:

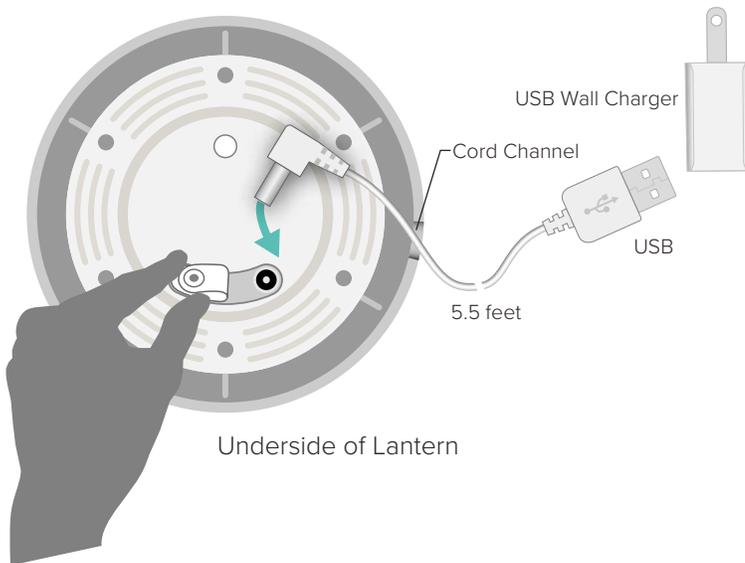

Underside of Lantern



Underside of Lantern

1. Charge Up Lantern using Provided Cord

- Lift up rubber seal to access plugin hole.
- Insert the round connector (DC) of the cord into plugin hole.
- Insert the USB end into the provided wall charger and plug charger into wall outlet (*CORD AND WALL CHARGER FOR INDOOR USE ONLY*).
- A small red light will turn on when charging and will shut off when lantern is fully charged.
- If the battery was fully drained, it may take a few minutes of charging for the light to achieve full brightness.

2. Turn on using Button Underneath Lantern

- Press 1x to turn on to full brightness.
- Press 2x for medium brightness.
- Press 3x for low brightness.
- Press 4x to turn off.

THANK YOU FOR YOUR PURCHASE!

We want you to be completely satisfied. If you have any questions please contact our customer service department.

SUPPORT@ALLSOPGARDEN.COM | 800-426-4303

3. Enjoy!



Love your product? Please leave us a review!



Instructions pour Lanterne de Drifter^{MC}

Félicitations pour l'achat de votre Drifter Lantern^{MC}!
La configuration de votre lanterne est simple, suivez les étapes ci-dessous :

Spécifications :



Autonomie 10 à 12 heures avec une luminosité maximale




Charge c.a. 2 à 3 heures



Utilisez un chiffon légèrement humide pour nettoyer les taches (si nécessaire). Essuyez avec un chiffon propre et sec.

Classé IP65 - Résistant à la pluie et aux éclaboussures

Pièces incluses dans la boîte :




Cordon d'alimentation intérieur de 5,5 pi avec chargeur mural USB 120 V



Lanterne en verre avec unité de base à DEL et poignée en bois

Instructions :

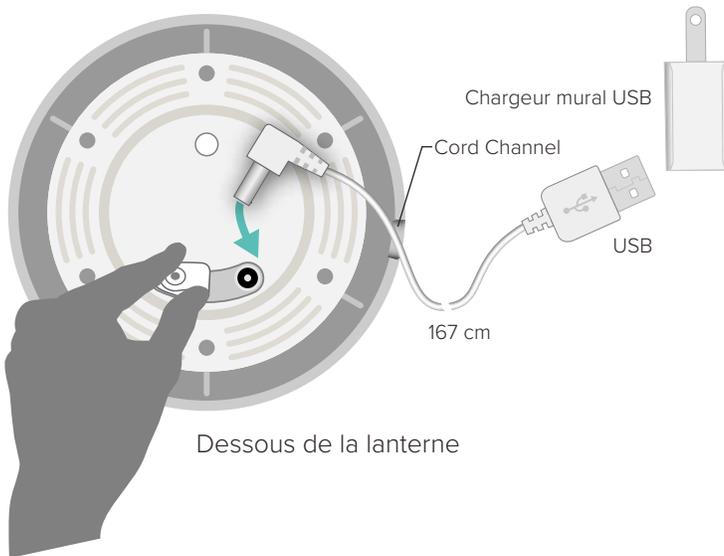

Dessous de la lanterne



Dessous de la lanterne

1. Chargez la lanterne à l'aide du cordon fourni.

- Soulevez le joint en caoutchouc pour exposer la prise c.c.
- Insérez le cordon fourni (extrémité à connecteur c.c.) dans le trou de la prise.
- Insérez l'extrémité USB dans le chargeur mural fourni et branchez le chargeur dans la prise murale (CORDON ET CHARGEUR MURAL À USAGE INTÉRIEUR SEULEMENT).
- Un petit voyant rouge s'allume pendant la charge et s'éteint quand la lanterne est complètement chargée.
- Si la pile est complètement déchargée, il faudra peut-être quelques minutes de charge pour que la lanterne atteigne sa pleine luminosité.

2. Allumez la lanterne à l'aide du bouton placé dessous.

- Appuyez 1 fois pour une luminosité maximale.
- Appuyez 2 fois pour une luminosité moyenne.
- Appuyez 3 fois pour une luminosité faible.
- Appuyez 4 fois pour éteindre.

MERCI POUR VOTRE ACHAT!

Nous voulons que vous soyez entièrement satisfait. Si tu as quelque questions, veuillez contacter notre service client.

3. Prendre plaisir!



SUPPORT@ALLSOPGARDEN.COM | 800-426-4303

Vous aimez votre produit ? S'il vous plaît laissez-nous un avis!

