

INSTALLATION
Product Manual

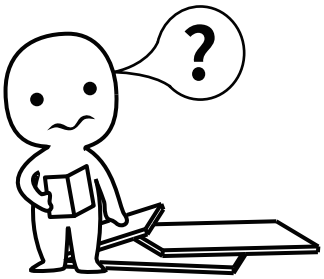


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.

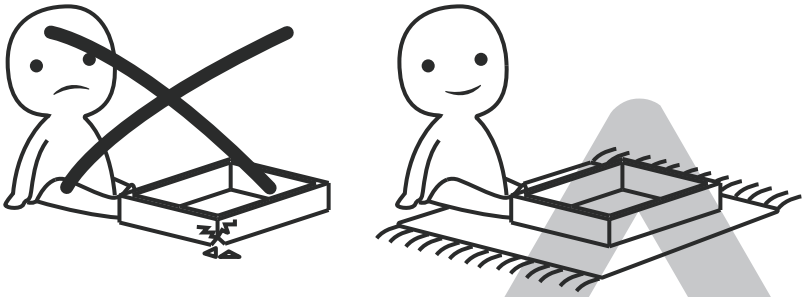


AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.

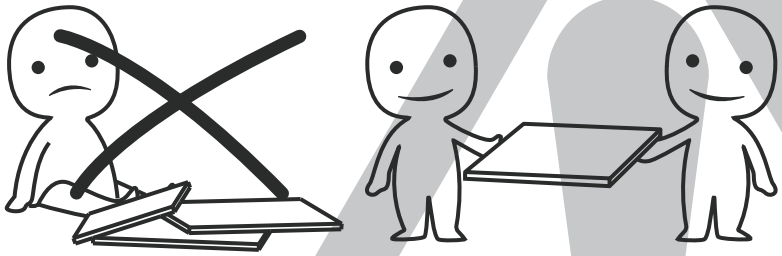

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

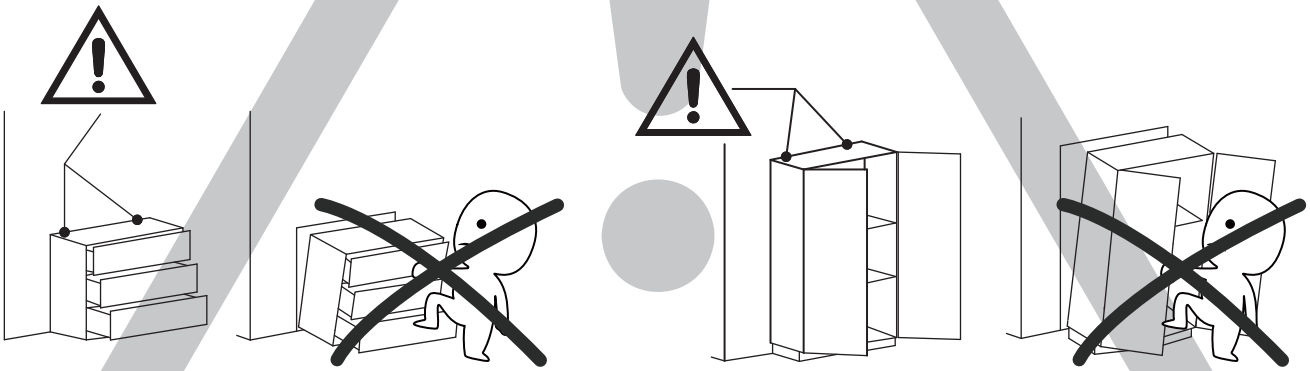

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.




For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.



Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



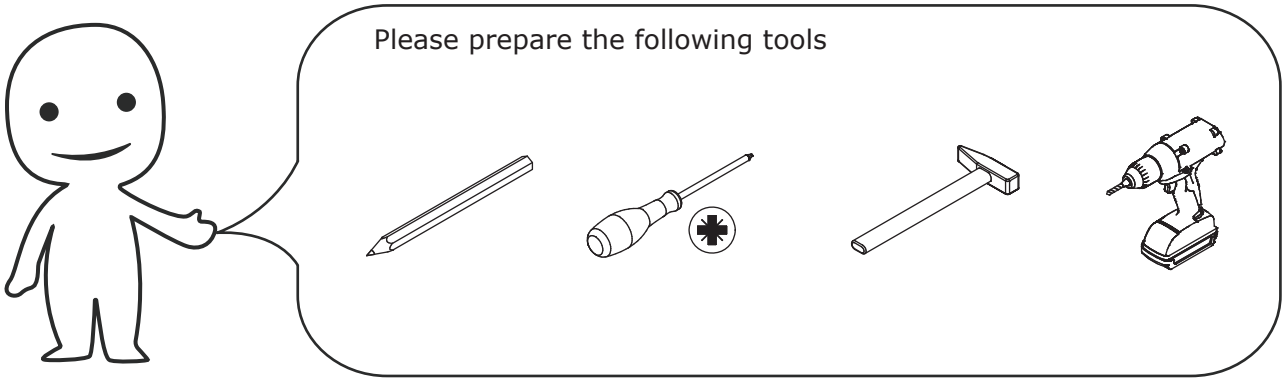








When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 100	B x 96	C x 66	D x 56	E x 12
				
∅6 x 35 mm	∅15 x 11 mm	∅8 x 30 mm	∅3 x 12 mm	∅6 x 25 mm

F x 4	G x 41	H x 48	J x 2	K x 100
				
∅15 x 9.5 mm	∅6 x 30 mm	∅3.5 x 14 mm	∅6 x 20 mm	

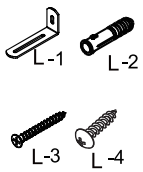L x 2	M x 4	N x 4	P x 36	Q x 8
				
		∅4 x 20 mm		

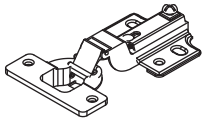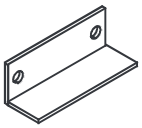R x 8	S x 2	T x 6
		
		∅5 x 40 mm

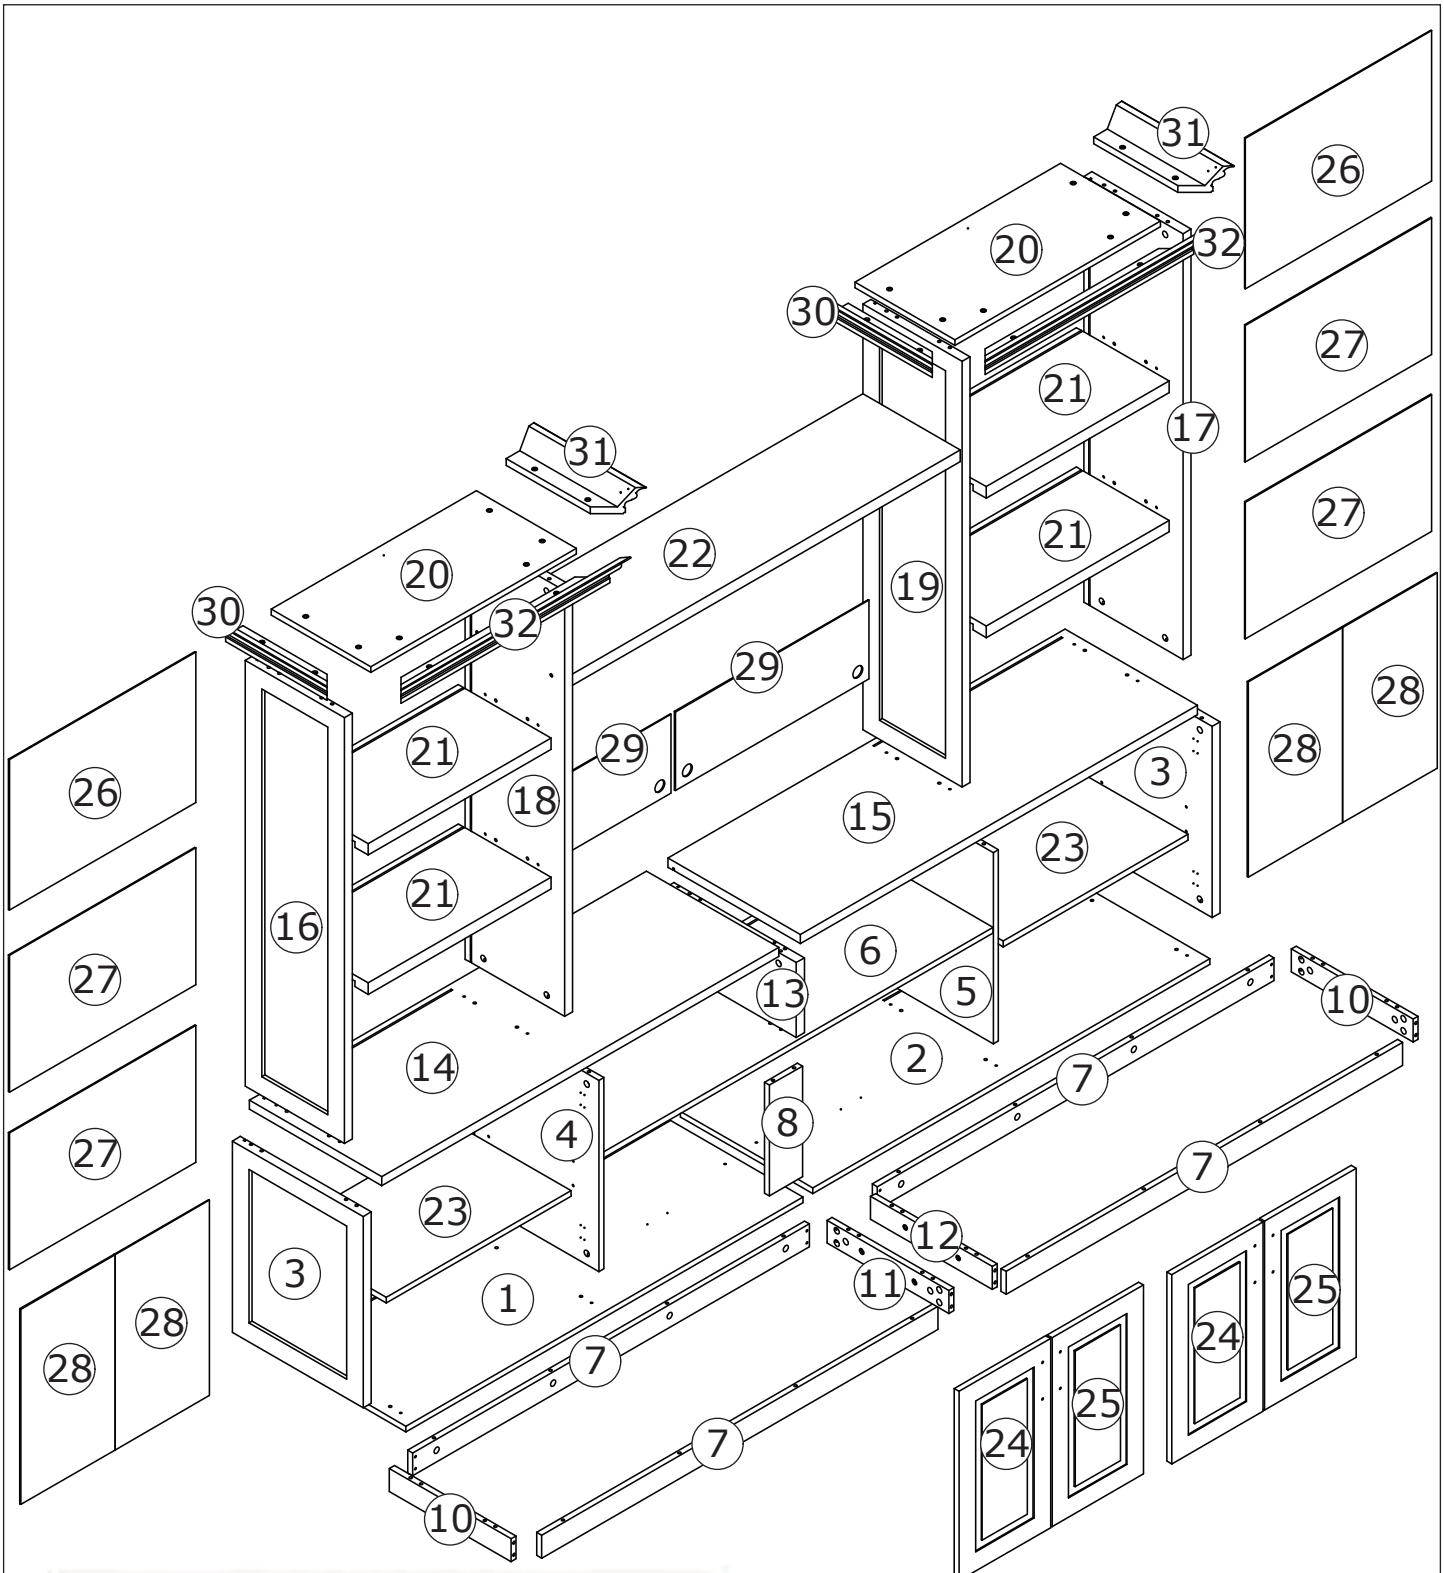

⚠WARNING






Children have died from furniture tipover.To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb or hang on drawers,doors,or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label.
Do not remove!

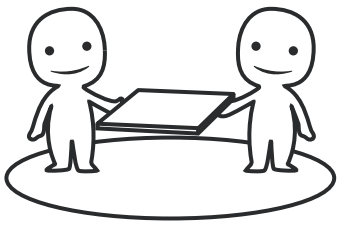


ASSEMBLED BY 2 ADULTS

1



A x 12	C x 4	
		
∅6 x 35 mm	∅8 x 30 mm	

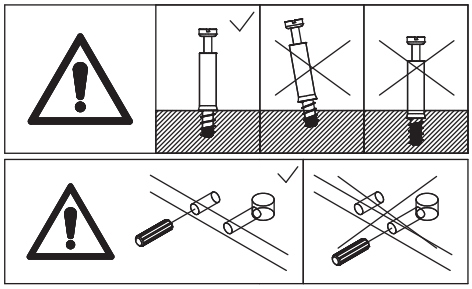


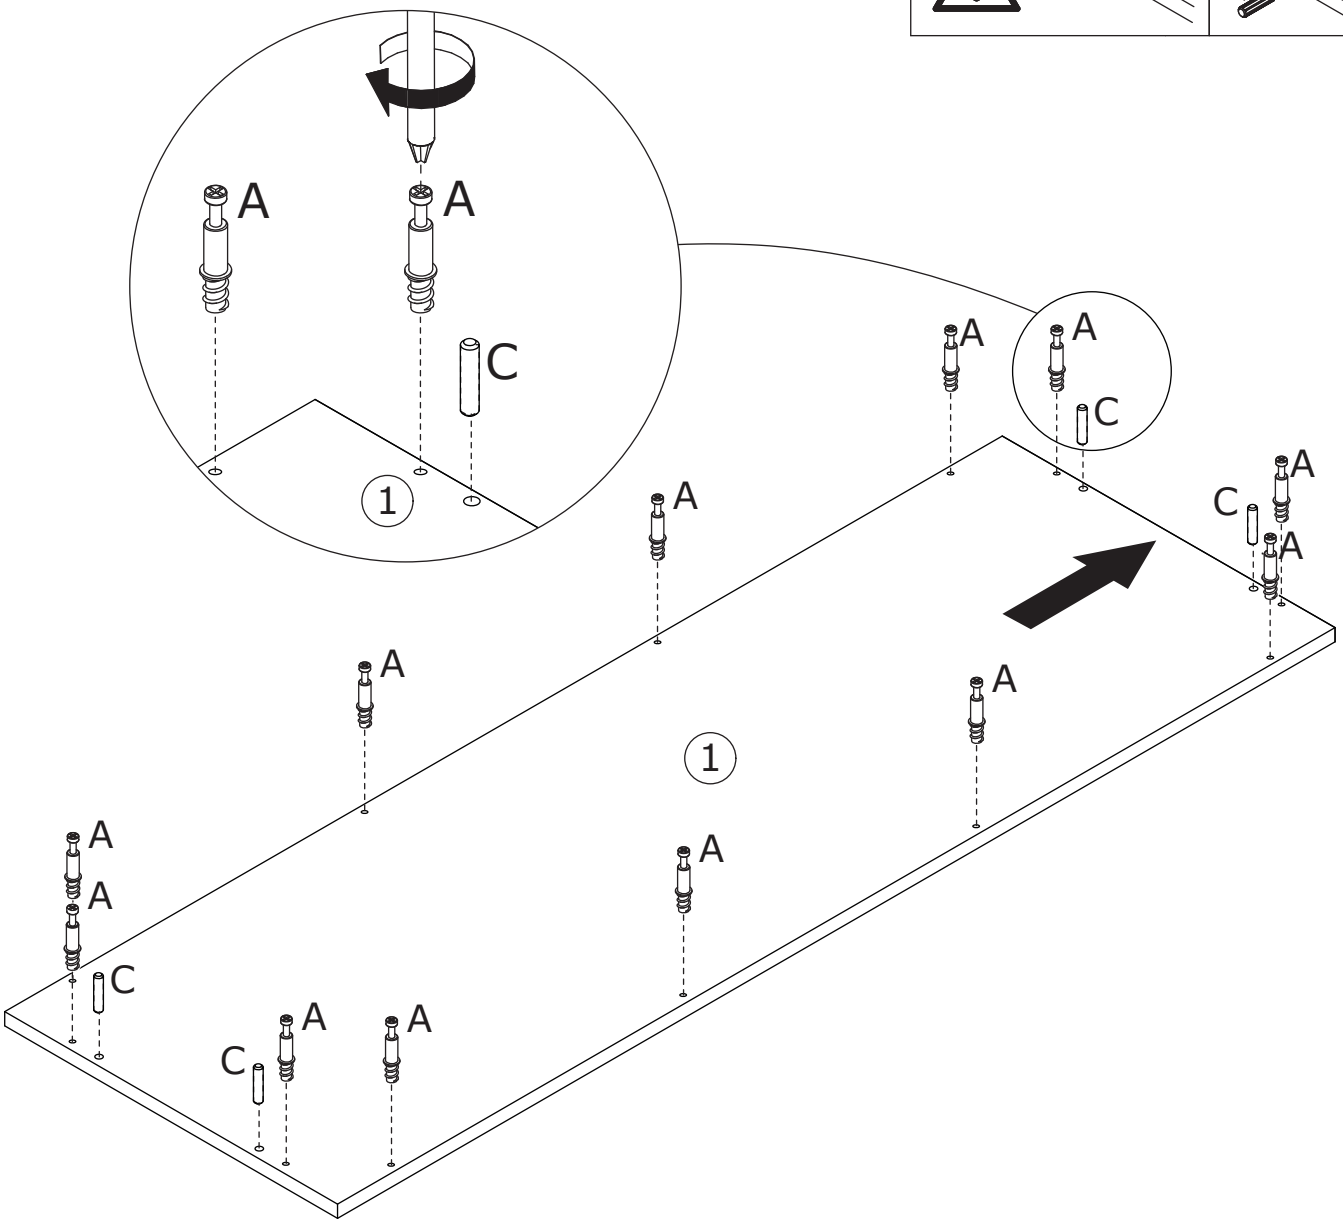


Screw eccentric rod (A) and insert wooden dowel (C) into board 1.

2

A x 12	C x 4	
		
∅6 x 35 mm	∅8 x 30 mm	

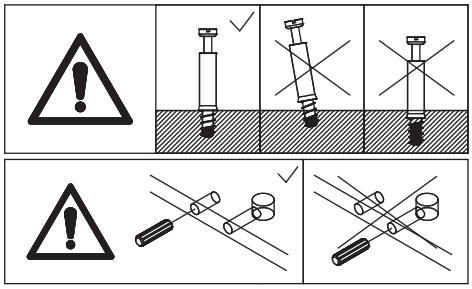


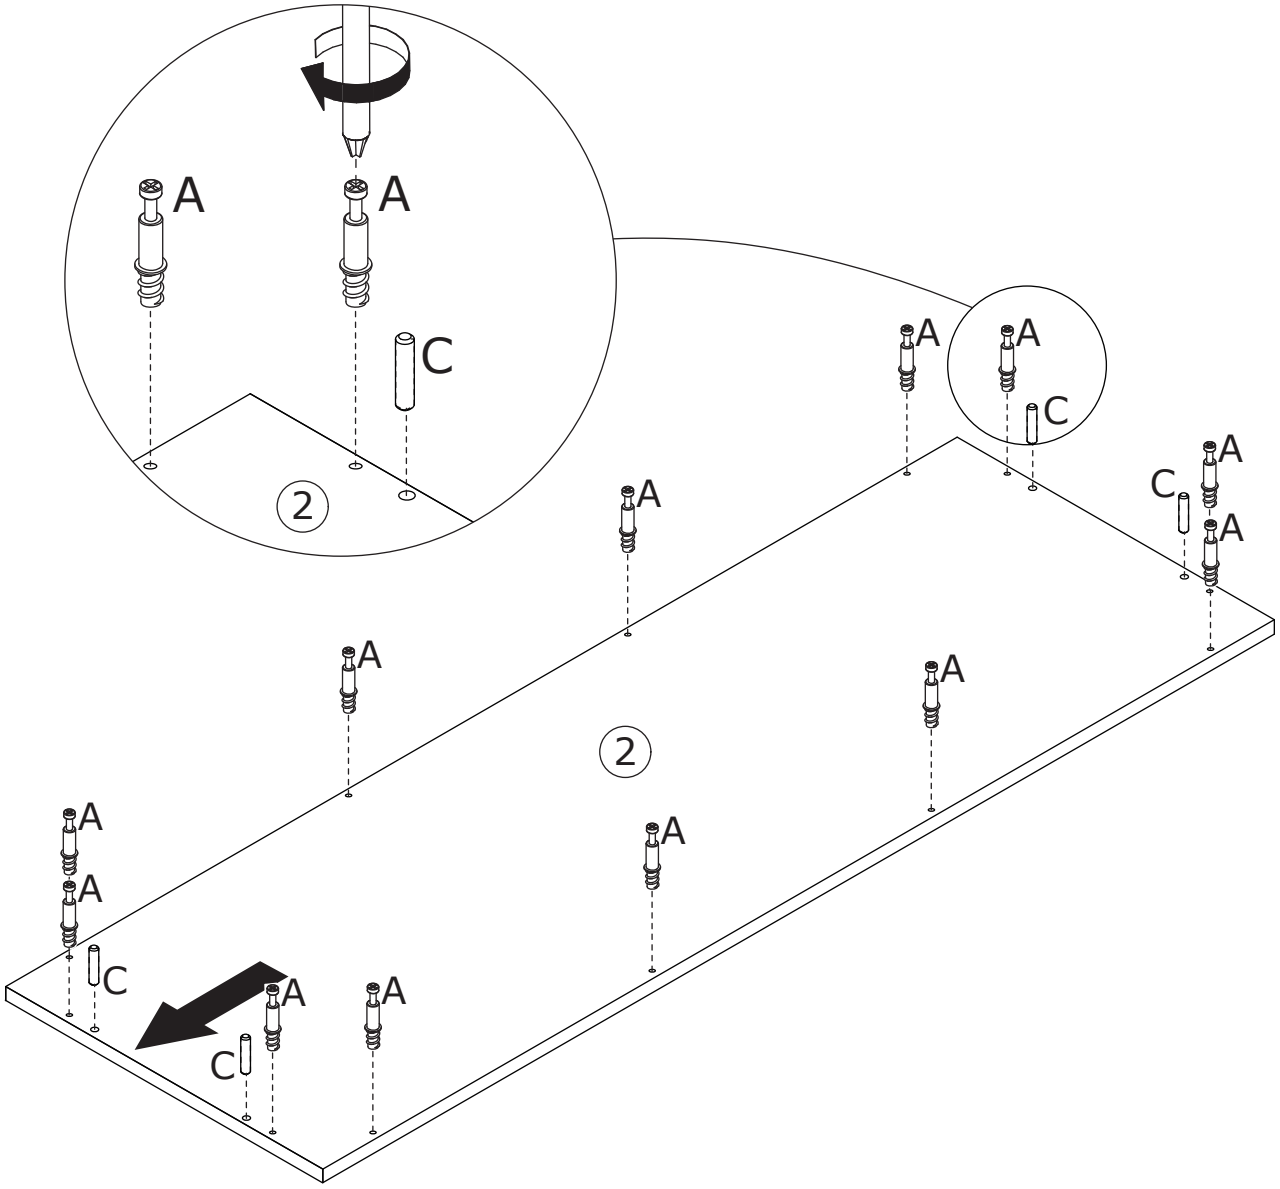


Screw eccentric rod (A) and insert wooden dowel (C) into board 2.


3


A x 16



∅6 x 35 mm



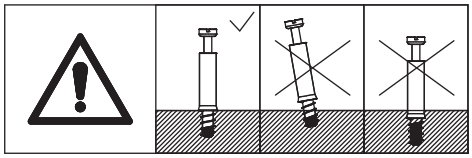

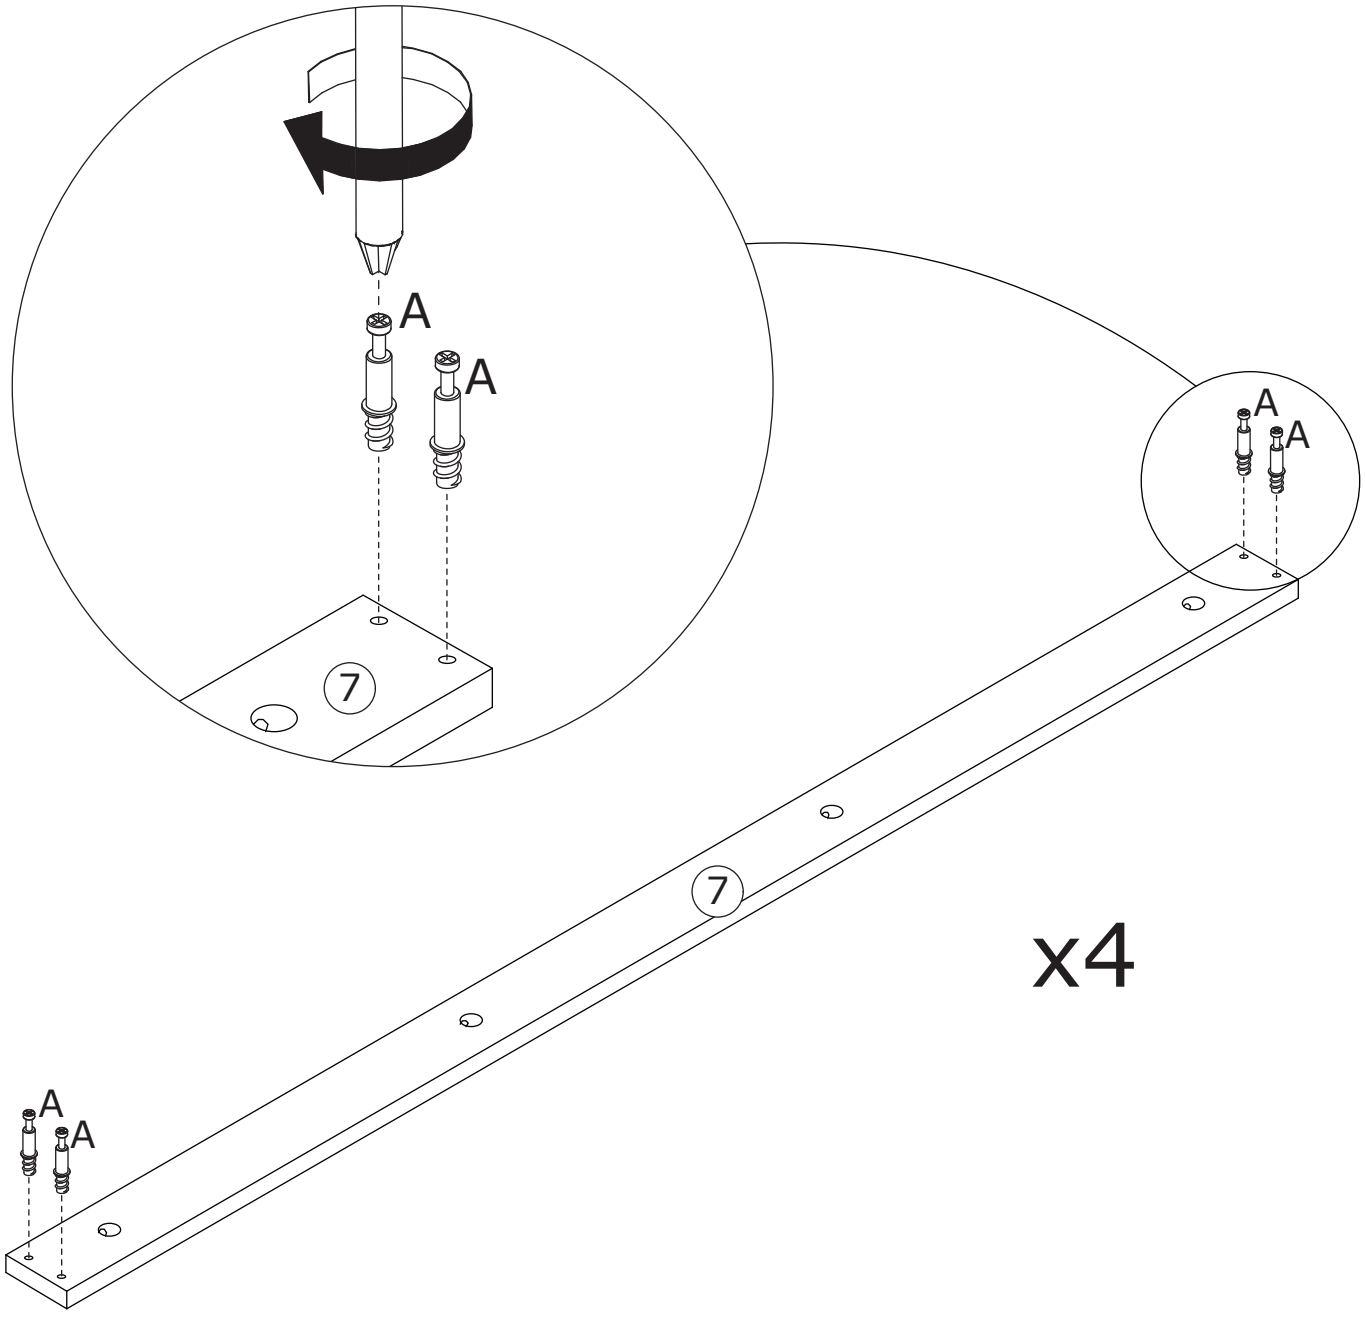


Screw eccentric rod (A) to board 7.


4


B x 8



∅15 x 11 mm



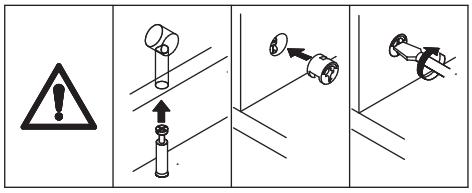

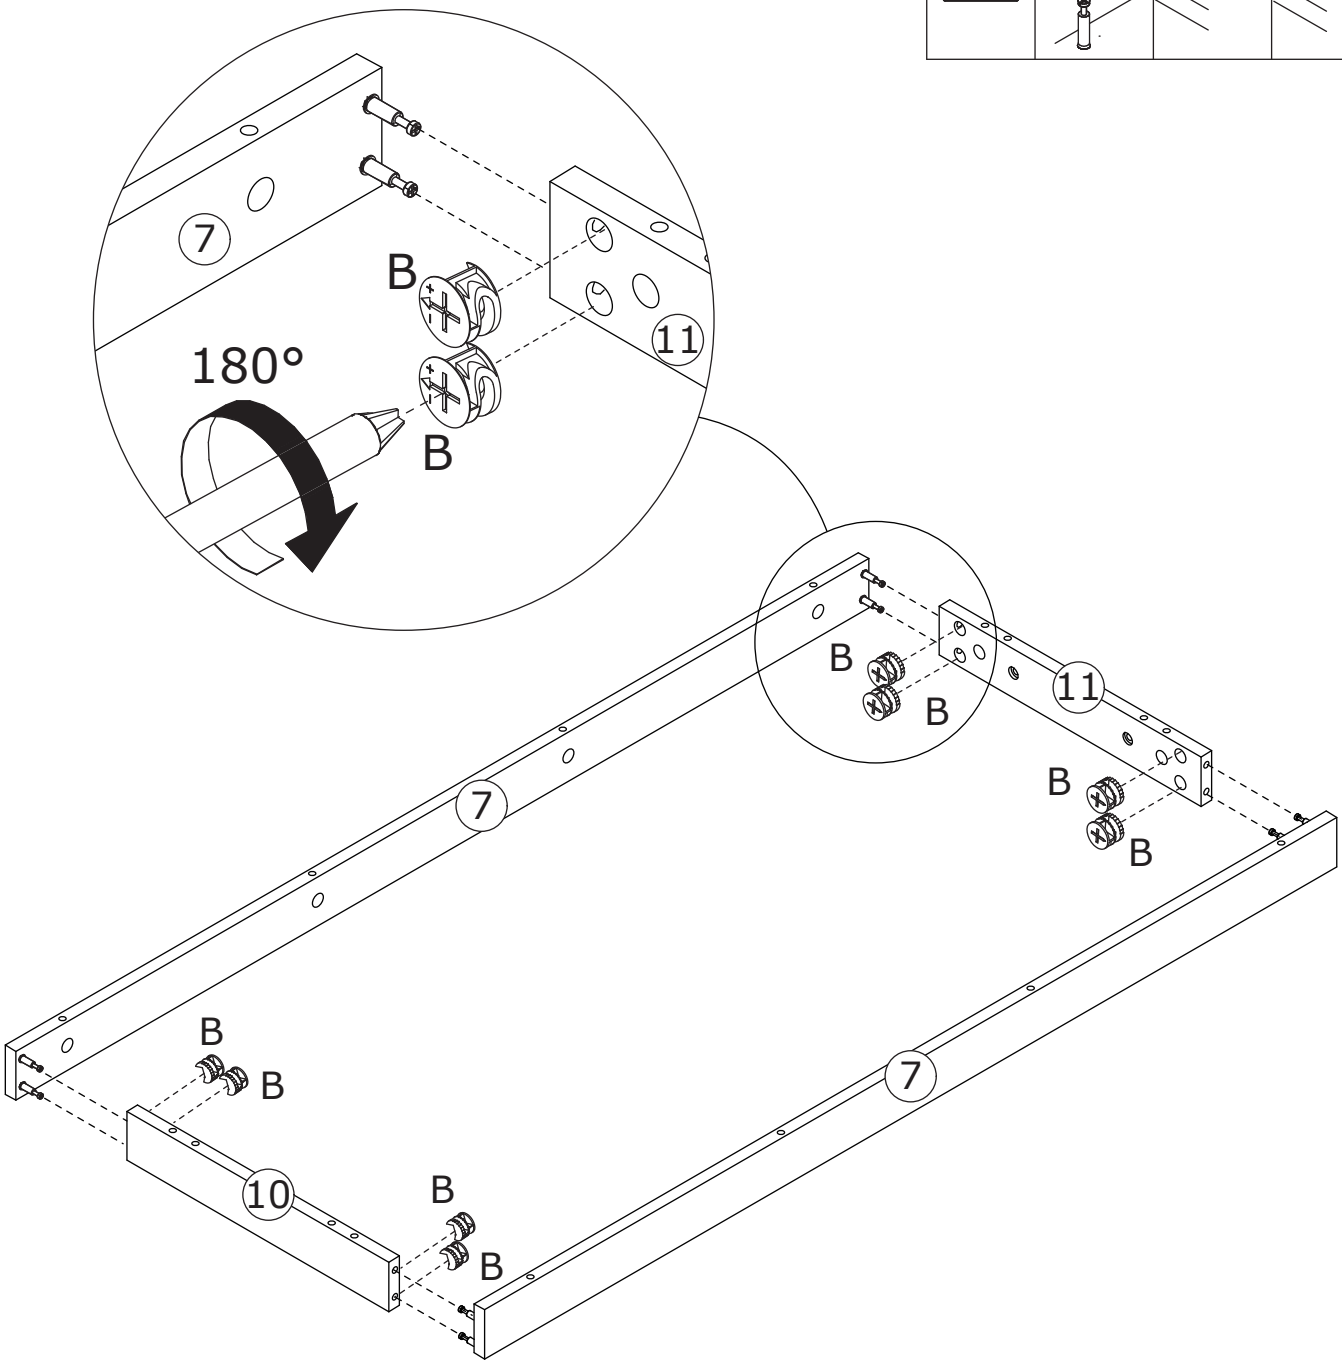


Connect board 7 to boards 10 and 11, then tighten by turning eccentric wheel (B) clockwise.


5

B x 8



∅15 x 11 mm



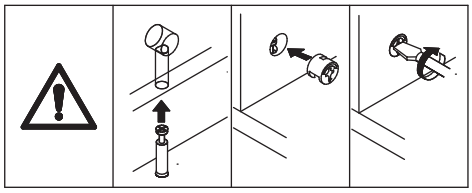


Connect board 7 to boards 10 and 12, then tighten by turning eccentric wheel (B) clockwise.


6

B x 12




∅15 x 11 mm



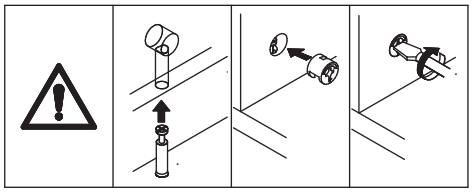

Assemble board 1 and 2 as shown, **paying attention to the direction of the arrows.**

Connect boards 7, 10, and 12 to board 2, then tighten by turning eccentric wheel (B) clockwise.

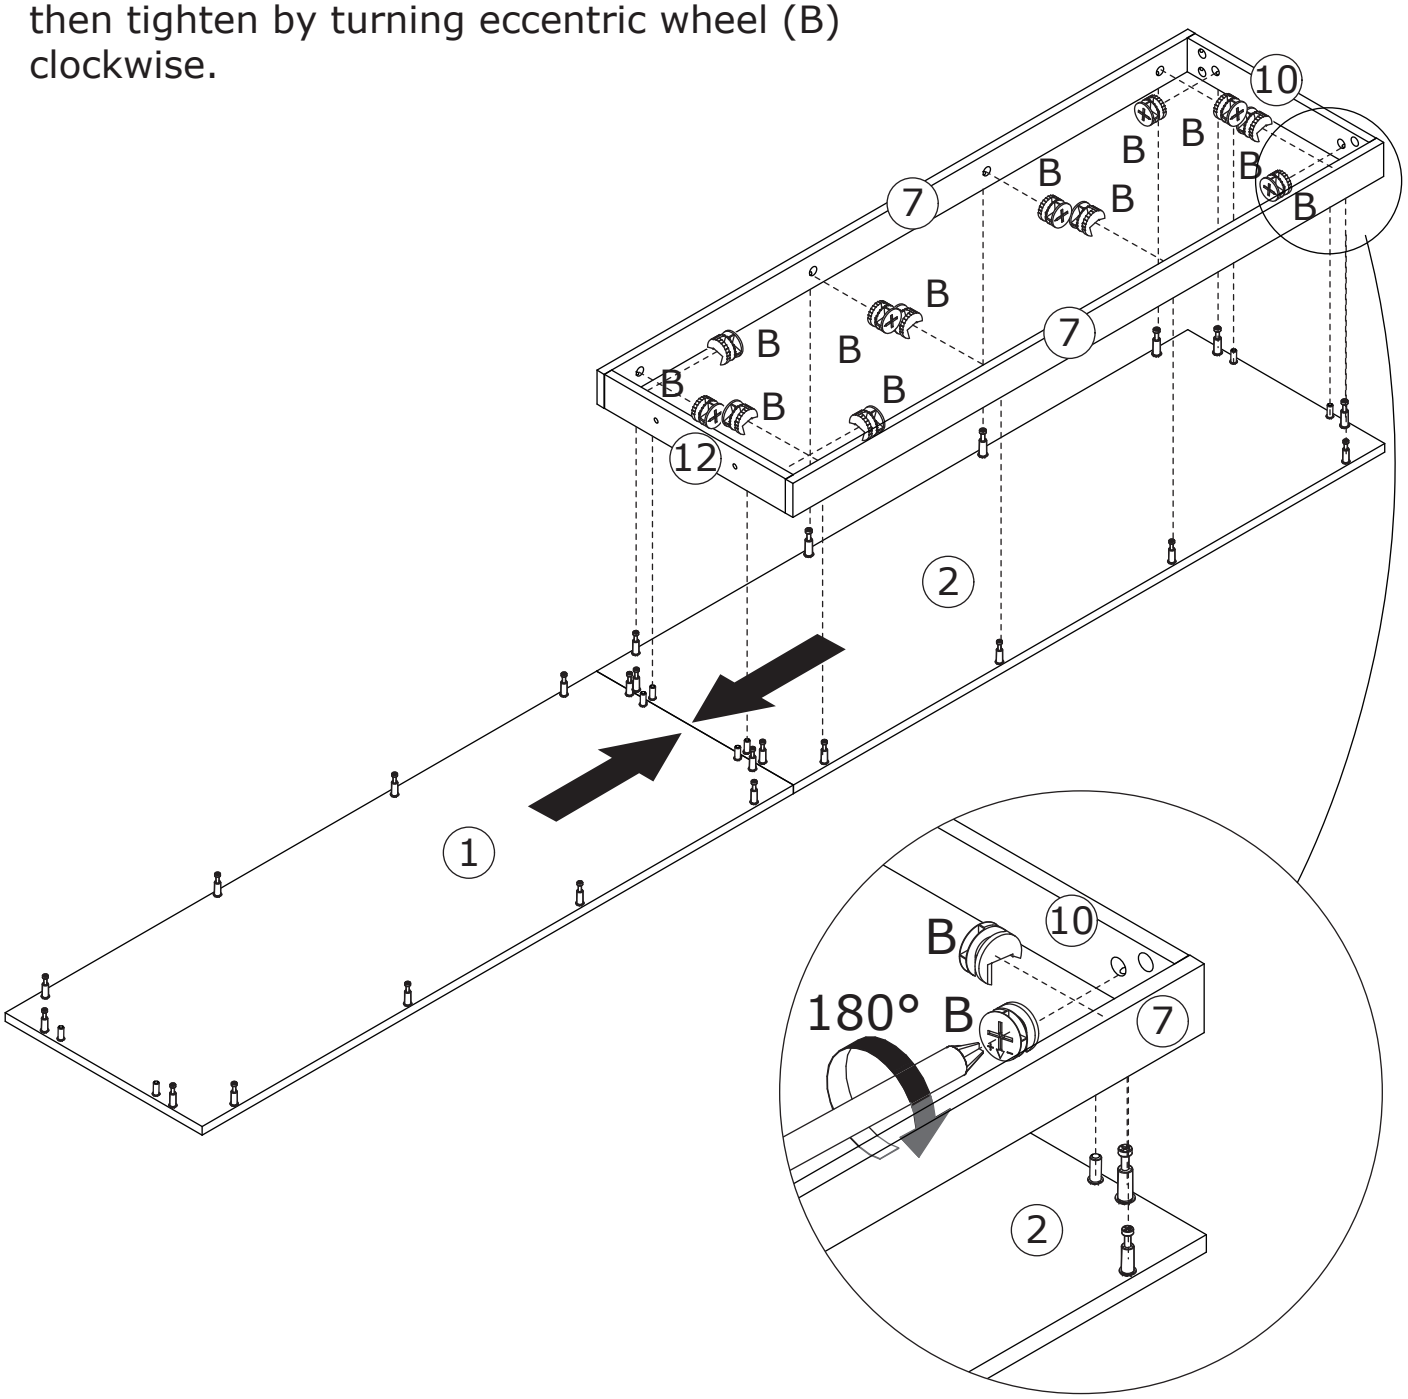



7

B x 12




∅15 x 11 mm



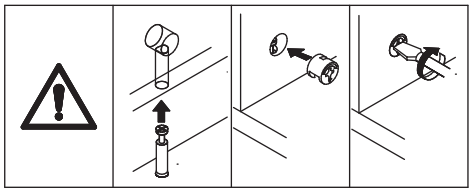

Connect boards 7, 10, and 11 to board 1, then tighten by turning eccentric wheel (B) clockwise.

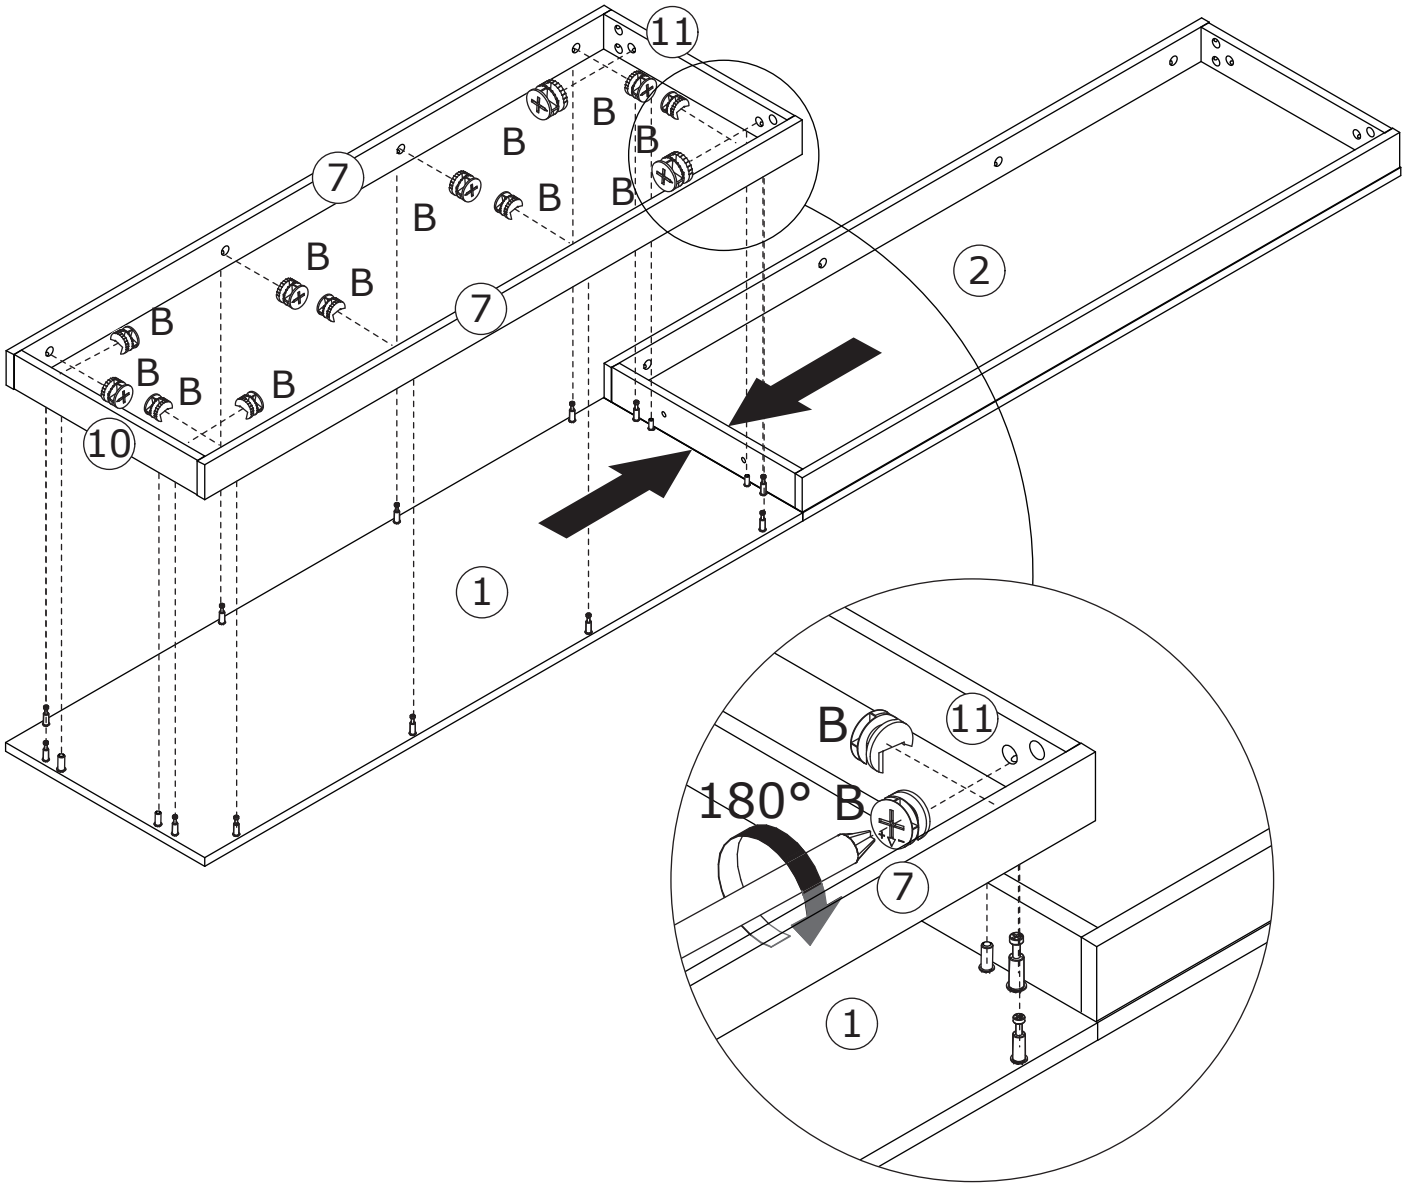



8


J x 2



∅6 x 20 mm





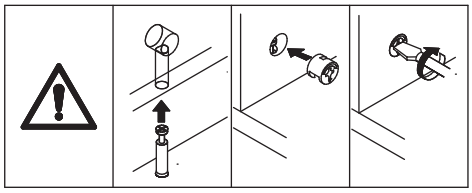


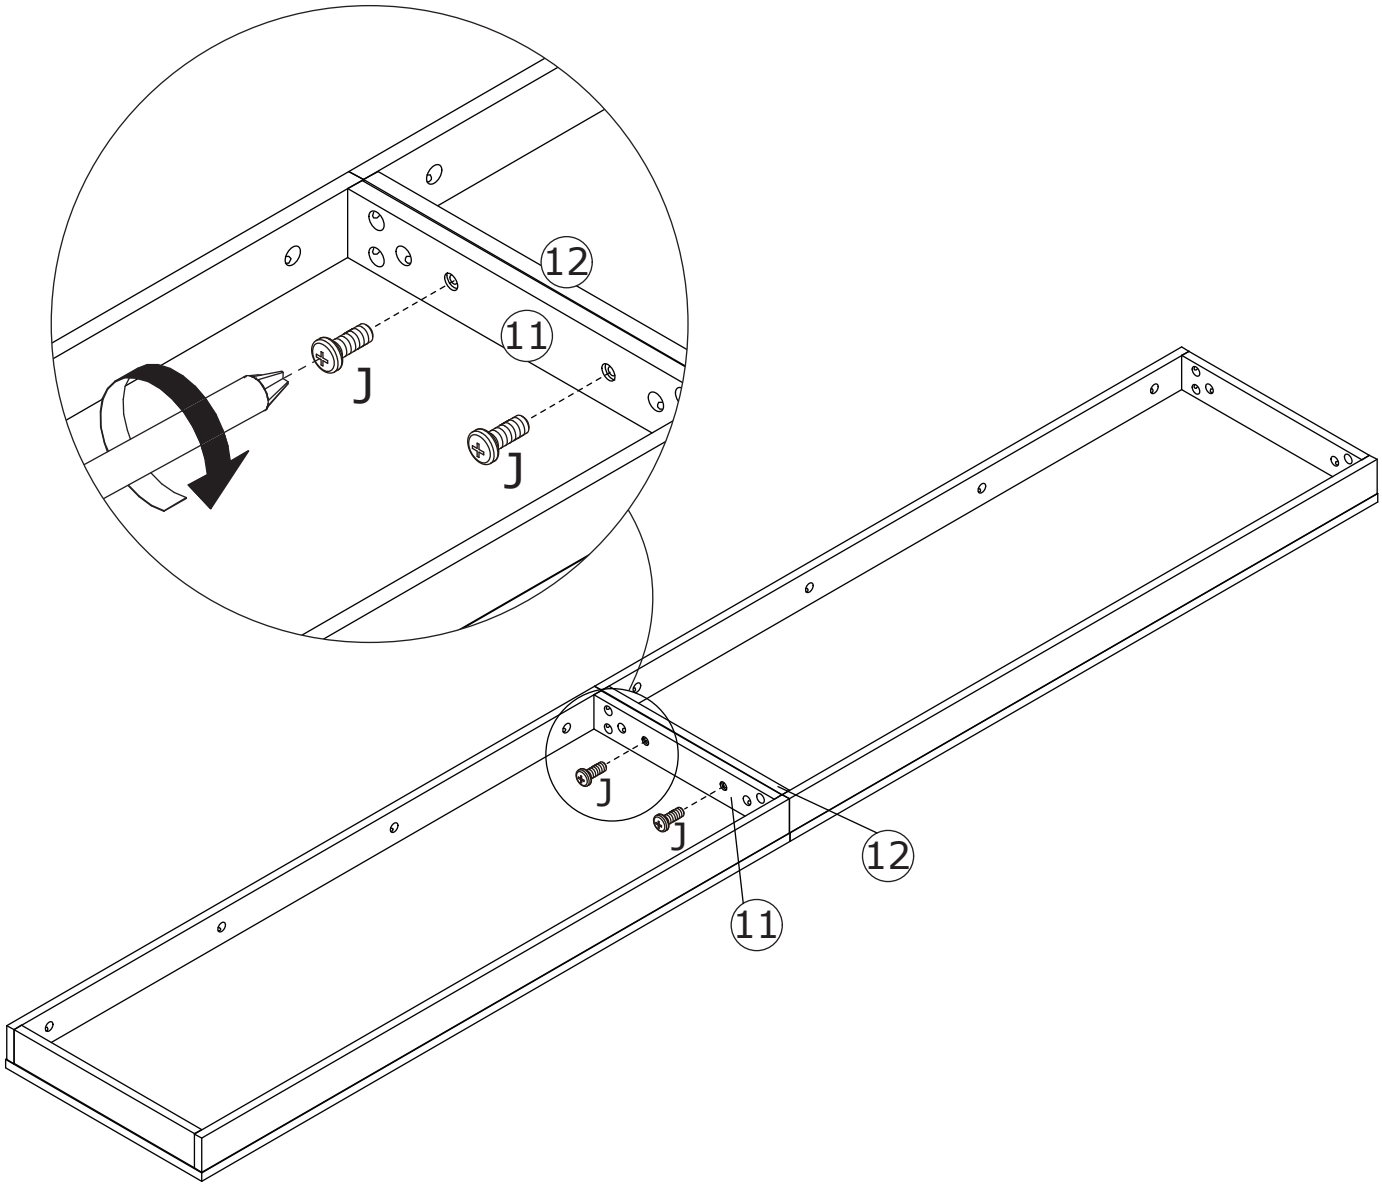

Connect boards 11 and 12 using bolt (J).

9

A x 10	C x 8	
		
∅6 x 35 mm	∅8 x 30 mm	

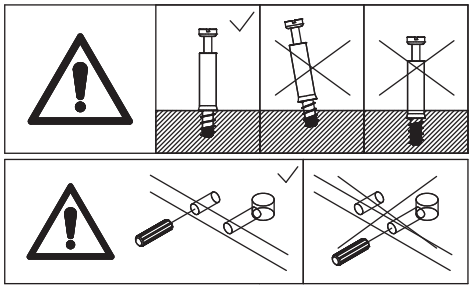


Flip the assembly unit.
Screw eccentric rod (A) and insert wooden dowel (C) into boards 1 and 2.


10

B x 4




∅15 x 11 mm





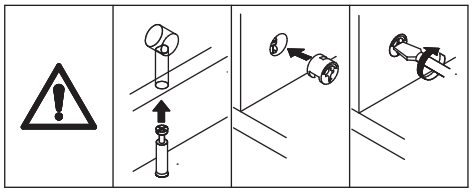


Connect board 3 to boards 1 and 2, then tighten by turning eccentric wheel (B) clockwise.

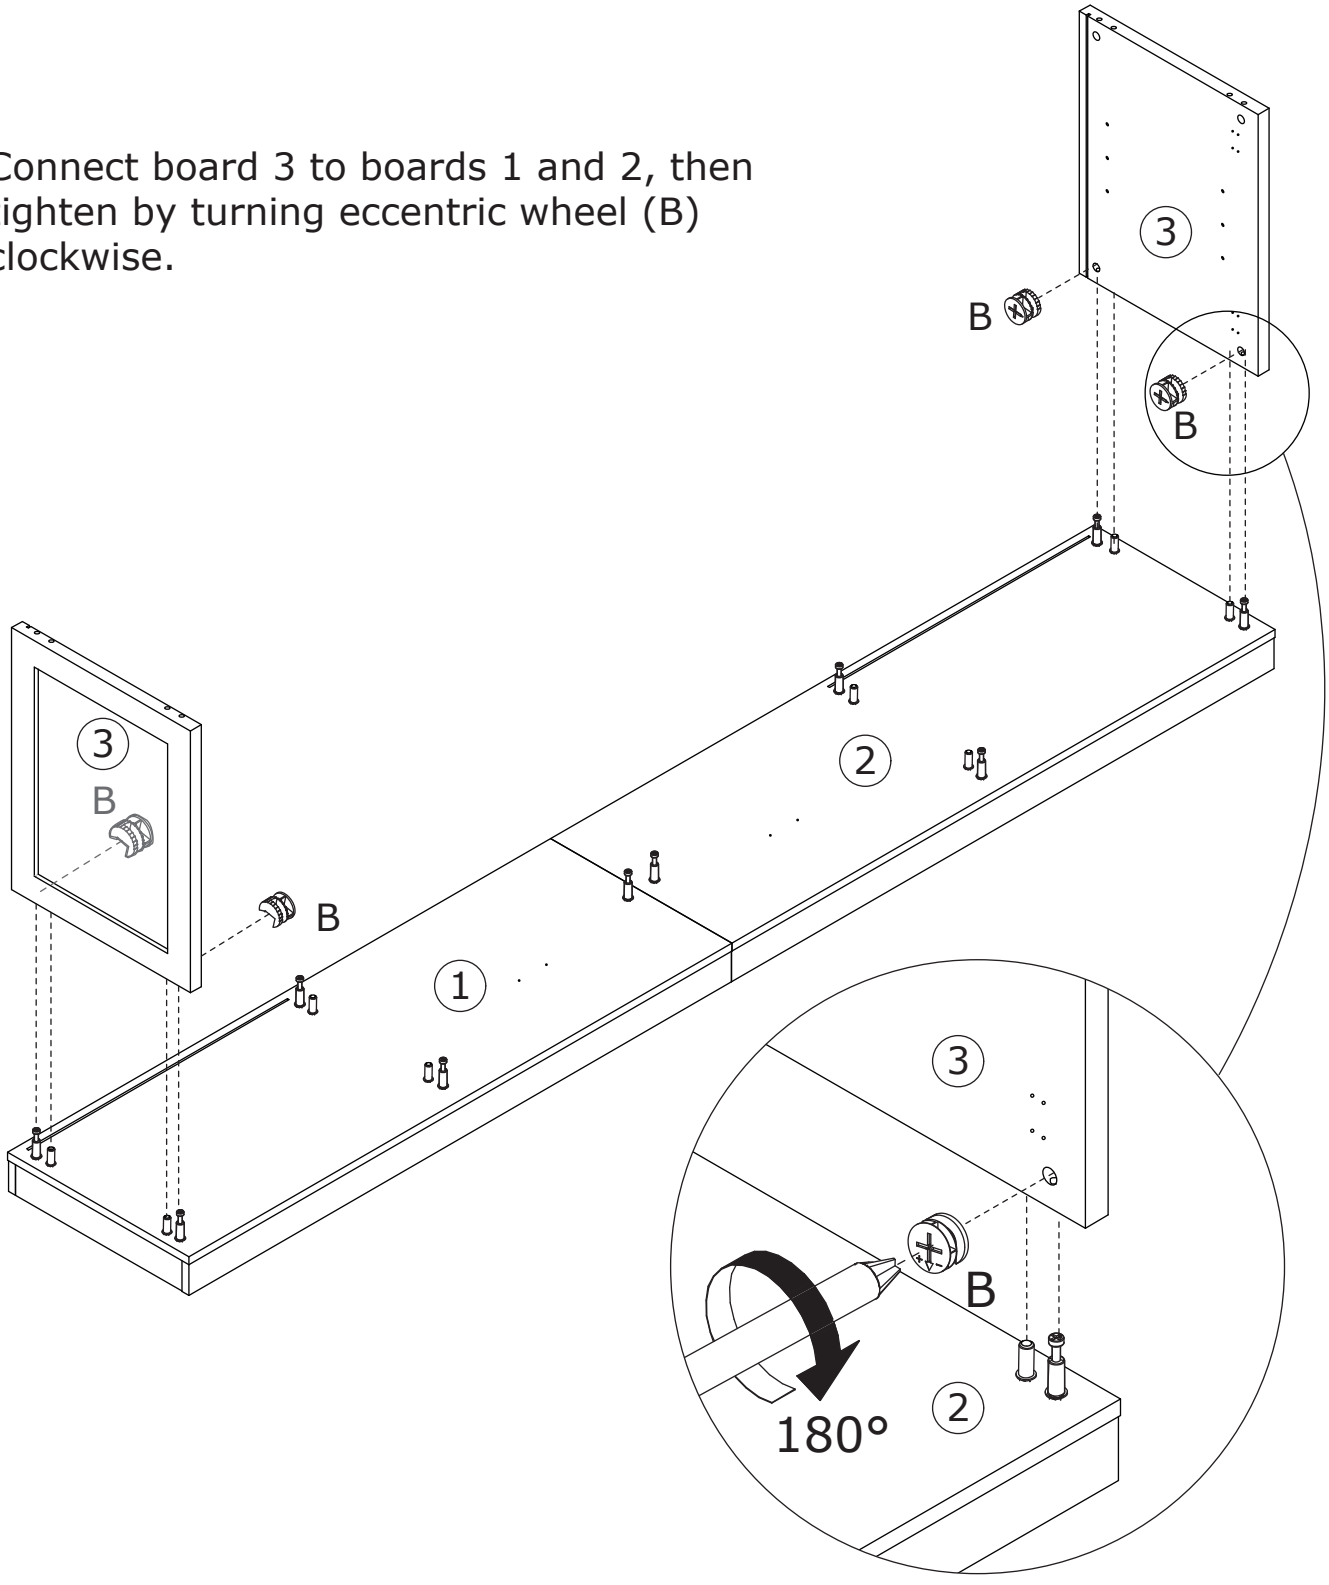


11



T x 2	C x 2	
		
∅5 x 40 mm	∅8 x 30 mm	

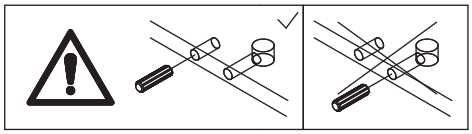


Connect board 13 to board 6 using wooden dowel (C), and secure them with screw (T).

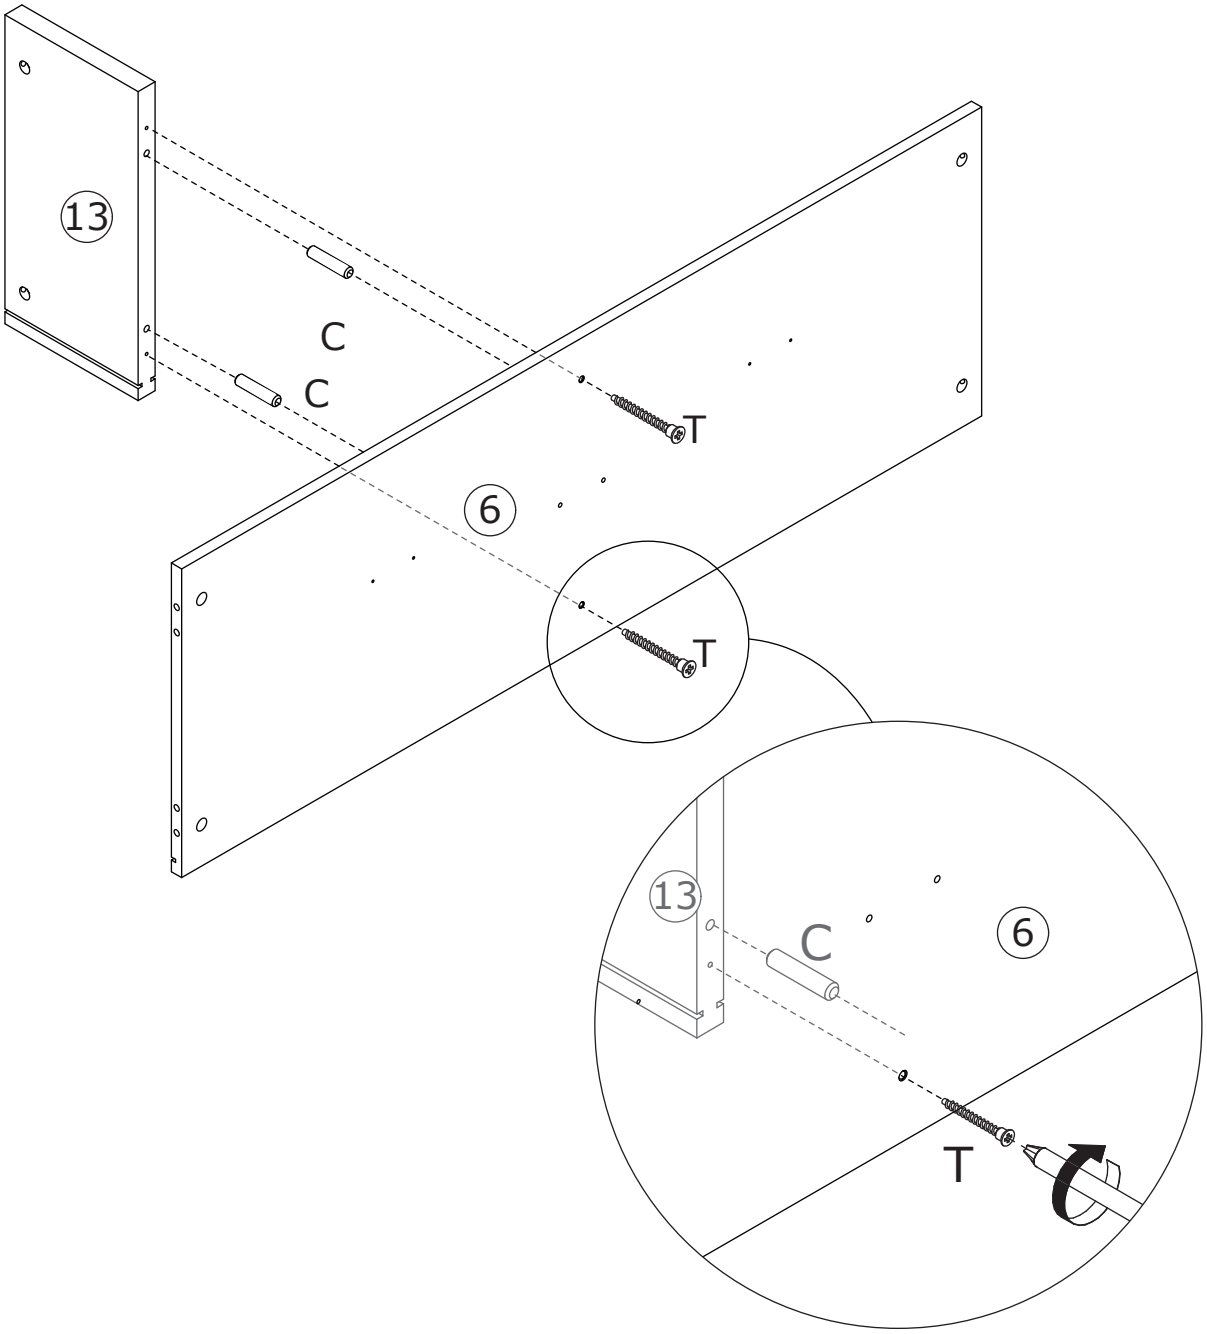


12

A x 4	C x 4	
		
∅6 x 35 mm	∅8 x 30 mm	

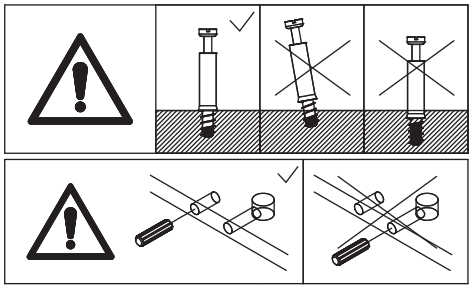

Screw eccentric rod (A) and insert wooden dowel (C) into boards 4 and 5.

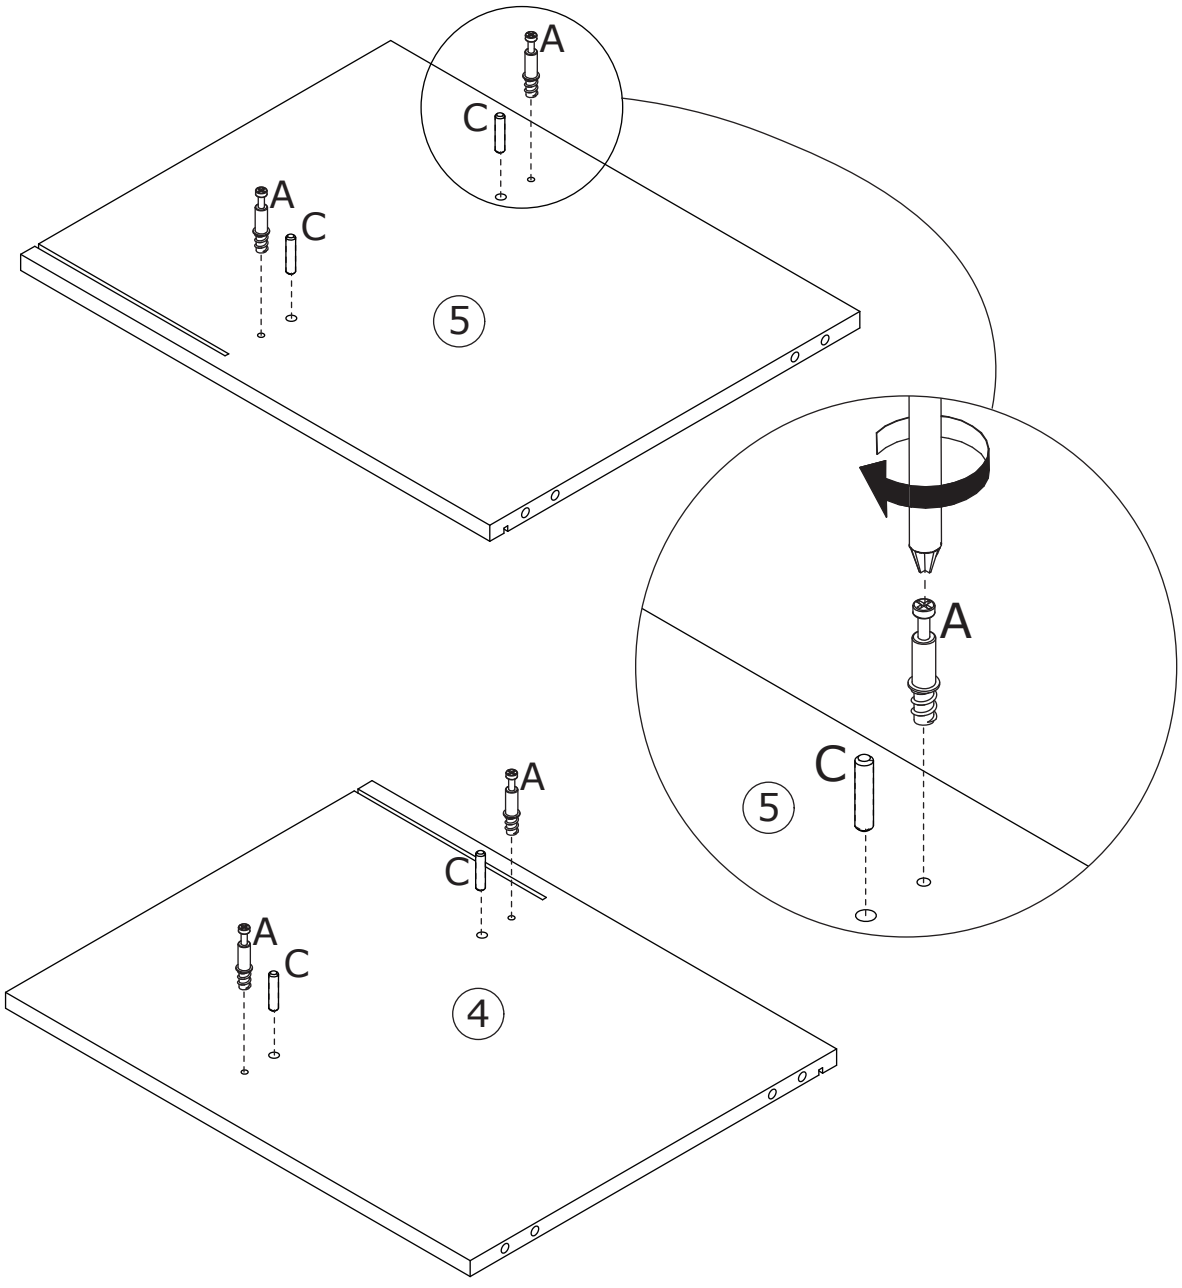



13


B x 4



∅15 x 11 mm



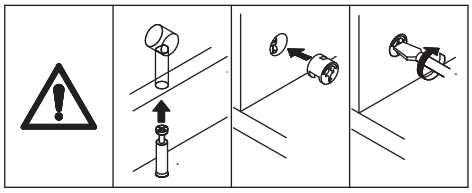


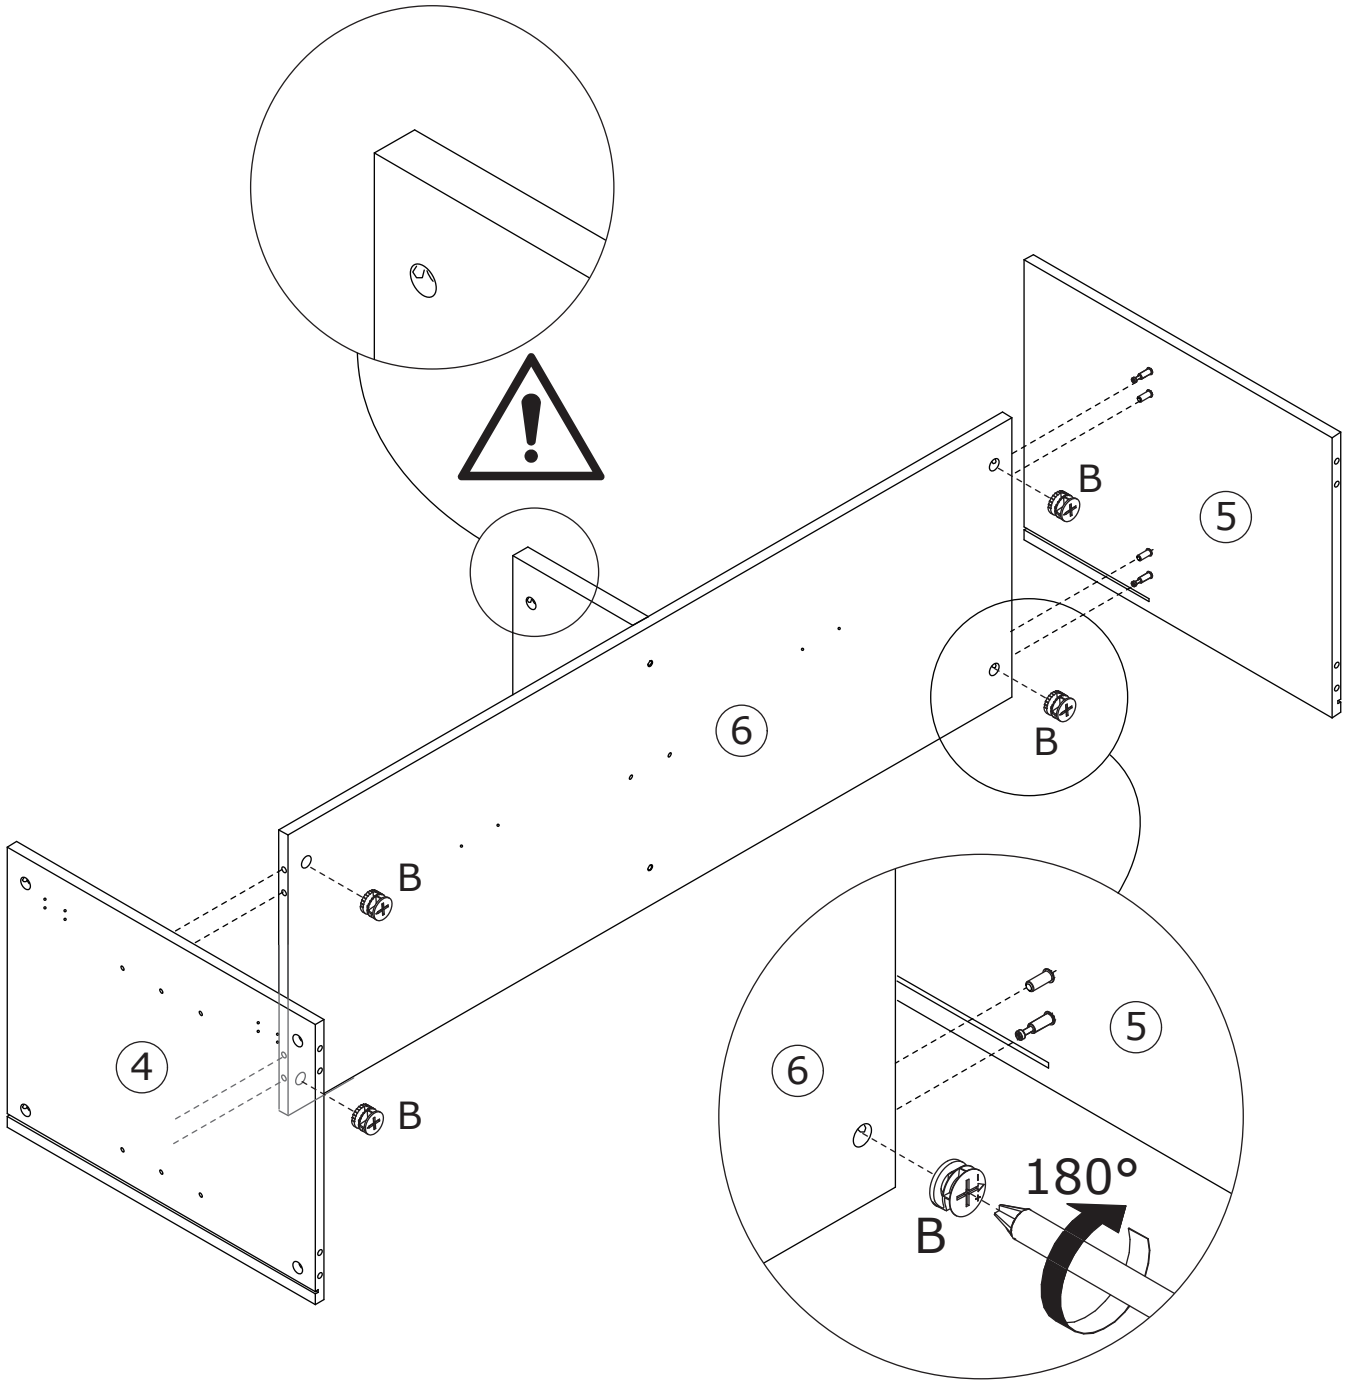


Connect boards 4 and 5 to board 6, then tighten by turning eccentric wheel (B) clockwise.


14

A x 2




∅6 x 35 mm



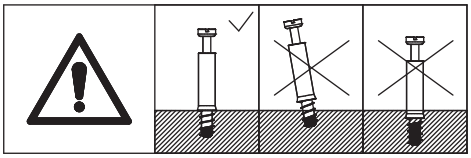

Screw eccentric rod (A) to board 6.

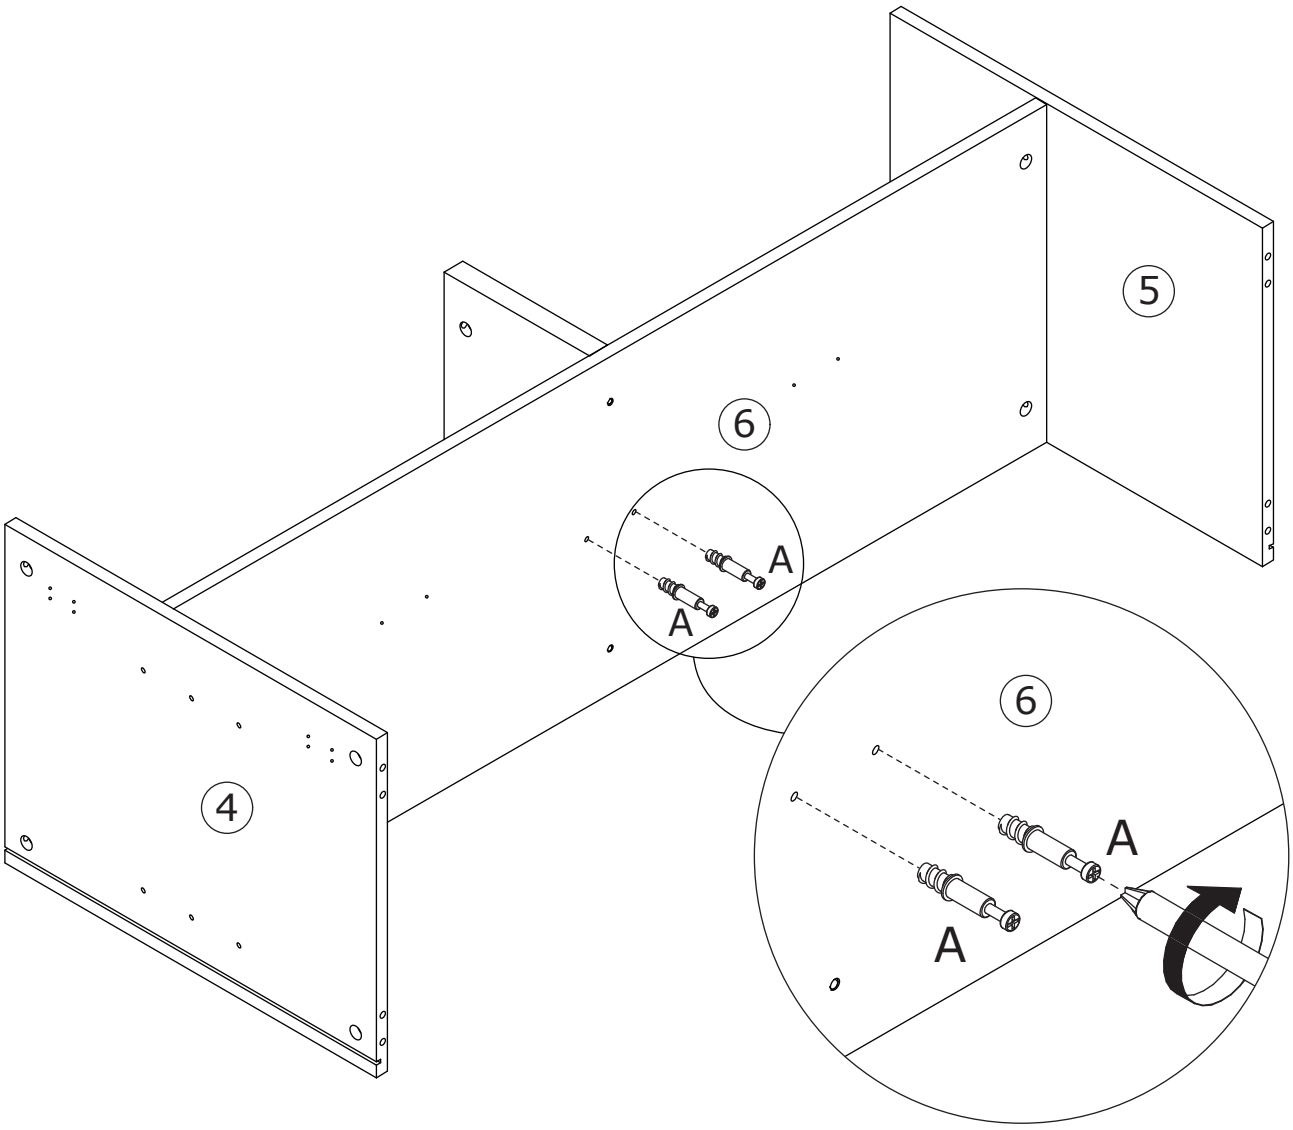



15

B x 2




∅15 x 11 mm



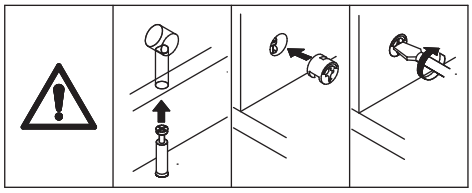

Flip 180°

Flip the assembly. Connect board 8 to board 6, then tighten by turning eccentric wheel (B) clockwise.

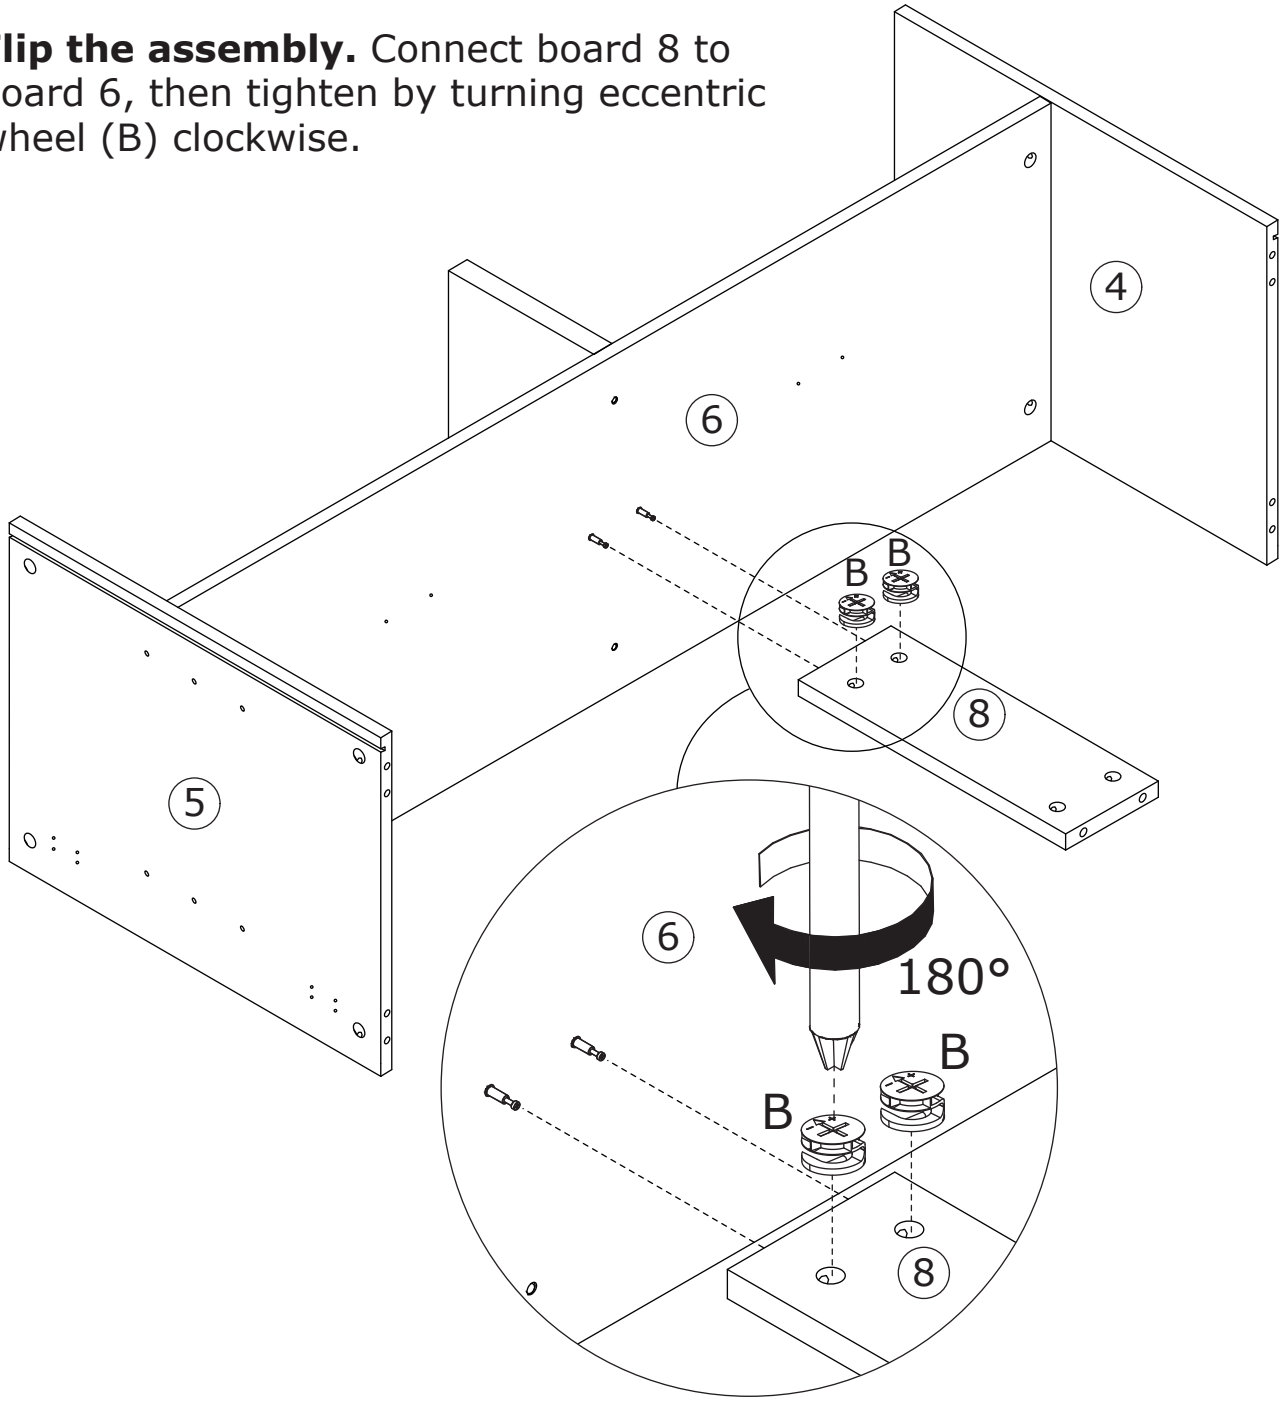



16

B x 6




∅15 x 11 mm




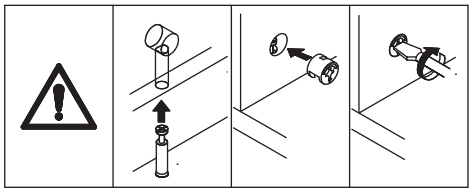

Connect boards 4, 5, and 8 to boards 1 and 2, then tighten by turning eccentric wheel (B) clockwise.

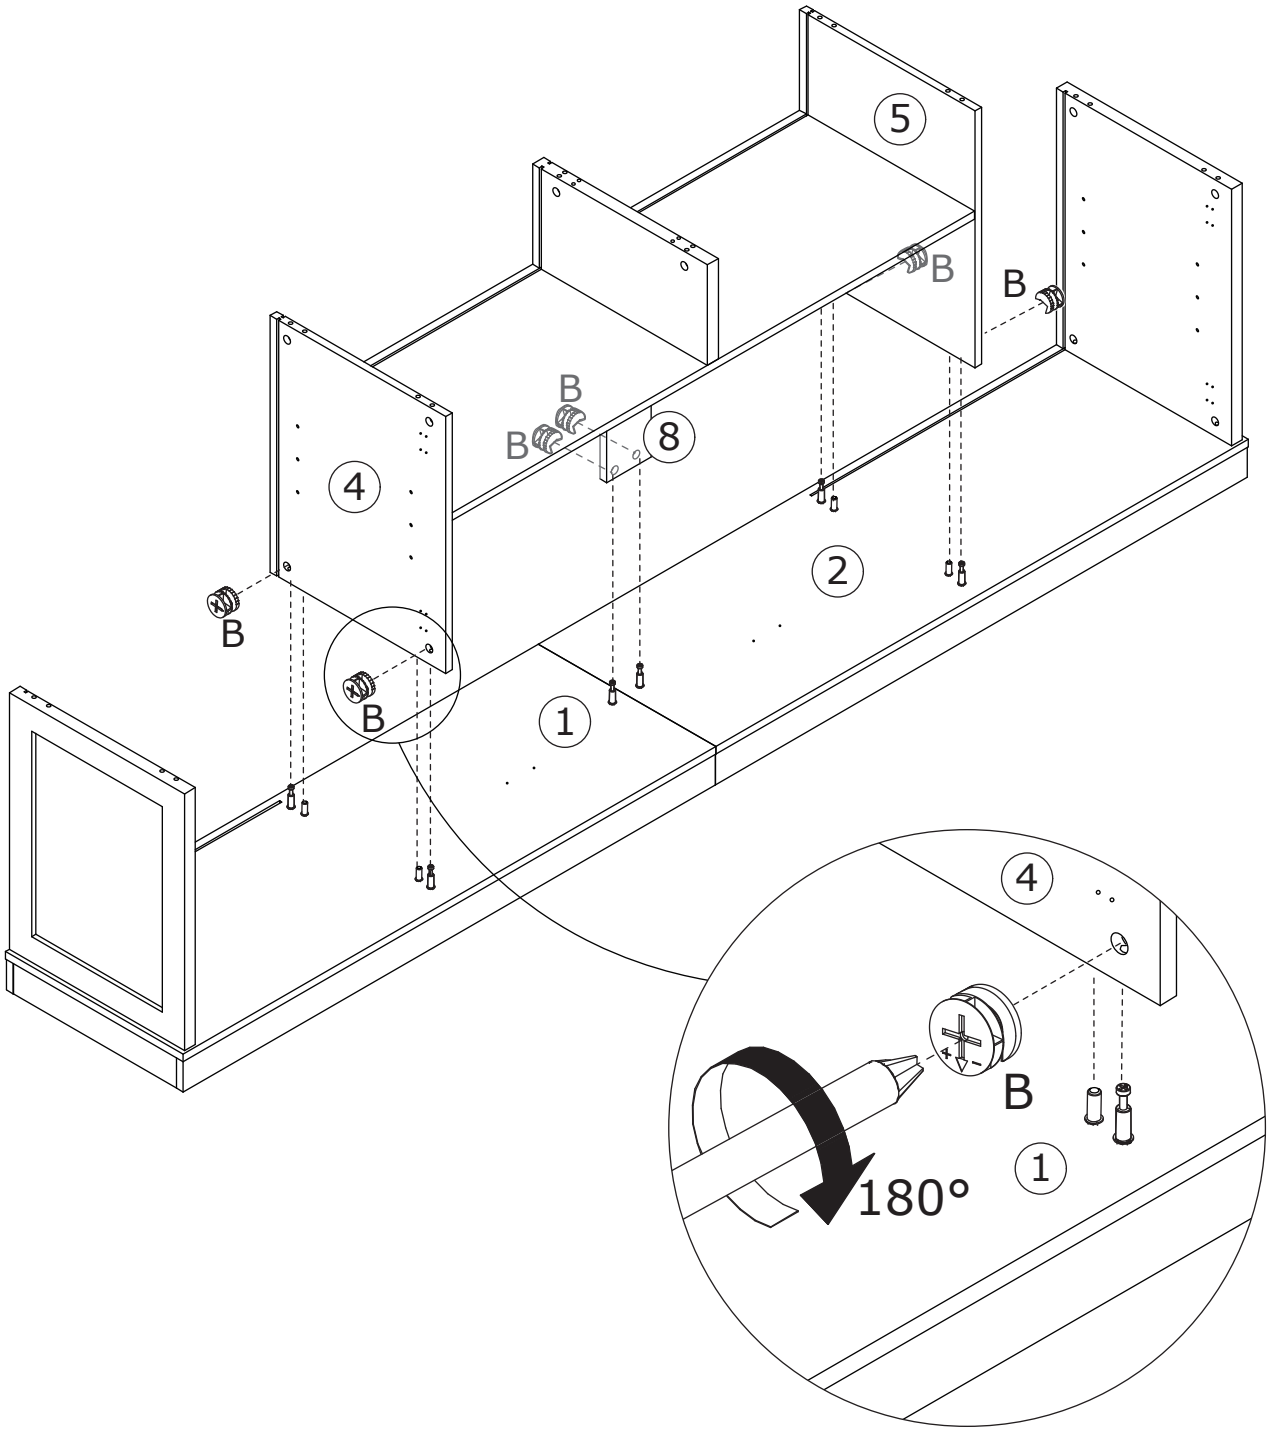


17

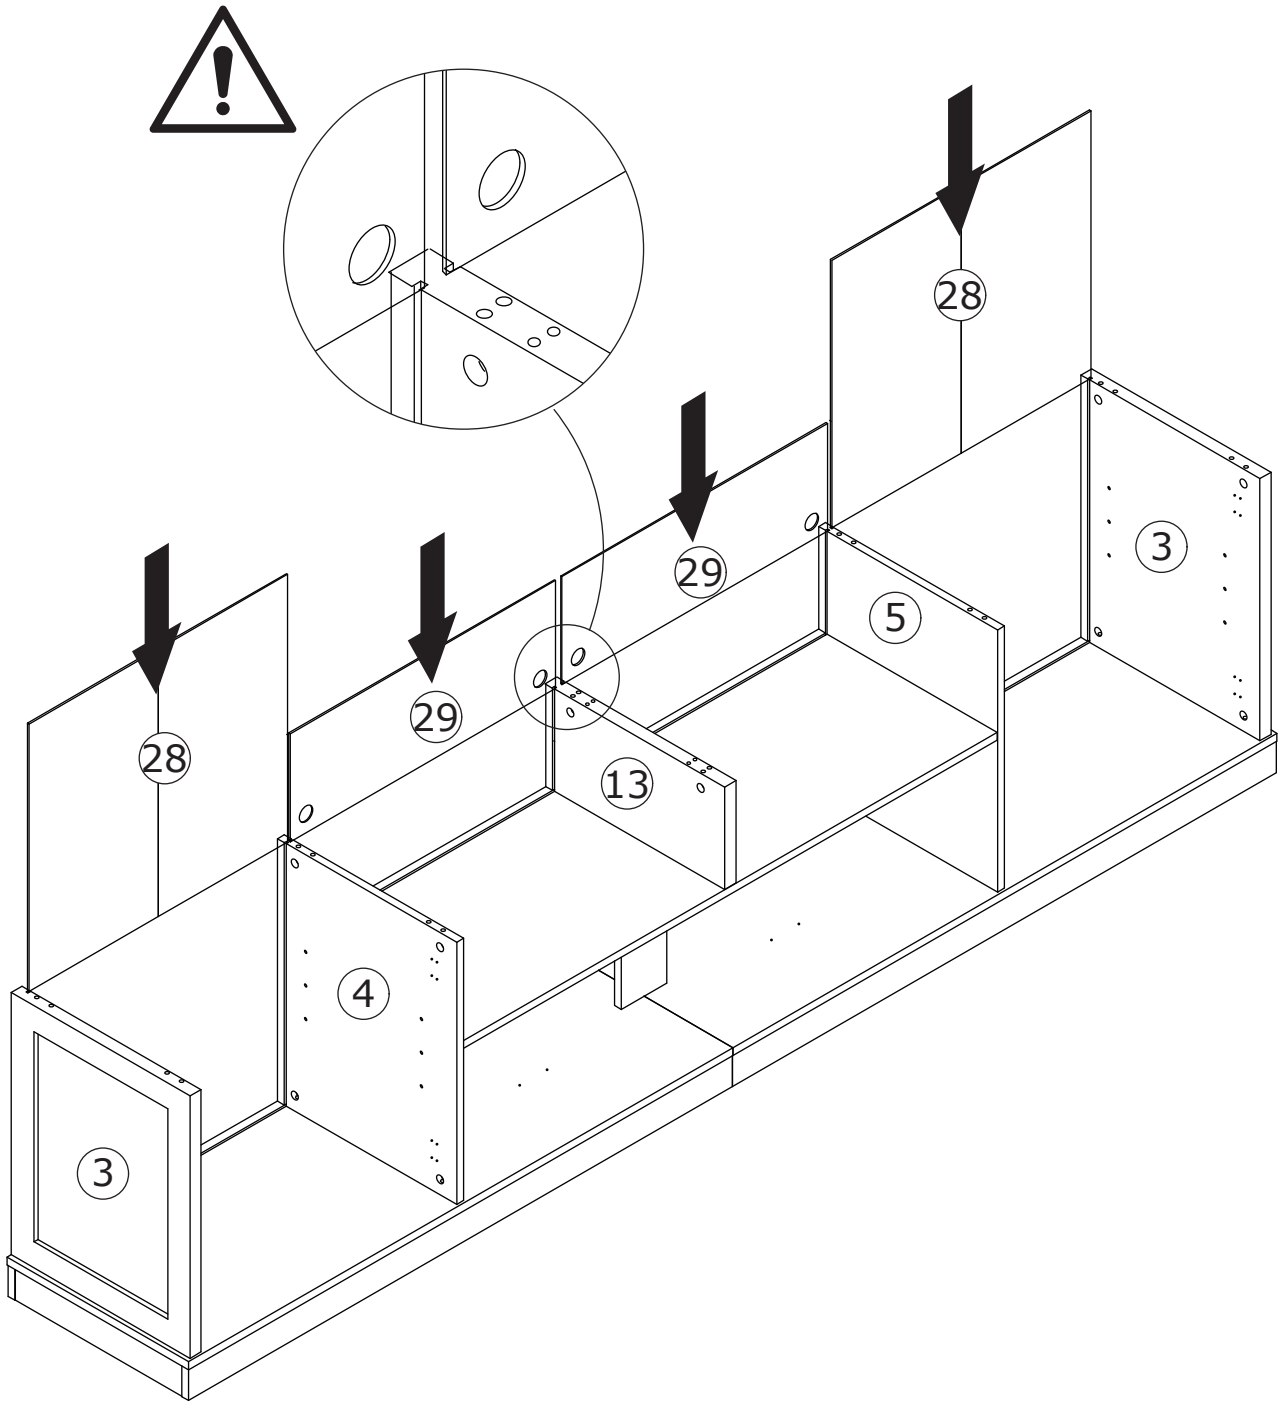


Insert boards 28 and 29 into the available slots.
Note: Pay attention to the orientation of board 29.

18




C x 8	G x 4	
∅8 x 30 mm	∅6 x 30 mm	

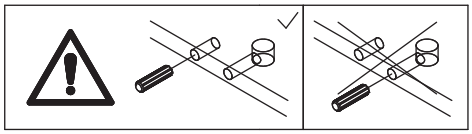


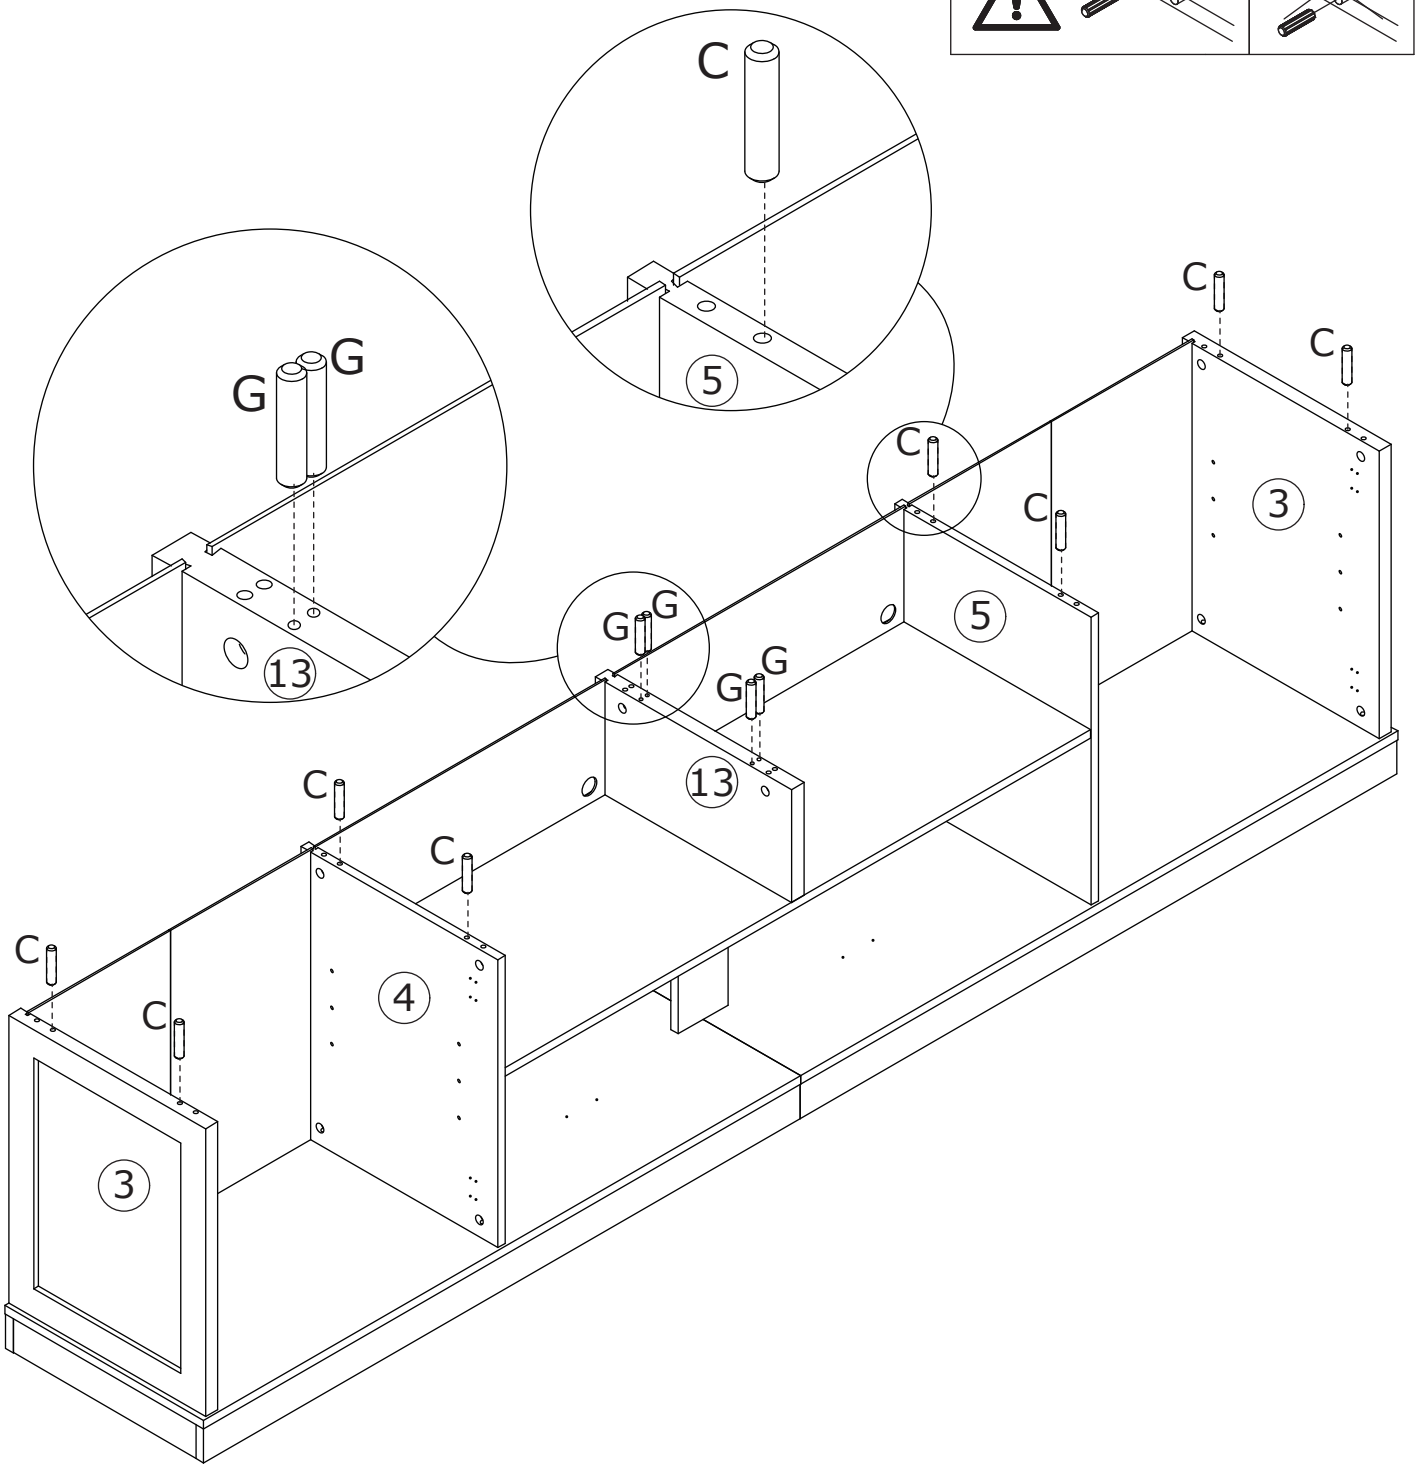


Insert wooden dowel (C) into boards 3, 4, and 5.
Insert wooden dowel (G) into board 13.

19


A x 12	D x 4	S x 2	
			
∅6 x 35 mm	∅3 x 12 mm		

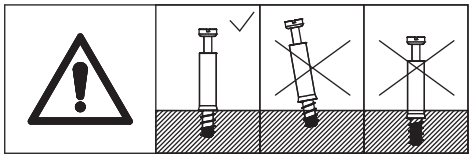


Screw eccentric rod (A) to board 14 and 15.
Secure bracket (S) to boards 14 and 15 using screw (D).

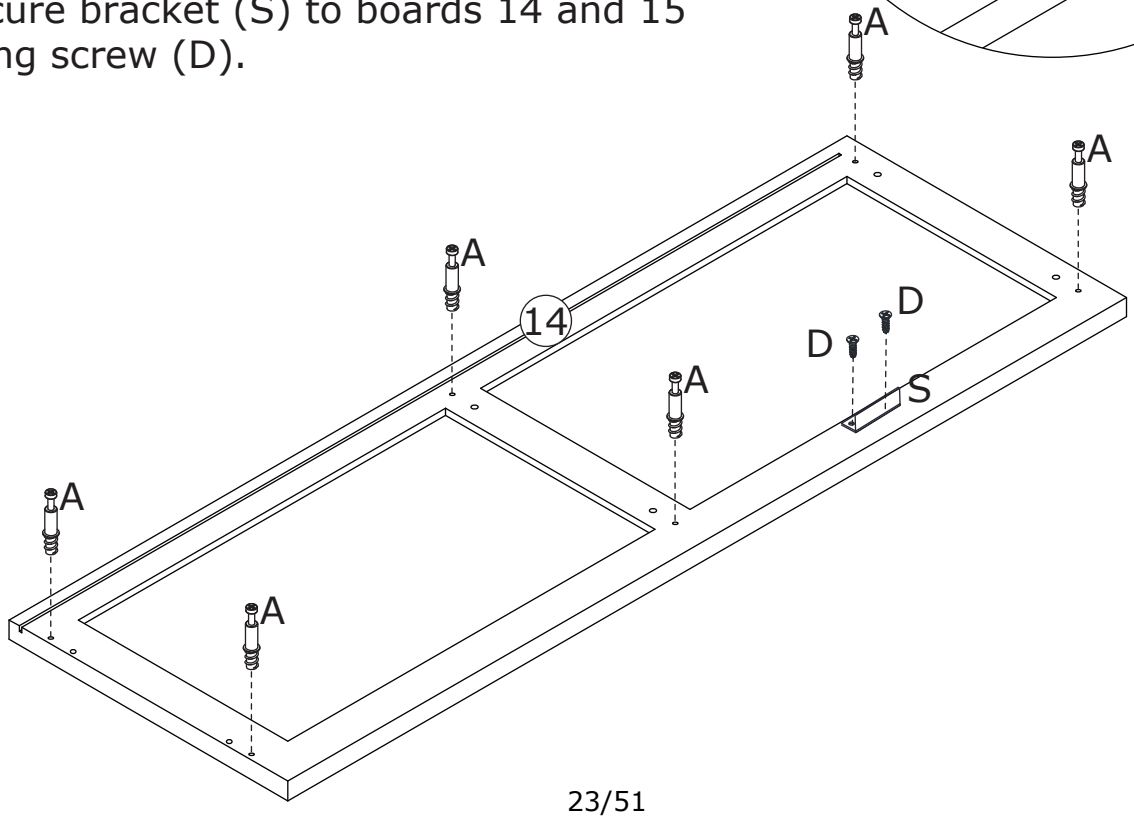


20

B x 4	F x 2	
		
∅15 x 11 mm	∅15 x 9.5 mm	

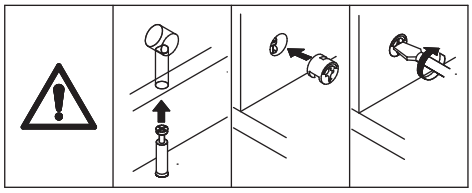


Connect board 15 to boards 3, 5, and 13, then tighten by turning eccentric wheel (B) and (F) clockwise.

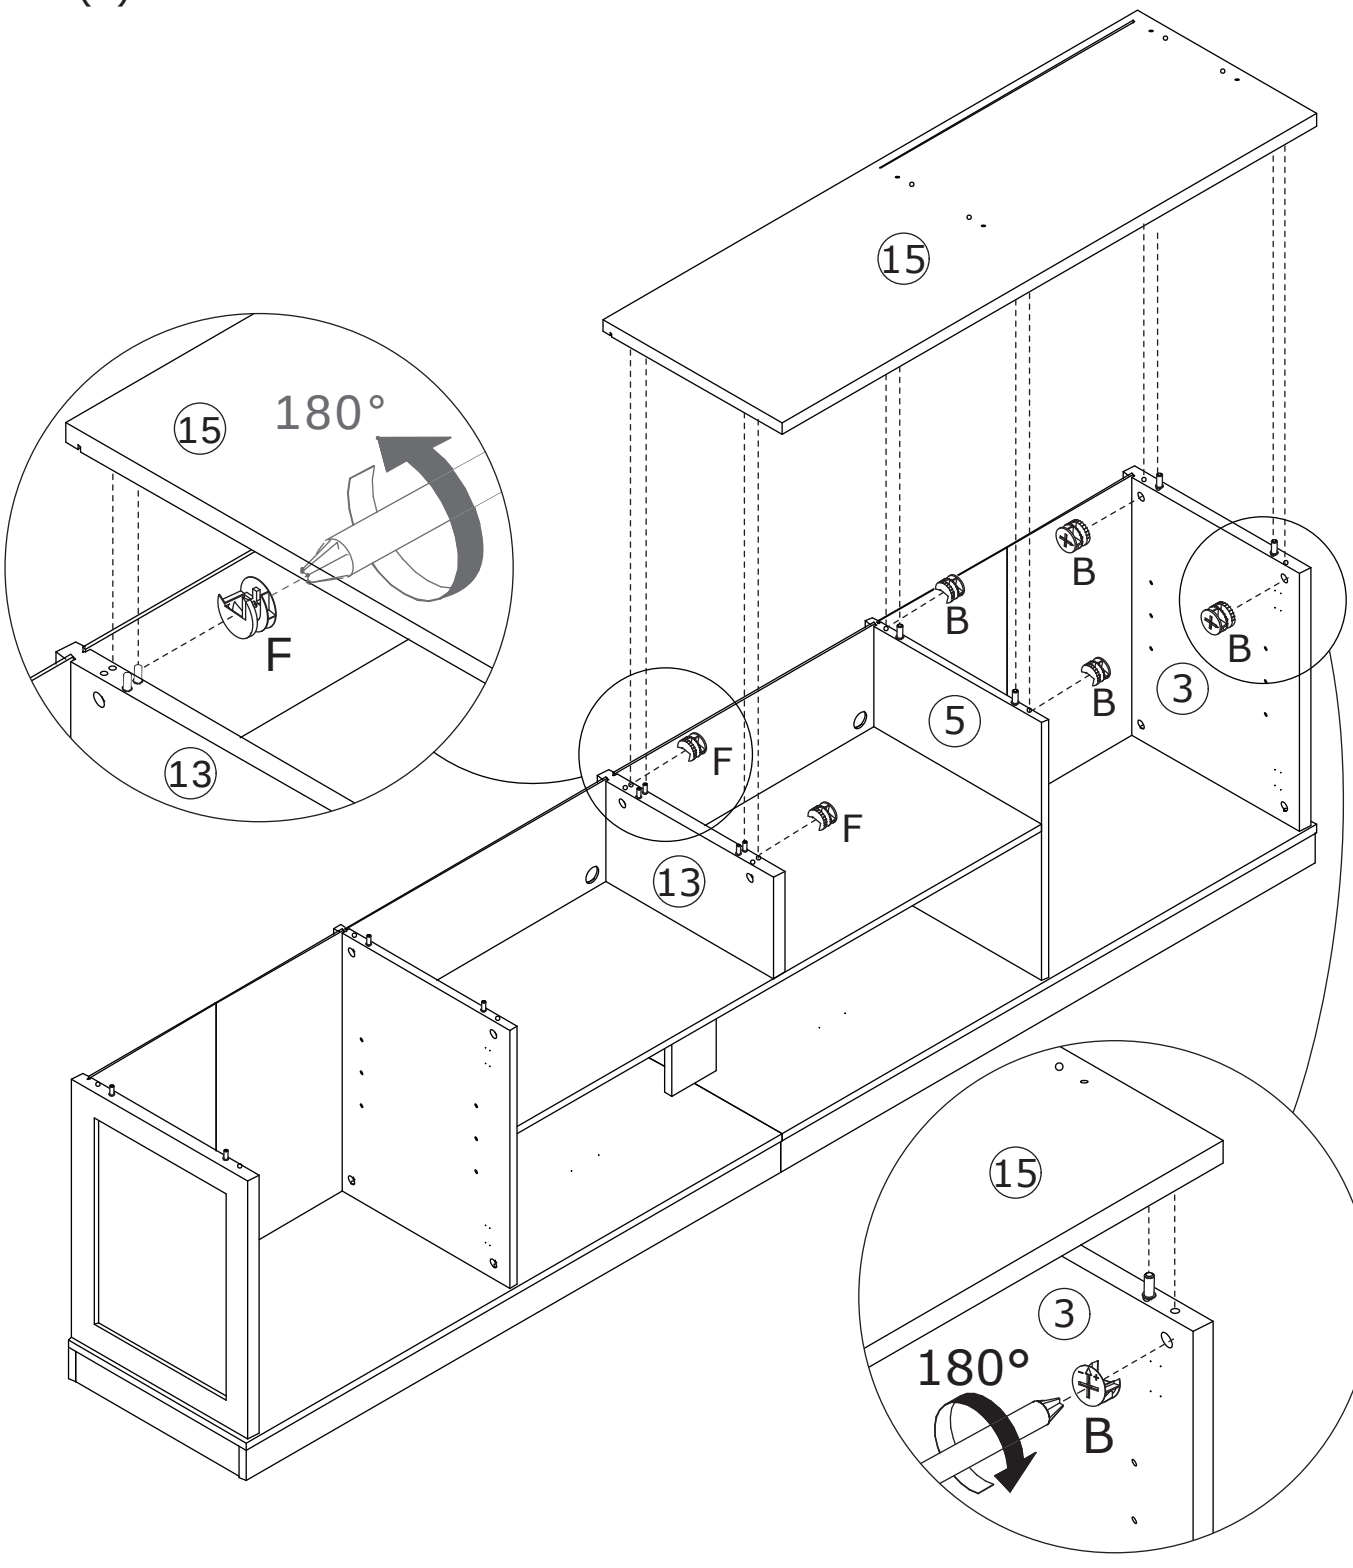


21



B x 4	F x 2	
∅15 x 11 mm	∅15 x 9.5 mm	

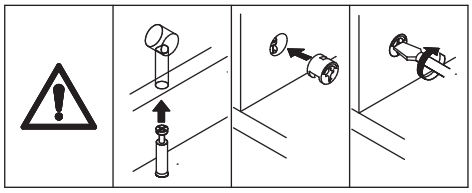


Connect board 14 to board 3, 4, and 13, then tighten by turning eccentric wheel (B) and (F) clockwise.

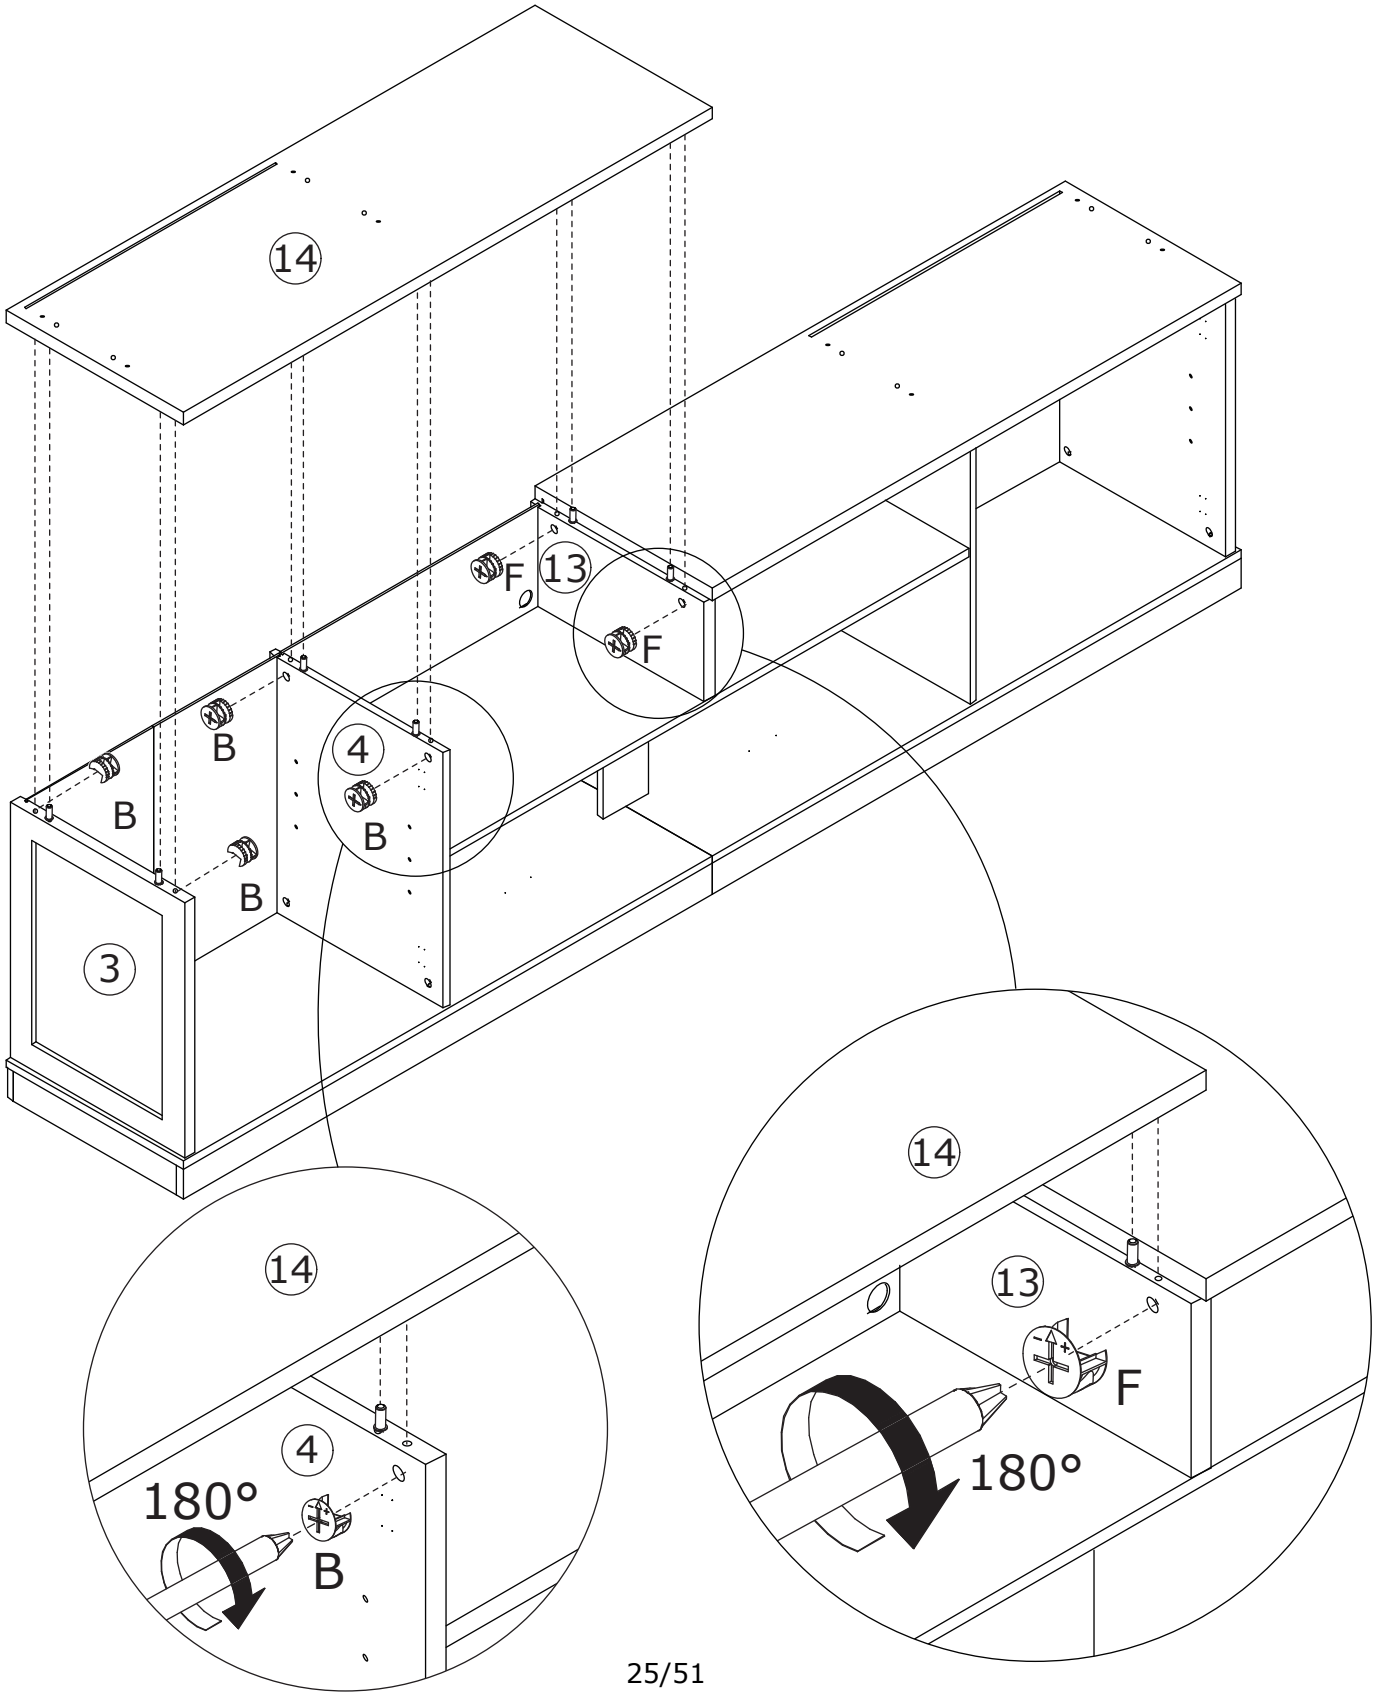



22


A x 8	C x 8	
		
∅6 x 35 mm	∅8 x 30 mm	

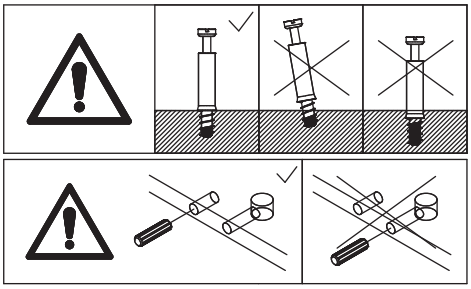


Screw eccentric rod (A) and insert wooden dowel (C) into boards 14 and 15.


23

A x 4	B x 4	C x 4	
			
∅6 x 35 mm	∅15 x 11 mm	∅8 x 30 mm	

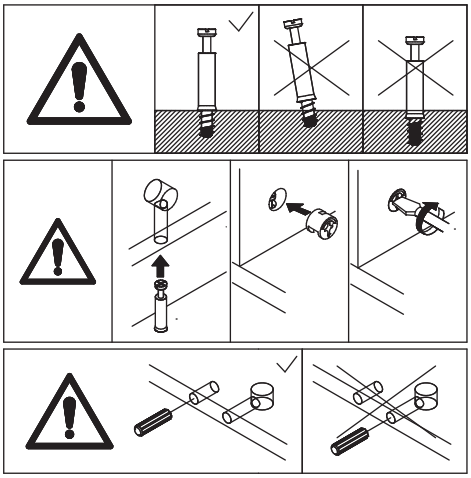

Screw eccentric rod (A) and insert wooden dowel (C) into board 16.

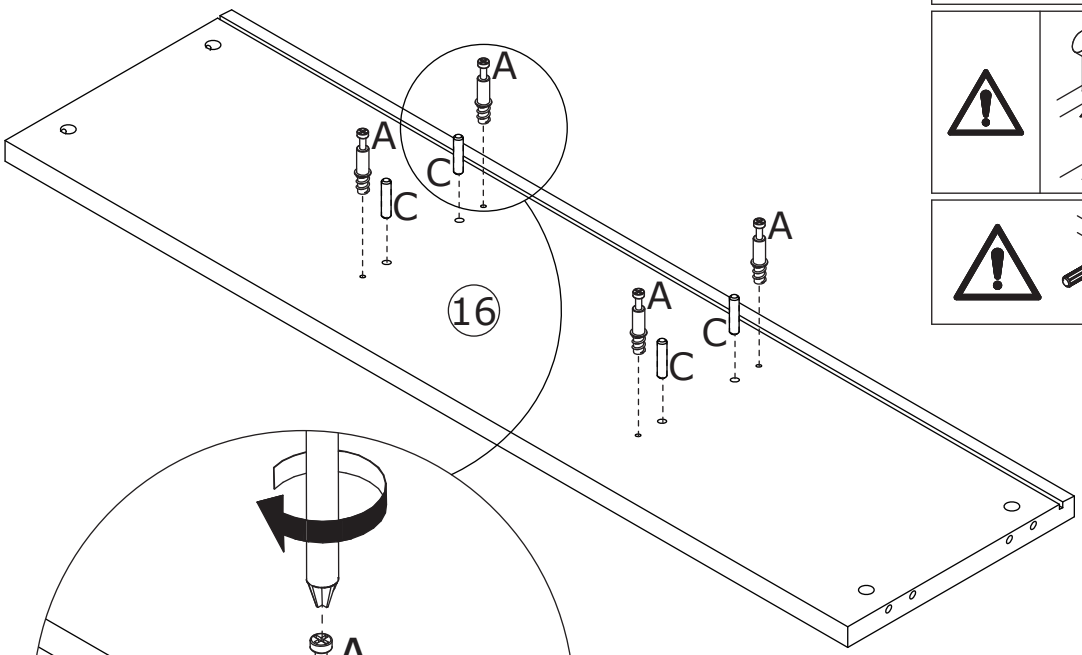


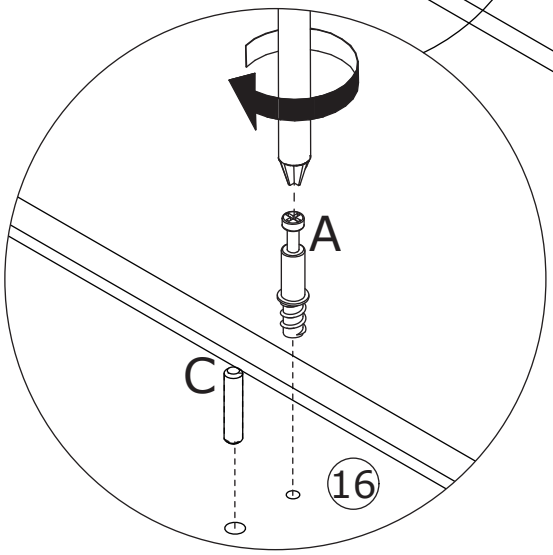


Connect board 21 to board 16, then tighten by turning eccentric wheel (B) clockwise.


24


C x 4




∅8 x 30 mm

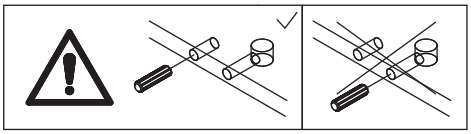

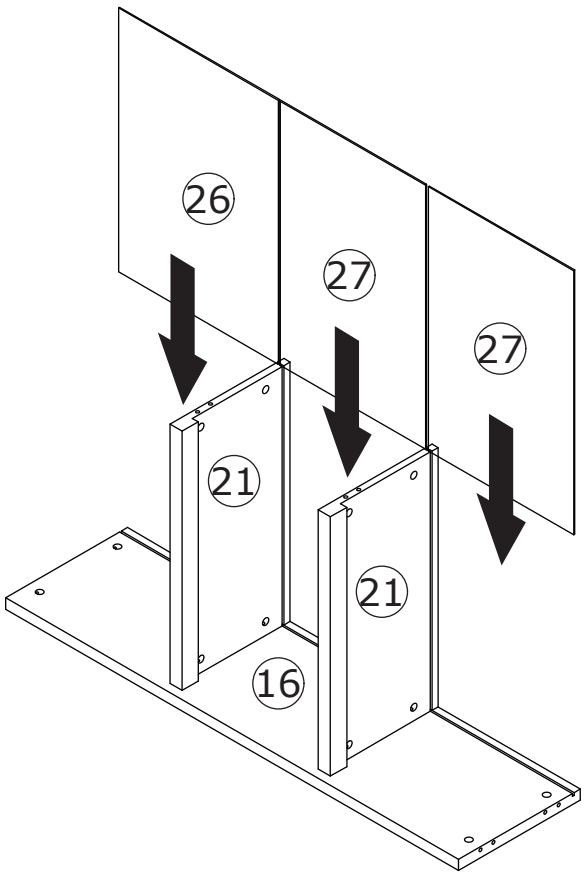

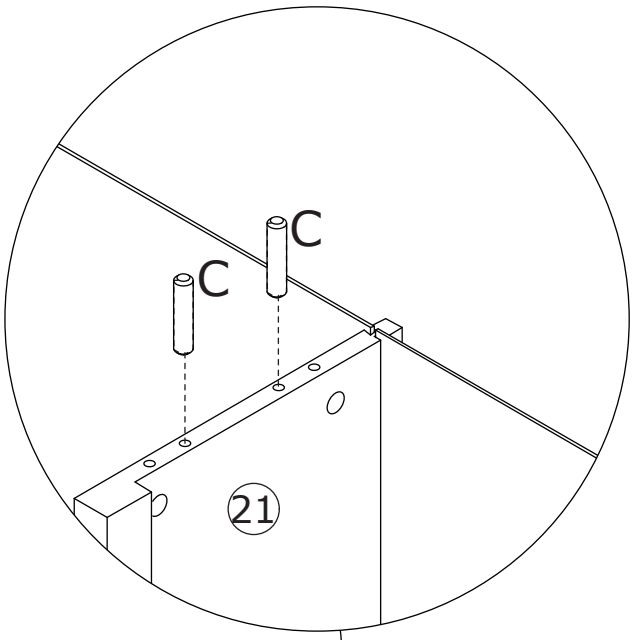


Insert boards 26 and 27 into the available slots.
Insert wooden dowel (C) into board 21.

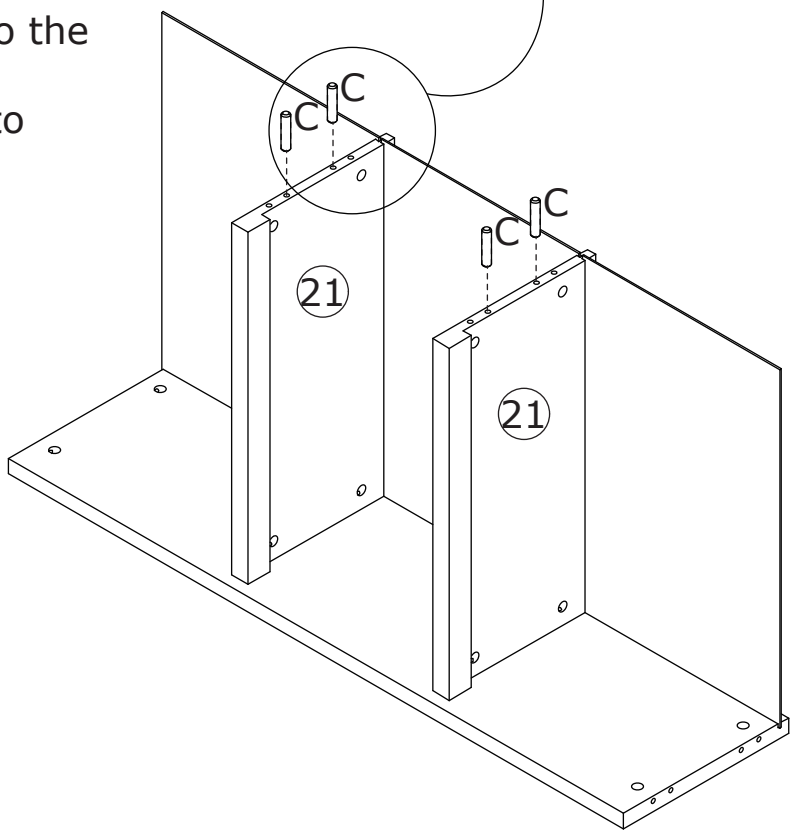



25


A x 4



∅6 x 35 mm



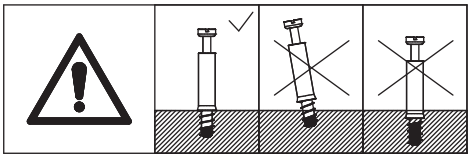

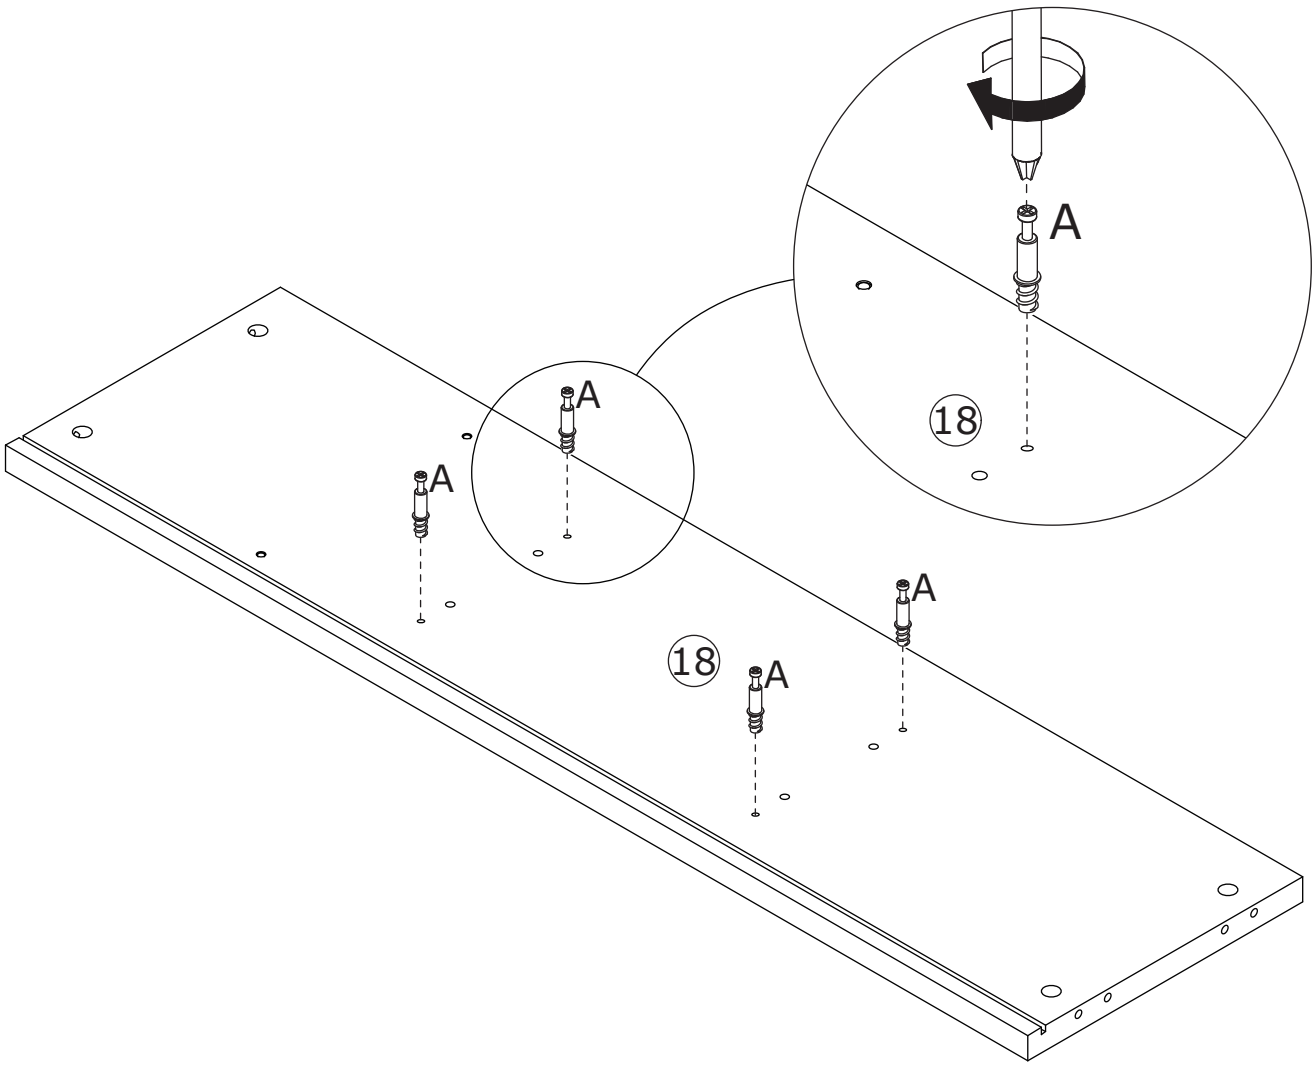


Screw eccentric rod (A) to board 18.


26

B x 4




∅15 x 11 mm



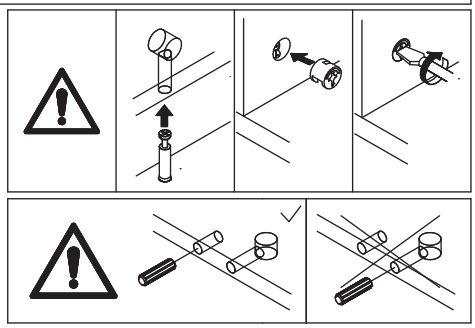


Connect board 18 to board 21, then tighten by turning eccentric wheel (B) clockwise.

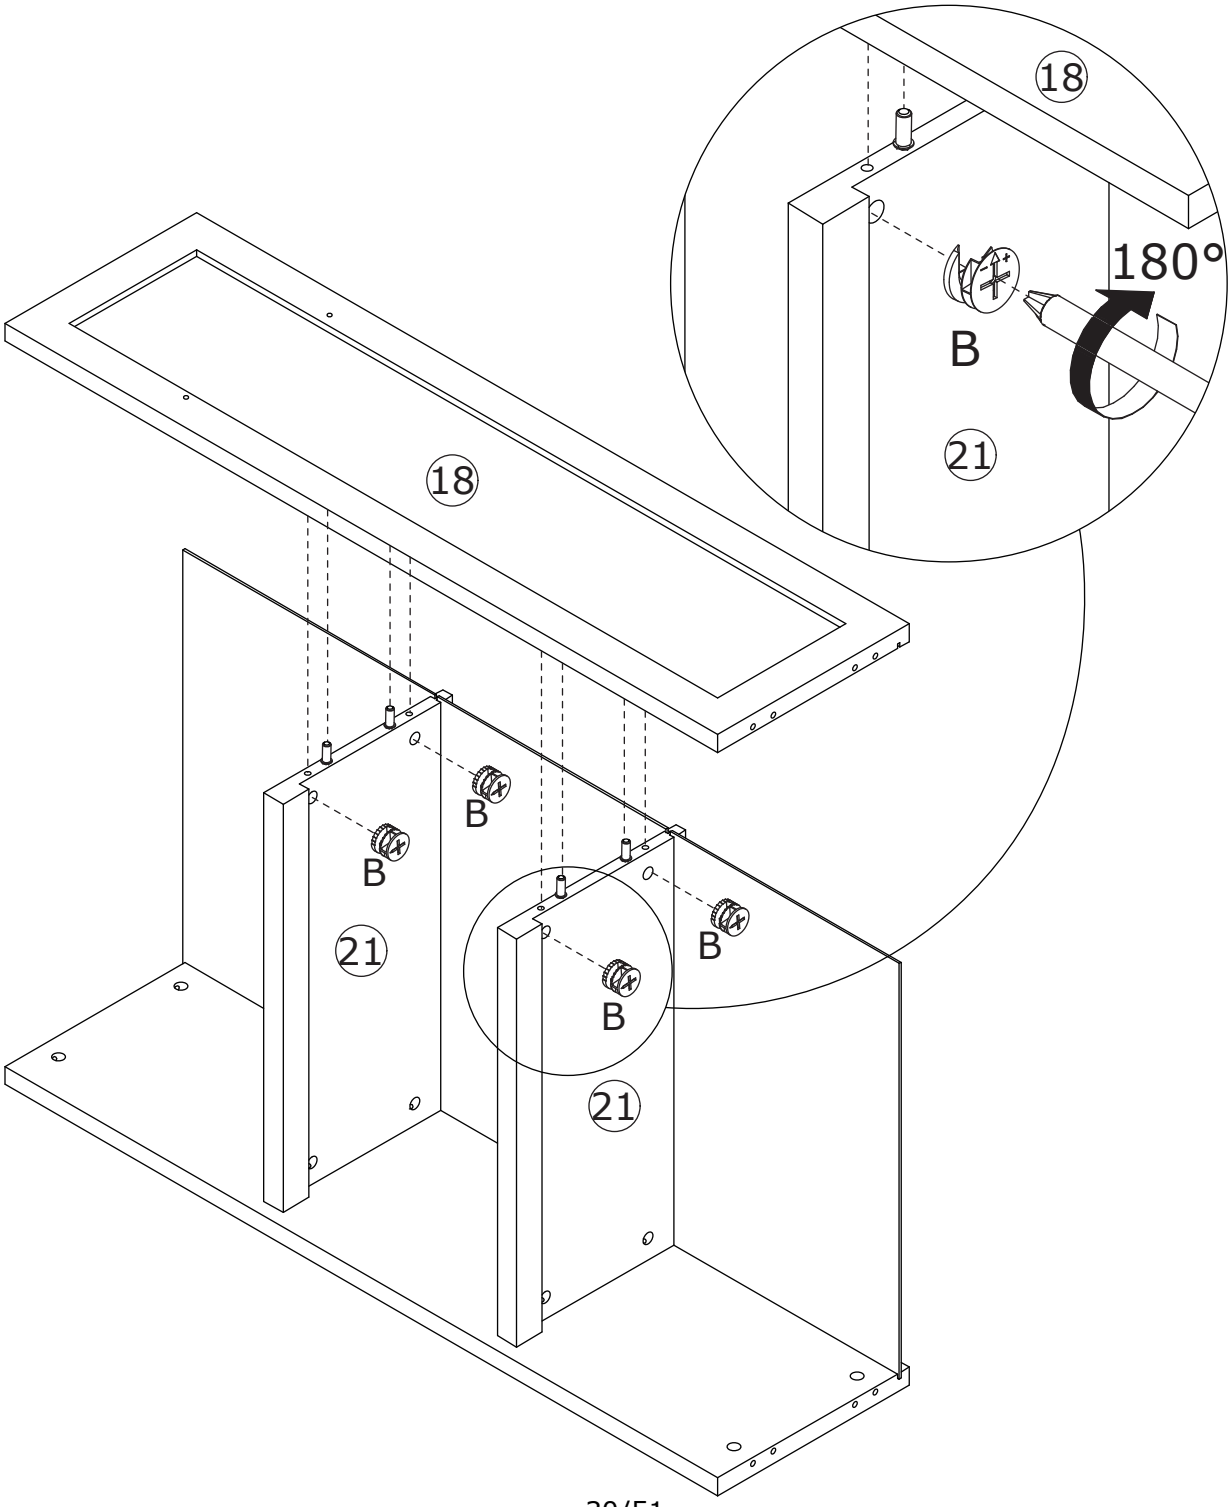

27


D x 3	P x 3	
∅3 x 12 mm		

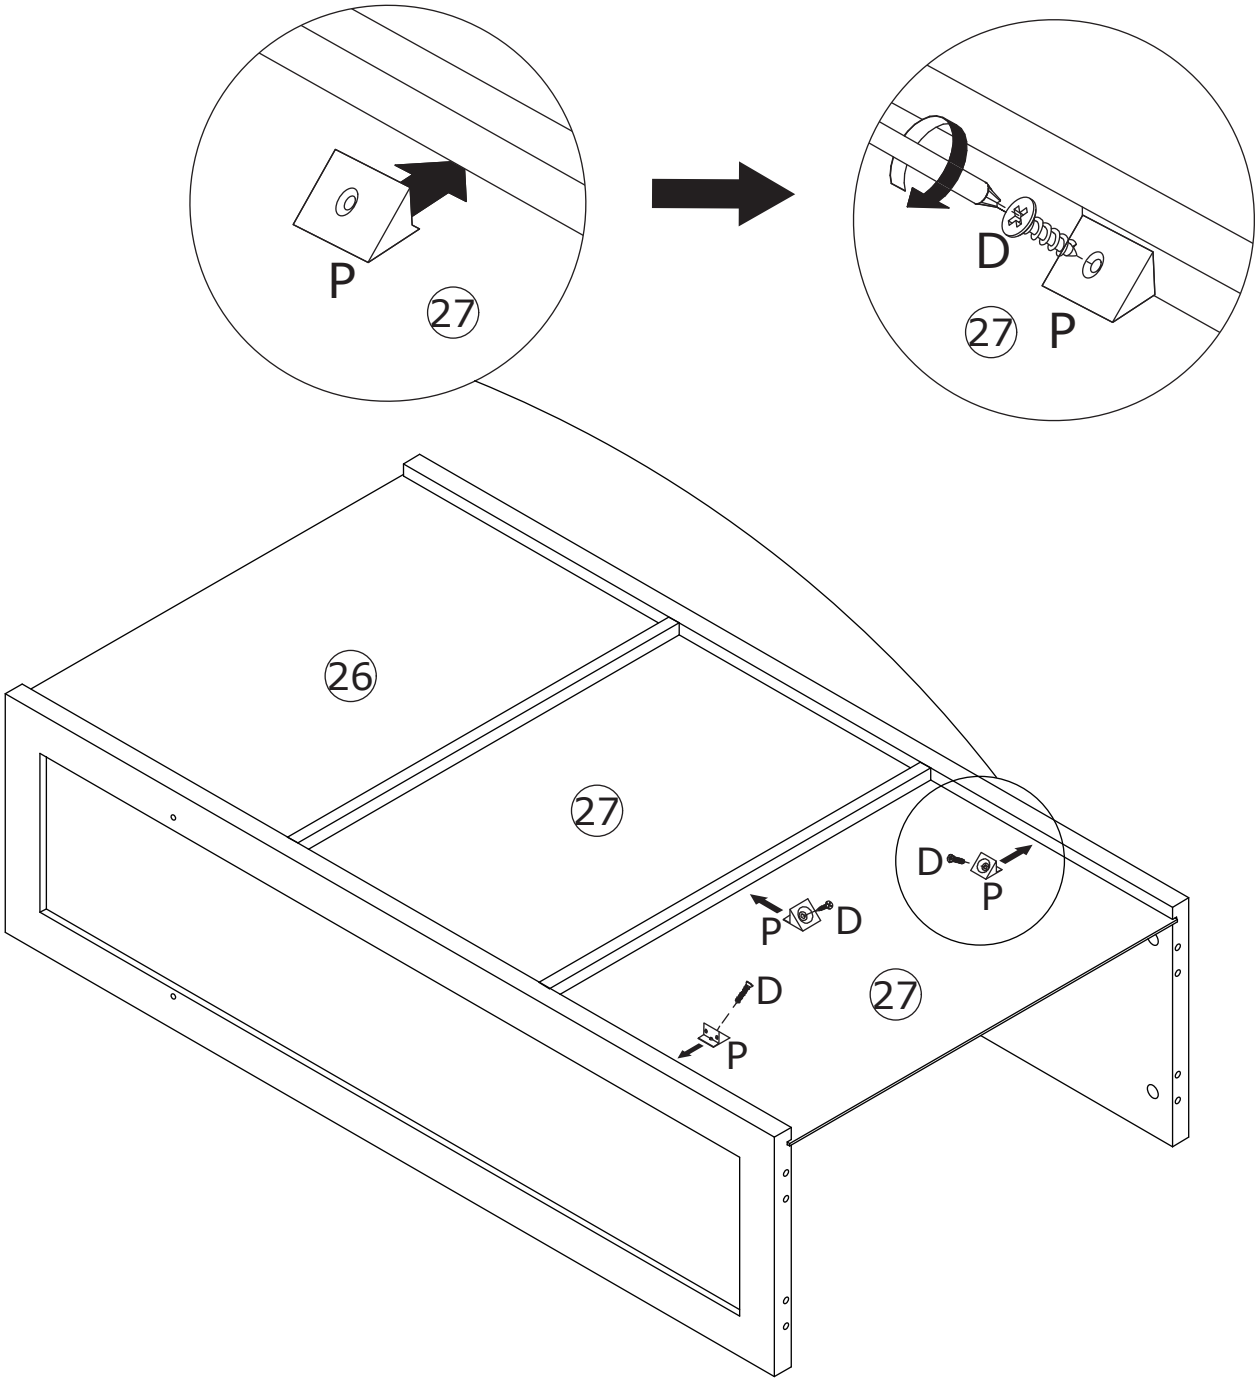


Insert clip (P) into the slots on the back panel and secure them using screw (D).


28


A x 8



∅6 x 35 mm



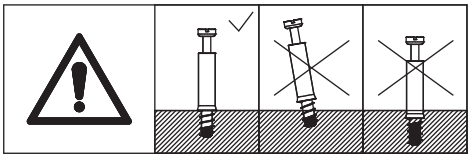

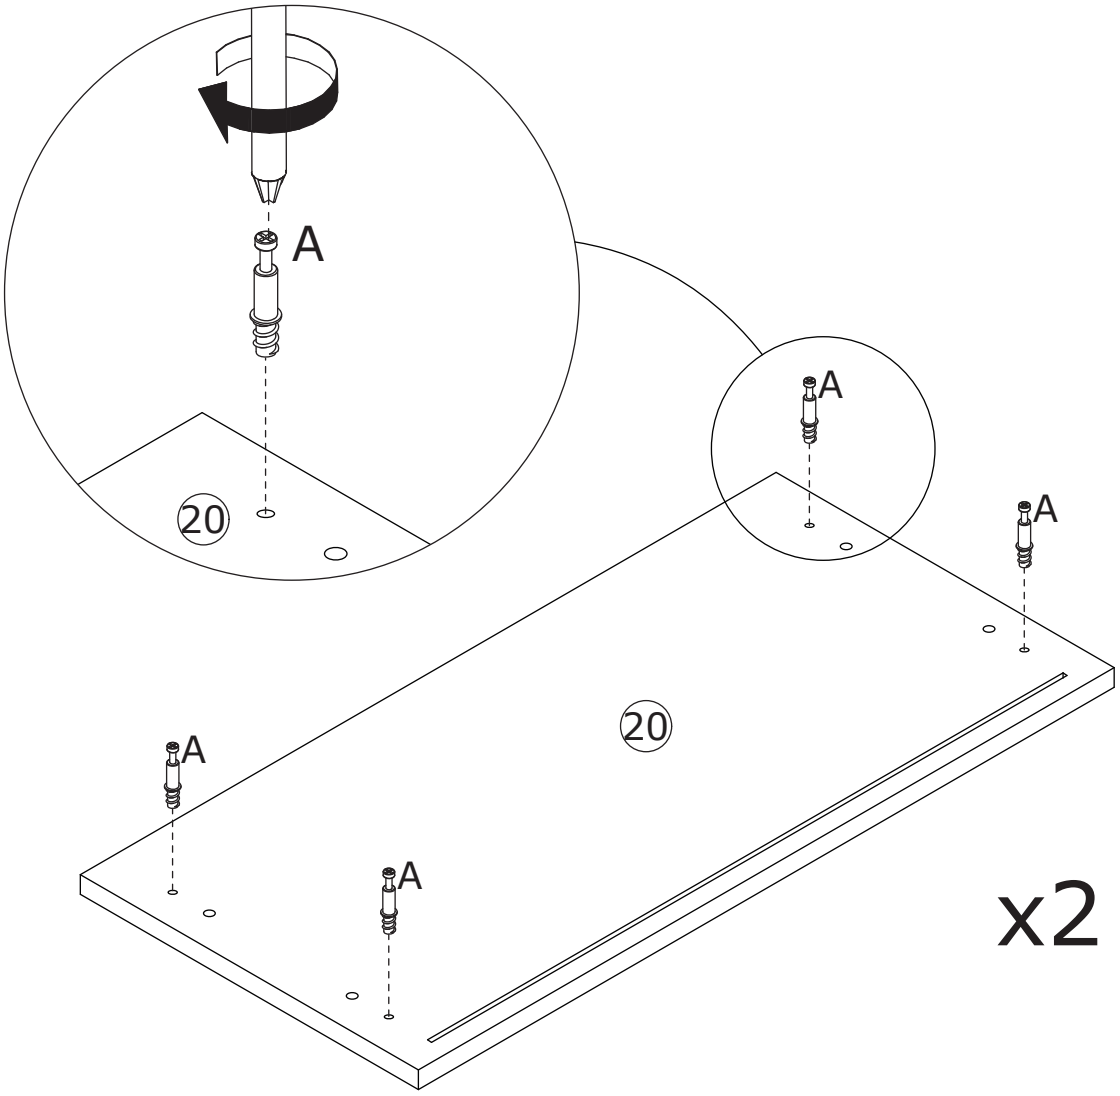


Screw eccentric rod (A) to board 20.

29


E x 12



∅6 x 25 mm






Secure boards 30, 31, and 32 to board 20 using bolt (E).
Note: Do not tighten them fully.

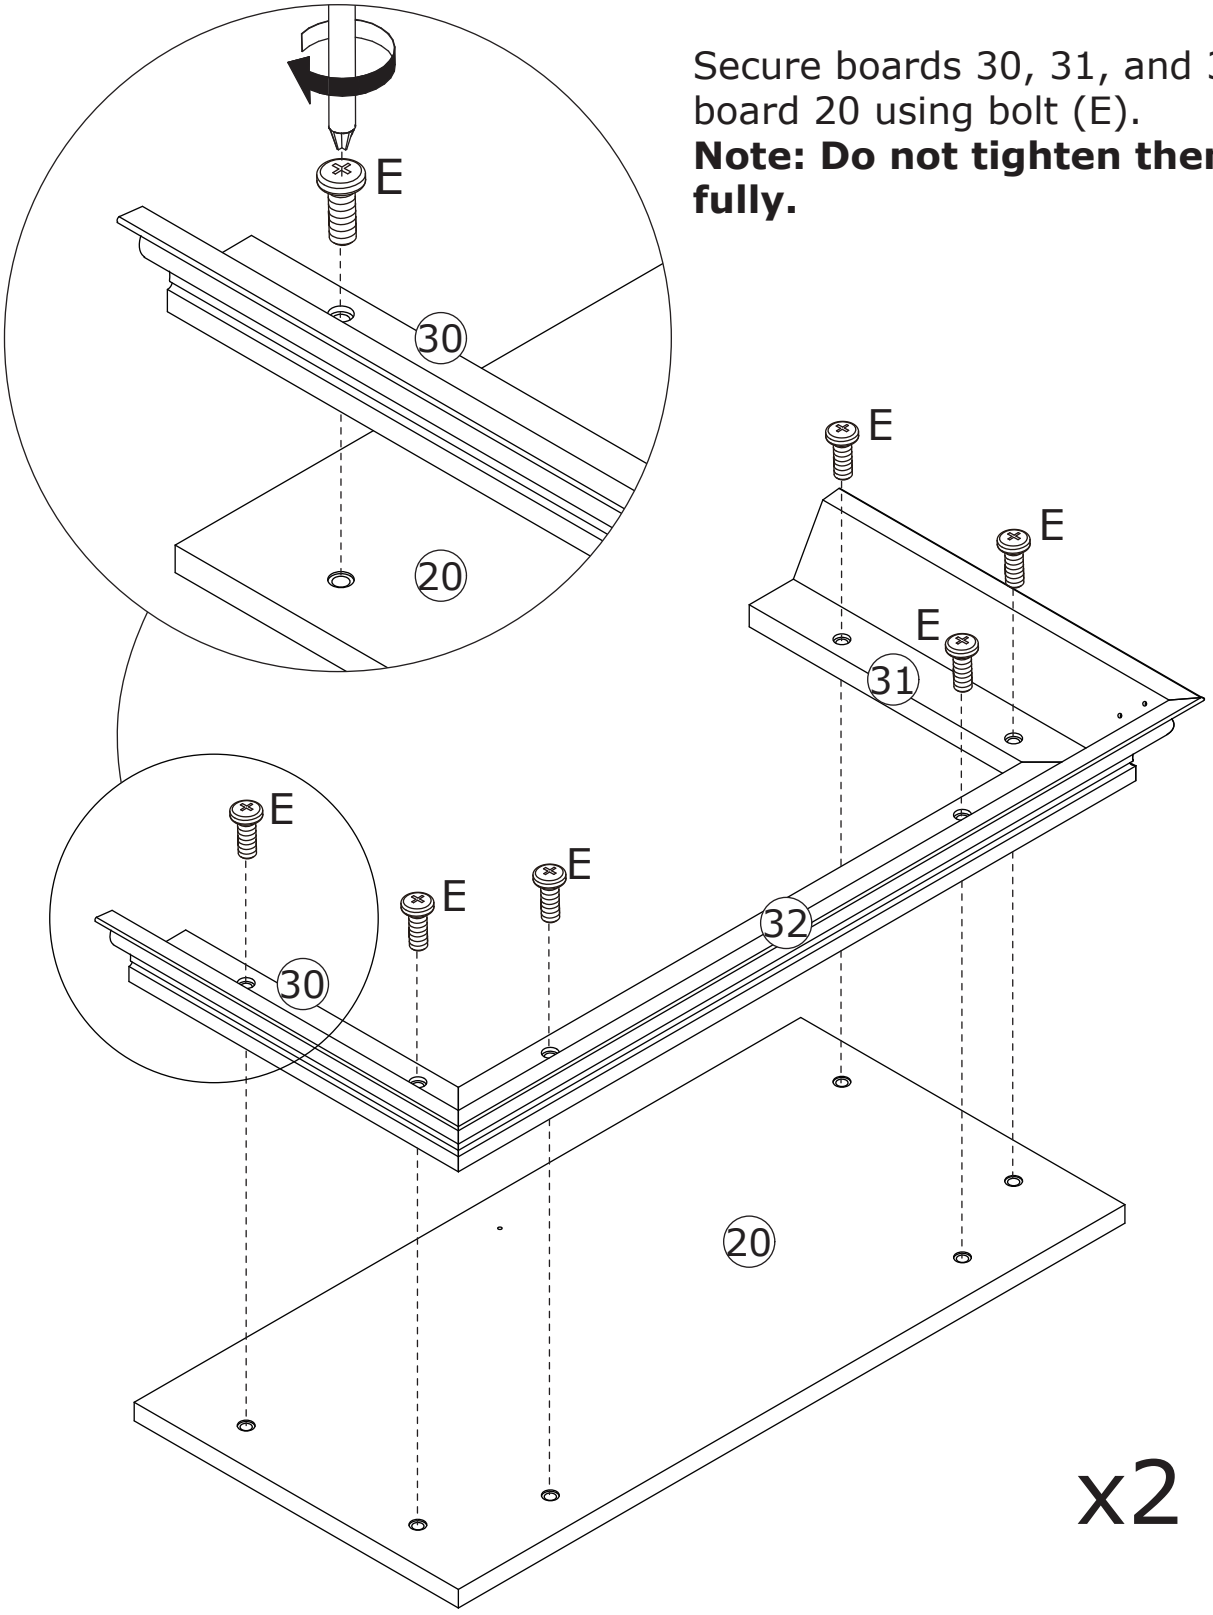


x2


30

D x 16	L x 2	M x 4	
 ∅3 x 12 mm	 L-1 L-2		


Align and secure boards 30, 31, and 32 using screw (D) and bracket (M). **F ully tighten screw (E).**
Secure anti-tip bracket (L) to board 20.

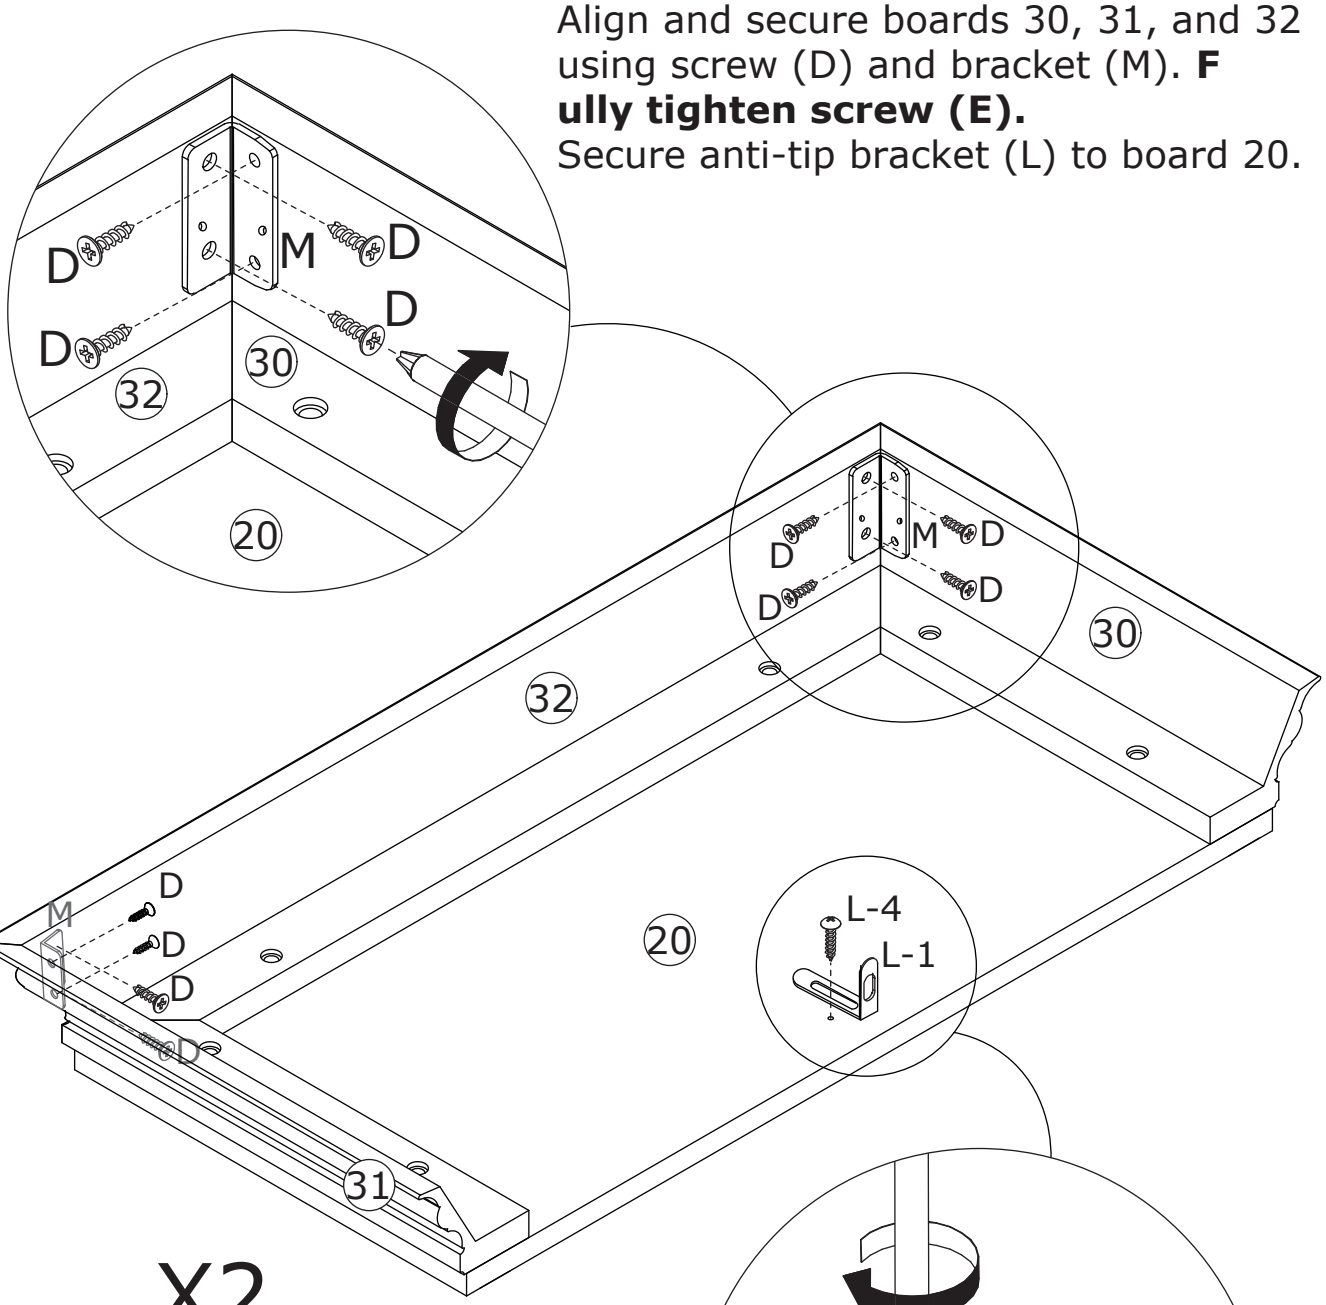



X2

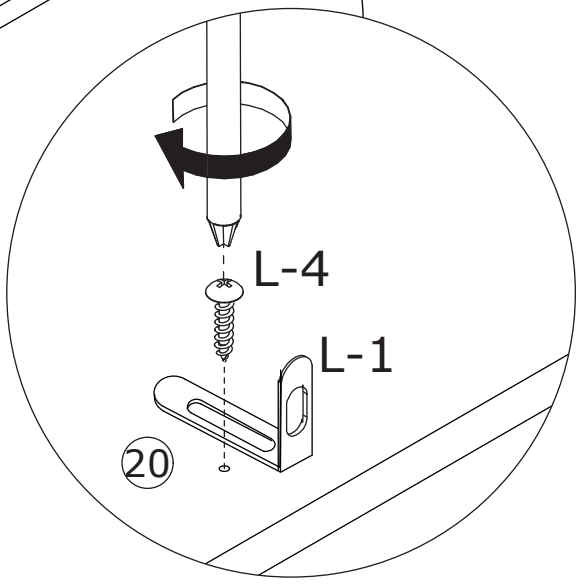

31



B x 4	C x 4	
		
∅15 x 11 mm	∅8 x 30 mm	

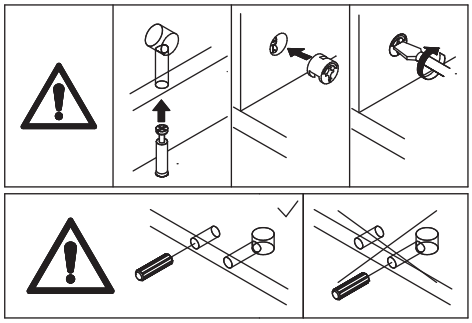


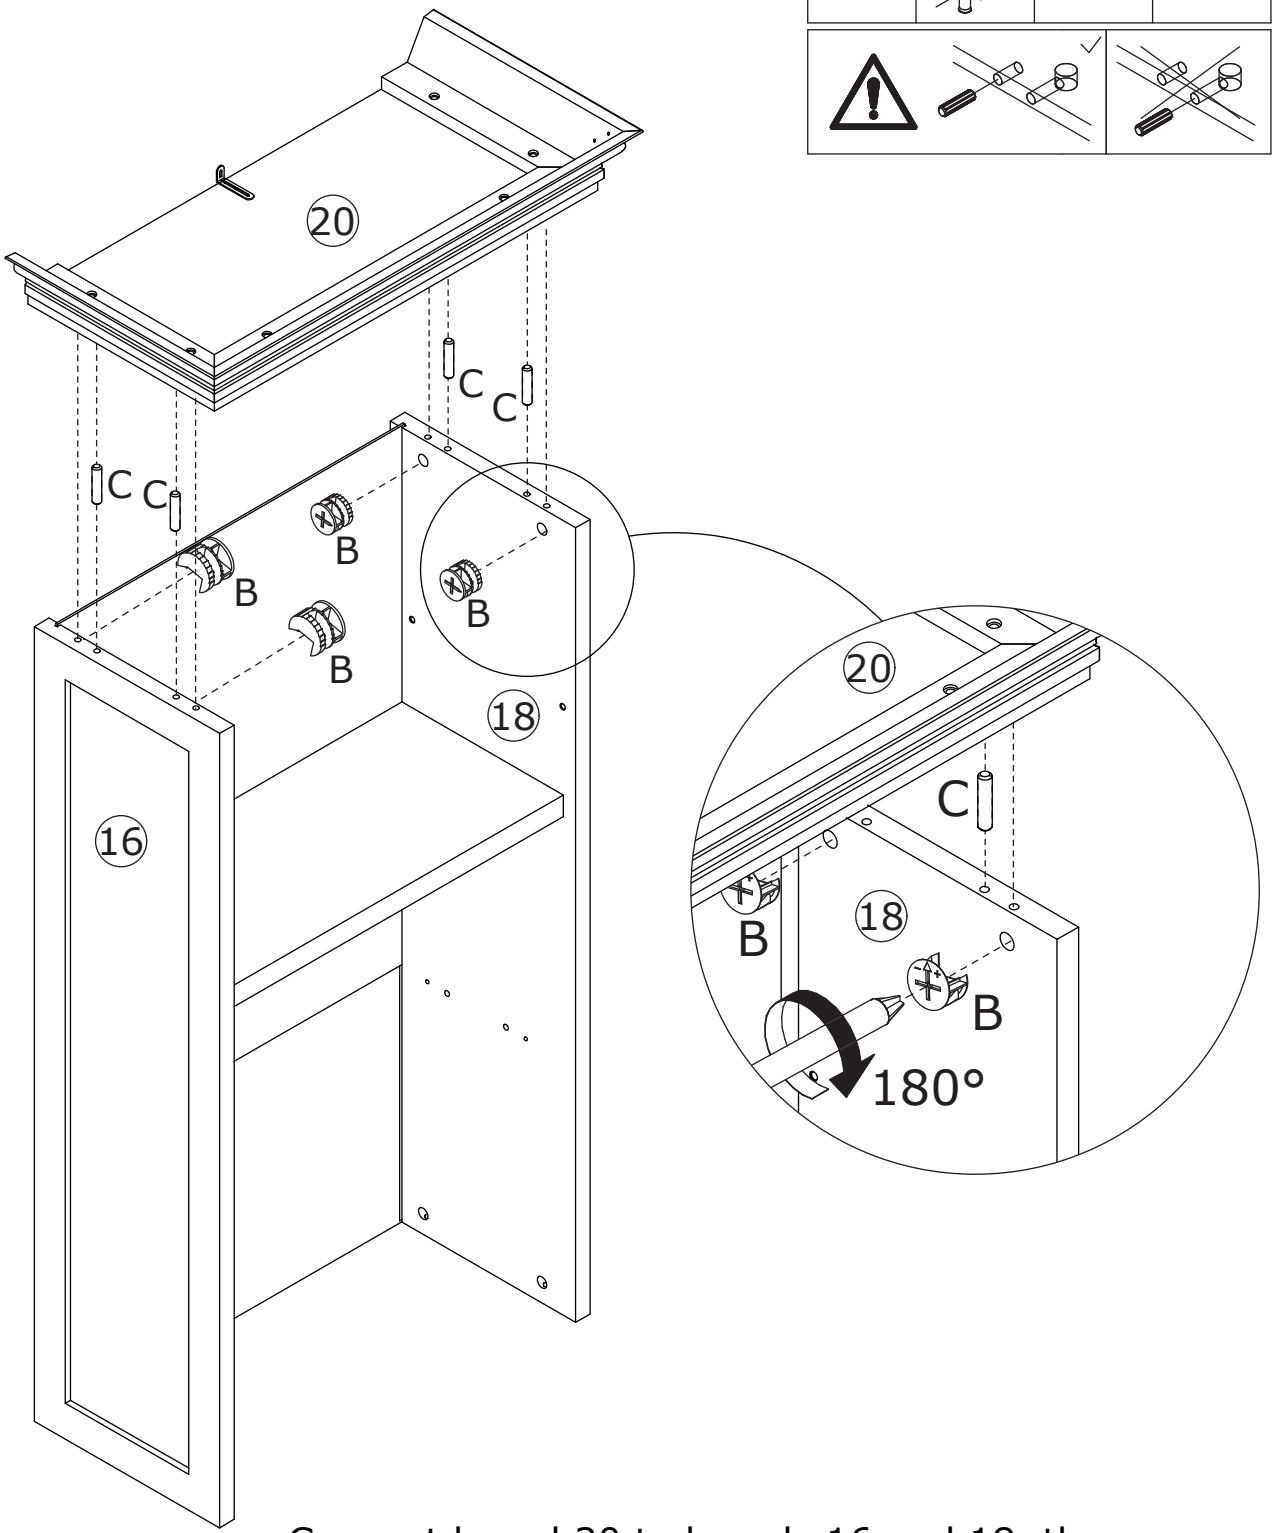



Connect board 20 to boards 16 and 18, then tighten by turning eccentric wheel (B) clockwise.

32

A x 4	B x 4	C x 4	
			
∅6 x 35 mm	∅15 x 11 mm	∅8 x 30 mm	

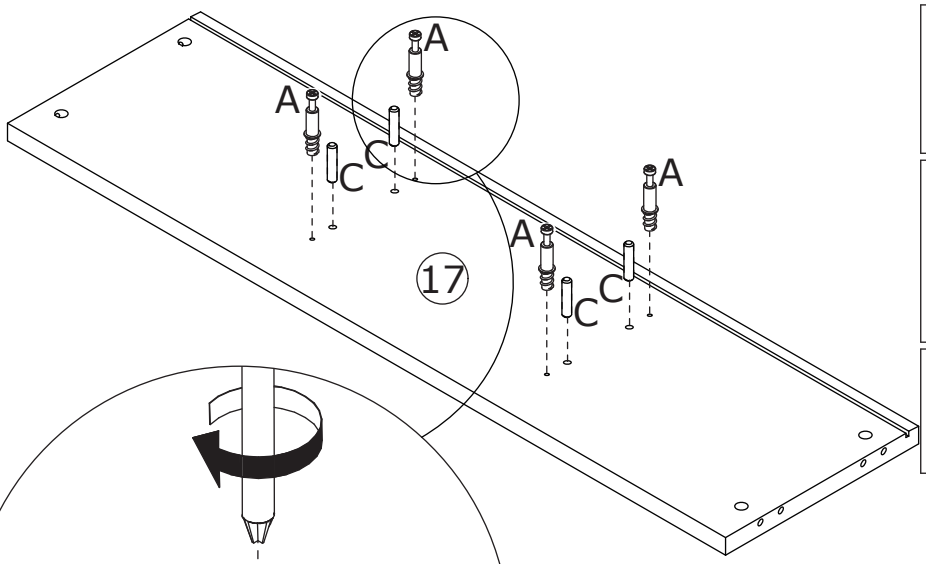


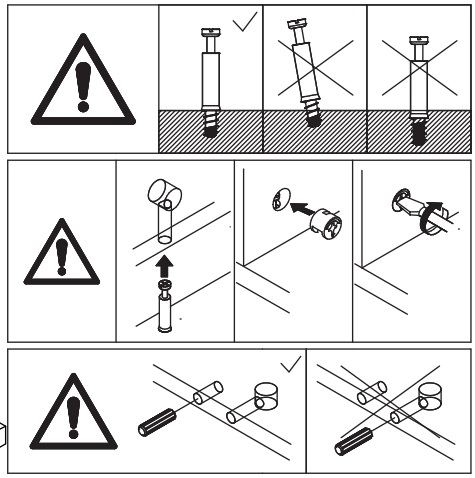


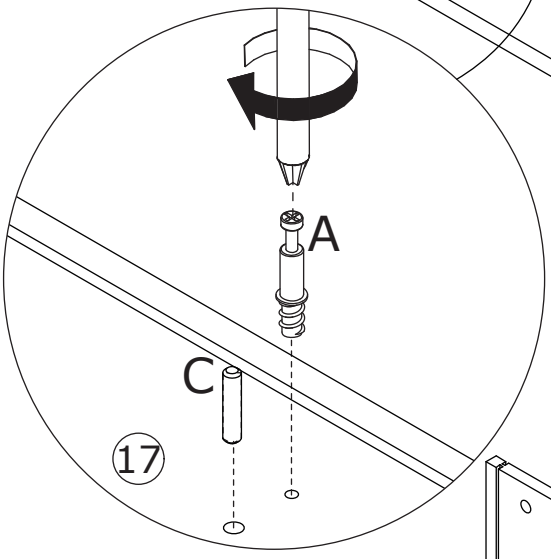

Screw eccentric rod (A) and insert wooden dowel (C) into board 17.


Connect board 21 to board 17, then tighten by turning eccentric wheel (B) clockwise.

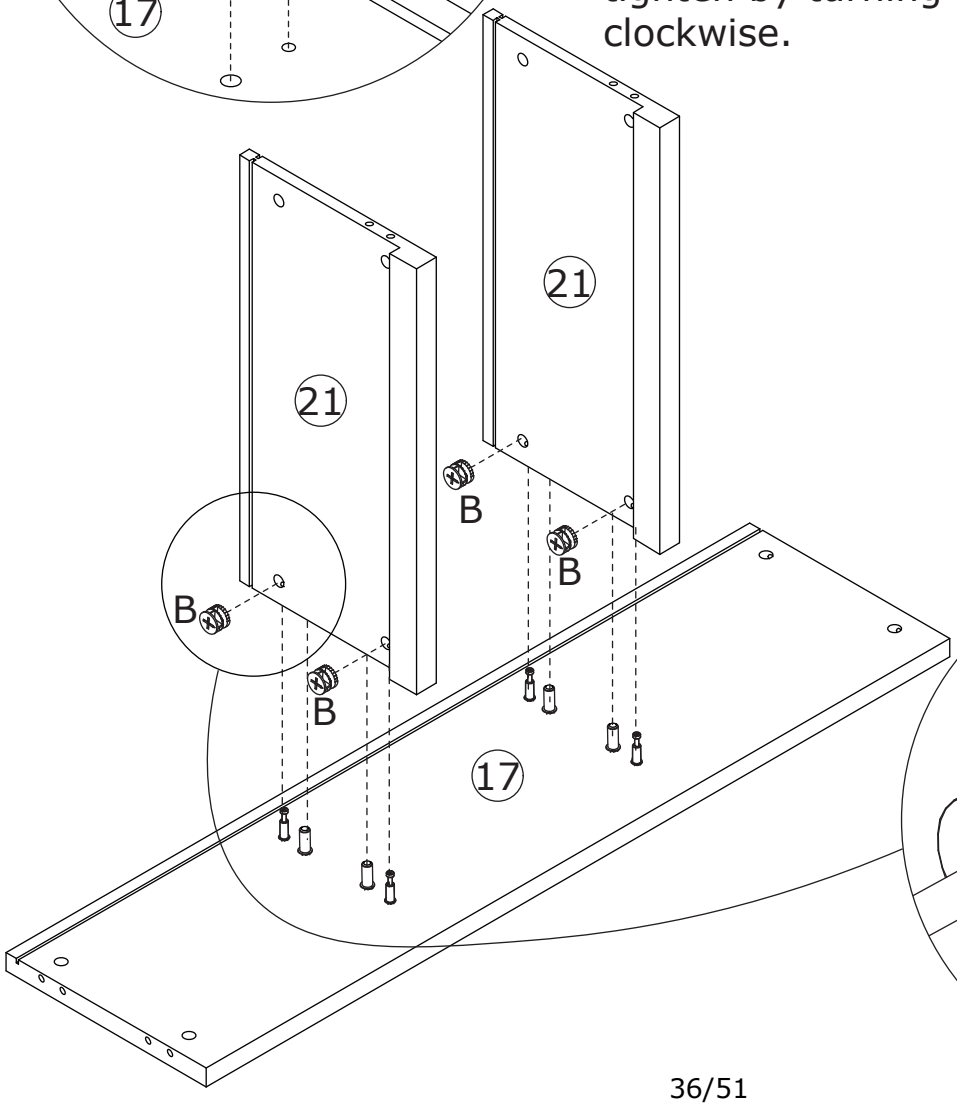

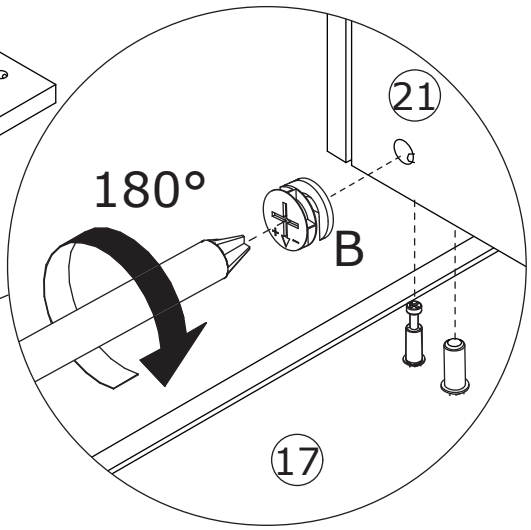


33


C x 4



∅8 x 30 mm

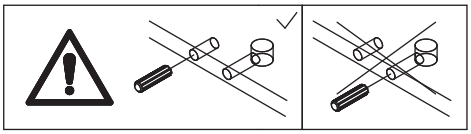


Insert boards 26 and 27 into the available slots.
Insert wooden dowel (C) into board 21.

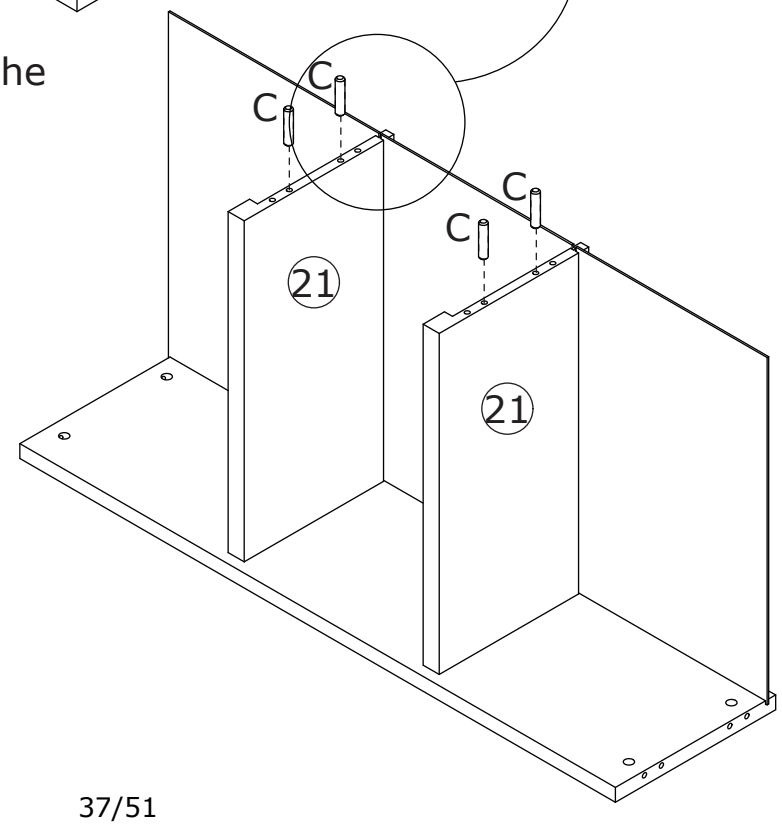



34


A x 4



∅6 x 35 mm



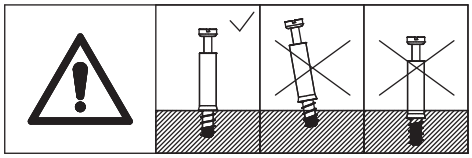

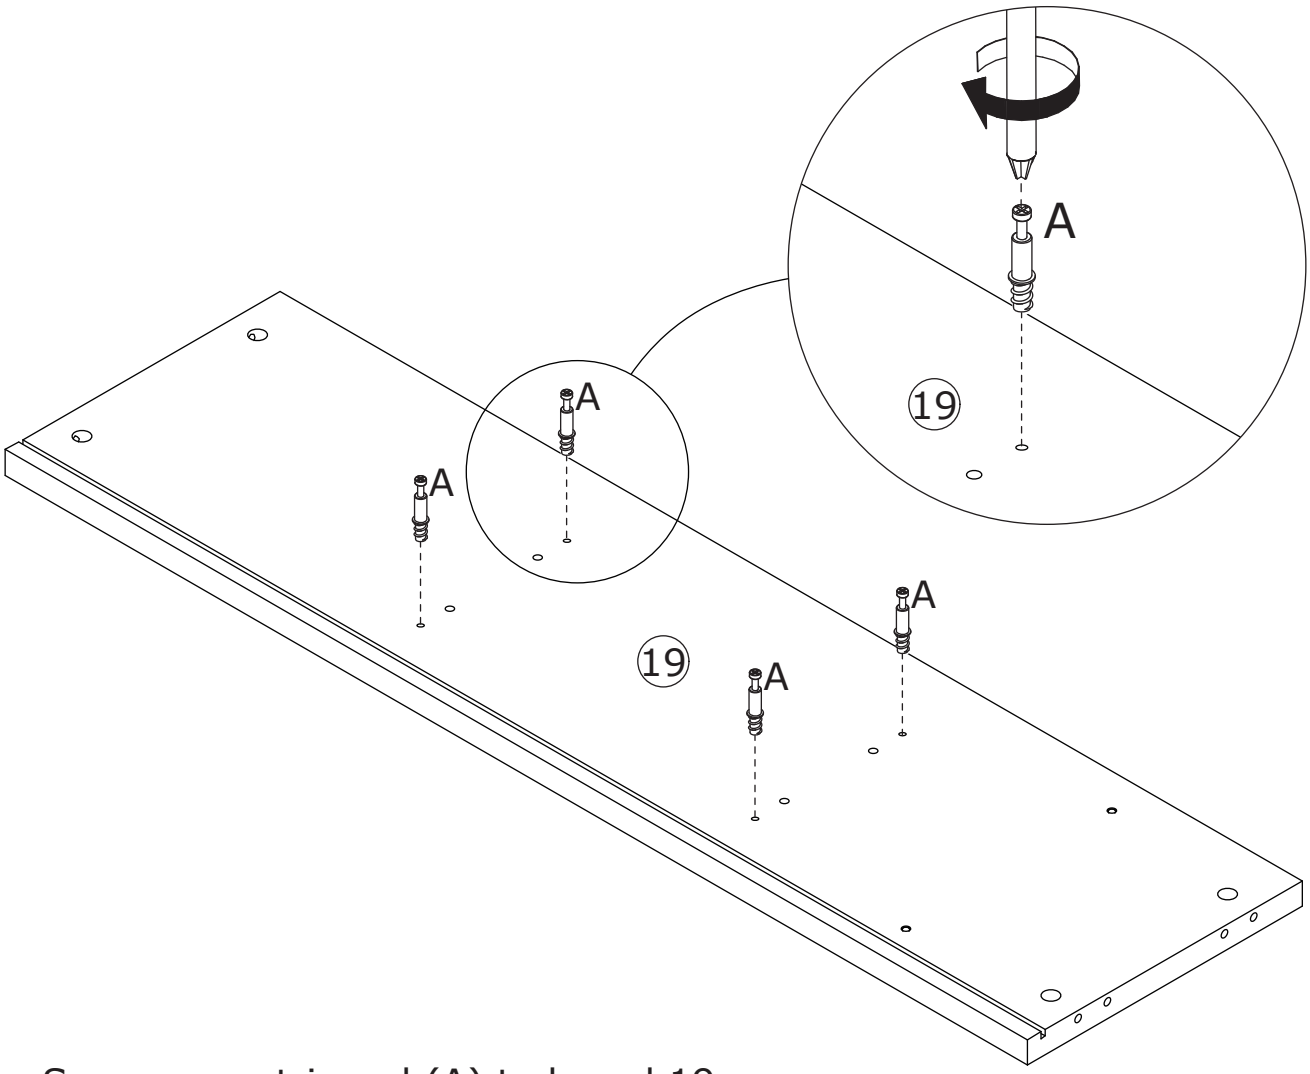


Screw eccentric rod (A) to board 19.


35

B x 4




∅15 x 11 mm




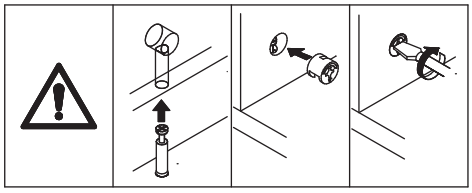


Connect board 19 to board 21, then insert the eccentric wheel (B) and turn it clockwise to tighten.

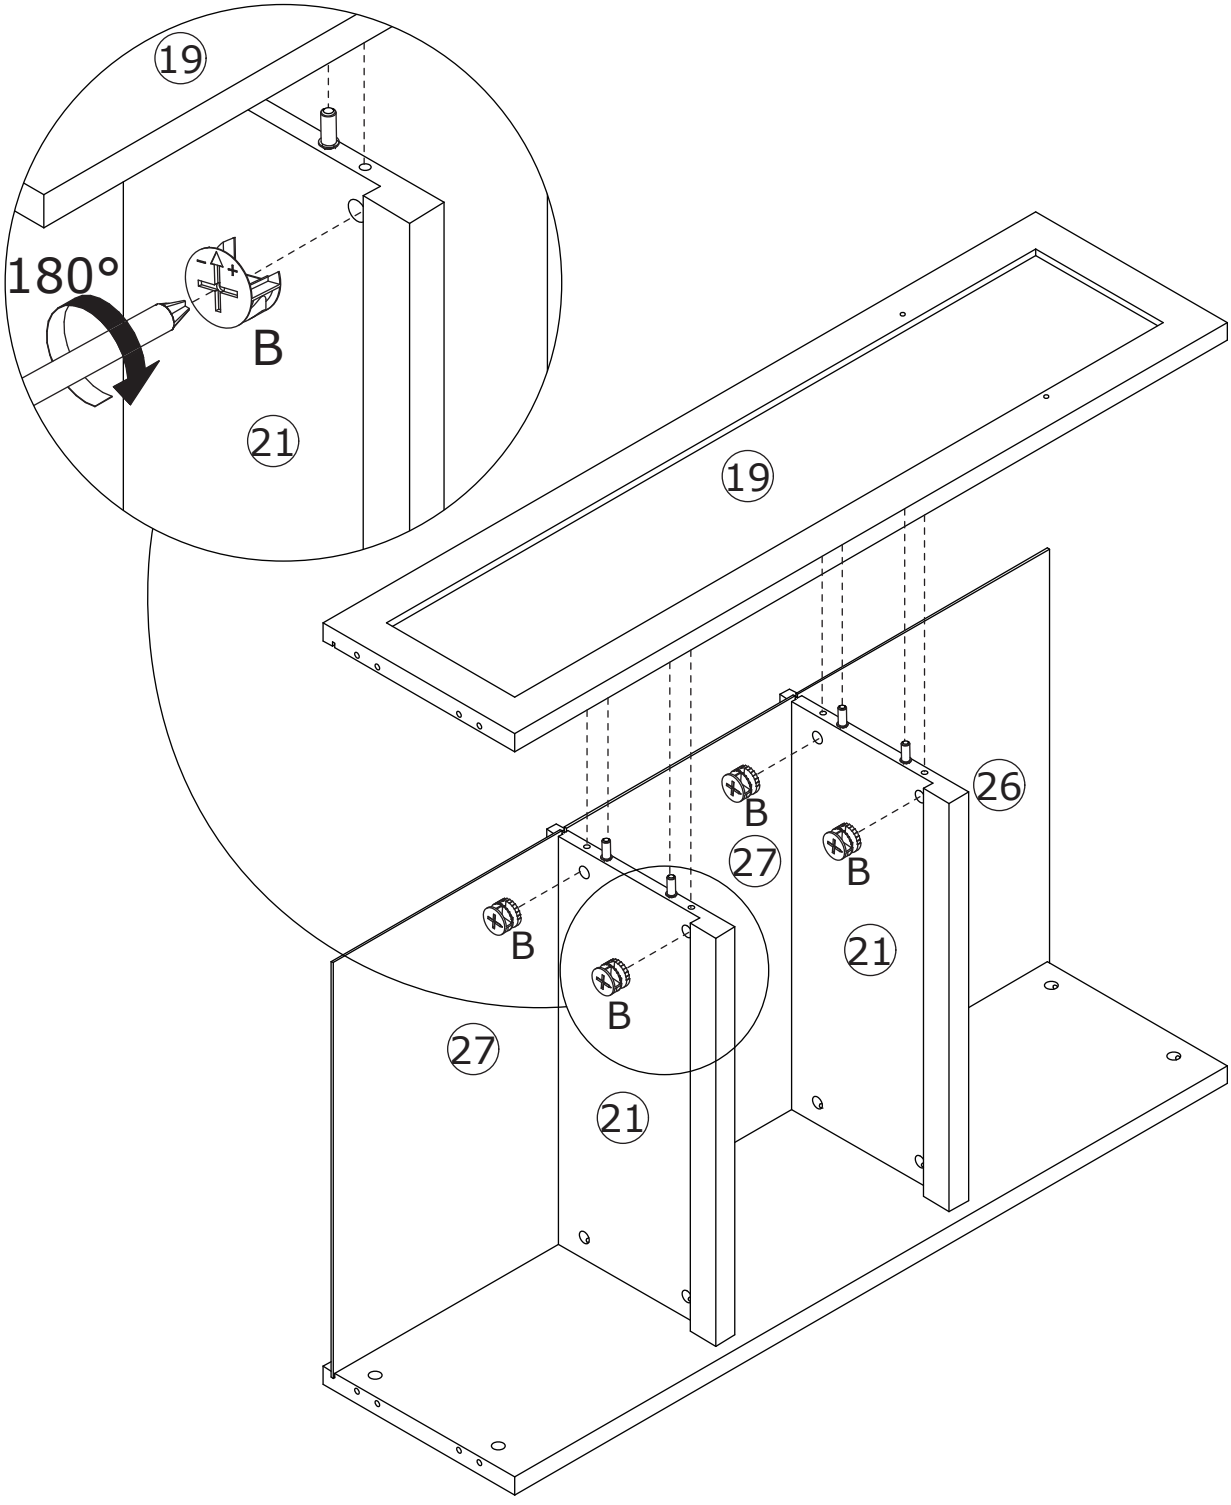


36


D x 3	P x 3	
 ∅3 x 12 mm		

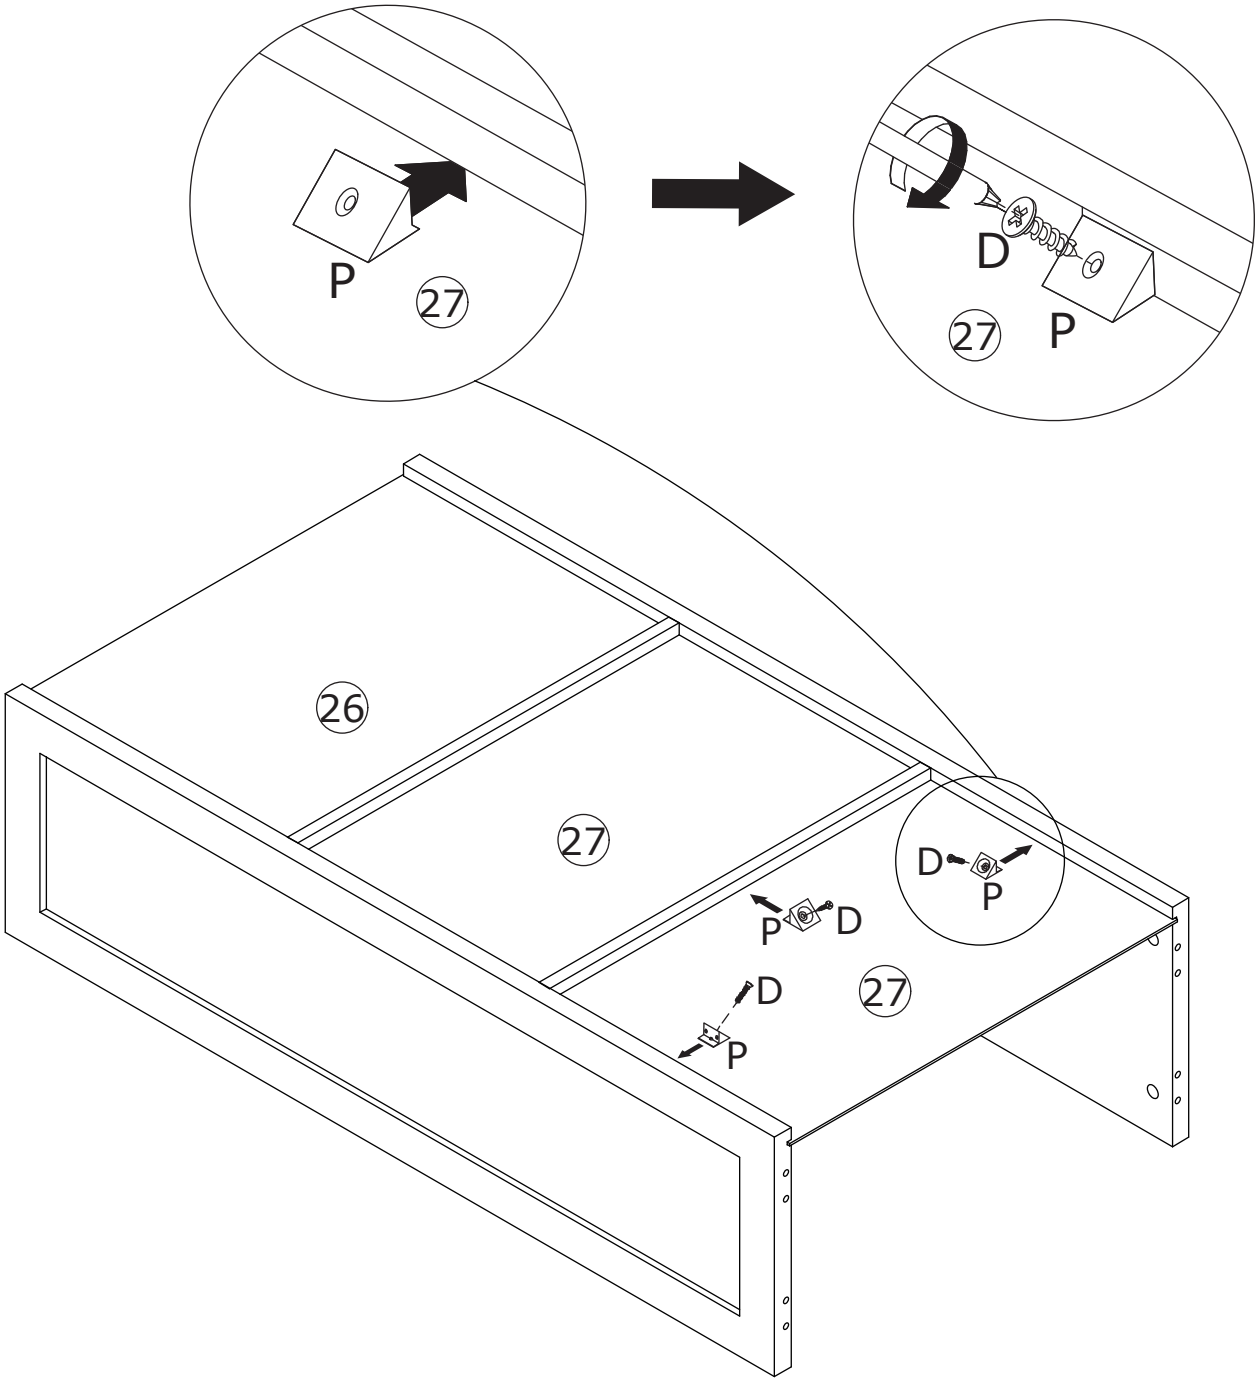


Insert clip (P) into the slots on the back panel and secure them using screw (D).

37

B x 4	C x 4	
		
∅15 x 11 mm	∅8 x 30 mm	

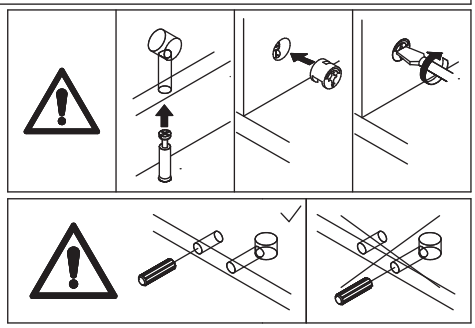

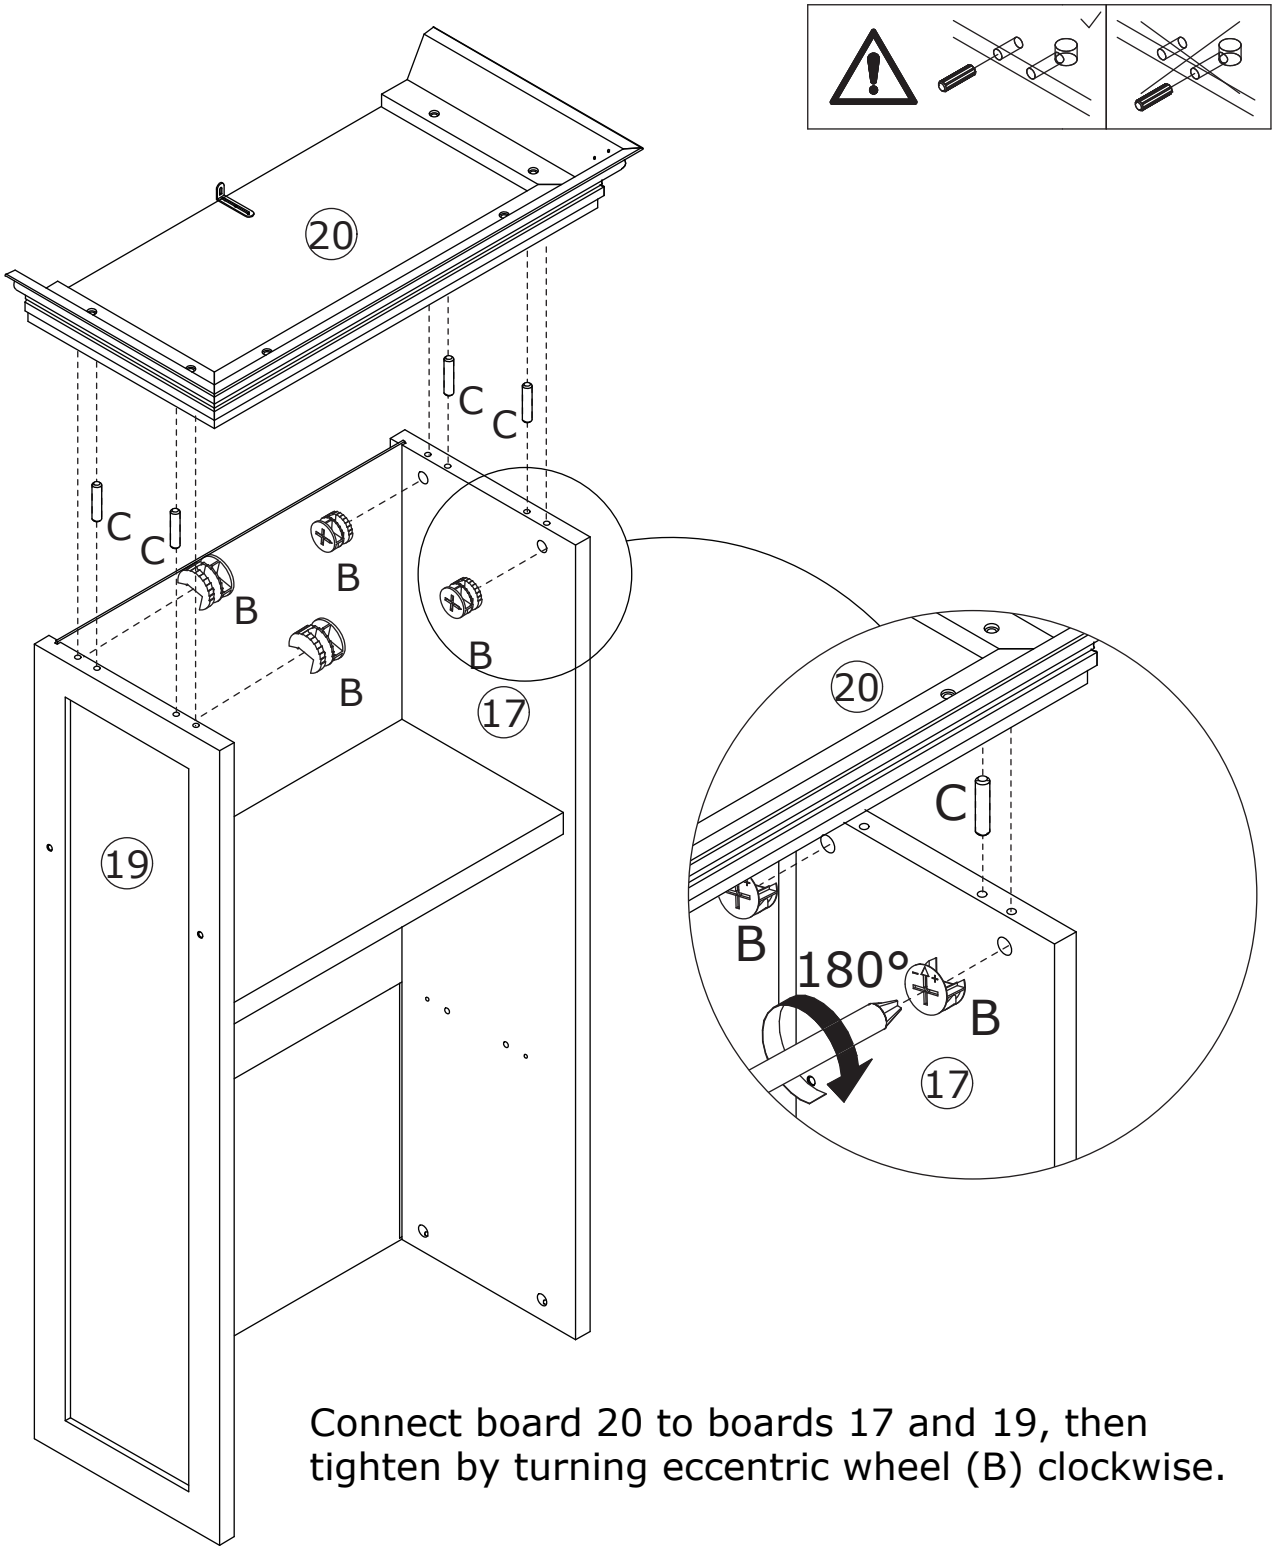


Connect board 20 to boards 17 and 19, then tighten by turning eccentric wheel (B) clockwise.


38


B x 8



∅15 x 11 mm



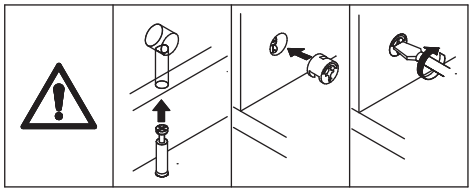


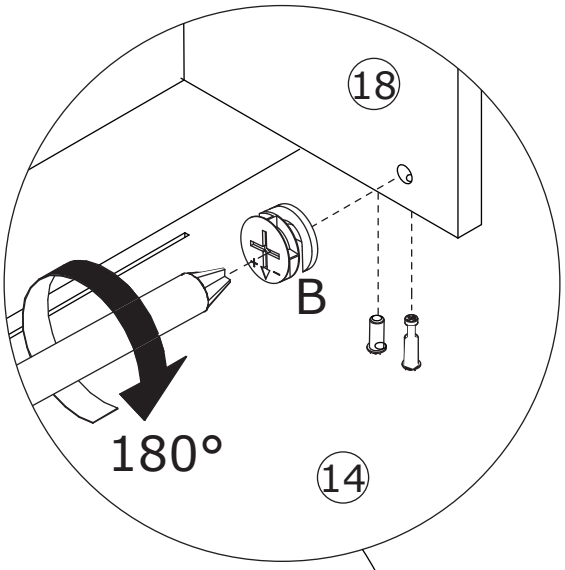


Connect the two assembly units to boards 14 and 15, then tighten by turning eccentric wheel (B) clockwise.
Note: Two or more adults are required for installation.

39


T x 4



∅5 x 40 mm



Attach board 22 to boards 18 and 19 in the direction shown , and secure it using screw (T).
Note: Installation requires two or more adults.

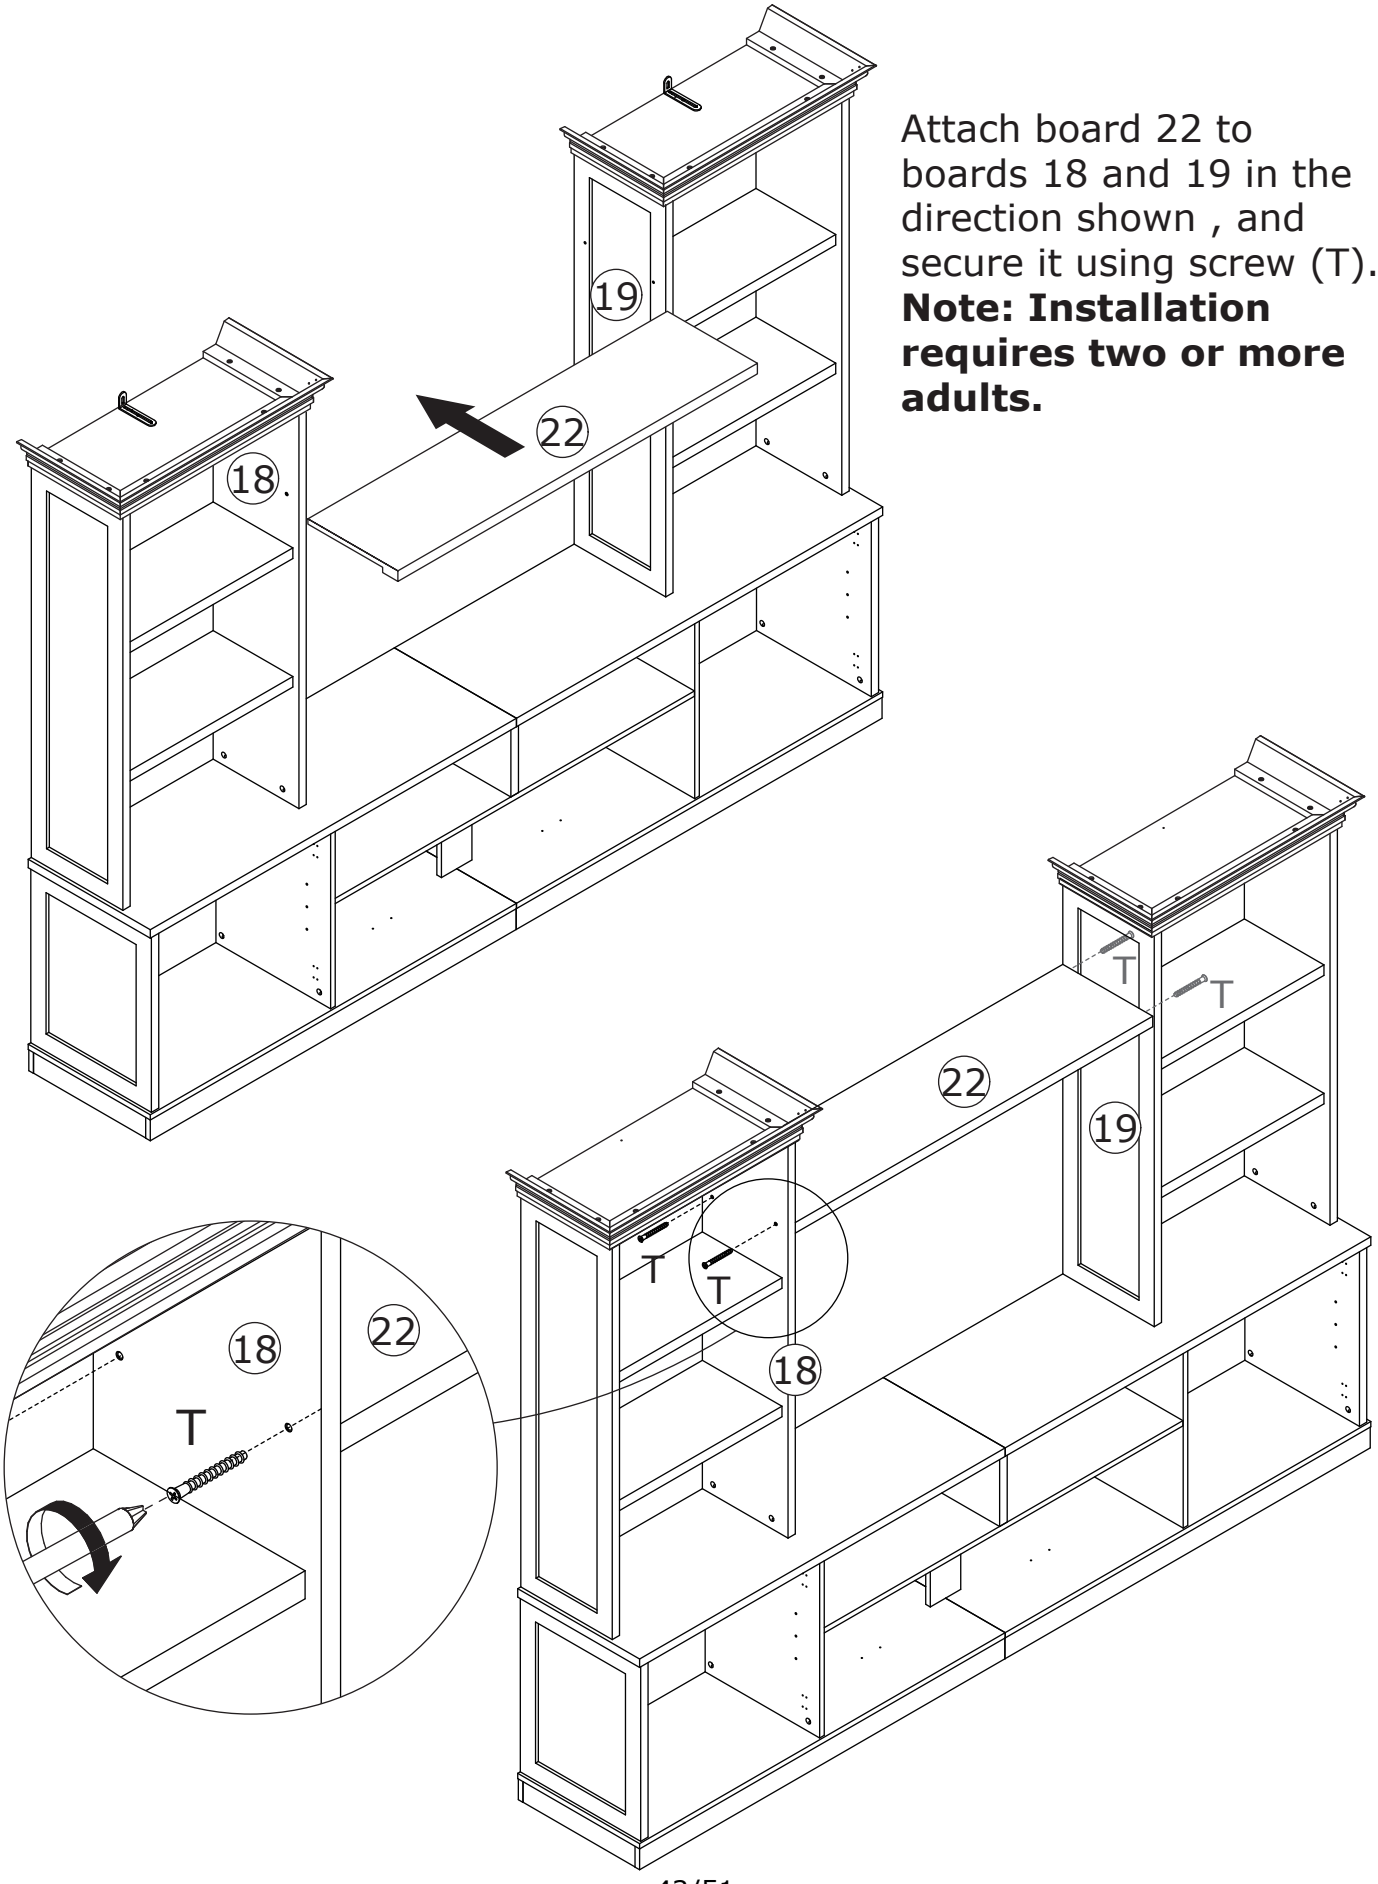


40

Q x 8





Install pin (Q) to boards 3, 4, and 5.

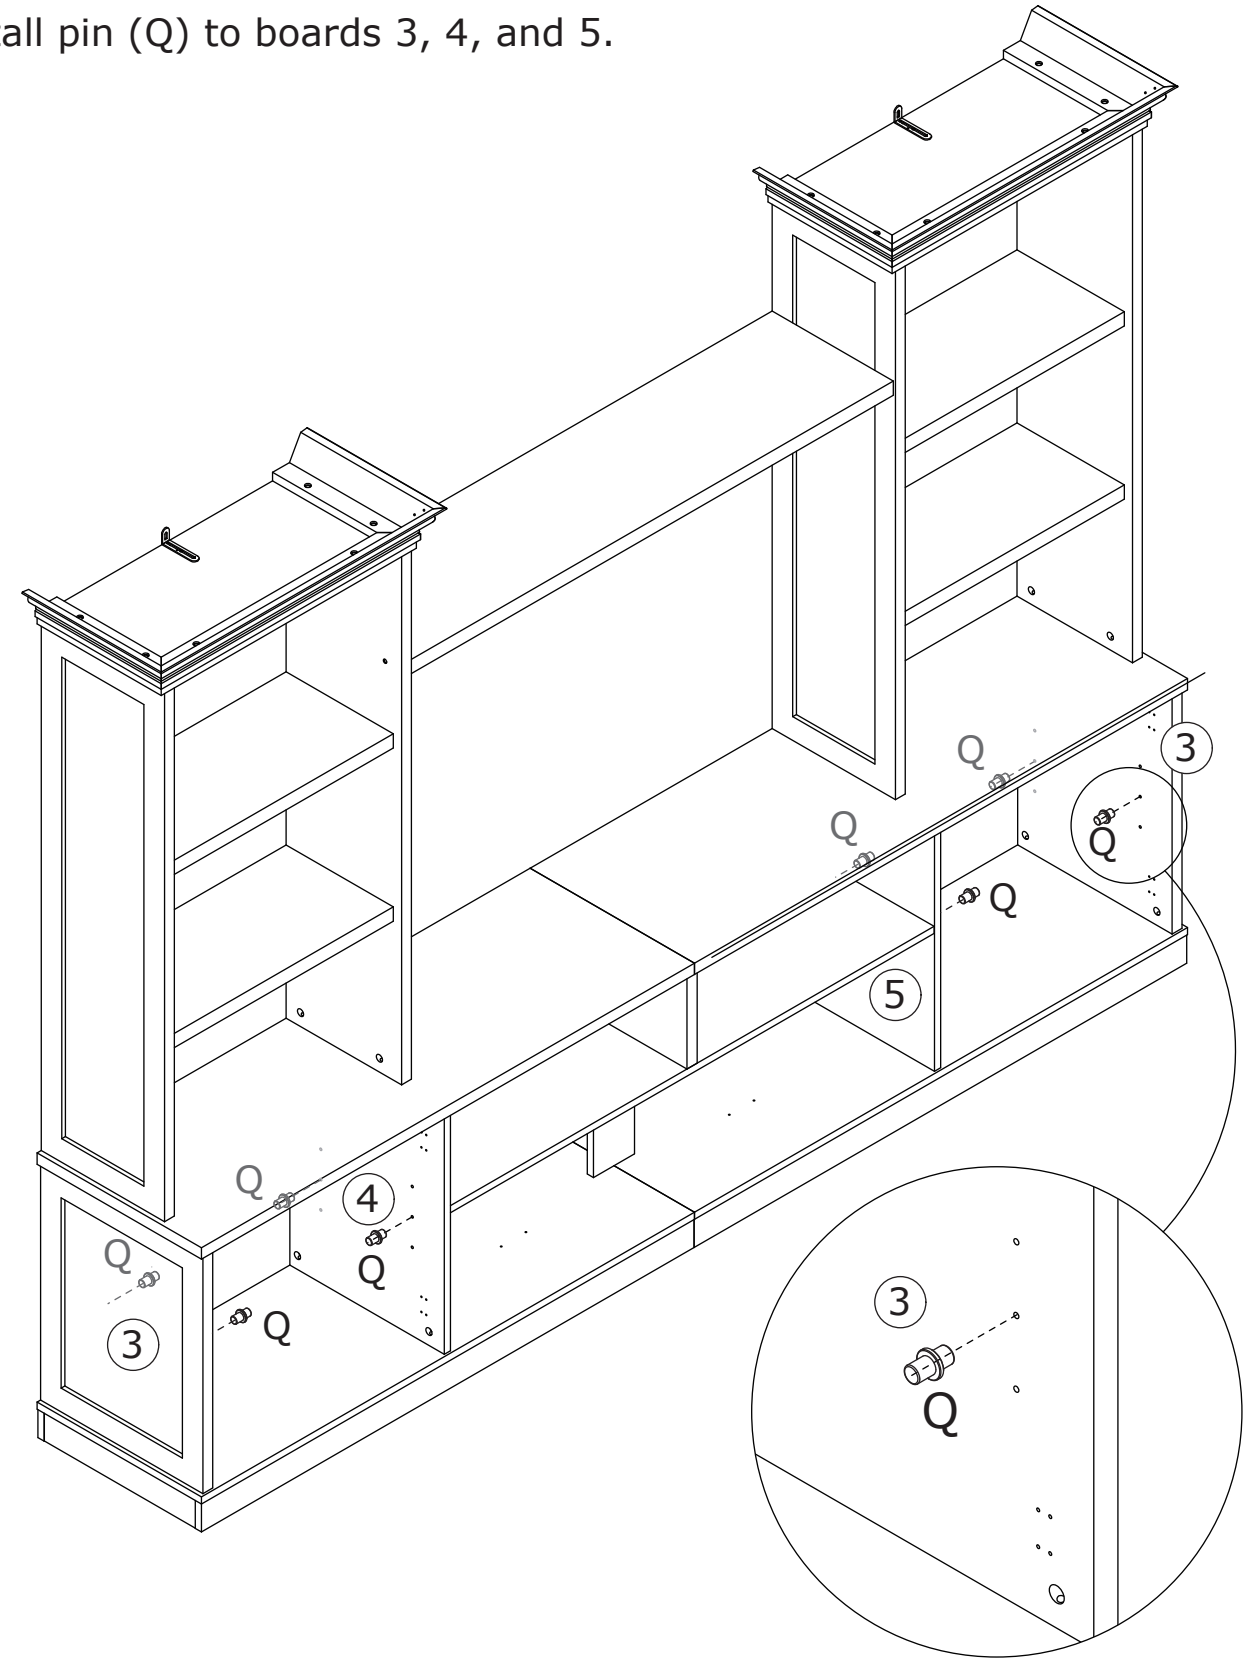

41


Place board 23 on the pins.

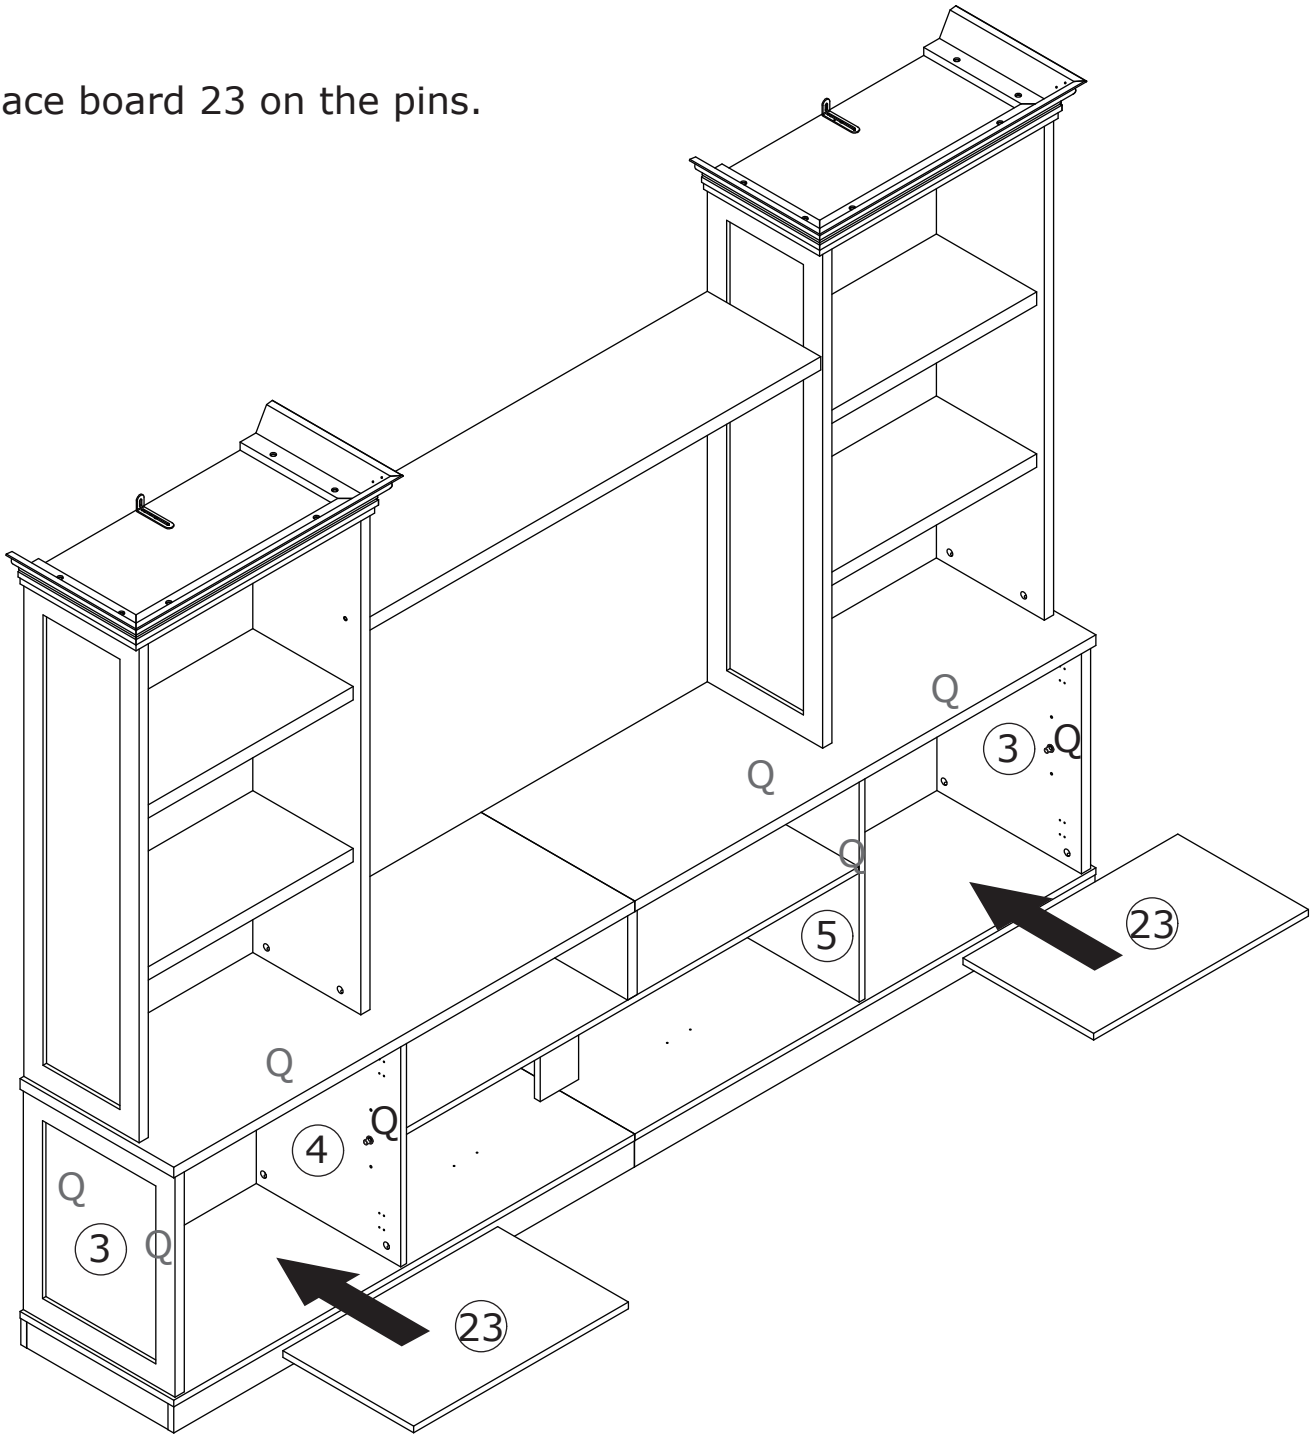

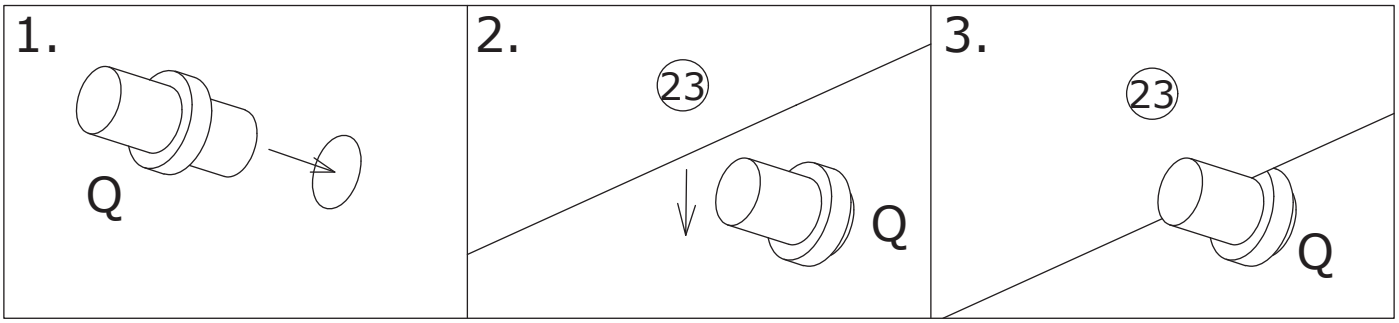

42

H x 16	N x 4	R x 8	
∅3.5 x 14 mm	∅4 x 18 mm		

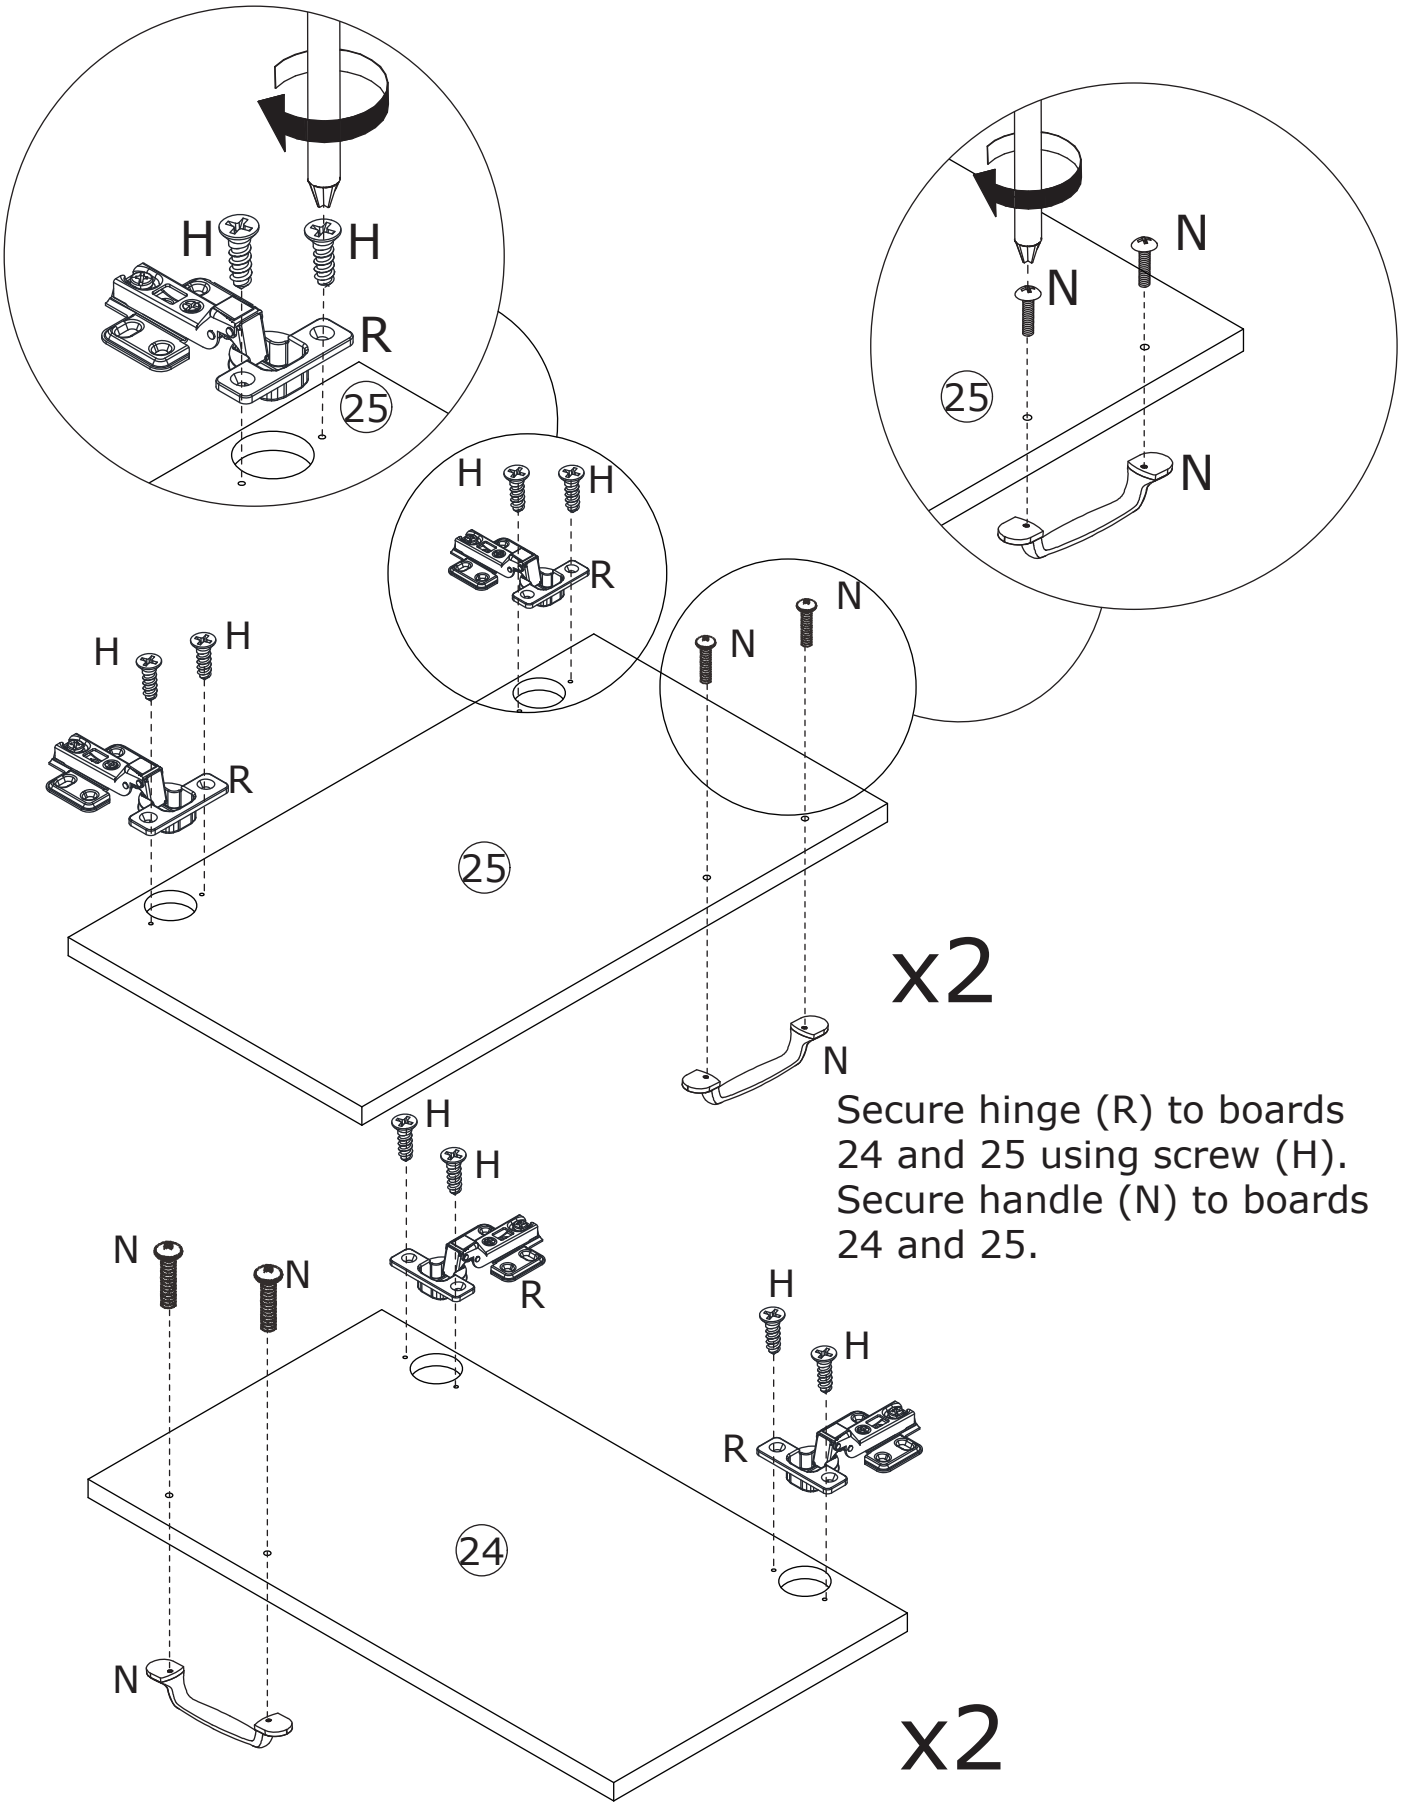


Secure hinge (R) to boards 24 and 25 using screw (H). Secure handle (N) to boards 24 and 25.

43


H x 32




∅3.5 x 14 mm




Secure boards 24 and 25 to boards 3, 4, and 5 via the hinges using screw (H).

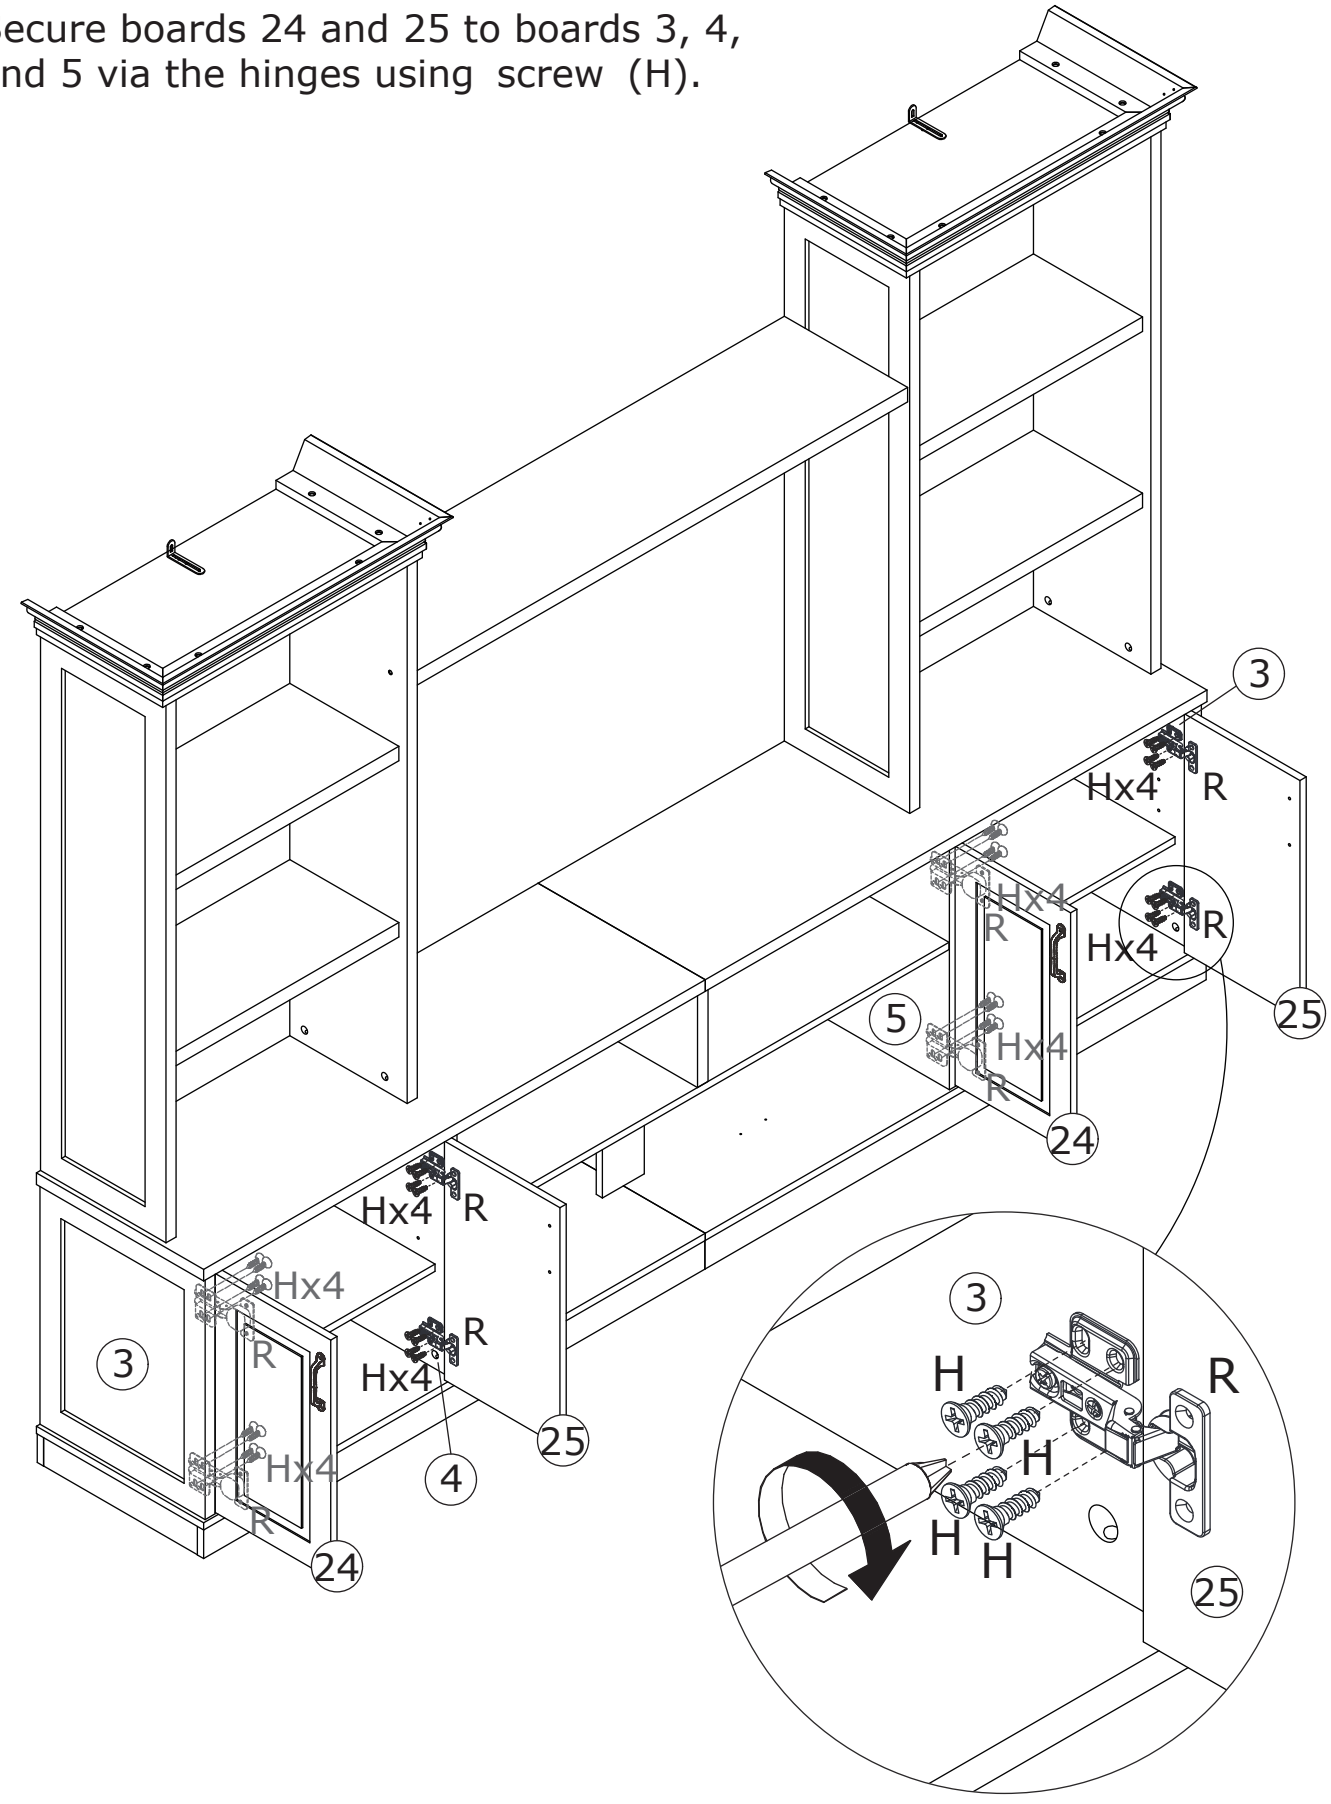

44

D x 30	P x 30	
 ∅3 x 12 mm		


Insert clip (P) into the slots on the back panel and secure them using screw (D).

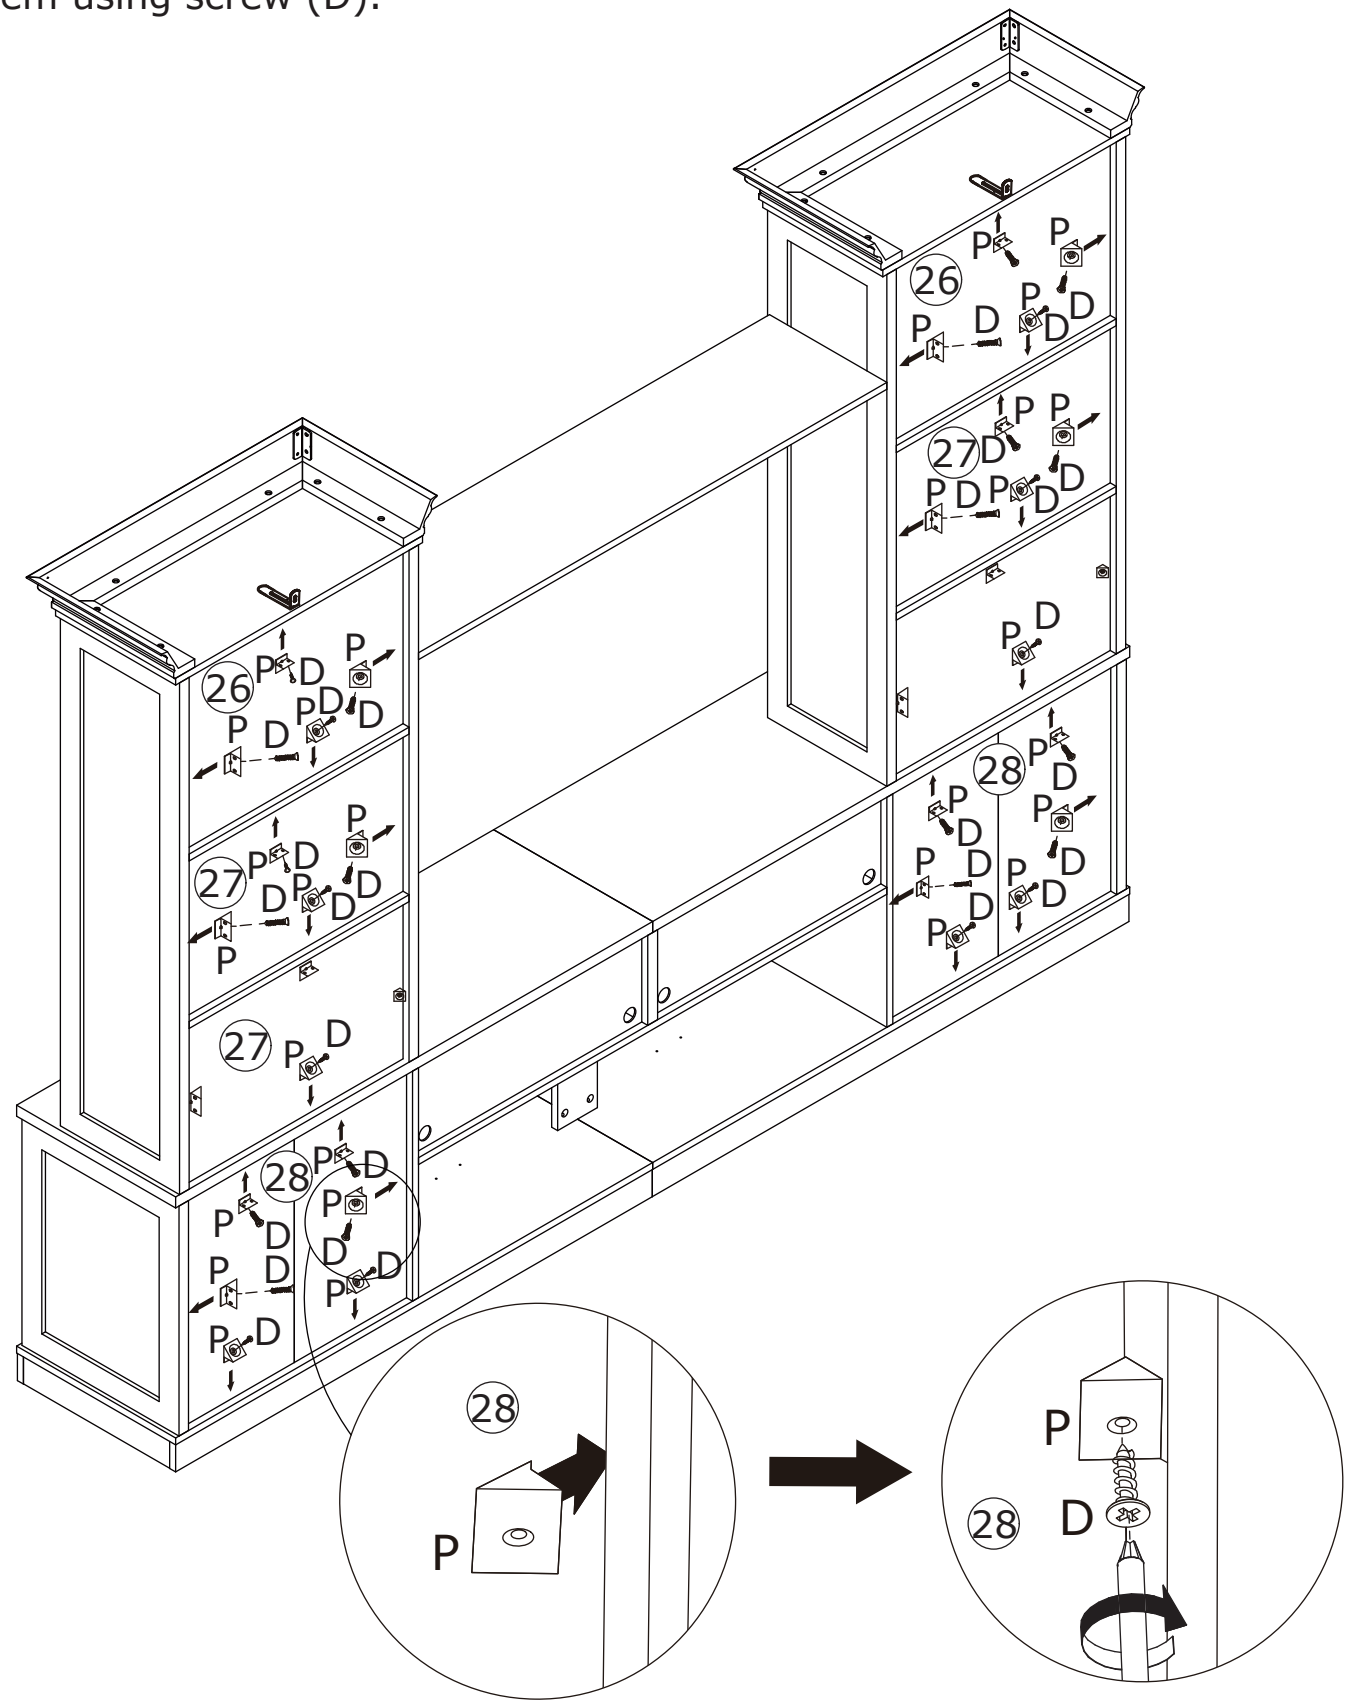

45

K x 100

Apply the masking tape (K) to the hole of the eccentric wheels.

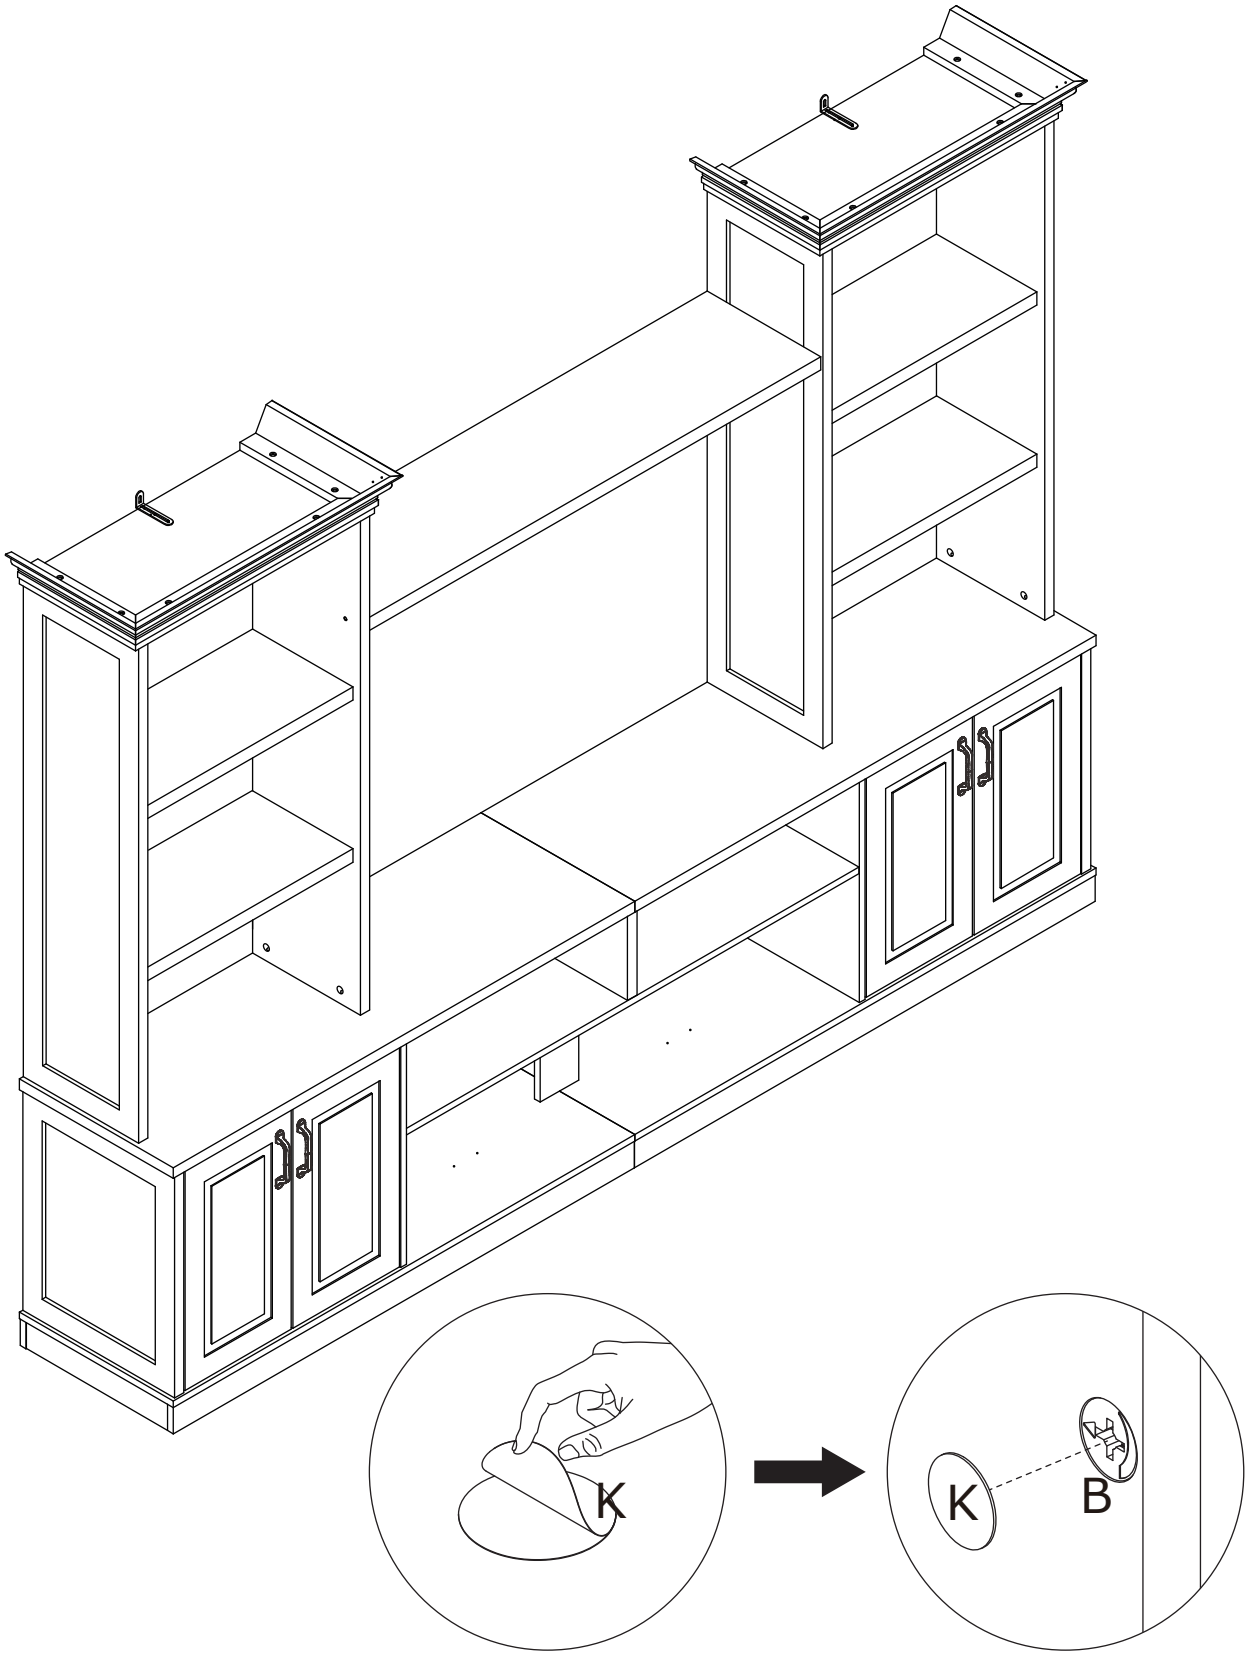


46


L x 2

L-2


L-4

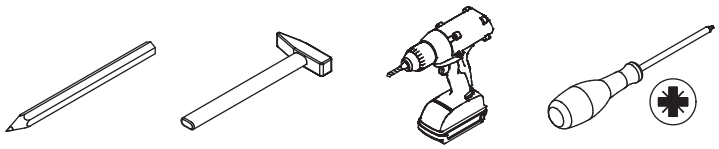


1.

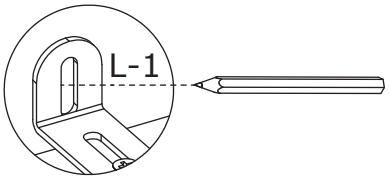


2.

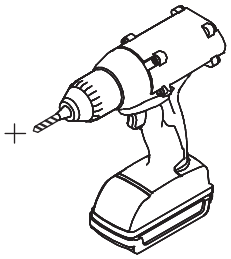


3.

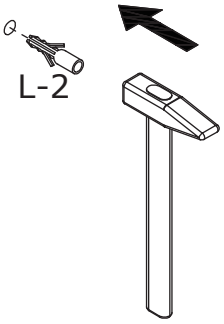


4.

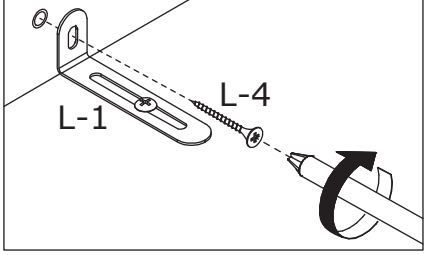

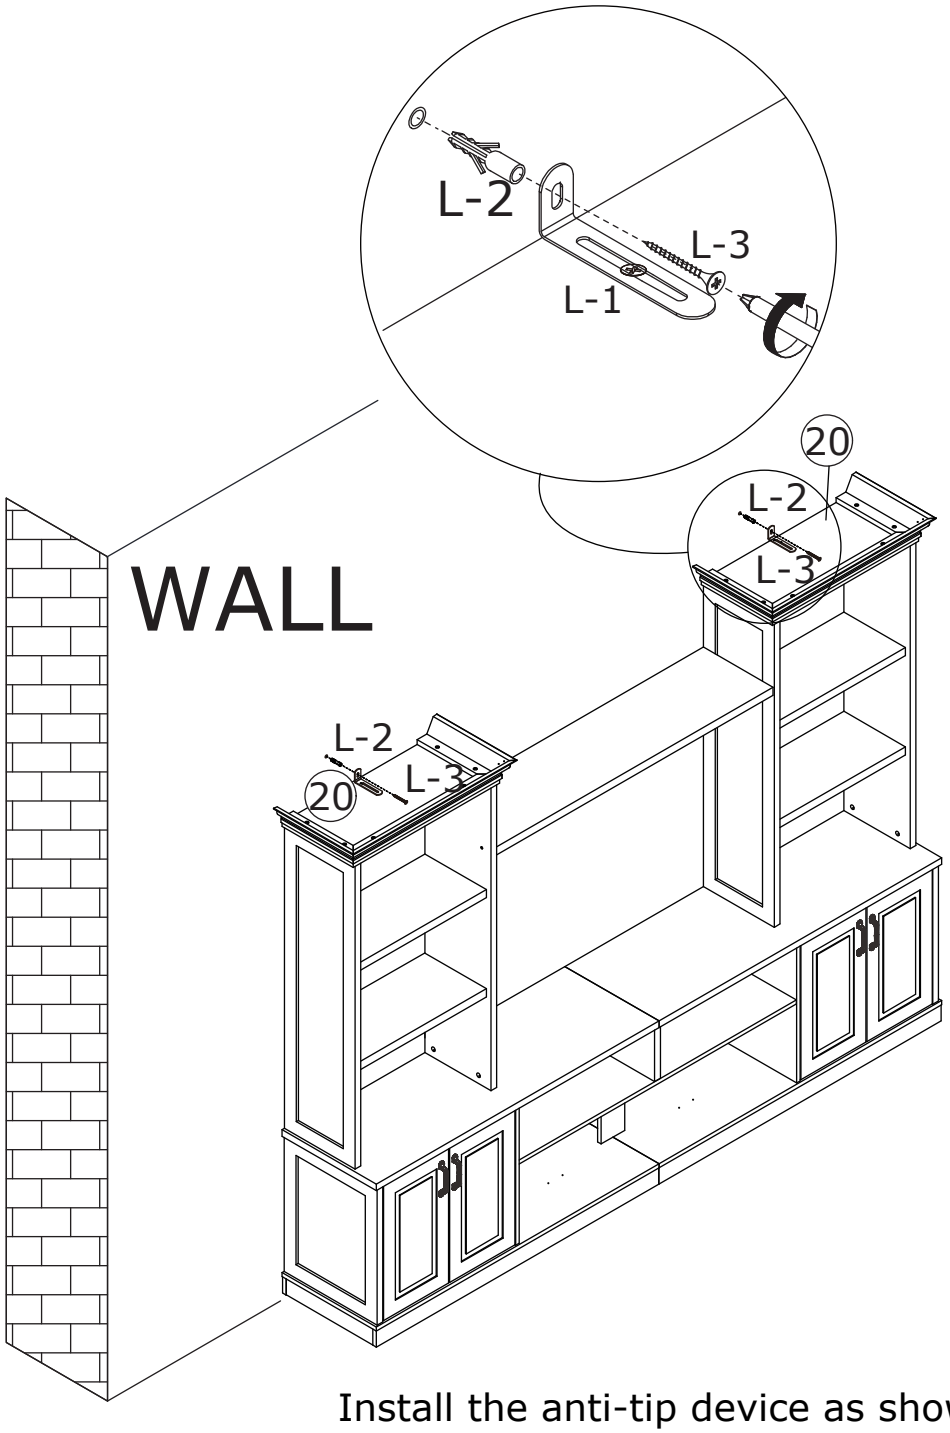



Install the anti-tip device as shown.

47



If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

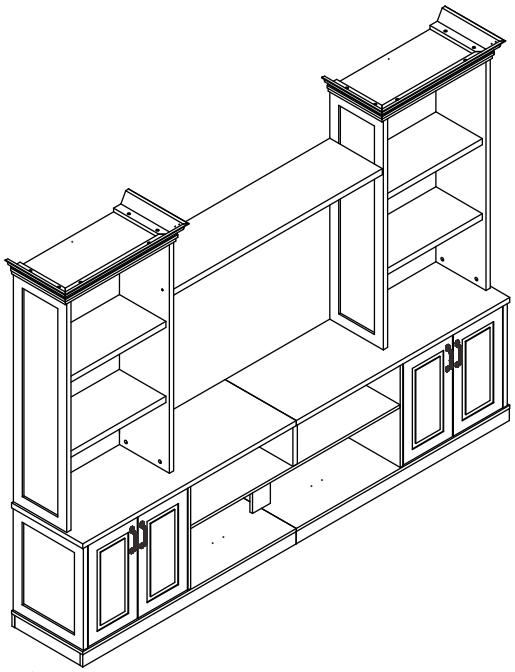

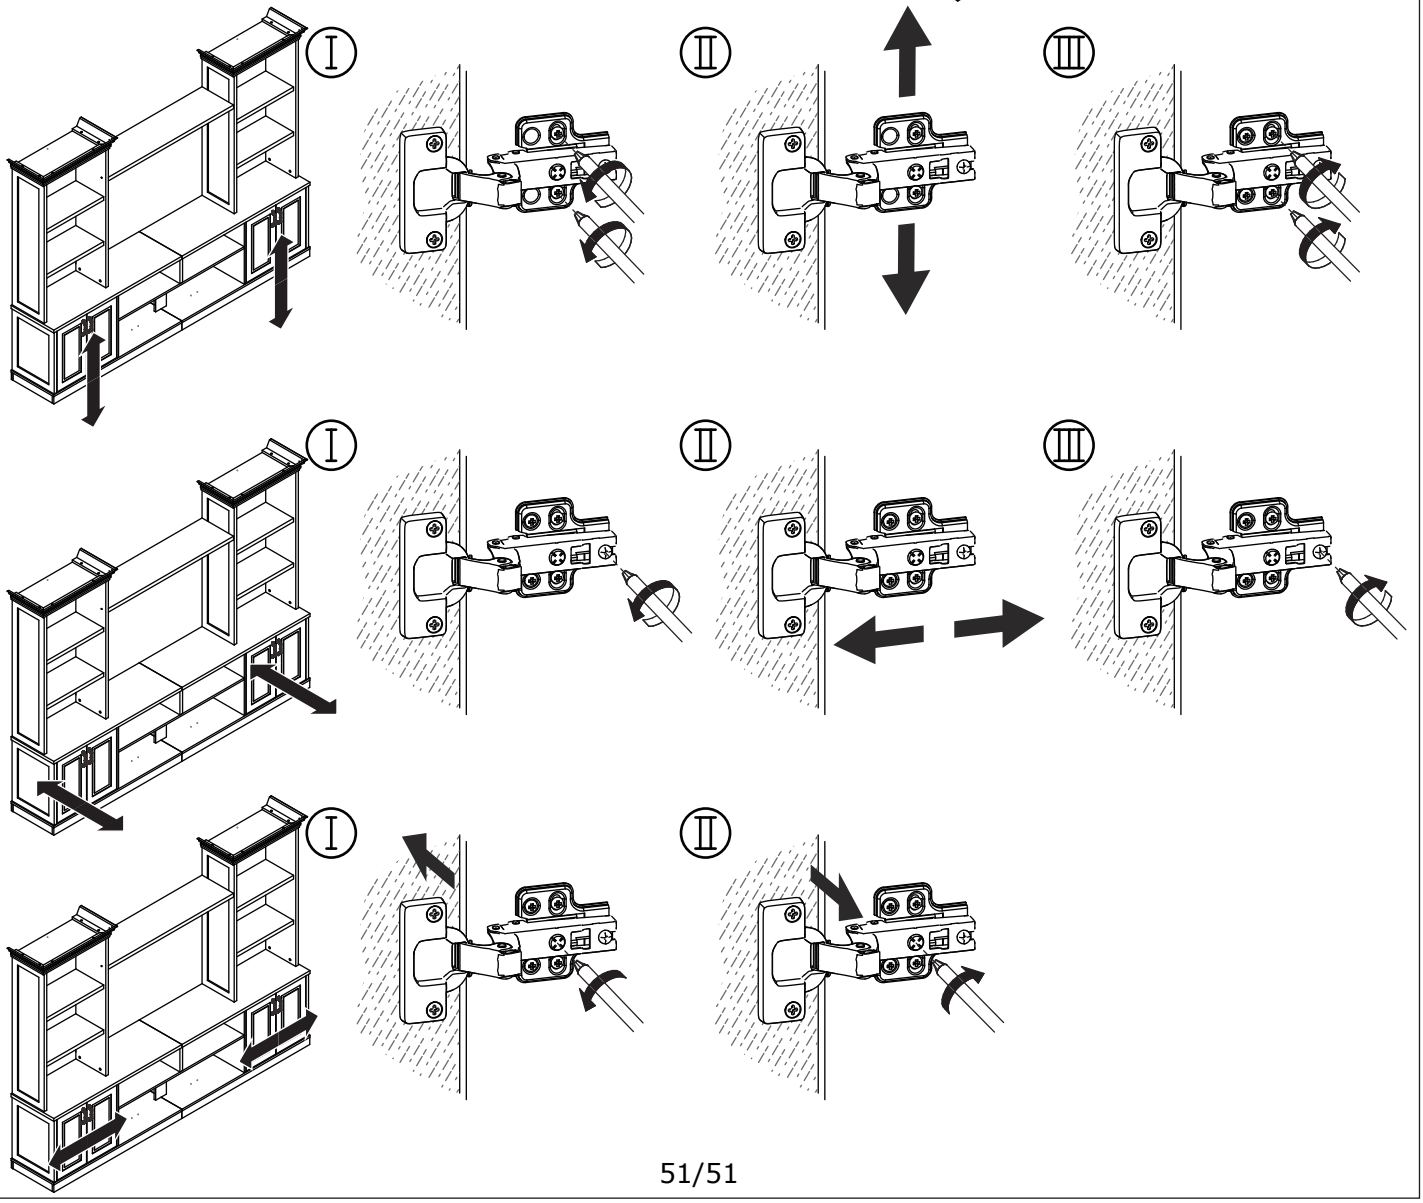

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.

- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.

- The product must be used in accordance with the instructions provided. For health reasons.

- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.

- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.

- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.

- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
  In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.