
CHILDREN ELECTRIC CAR

Installation and Operation Instruction

Installation video

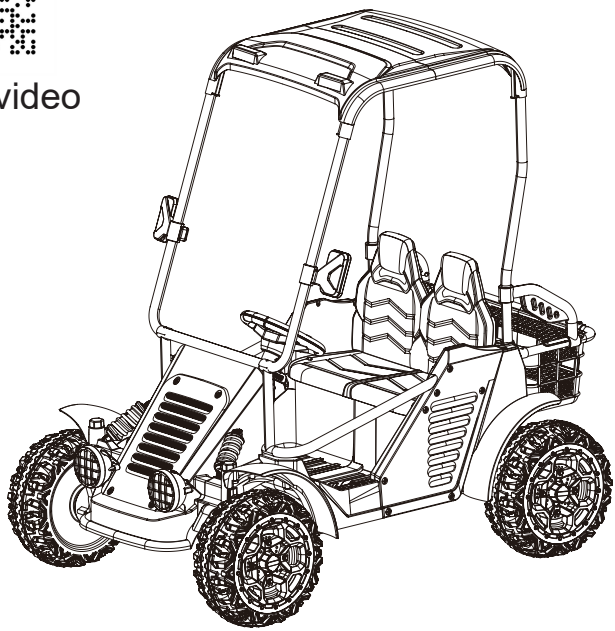

Picture is for reference only, and the product is subject to practicality

Please read this specification carefully before installation to avoid operational errors or damage and ensure the child's safety. Users shall keep this manual properly for future reference.


Specification

Storage battery	18V7AH*2(36V)
Electric motor	Drive motors:36V200W*4 Steering motor:24V8W*1
Suitable age	37 months +
Max weight	50kg
Size	118*75.5*114.5cm
Speed	4km/h-9km/h
Utility	7-10hours(charge)
Charger	AC100-240V50/60Hz(input),DC36V(output)
Battery of remote control	Two pieces of AAA1.5V(Not Included)


Kind reminder


- Contains small parts. Not suitable for children under 36 months of age.
- This product must be assembled by adults. Take extra care with screws, cotter pins and other sharp hazardous components.
- Small parts may cause injury or accidental ingestion, which leads to a choking risk. Keep all small parts out of reach of children under 3 years old.
- Children must not operate the vehicle without adult supervision. Caregivers shall not leave unattended during use.
- Fully charge the battery before first use. Battery charging must only be performed by adults.
- Keep all packaging materials (including plastic bags) away from children to prevent injury.
- Inspect the product regularly to check wires, plugs, outer casing and all other components for damage. Cease use immediately if any part is broken, and do not reuse until fully repaired.
- The remote control requires two AAA 1.5V dry batteries (not included).
- Always install and use batteries in the correct polarity and manner.
- Do not plug into the output socket if the cable is disconnected or faulty.
- Retain all packaging and this instruction manual, as they contain vital safety information.


- **WARNING:** To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than two rider(s).
- Only use the battery specified by the manufacturer.

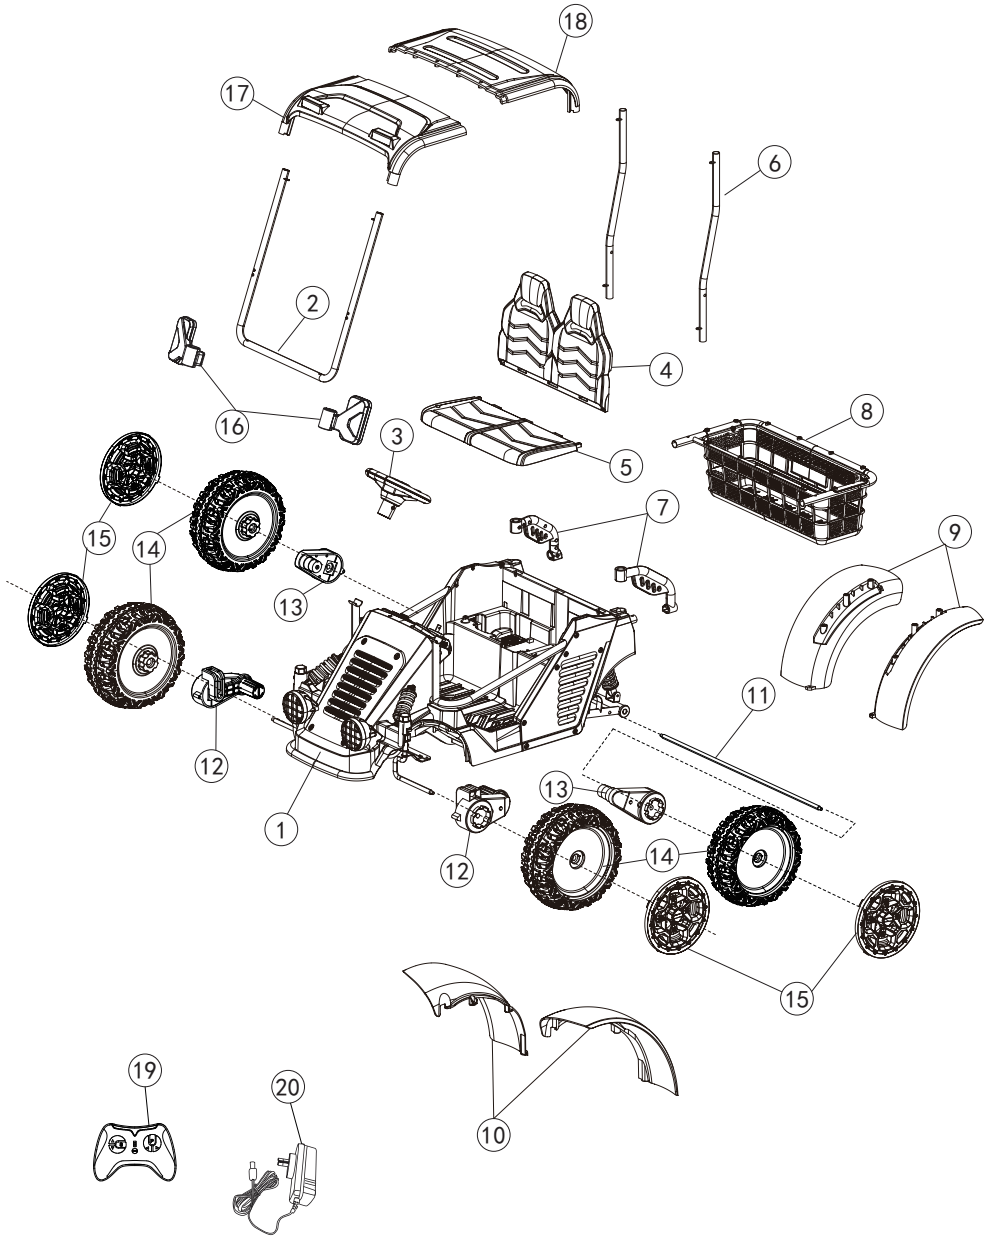

18
17
6
2
4
16
8
3
5
7
15
9
14
13
11
12
1
13
12
14
15
10
19
20


Parts Names

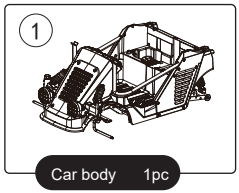

1
Car body 1pc

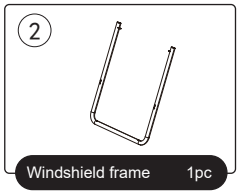

2
Windshield frame 1pc

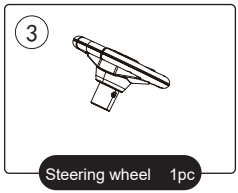

3
Steering wheel 1pc

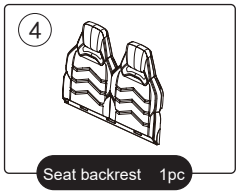

4
Seat backrest 1pc

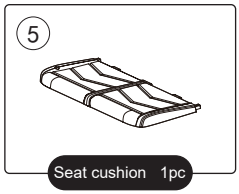

5
Seat cushion 1pc

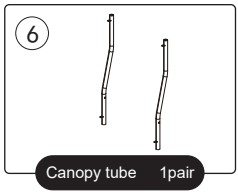

6
Canopy tube 1pair

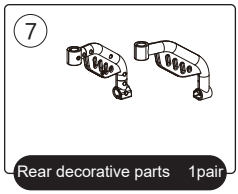

7
Rear decorative parts 1pair

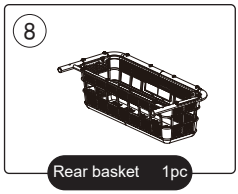

8
Rear basket 1pc

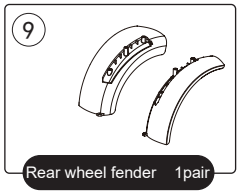

9
Rear wheel fender 1pair

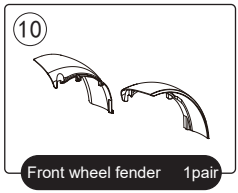

10
Front wheel fender 1pair

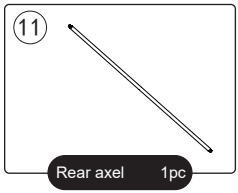

11
Rear axel 1pc

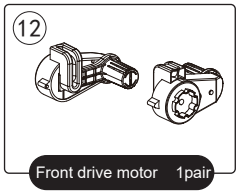

12
Front drive motor 1pair

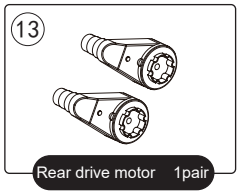

13
Rear drive motor 1pair

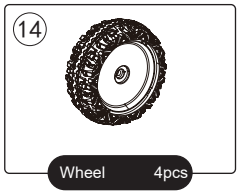

14
Wheel 4pcs

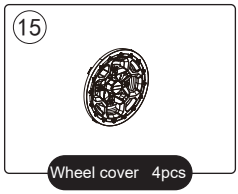

15
Wheel cover 4pcs

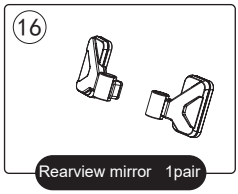

16
Rearview mirror 1pair

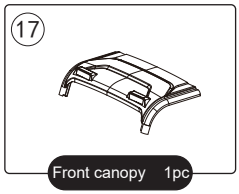
17
Front canopy 1pc

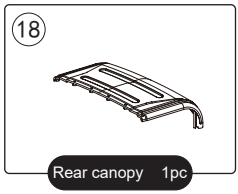

18
Rear canopy 1pc

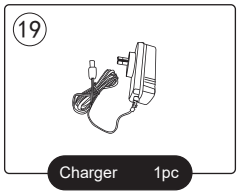
19
Charger 1pc

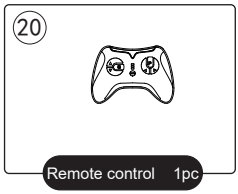
20
Remote control 1pc

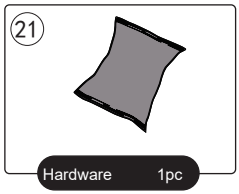

21
Hardware 1pc

Installation Steps:

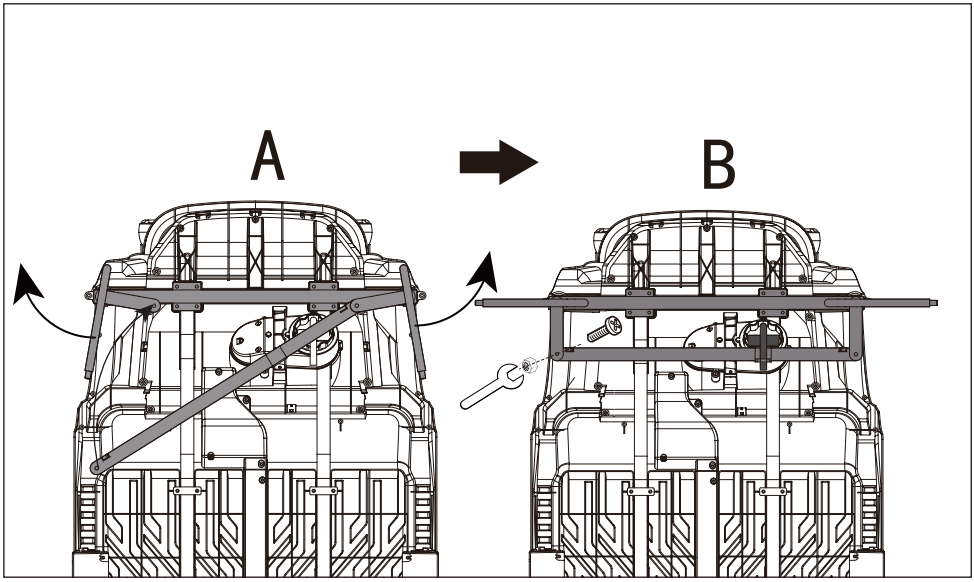

1.Adjust The Steering Bracket


a. Adjust the steering bracket from Figure A to Figure B.
Then use a screwdriver and metal wrench to secure the bracket with one 5×12mm screw and one M5 lock nut. Do not over-tighten the screw.

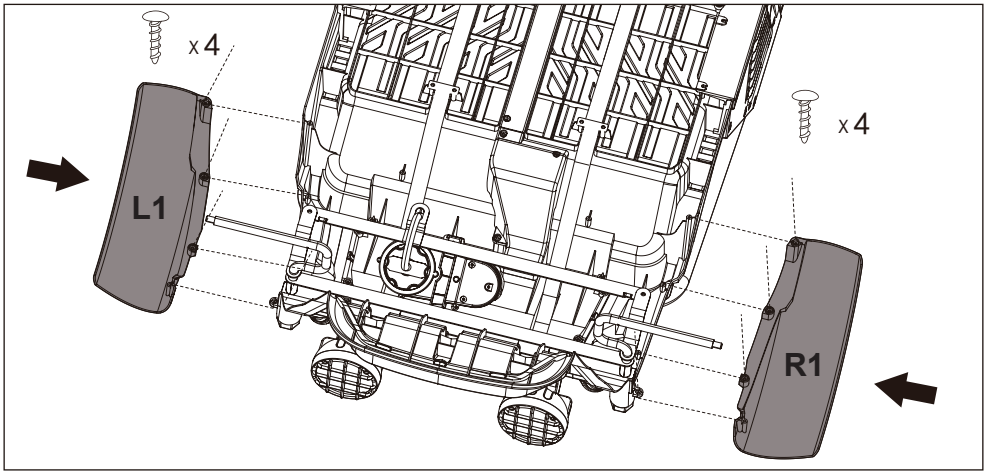

2. Install Front Wheel Fenders


a. Clip the left and right front wheel fenders onto both sides of the vehicle body respectively, then fasten them with 4×12mm self-tapping screws.
(See figure above)

Installation Steps:

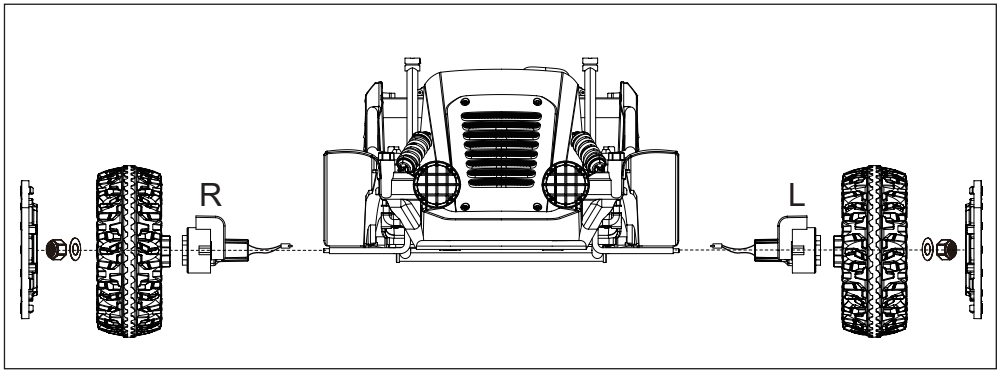

3. Install Front Wheels


a. Fit the left and right drive motors, wheels and gaskets onto both ends of the front axle respectively.
b. Tighten the M10 lock nuts with a plastic wrench, then connect the motor wires.
c. Finally, snap on the left and right wheel covers. (See figure above)

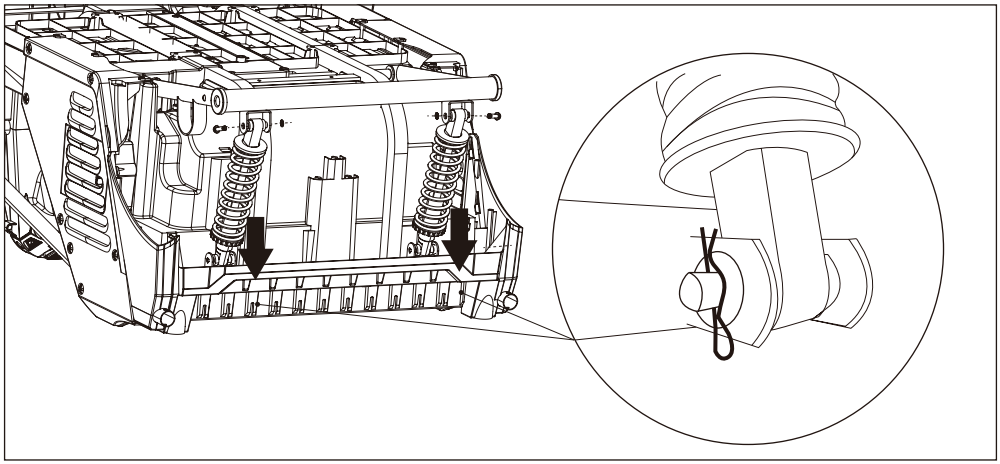

4. Secure Rear Shock Absorbers


a. Clip one side of each shock absorber into the holes of the frame mount (positions marked by arrows), align all holes in a straight line.
b. Insert the 8×40mm clevis pin, fit an M8 flat gasket , then lock it in place with an R-type cotter pin. (See figure above)

Installation Steps:

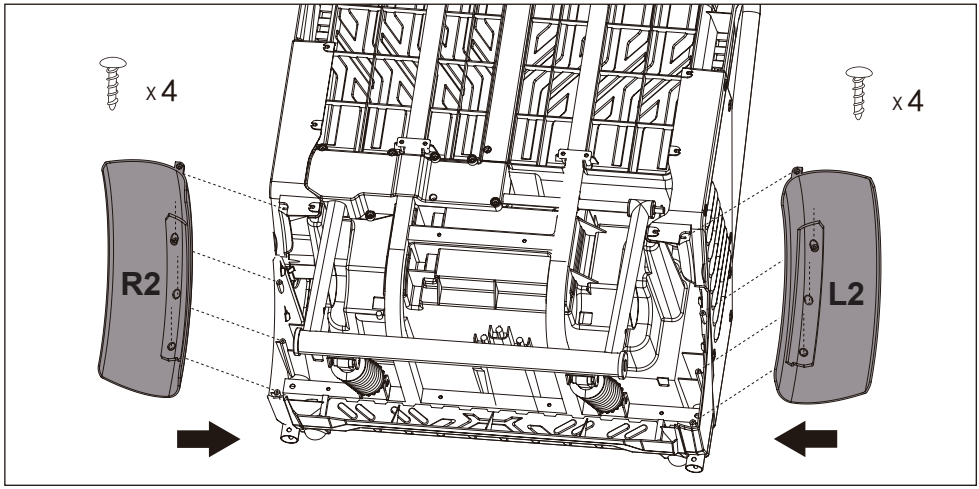

5. Install Rear Wheel Fenders

a. Clip the left and right rear wheel fenders onto both sides of the vehicle body respectively, then fasten them with 4×12mm self-tapping screws. (See figure above)

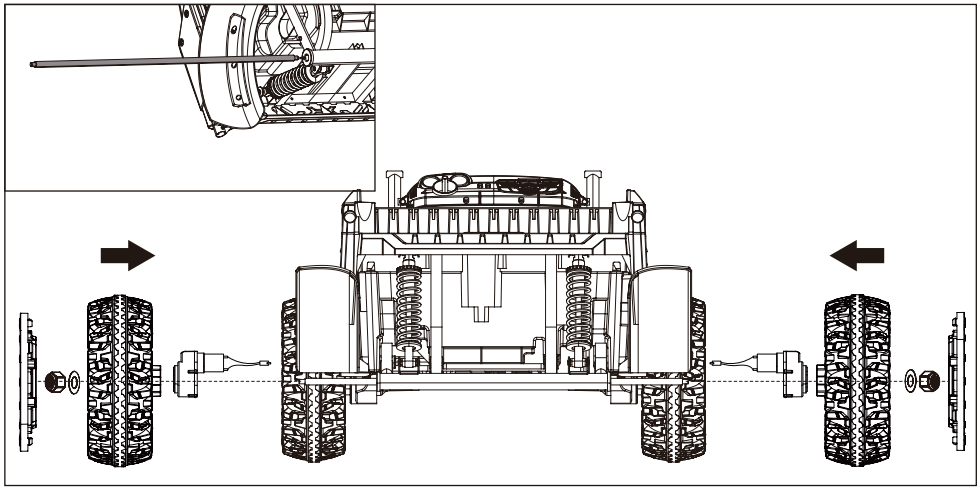


6. Install the Rear Axle and Rear Wheels

a. Insert the rear axle into the vehicle body in the direction of the arrows, ensuring the left and right lengths of the rear axle are symmetrical.


b. Install the rear drive motors, wheels, and gaskets on both ends of the rear axle. Use a plastic wrench to tighten the M10 lock nuts, connect the motor wires, and finally snap on the left and right wheel covers. (See the figure above)

Installation Steps:

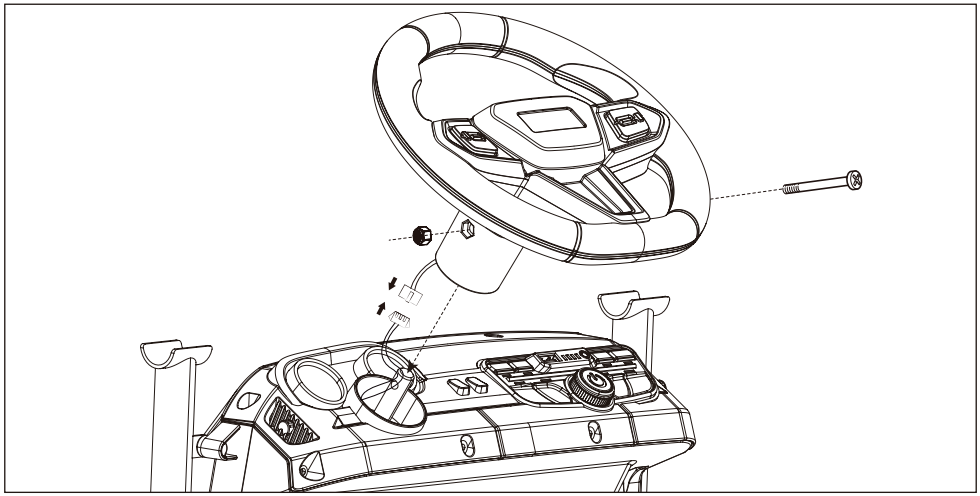

7. Install the Steering Wheel

a. Connect the wiring harness of the steering wheel to the wire on the steering base. Then pass the 5×35mm threaded bolt through the central hole of the steering wheel and the steering column, and secure it with an M5 lock nut. (See figure above)

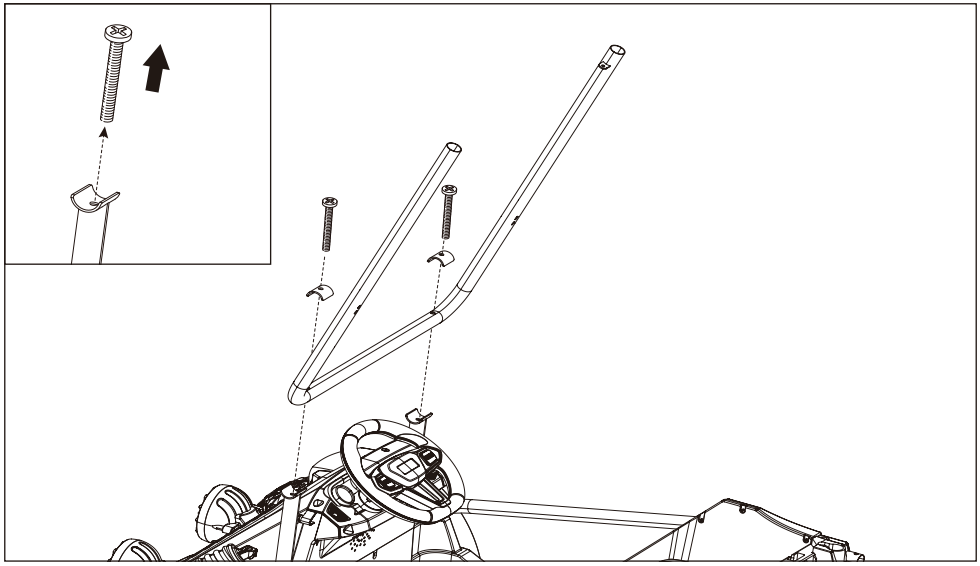


8. Install the Windshield Frame

a. Remove the 6×40mm threaded bolt from the windshield frame.

b. Place the windshield frame in the position shown in the figure, then secure it to the base using the 6×40mm threaded bolt and the windshield frame metal brackets. (See the figure above)


Installation Steps:

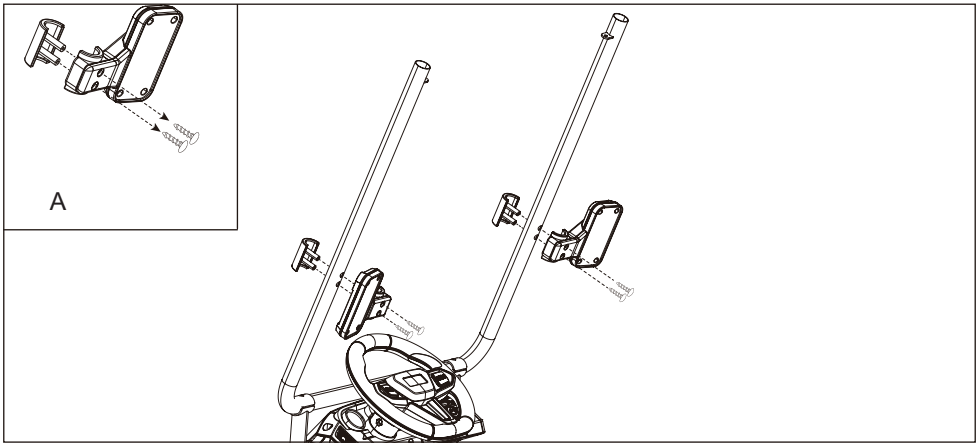

9. Install the Rearview Mirrors

a. Remove the small covers from the left and right rearview mirrors respectively. (See Figure A above)

b. Insert the small covers into the holes at the front of the windshield frame, then fasten the left and right rearview mirrors to the windshield frame using 4×12mm self-tapping screws. (See the figure above)

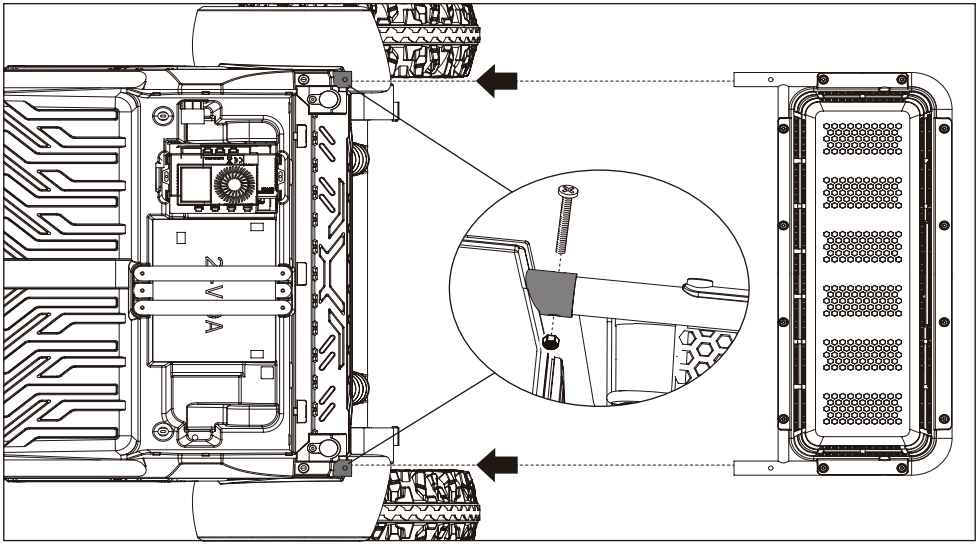


10.Install the Rear Basket

a. Insert the rear basket into the iron tubes at the rear of the vehicle body in the direction of the arrows, aligning the holes.


b. Secure it with 5×28mm threaded bolt and M5 lock nuts. (See the figure above)

Installation Steps:

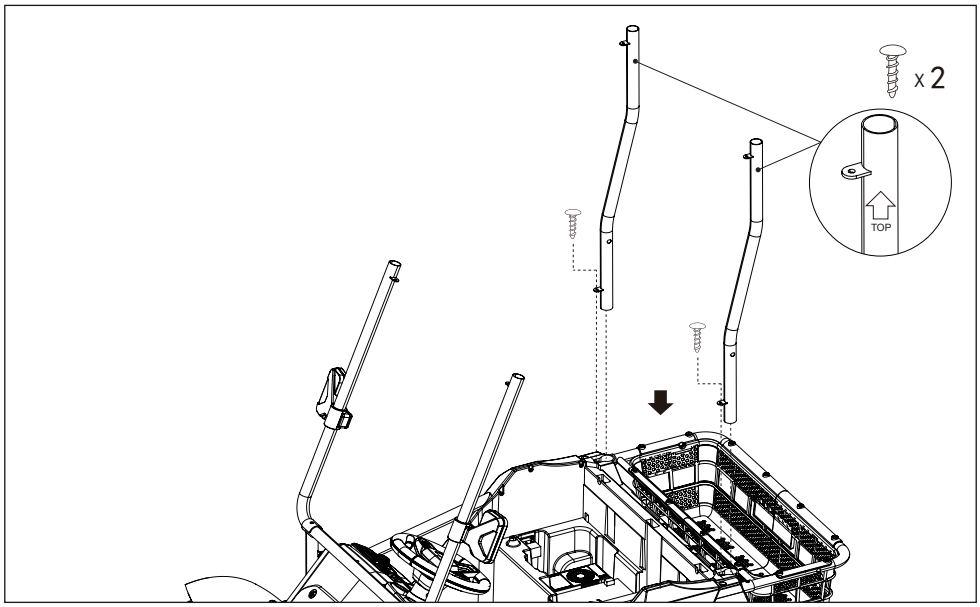

11. Install the Canopy Tubes


a. Insert the canopy tubes into the holes of the seat base, then secure them with 4×12mm self-tapping screws. (Note: The end with the hole should be at the bottom. See the arrow in the figure above.)

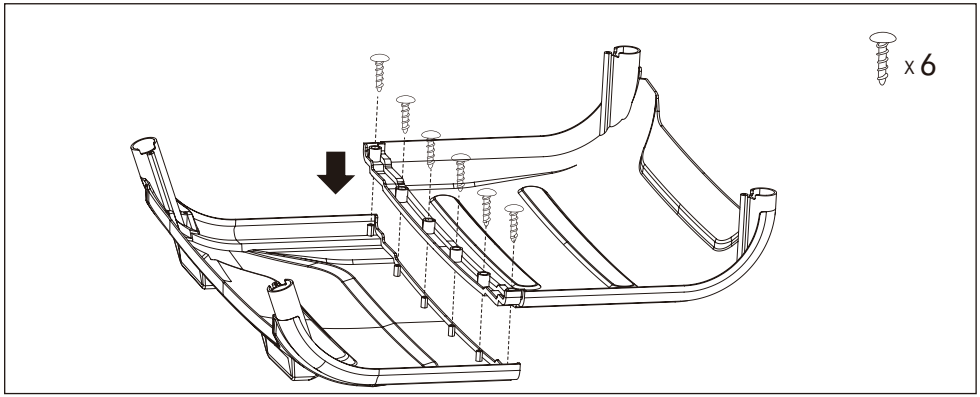

12. Assemble the Canopy

a. Clip the rear canopy onto the screw posts of the front canopy, then secure them with 4×12mm self-tapping screws. (See figure above)


Installation Steps:

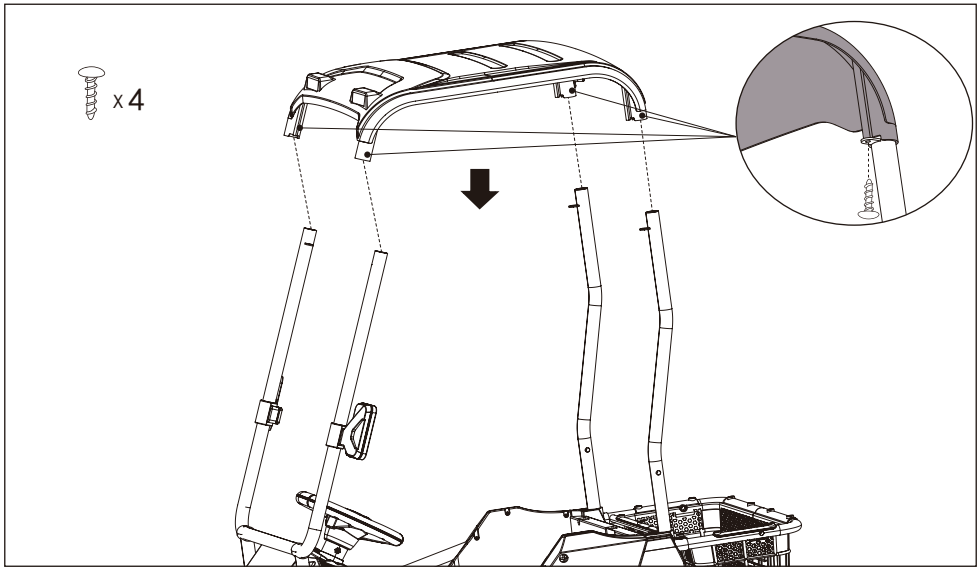

13. Install the Canopy

a. Align the mounting holes of the canopy with the iron tubes and clip them together.

b. Fasten the canopy to the iron tubes with 4×12mm self-tapping screws. (See figure above)

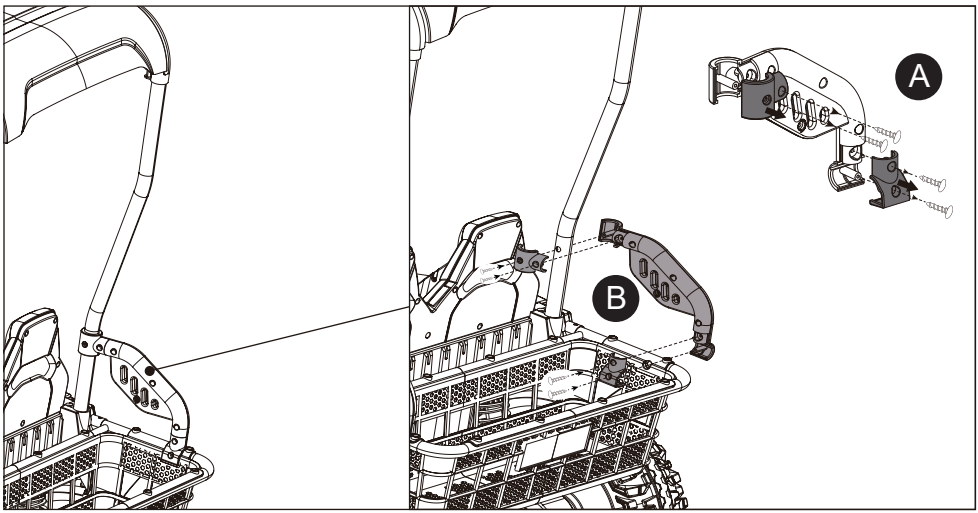


14. Install Rear Decorative Parts

a. Loosen the screws on the fixing covers of the rear decorative parts and remove the fixing covers. (See Figure A above)


b. Clip the rear decorative parts onto both sides respectively, then fasten the removed fixing covers and decorative parts with 4×12mm self-tapping screws as shown in the figure. (See Figure B above)

Installation Steps:

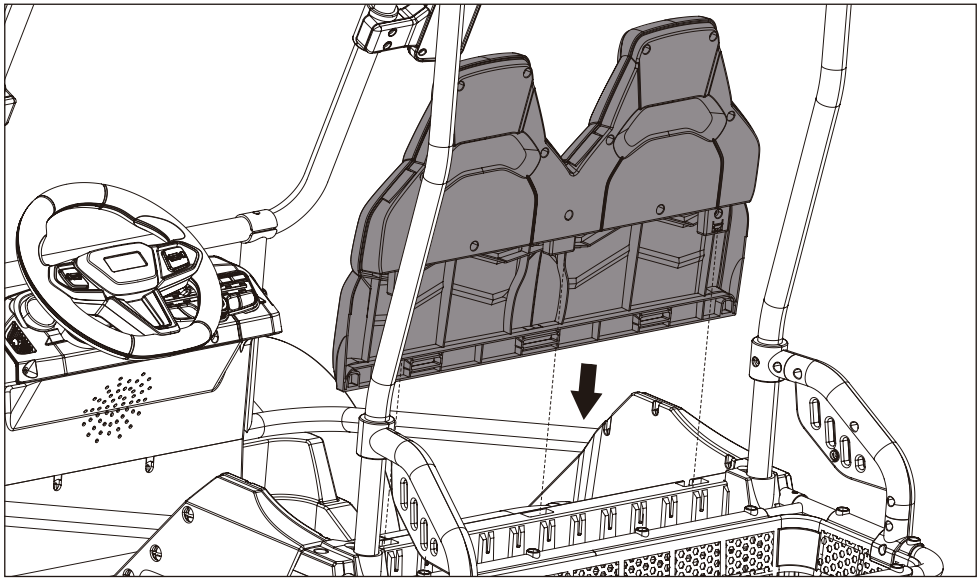

15. Install the Seat Backrest


a. Clip the seat backrest into the holes on the rear bucket baffle. (See figure above)

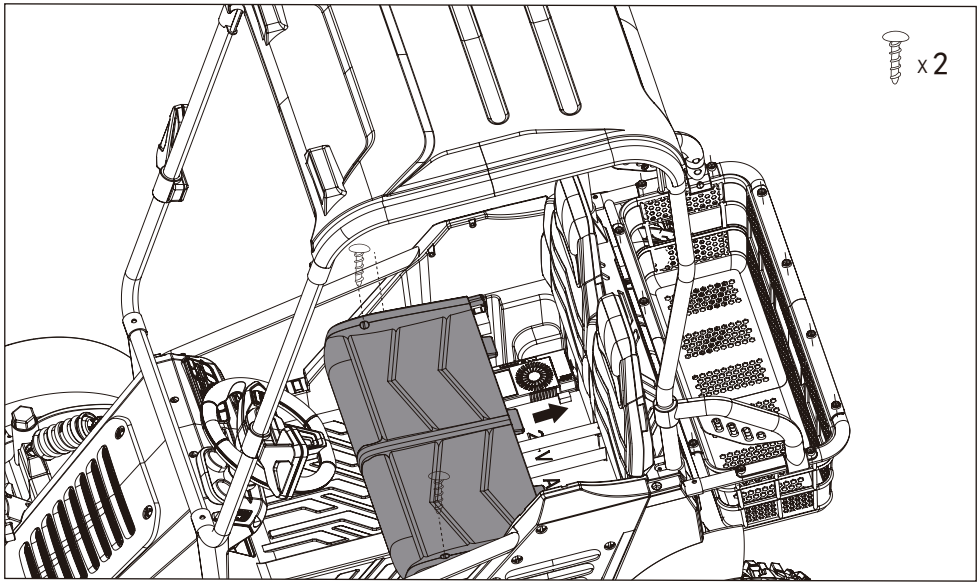

16. Install the Seat Cushion


a. Clip the seat cushion into the holes of the seat backrest in the direction of the arrows, then secure it with 4×12mm self-tapping screws. (See figure above)

Function instruction:

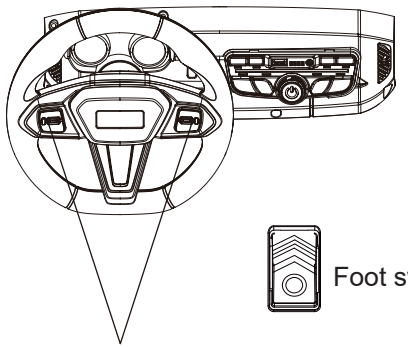

Foot switch

Music and horn button

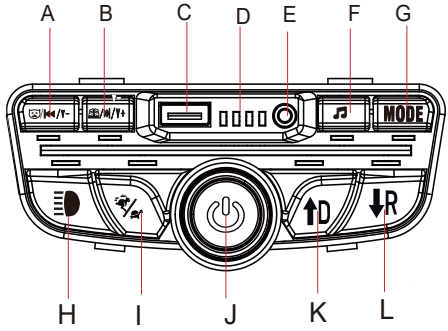


17.Dashboard indication

Music and horn button: There are two buttons on both sides of the steering wheel. Press music button to play built-in music, press horn button to play the horn sound.(Note: The music button only switches modes when the music, early education or story function is activated.)

Foot switch: Stepping on the foot switch can control the car to move forward, backward or stop.

A. Early Education / Previous Track / Volume Down
B. Story / Next Track / Volume Up
C. USB Port
D. Power Indicator
E. AUX Jack
F. Music
G. Mode Switch
H. Light Control Switch
I. High/Low Speed
J. Long Press: Power On / Power Off; Short Press (when powered on): Pause / Play
K. Forward
L. Backward

Function instruction:

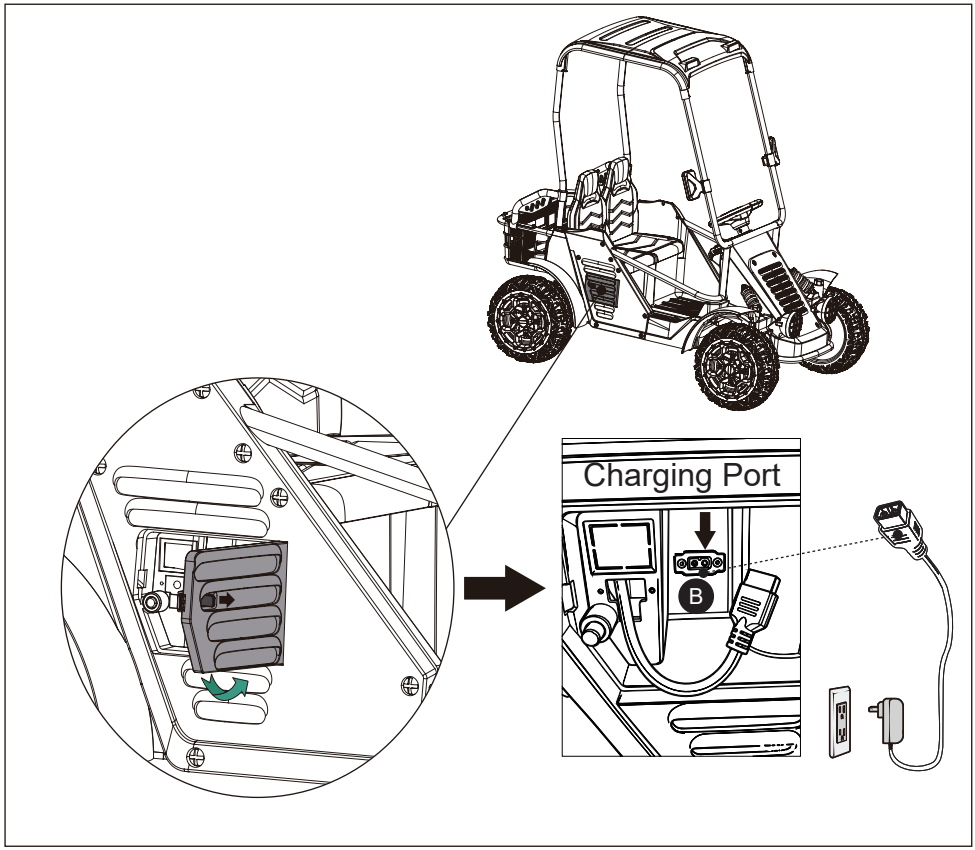


18. Charging Indicator & Charging Method


a. While the vehicle is running, if two power indicator lights on the music player light up or a voice reminder is heard, stop using the vehicle immediately and charge the storage battery in a timely manner to avoid irreversible damage to the battery.

b. Charging Method: Disconnect the terminals of the power cord. Connect the terminal marked with symbol Ⓑ to the charger terminal, then plug the charger into a mains socket. Reconnect the power cord after charging is completed. (See the figure)

Notice: The vehicle will be powered off during charging and cannot be operated. Unplug the power connection cable if the vehicle will not be used for a long time.

2.4G Remote control instructions

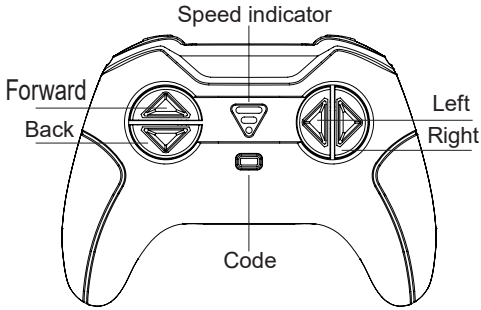

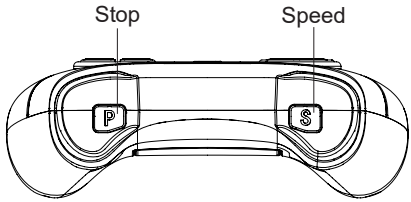

For the first time need to code, this product has a memory function. When you change battery next time, you don't need to match the code once again.

① Long press "Code" button more than three seconds, until the first LED lights flashing.

② Open body power , first a long bright LED turns on the success of the code.

③ The remote control automatically enters standby mode after 10 seconds of inactivity. Press any button to wake it up.

④ Key Description: "△"Forward, "▽"Back, "◁ "Left ," ▷"Right, "S"Speed, "P"Stop. Press the "S" key to set the speed, a light is low, two lights for medium-speed, three lights for high-speed, the car back with only medium-speed. Press the "P" key to keep the brakes, the indicator full flash, press the brake button again to lift the brake.

Note: The remote control should be used by caregivers and cannot be touched by children.

Dry cells warning!



(1) Non-rechargeable cells cannot be charged.
(2) Can only be charged by adults.
(3) Rechargeable cells should be removed from the toy before being recharged.
(4) Different types of cells or old and new cells should not be mixed to use.
(5) Cells should be put in with the correct polarity.
(6) Exhausted cells should be removed from the toy.
(7) The power terminal should not be short-circuited.

Warning:containing small parts may cause choking hazard!

Fault and Solutions:

Type of fault	Analysis of causes	Solutions
Cannot move	1.The voltage is below normal level	Charge the battery
	2.Safety fuse triggered	Wait for a moment
	3.The screws on the wheels have fallen off	Tighten the screws again
	4.The battery connector has fallen off	Reconnect the battery connector
	5.The battery is damaged	Replace the battery
	6.The electrical equipment is damaged	Take it to a service center for repair
	7. The motor is damaged	Take it to a service center for repair
The battery cannot be charged	1.The battery connector has fallen off	Plug it back in
	2.The battery charger is powered off	Plug it back in
	3. The battery charger is damaged	Replace the battery charger
Short driving range per full charge	1.The battery is not fully charged	Fully recharge the battery
	2. The battery is aging	Replace the battery
Noise and heat generated while charging	1. Normal chemical reaction inside battery	This phenomenon is normal
Low driving speed	1.The battery is aging	Replace the battery
	2.The battery is drained	Fully recharge the battery
	3.Excessive load weight	Reduce the load to under 50 kg
	4. Uneven road surface	Drive on smooth flat ground

Fault and Solutions:

Excessive gearbox noise	1. Internal gear damaged	Take it to a service center for repair
Vehicle shakes when moving forward	1.Loose motor wiring connectors 2. Motor malfunction	Reconnect all wiring firmly Take it to a service center for repair
No audio when the vehicle is running	1. Faulty electrical components	Take it to a service center for repair
If you cannot resolve the issue, please feel free to contact us.		

Kind Reminder

(1) Before first use, charge the battery for 7–10 hours fully; permanent damage will occur without full initial charging.
(2) Do not drive the vehicle on slippery roads, slopes or other dangerous terrain.
(3) Avoid operation on ultra-smooth slippery surfaces such as marble and ceramic floor tiles.
(4) Do not exceed the weight limit. Maximum load capacity: 50kg.
(5) Do not toggle between Forward and Reverse modes while the vehicle is moving.
(6) Do not modify internal wiring or connect live external electrical devices.
(7) Keep the vehicle and remote control away from rain, moisture and open flame to prevent circuit damage.
(8) The vehicle will automatically stop when hitting obstacles. Remove the obstacle before continuing to drive.
(9) Do not operate the vehicle indoors to avoid injury to children and damage to furniture.
(10) When the remote control battery power is low, the vehicle can only move forward and cannot turn left or right.
(11) If the vehicle has short driving range or shakes during use, replace the battery immediately.
(12) Switch off power when the vehicle is not in use. Unplug the battery connector if the vehicle will not be used for an extended period.

Kind reminder for charging:

- Before first use, fully charge the battery for 7–10 hours or until the charger indicator turns green. Failure to do so will permanently damage the battery.
- First connect the charger plug to the battery terminal, then plug the charger into the wall socket.
- Charge the battery promptly after 1 hour of normal use; a full charge takes 7 to 10 hours.
- Do not charge continuously for more than 20 hours at a time.
- Slight heating of the charger and battery during charging is normal (temperature shall stay below 60°C).
- To protect the charger, battery and circuit system, only use the original factory-specified charger and battery pack.
- Do not short-circuit the connecting terminals.
- Do not mix old and new batteries, or batteries of different types.
- If the vehicle will not be used for an extended period, charge the battery at least once a month.
- Charging operations must only be carried out by adults.

Chargers and battery maintenance:

- Unscrew the fasteners on the battery cover, remove the cover, take out or install the battery, then secure the battery cover back with screws.
- Store the charger in a waterproof and moisture-proof location.
- Before charging, inspect the charger for damaged casings, corroded plugs or cracked wires. Do not use the charger for charging if any damage is found.
- Regularly check the battery for liquid leakage.
- Charging may only be done under adult supervision.
- Connect batteries following correct polarity: Red wire to red terminal, black wire to black terminal.
- Do not short-circuit the connecting terminals.

Maintenance:

- Check that all parts are complete before installation. Please feel free to contact us if you have any questions.
- Ensure all components remain intact during installation and daily use.
- Clean the vehicle regularly; avoid damaging any electrical components.
- Conduct regular inspection and maintenance of the vehicle to guarantee children’s safety.

Criteria of product operation :

EN71 EN62115 ASTM F963 CPSIA

Certificate of approval	Checker : _____ D a t e : _____

MADE IN CHINA