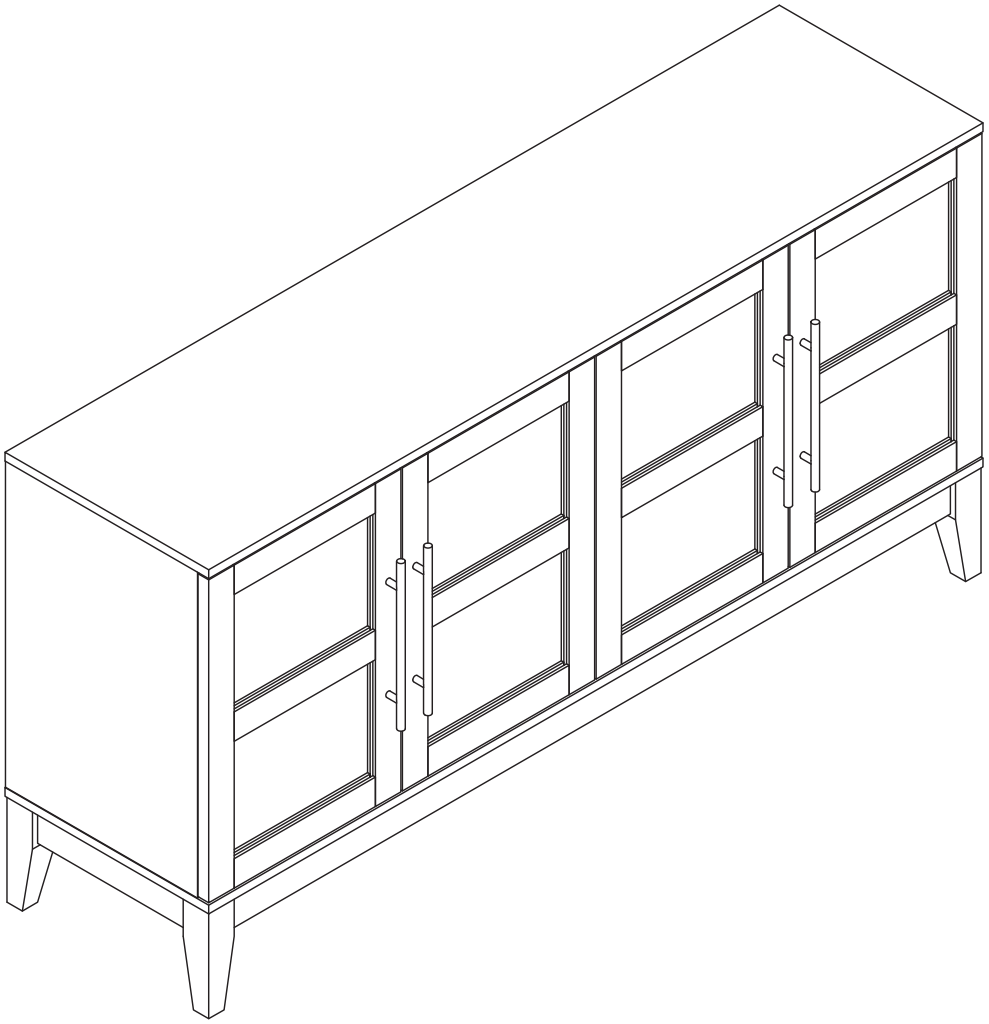
# USER'S MANUAL

## SIDEBOARD



## Guide of Manual

- Thanks for your choice. **We will do our best to provide customer service for everyone.**
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- **Please be patient that the other items are on the way if you buy more than one product.**

## Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product.Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

## Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There’ s no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

## Further Advice about the Furniture Care

- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

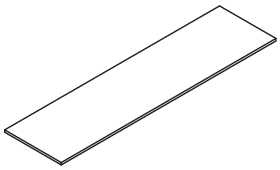
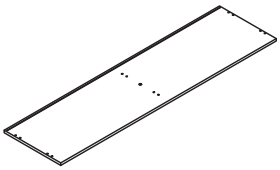



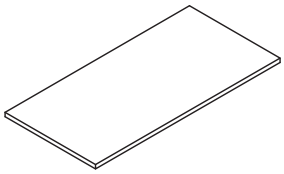


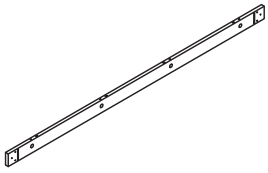
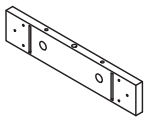

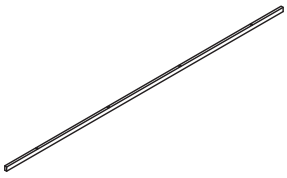

## Max Weight Capacity

- **250lbs [Do not stand on the item]**


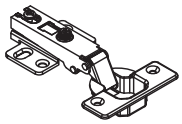
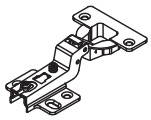








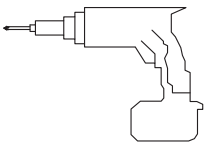
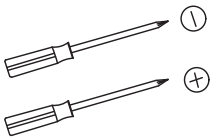
## Parts and Hardware List:

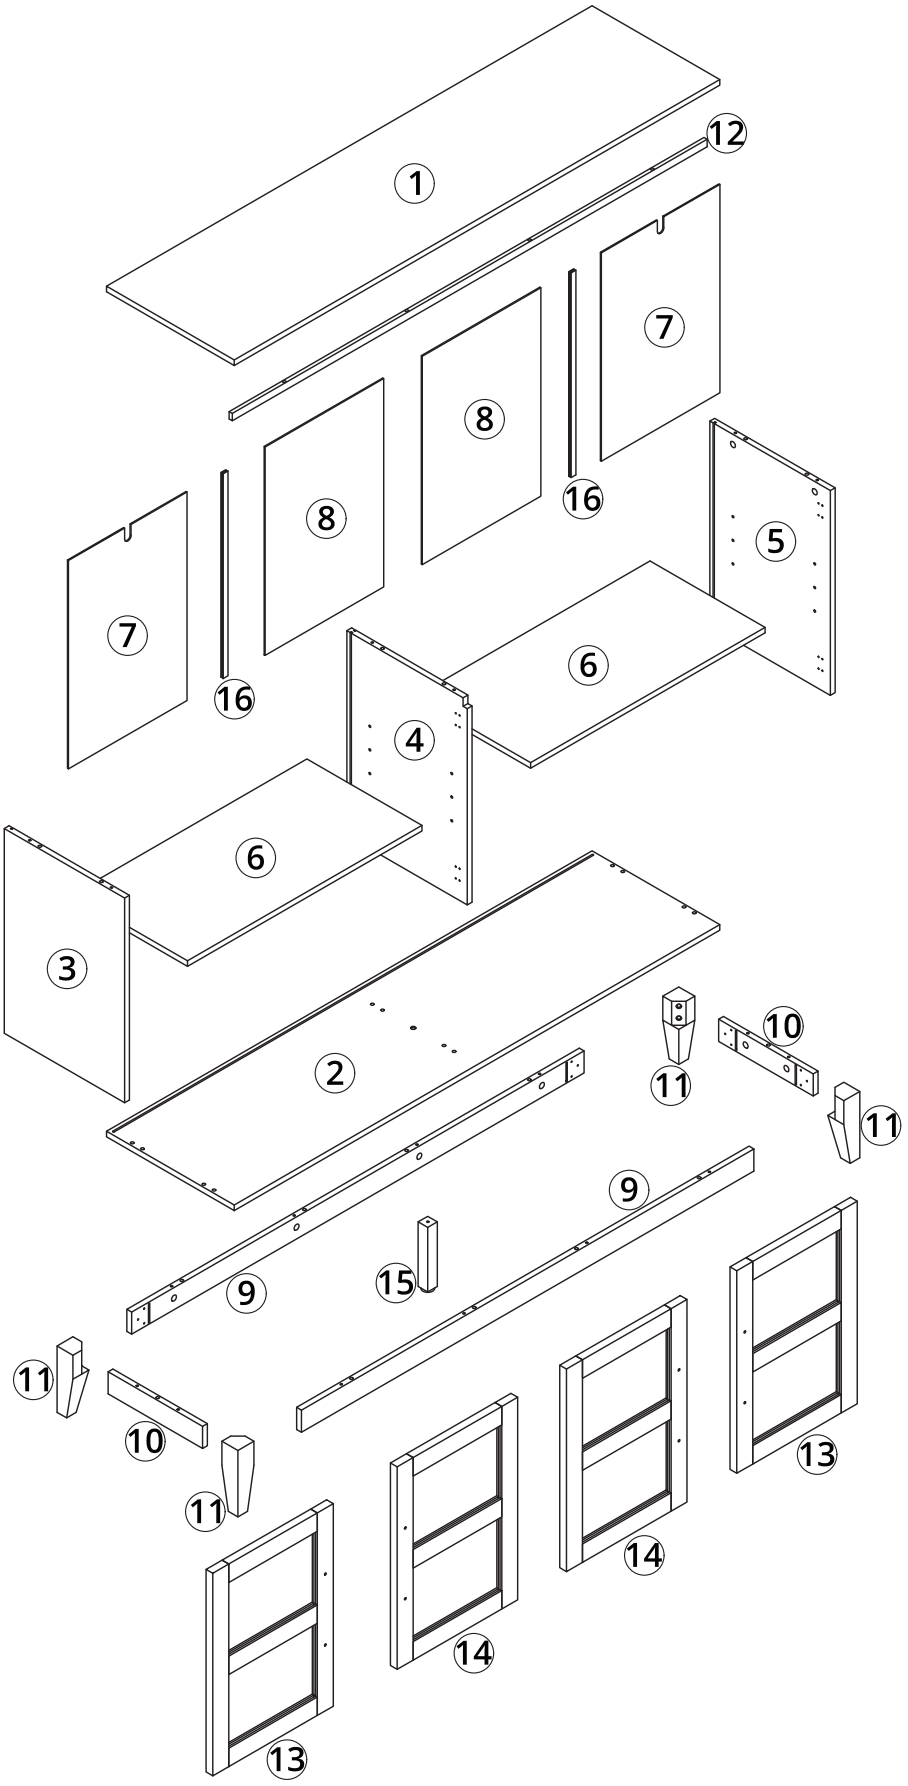
- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.

# Parts List

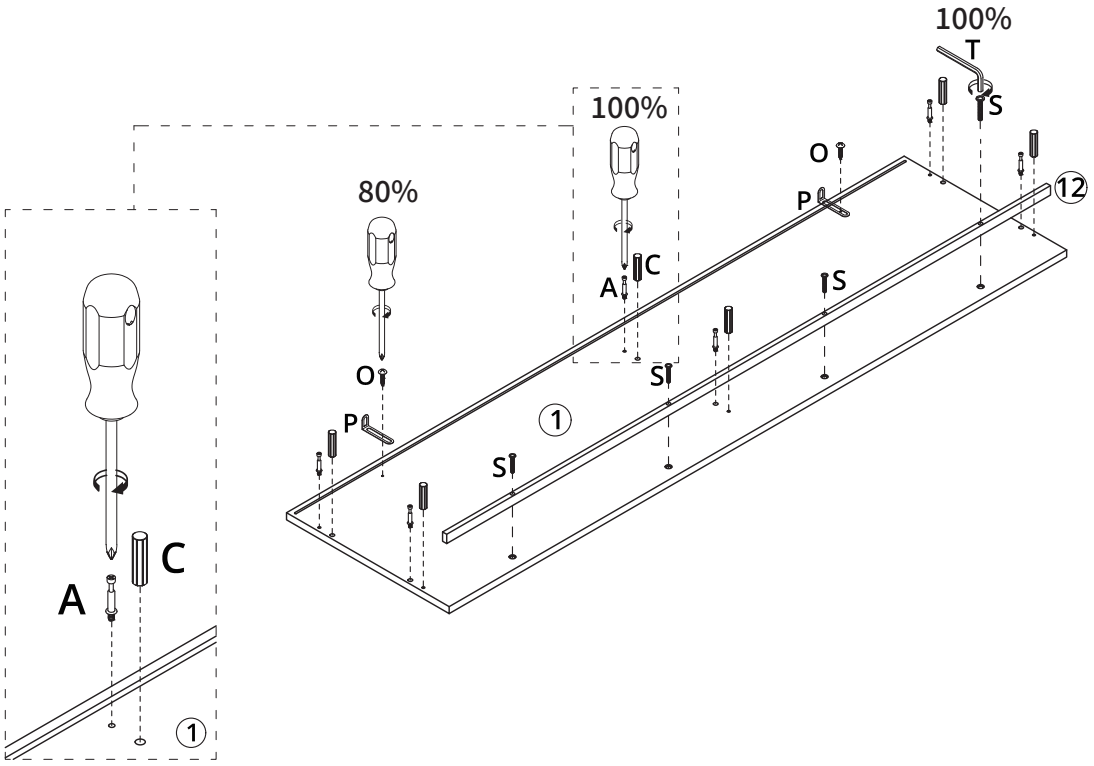
| | | | |
|---|---|---|---|
| ① ×1PC<br>Top Panel<br> | ② ×1PC<br>Bottom Panel<br> | ③ ×1PC<br>Left Side Panel<br> | ④ ×1PC<br>Middle Panel<br> |
| ⑤ ×1PC<br>Right Side Panel<br> | ⑥ ×2PCS<br>Adjustable Shelves<br> | ⑦ ×2PCS<br>Back Panels<br> | ⑧ ×2PCS<br>Middle Back Panels<br> |
| ⑨ ×2PCS<br>Front And Back Aprons<br> | ⑩ ×2PCS<br>Left And Right Aprons<br> | ⑪ ×4PCS<br>Wooden Legs<br> | ⑫ ×1PC<br>Square Steel Tube<br> |
| ⑬ ×2PCS<br>Side Doors<br> | ⑭ ×2PCS<br>Middle Doors<br> | ⑮ ×1PC<br>Middle Leg<br> | ⑯ ×2PCS<br>I-shaped Slots<br> |

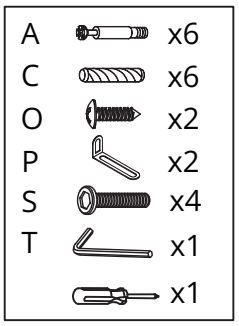
# Hardware List

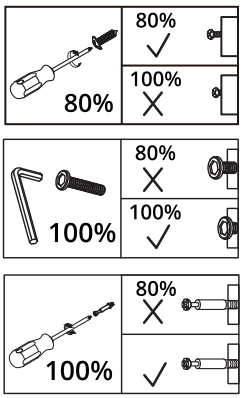
| | | | | |
|---|---|---|---|---|
| A ×18+2PCS  M6*35mm | B ×18+2PCS  ⌀15mm | C ×22+2PCS  ⌀8*30mm | D ×4PCS  | E ×4PCS  |
| F ×4PCS  120*2*34mm | G ×7+1PCS  M7*50mm | H ×84+8PCS  M3.5*14mm | I ×18+2PCS  ⌀20mm | J ×8+1PCS  |
| K ×8+1PCS  M4*25mm | L ×4PCS  L=285mm | M ×12+1PCS  | N ×8+1PCS  M6*30mm | O ×2PCS  M4.5*12mm |
| P ×2PCS  65*30*15mm | Q ×2PCS  ⌀8*30mm | R ×2PCS  M4.0*35mm | S ×4PCS  M6*30mm | T ×1PC  M4 |
| Not provided  | Not provided  | | | |


1
12
7
8
8
16
5
7
16
6
4
6
3
2
11
10
11
9
15
9
11
10
11
13
14
14
13

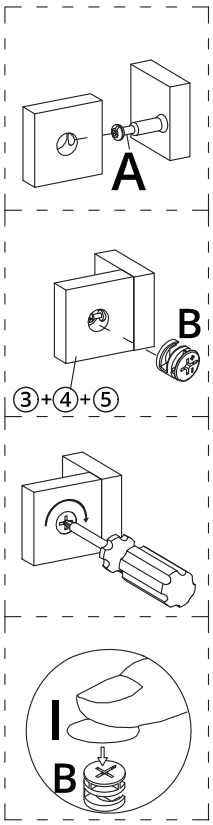
**1** Insert Bolt S into pre-drilled hole of steel Tube ⑫, connecting Tube ⑫ to panel ①, tighten bolt S to 100%.
Note: When installing the anti-tip kit P, tighten the bolt O to around 80%.

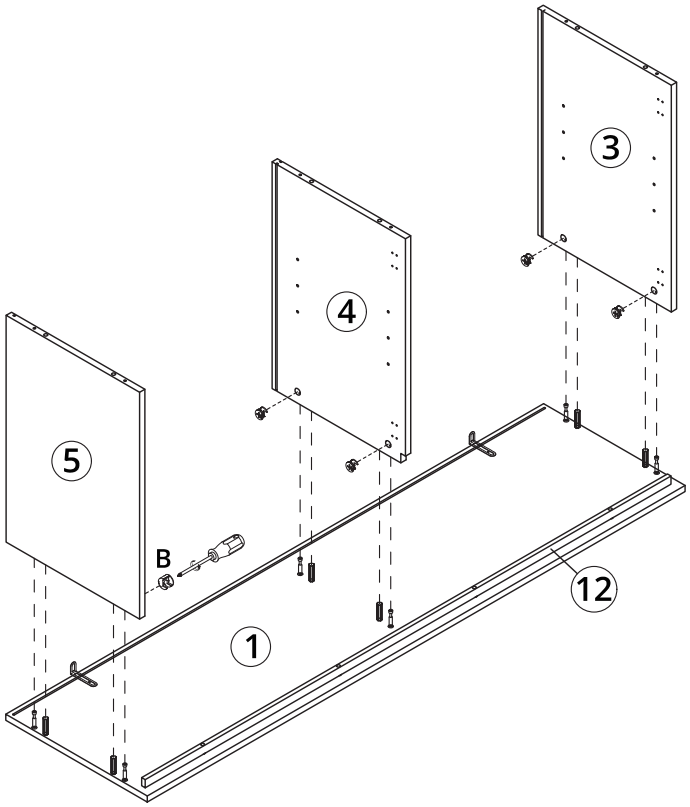


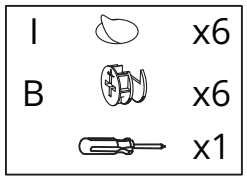



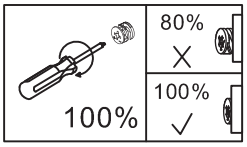




**2** Insert Cam Locks B into the pre-drilled holes of panels ③, ④ and ⑤, fully tighten all cam locks, then attach hole covers I to all holes.

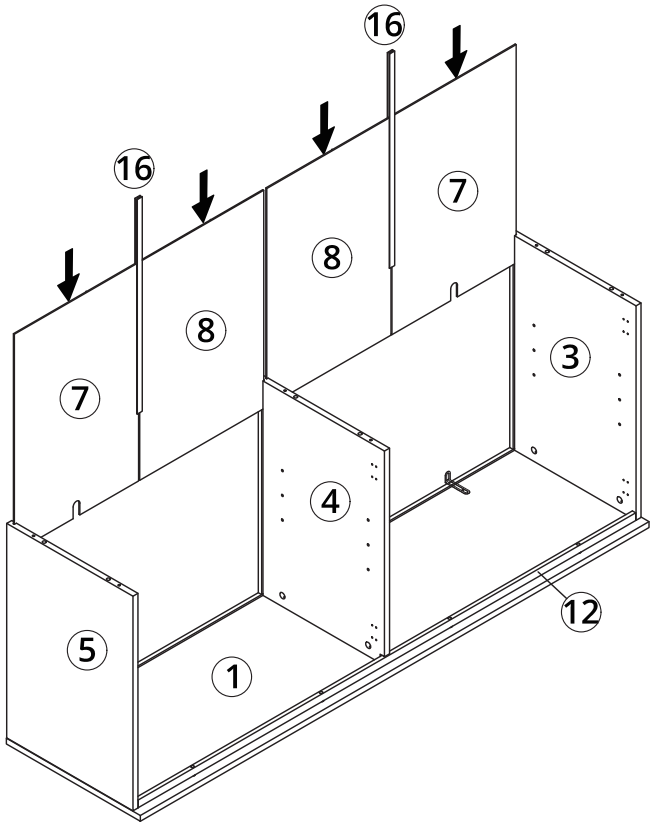






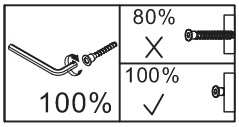



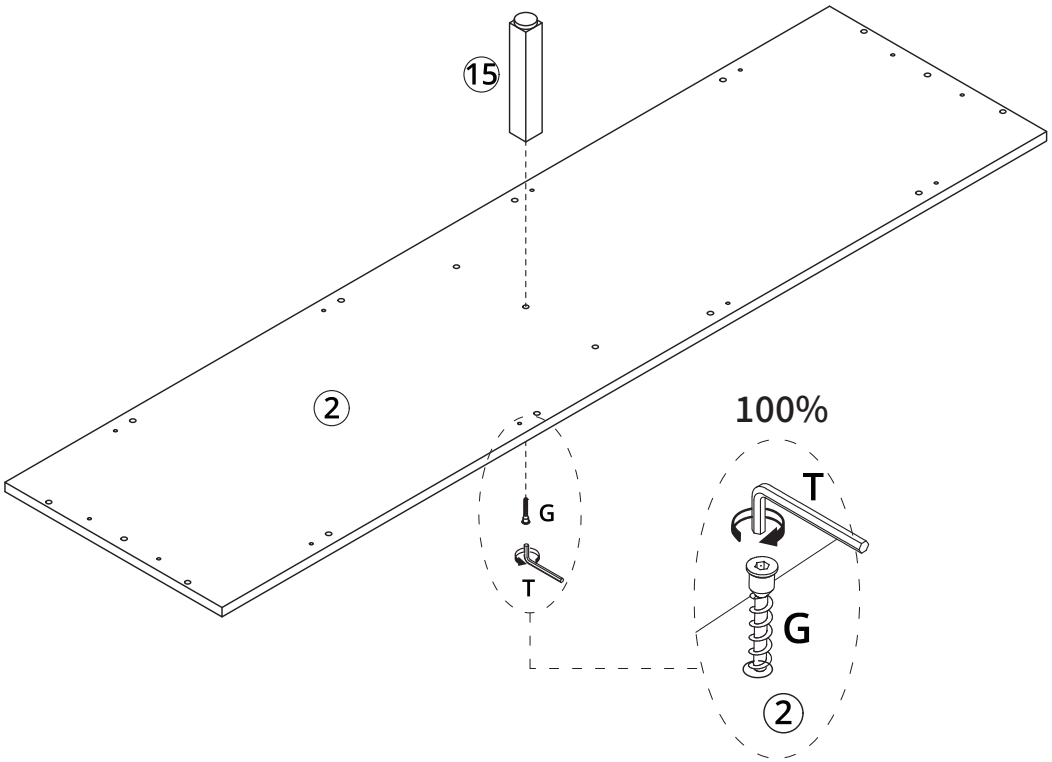
**3** Slide the back panels ⑦, ⑧ and I-shaped Slots ⑯ slowly into the groove.



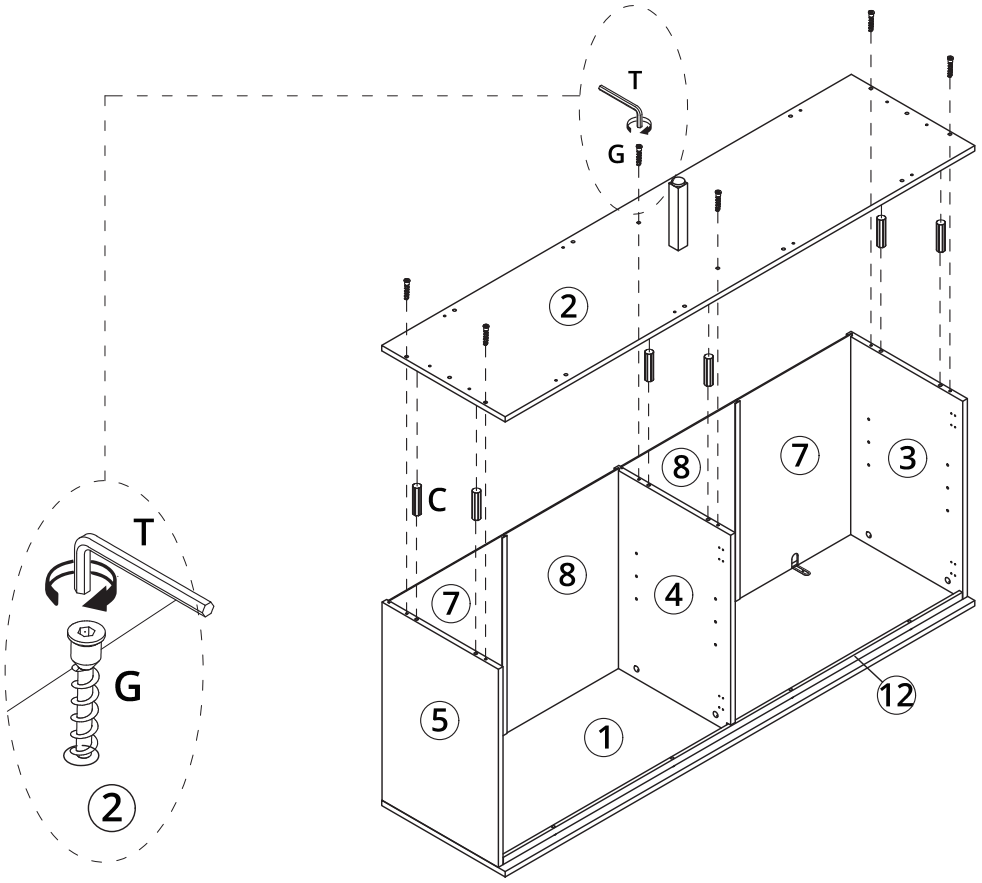

**4** Insert fastener G into the pre-drilled hole of the bottom panel ② to attach the middle leg ⑮ to panel ②, then fully tighten fastener G.

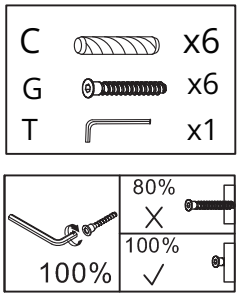


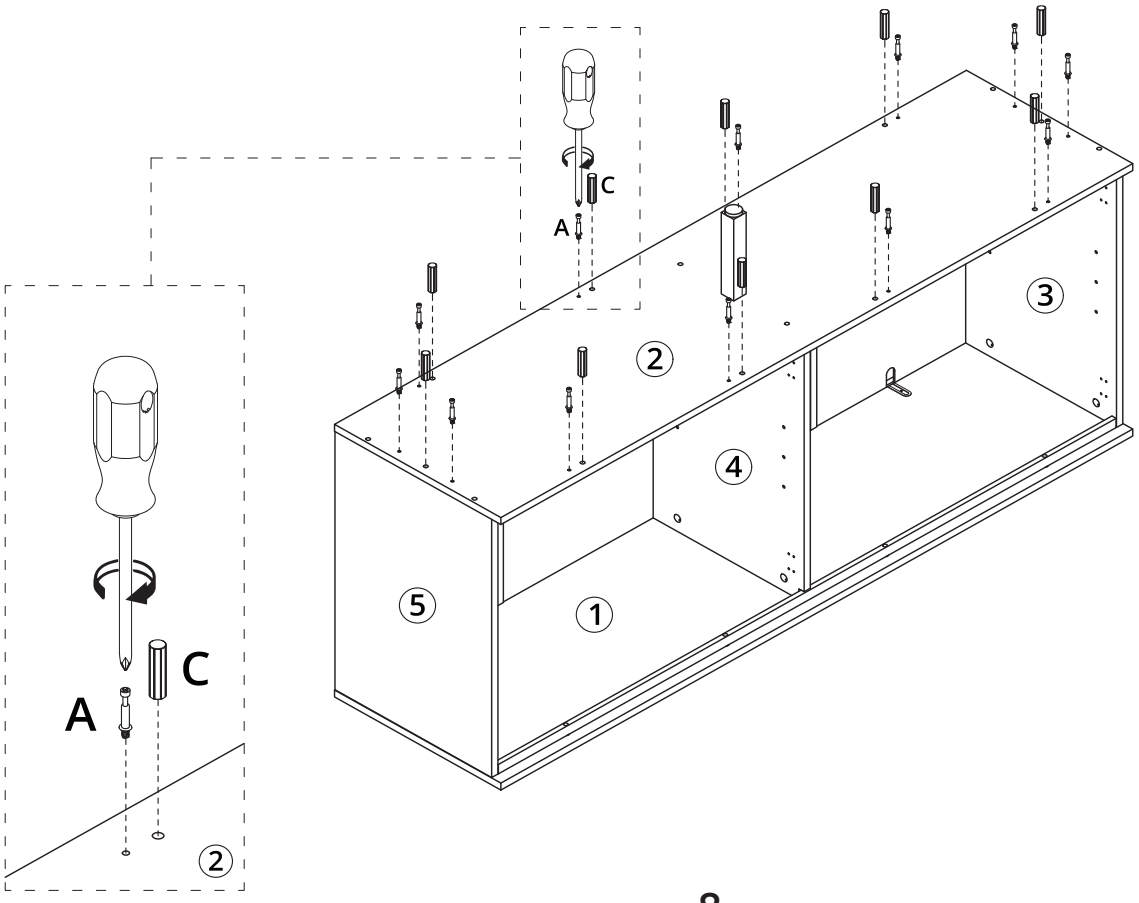



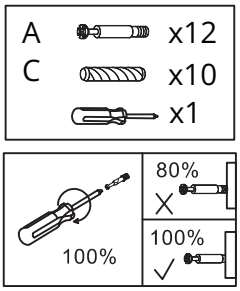
## 5


T
G
2
C
8
7
3
7
8
4
5
1
12
T
G
2

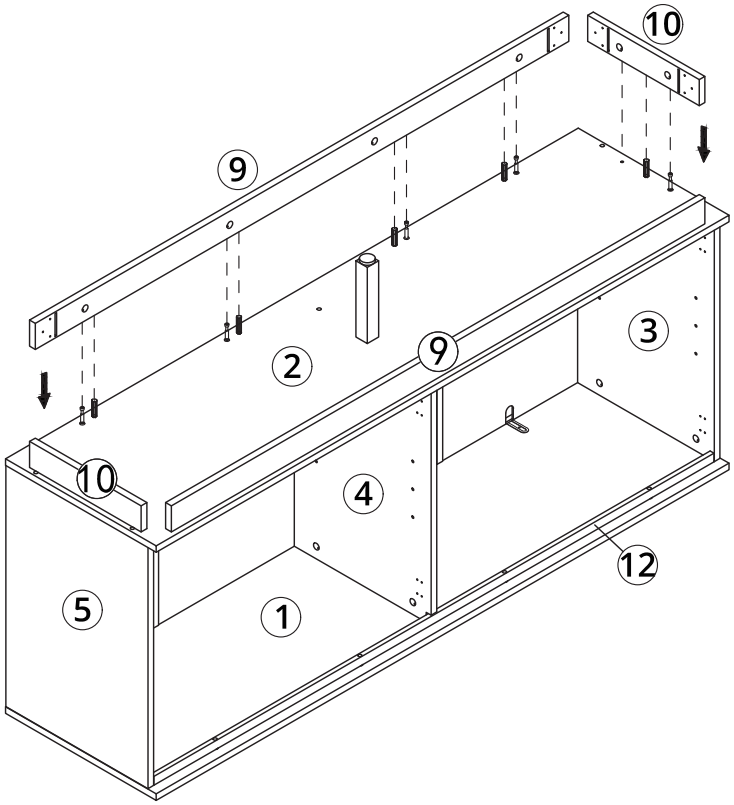

C x6
G x6
T x1
80%
100%
100%

## 6



C
A
2
3
4
5
1
A
C
2

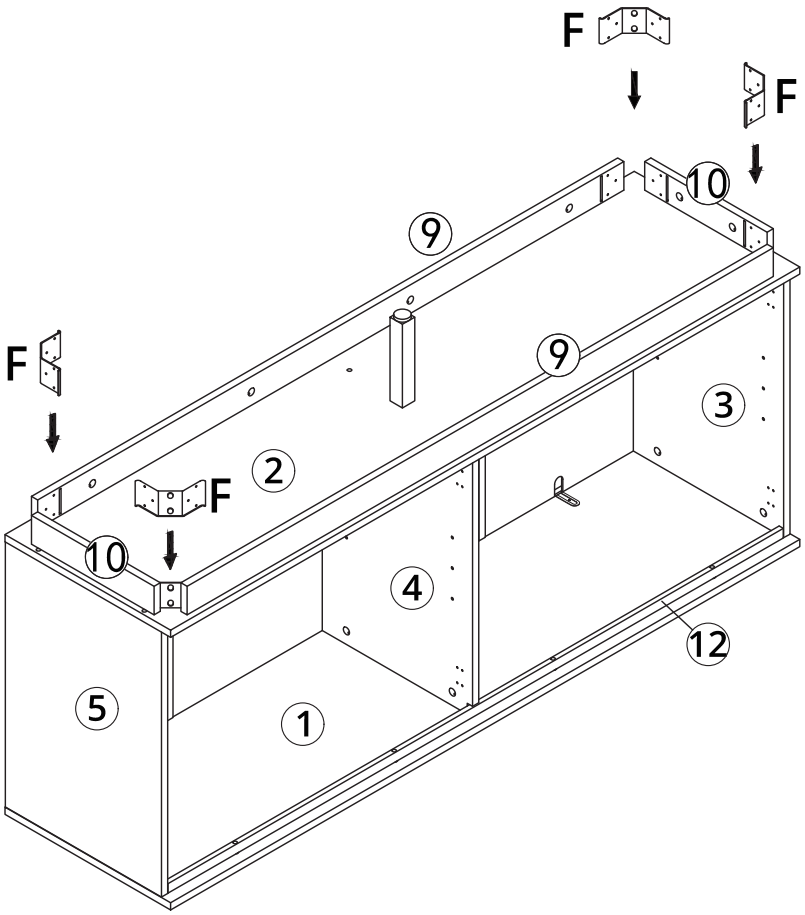

A x12
C x10
x1
80%
100%
100%

**7**



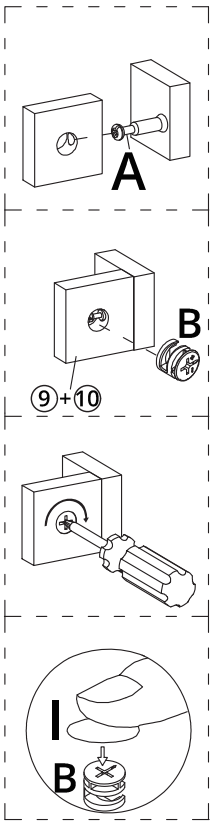

**8**

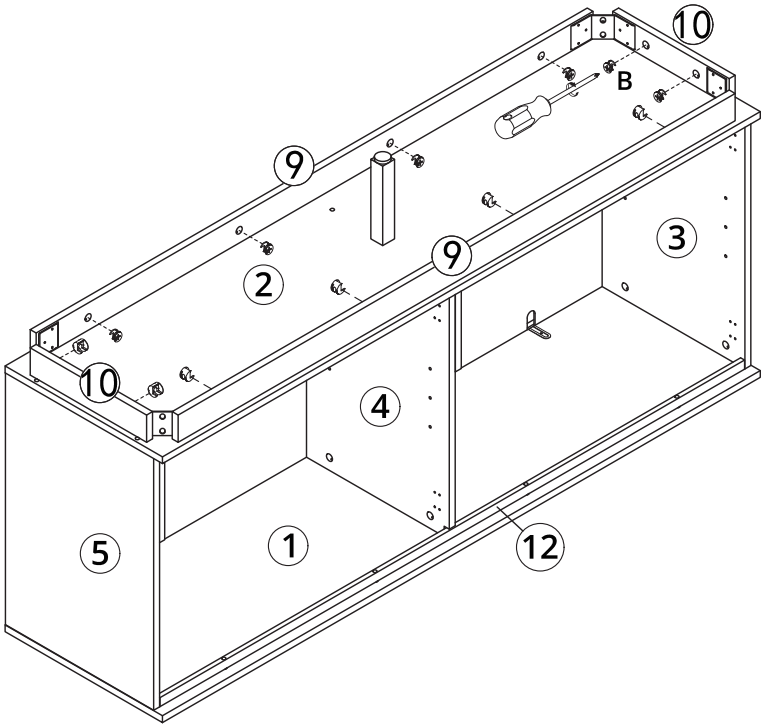


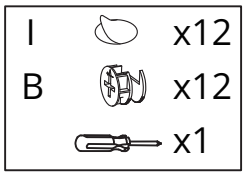



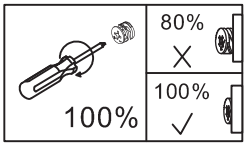
## 9

Insert Cam Locks B into the pre-drilled holes in panels ⑨ and ⑩, fully tighten all cam locks, then attach Hole Covers I to all holes.

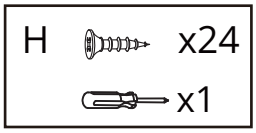


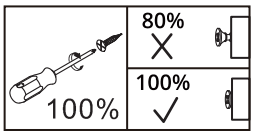



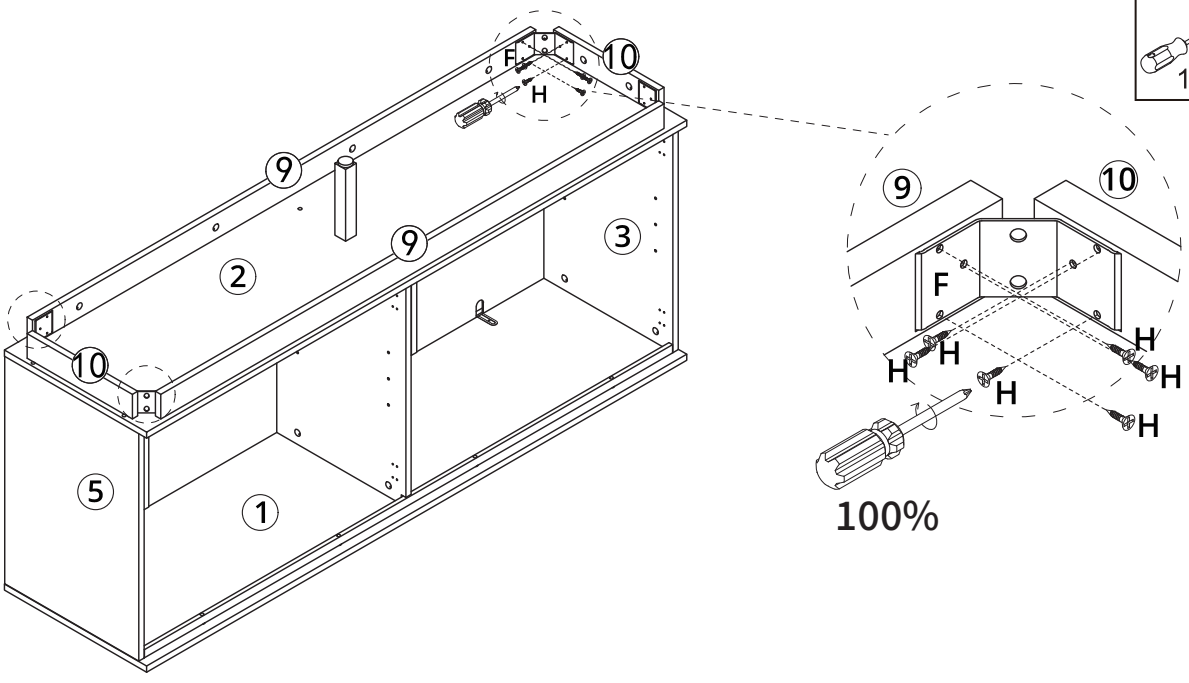



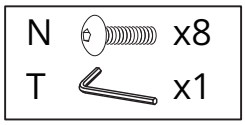

## 10

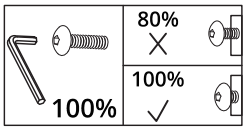


## 11



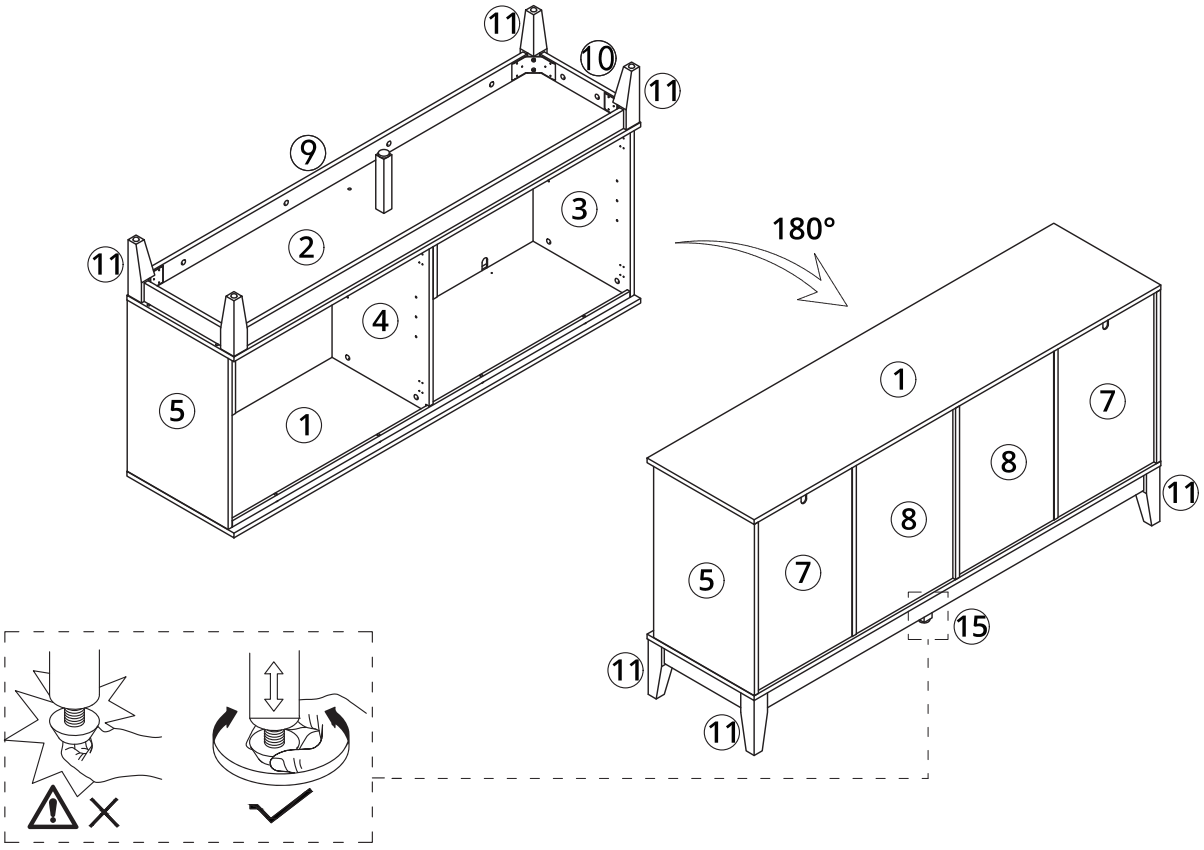







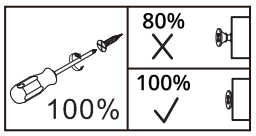
## 12

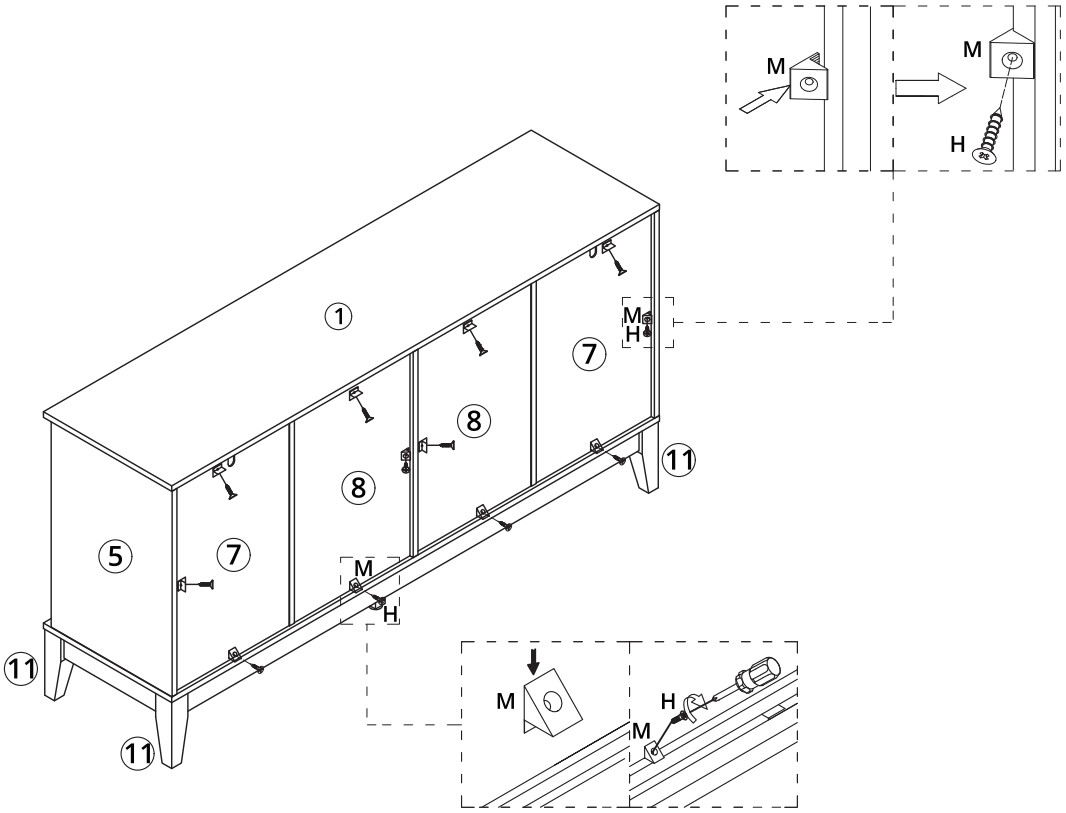
Adjust the leveling feet on the support leg for balance.



**13** Locate the 12 pieces of bracket M and position them on the back side of the cabinet. Then, use a screwdriver to tighten the screws H securely.

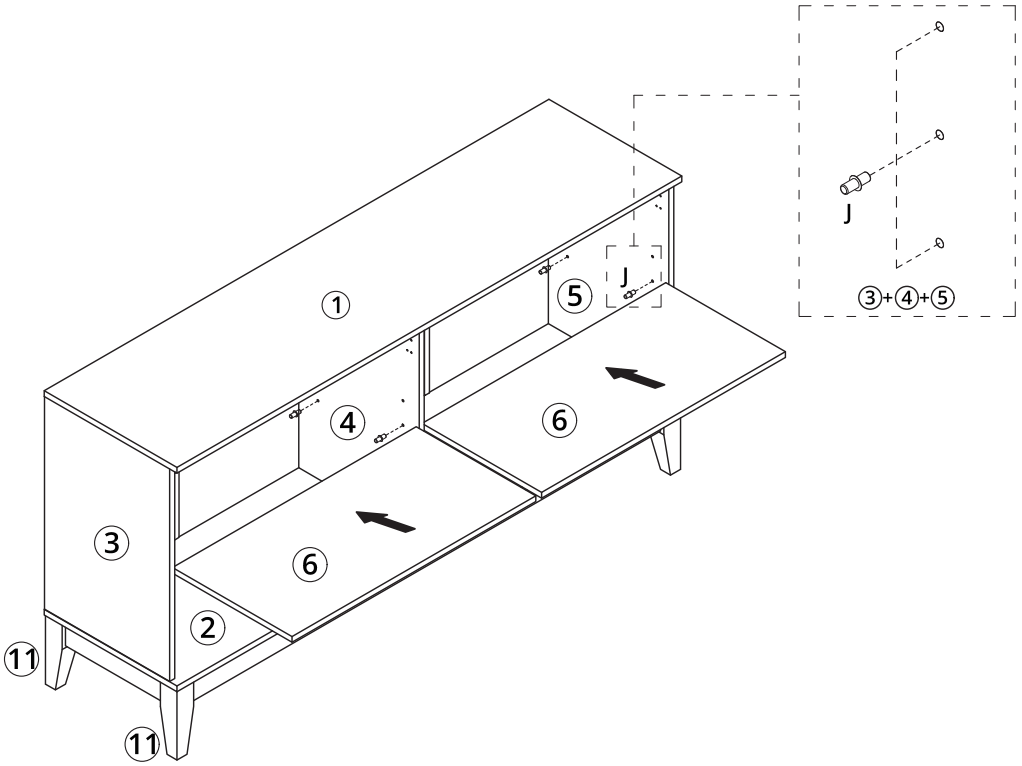
H x12
M x12
x1



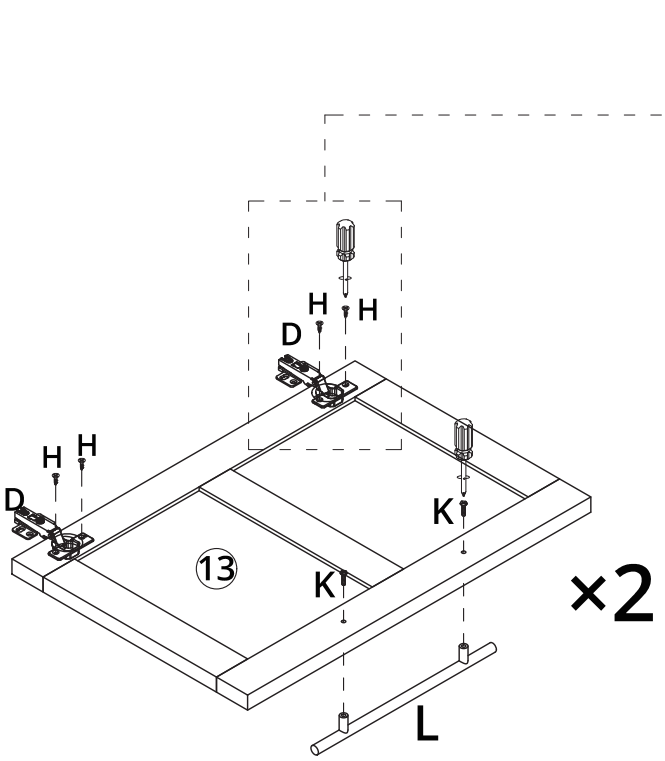



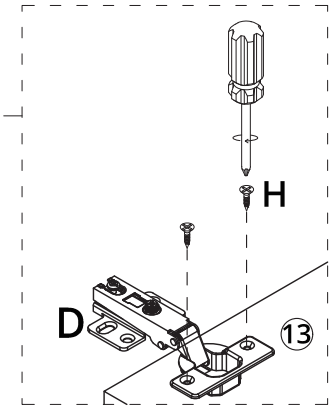

**14** Insert the shelf pins J into the holes at your desired height. Then, place the shelf panel ⑥ onto the pins, aligning them with the supports.

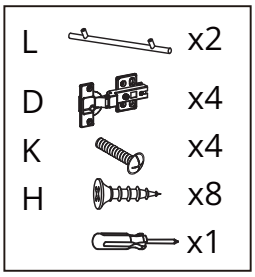
J x8

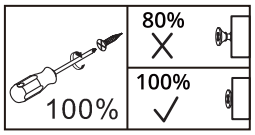


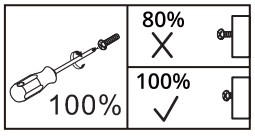
## 15


H
H
H
D
H
H
D
K
13
K
×2
L

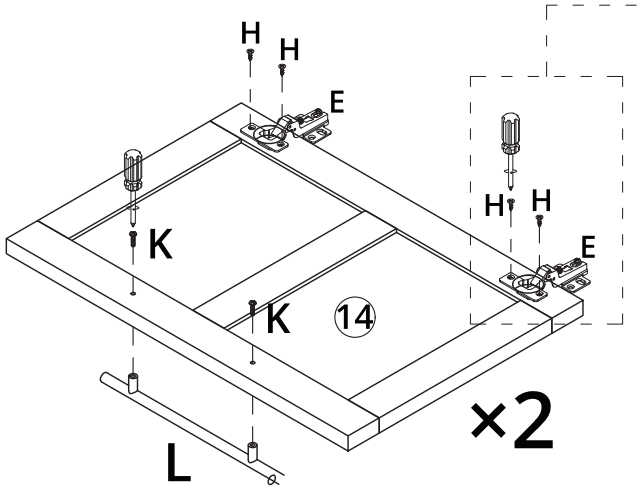

H
D
13

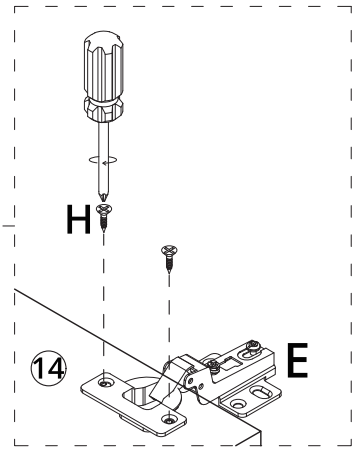

L
x2
D
x4
K
x4
H
x8
x1

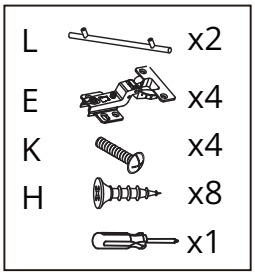

80%
100%
100%

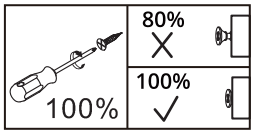

80%
100%
100%

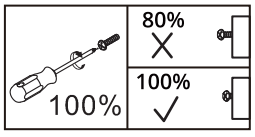
## 16


H
H
E
K
K
14
H
H
E
L
×2


H
14
E


L
x2
E
x4
K
x4
H
x8
x1


80%
100%
100%


80%
100%
100%

## 17

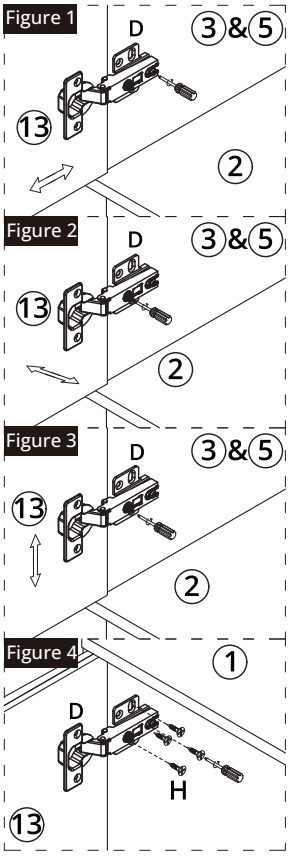



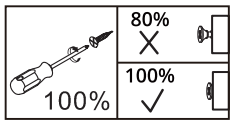

Figure 1: Turn the rear screw on the hinge as shown to adjust the depth of the cabinet door relative to the cabinet frame.

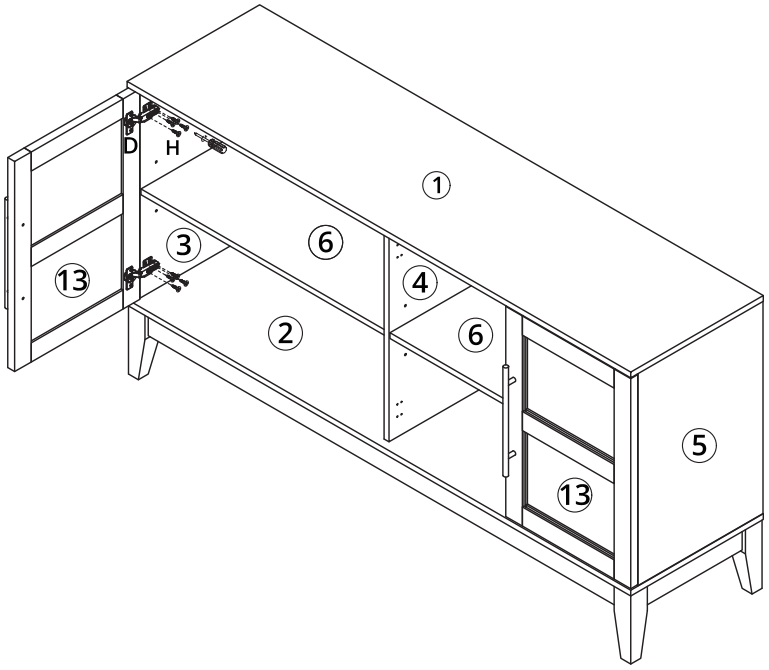
Figure 2: Turn the front screw on the hinge as shown to adjust the left-and-right alignment of the cabinet door, aligning the door evenly with the edge of the cabinet frame.

Figure 3: Adjust the screws used for mounting the hinge to align the cabinet door vertically (up and down) with the edge of the cabinet frame.

Figure 4: After adjusting the door gaps properly, tighten and lock screw H.




## 18

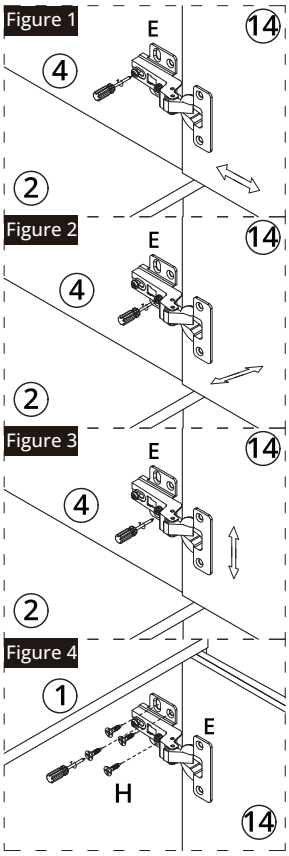



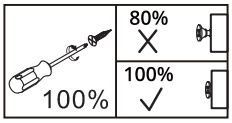

Figure 1: Turn the rear screw on the hinge as shown to adjust the depth of the cabinet door relative to the cabinet frame.

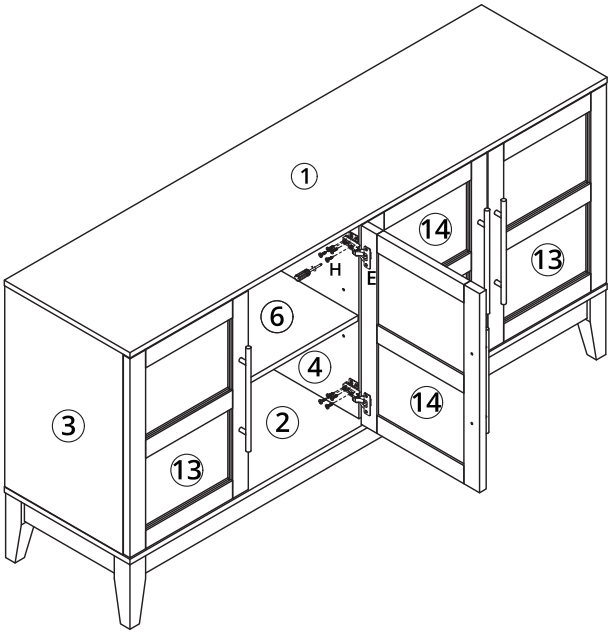
Figure 2: Turn the front screw on the hinge as shown to adjust the left-and-right alignment of the cabinet door, aligning the door evenly with the edge of the cabinet frame.

Figure 3: Adjust the screws used for mounting the hinge to align the cabinet door vertically (up and down) with the edge of the cabinet frame.

Figure 4: After adjusting the door gaps properly, tighten and lock screw H.



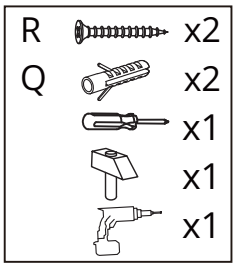



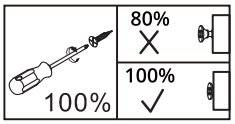



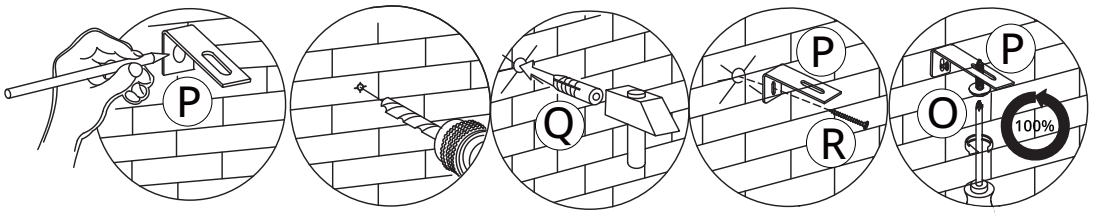
**19**

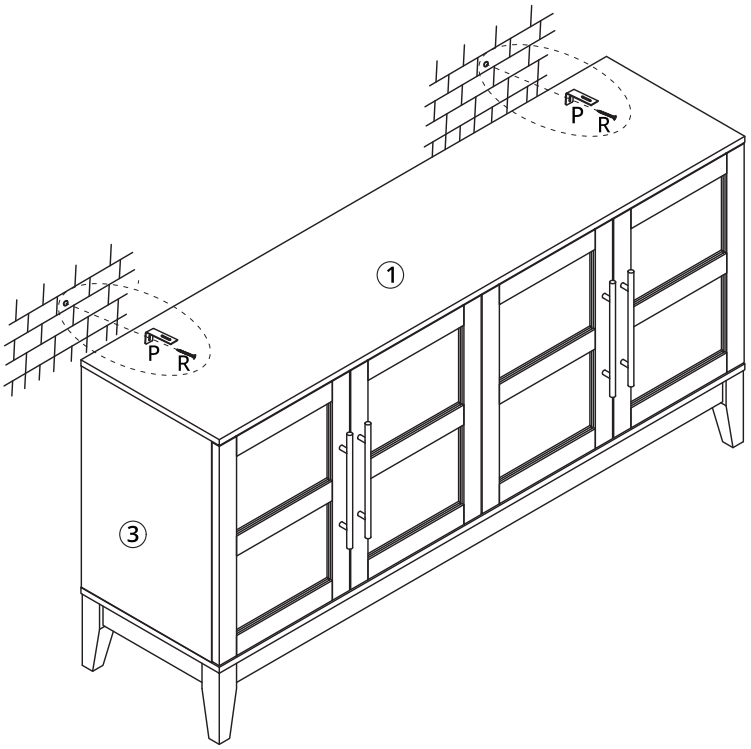
For safety reasons, please be sure to attach the product to the wall to avoid accidents!

1. First, locate the spot on the wall corresponding to the small hole on Ⓟ. Then, drill a hole in the wall using an electric drill.
2. Drill a hole with electric drill on the wall.
3. Hammer the Ⓠ into the hole.
4. Fix P to the wall by tigtening Ⓡ through Ⓟ into Ⓠ.
5. Finally tighten Ⓞ in the product 100%, through the hole of Ⓟ.

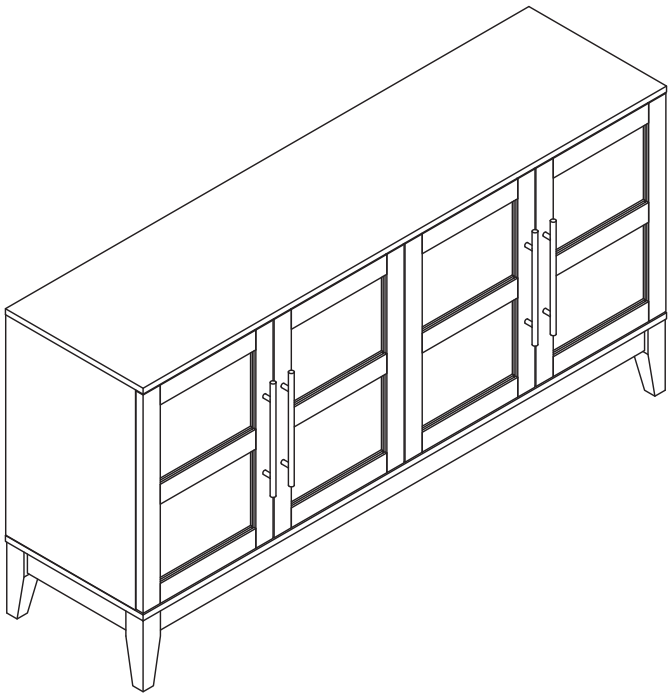


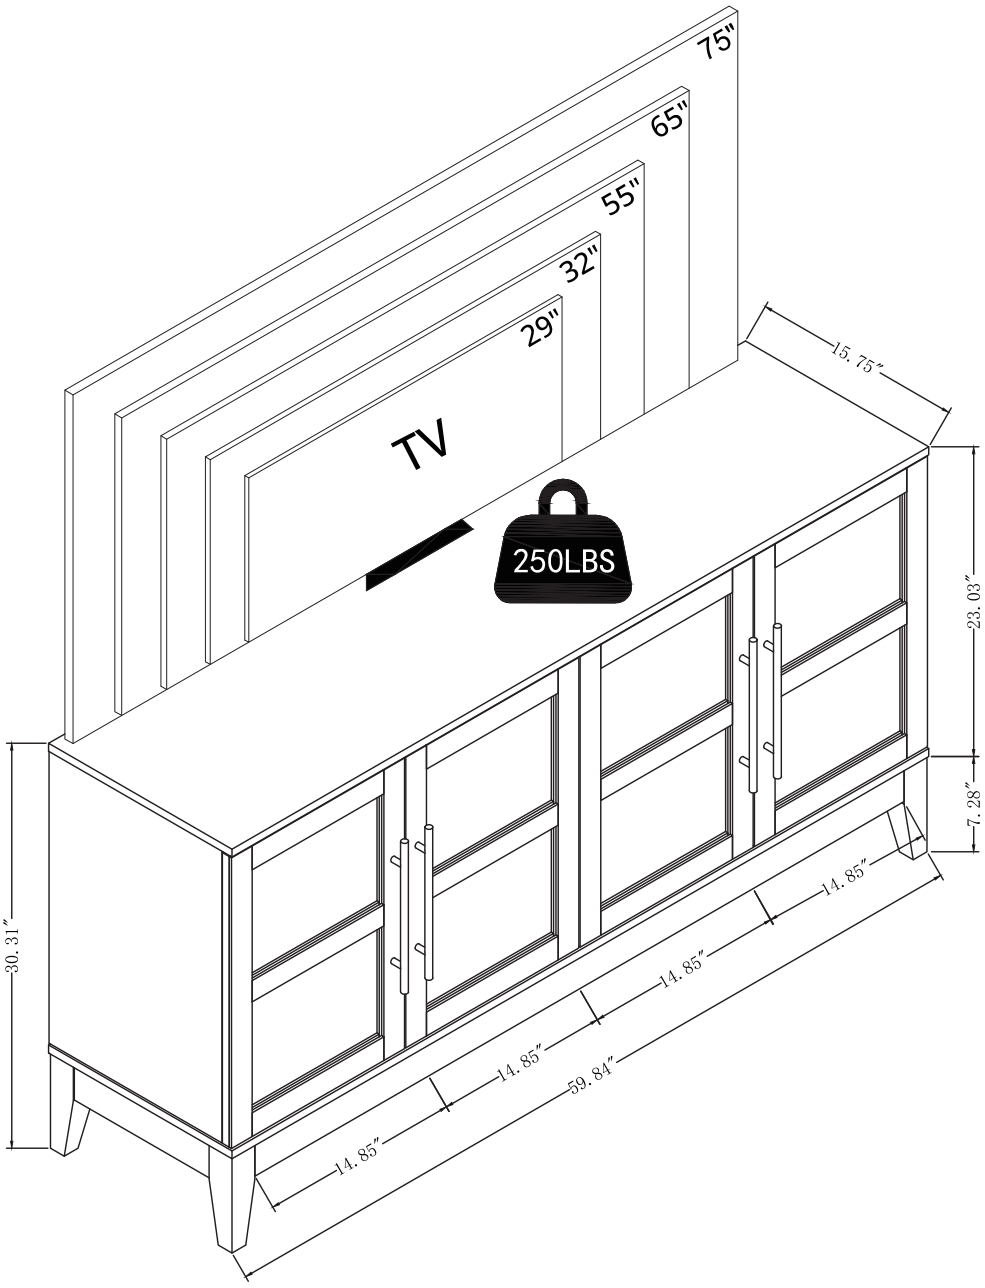




FINISHED




75"
65"
55"
32"
29"
TV
250LBS
15.75"
23.03"
7.28"
30.31"
14.85"
14.85"
14.85"
14.85"
59.84"