Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.




- ✓  • Dust and pick–up spills using a clean, non–colored, lint–free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


DINING TABLE
N842P294504

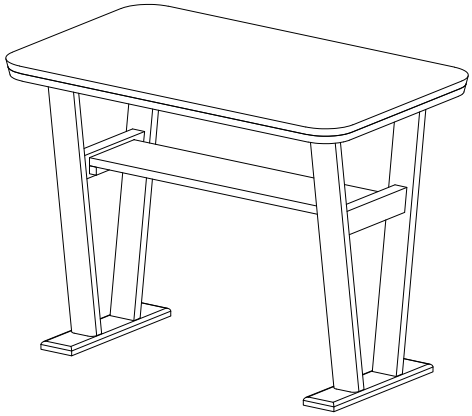

Parts List

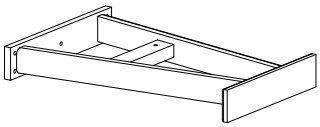
Label	Picture	Description	QTY
Ⓐ		TABLE TOP	1
Ⓑ		TABLE SHELF	1
Ⓒ		LEGS	2

Hardware


Label	Picture	Description	QTY
①		Bolt (M6x30)	14
②		Spring Washer (6/11)	14
③		Flat Washer (6/13)	4
④		Flat Washer (6/19)	10
⑤		Allen Wrench	1

Assembly Preparation


Before Beginning Assembly :

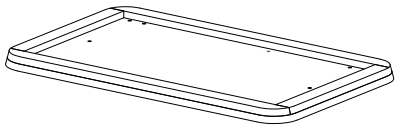

Ⓐ



Ⓑ

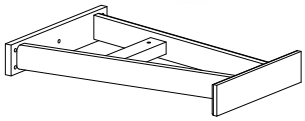

Ⓒ



① x 14



② x 14



③ x 4



④ x 10



⑤ x 1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

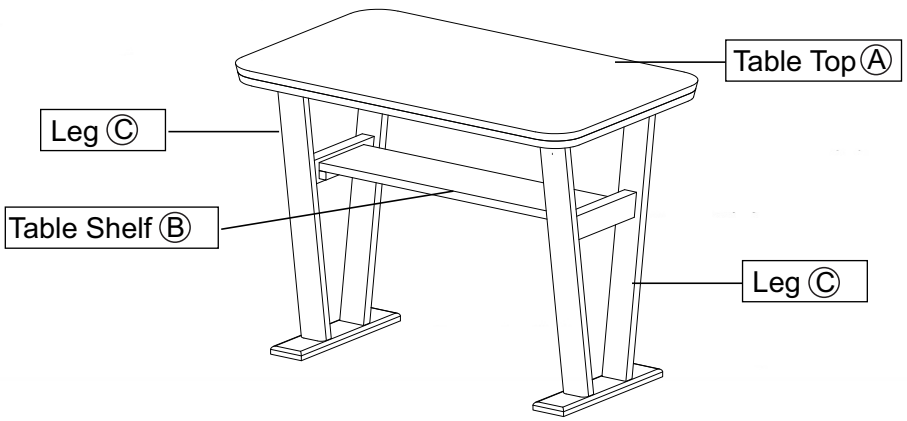


This table has multiple parts and may require up to 30 minutes to assemble. The picture above provides an overview of the chair parts to help you visualize and understand each component. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

Step1

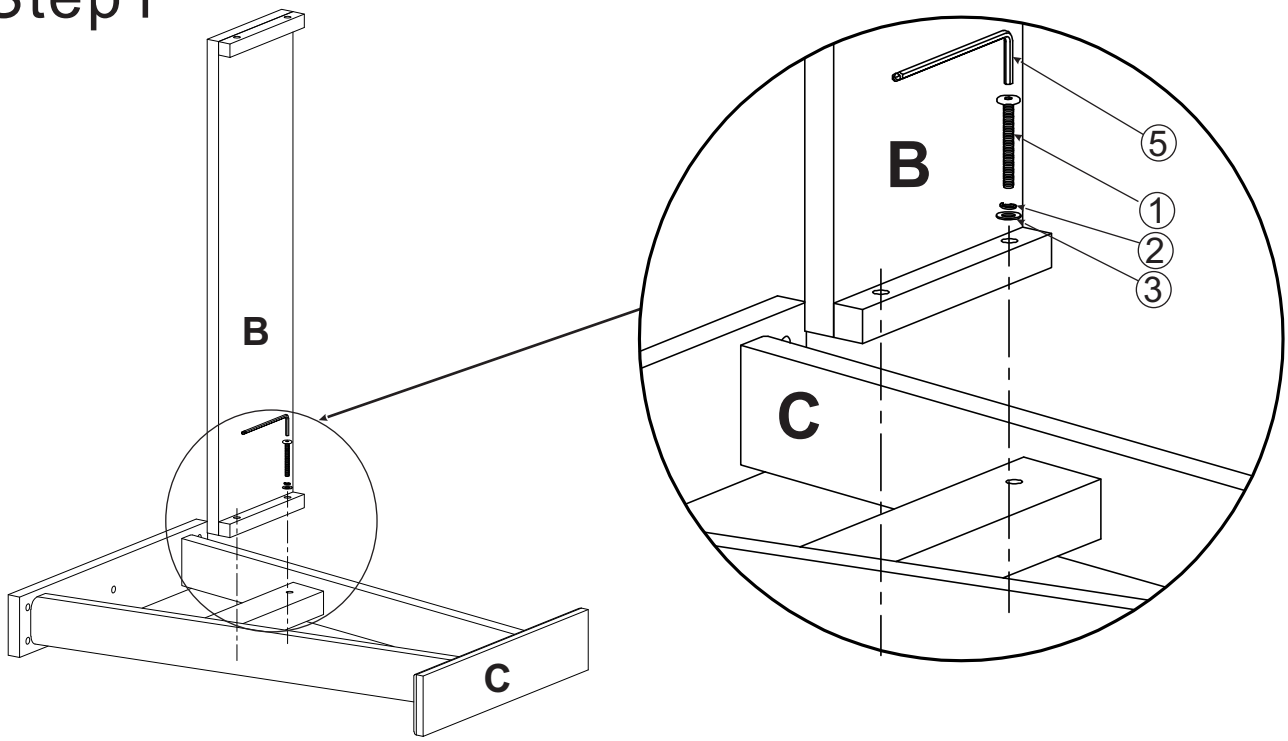


Attach table shelf Ⓑto the legⒸusing the
Allen Wrench⑤, Bolt①, and Washer②, and Flat Washer③

Step2

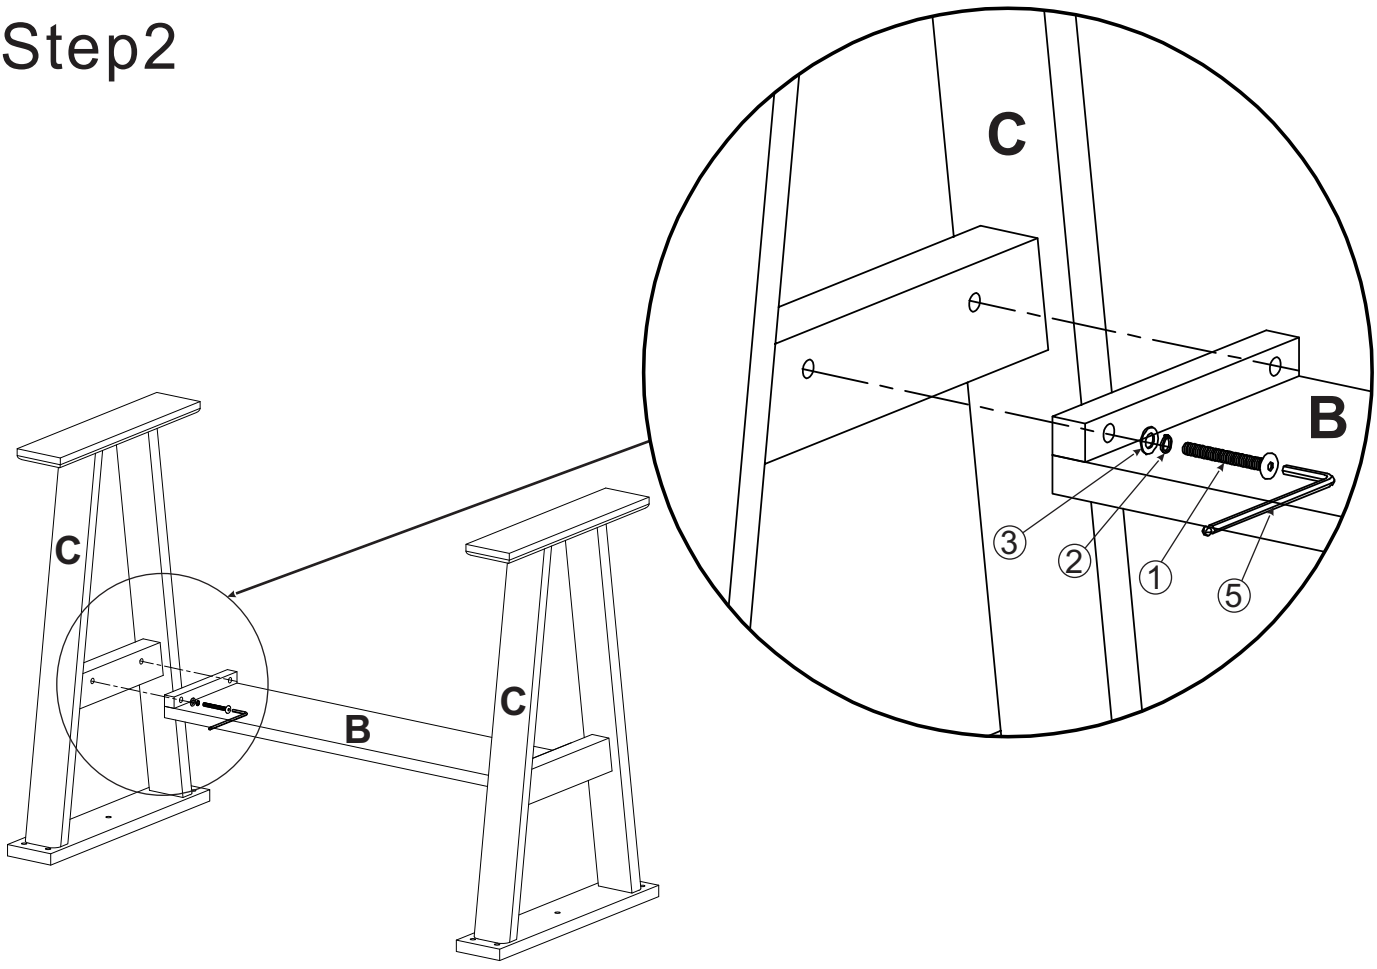


Attach table shelf Ⓑ to the leg Ⓒ using the
Allen Wrench⑤, Bolt①, and Washer②, and Flat Washer③

Step3

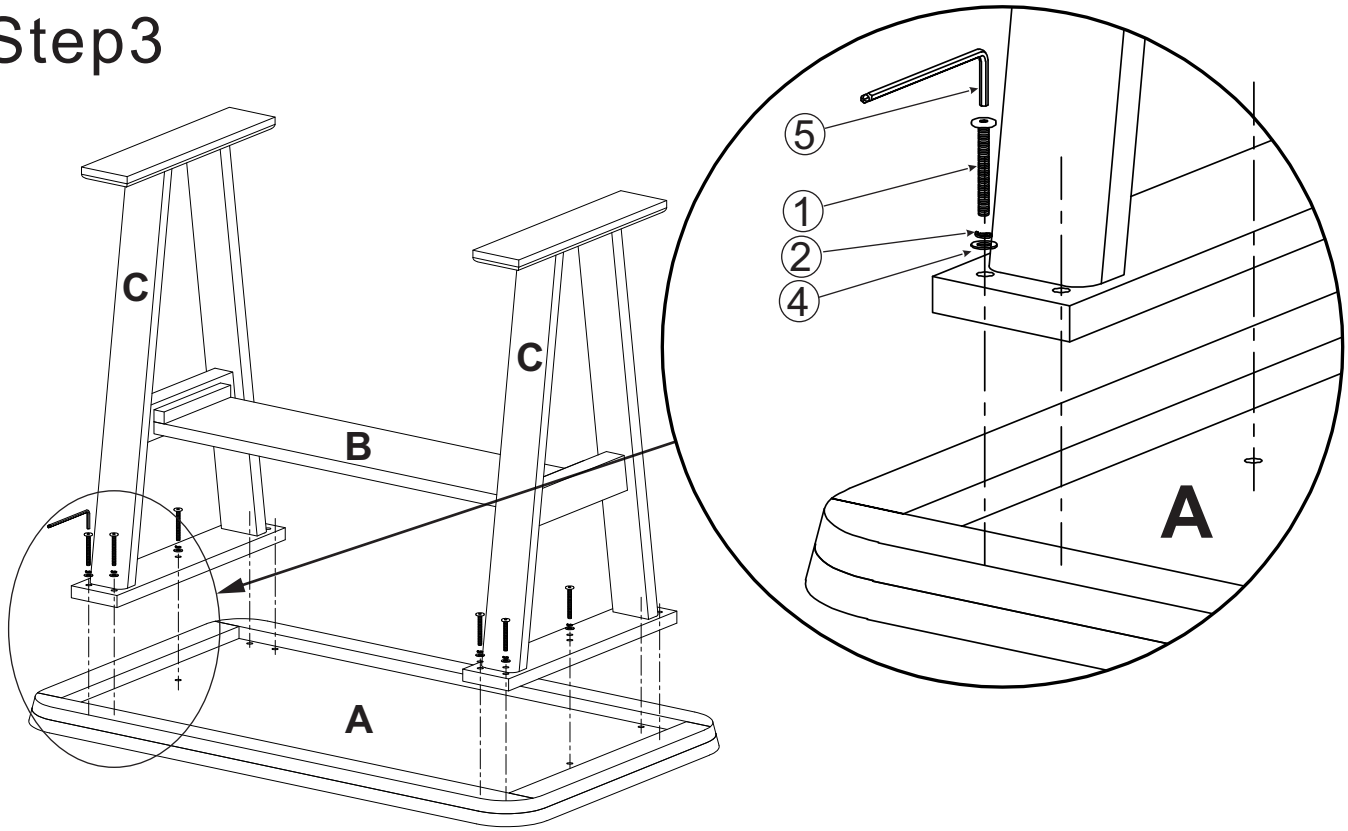

Attach leg Ⓒ to the table top Ⓐ using the
Allen Wrench ⑤, Bolt ①, and Washer ②, and Flat Washer ④

Step4

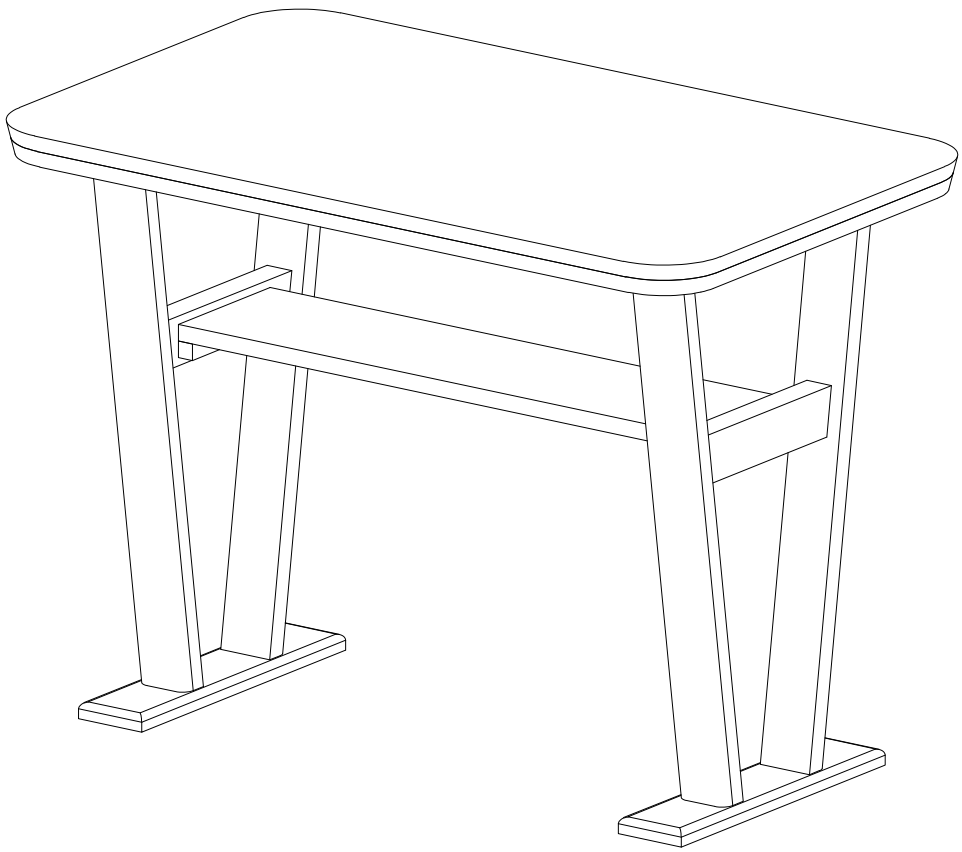

The table is ready for use.
The table can only be used on a flat, level surface.