

## LIGHTING

1. Read instructions before lighting.
  2. Control knob must be in the "OFF" position.
  3. Connect propane cylinder (See Manual).
  4. Push and turn control knob counter clockwise to "LOW".
  5. Keep pushing the control knob in "Low" position and press the igniter button repeatedly to light burner.
  6. Release the igniter button once the burner is lit, but continue to press and push the control knob for 15 seconds.
  7. If ignition does not occur in 15 seconds, push and turn burner control knob to "OFF", wait 5 minutes, fan with newspaper or magazine, and repeat lighting procedure.
  8. If igniter does not light burner, use a long match or long butane lighter.
  9. Adjust flame to desired flame with the control knob.
- CAUTION:** The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use.

## TURNING OFF



1. Turn and push the control knob clockwise to the "OFF" position.
2. Turn the cylinder valve on the gas tank to clockwise to close.

## PARA ENCENDER

1. Leer las instrucciones de uso antes de encender.
  2. Botón de control debe estar en la posición "APAGADO".
  3. Conectar el cilindro de propano (Ver manual).
  4. Empujar y girar botón de control en sentido contrario a las agujas del reloj hasta "BAJO".
  5. Continúa empujando el botón de control a la posición "BAJO" y repetidamente presionar el interruptor de encendido para encender el quemador.
  6. Soltar el botón de encendido después de encenderlo, pero continúe manteniendo pulsado el botón de control durante 15 segundos.
  7. Si no enciende en 15 segundos, empujar y girar el botón de control del quemador a "APAGADO", esperar 5 minutos, ventilar con periódico o revista y repetir el proceso de encendido.
  8. Si el encendedor no enciende el quemador, usar un fósforo largo o un encendedor de gas butano.
  9. Ajustar la flama con el botón de control.
- ADVERTENCIA:** El suministro de gas debe estar apagado en el suministro de gas-LP de cilindro cuando no uso estar operando.

## APAGAR

1. Empujar y girar el botón de control en sentido de las agujas del reloj a la posición "APAGADO".
2. Para cerrar, girar la válvula del cilindro en el tanque gas en sentido de las agujas del reloj.

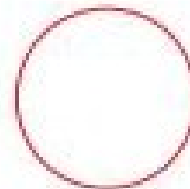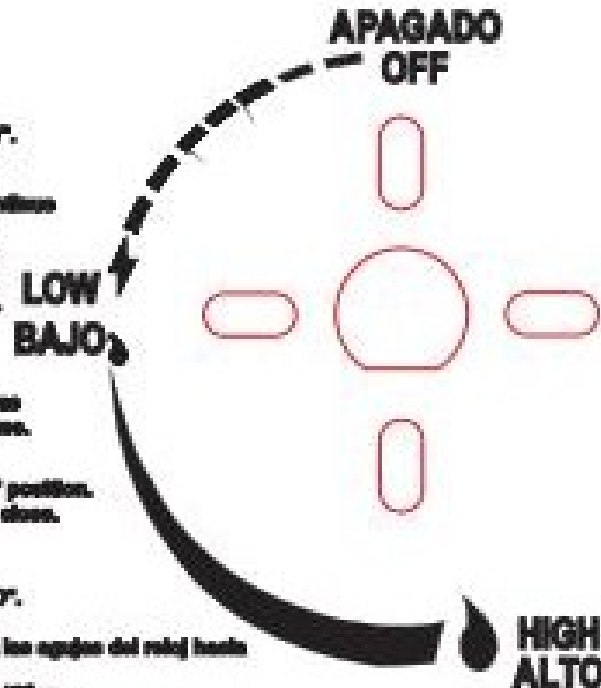

1AAA  
1.5V

IGNITER-PUSH  
ENCENDOR-PRESIONE