
IntelliCube Outdoor TV Lift Cabinet

User Manual (For 75" TV Set)

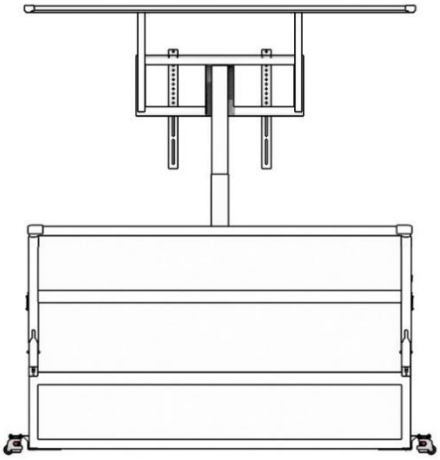

Scan the QR code to watch the installation video on YouTube.

Prefcae


Thank you for purchasing the IntelliCube Outdoor TV Lift Cabinet! Before using the product, please carefully read this manual and follow the steps provided. We hope the IntelliCube Outdoor TV Lift Cabinet brings more beauty and convenience to your life.

Installation Steps

Step 1: Unbox the Packaging

Unbox the carton and remove all packaging materials.
Set the packaging materials aside and recycle them in an environmentally friendly manner.

Step 2: Lock the Casters

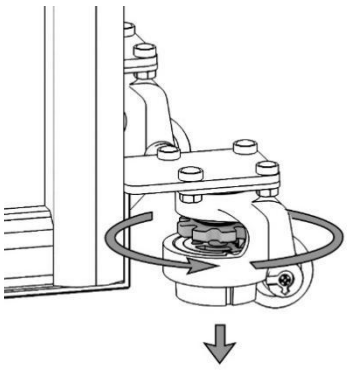


If you do not want the TV cabinet to move freely, rotate the red, toothed part of the caster.This will allow the black cylindrical part to drop down, supporting the caster off the ground, thereby locking it in place.

Step 3: Install the Folding Brackets


This TV cabinet comes with four folding brackets to enhance stability.




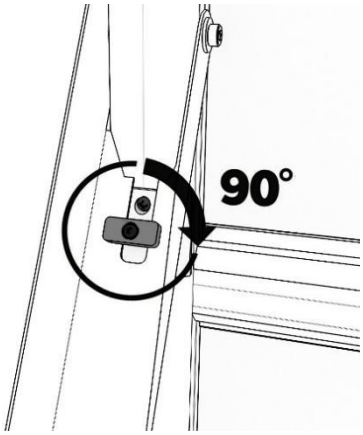

To open the brackets: Gently detach the brackets from the cabinet and rotate them to an appropriate angle until the ends of the brackets make contact with the ground.
Ensure the notched part of the folding bracket aligns with the small plastic piece. Once aligned, rotate the plastic piece 90° to lock the bracket in place.


Step 4: Connect the Power Supply

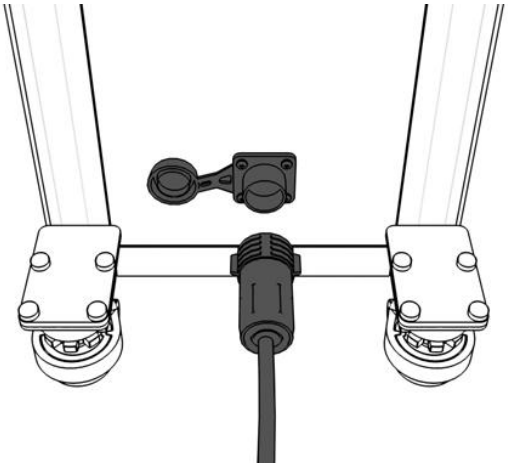

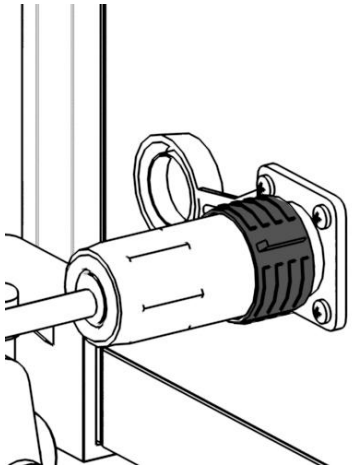


Take the power cord from the packaging.Plug one end into the wall socket and the other end into the power port of the cabinet.Once connected, the control panel light will turn on, indicating the power connection is successful.

Step 5: Attach the Cover

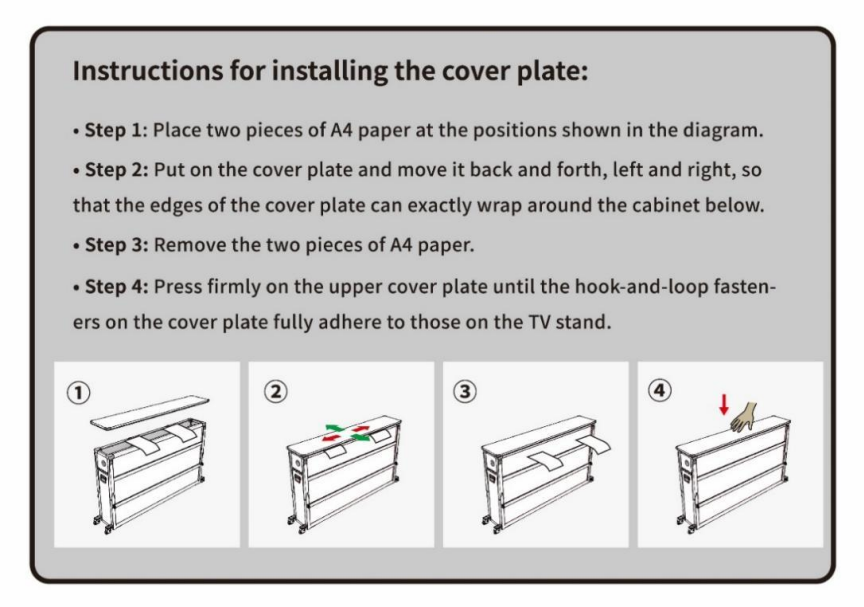

Follow the instructions to securely attach the cover to the TV bracket.

Step 6: Install the TV

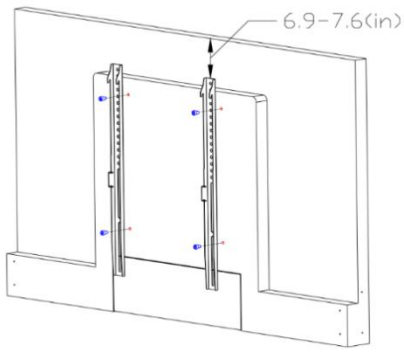



6.1 Install the Mounting Bracket: Remove one of the TV mounting brackets and place it on the back of the TV. Ensure the bracket is oriented as shown in the diagram, with the top edge of the bracket approximately 6.9-7.6 inches from the top edge of the TV.

6.2 Secure the Mounting Bracket: Based on the previous step, use screws to secure the mounting bracket to the TV, following the diagram's instructions.

6.3 Hang the TV: Hang the TV onto the bracket. If necessary, loosen the screws on the mounting bracket to make the process easier. If there is interference with the top cover during installation, remove it and reattach it as described in Step 5 after the TV is installed.

Tips： The cable carrier is in an open position to allow easy routing of low-voltage cables. It should be closed afterward.

IRemote Control Instructions:



battery insulation film

∧: Up button
RST: Reset button
∨: Down button
1: Memory Position Save button 1
2: Memory Position Save button 2

Up and Down Button Operations

◆ Click the " ∧ " button to automatically move the tabletop upward until it reaches its highest point.

◆ Click the " ∨ " button to automatically move the tabletop downward until it reaches its lowest point.

◆ Press any other button during operation to pause the ascent or descent.

Position Storage/Memory Position Operation

◆Position Storage: You can store two memory points. To save a position, press and hold the "1" or "2" button for five seconds to save the position.

◆ Memory Position Operation: Click the "1" or "2" button to move the TV up or down to the memorized height. During operation, any button can be pressed to stop the operation.

Zero Position Reset

◆ Press and hold "RST" for 10 seconds, then release and press the down button to enter reset mode. The desktop will automatically move down to its lowest position, then rise to the top and then down to the bottom, completing the reset process.

When using the remote control, please remove the plastic tab on the side of the remote.

Note: The remote control is **not waterproof**. Please keep it away from water or moisture to avoid damage.Before using the remote, **remove the battery insulation film**.

What kind of TV sets is suitable for

It can be used for TVs up to 75 inches with a weight of no more than 120 pounds, a thickness of no more than 4 inches, a width of no more than 66.5 inches, and a height of no more than 40 inches.

Usage Precautions

1.Risk Warning: Do not touch the TV cabinet while it is lowered.
2.Do not place the TV cabinet in a low-lying area.
3.Thunderstorms: Do not use the TV cabinet during thunderstorms. Unplug the power cord to prevent lightning strikes.
4.Strong Winds: Avoid using the TV cabinet during strong winds. The product can withstand wind up to level 4, and even with the TV stored in the cabinet, it can only resist wind up to level 5. In the case of strong winds, move the TV cabinet to a sheltered location.
5.Moving the Cabinet: When moving the TV cabinet, ensure the TV is lowered, and at least two people should cooperate to avoid tipping the cabinet.
6.Usage: Do not lean on, push, or forcefully move the cabinet to avoid damage.

Thank you for choosing Intellicube products. We hope you enjoy using your new TV cabinet! If you have any questions, feel free to contact our customer service. https://www.theintellicube.com

SAFETY WARNINGS

1. If the power cord is damaged, stop using the product immediately to prevent short circuits or electric shock.
2. Do not immerse this unit in water. Disconnect power during rain to avoid risk of electric leakage.
3. In severe weather conditions (e.g., storms, strong winds), store the unit indoors promptly to prevent injury from tipping over.
4. During high winds, secure the unit to prevent it from falling. Never climb on the unit, as it may cause impact injury. (Do not place the unit near air vents or other areas with strong airflow.)
5. Before use, ensure the unit is placed on stable ground. Do not operate if it is unsteady, to prevent tipping. (For added stability, place it against a wall. If used in an open area, implement additional securing measures.)
6. Children must be supervised by an adult. Do not allow children to operate or play around the unit without supervision.
7. Never disassemble or modify any part of the unit, as this may cause a safety hazard.
8. Disconnect the power supply (unplug from outlet) before cleaning, servicing, or moving the product. Failure to disconnect power may result in electric shock.
9. Before use, read the instruction manual carefully. Follow all operating procedures. Any misuse may result in risk of injury or damage.