Outsunny

IN220901713V01_CA

845-340

EN

Gorden wagon
Manual

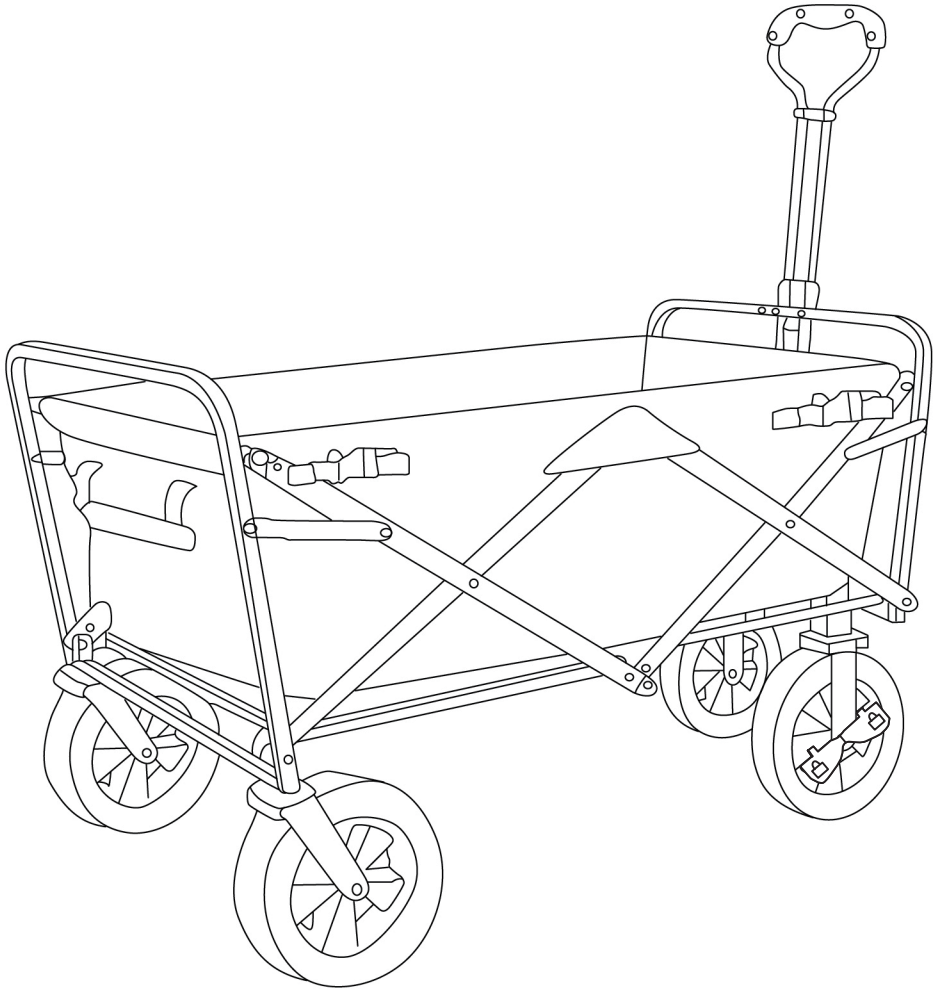

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

Dear customer,

Thank you for purchasing this product. So that your appliance serves you well, please read all the instructions in this user's manual. If you have any questions, please contact our customer care center.

Our contact details are below:

Country	Phone	Email
CA	416-792-6088	customerservice@aosom.ca

Note:

1. This product is not for transporting people.
2. Do not tow this product with vehicles or other transportation equipment.
3. Max load: 150 lb (68 kg). Exceeding this load will damage the product or cause personal injury.
4. Be careful when using the trolley on uneven surfaces, stairs or curbs. Improper use could cause injury.
5. Check all parts before using the trolley, ensuring everything works properly.
6. Don't use the trolley on ramps.
7. Never release the handle when the trolley is still moving.
8. Keep the product out of direct sunlight. When not in use, store in a dry and clean place.

PACKAGES:

1x Collapsible wagon
1x Carry bag
1x User manual

CONSTRUCTION OF THE WAGON:

1. Open the strap that holds the wagon together (on the side of the wagon). Then pull the front and rear of the frame apart to unfold / build the wagon.

NOTICE: When assembling, make sure you do not pinch your fingers.

2. Adjust the handle. Please note, the handle has a safety lock.

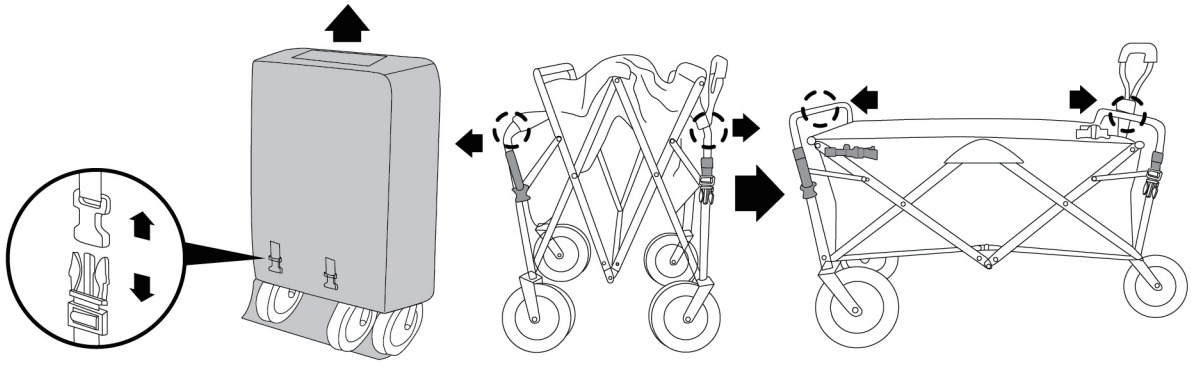

Adjusting the handle height:

Open the locking lever on the handle, then pull out the handle to the required height. Close the locking lever to fix the handle at the desired height. The handle sits in a plastic clamp, just pull out the handle to use it, as shown in the picture.

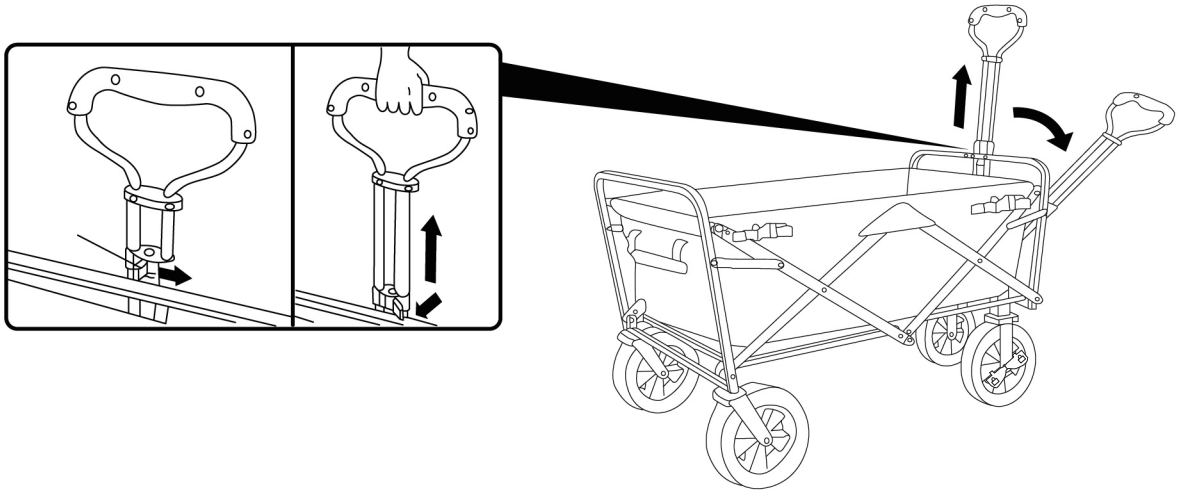

3. Finally, ensure the textile body of the trolley is secured to the steel frame.
4. Belts are tied at the corners and the textile body is wrapped around the front and rear frames.
The hook and loop on the outside of the floor is only attached to one of the support bars on the underside of the cart (NOT on the handlebar), as shown in the picture.

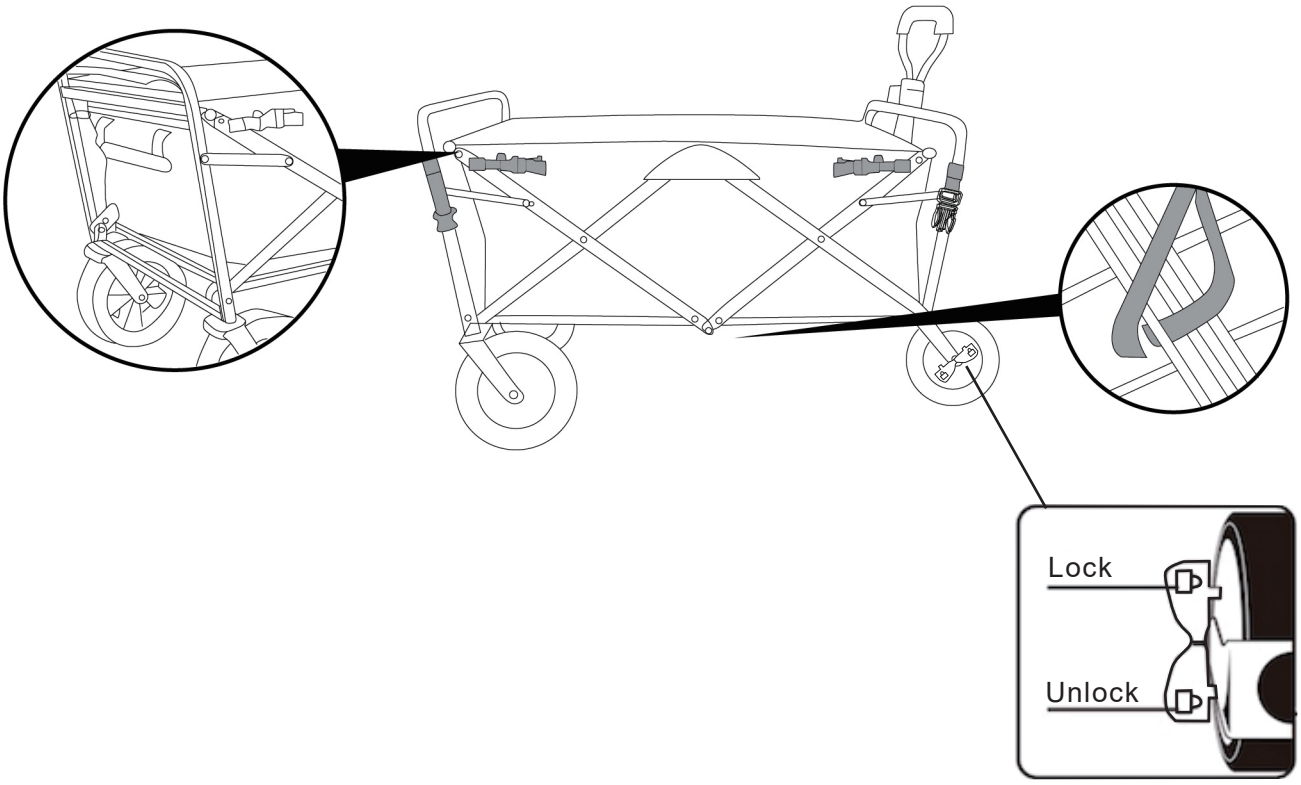

The front wheels have brakes.

FOLDING THE WAGON:

1. When unlocking, pull the junction plate inside the middle of the floor upwards.
2. Push the front and rear of the frame together.
3. When folding the trolley, be careful that you do not pinch your fingers.
4. Finally, store the trolley in the carrying case.

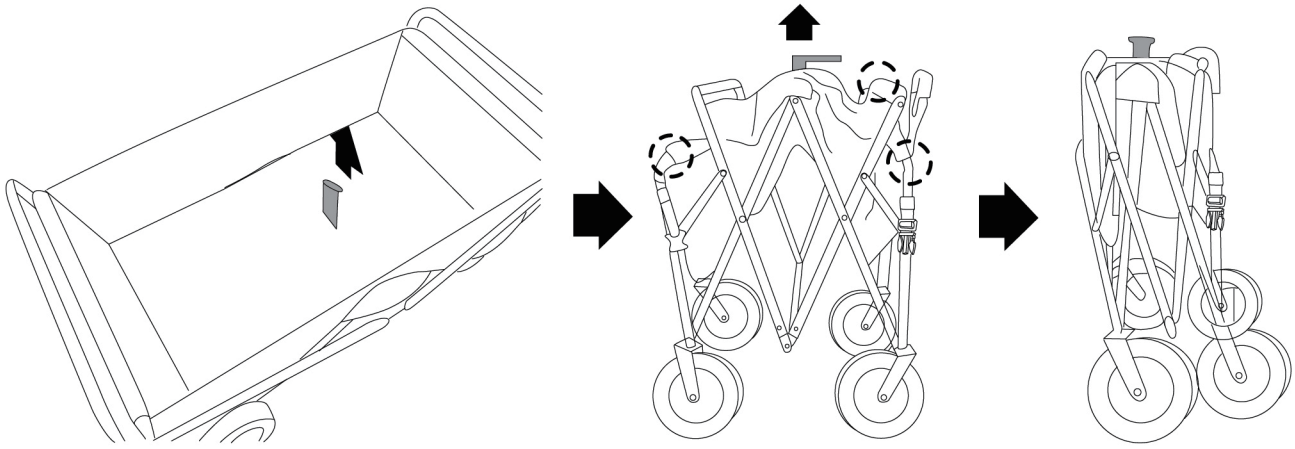

Outsunny

IN220901713V01_CA

845-340

FR

Chariot de Jardin

Manuel d'Instructions

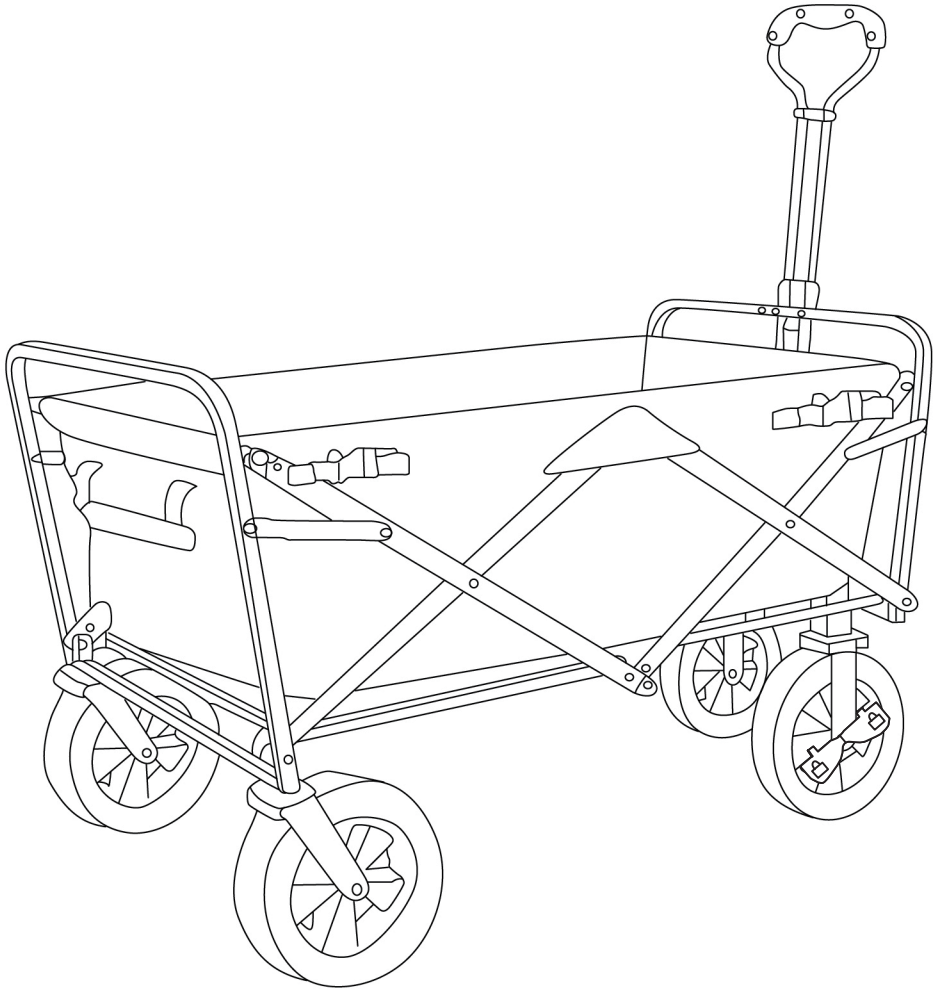

IMPORTANT - CONSERVEZ CES INFORMATIONS POUR VOTRE CONSULTATION ULTÉRIEURE: LISEZ ATTENTIVEMENT

MANUEL D'INSTRUCTIONS

Cher client,

Nous vous remercions d'avoir acheté ce produit. Afin que vous puissiez profiter pleinement de votre appareil, veuillez lire toutes les instructions de ce manuel d'utilisation. Si vous avez la moindre question, veuillez contacter notre centre d'assistance à la clientèle.

***FR*_Nos coordonnées sont les suivantes:**

Country	Phone	Email
CA	416-792-6088	customerservice@aosom.ca

REMARQUE :

1. Ce produit ne doit pas être utilisé dans le transport de personnes.
2. Ne remorquez pas ce produit avec des véhicules ou d'autres équipements de transport.
3. Charge maximale : 150 lb (68 kg). Le dépassement de cette charge endommagera le produit ou causera des blessures corporelles.
4. Soyez prudent lorsque vous utilisez le chariot sur des surfaces inégales, des escaliers ou des bordures. Une mauvaise utilisation pourrait causer des blessures.
5. Vérifiez toutes les pièces avant d'utiliser le chariot, en vous assurant que tout fonctionne correctement.
6. N'utilisez pas le chariot sur les rampes.
7. Ne relâchez jamais la poignée lorsque le chariot est encore en mouvement.
8. Gardez ce produit à l'abri de la lumière directe du soleil. Lorsqu'il n'est pas utilisé, conserver dans un endroit sec et propre.

PAQUETS :

1x chariot pliable
1x sac de transport
1x Manuel de l'utilisateur

CONSTRUCTION DU CHARIOT :

1.Ouvrez la sangle qui maintient le chariot fermé. Ensuite, écartez l'avant et l'arrière du cadre pour déplier et mettre le wagon en forme.
AVIS : Lors de l'assemblage, assurez-vous de ne pas vous pincer les doigts.
2. Ajustez la poignée. Veuillez noter que la poignée dispose d'un verrou de sécurité.

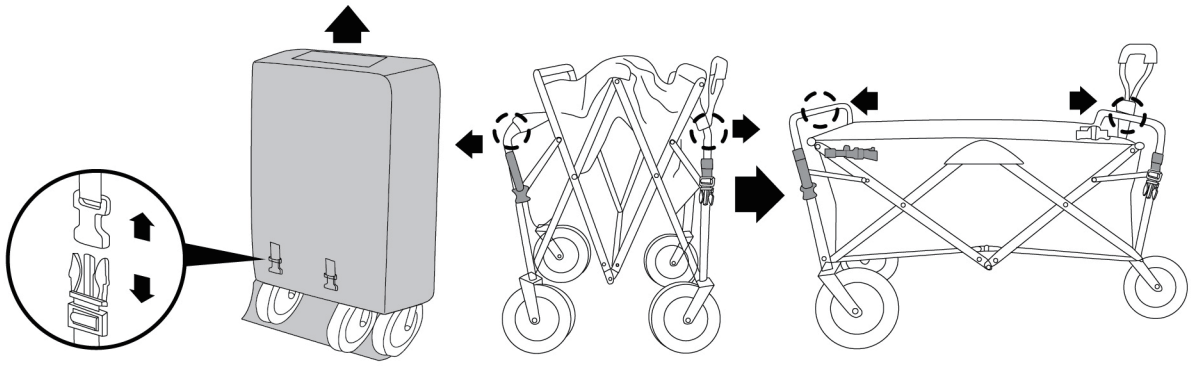

Réglage de la hauteur de la poignée :

Ouvrez le levier de verrouillage sur la sangle, puis retirez la poignée à la hauteur requise. Fermez le levier de verrouillage pour fixer la poignée à la hauteur souhaitée. La poignée repose dans une pince en plastique, il suffit de retirer la poignée pour l'utiliser, comme indiqué sur l'image.

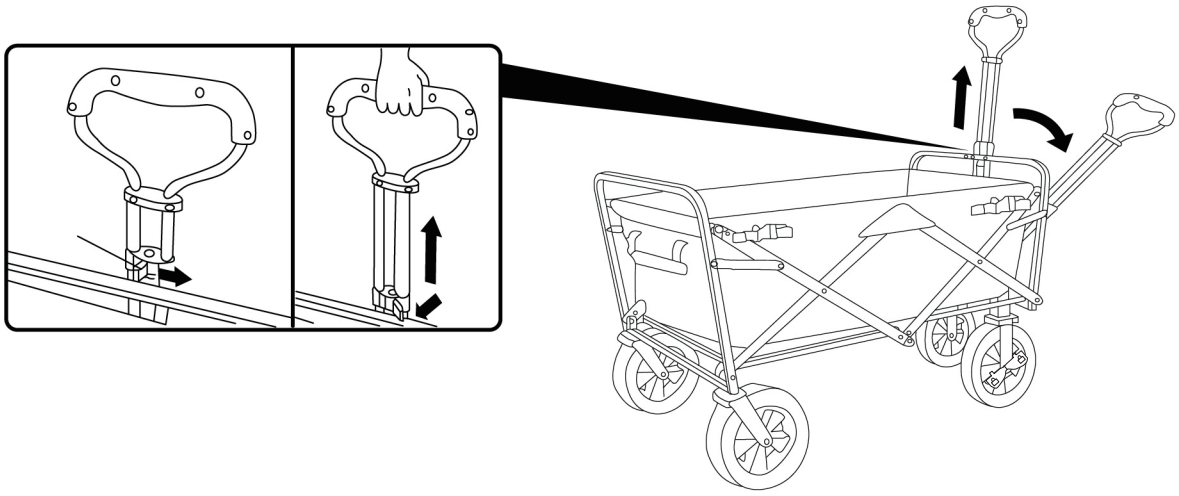

3. Enfin, assurez-vous que le corps textile du chariot est fixé au cadre en acier.
4. Les ceintures sont attachées aux coins et le corps textile est enroulé autour des cadres avant et arrière.
Le crochet et la boucle à l'extérieur du sol ne sont fixés qu'à l'une des barres de support situées sous le chariot (PAS sur le guidon), comme le montre l'image.

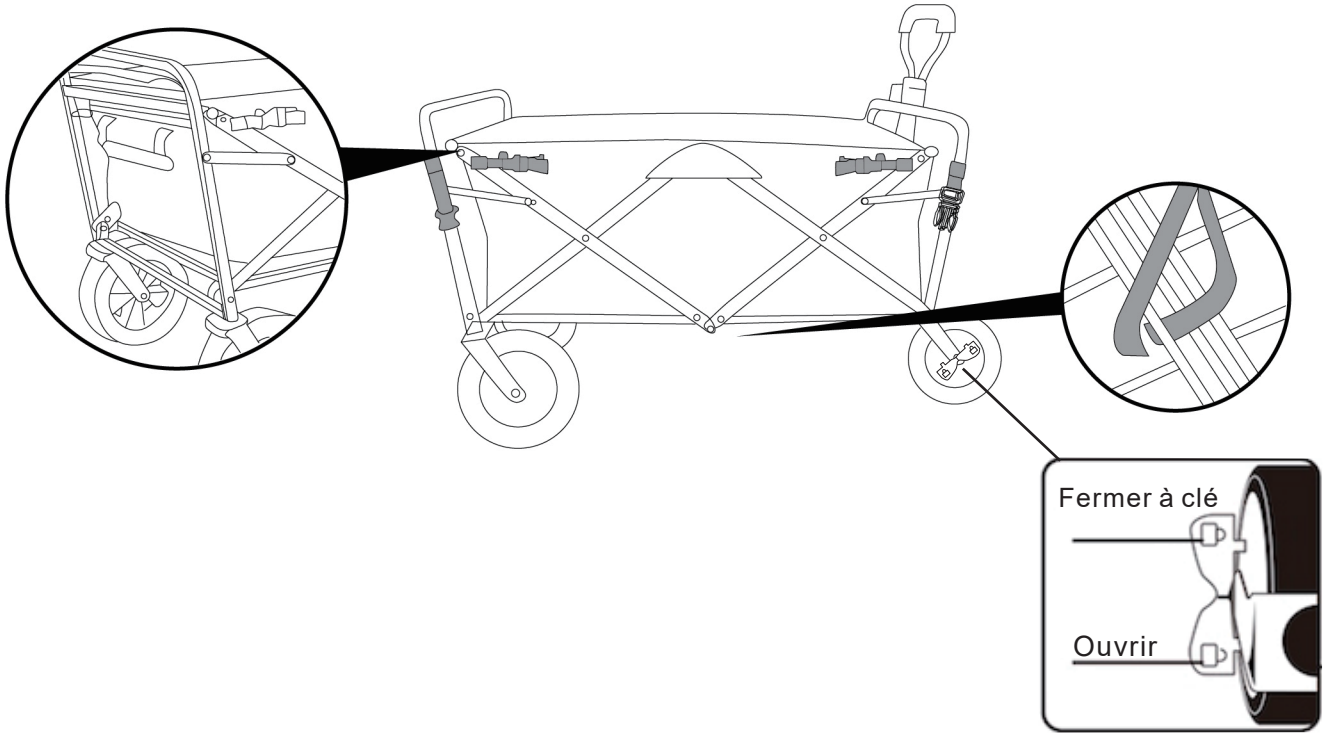

Les roues avant ont des freins

PLIAGE DU CHARIOT:
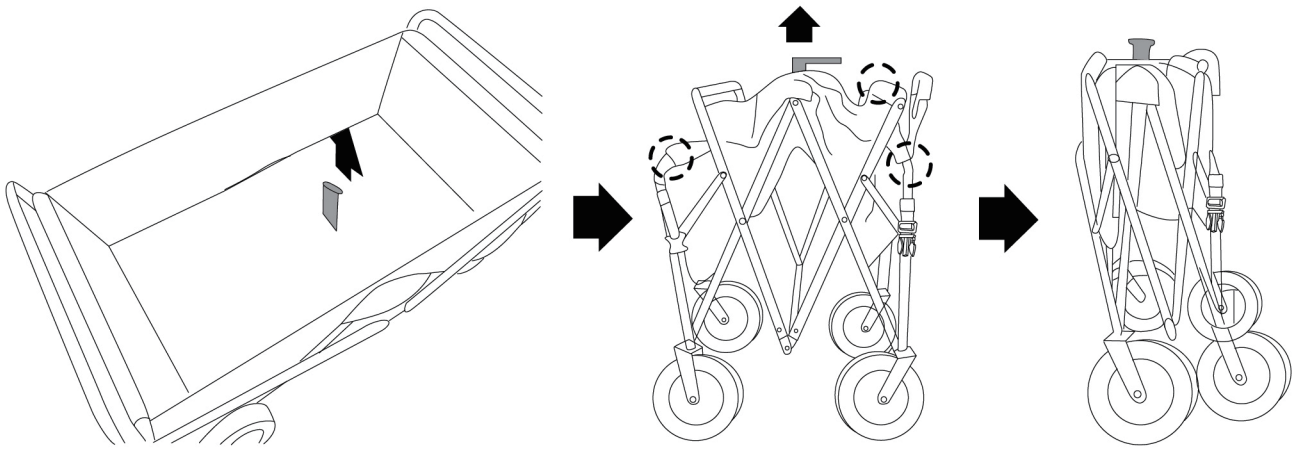
1. Lors du déverrouillage, tirez la plaque de jonction à l'intérieur du milieu du plancher vers le haut.
2. Poussez l'avant et l'arrière du cadre ensemble.
3. Lorsque vous pliez le chariot, veillez à ne pas vous pincer les doigts.
4. Enfin, rangez le chariot dans la mallette de transport.