


USER'S MANUAL TOE TAP TRASH CAN Model TTT-45-8

Introduction

Our electronic toe tap trash cans are designed and created to make dealing with trash cleaner and easier. Our products provide an effortless way to dispose trash, just by a toe tap. It is convenient, reliable, uses low power consumption, sanitary, and has a great look. Slightly tap your foot to touch the control panel (Refer to pic 1) and the lid will automatically open. The lid will close automatically seconds later once you remove your foot from the control area. We use high quality materials and the latest technology in our products to insure reliable function and durability. Your new electronic toe tap trash can is equipped with a lid, liner ring, battery box, base, and power switch (please refer to Pic 2).

Operated by Three(3) of C size batteries
(batteries not included)

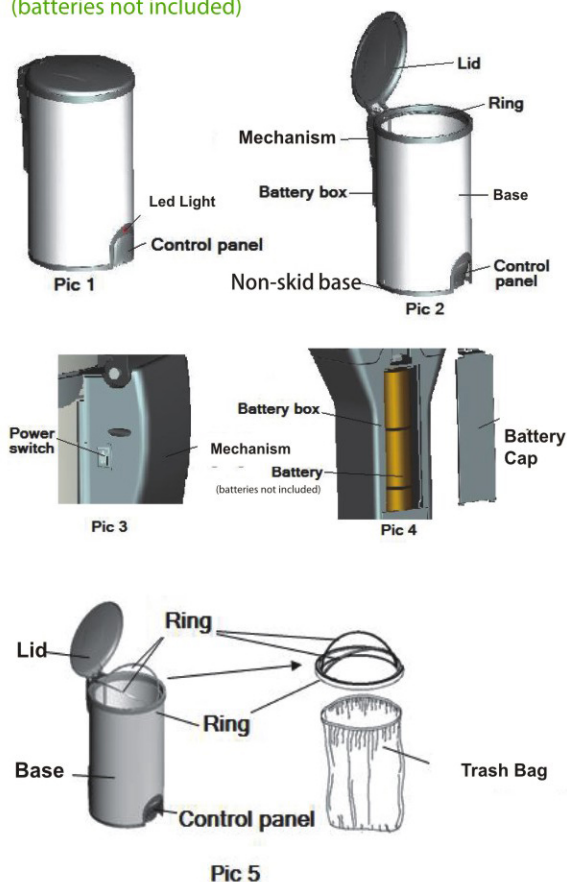

Instructions

1. Insert the batteries: Please turn the power switch to "0" position (Refer to Pic 3). Place 3 "C" size batteries into the battery box (Refer to Pic 4). Then turn the power switch to the "-" position, this will turn on the electronic toe tap trashcan.
2. How to use your trash can: Slightly, tap your foot to touch the control panel (Refer to Pic 1), the lid will open automatically. After putting the trash into the trash can, the lid will automatically close seconds later once you remove your foot from the control panel.
3. Insert trash bag: Insert the trash bag using the liner ring (Refer to Pic 5). Fold the trash bag over the edges of the liner ring. Place the trash bag and the liner ring in the trash container. Tuck the bag completely into the base of the container so that the edges of the bag do not show once the lid is closes on top of the base.
4. LED Light indicators:
 - ① The LED Light will not flash when the power is off.
 - ② The LED Light is green when the lid is opening.
 - ③ The LED Light is flashing in red when the lid is in the closed position.
5. Battery life: If you open and close the lid 20 times every day, battery life is approximately 9 months.

Attention:

1. Do not put the trash can into the water or wash the trash can with water.
2. Don't use water to wash the electronic mechanism at the rear of the base (refer to pic 2 and 4). Please use a damp cloth to clean the surface.
3. Do not close the lid of the trash can when it is opening. Forcing the lid to close while it is opening, may damage the mechanism and gears.
4. Do not use force to kick the control panel.
5. Do not use force to kick or damage the mechanism or any part of the trash can.
6. Do not scratch the trash can surface with sharp or rough objects.
7. Keep the trash can away from high temperature places, or object such as fire.
8. This is not a toy and please keep the trash can away from young children.

Parameters:

- Voltage: DC4.5V
- Static current: <0.02mA
- Working current 200mA

Limited Warranty

WHAT DOES THIS WARRANTY COVER?

- This warranty covers the electronic mechanism of the lid such as the computer chip, motor, gear box and electrical circuits. This warranty covers manufacture defect ONLY

HOW LONG DOES THE COVERAGE LAST?

- This warranty runs for one (1) year from the date of purchase.

WHAT WILL NINE STARS GROUP DO?

- Nine Stars will fix or replace any defective or malfunctioning electrical part of the **mechanism**.
- Customer is responsible for the cost of return shipment of the defective item.

(Only valid for 48 continental states of United States consumers. Out the this 48 states, the company will not cover any of shipping, handling or duty charge.)

WHAT DOES THIS WARRANTY NOT COVER?

- Battery caps, liner rings, inner bucket (if applicable) , or any problems that is caused by abuse, misuse, or an natural disaster (such as earthquakes, floods, and fires) are not covered. Also, consequential and incidental damages are not recoverable under this warranty.
- Warranty does not cover attempts at repair or the use of unauthorized attachments.
- This warranty only cover regular sales channel, any auction, clearance, return resold, refurbish products will not covered.

HOW DO YOU GET SERVICE?

- By Mail: In order to be eligible for service under this warranty PLEASE return the warranty registration card attached with a proof of purchase (such as a photocopy of original sales receipt).
- By Phone: If you have any technical questions or problems please feel free to call our office at:
1-866-9STARS-8, M-F, 9:00am to 5:30pm PST
- By Internet: Please visit our official web site
www.ninestarsusa.com for more warranty information

Instruction :

- a. Always purchase the correct size and grade of battery most suitable for the intended use.
- b. Replace all batteries of a set at the same time.
- c. Clean the battery contacts and also those of the device prior to battery installation.
- d. Ensure the batteries are installed correctly with regard to polarity (+ and -).
- e. Remove batteries from equipment with is not to be used for an extended period of time.
- f. Remove used batteries promptly.

Warranty 11TTT

Please Keep A Record of This Warranty Card # for Your Future Reference

Nine Stars Group (USA) Inc.
WARRANTY REGISTRATION

Please complete information below. Then mail form to the address below. Please complete and mail within 30 days of possession. Please enclose a PHOTOCOPY of original sales receipt.

WARRANTY REGISTRATION 11TTT

(Please Print Clearly)

Name: _____

Address: _____

City: _____ State: _____ Zip code: _____

Date of Purchase: _____ Telephone: _____

Purchased from: _____

Model: Toe Tap Trash Can (Model #: TTT-45-8)

UPC # (located under bar code on the packaging): _____

Nine Stars Group (USA) Inc.

Attn: Warranty Registration

1929 Mount Vernon Ave., Pomona, CA 91768

OPTIONAL

Would you like to hear more about our products ?

Yes No

Please write some your value comments:

Garantía

Tenga una copia de su registro para su referencia futura.

Nine Stars Group (USA) Inc.

REGISTRO DE GARANTIA

Por favor llene la information abajo. Manda la entre 30 dias de la compra. Encierre por favor una copia del recibo original de ventas.

REGISTRO DE GARANTIA

(Por favor impresión Claramente)

Nombre: _____

Dirección: _____

Ciudad: _____ Estado: _____

Código postal: _____

Fecha de la Compra: _____

Teléfono: _____

Comprado de: _____

Modelo : TTT-45-8

Código de producto universal # (UPC): _____

Nine Stars Group (USA) Inc.

Attn: Warranty Registration

1929 Mount Vernon Ave., Pomona, CA 91768

OPCIONAL

¿Quería usted oír más acerca de nuestros productos? ☐ Sí ☐ No

por favor escribir algunos de sus comentarios valorados

NINESTARS

Nine Stars Group (USA) Inc.
1929 Mount Vernon Ave., Pomona, CA 91768
www.ninestarsusa.com

numero de servicio gratuito: 1-909-620-8877

Garantía limitada

¿QUÉ CUBRE ESTA GARANTÍA?

- Esta garantía cubre el mecanismo electrónico de la tapa como la ficha, el motor, caja de cambios y circuitos eléctricos. esta garantia cubre unicamente defecto de fabricacion

¿CUÁNTO DURA LA GARANTÍA?

- Esta garantía es válida un año de la fecha de la compra.

¿Qué acciones tomara Nine Stars Group (USA) Inc.?

- Nine Stars reemplazara o reparara la tapa defectuosa.

- El cliente es responsable de devolver la tapa defectosa (la tapa entera) a Nine Stars Group (USA) Inc. El cliente es También responsable de los cargos de envío de la tapa defectuosa a Nine Stars Group (USA) Inc. Nine Stars Group (USA) Inc. pagara los cargos de envío de la tapa reemplazada al cliente si está cubierta bajo nuestro programa de garantía detallada en este documento. Esta garantia solo cubre las ventas regulares

¿QUÉ NO CUBRE LA GARANTÍA?

- La base de la unidad, las tapas de batería, anillo interno (si es aplicable), recipiente Interior (si es aplicable), o ningún problema con la tapa automática causada por el Abuso, por el maltrato, o por los desastres naturales (como terremotos, inundaciones, y los fuegos) no son cubiertos.

- La Garantía es invalida si se cree que se intento reparar el producto por alguien fuera de Nine Stars Group (USA) Inc.resultando en danos de la tapa automática del basurero.

¿CÓMO SE CONSIGUE EL SERVICIO DE GARANTÍA?

- Por correo: Para tener derecho del servicio bajo esta garantía POR FAVOR devolver la tarjeta de garantía incluida al su basurero con una copia del comprobante de compra (como una copia del recibo original de ventas) dentro de 30 días de la compra.

- Por telefono: Si usted tiene alguna pregunta o problemas técnicas por favor siéntase libre de Llamar a nuestra oficina al: 1-866-978-2778, M-F, 9:00am to 5:30pm PST

- Por internet: Por favor visite nuestro sitio web oficial

www.ninestarsusa.com para mas informacion sobre la garantia

Instruccion :

- 1.Compre siempre el tamaño de la bater í a correcta y el tipo de bater í a.
- 2.Vuelva a colocar el conjunto de bater í as al mismo tiempo.
- 3.Antes de instalar las bater í as, aseg ú rese de que los contactos de la bater í a y los contactos en el compartimiento de la bater í a est á n limpios.
- 4.Aseg ú rese que las bater í as est á n instaladas correctamente en lo que respecta a la polaridad (+ y -).
- 5.Retire las pilas del equipo con que no se va a utilizar durante un largo per í odo de tiempo.
- 6.Retire las pilas viejas con prontitud.

Instrucción:

1. Inserta las baterías: Por favor de poner el interruptor de poder a “0” posición (referir a la foto 3.). Ponga 3 “C” baterías adentro de la caja de baterías (referir a foto 4.). Después ponga el interruptor de poder a “-” posición, esto prendera el sensor del basurero.
2. Como usar el basurero: Lentamente toque con el pie en el panel de control (referir a foto 1). La tapa se destapar automáticamente. Después de poner la basura en el basurero, la tapa automáticamente cerrara en 3 segundos.
3. Colocar bolsa de basura: Ponga la bolsa de basura usando el anillo del basurero (referir a foto 5.). Doble la bolsa de basura por las horillas bel anillo. Inserte la bolsa y el Anillo en el basurero. Oprímela la bolsa completamente hasta el fondo del basurero asegure la bolsa completamente hasta el fondo del basurero, and leave the rest of the sentence para que las esquinas de la bolsa no se mire cuando la tapa sierre.
4. Indicador de LED (Luz):
 - ①LED no parpadea cuando el basurero esta en re-puesto ;
 - ②LED es verde cuando la tapa está abierta ;
 - ③LED es rojo cuando la tapa está cerrada, La luz LED parpadea rojo cuando la tapa está en posición de cerrar.
5. Tiempo de vida de la batería: Si abre y cierra la tapa 20 veces al día la batería durara aproximadamente 9 meses.



Atención :

1. No use agua para lavar el aparato trabajador de atrás del basurero (referir a la foto 2-4.). Por favor de usar un trapo húmedo para limpiar el basurero. (Referir a la foto 6).
2. No trate de cierre la tapa del basurero cuando está abriendo. Forzar la tapa que cerré puede dañar el motor o cambios del sistema.
3. Si la tapa no está abriendo correctamente a la posición máxima y no sierra bien, apague el basurero, quite las baterías y deje lo por 24 Horas, después ponga de nuevo las baterías y prenda lo de nuevo.
- 4.No utilice la fuerza para abrir el panel de control.
5. No le dé patada o use fuerza al panel de control con su pie, oh puede dañar el panel de instrumentos.
6. No raspe el basurero con objetos a filados
7. No ponda el basurero cercas de temperatura alta
8. Esto no es un juguete por favor no deje ninos que abusen uso.

Parameters:

Voltaje: DC4.5V Corriente estadístico : <0.02mA

Corriente trabajando: 200mA