ASSEMBLY INSTRUCTIONS

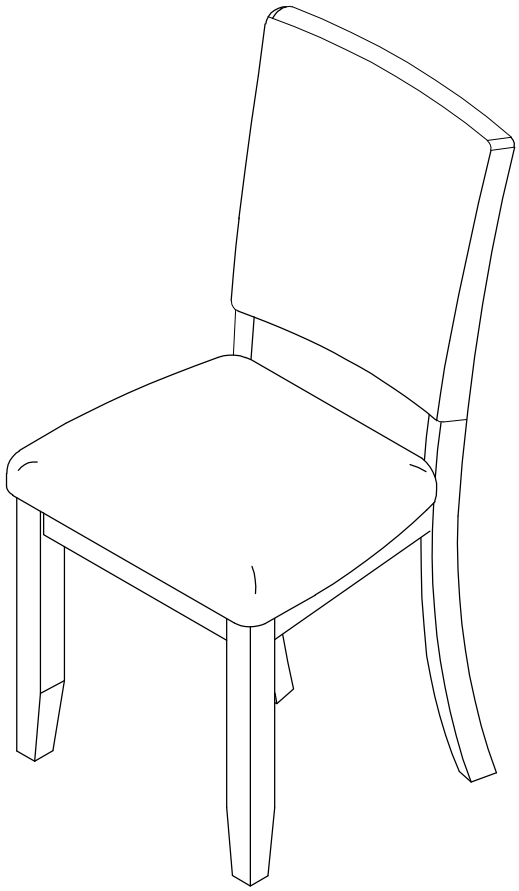

TOOLS REQUIRED

Screwdriver
(Not included)



Allen Wrench

2 - People

ASSEMBLY RATING

EASY ⟶ DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

CHECK BEFORE STARTING

- [ ] **Are you missing anything?**

  Double-check all parts, hardware and accessories listed are all acccounted for.

- [ ] **Should we send any replacements?**

  Are there any irregularities or flaws in the parts? We can send replacements!

- [ ] **Check out our Quick Tips!**

  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

- [ ] **Prep Time!**

  Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

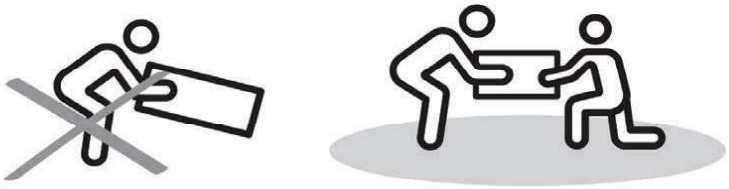

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

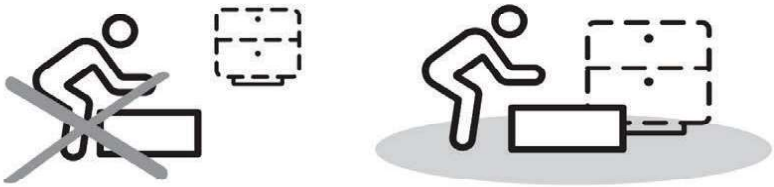

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

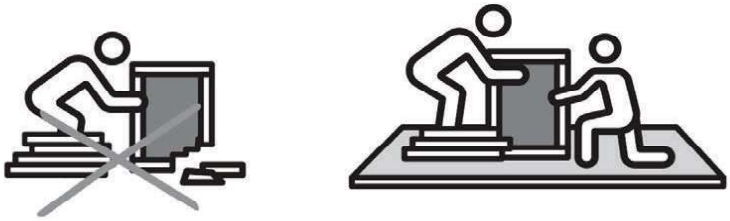

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

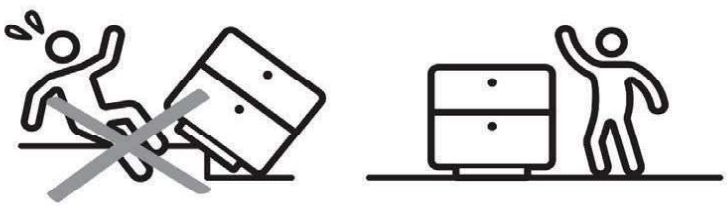

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE

FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

Position each part correctly and insert screws or bolts into their respective holes.

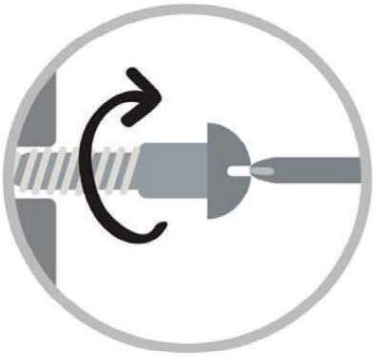

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

SIDA CHAIR

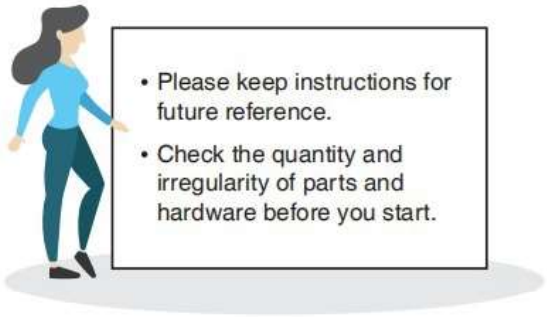

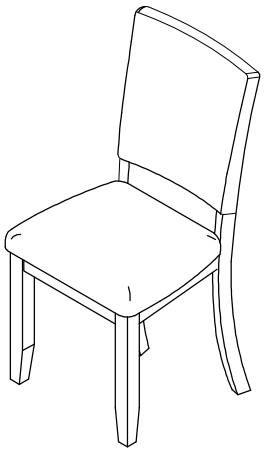

PARTS

1

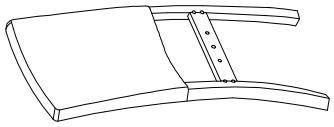

BACK FRAME
WITH CUSHION
1 x 4 pcs.

2

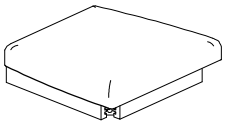

SEAT FRAME
WITH CUSHION
1 x 4 pcs.

3



FRONT LEGS
2 x 4 pcs.

HARDWARE

A



BOLT
Ø1/4" x 3"
4 x 4 pcs.

B



BOLT
Ø1/4" x 2-1/4"
4 x 4 pcs.

C



BOLT
Ø1/4" x 1-3/8"
2 x 4 pcs.

D

SPRING WASHER
Ø1/4"
10 x 4 pcs.

E

FLAT WASHER
Ø1/4"
10 x 4 pcs.

F

ALLEN WRENCH
M4
1 x 4 pcs.

ASSEMBLY INSTRUCTIONS

1

DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ASSEMBLY IS COMPLETED.

Part 3 x2pcs
Hardware B x4pcs
Hardware D x4pcs
Hardware E x4pcs

x4

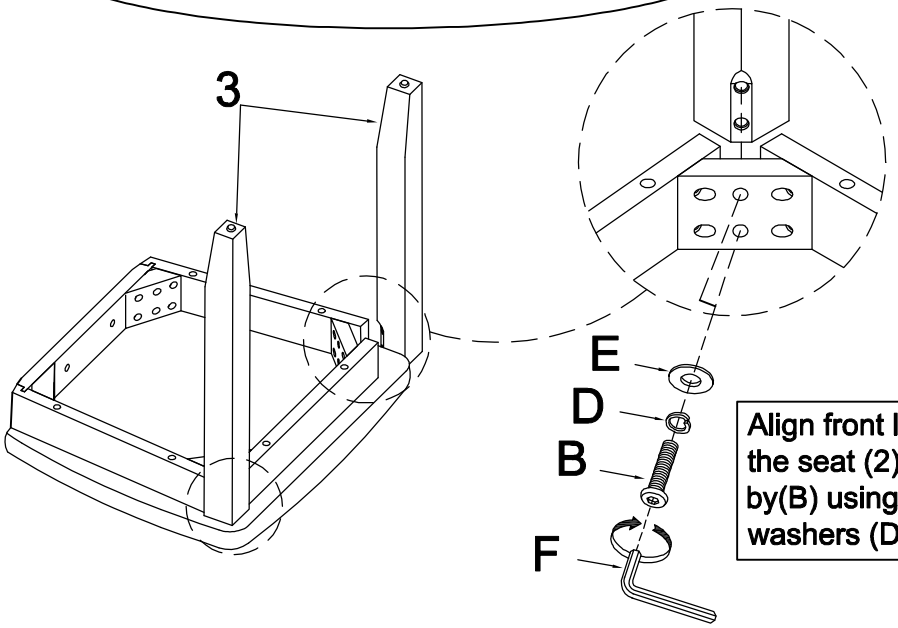

Align front legs (3) to the seat (2) then secure by(B) using bolts with washers (D,E).

2

DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ASSEMBLY IS COMPLETED.

Part 1 x1pc
Part 2 x1pc
Hardware A x4pcs
Hardware C x2pcs
Hardware D x6pcs
Hardware E x6pcs

x4

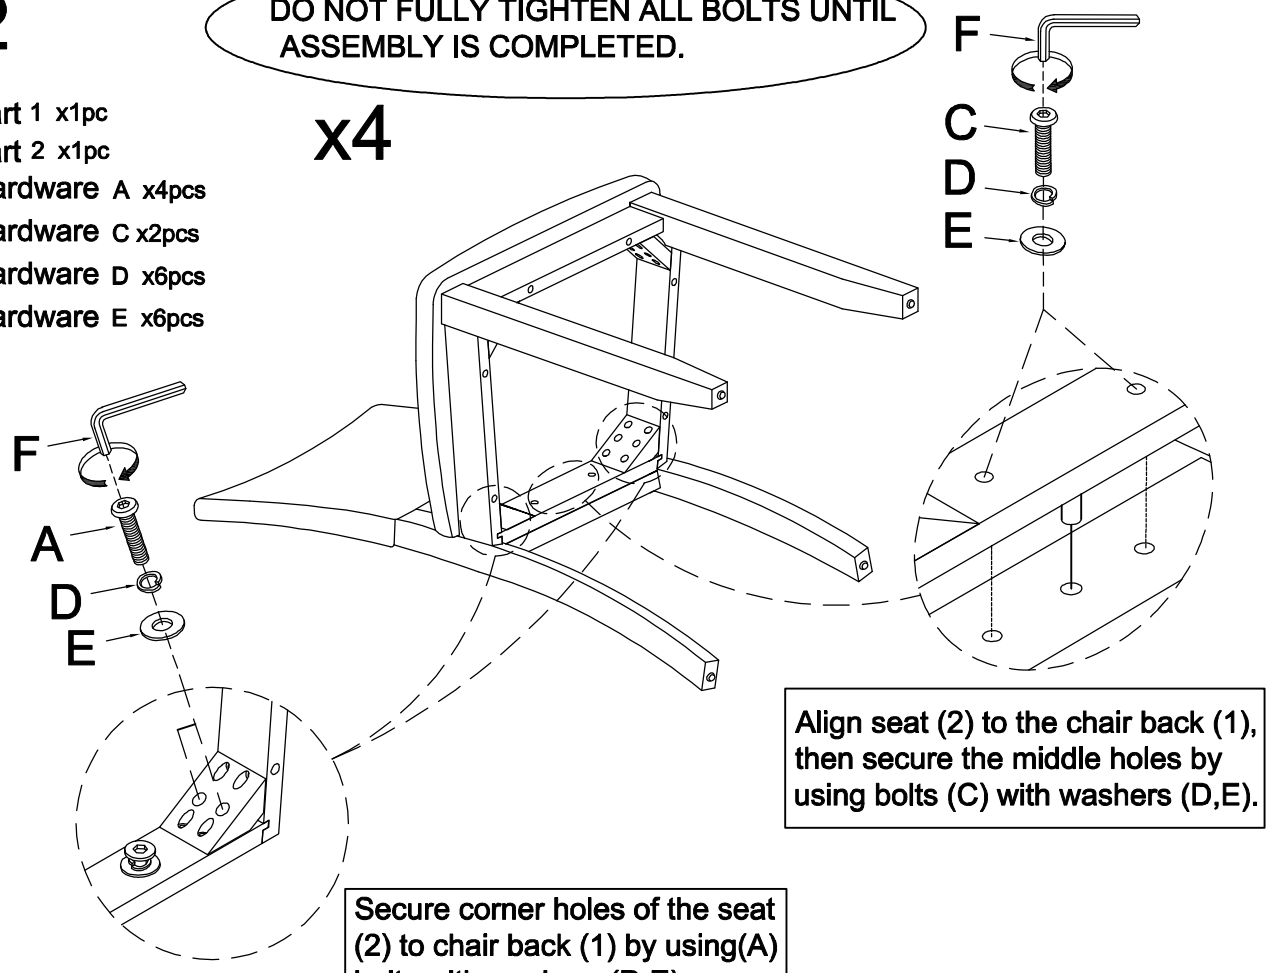

Align seat (2) to the chair back (1), then secure the middle holes by using bolts (C) with washers (D,E).

Secure corner holes of the seat (2) to chair back (1) by using(A) bolts with washers (D,E).

ASSEMBLY INSTRUCTIONS

3

x4

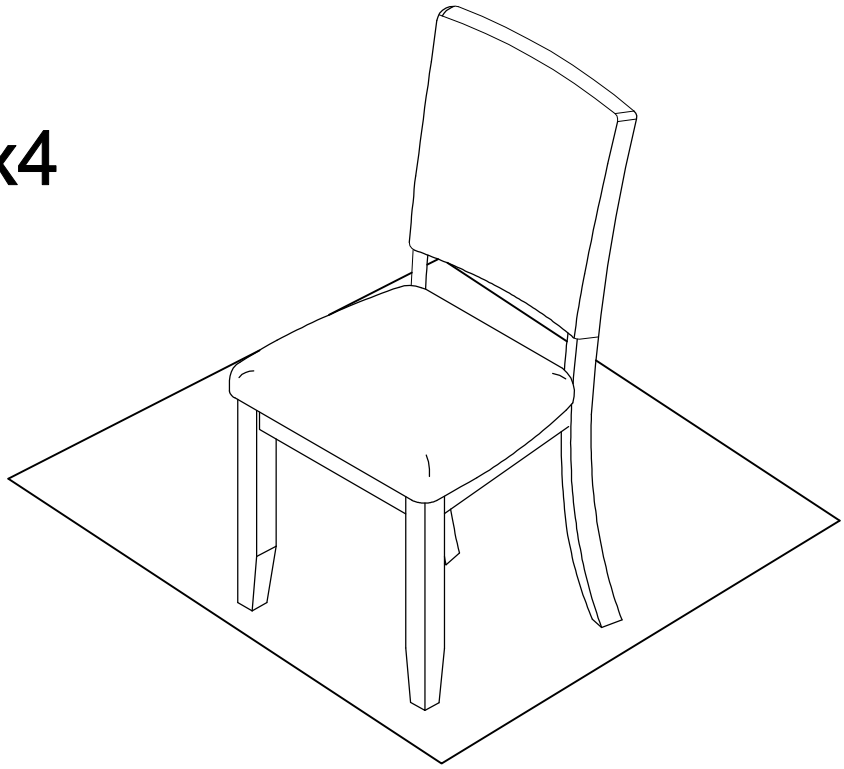

Place the chair on a flat surface, ensure it is stable and not wobbling, and then tighten all screws

---

4

x4

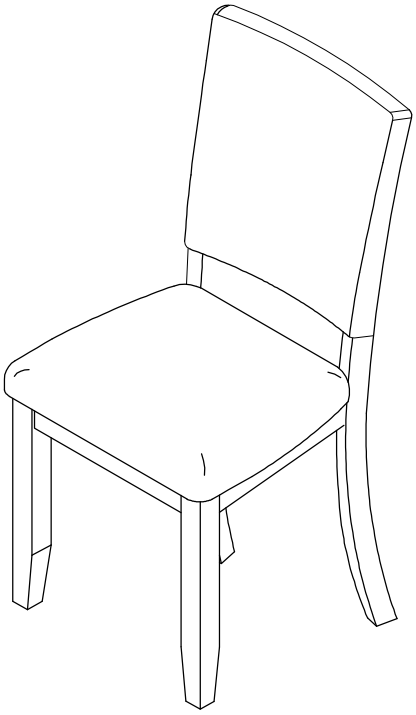

ASSEMBLY COMPLETED

Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.