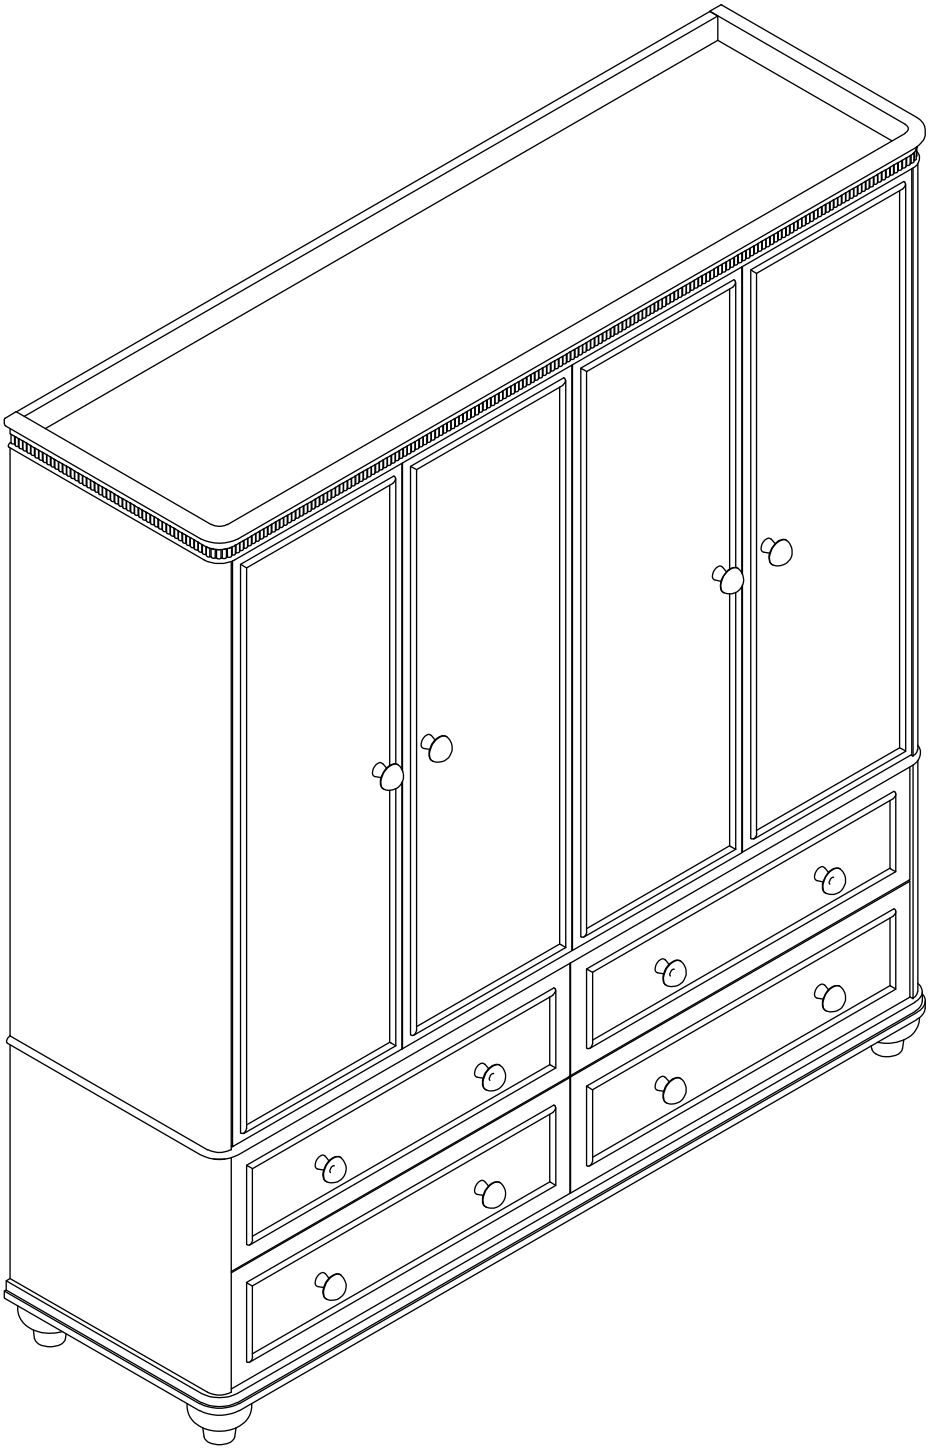


Assembly Instructions & Care Guide

Illustrations in this guide are for reference only and may differ slightly from the actual product

CONTENT

Before You Start

Overview 01
Caution 01
Material Specifications 01

Installation Guide

Exploded Views 02
Component Parts 03-04
Hardware 05
Assembly Directions 06-26
Troubleshoot 27-31

Usage and Maintenance

Use and Care 32

Other

Help Center 33

Before You Start

Overview

1. Check and ensure you have received all packages and necessary parts.
2. Prepare adequate assembly space. We recommend using pads or cardboard to prevent the floor from scratches.
3. Read the instructions to familiarize yourself with the assembly requirements. Allow sufficient time and have someone available to assist you if needed.
4. Place all hardware on a soft surface for easy identification.
5. The seller is not responsible for any damage or injury caused by improper assembly or use.
6. If you need further assistance, please contact us

Caution

1. Children must not assemble this product. During assembly, keep small parts away from children as swallowing or inhaling them could be fatal.
2. Do not allow children to stand, climb, or play on the product, as it may tip over and cause serious injury.
3. Keep plastic packaging bags away from children to prevent risks of suffocation.
4. Avoid sharp objects and corrosive chemicals to prevent product damage or personal injury


Material Specifications

Solid Wood


Natural grains, scars, and color variations are inherent in real wood, which contribute to its unique beauty. Slight color changes may occur under different lighting and angles, due to variations in wood grain and light intensity.

Marble and Engineered Stone


Each marble and engineered stone piece has a unique pattern. Due to the nature of the materials, the pattern may differ from the one you see when purchasing.

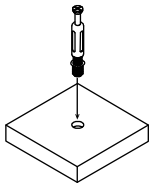


1. Install the screw rod




2. Tighten the screw rod clockwise

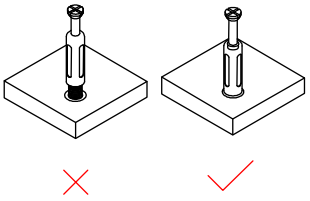


3. Pay attention to tightening the screw rod

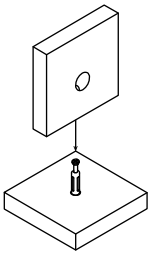

4. Installation plate

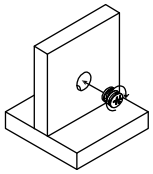


5. Align the arrow of the eccentric component with the screw rod

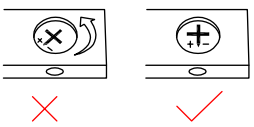

6. Pay attention to aligning the arrow of the eccentric part with the screw rod


Installation Guide

Exploded Views

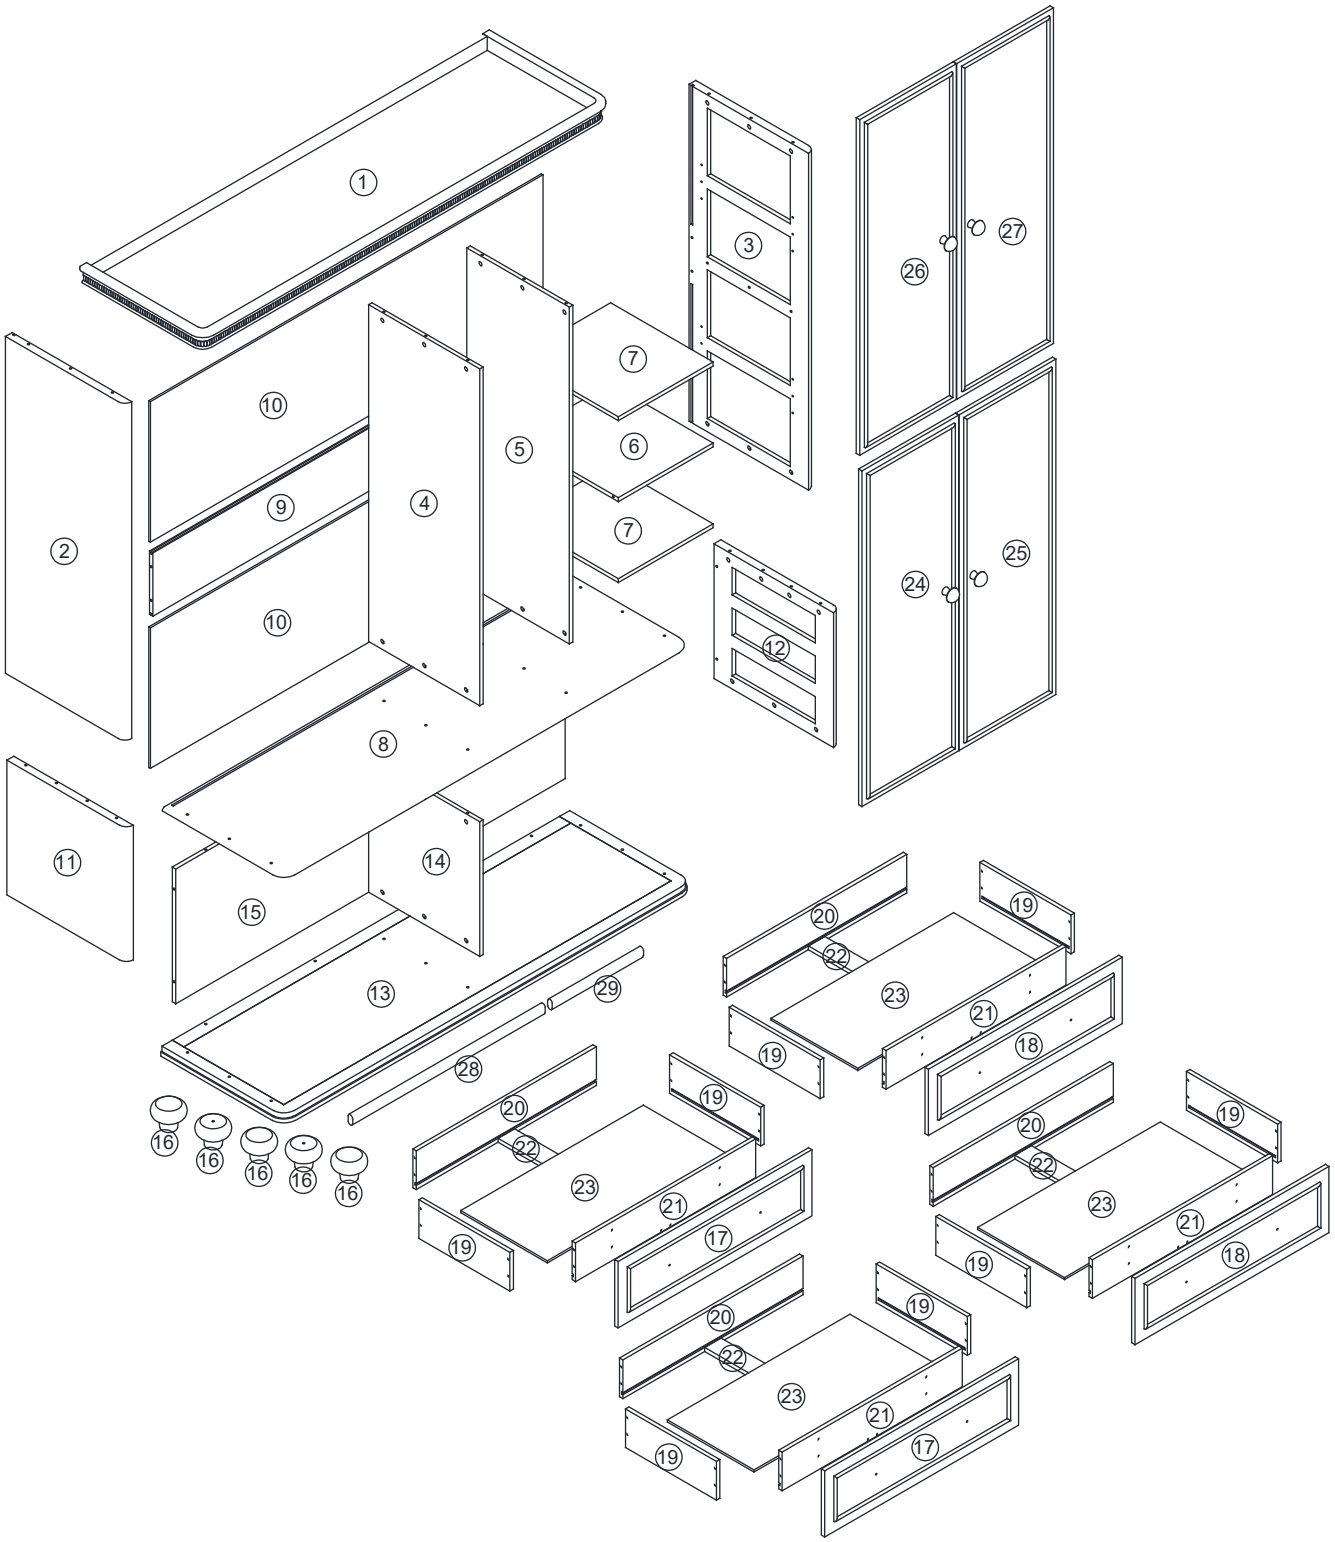


Installation Guide


① X1 ☐

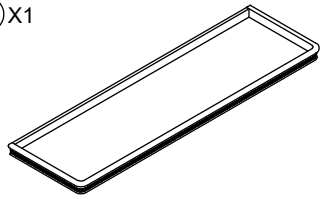


② X1 ☐

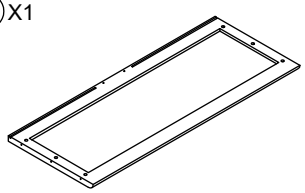


③ X1 ☐

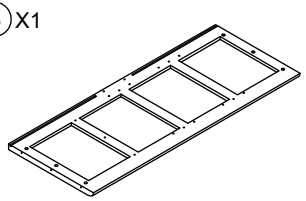


④ X1 ☐

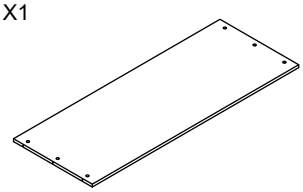


⑤ X1 ☐

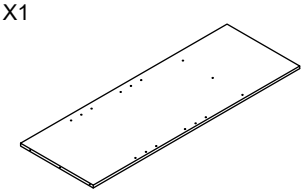


⑥ X1 ☐

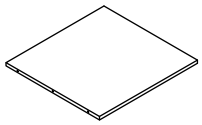


⑦ X2 ☐

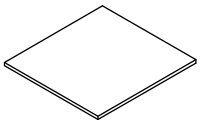


⑧ X1 ☐

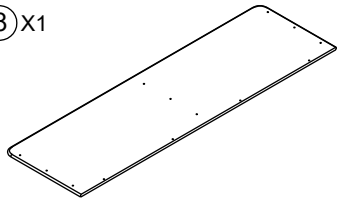


⑨ X1 ☐

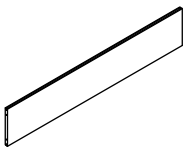


⑩ X2 ☐

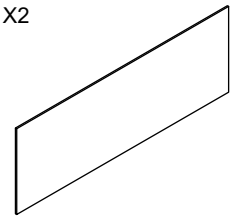


⑪ X1 ☐

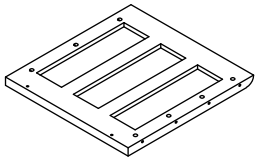


⑫ X1 ☐

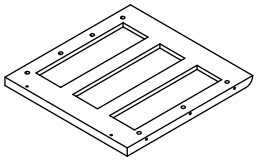


⑬ X1 ☐

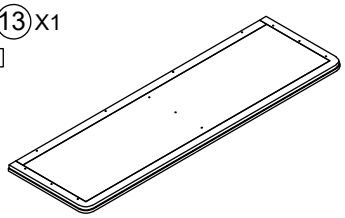

⑭ X1 ☐

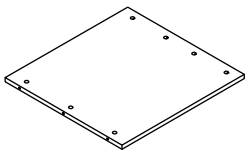


⑮ X1 ☐

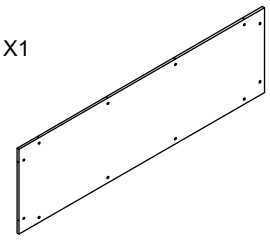


⑯ X5 ☐



⑰ X2 ☐

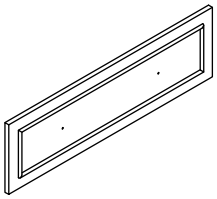


⑱ X2 ☐

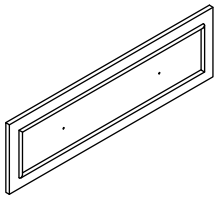


Installation Guide


⑲ X8 ☐

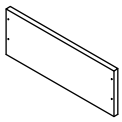


⑳ X4 ☐

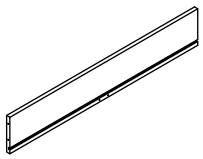


㉑ X4 ☐

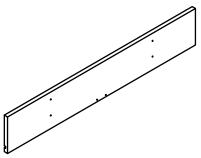


㉒ X4 ☐




㉓ X4 ☐

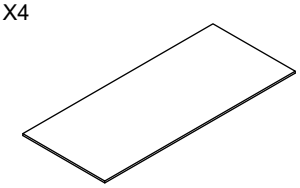


㉔ X1 ☐

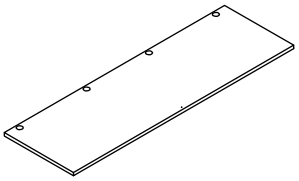


㉕ X1 ☐

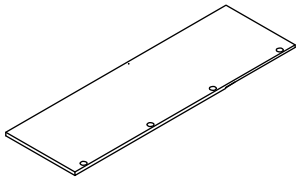


㉖ X1 ☐

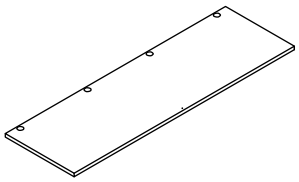

㉗ X1 ☐

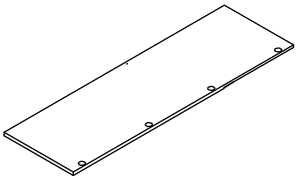

㉘ X1 ☐




㉙ X1 ☐



Hardware

Ⓐ X67+6 ☐



Ⓑ X67+6 ☐



Ⓒ X176+17 ☐




Ø3.5*14


Ⓓ X8 ☐



Ⓔ X8 ☐

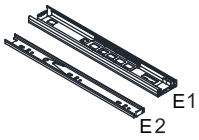

Ⓕ X50+5 ☐



Ø4*30

Ⓖ X12 ☐



M4*16

Ⓗ X12 ☐



Ⓘ X1 ☐



M4

Ⓙ X16 ☐




M6*20

Ⓚ X4 ☐



Ⓛ X8 ☐




Ø3.5*16

Ⓜ X8 ☐



Ø35

Ⓝ X8 ☐



Ø35

Ⓞ X5 ☐




M8*40

Ⓟ X5 ☐



Ⓠ X8 ☐

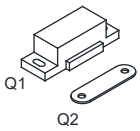


Ⓡ X2 ☐




Install your new product with care, following the instructions step-by-step. Do not skip any steps. Care-fully distinguish between left and right components. Do not over-tighten screws or use power tools, as this may damage the product.

Tools You May Need

*You might need a screwdriver (+/-) to complete this assembly.

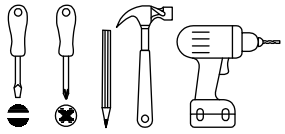


Persons and Time Needed For Assembly

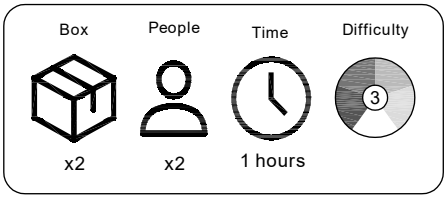


SIIdes Must be Separated Before Assembly.
After Separated,Set Aside Until Needed for Assembly.


Las diapositivas debensepararse antes del montaje.
Despu! s delaseparadi$n,d! jelo a un lado hasta que sea necesario.

Les glissi&res doivent etres! par! es avant tassemblage.
Apr&s las! paration,mettez dec(t! jusqu'au moment deiassemblage.

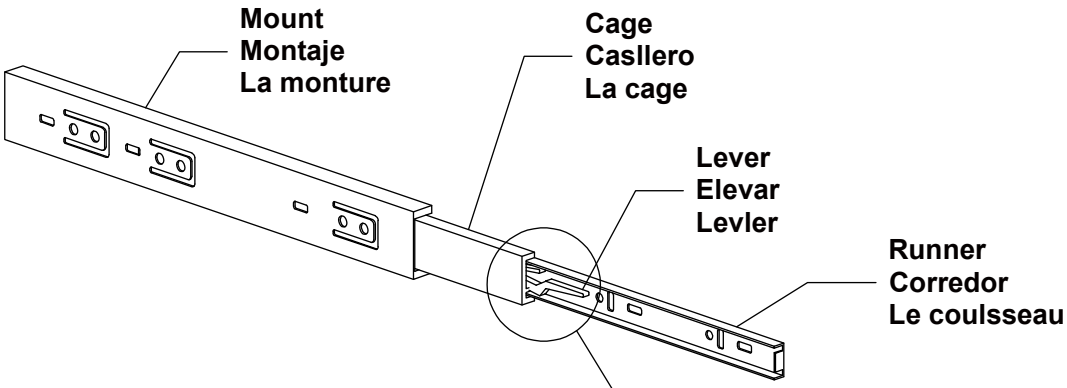


Step 1: Extend sllde
Extender la dapositiva
Extendre la dapositive

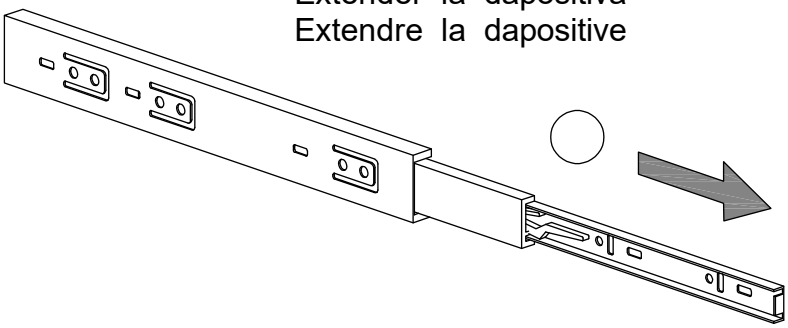

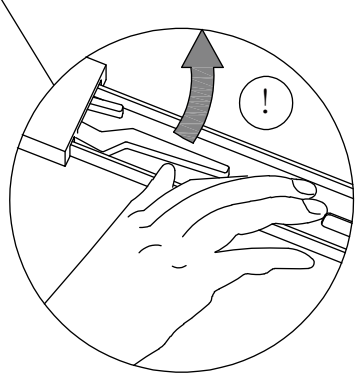

Step 3: RemoveRunner
Quitar el corredor
Enlever le coureur


Step 2: Push Lever Up
Empujar hacia arriba
Lewer le levir

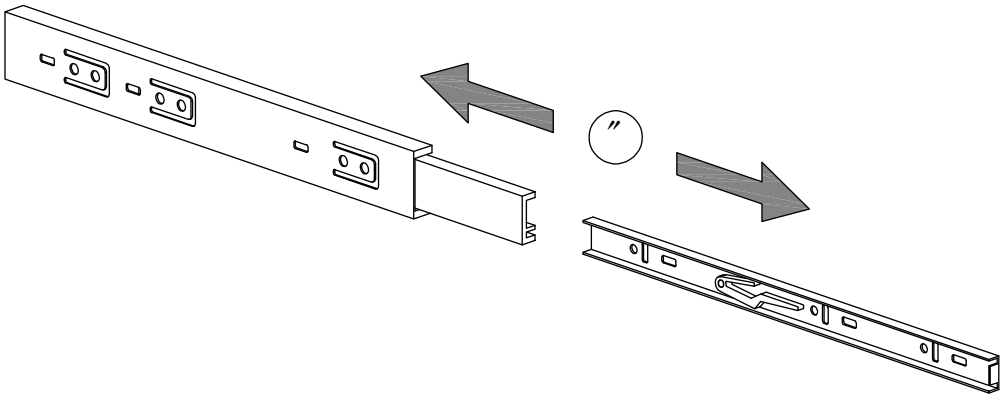

Assembly Directions


Step 1

ⓄX5

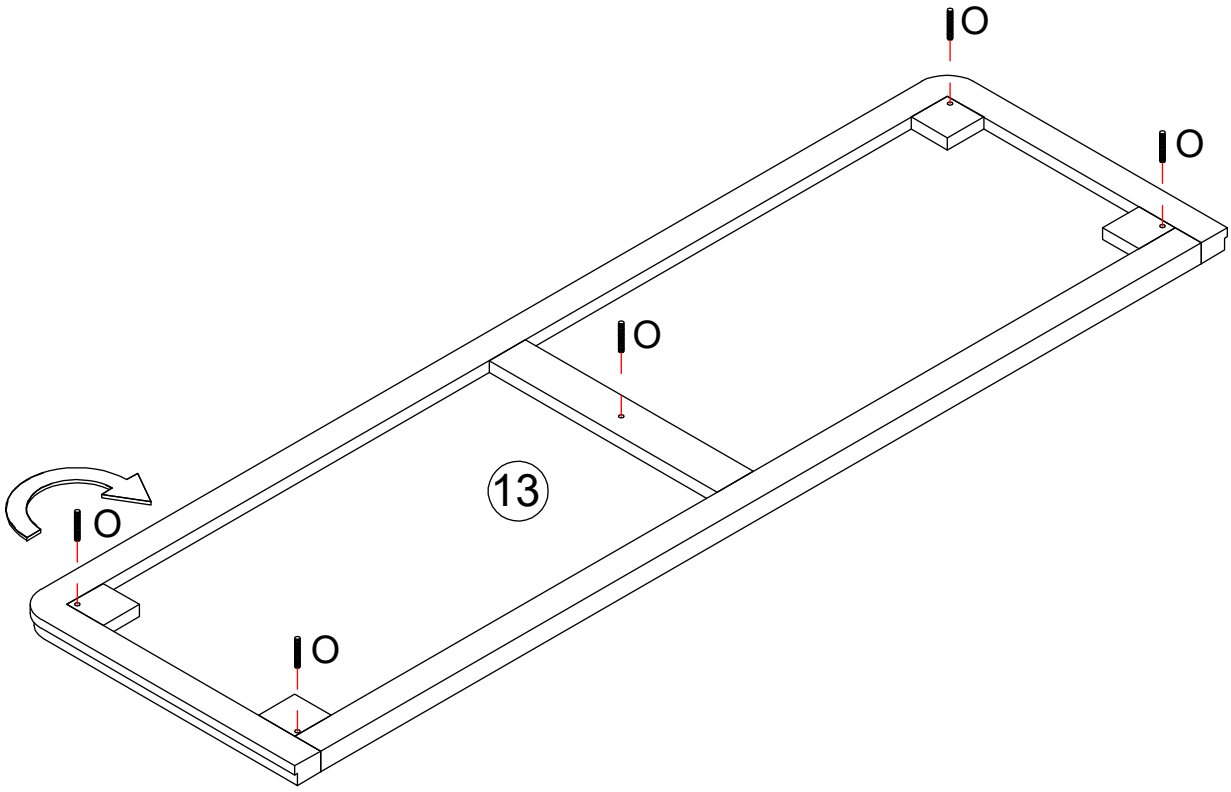

Step 2

ⓅX5

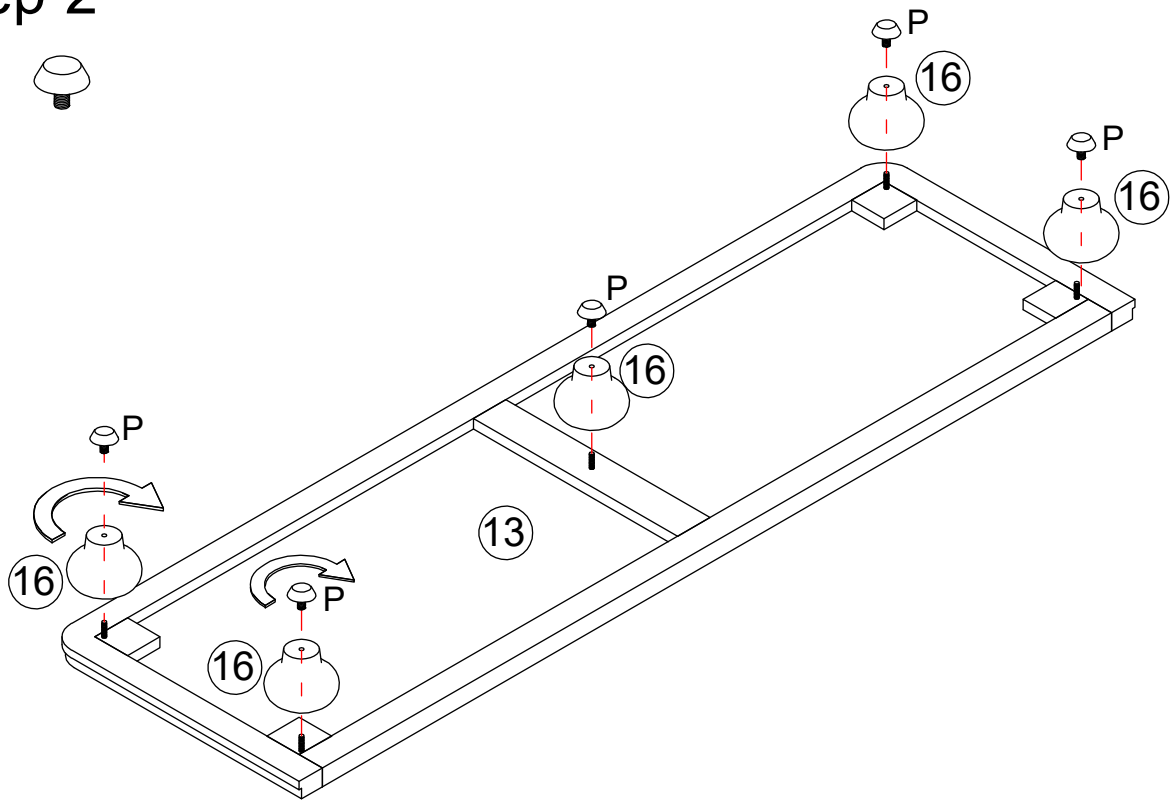


Assembly Directions

Step 3

Ⓐ X4


Ⓔ X4

Ⓒ X12 Ø3.5*14

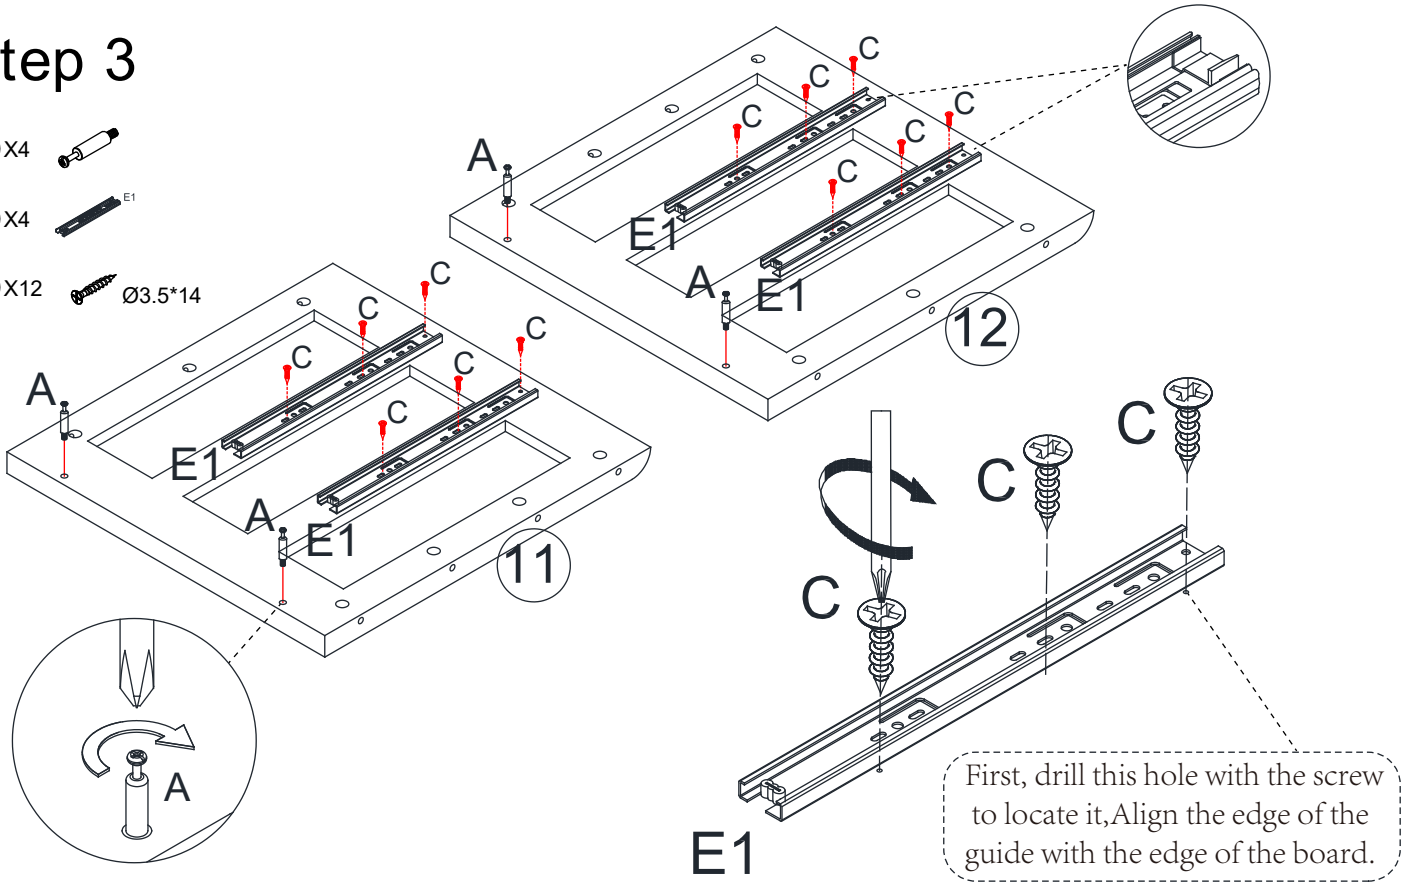

Step 4


Ⓑ X4

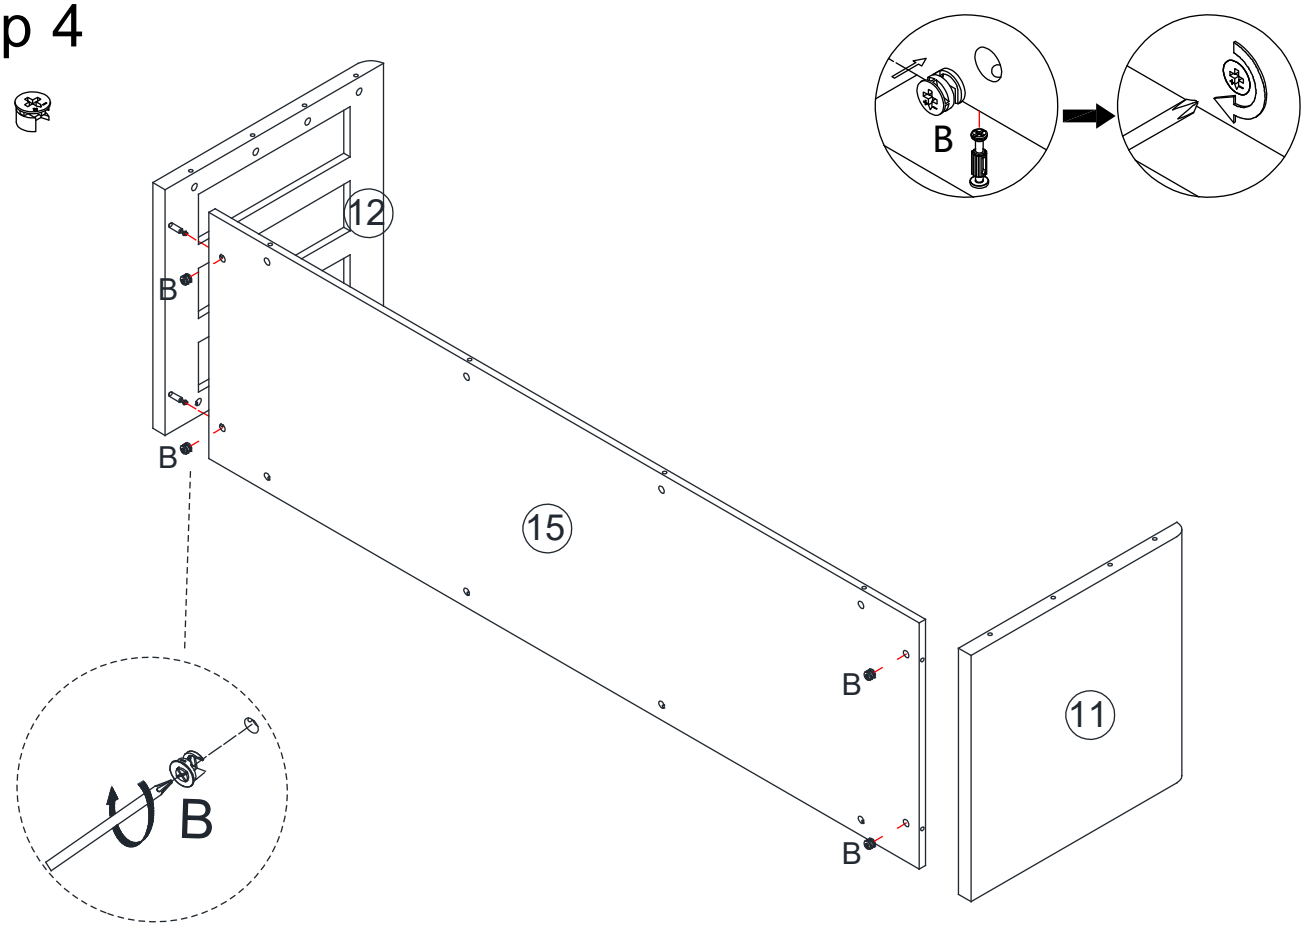

Assembly Directions


Step 5

Ⓐ X13 

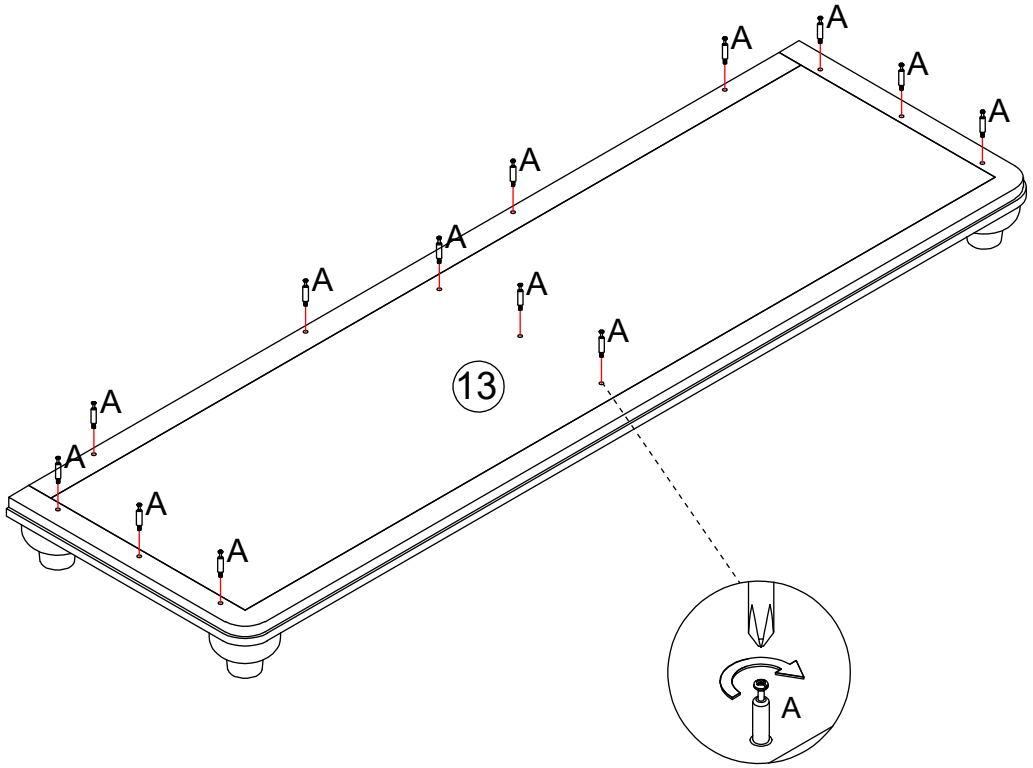

Step 6

Ⓑ X10 

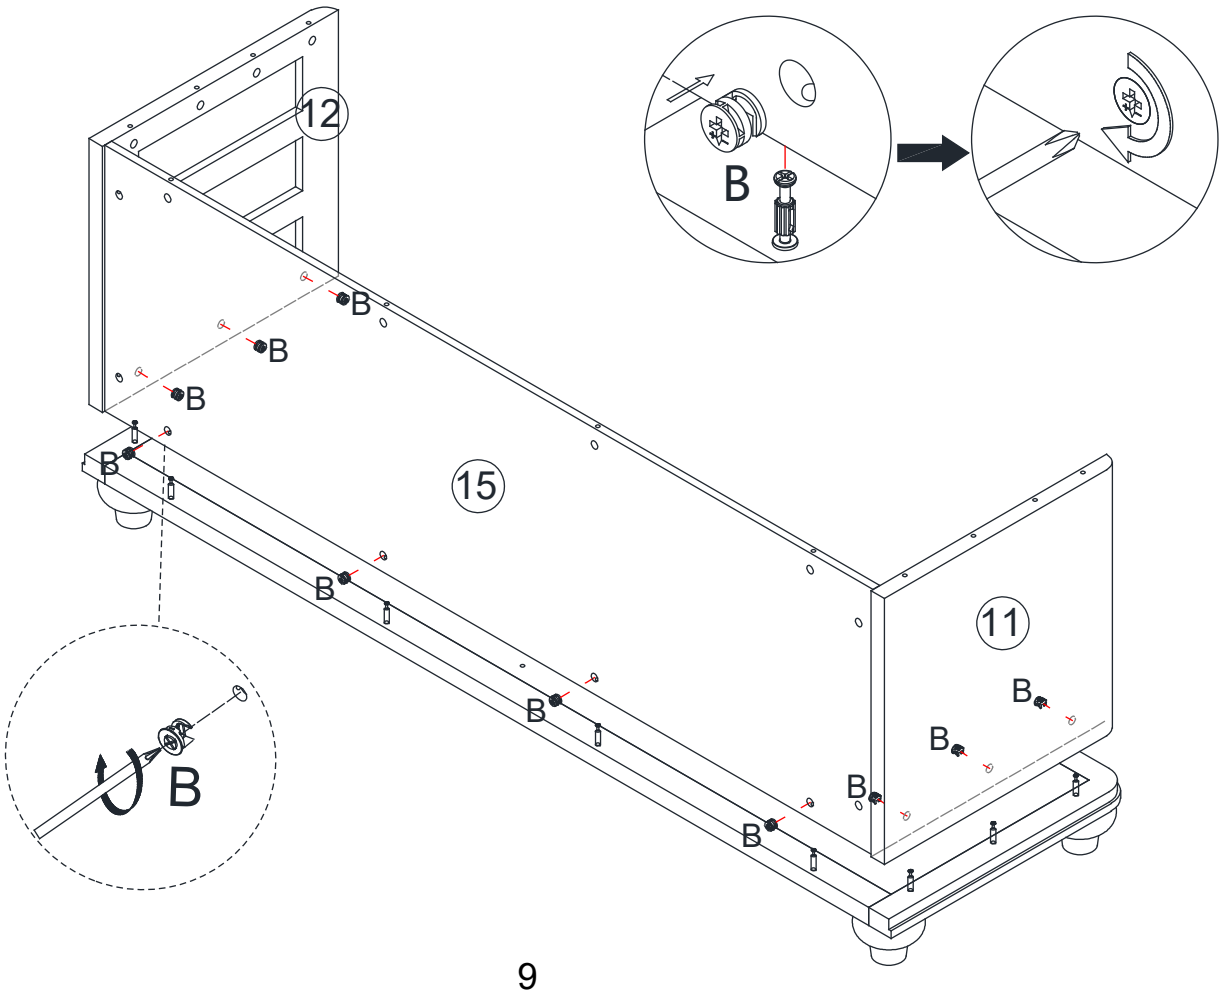


Assembly Directions

Step 7


Ⓔ X4 

Ⓒ X12  Ø3.5*14

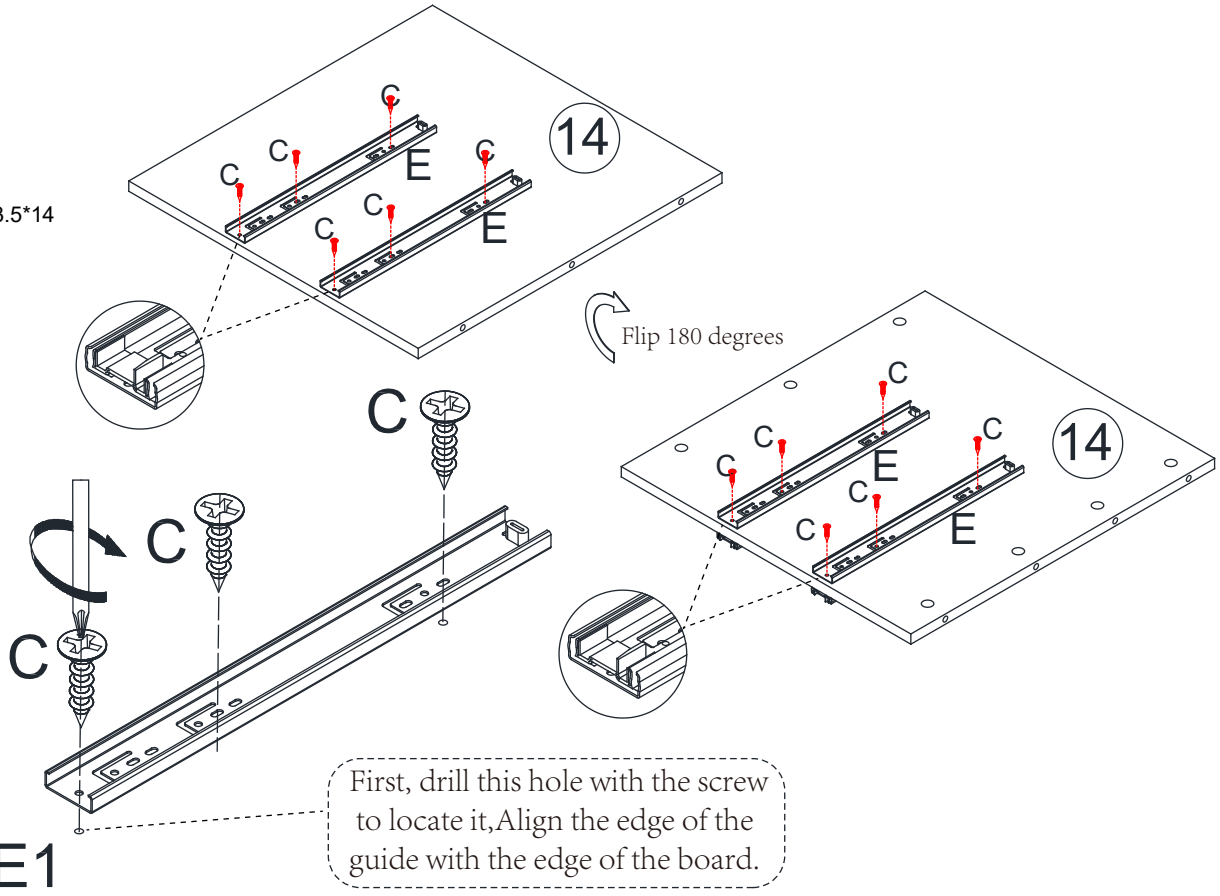

Step 8

Ⓑ X3 

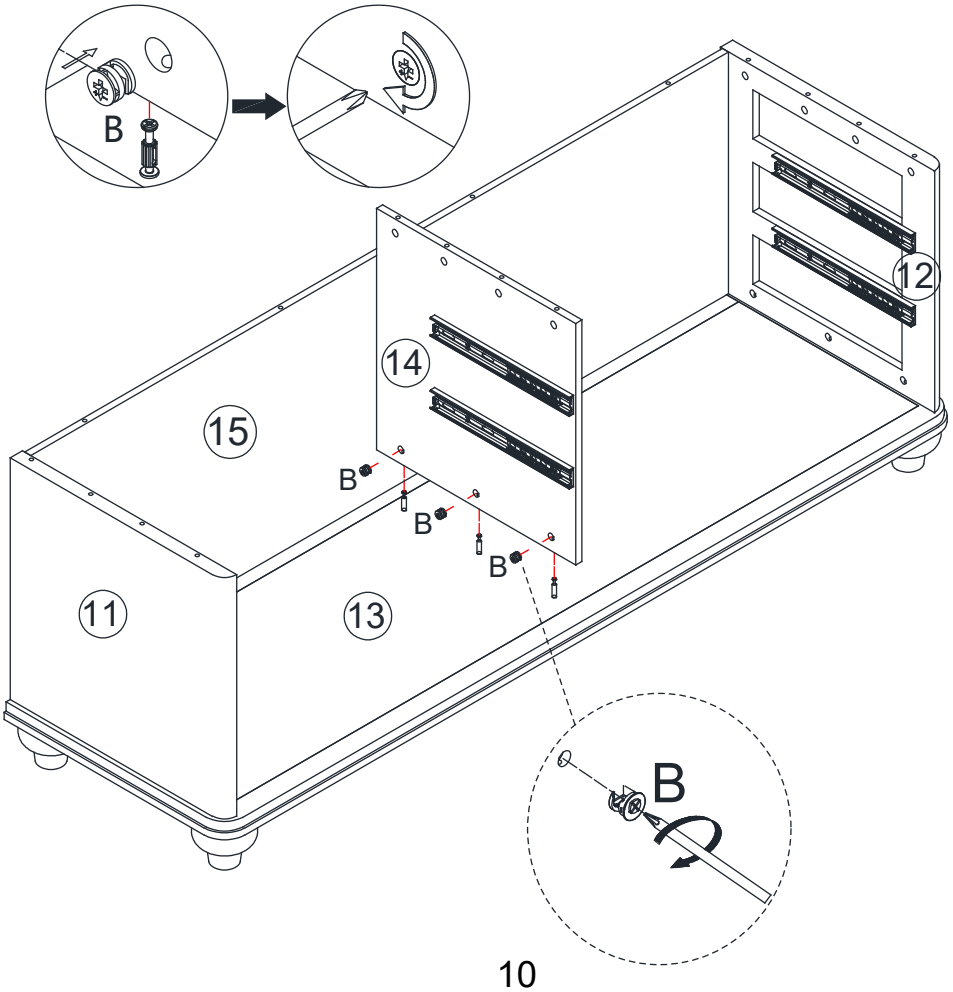


Assembly Directions

Step 9

Ⓐ X16 

Step 10

Ⓑ X16 

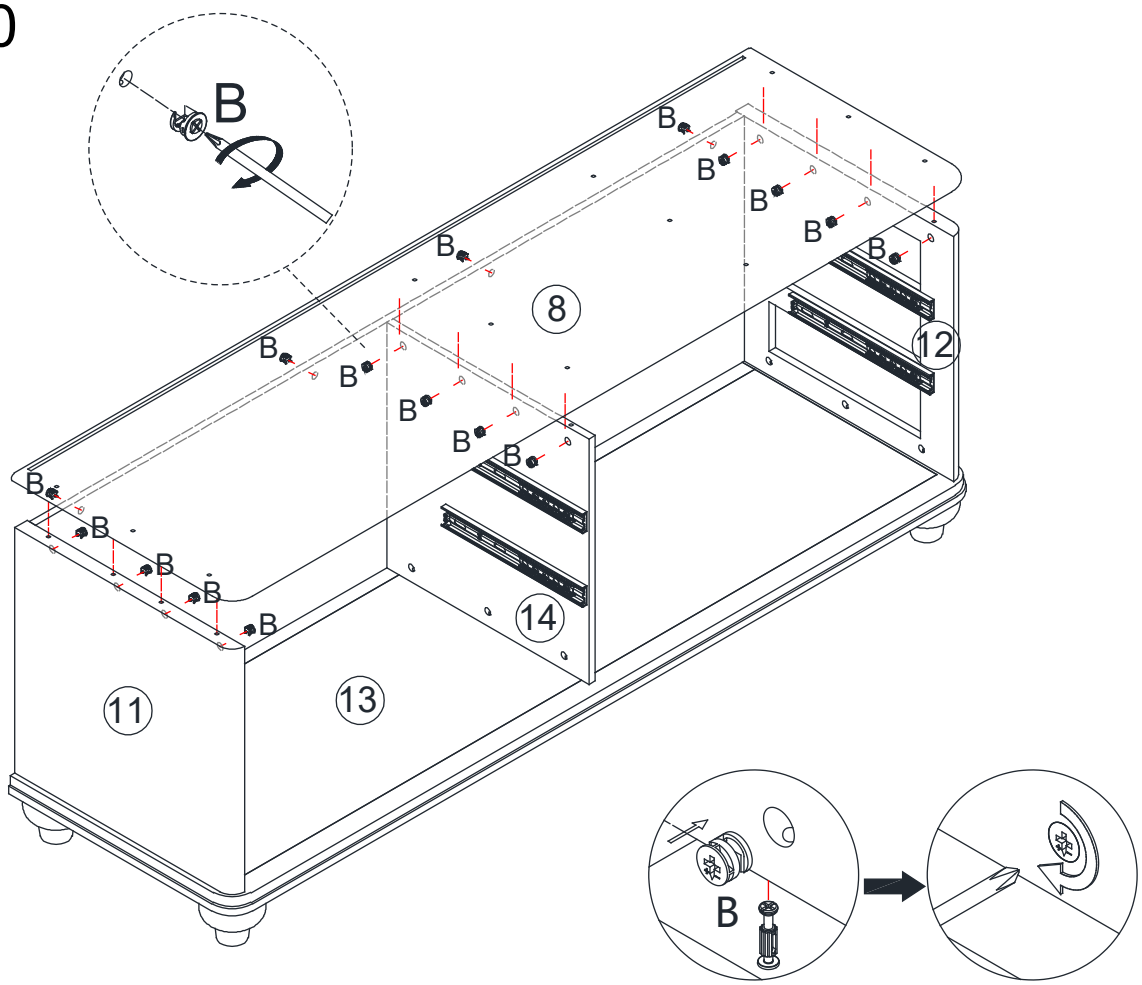


Assembly Directions

Step 11

Ⓐ X12

Ⓠ X4

Ⓒ X8 Ø3.5*14

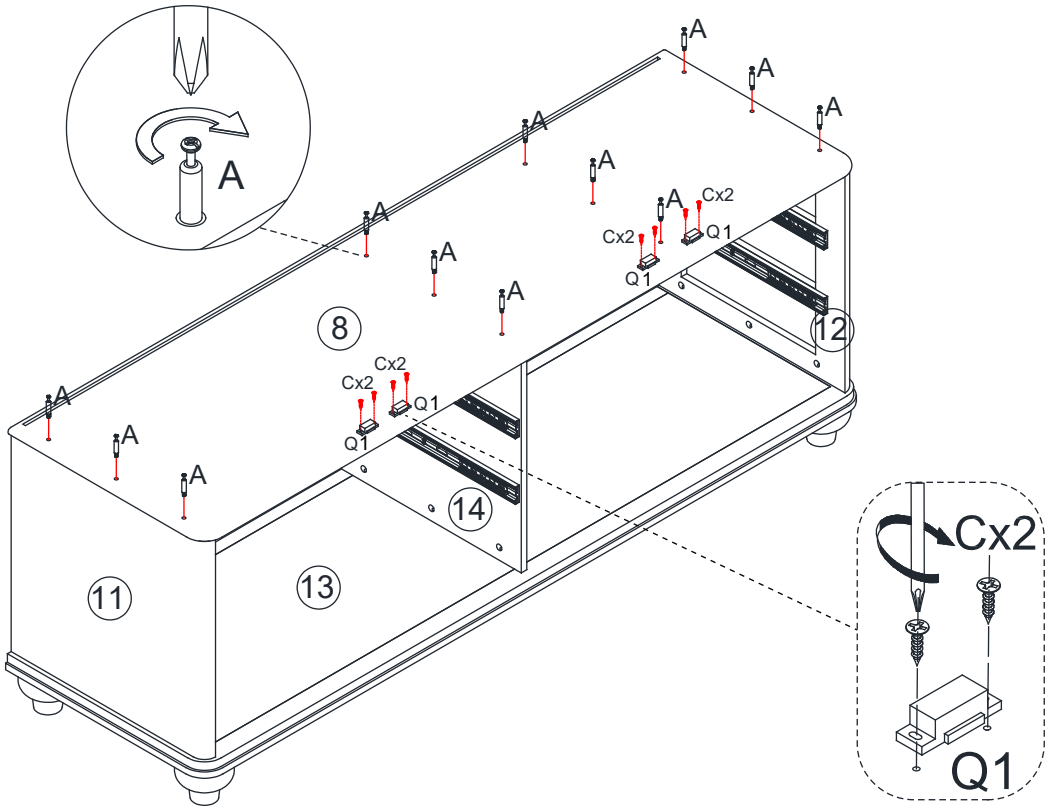


Step 12

Ⓐ X7

Ⓓ X4


Ⓚ X1

Ⓛ X2 Ø3.5*16

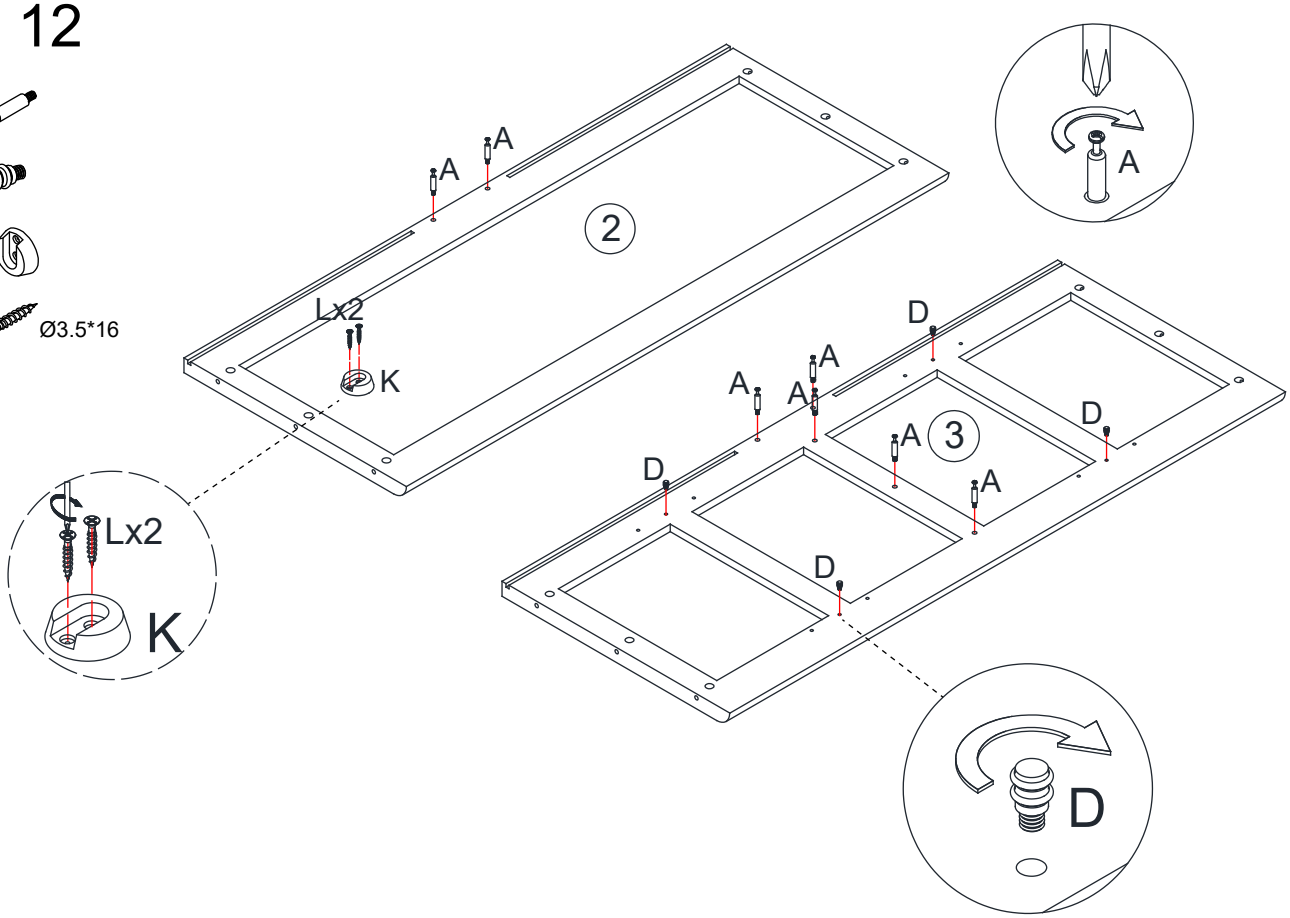

Step 13

Ⓑ X3

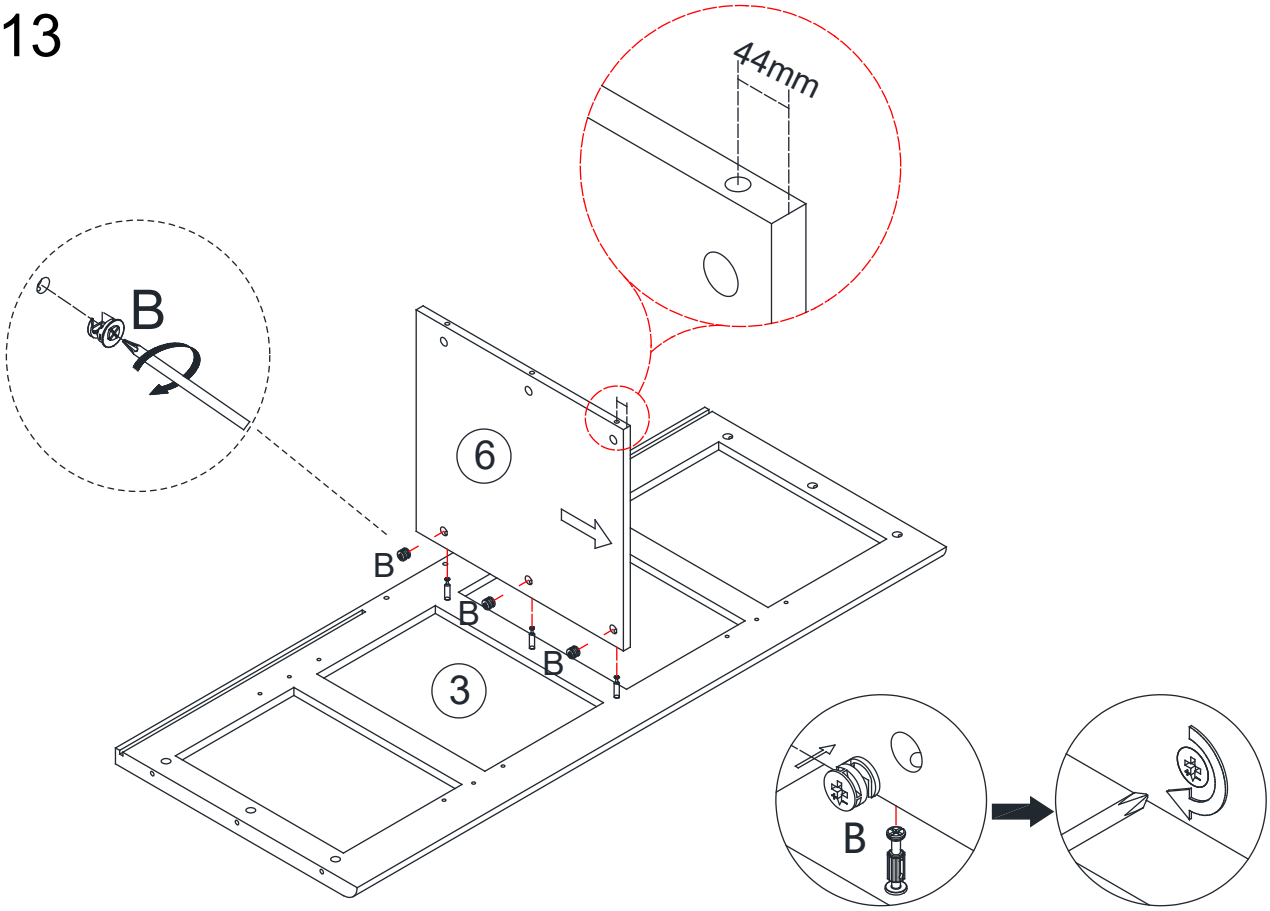


Step 14

Ⓐ X3

Ⓓ X4

Ⓚ X1


Ⓛ X2 Ø3.5*16

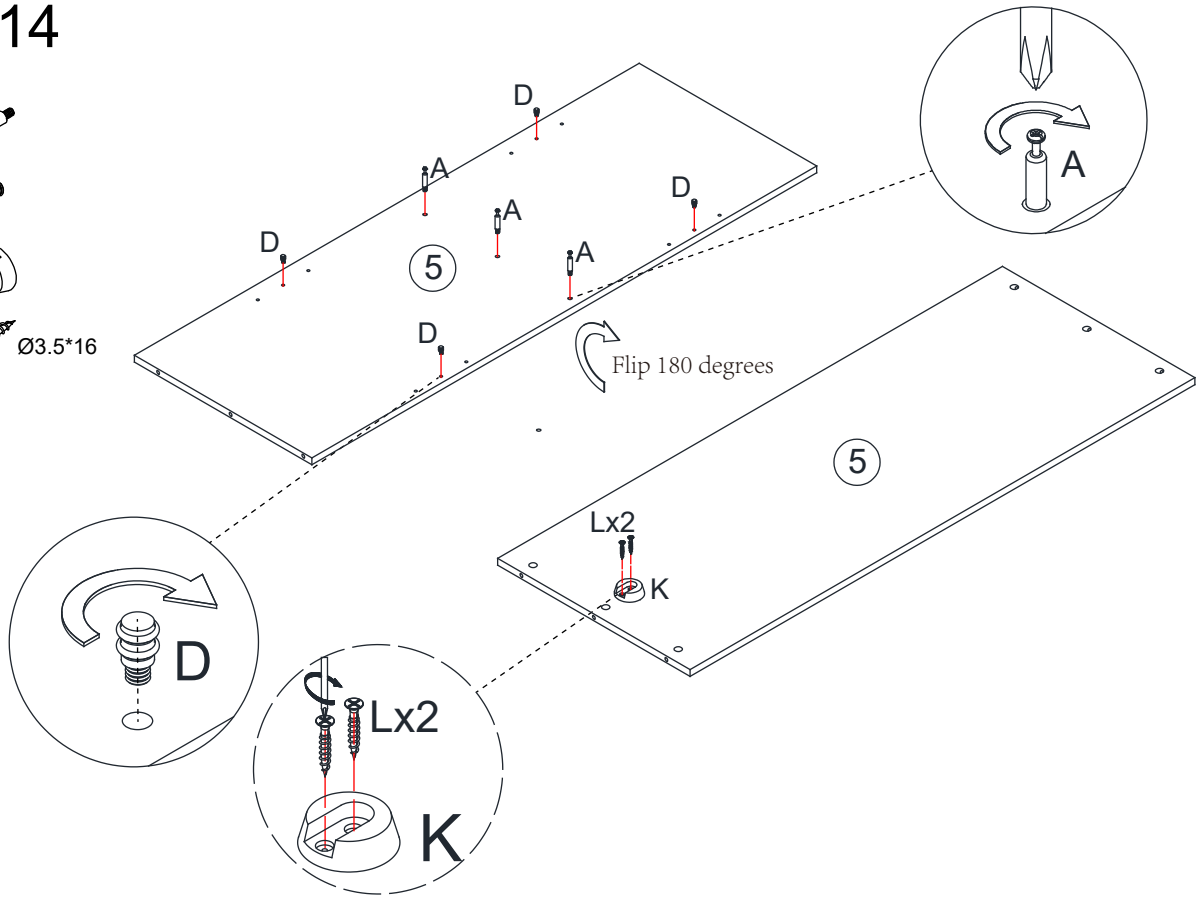

Assembly Directions


Step 15

Ⓑ X3

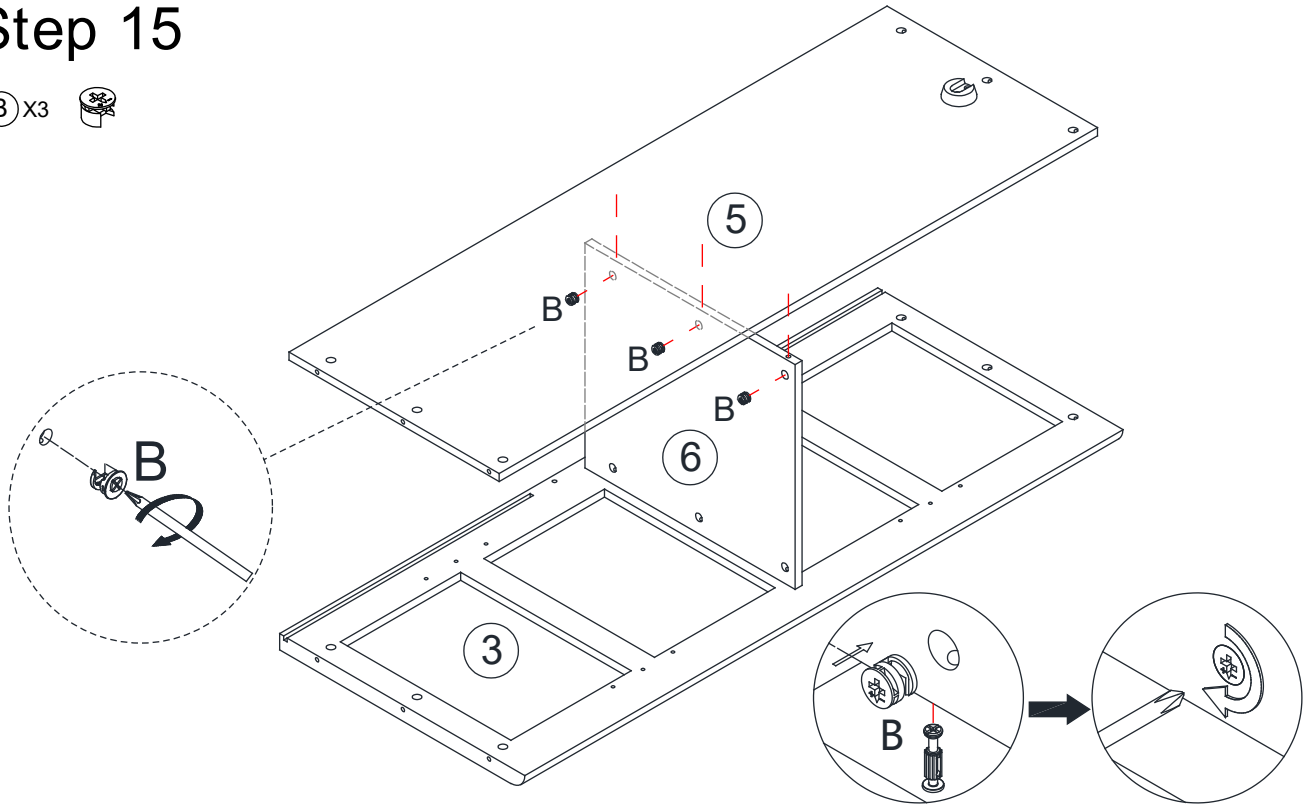


Step 16

Ⓑ X6

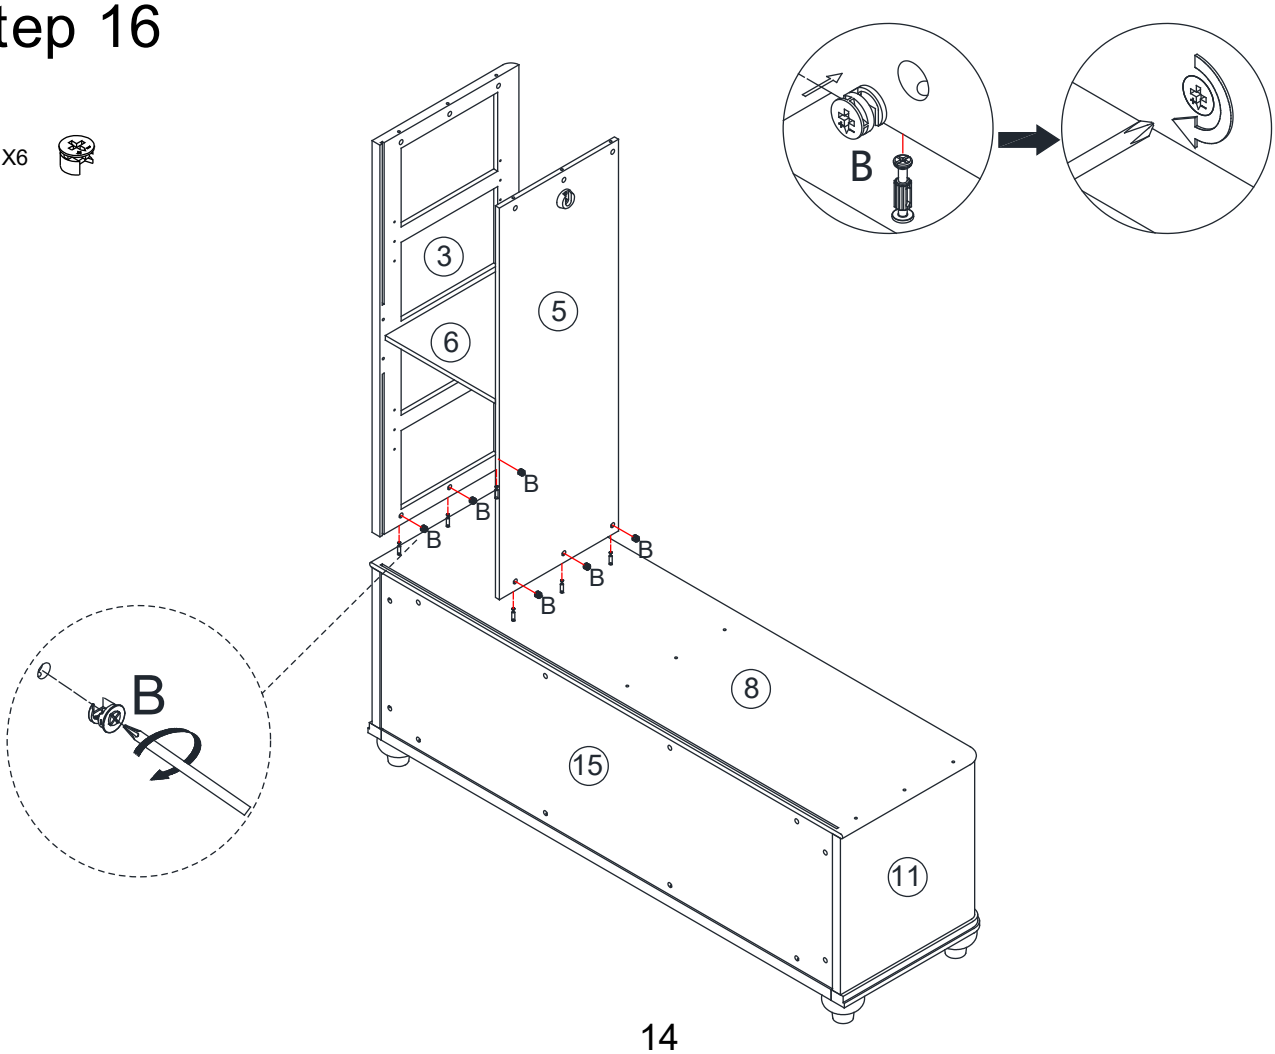


Assembly Directions


Step 17

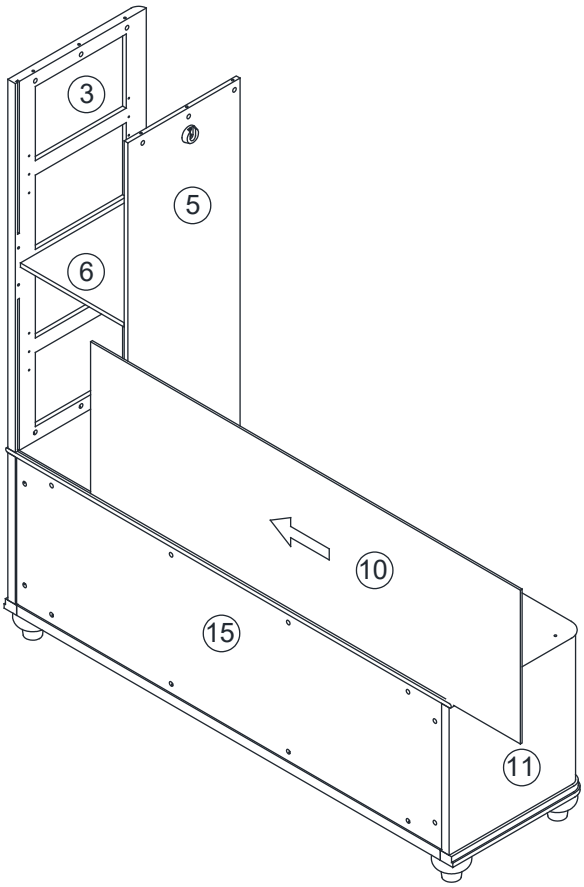

Step 18


Ⓑ X2

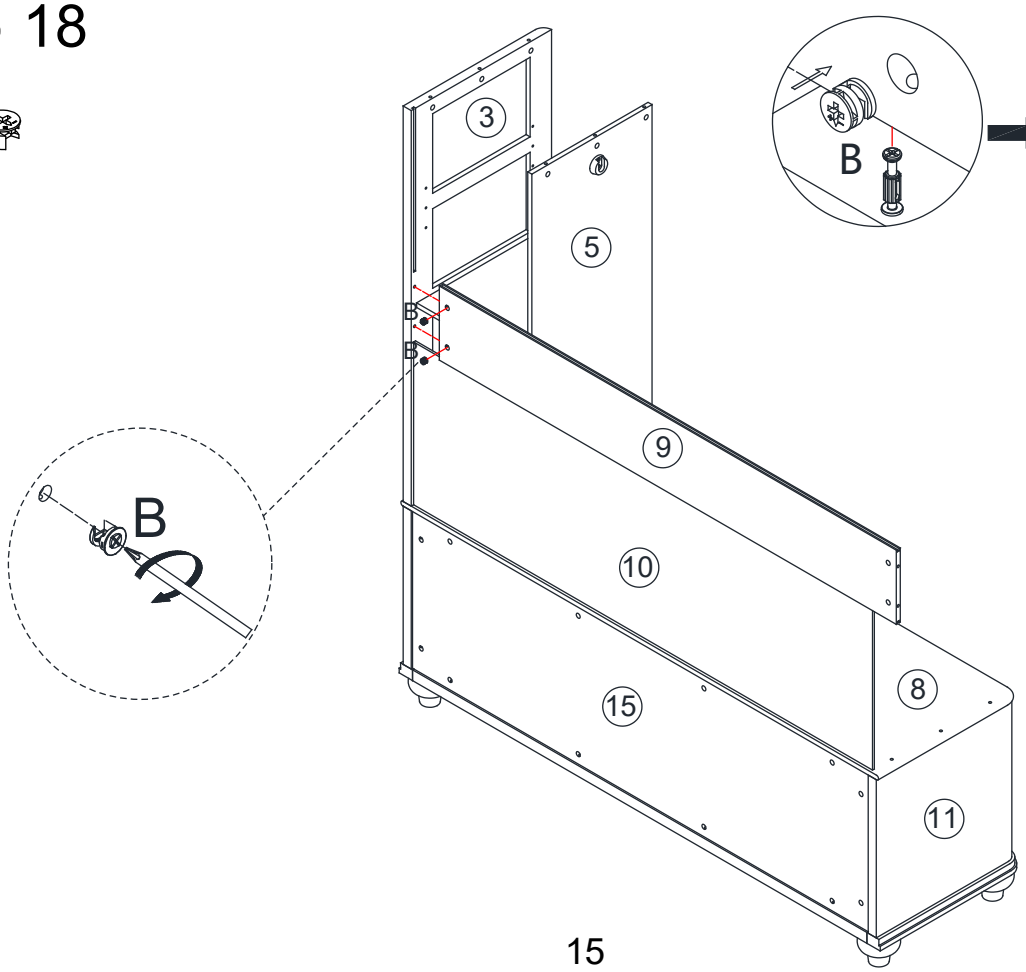

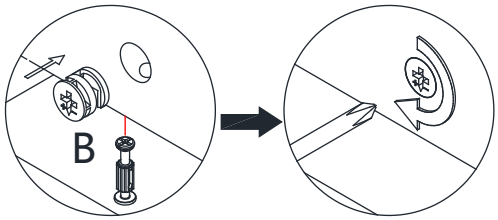


Assembly Directions


Step 19

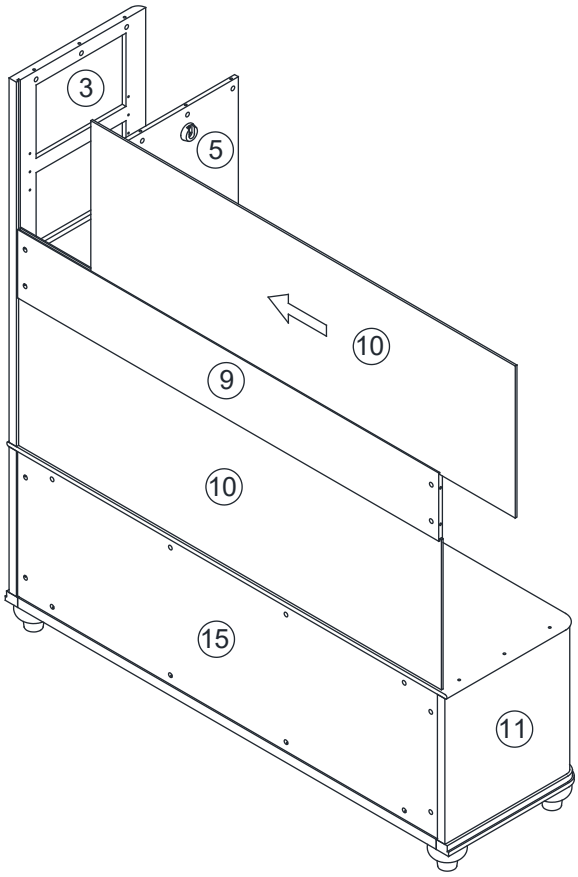

Step 20

Ⓑ X2

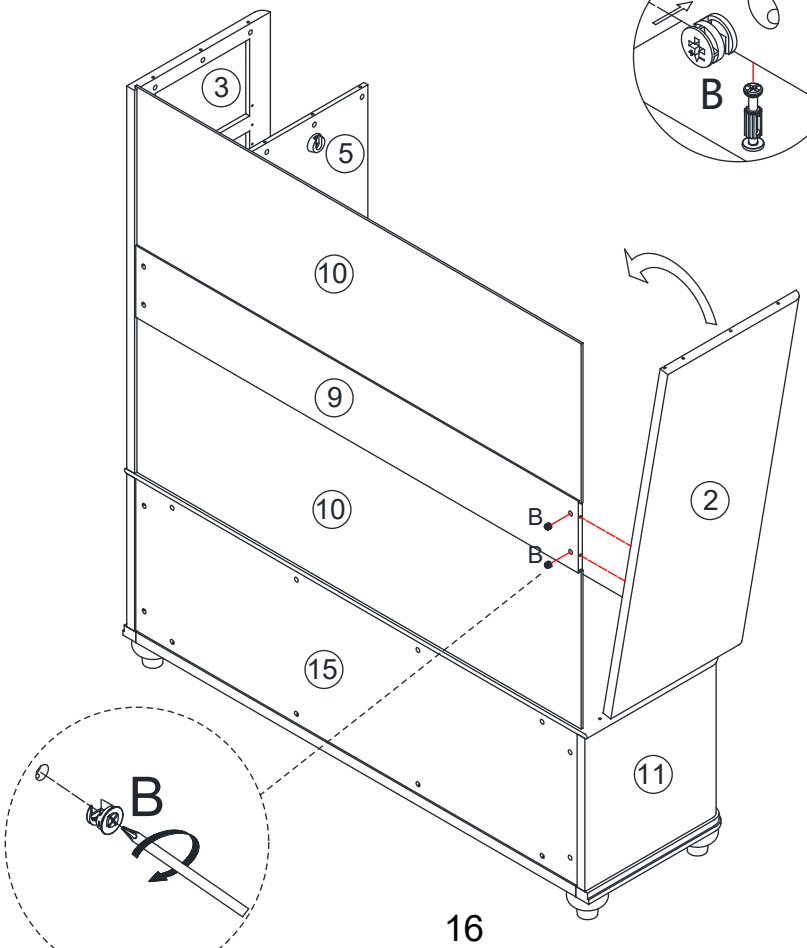

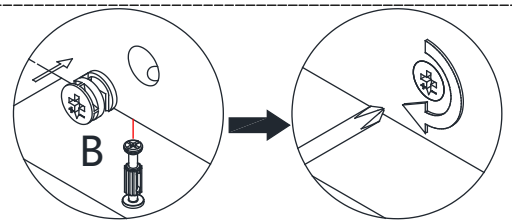


Assembly Directions

Step 21


Ⓚ X2

Ⓛ X4 Ø3.5*16

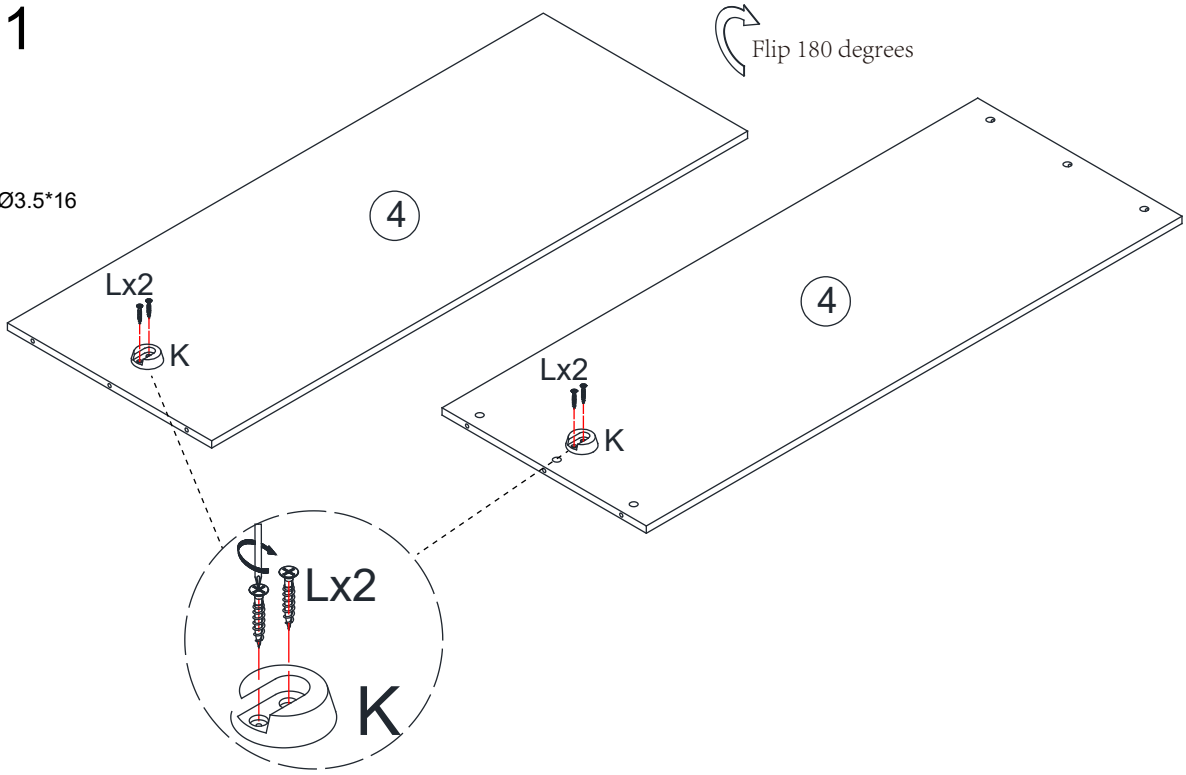

Step 22

Ⓑ X6

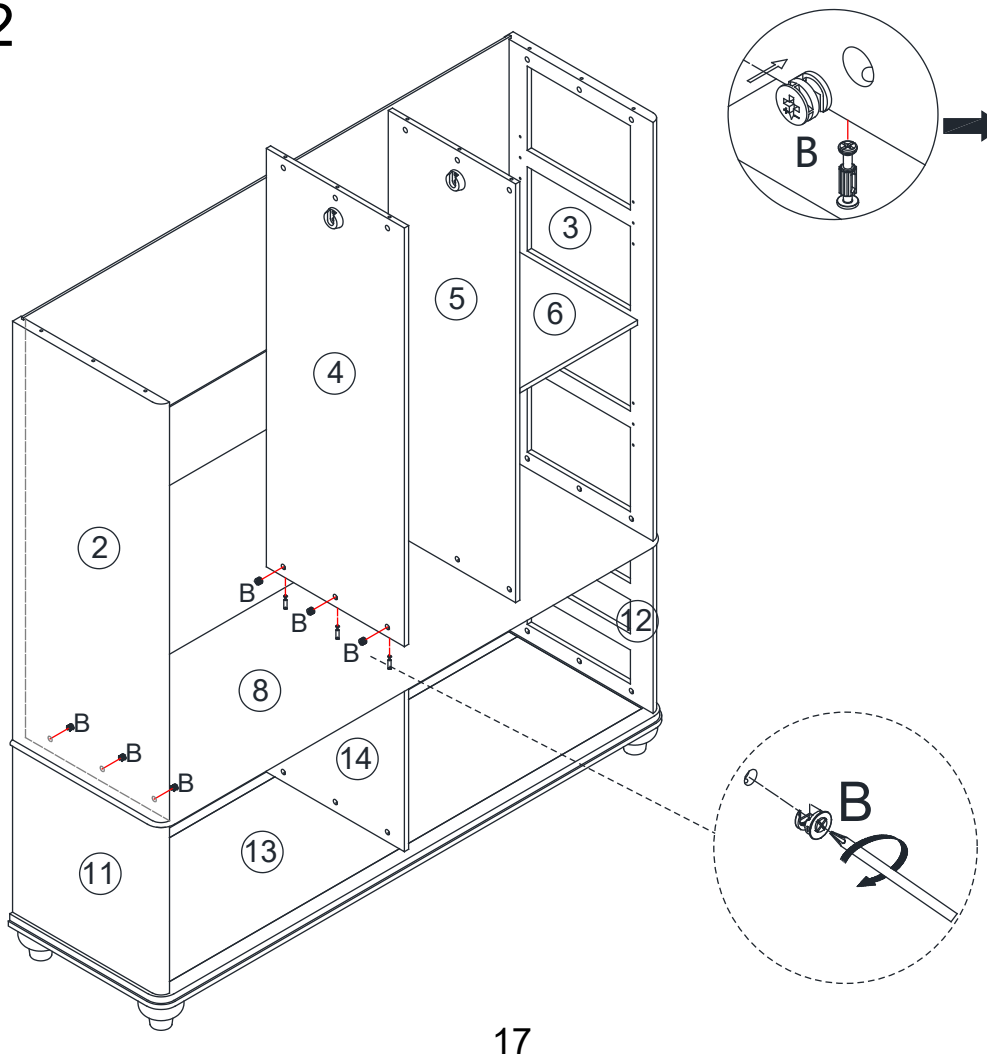


Assembly Directions

Step 23

Ⓐ X12

Ⓠ X4


Ⓒ X8 Ø3.5*14

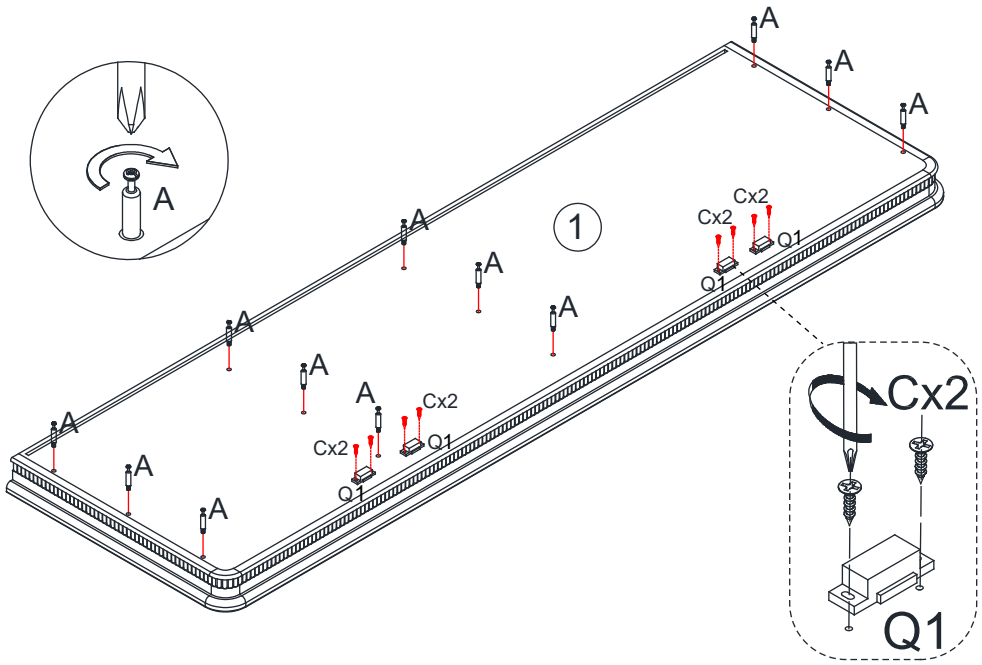


Step 24

Ⓑ X12

A heightening aid is required to facilitate position adjustment and alignment of the holes.

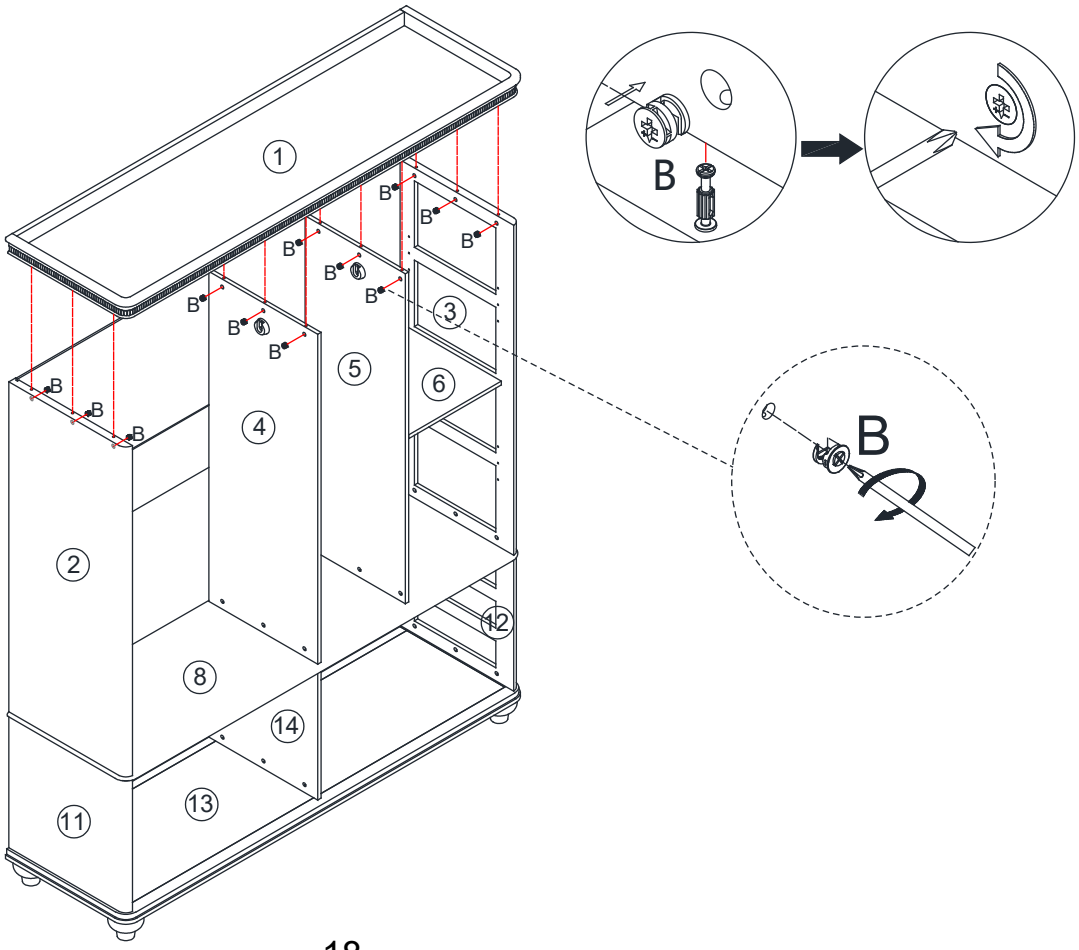


Step 25

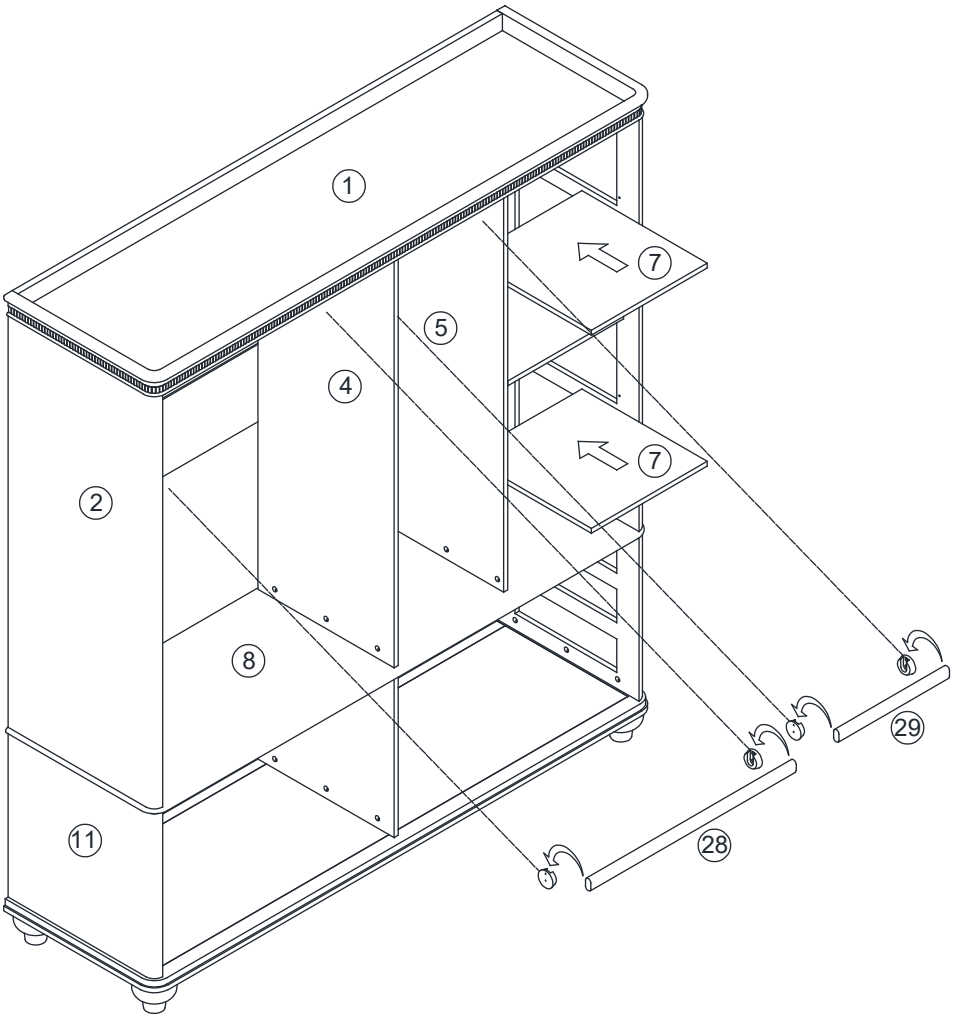

Step 26


Ⓕ X2 Ø4*30

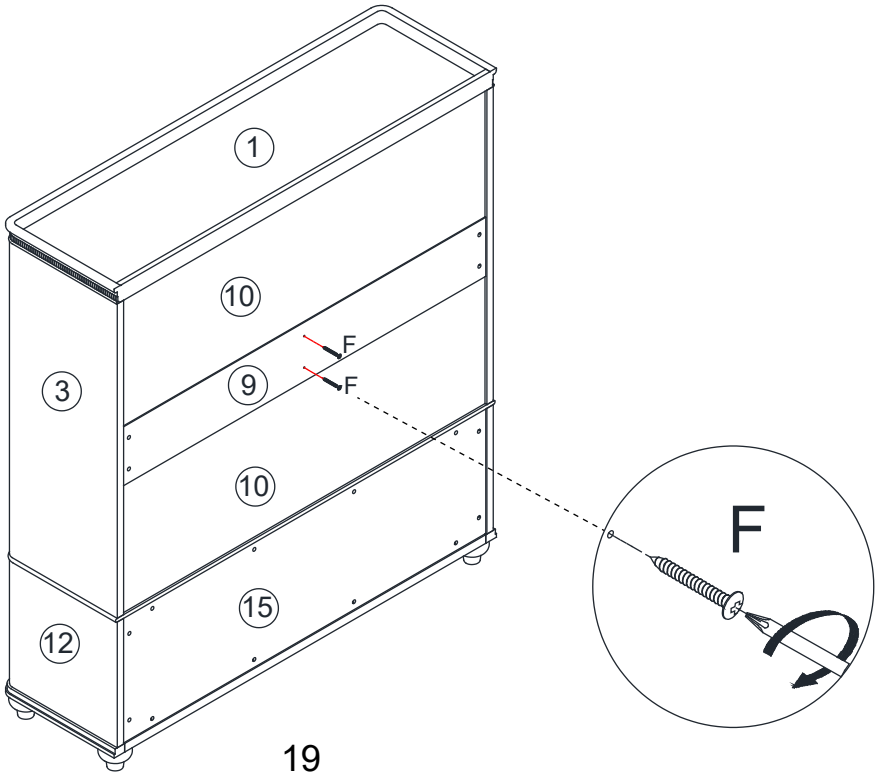

Assembly Directions

Step 27


Ⓕ X8 Ø4*30

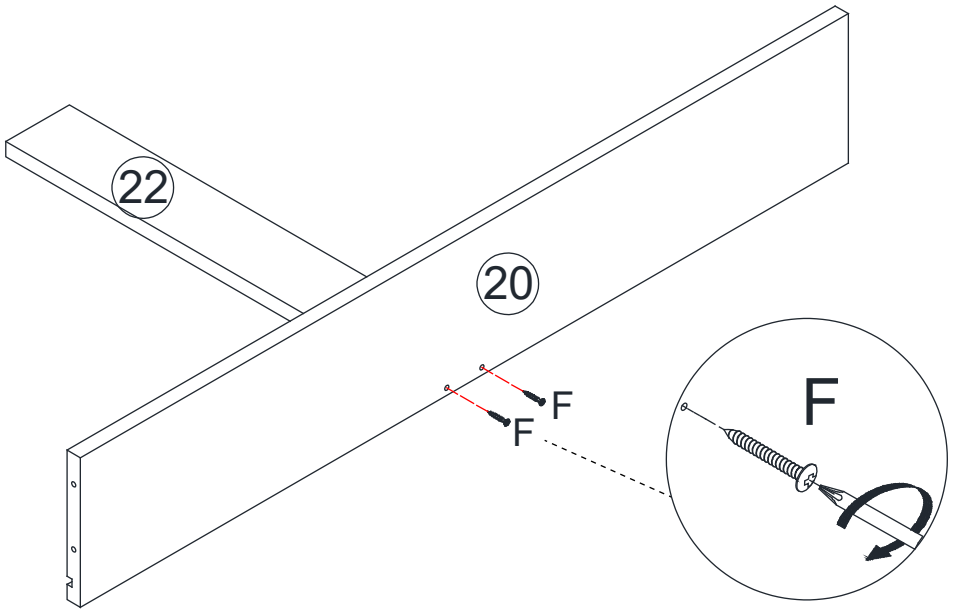


X4

Step 28

Ⓕ X8 Ø4*30

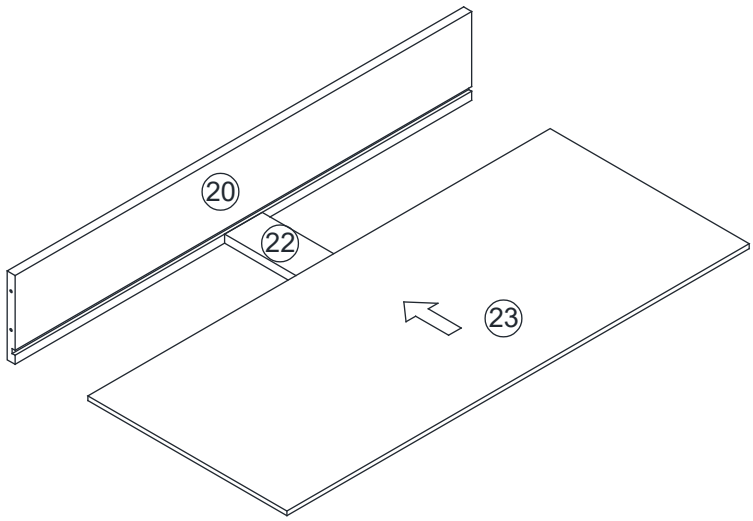

X4

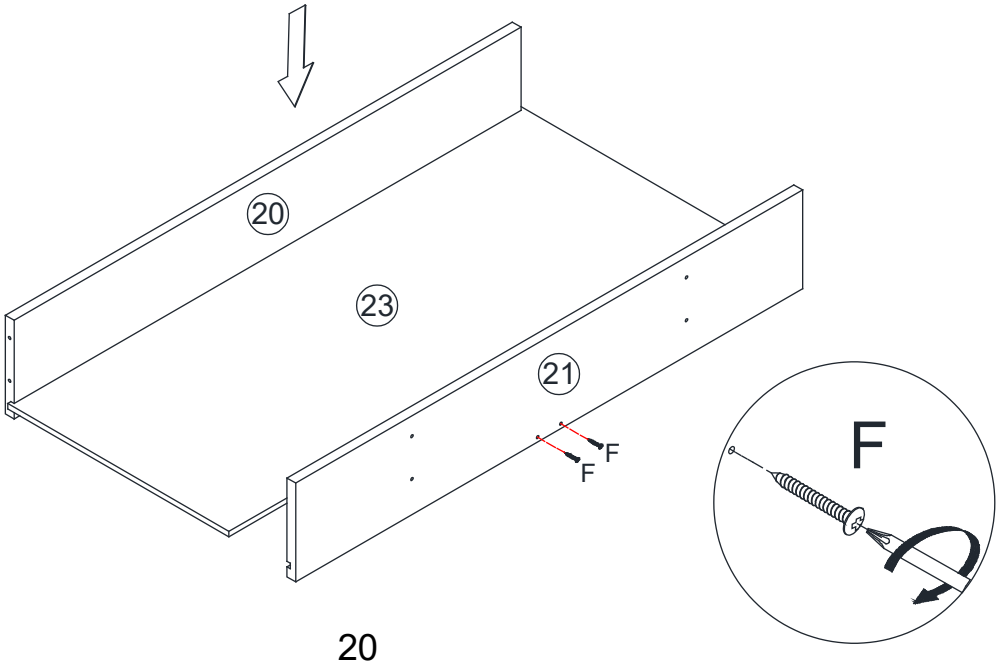


X4

Assembly Directions

Step 29

Ⓔ X8 E2


Ⓒ X24 Ø3.5*14

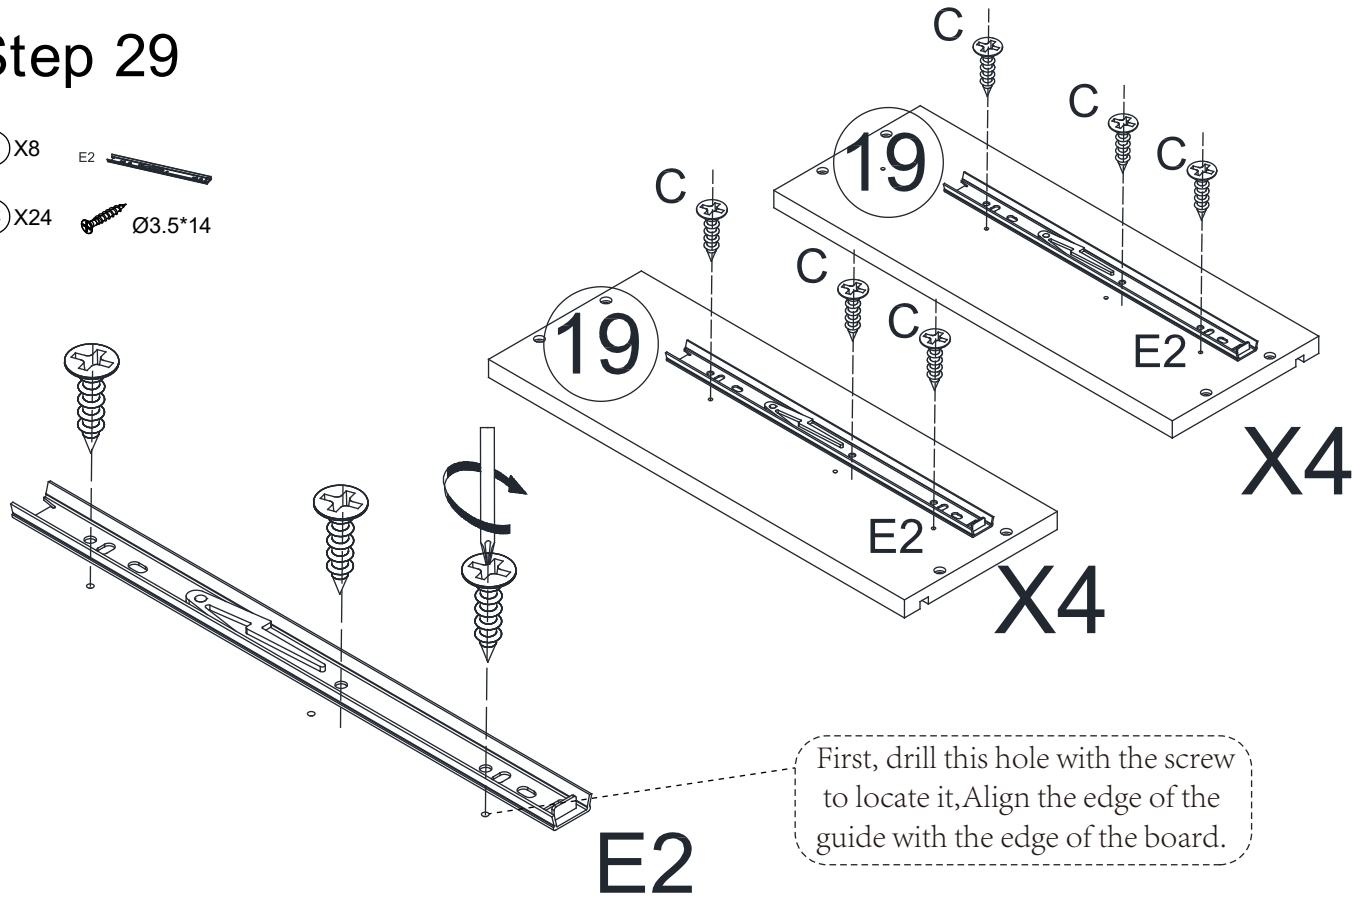

First, drill this hole with the screw to locate it,Align the edge of the guide with the edge of the board.

Step 30


Ⓕ X16 Ø4*30

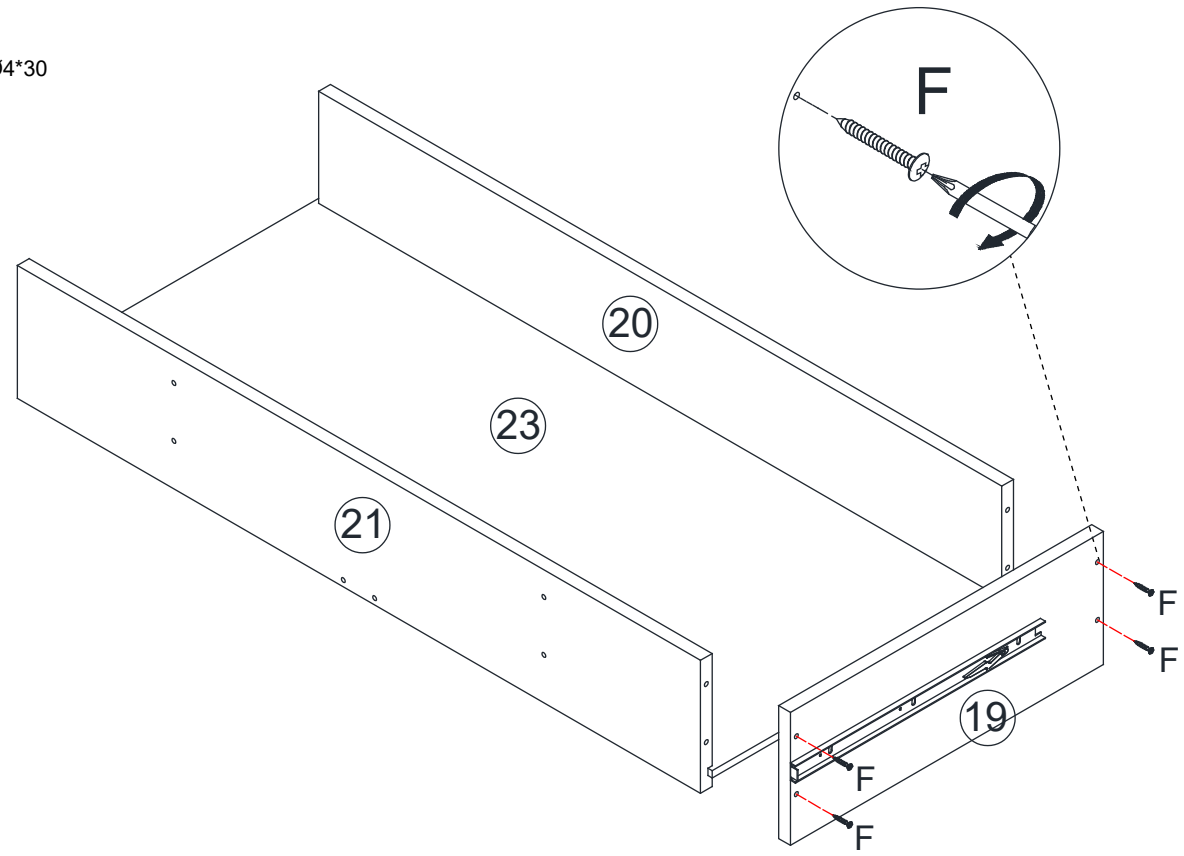

Assembly Directions

Step 31


Ⓕ X16 Ø4*30

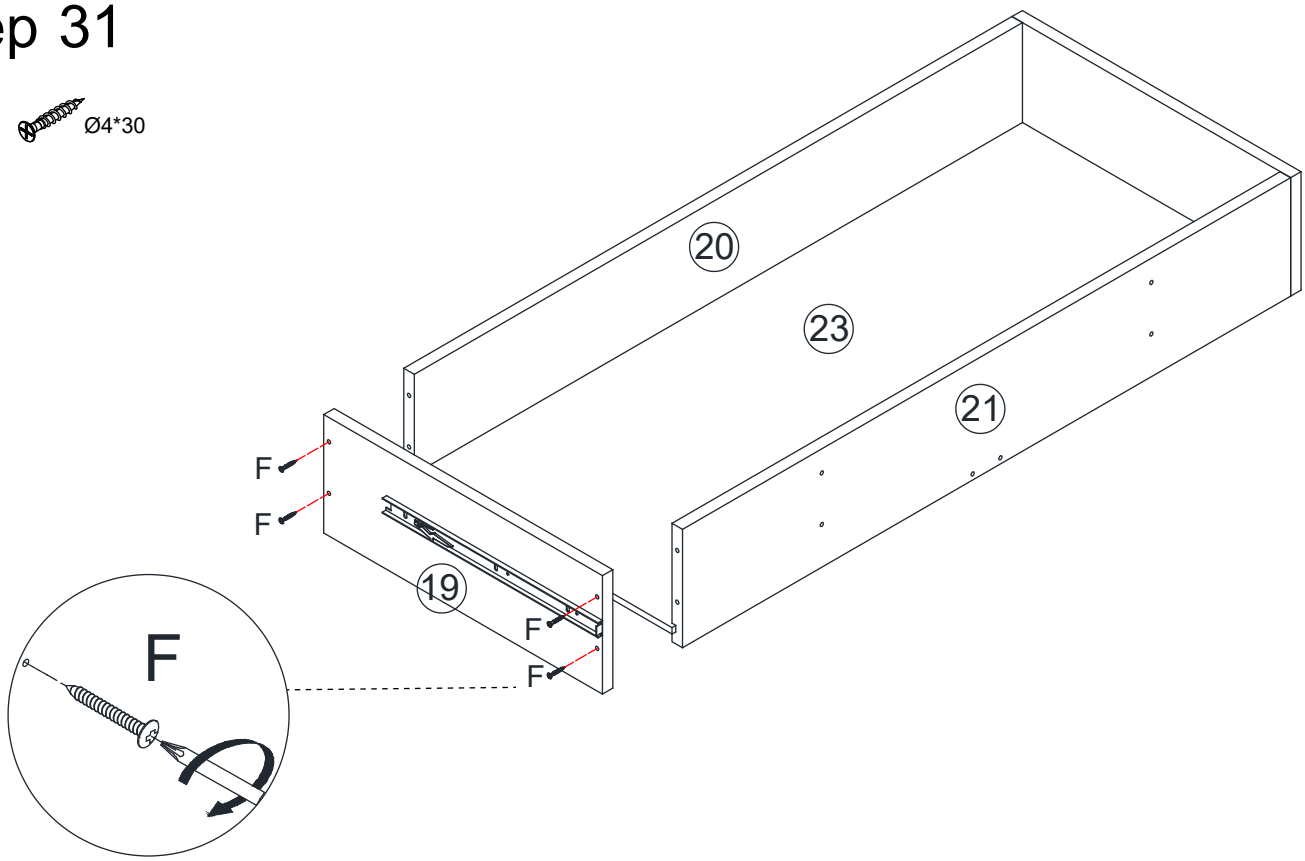

Step 32

Ⓖ X8

Ⓗ X8

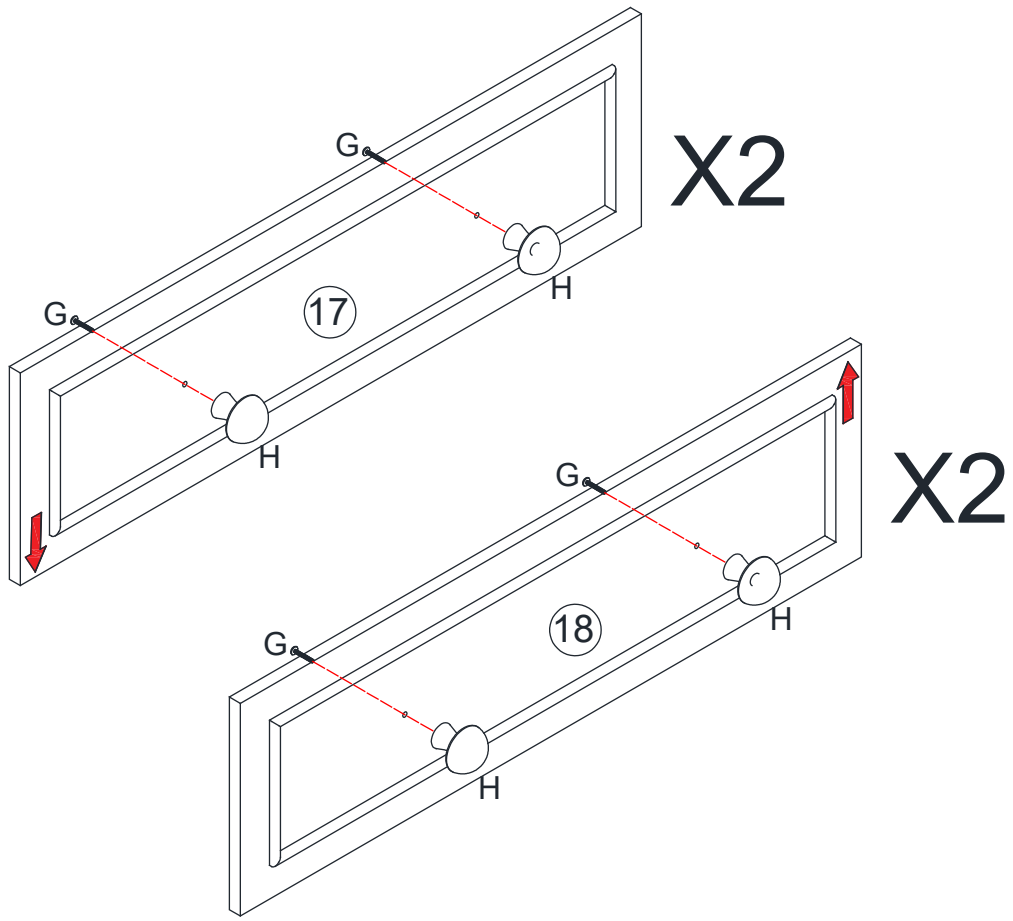


Assembly Directions

Step 33

J X16


I X1

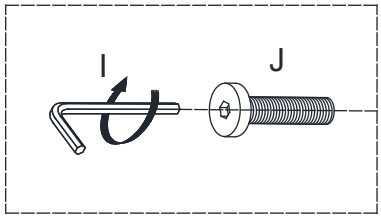

X2

X2

Step 34

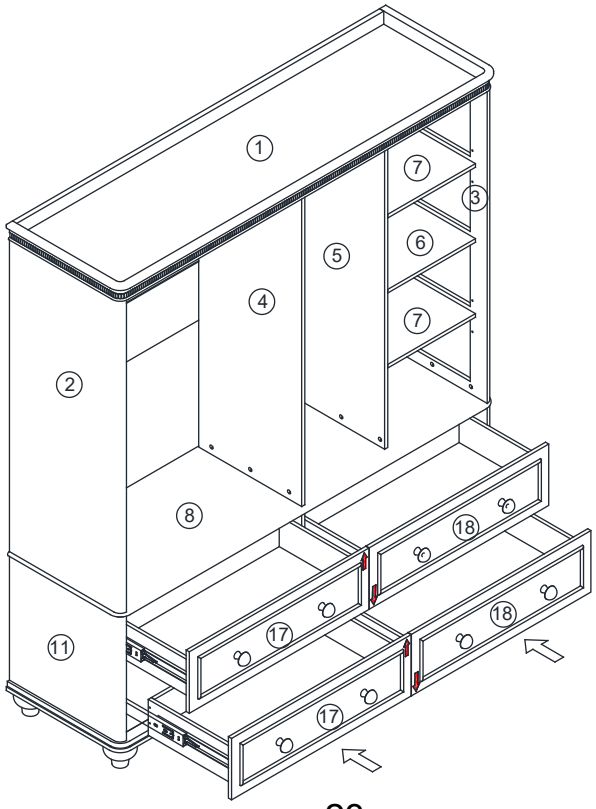


Assembly Directions

Step 35

Ⓜ X8

Ⓒ X24 Ø3.5*14

Ⓠ X4

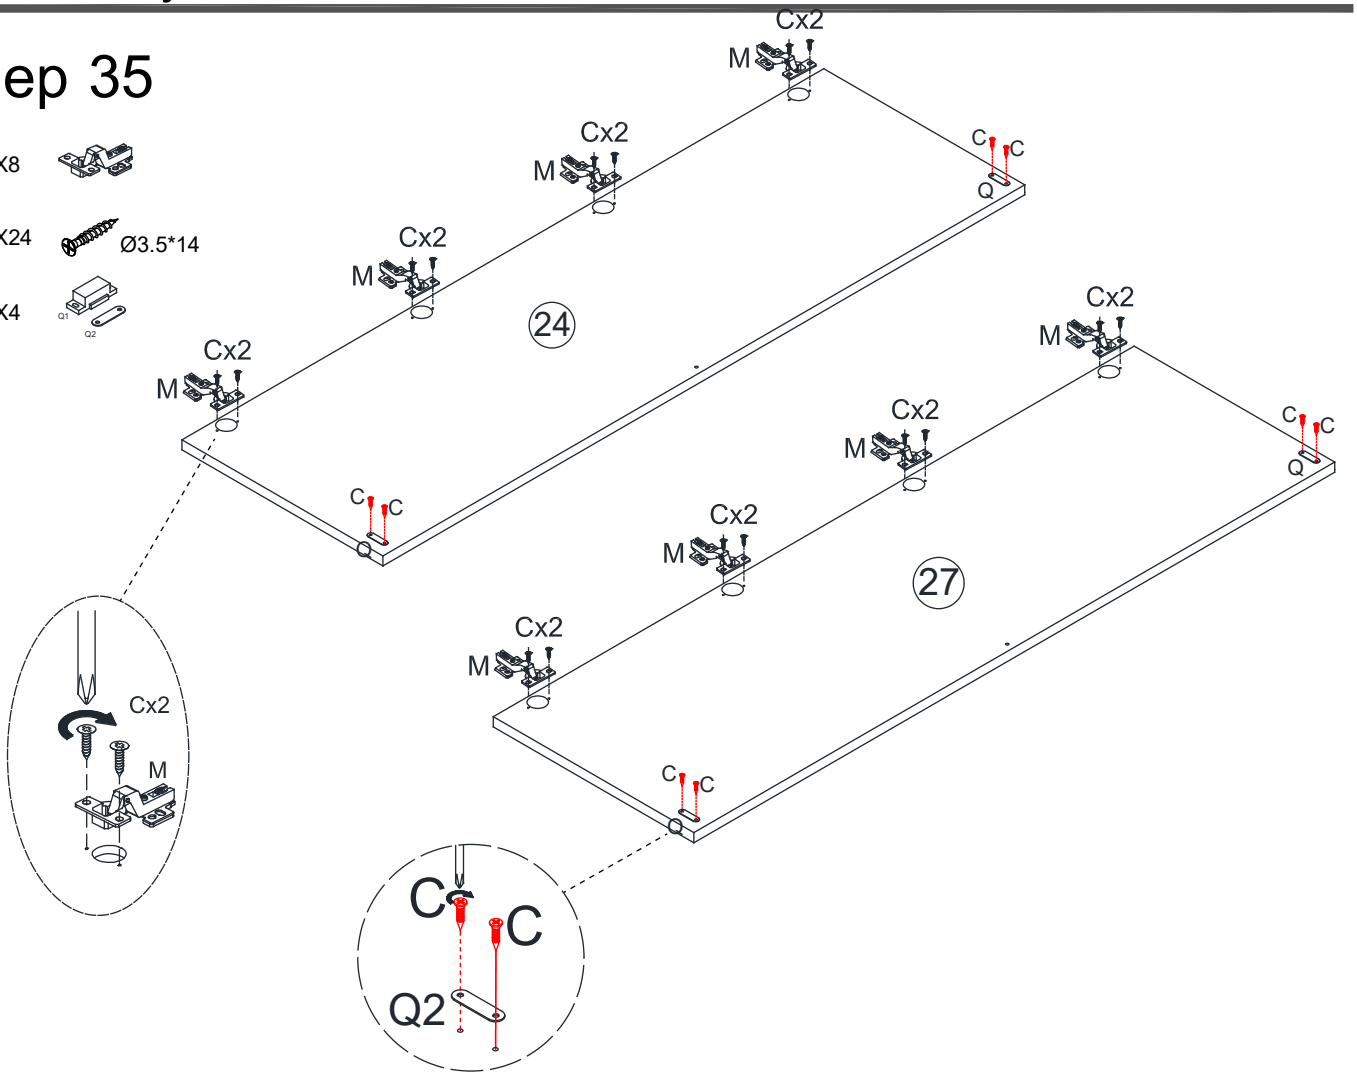


Step 36

Ⓝ X8

Ⓒ X24 Ø3.5*14

Ⓠ X4

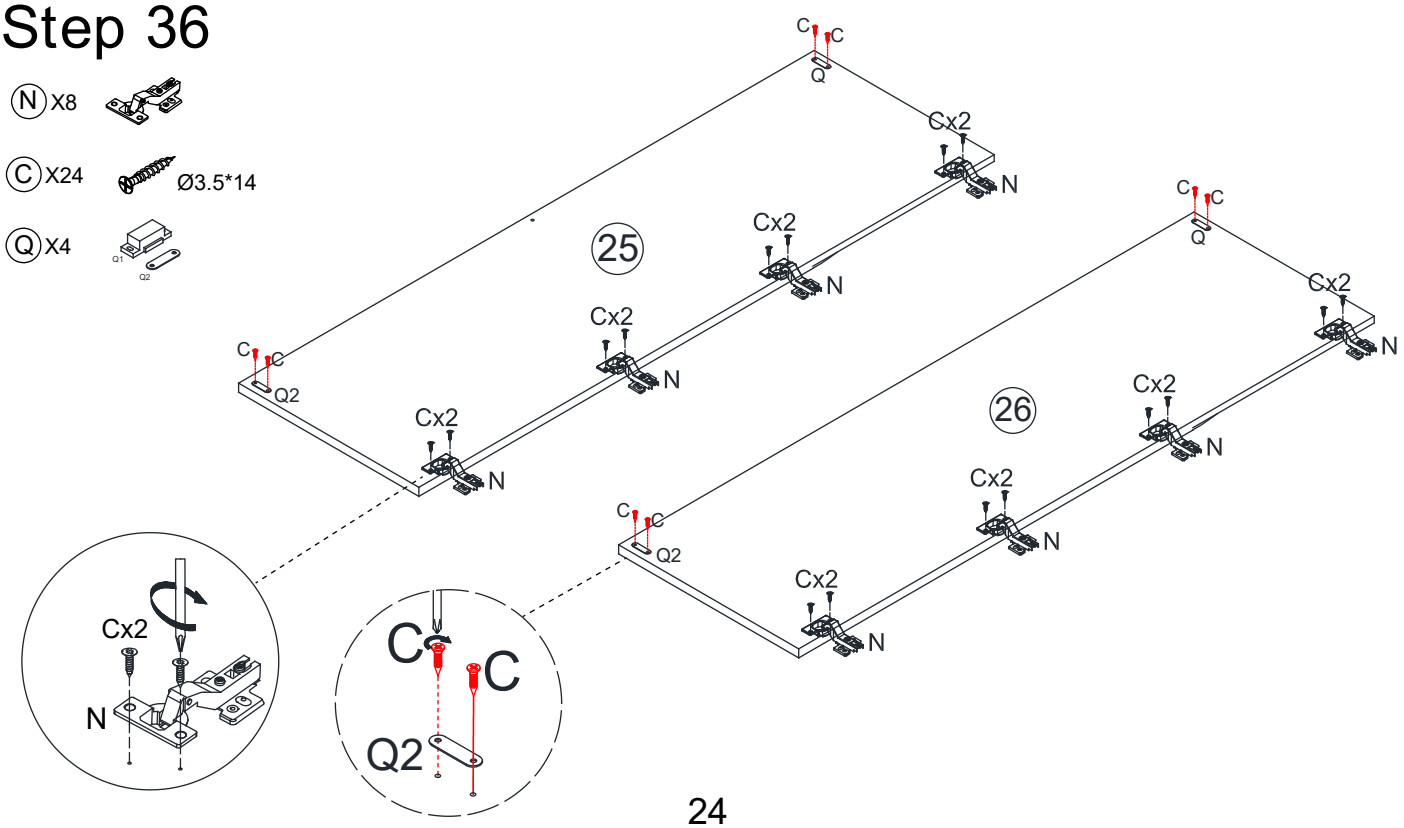

Assembly Directions


Step 37

Ⓖ X2

Ⓒ X32 Ø3.5*14

Ⓗ X2

First, use one screw for alignment and adjustment, then tighten the others once properly positioned.

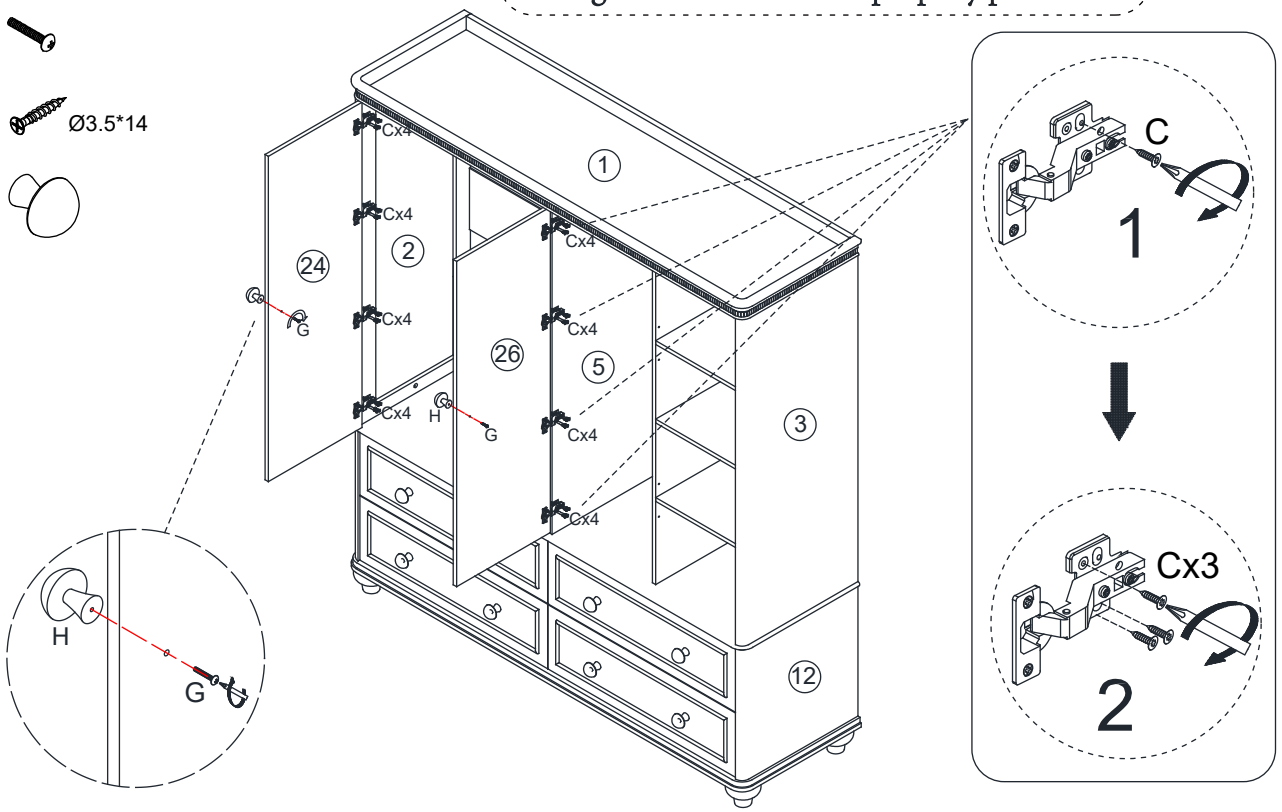


Step 38

Ⓖ X2

Ⓒ X32 Ø3.5*14

Ⓗ X2


First, use one screw for alignment and adjustment, then tighten the others once properly positioned.

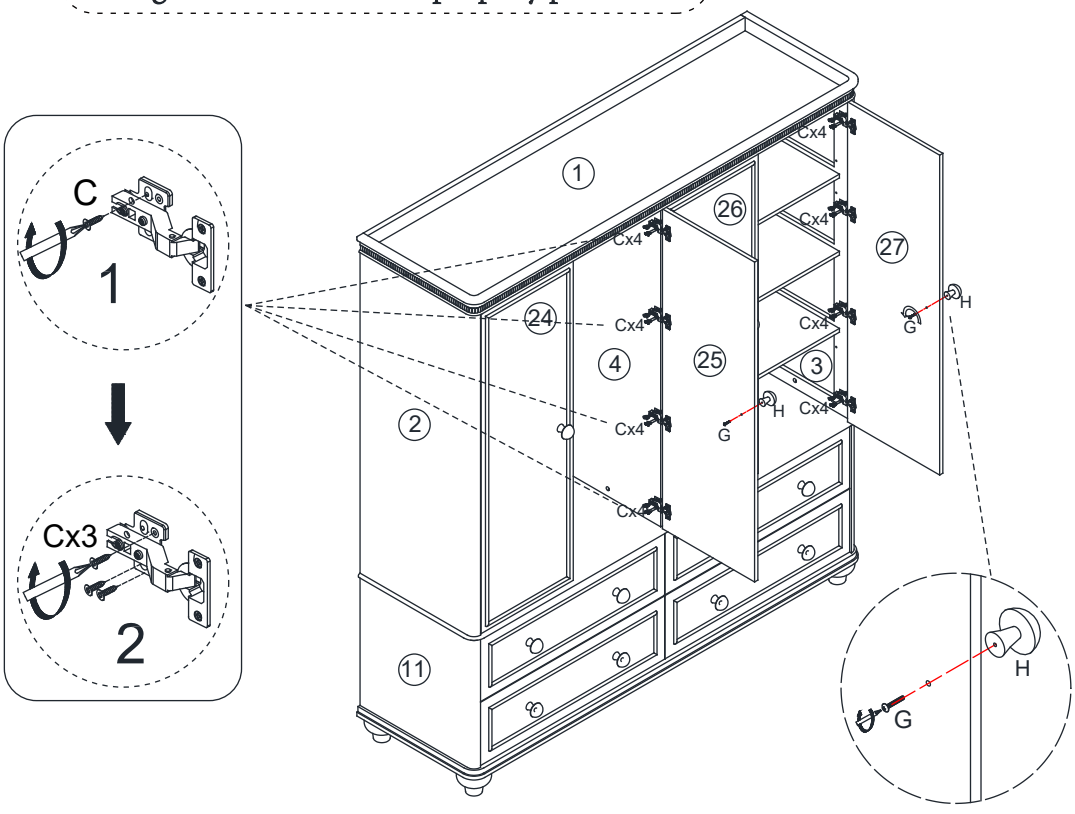


Assembly Directions

Step 39

Ⓡ X2



 x4	 x4	 3.5*16mm x4	 4*40mm x4	 x2

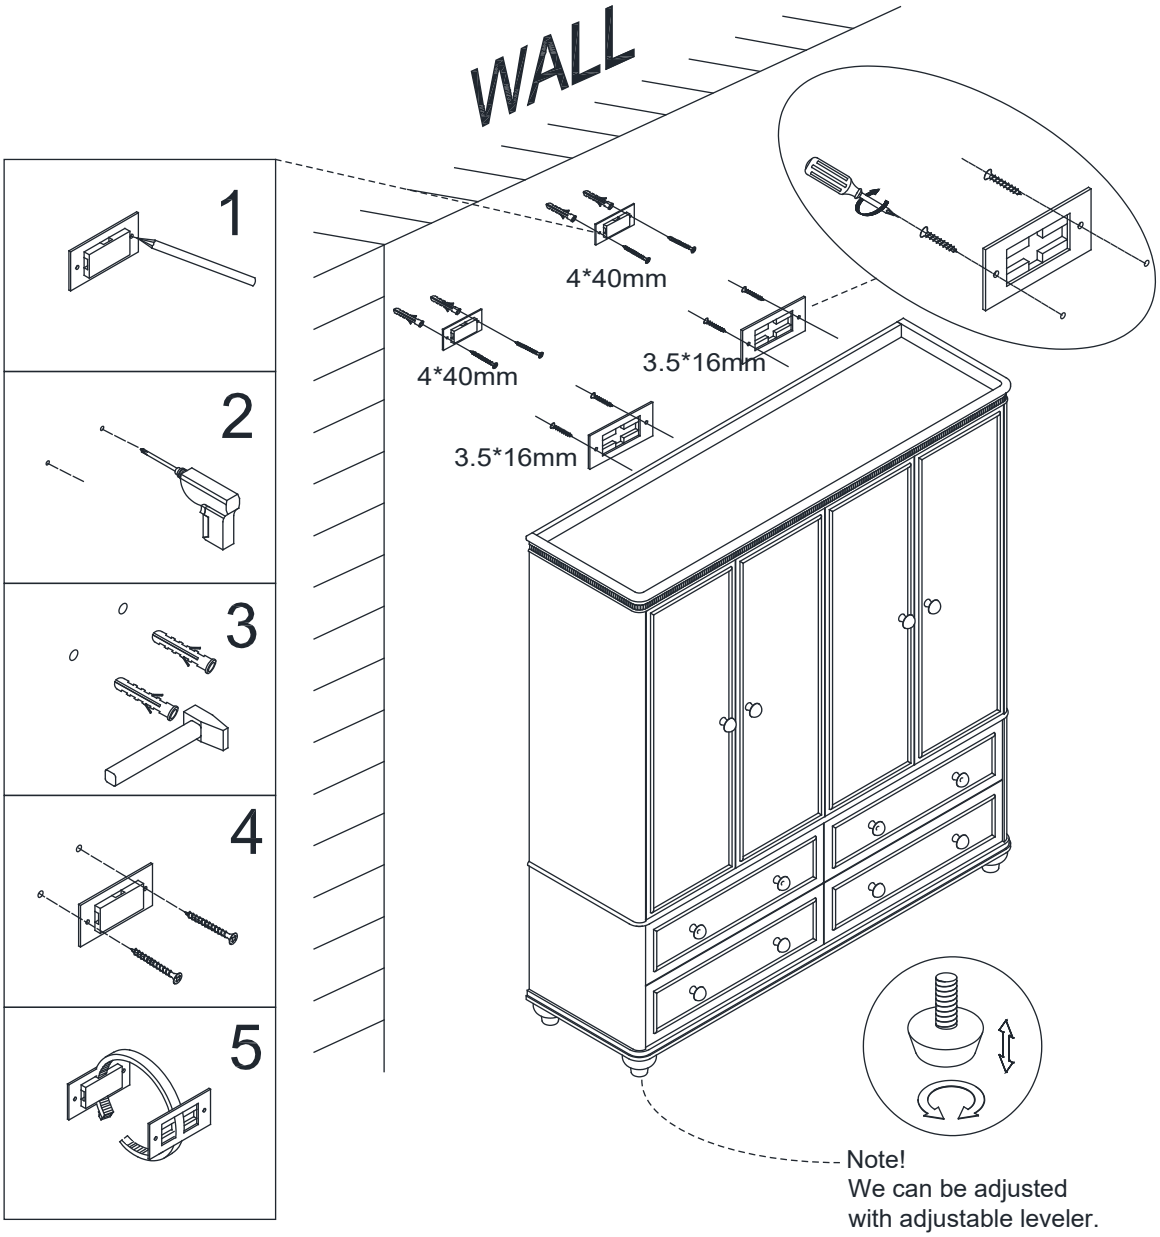

Instalationinstructions


1. Mark the distance of the bracket on the wall with a pencil.
2. Drill holes at the markers with a drill.
3. Insect the expansion screws into the holes.
4.Connext the bracket to the wall with screws.
5.Place the furniture against the wall and align the brackets vertically.
6.Secure the brackets to the top of the closet using the short screws provided

Troubleshoot


Product Category	Fault	Cause Analysis	Handing Method
Wood furniture	Door opening is not flexible	The furniture is not leveled	Use items to level the furniture
		The door hinges should be adjusted properly.	Adjust door hinges and apply lubricating oil.
	Inflexible opening of drawer	Overload or deformation	Reduce weight,adjust guide rails, lubricate
	Loose component connection	Loose hinges or screws	The poke part should be coated with an appropriate amount of 502 glue, then re-install or tighten the screws.
	Minor scratches	friction with hard o sharp objects	Use a brush to apply similar pigment ink along wood grain to the scratches, then wipe off the excess.
	Corrosive stains	Accidentally stained with chemical solvents such as nail polish, nail polish remover, ect.	Wipe them with a dry cotton cloth immediately

Possible Issues During Assembly:

- The two boards can't be aligned at he same level.

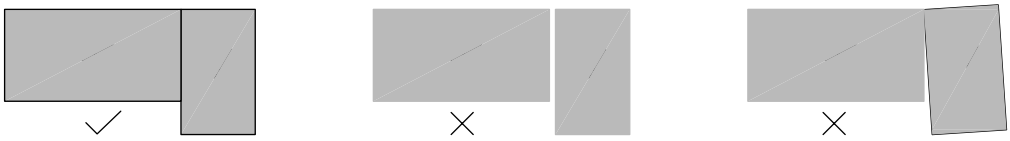


- Holes on the bards and poles are not aligned, so screws can't be installed.

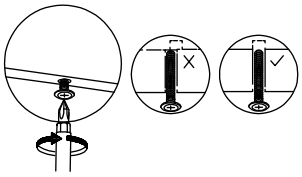

Recommended Solution:


- Please sightly loosen all screws and adjust the bards. Because the diameter of the holes on the pipes 23 mm lager than that of bots, the position of the boards can be adjusted.

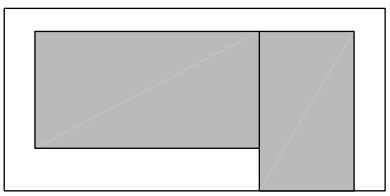


- If it is still doesn't work after adjustment, please contact us for more solutions.


Three-section Side-mounted Rail

Part！″Disassembly and Assembly Instructions

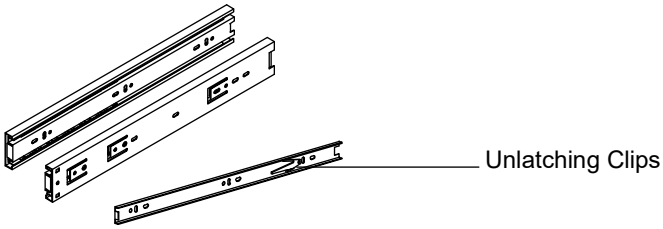

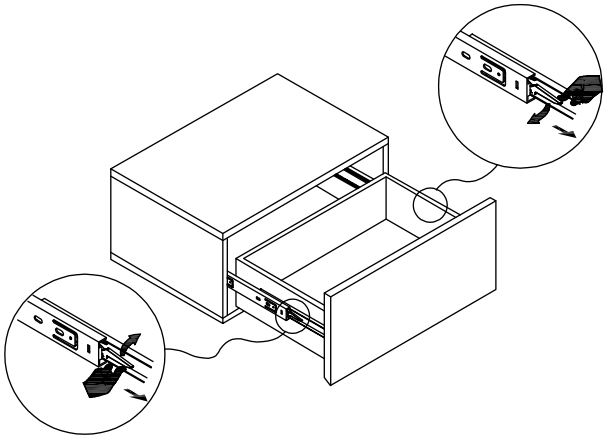


Pull up and unlatch the clips (Push down the other rail)

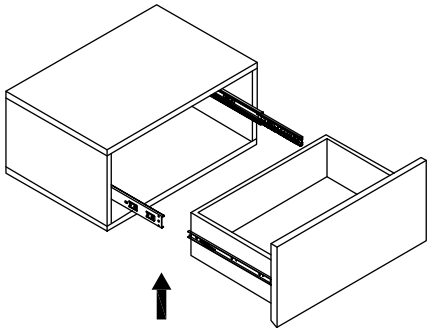


Open the drawer to its maximum position, press down or pull up the unlatching clips on both rails, then remove the drawer.

Drawer Assembly:

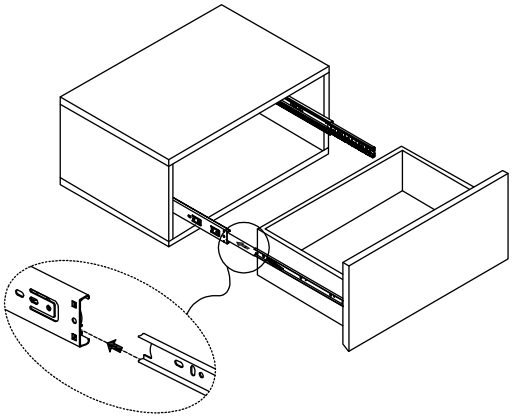


Align the rails

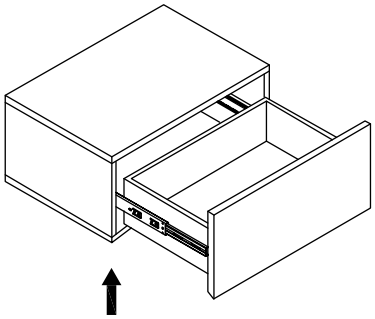


- Align and properly mate the two rail components on the drawer, push the drawer forward into the rails until it reaches the back.
- Repeatedly (2-4 times) push and pull the drawer to check if it slides smoothly. If not, disassemble the drawer and re-install.


Part# ″Assembly Instructions

Press down the unlatching clips to separate the rail into two parts.

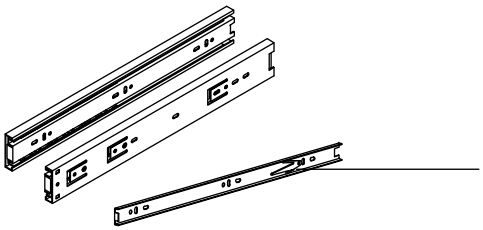


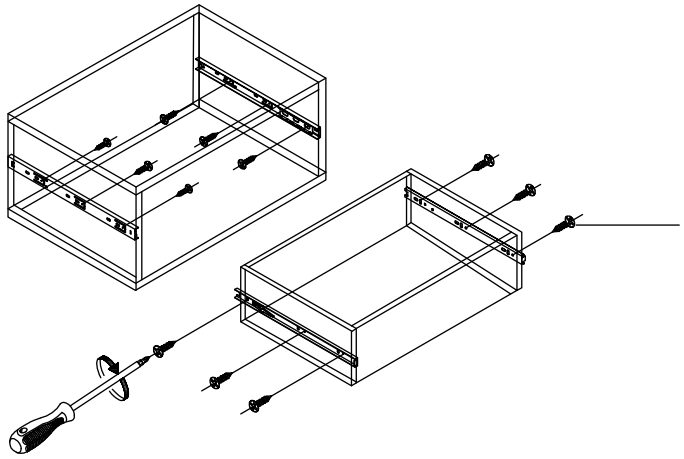

Attach the rails to the cabinet or drawer box using self-tapping screws.

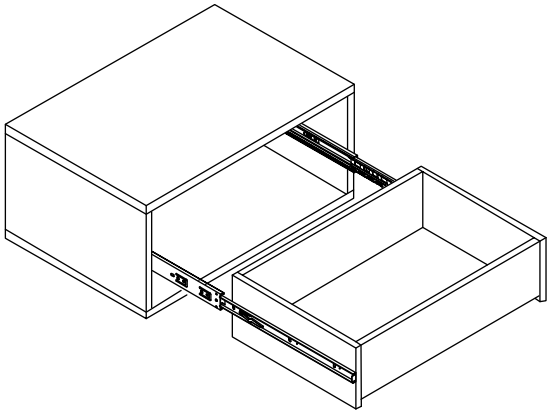


Align and properly mate the two rail components on the drawer, push the drawer forward into the rails until it reaches the back.

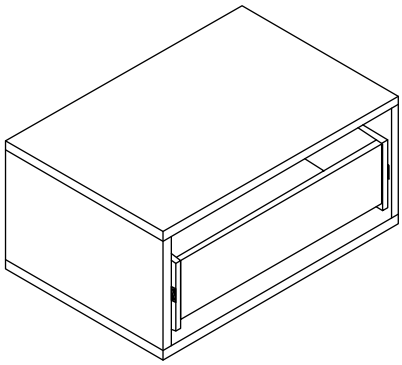

Repeatedly (2-4 times) push and pull the drawer to check if it slides smoothly. If not, disassemble the drawer and repeat step 3 to re-install.

Door Panel Adjustment Instruction

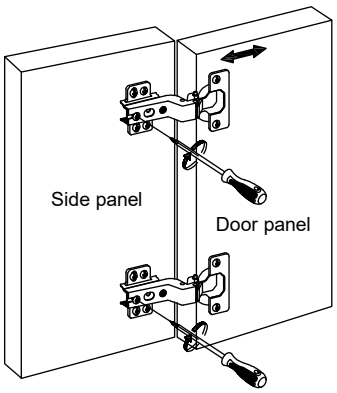


①

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

Adjustment range: 4mm

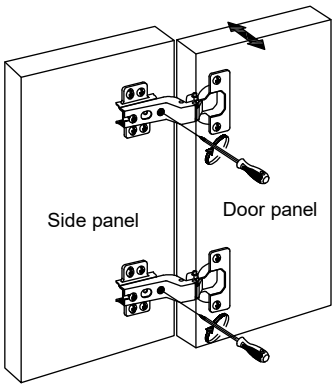


②

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm

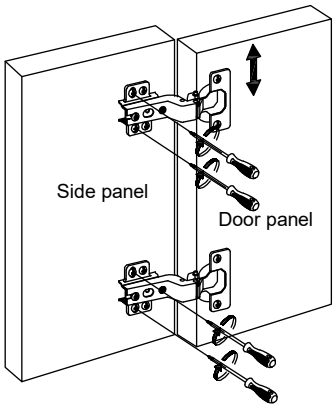

③


Up-Down Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm

Door Panel Adjustment Instruction

Common Door Panel Issues:

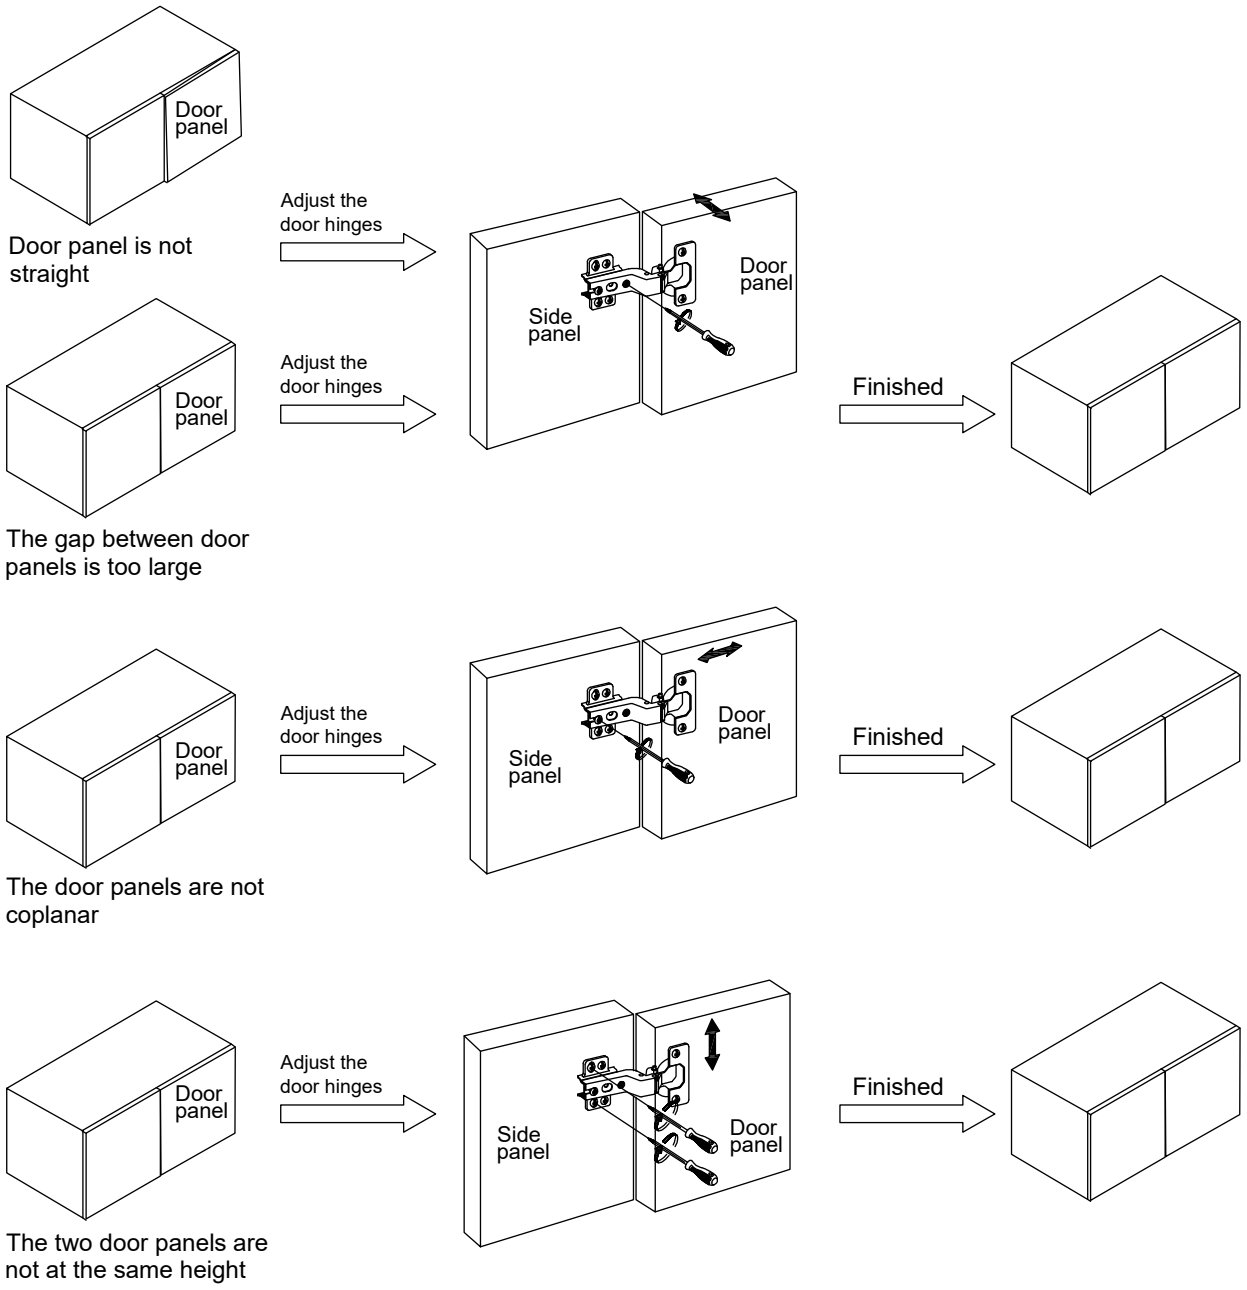

Usage and Maintenance

Use and Care

- Leave it vacant for half a month before use, maintain good ventilation to eliminate any odor.
- Place items steadily, heavier items should be placed at the bottom to avoid tipping over. For high temperature or frozen items, please put a heat-resistant pad underneath.
- Do not directly push or drag hard objects on the furniture to avoid scratching the surface.
- Avoid prolonged exposure to sunlight or heat sources to prevent discoloration or fading.
- Pay attention to moisture prevention to avoid mold. Keep the furniture placed steadily to prevent breakage or loosening.
- Please educate children to stay away from the glass sharp corners of the furniture.
- When opening and closing doors or drawers, handle them gently and check the screws regularly to tighten them.
- Use a soft dry cloth to dust, a slightly damp cloth to clean the surface, avoid abrasive cleaners.

Help Center

Treat your furniture with care and follow the maintenance guidelines. In return, your furniture will provide you with lasting comfort and support. For any additional inquiries or assistance, please do not hesitate to contact us


Inquiry


Assembly issue


Missing parts


Returns&Refunds

We look forward to seeing you again soon.