USER MANUAL



CEILING FAN WITH LIGHT

Please keep children and pets away.
Contains small accessories, please keep away children/pets to avoid accidental ingestion.





Ceiling Fan

With Light



ABOUT US

We are a professional company that specializes in producing various large home products. We have our own factory and our products are exclusively designed,our product tested multiple times before being put on sale.

If you encounter any problems after purchasing, please feel free to contact us and we will reply to you within 24 hours.

02 SAFETY INFORMATION

WARNING

To avoid fire, shock and serious personal injury, please read the following instructions carefully.
Important Safety Instructions.

- Before installing the fan, disconnect the power by removing fuses or turning off circuit breakers.
- Make sure the installation site you choose allows a minimum of 7.5 feet from the blades to the floor and at least 30 inches from the tip of the blades to any obstruction (see the picture at the next page).
- If you are mounting the fan on a ceiling outlet box, use a metal outlet box. Secure the box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 45kgs.). Do not use a plastic outlet box. Attach the mounting bracket by using the hardware supplied with the ceiling outlet box.
- If you are mounting the fan to a joist, make sure it is strong enough to support the moving weight of the fan (at least 45kgs.)
- After installing the fan, make sure all the connections are secured. This will prevent the fan from falling.
- Do not insert anything into the fan blades while the fan is operating.
- Turn the fan off and wait for it to stop before reversing fan direction.
- To reduce risk of electrical shock and personal injury, do not install the fan on a sloped ceiling.
- To reduce the risk of electrical shock and personal injury, do not use this fan with any solid-state.
- To reduce risk of personal injury, use only the two steel screws and lock washers provided with the fan for mounting the outle box.
- The largest angle for angled mount is 15°(see the picture at the next page).

Risk Of Electric Shock

- Before you start installing this ceiling fan, disconnect the power supply by turning off the circuit breaker. (see the picture at the next page).
- All electrical connections must be in accordance with local and National Electric Code (N.E.C.) standards and ANSI/NFPA 70.
- Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Do not alter, re-locate or remove wiring when nothing goes wrong with the product.
- Double-check all connections and screws to be sure they are tight and correct.
- Verify whether the supply voltage is correct by comparing it with the product information.

Risk Of Injury

- Keep all the parts of this product away from children. The package contains many small or heavy parts that may bring children the risk of choke or injury.
- Make sure to install all parts firmly enough in case they fall while running. Carefully check all screws, bolts, and washers on the fan assembly to ensure they are secured.
- Wear safety gloves and safety glasses always when installing or removing the light or the fan, or performing maintenance. Some parts of the components are sharp and may hurt your hands, please make sure you are wearing safety gloves when touching and installing the components.
- Wear rubber-soled shoes and work on a sturdy ladder.

Maintenance And Cleaning


- Periodically cleaning your ceiling fan is the only required maintenance. Use a soft brush or lint free cloth to avoid. scratching the paint. Please turn off the electricity power before you clean your fan.
- Do not use water when cleaning your ceiling fan. It could damage the motor or the blades or even evoke an electrical shock.
- The motor has permanently lubricated ball bearing. No need to oil.

MAKE SURE THE POWER IS OFF IN THE ELECTRICAL PANEL BOX BEFORE YOU DO ANY CLEANING OR REPAIRS

03 PRE-INSTALLATION ADVICE

WARNING

To avoid serious injury or death, turn off the power at the circuit breaker before installing the fan.

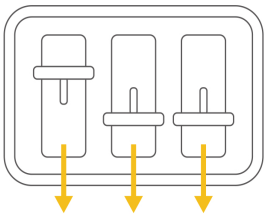

IMPORTANT

To avoid abnormal operation, do not connect the product to the dimmer switch or fan speed switch.





TOOLS NEEDED



Phillps Screwdriver | Wire Stripper | Step Ladder | Safety Gloves

04 ACCESSORIES LIST

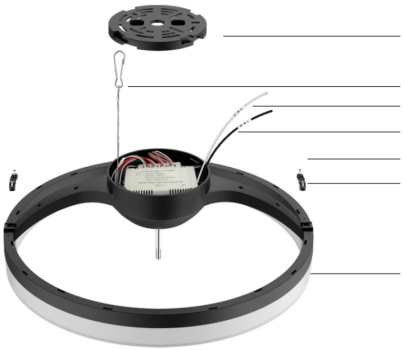

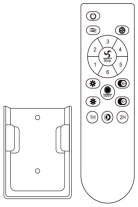

Remote Control





Section 1 Ceiling Mounted Tray	A ×1 	K  K 1 Wood Screws; or K 2 Expansion Bolt; or K 3 Electrical Box Screw
Section 2 Main Part Assembly	E ×4 	H ×1  I ×1 
Section 3 Hanging & Wiring	J ×2 	D ×1 

If any parts are missing or broken, please contact us.

Section 1
Ceiling Mounted Tray

It's very simple,
just complete the installation
according to your ceiling type.

NEEDED ACCESSORIES



A×1




K 1×4	K 2×2	K 3×2
Wood Screws	Expansion Bolt	Electrical Box Screw




Difficulty Level: ★★

INSTALLATION STEPS

Ceiling Mounted Tray — Main Part Assembly — Hanging & Wiring

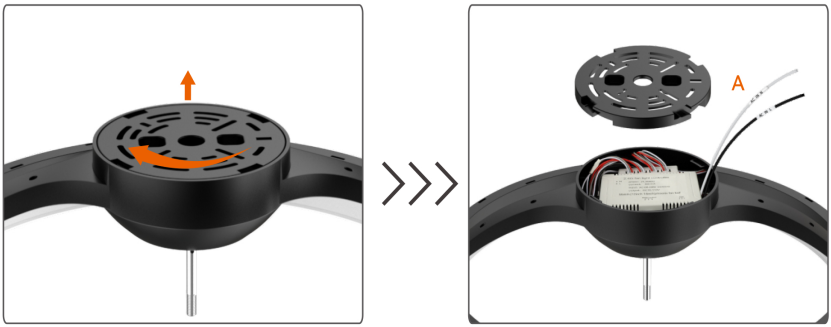

According to your ceiling type, choose the appropriate screws.

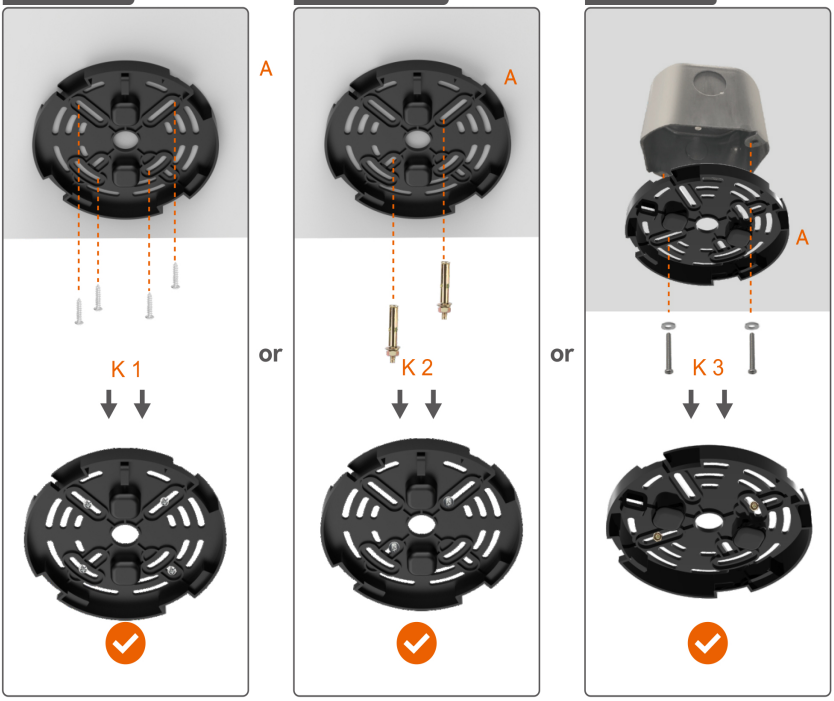

Section 2
Main Part Assembly

Complete your own fan assembly just like Lego!

NEEDED ACCESSORIES



G×1



E×4



I ×1



H ×1



Difficulty Level:


INSTALLATION STEPS

Ceiling Mounted Tray — Main Part Assembly — Hanging & Wiring


Step 1



Step 2

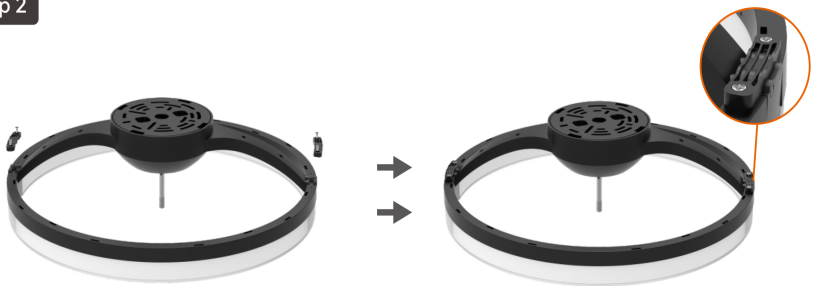


Step 3

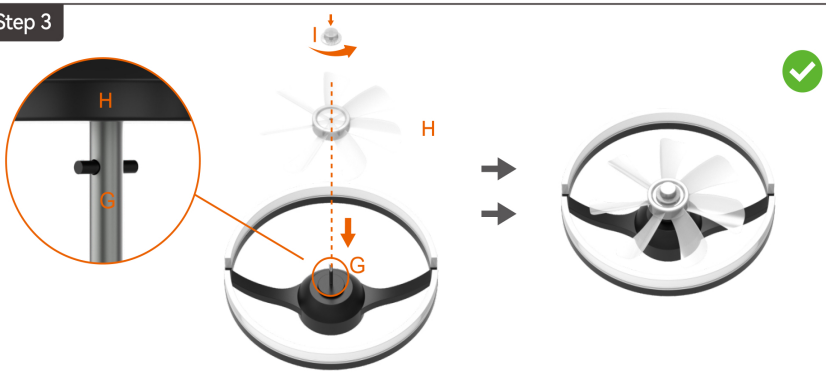

Section 3
Hanging & Wiring

Final step!
Let's get your fan successfully mounted on the ceiling!

NEEDED ACCESSORIES

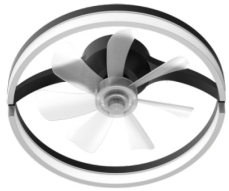

Section 2



J ×2



D ×1




Difficulty Level:


INSTALLATION STEPS

Ceiling Mounted Tray — Main Part Assembly — Hanging & Wiring

Step 1

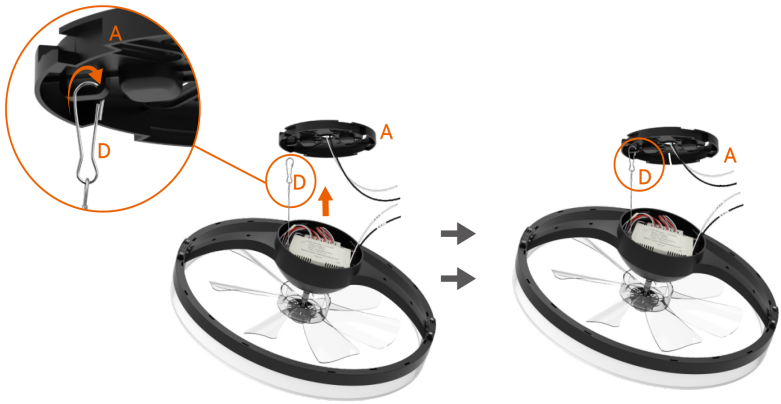

Step 2

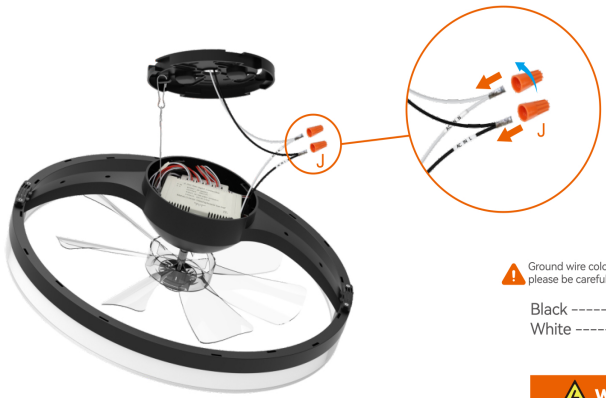

Please hold it with your hands to prevent it from falling.

Ground wire color may not match actual color, please be careful to identify.

Black -------- Live wire
White ------ Neutral wire


WARNING

All wiring must be in accordance with national and local electrical codes ANSI/NFPA 70. If you are unfamiliar with wiring or in doubt, consult a qualified electrician.


INSTALLATION STEPS

Ceiling Mounted Tray — Main Part Assembly — Hanging & Wiring

Step 4

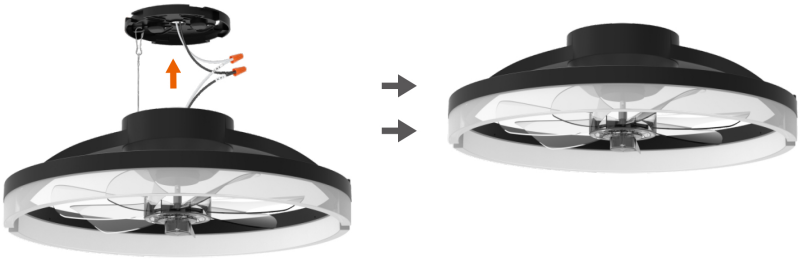

Step 5

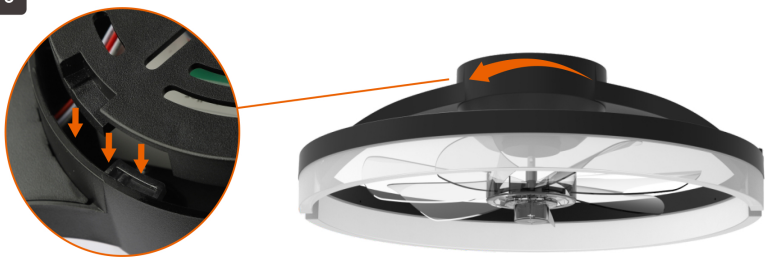

Rotate clockwise in the direction of the arrow




Excellent!
Congratulations on becoming a great DIYer!
Now enjoy your Fan!

06 REMOTE CONTROL

- **Install 1.5*2 volt battery.**
  (To prevent damage to transmitter, remove the battery if not used for a long time).
- **Do not place the remote control in an excessively hot or humid environment**


- Remote Control Buttons -

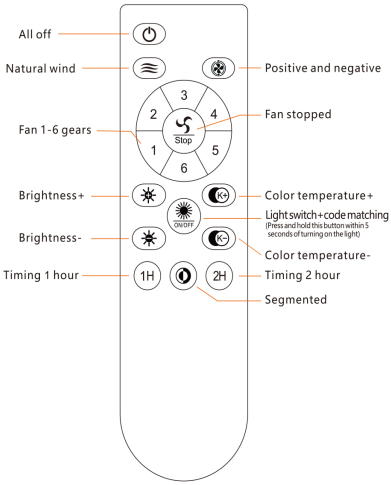

Q1: How do I re-pair the remote control with the fan if the remote control is operating abnormally?

A: The remote transmitter should already be paired to the receiver and ready to use.
You can strengthen the connection between the remote control and the ceiling fan through the following operations:


1. Turn off the power to the fan and then turn on the power.
2. Turn on the power and Press and hold the light pairing key within 5 seconds of the light on, When you hear a beep or a light flashes, the code match is successful. If you need to match the code a second time, you need to wait 30 seconds before turning on the power and repeat the above operation
(To prevent faulty operation, please ensure all other ceiling fans within range are turned off at the wall switch while pairing.)

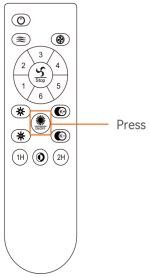

07 BLUETOOTH CONTROL

Step 1-1: Download App

Step 1-2: Change language

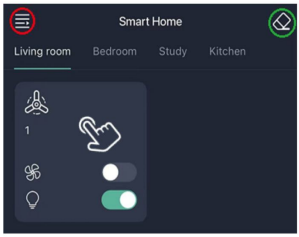


Menu:
Change Language or check instruction



Unpair button
Restart the wall switch, click this button within 5 seconds when the light on, it will light flash once, means unpair finished.

Long press this card
you can rename the device, or click the X to unpair.

Step 2: Add Device


1. Turn on Bluetooth.
2. Click "+" to add the device.
3. Select "fan lamp."
4. Select your room.

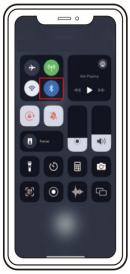

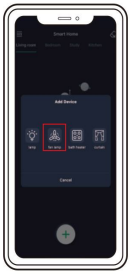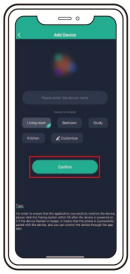



Step 3: ON/OFF & Bluetooth pairing

ON / OF

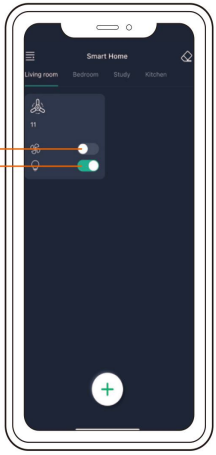


Bluetooth pairing

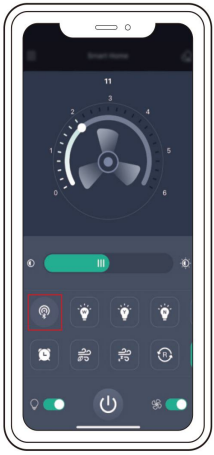

After open the app interface, turn on the power of Ceiling Fan, click the bluetooth button to pair within 5 seconds, the light blinks once means the pairing is successful.

07 BLUETOOTH CONTROL

Function introduction

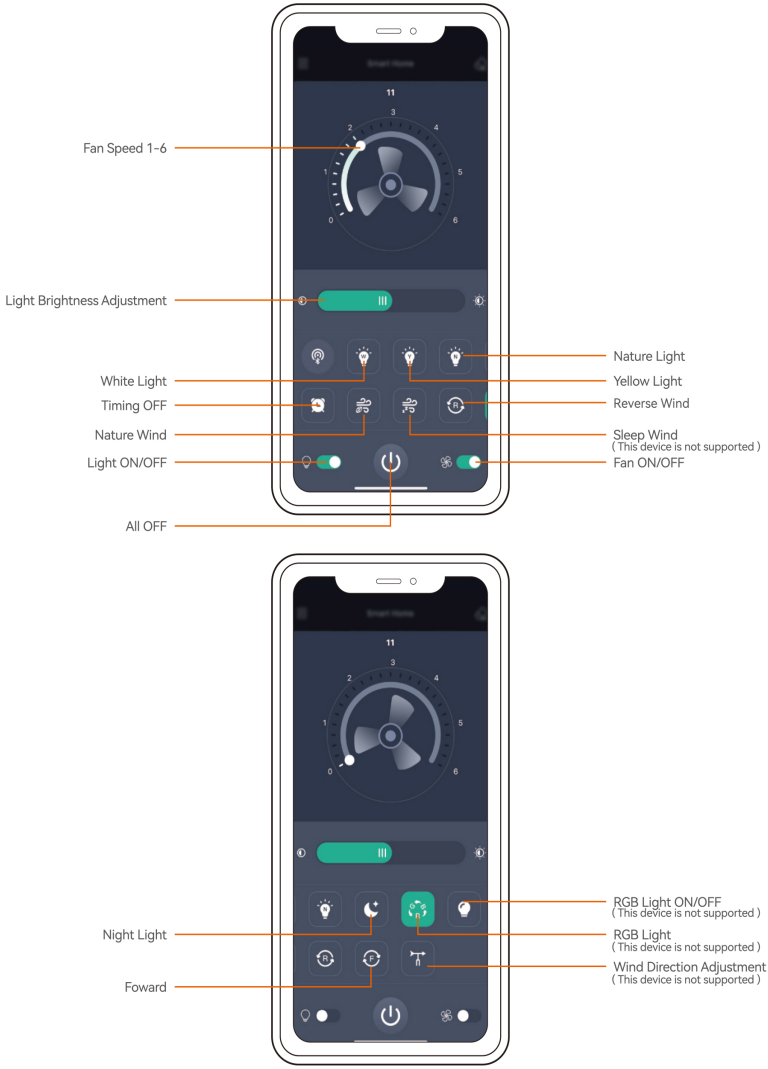

08 COMMON TROUBLESHOOTING

NOISE

When it is quiet(especially at night) you may hear occasional small noises. This is normal.
Please allow a 24-hour “breaking-in” period, most noises associated with a new fan disappear during the time.

Your fan may occasionally jerk forward or backward upon starting up.
This is normal and does not affect the fan operation.
Try these troubleshooting steps before contacting customer service.

Problem	Solution
Fan not spinning	• Make sure the fan is getting power. • Check your circuit breaker or fuse panel and wall switch for functionality. • Check to make sure the fan wires are correctly connected to the house wires. • Remote control must be paired with the fan within 1 minute after connecting the fan to the electricity. • Use a multi-meter and test the adapter wiring harness to see if there is any electrical output. • All the pin wiring on the circuit board must be inserted tight and in the correct position. • Remote needs to be paired with the fan first. • Make sure the fan blades spin freely. • If you're using a wall control,check the power to the breaker from your control and try working your ceiling fan manually. (Normal switch only for the fan power on/off)
Fan light not working	• Make sure LED wires are connected to the circuit board. • Make sure the whole fan is powered.
The fan is noisy and wobbling	• Check if the blade screws are NOT rubbing against any part of the motor housing. • Check the pin wires are NOT connected against any moving parts. • Check the down fan cup is NOT hitting the motor. • Confirm the canopy is NOT touching the ceiling while the fan is in operation. • Check the down rod is NOT slanted. • Tighten any loose screws on the light kit, fan blades, motor coupling, down rod, brackets and mounting hardware. • Confirm the hanger ball is firmly seated in the mounting bracket. • The ceiling beam must meet the minimum tensile test strength of 30KG for installation. • Make sure the blades and brackets are NOT bent or deformed. • Verify the wire connections are not rattling against each other. • Verify the fan blades are not cracked. If the fan blades are cracked, replace the damaged blades with a new blade set from the same brand as your ceiling fan to ensure compatibility. • Confirm the light kit is NOT slanting and hitting the motor.
The fan or light automatically turns on/off	• Confirm the circuit breaker is not malfunctioning. • Verify the wire connections are not frayed. • Check the app is not set to a timer or schedule. • Cut the fan power for 10 minutes then power on again. • All the pin wiring on the circuit board must be inserted tight and in the correct position.