
Vegetable Spinner Instruction Manual



[Part Names]

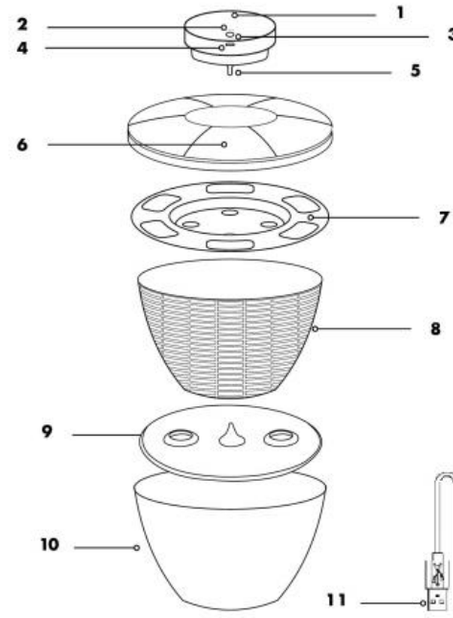

1. Motor
2. Top Cover
3. Seal Ring
4. Safety Latch
5. Clear Lid
6. Spin Basket Lid
7. Spin Basket
8. Outer Bowl
9. Base
10. Spinner Main Body
11. USB Charging Cable

[Notes for Use]

1. Please confirm that the power supply voltage matches the product before use.
2. Please do not immerse the motor main body in water for cleaning to avoid malfunction or electric shock hazards.
3. Please do not touch the power plug with wet hands.
4. Please do not disassemble, modify, or repair the product by yourself.
5. Please do not place the main unit in dishwashers, microwave ovens, or heating equipment.
6. Please do not operate continuously for an excessively long time to prevent the motor from overheating. It is recommended to pause for 5 minutes before reuse.
7. Please place the product on a flat and stable surface during use. Please do not use it on tilted or unstable surfaces.
8. Please do not use this product in high-temperature, humid, flammable, or explosive environments.
9. Please do not overload the product (do not fill ingredients above the maximum capacity line).

[Operating Instructions]

1. Put cleaned vegetables or fruits into the spinning basket.
2. Cover the spinning basket lid.
3. Close the outer lid, align the safety latch with the slot, and tighten it (make sure the latch is securely locked).

4. Press the power switch and select the spinning duration or speed gear as needed.
5. When spinning finishes, press the switch to stop operation, open the lid, and take out the ingredients.

[User Instructions]

1. Before first use, please clean all parts except the motor with neutral detergent.
2. Put cleaned ingredients into the spinning basket. Do not fill beyond the maximum capacity marking line.
3. Start the device only after confirming both inner and outer lids are closed and locked.
4. Please do not force open the lid during the spinning process to avoid danger.



5. Please disconnect the power supply promptly after use.



[Maintenance & Cleaning]

1. Please clean the product promptly after use to prevent unpleasant odors and bacterial growth.
2. The motor main body cannot be washed with water. Please wipe it with a damp cloth that has been wrung dry.
3. Removable parts, including the spinning basket, outer bowl, and lid, can be cleaned with dish soap. Please make sure all parts are fully air-dried before reassembly and storage.
4. Please store the product in a dry and ventilated place, away from direct sunlight.