
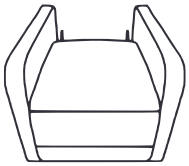

Assembly instructions

Read all instructions before assembly. Keep this guide for future reference.


Before you begin

Check the parts below. Place the seat base on a level indoor floor and leave the chair unplugged during assembly.

PARTS LIST Quantity: 1 of each

A	B	C	D	E
				
Backrest	**Seat base**	**Wired remote**	**Power cord**	**Power adapter**

1 Attach the backrest

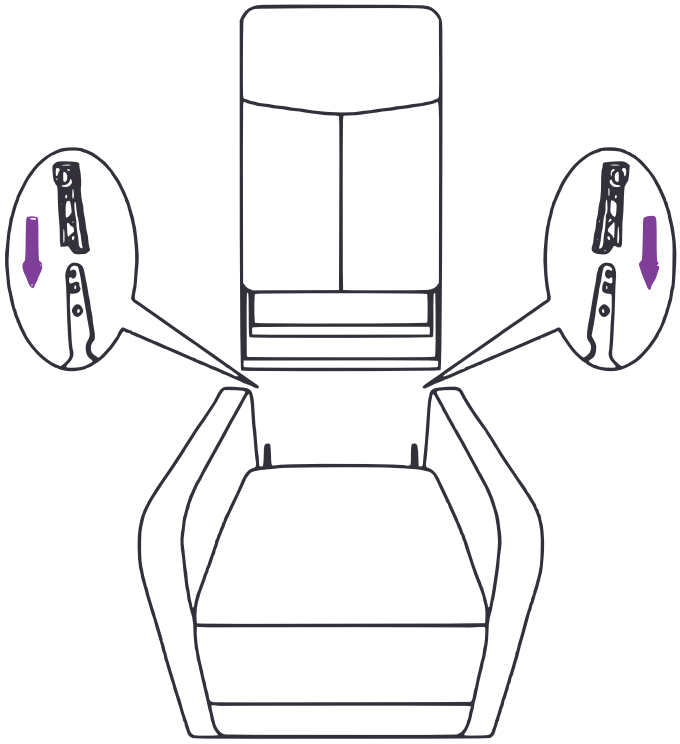

Align both sides

Align the brackets on the backrest (A) with the matching brackets on the seat base (B).

Slide down into place

Lower the backrest straight down until both sides are fully seated.


The enlarged views show the bracket connection on each side.

Check both sides are secure before operating the chair.

Electrical connections

Keep the power cord unplugged until all chair connections are complete.

2 Connect the remote and power supply

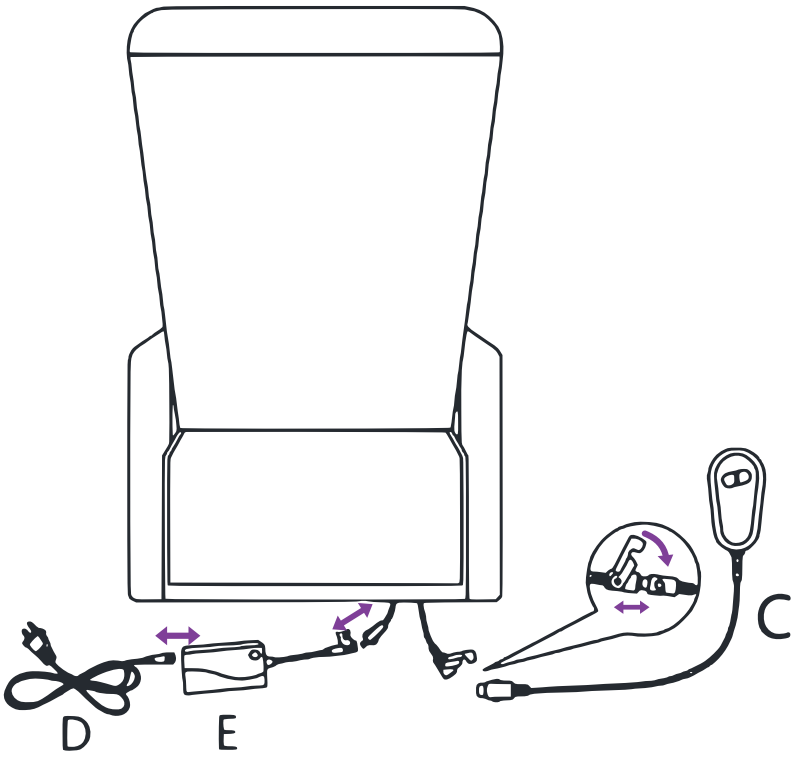

1 **Remote control (C)**

Connect the wired remote to the matching chair connector.

2 **Power adapter (E)**

Connect the chair power lead to the power adapter.

3 **Power cord (D)**

Connect the power cord to the power adapter.

4 **Wall outlet - connect last**


Plug the power cord into a wall outlet after checking all connections.

Keep all cables away from moving parts. Do not pinch or trap the cables.

Operation & care


Before every use, check that the chair and footrest have room to move freely.

3 Recline

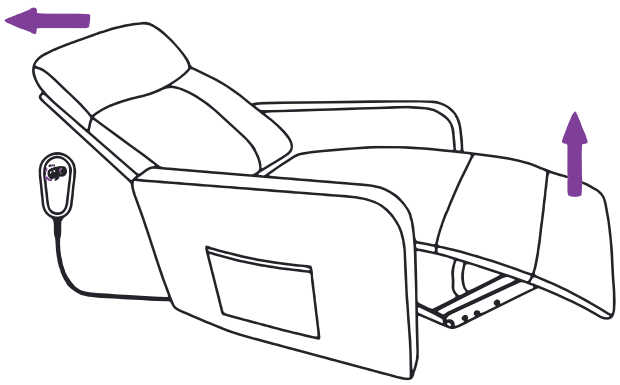

Use the recline button on the wired remote to raise the footrest and recline the backrest.

4 Return upright

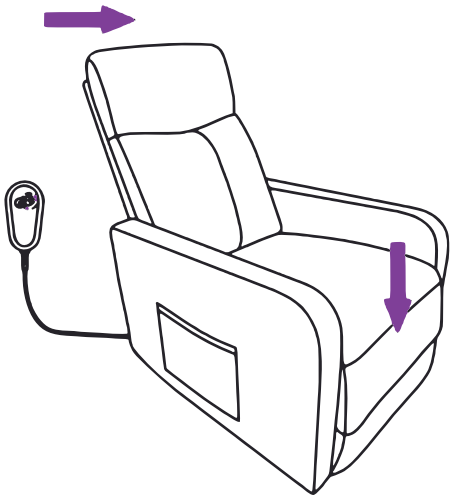

Use the return button on the wired remote to lower the footrest and return the backrest upright.

WARNING - KEEP THE MECHANISM CLEAR

Keep hands, children, pets and objects away from the mechanism and the area beneath the chair during operation. Never allow children or pets to play under the chair.

Safe use

Return the chair fully upright and close the footrest before sitting down or standing up. Do not sit or stand on the footrest.

Use only the supplied power components. Keep liquids away from electrical parts and do not use damaged cords.

Care & assistance

Unplug before cleaning. Wipe with a soft, dry cloth. Avoid abrasive cleaners and harsh solvents.

If the chair does not respond, unplug and check the connections on page 2. If the issue continues, contact the retailer with your order details and model 7655.