

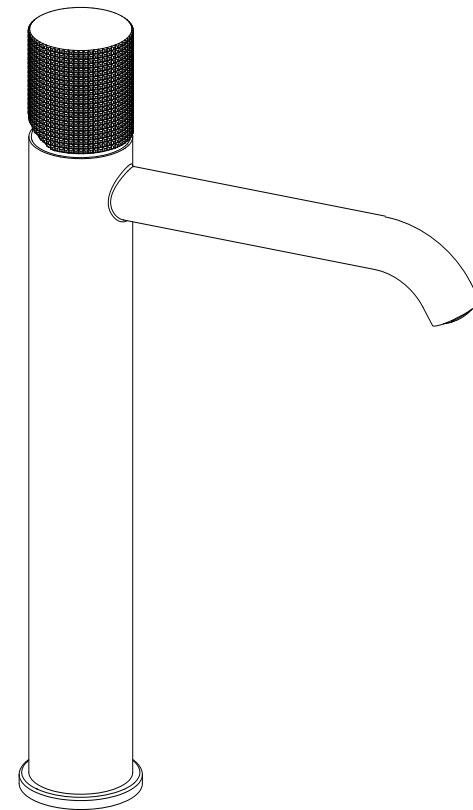
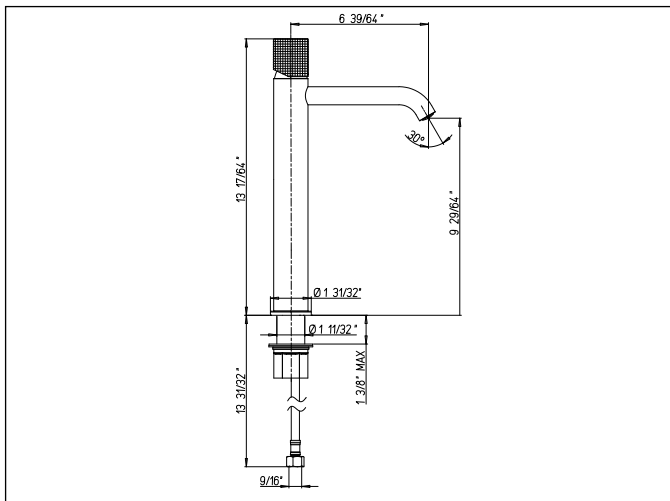
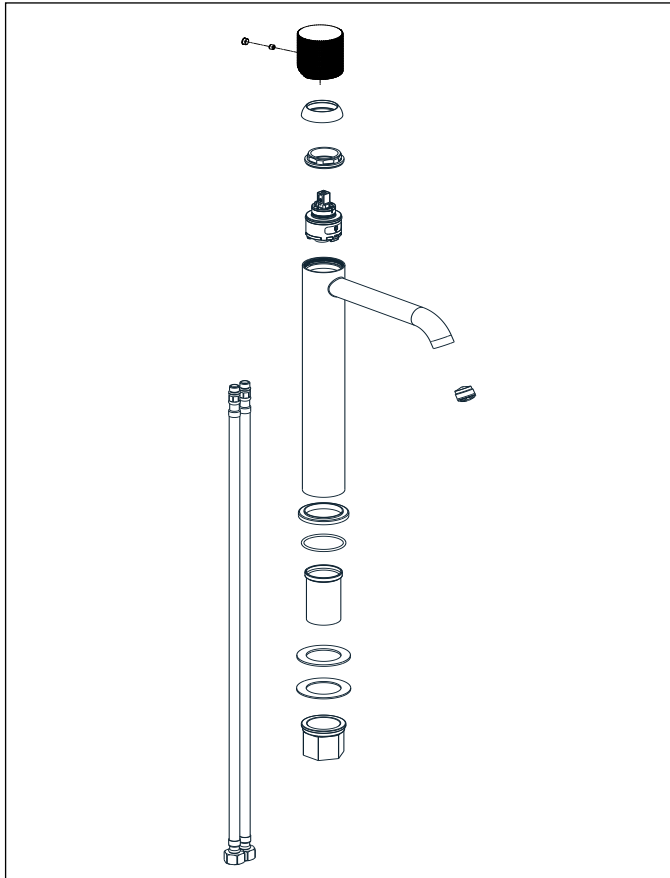
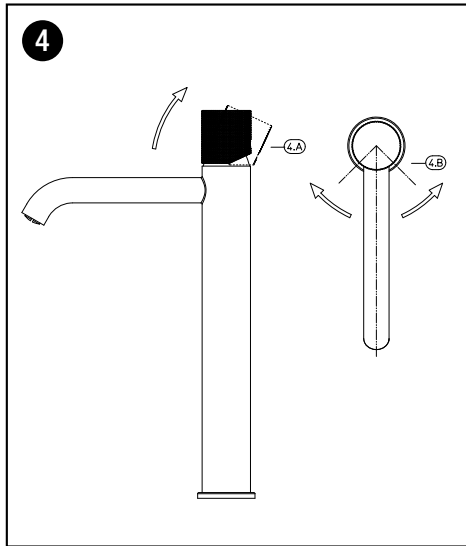
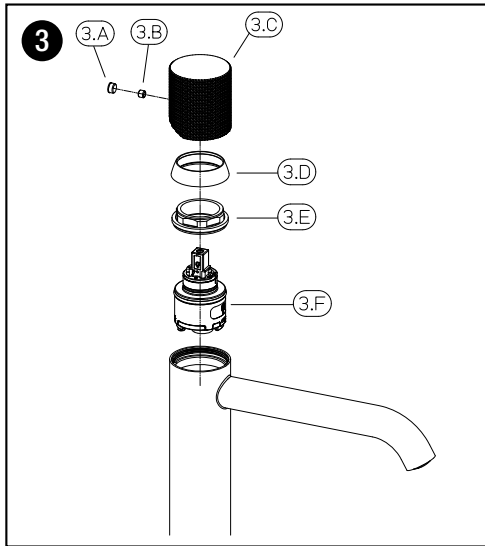


## LAVATORY FAUCET

### ASSEMBLY INSTRUCTIONS INSTRUCCIONES PARA EL MONTAJE

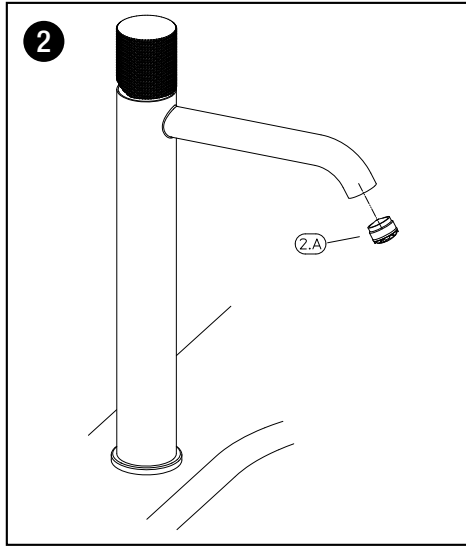

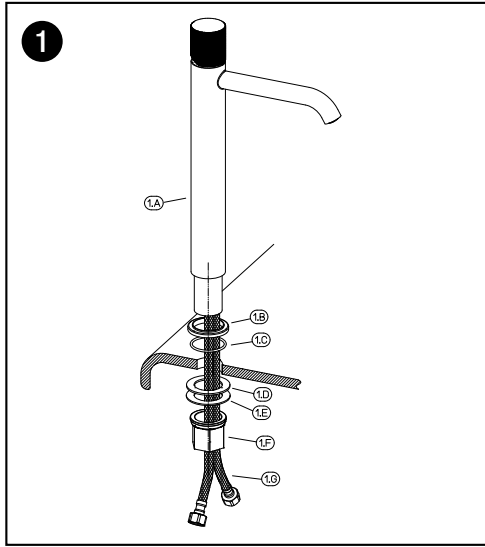

## GB INSTALLATION INSTRUCTIONS

| Water Supply          | Recommended    | Max            | Min             |
|-----------------------|----------------|----------------|-----------------|
| Hot water temperature | 65 C° (~150F)  | 80 C° (~175F)  | 15 C° (~60F)    |
| Working pressure      | 3 BAR (~45PSI) | 5 BAR (~75PSI) | 0.5 BAR (~7PSI) |

In case of pressures over 5 BAR (~75 PSI), we recommend to use a pressure reducer.

Before proceeding with the assembly, purge the hot and cold water pipes so as to avoid the accumulation of dirt and impurities that could affect the function of the faucet.

### FIG. 01

Fit the faucet into the sink hole, i the base washer (1.B) and the gasket (1.C) between the body (1.A) and the ceramic surface. Slide the gasket (1.D) and the flange (1.E) on the threaded tie-rods (and fasten the faucet by tightening the nuts (1.F). Connect the supply flex hoses (1.G): the left to the hot water supply and the right to the cold water supply.

### FIG. 02

We recommend to periodically clean the aerator so as to prevent the accumulation in time of debris and limestone which may gradually reduce the flow. Loosen the and clean the filter (2.A).

### FIG. 03

Remove the cap (3.A), loosen the grub screw (3.B) and pull out the handle (3.C). Screw off the protection cover (3.D), the lock nut (3.E) and pull out the cartridge (3.G). Reassemble in reverse order carefully cleaning the support sealing surfaces of the gaskets. Tighten the lock nut (3.E) so as to ensure the proper sealing and enable a smooth operation of the handle.

### FIG. 04

Pull the lever (4A) upwards to activate the valve and start the water flow. Repeatedly pulling the lever (4A) will increase the water flow. Rotate the lever counter-clockwise to decrease the water temperature to cold flow only. Rotate the lever clockwise to increase the water temperature to hot flow only.

## MAINTENANCE OF THE SURFACES

Before cleaning, make sure the faucet is cold (heat wears the surface of the faucet down). Do not use products containing acids or corrosive substances. Wipe the faucet daily with a soft cloth. Do not use steel wool or metal pads, abrasive sponges or similar products. Right after cleaning rinse off the detergent residues with cold water. Damages to the faucets caused by incorrect treatment are not covered by the warranty.

Based on its policy of steady development Paini s.p.a. reserves the right to change the characteristics of the products without notice and therefore the images and data contained in this catalogue may vary.

## ES INSTRUCCIONES DE INSTALACIÓN

| Alimentación              | Recomendada      | Máxima           | Mínima          |
|---------------------------|------------------|------------------|-----------------|
| Temperatura agua caliente | 65 C° (~150F)    | 80 C° (~175F)    | 15 C° (~60F)    |
| Presión de funcionamiento | 3 BARES (~45PSI) | 5 BARES (~75PSI) | 0.5 BAR (~7PSI) |

En caso de presiones de funcionamiento superiores a 5 BARES (~75 PSI), se aconseja el uso de un reductor de presión.

Antes de efectuar el montaje, se aconseja purgar las tuberías del agua caliente y fría para evitar que suciedad y pequeñas impurezas afecten el funcionamiento del grifo.

### FIG. 01

Posicionar el grifo en el orificio del lavabo, la arandela de base (1.B) y la junta (1.C) entre el cuerpo (1.A) y la cerámica. Introducir los tirantes roscados ( en la junta (1.D) y la brida (1.E) y fijar el grifo mediante las tuercas (1.F). Conectar los tubos flexibles de alimentación (1.G): el izquierdo al suministro del agua caliente, el derecho al suministro del agua fría.

### FIG. 02

Es oportuno limpiar periódicamente el aireador para evitar la acumulación de residuos y caliza que con el tiempo causa una gradual disminución del caudal. Destornillar y limpiar el filtro (2.A) de las impurezas;

### FIG. 03

Extraer la placa (3.A), aflojar el tornillo prisionero de fijación (3.B) y retirar la maneta (3.C). Destornillar el capuchón (3.D), la abrazadera de sujeción (3.E) y extraer el cartucho (3.G). Para el montaje, efectuar las operaciones en sentido inverso, prestando especial atención a la limpieza de las superficies en las que se encuentran las juntas de estanqueidad. Apretar la abrazadera (3.E) para garantizar la estanqueidad y, al mismo tiempo, permitir un movimiento suave de la maneta. Acordarse de montar el espesor (3.F) en el nuevo cartucho (3.G).

### FIG. 04

Levantar la palanca (4A) para activar la válvula que permite el flujo del agua. Continuar levantando la palanca (4A) para aumentar el caudal. Girar la palanca (4B) en sentido antihorario para activar sólo el flujo de agua fría. Girar la palanca en sentido horario para activar sólo el flujo de agua caliente.

## MANTENIMIENTO DE LAS SUPERFICIES

Durante la limpieza la superficie del grifo debe estar fría (el calor acelera el desgaste de la superficie misma). Asegurarse de que los productos para la limpieza no contengan ácidos o sustancias corrosivas. El grifo debe ser secado diariamente con un paño suave. Evitar absolutamente esponjas de acero, esponjas abrasivas u otros productos similares. Inmediatamente después de la limpieza, enjuagar bien los residuos de detergente con agua fría. Los daños a los grifos debidos a un tratamiento no adecuado no están cubiertos por la garantía.

Por su política de continuo desarrollo, Paini s.p.a se reserva el derecho de modificar las características de los productos sin ningún aviso previo; por tanto, las imágenes y los datos contenidos en el presente catálogo deben considerarse a título indicativo.