Levipets 13L Vacuum Pet Food Storage Container

User Manual



levipets

Safety Precautions
Read and Save These Instructions

Before using this product, please read this manual carefully and keep it for future reference.

To reduce the risk of electric shock, fire, injury, or product damage, use the product only as described inthis manual. Do not attempt to repair, modify, or disassemble the product by yourself. For maintenance orservice, please contact customer support.

Important Safety Instructions

- Check that the charging voltage matches the product requirements before charging.
- Use the product on a flat, stable, and dry surface.
- This product is intended for indoor use only. Do not use it outdoors or in damp environments.
- Do not immerse the vacuum lid, pump, or electronic components in water.
- Do not allow pets to chew the power cord or charging cable.
- Unplug the charging cable before cleaning.
- After cleaning the storage container, dry it completely before adding pet food.
- Do not store wet food, liquids, or moist ingredients in this product.
- Keep the product away from heat sources, open flames, and direct sunlight.
- If the product does not work properly, stop using it and contact customer support.


Product Specifications

Item	Specification
Product Name	Vacuum Pet Food Storage Container
Model	MV26006
Capacity	13L
Rated Power	2W
Battery Capacity	2600 mAh
Charging Input	DC5V/1A
Vacuum Pressure	-20 kPa
Operating Noise	⩽45 dB
Material	Food-grade ABS + PC
Net Weight	2.6 kg
Product Size	320 x 285 x 345 mm/12.6 x 11.2 x 13.6 in

Product List




Vacuum Pet Food Storage Container

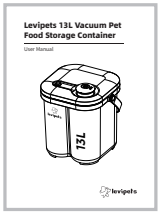


User manual



Vacuum pump




Charging Cable




Measuring spoon




Inner Container

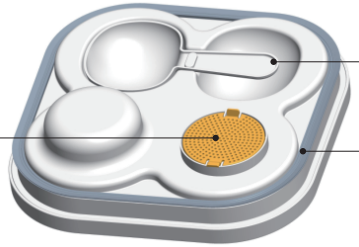


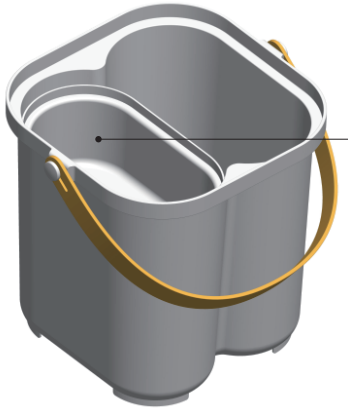

Product Structure

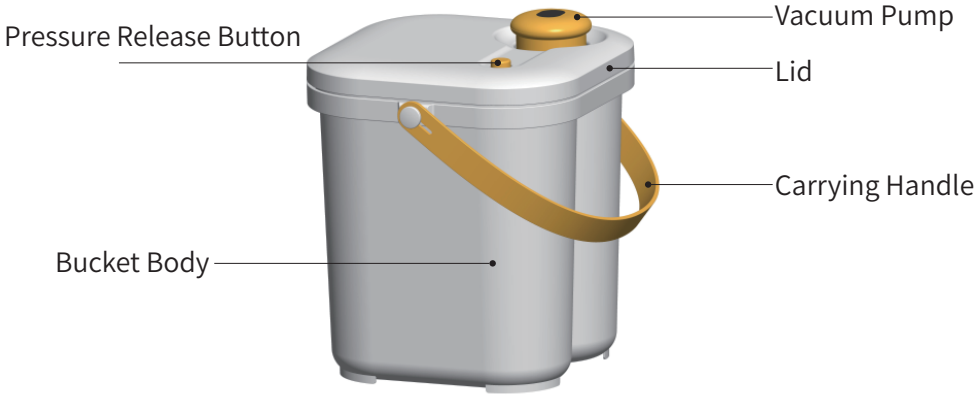

How to Open the Lid

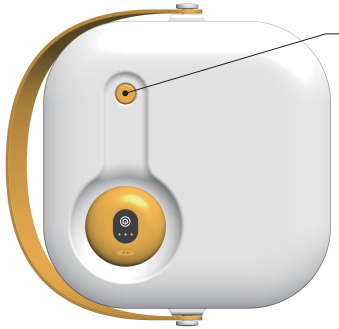

Pressure Release Button

When the container is vacuum-sealed,press the Pressure Release Button torelease the pressure. Wait for at least 1 second, then lift thevacuum pump and open the lid toaccess the pet food.

Do not force the lid open while thecontainer is still sealed.

levipets

Instruction - Battery Charging


When using the product for the first time, the battery may be depleted or in a low power state. Please ensure it is fully charged first.
Please use the magnetic end of the included charging cable to connect to the vacuum pump, and the other end to connect to a power bank or a 5V 1A adapter for charging. During the charging process, the power indicator light will flash, and the charging process will last for 2-3 hours.



① Rotate the vacuum pump counterclockwise in the direction shown in the diagram to remove it. (Do not remove the vacuum pump during the vacuuming process.)

② When putting the vacuum pump back, please rotate it clockwise to lock the vacuum pump in place.

③ After removing the vacuum pump, if the cover is not opened, the vacuum bucket will still remain in a vacuum state.

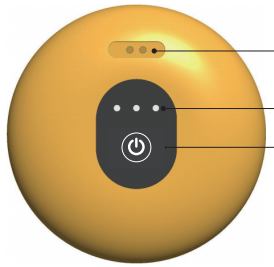

Magnetic charging port

Battery level indicator (white)

When starting up, the number of charging indicator lights is shown by the battery level indicator. During charging, the indicator lights flash, and they remain on when fully charged.

Switch button (double-click)


The switch light (white) is always on when starting up.

User Instructions - Vacuum Grain Storage



After closing the cover, double-click the switch button to start the vacuuming process. The vacuuming will automatically stop once it is completed.

⚠Please note whether there are any debris at the sealing area between the vacuum bucket and the bucket cover that may affect the seal. If so, please clean it up before closing the cover.

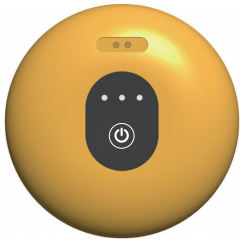

After double-clicking the switch button to start, the battery indicator light and the switch light remain on continuously. When it is turned off, the indicator light goes out.

levipets

Maintenance Instructions

(1) The vacuum pump, sealing ring, drying box, scoop, and inner bucket can be removed.
(2) The vacuum bucket, sealing ring, drying box, scoop, and inner bucket can be washed with water or damp towels.
(3) Before using again, make sure to dry the water completely before use; the bucket cover and vacuum pump must not be washed with water to avoid water ingress.

Troubleshooting

Fault manifestation	Status Notification	Cause investigation
After double-clicking the power button, the vacuum extraction did not start.	No suction sound	Confirm whether the battery has run out of power
After a long period of vacuuming, the seal has not been achieved. The vacuuming has been stopped.	The indicator light of the power-on button flashes continuously for 180 seconds.	1. Check if the sealing gasket of the bucket lid is deformed or aged; 2. Check if there are food residues at the contact area between the sealed bucket lid and the bucket body, which may affect the sealing; 3. Check if the sealing gasket of the vacuum pump is deformed or aged; 4. Check if the vacuum pump is locked, resulting in the pump not sealing with the bucket lid; 5. Check if the amount of contents in the bucket exceeds the maximum limit, causing the bucket lid and the bucket body not to achieve a sealing effect.

Warranty Information

From the date of purchase, for any product performance failures that are not caused by human error, you can enjoy the official warranty service.

1) Within 7 days from the date of your receipt, if there is a performance failure caused by non-human damage, it will be tested and determined by the after-sales service center. You can enjoy free return and exchange services.
2) Within 8 to 15 days from the purchase date, if there is a performance failure caused by non-human damage, it will be tested and determined by the after-sales service center. You can enjoy free replacement services.
3) Within 12 months from the purchase date, if there is a performance failure caused by non-human damage, it will be tested and determined by the after-sales service center. You can enjoy free maintenance services.
4) The after-sales registration form cannot be altered. Otherwise, it will be regarded as an invalid certificate.

Your pet's health and your peace of mind matter to us. If you needsupport, we're here to help.

For purchases made through online platforms, please contact the platform's customer service or our support team using your order record. A physicalwarranty card is not required for online purchases.

The warranty does not cover the following:

1. Damage caused by fire, lightning, flooding, earthquake, or other uncontrollable events.
2. Damage caused by improper assembly, use, disassembly, or repair not inaccordance with this manual
3. Damage caused by misuse, impact, liquid ingress, unauthorized modification,or use of non-original accessories.
4. Damage caused by normal wear and tear, color fading, or consumable partsduring regular use.
5. Products used beyond the valid warranty period.
6. Warranty forms that have been altered, damaged, or filled in with false orincomplete information.

Warranty & Service Registration

Customer Name	
Phone Number	
E-mail	
Order Number	
Product Model	
Purchase Date	
Purchase Channel	
Service Request/Issue	
Problem Description	

levipets