USER'S MANUAL

THERESA SERIES

Scan QR code for
installation video

Guide of Manual

- Thanks for your choice. **We will do our best to provide customer service for everyone.**
- Please check to make sure all parts are included as stated when you unpack. If there are parts missing or wrong, please contact us, **we will expeditiously provide reissue accessories, compensation or other services.**
- Instruction should be read carefully. But the manual may not cover every detail of all possible situations and steps. **Please contact us if further information and help are needed. We will respond in a timely manner.**
- **Please be patient that the other items are on the way if you buy more than one product.**

Warning

- It's kindly advised to assemble this product on a carpeted floor to protect it from being scratched.
- Small parts are included. Please keep the product away from children while assembling. Do not let children play or jump on the product.Do not stand on the item or use as a step ladder.
- Please pay attention to the sharp corners during assembly. We recommend the use of gloves to prevent the undesired injury.
- Prior to use, please check to see if there's any loosening screw or part. Make sure that each screw and part is correctly installed and securely fastened.
- It's unnecessary to use electric drill. Please at a low gear if you need.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- There’ s no need to use furniture polish. If you need, test it first in an inconspicuous area. Using solvents of any kind on your furniture may damage the finish. Never use water to clean your furniture as it may cause damage to the finish.
- Liquid spills should be removed immediately. Gently blot the spill with a soft clean cloth to avoid rubbing.

Further Advice about the Furniture Care

- It is best to keep your furniture in a climate-controlled environment.
- We recommend to keep furniture from sunlight exposure to avoid possible surface damage.
- Following these important and helpful tips will help retain your furniture's performance even when it ages.
- Periodically (every 90 days) make sure the screws are fully tightened.

















Max Weight Capacity

- 165lbs [Do not stand on the item]

Parts and Hardware List:

- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.











Parts List

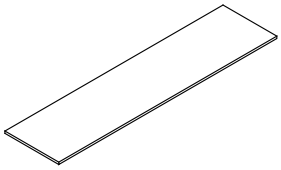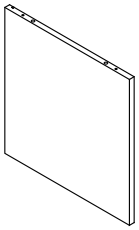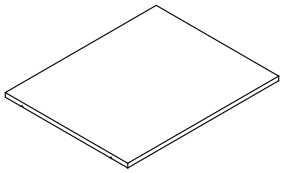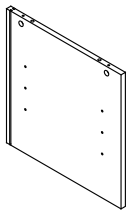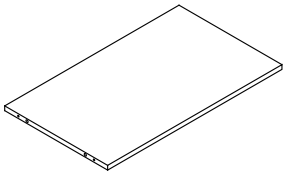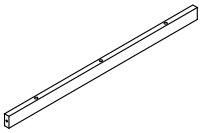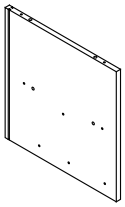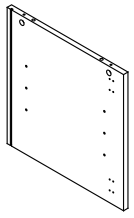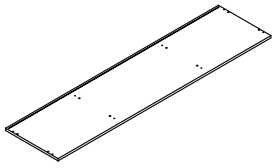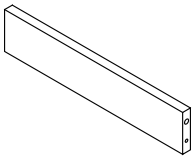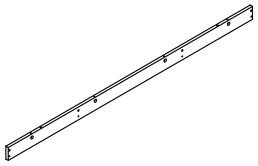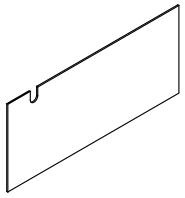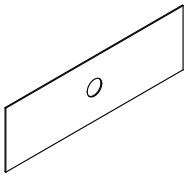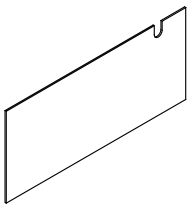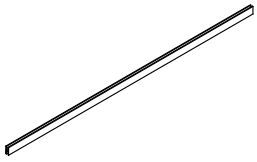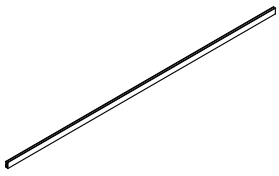① x1pc Panel 	② x1pc Left Panel 	③ x2pcs Adjustable Shelves 	④ x1pc Left Partition 
⑤ x1pc Shelf Panel 	⑥ x1pc Shelf Support Bar 	⑦ x1pc Right Partition 	⑧ x1pc Right Panel 
⑨ x1pc Base Plate 	⑩ x4pcs Short Skirting Boards 	⑪ x2pcs Vertical Divider 	⑫ x1pc Upper Left Back Panel 
⑬ x1pc Upper Back Panel 	⑭ x1pc Upper Right Back Panel 	⑮ x2pcs Short Back Support Bars 	⑯ x1pc Long Back Support Bar 

Parts and Hardware List:

- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.
















Parts List

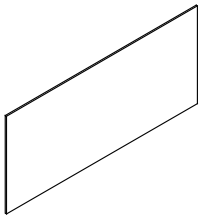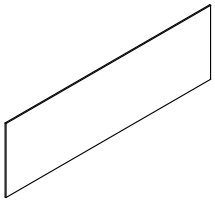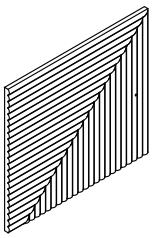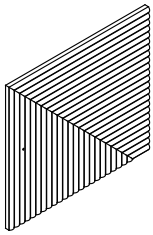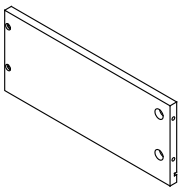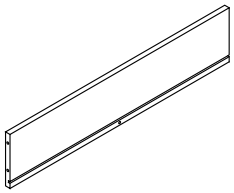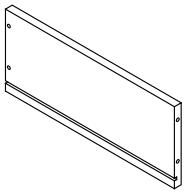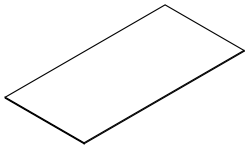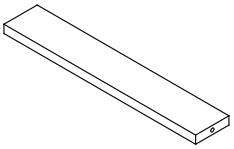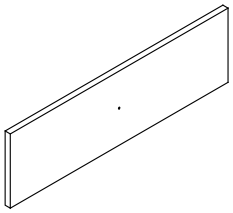
⑰ x2pcs Lower Side Back Panel 	⑱ x1pc Lower Back Panel 	⑲ x1pc Left Door Panel 	⑳ x1pc Right Door Panel 
㉑ x1pc Drawer Left Side Panel 	㉒ x1pc Drawer Back Panel 	㉓ x1pc Drawer Right Side Panel 	㉔ x1pc Drawer Bottom Panel 
㉕ x1pc Drawer Bottom Support Bar 	㉖ x1pc Drawer Front Panel 		

Parts and Hardware List:

- Make sure all parts are in the package.
- "+" in below list indicates that additional pieces are replacement parts.
- Do not fully tighten anything until all screws, nuts, washers and bolts are in place.


Hardware List

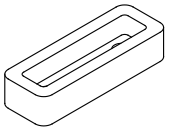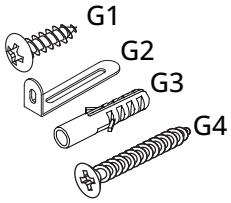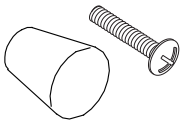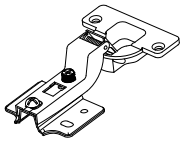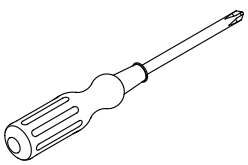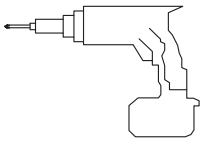
Ⓐ x35+4pcs  M4*35	Ⓑ x35+4pcs  M15*10	Ⓒ x35+4pcs  M15*10	Ⓓ x13+1pcs  M8*30
Ⓔ x14+1pcs  M3.5*12	Ⓕ x2pcs 	Ⓖ x2sets 	Ⓗ x35pcs 
Ⓘ x10pcs 	Ⓙ x8+1pcs 	Ⓚ x3pcs 	Ⓛ x4pcs 
Ⓜ x24+2pcs  M3*12	Ⓝ x12+1sets 	x1set  CL DL DR CR	
Not provided 	Not provided 	Not provided 	

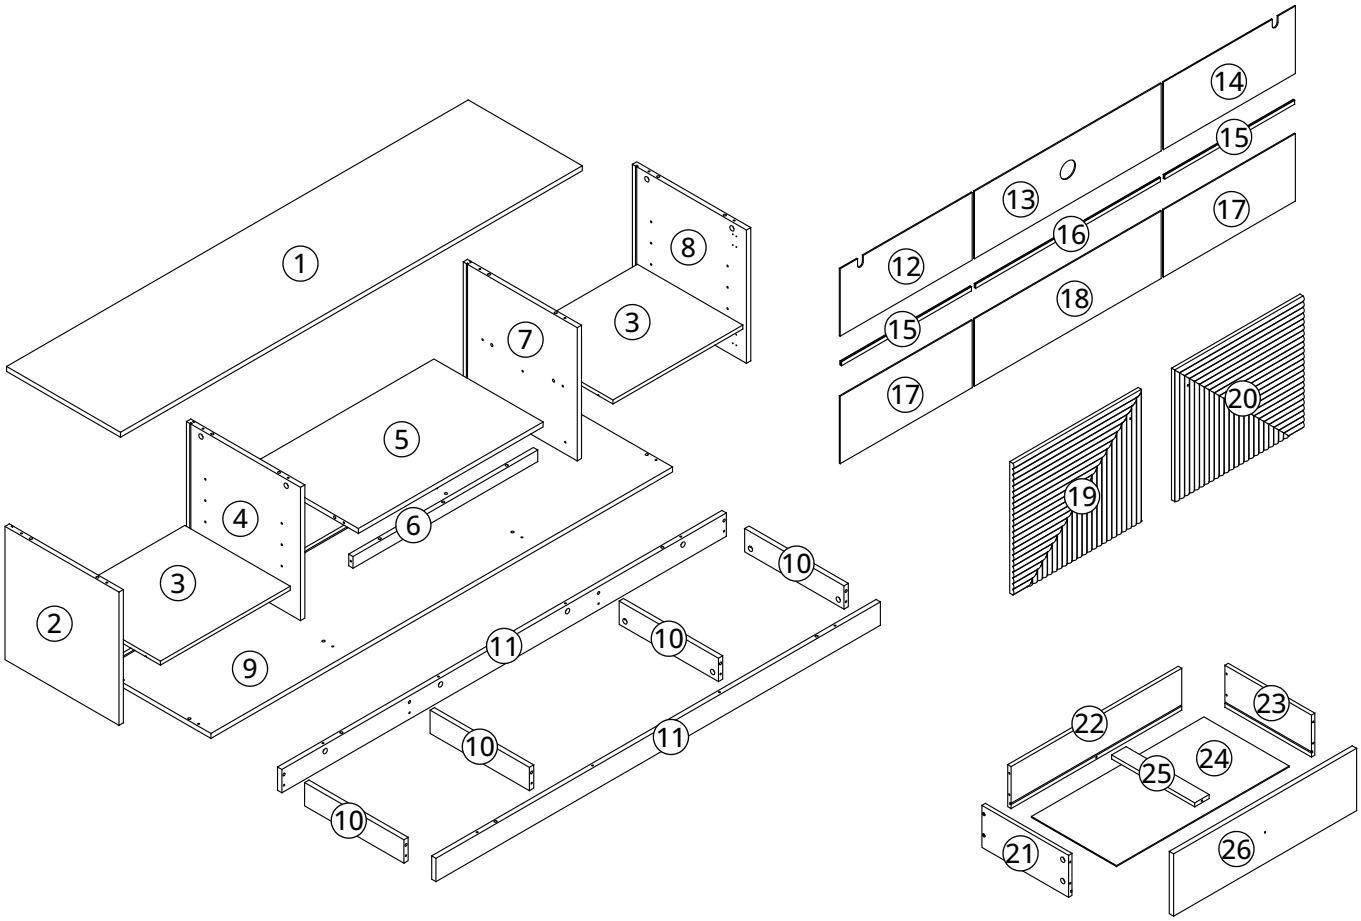

1
8
3
7
5
4
6
3
2
9
10
11
10
10
11
10
14
15
13
16
17
12
18
15
17
20
19
22
23
24
25
21
26


1

Assemble on a soft surface/mat to avoid scratching the product finish

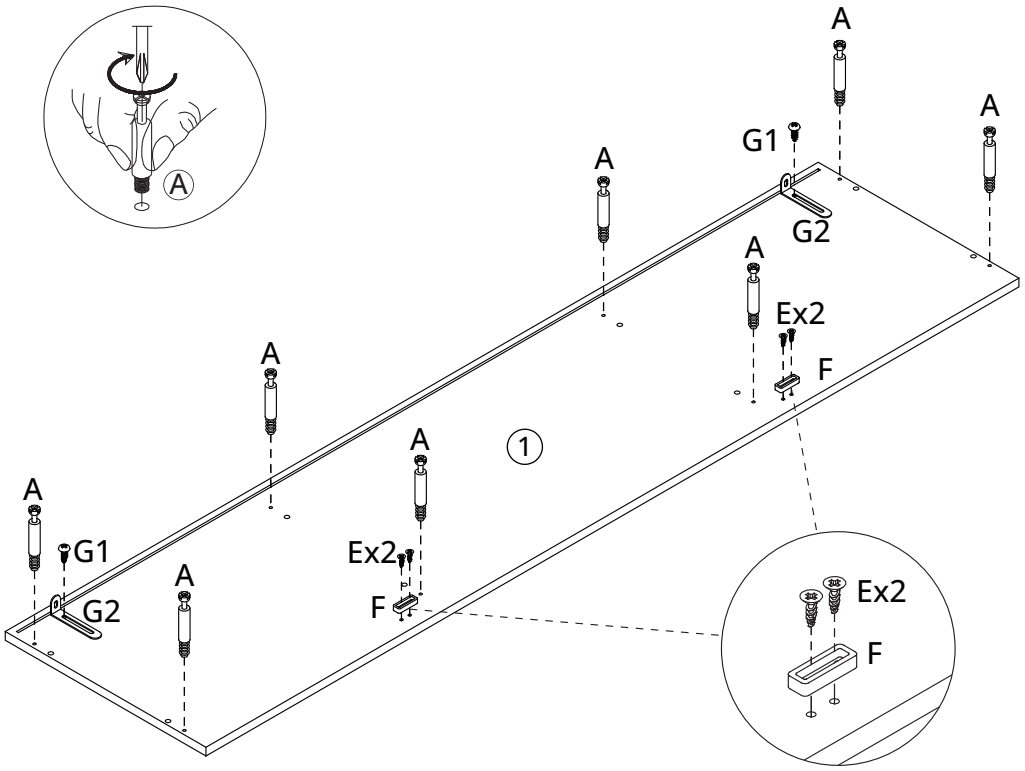


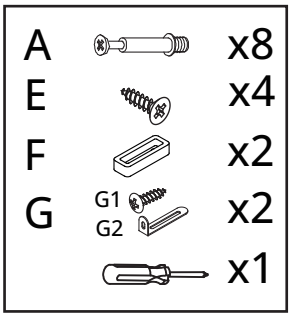


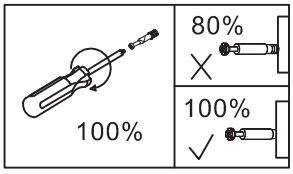


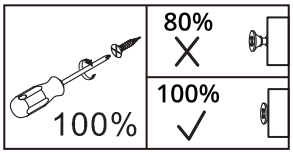


2

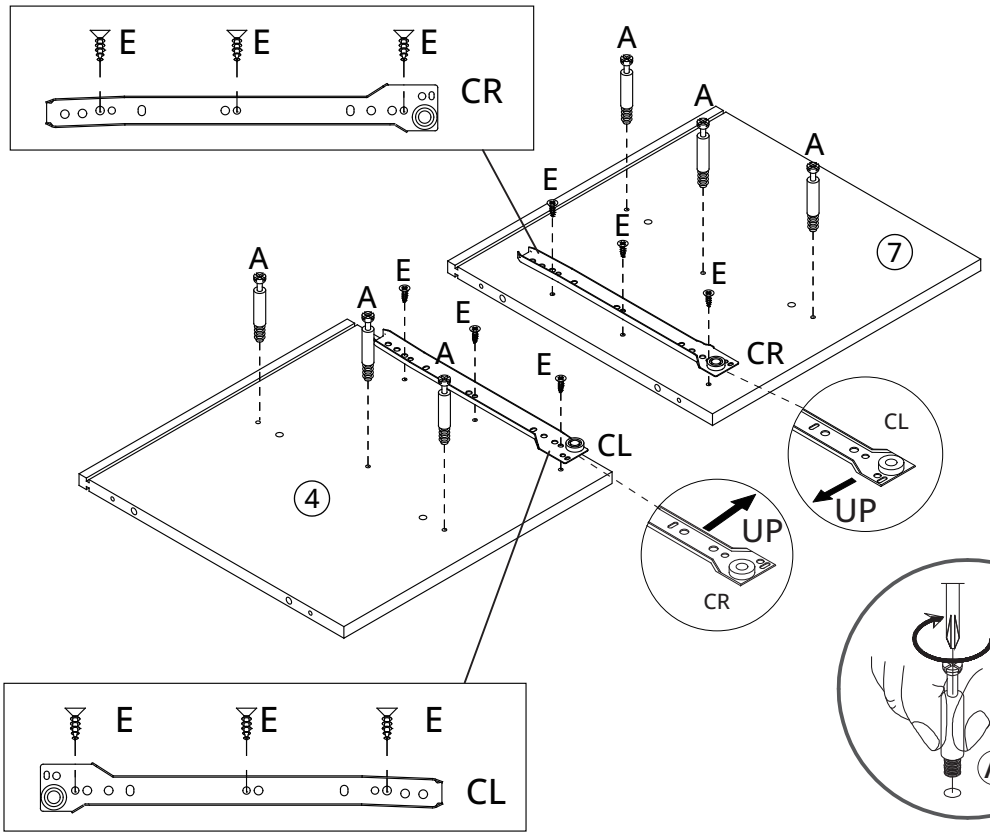

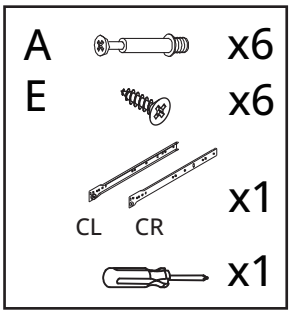


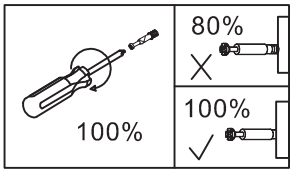

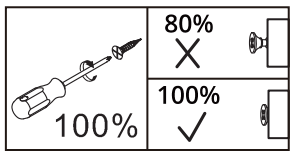


3


C x3

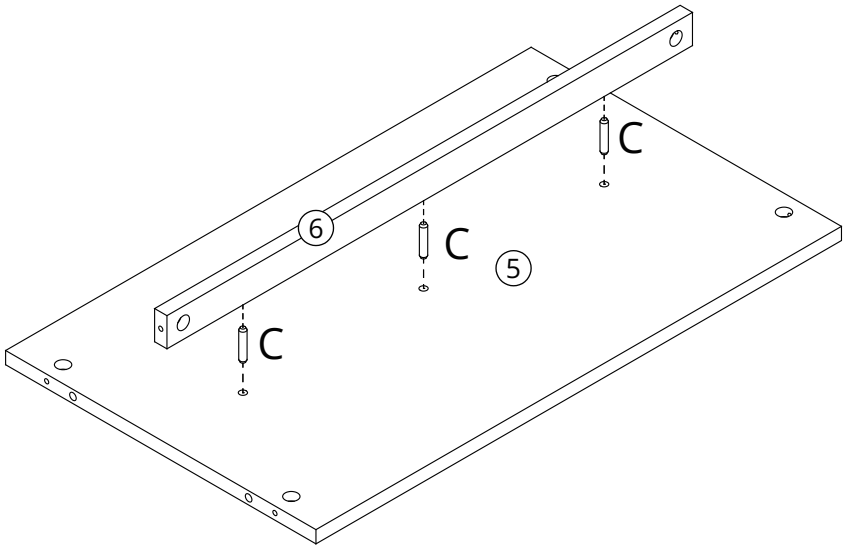


4


B x3
C x2
H x3
x1

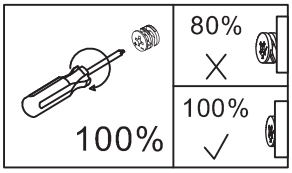


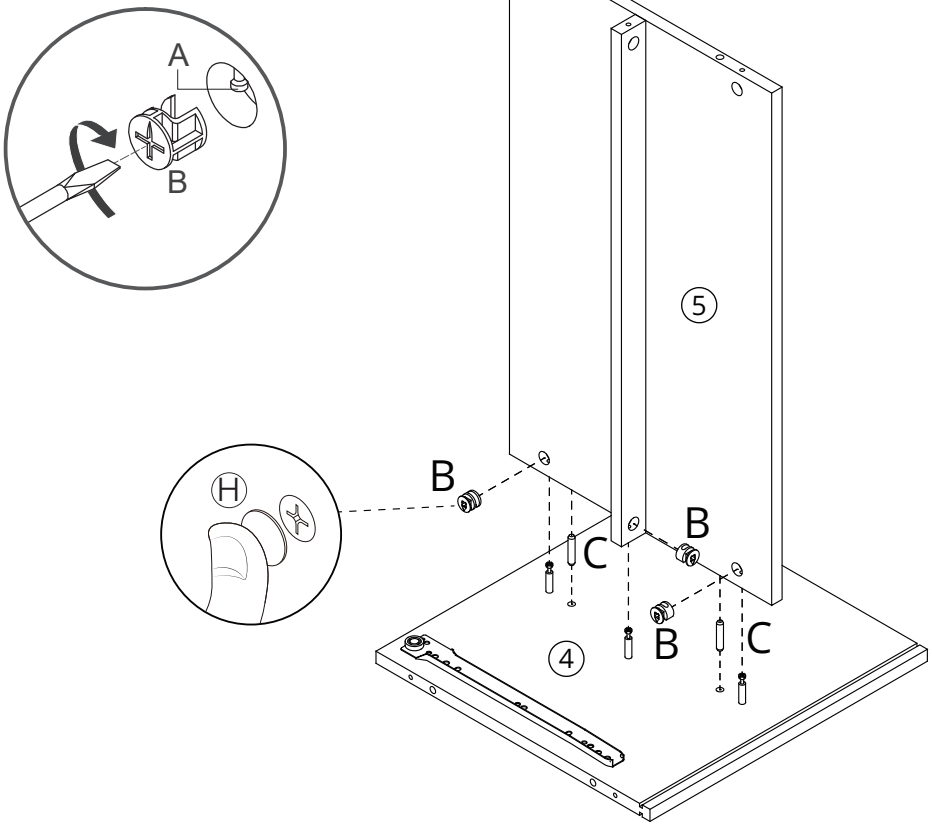


5

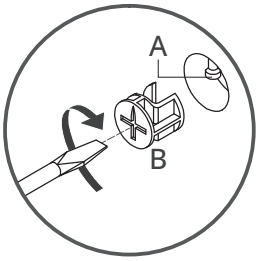

A
B

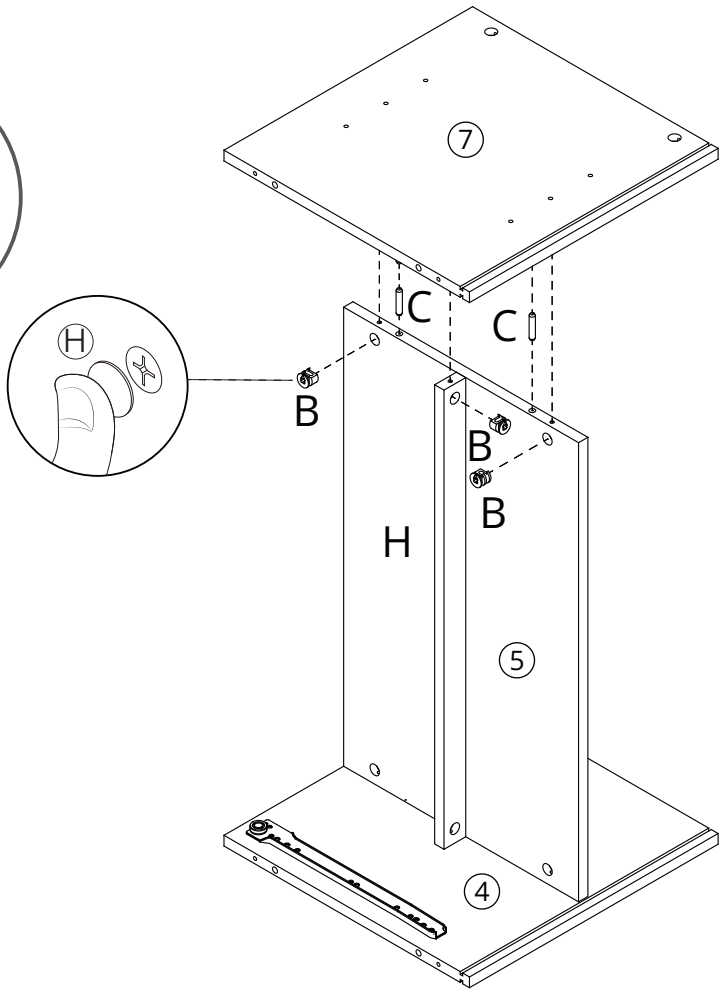
7
C
C
H
B
B
B
H
5
4

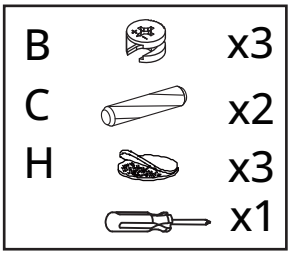

B
x3
C
x2
H
x3
x1

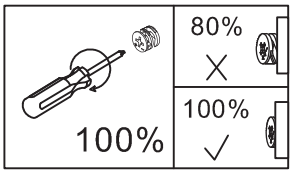

80%
100%
100%

6

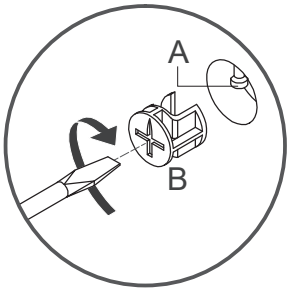

A
B

2
B
4
C
B
B
C
B
5
C
B
C
7
1
8
B
C
B
C
B
B
C
C

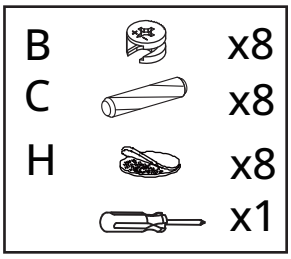

B
x8
C
x8
H
x8
x1

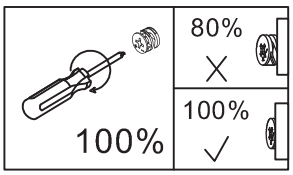

80%
100%
100%


7 Insert the upper back panels ⑫, ⑬, ⑭, the center support bars ⑮ ⑯, and the lower back panels ⑰ ⑱ into the grooves slowly in sequence.

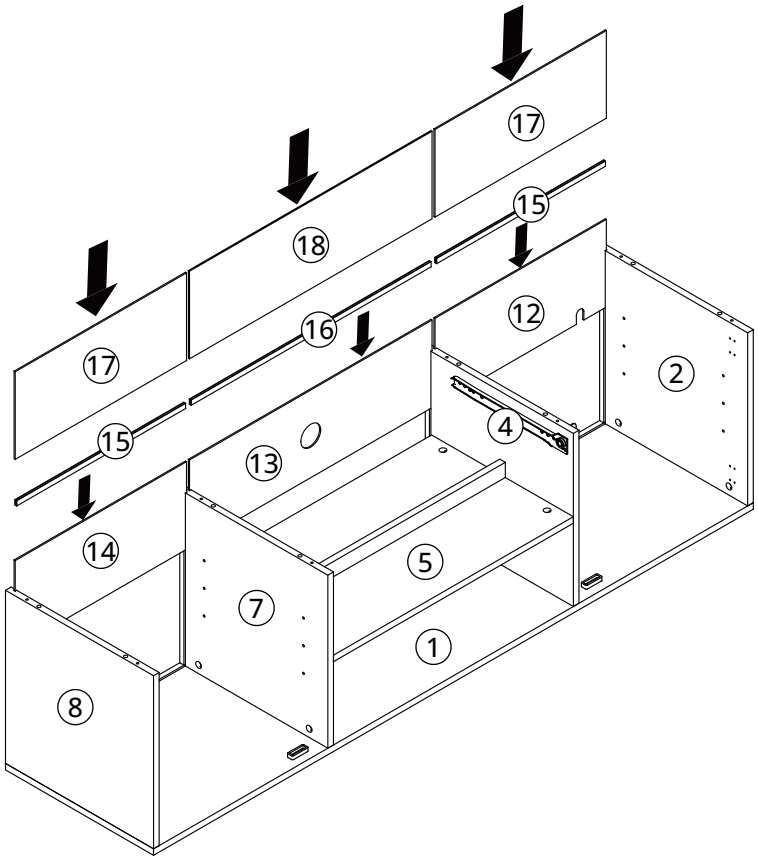


8

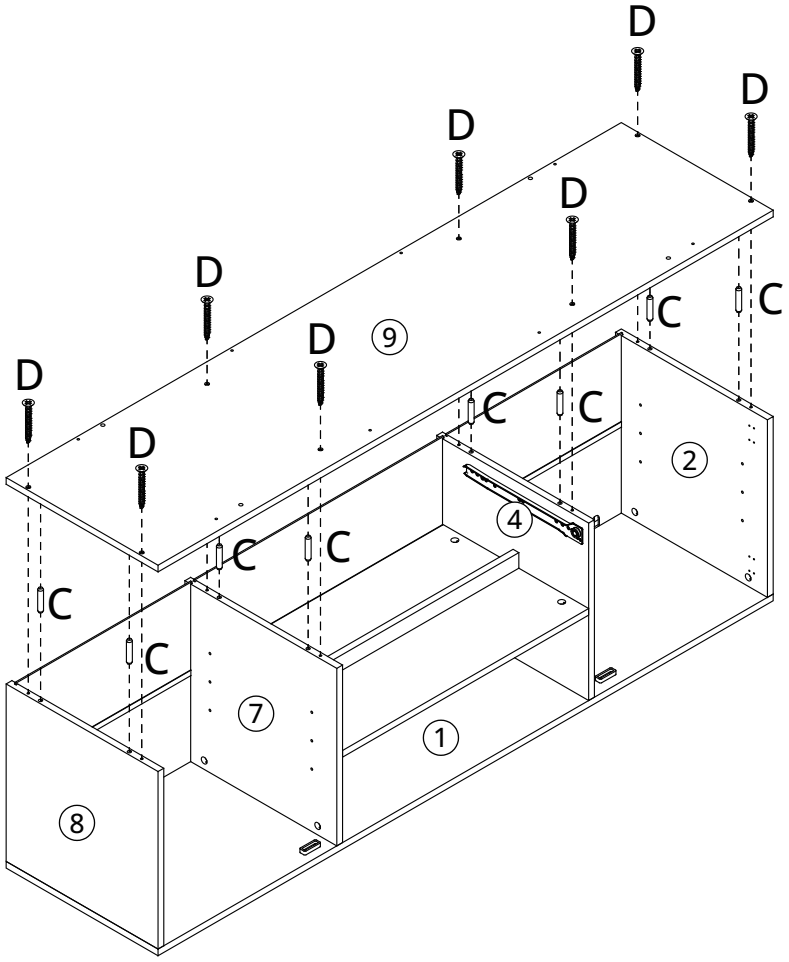


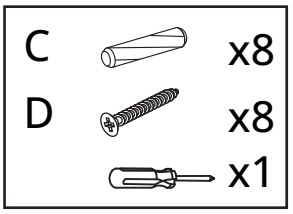


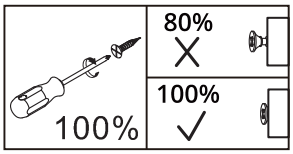


9

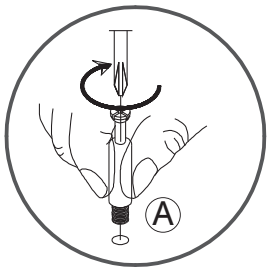


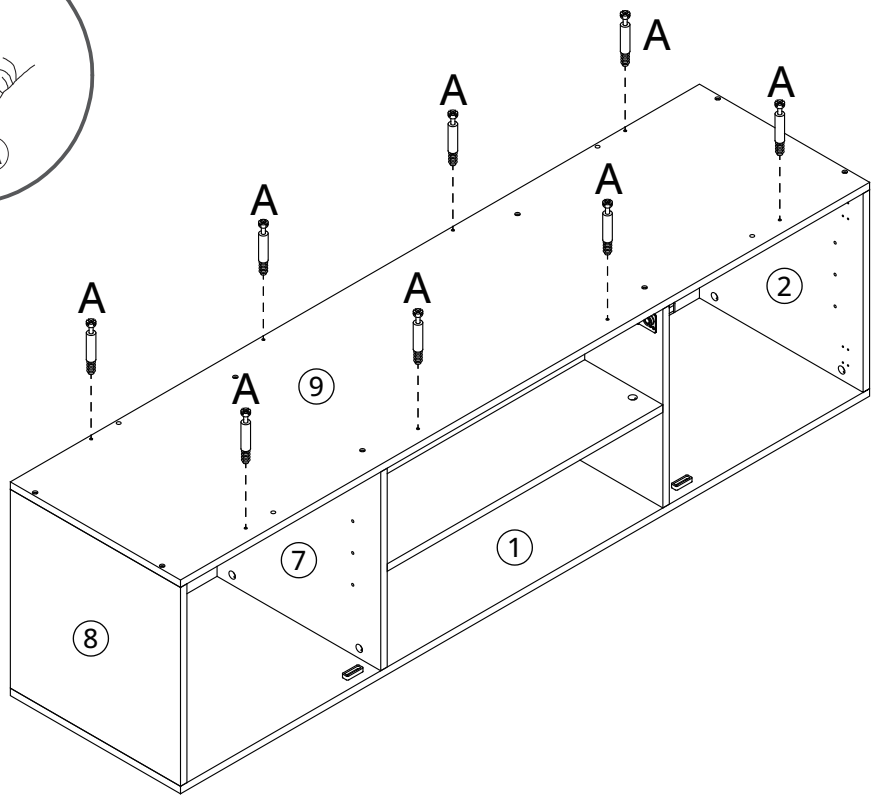


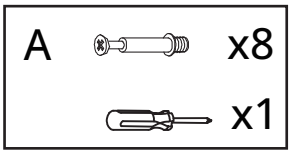


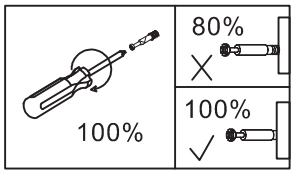


10

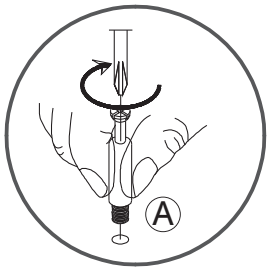


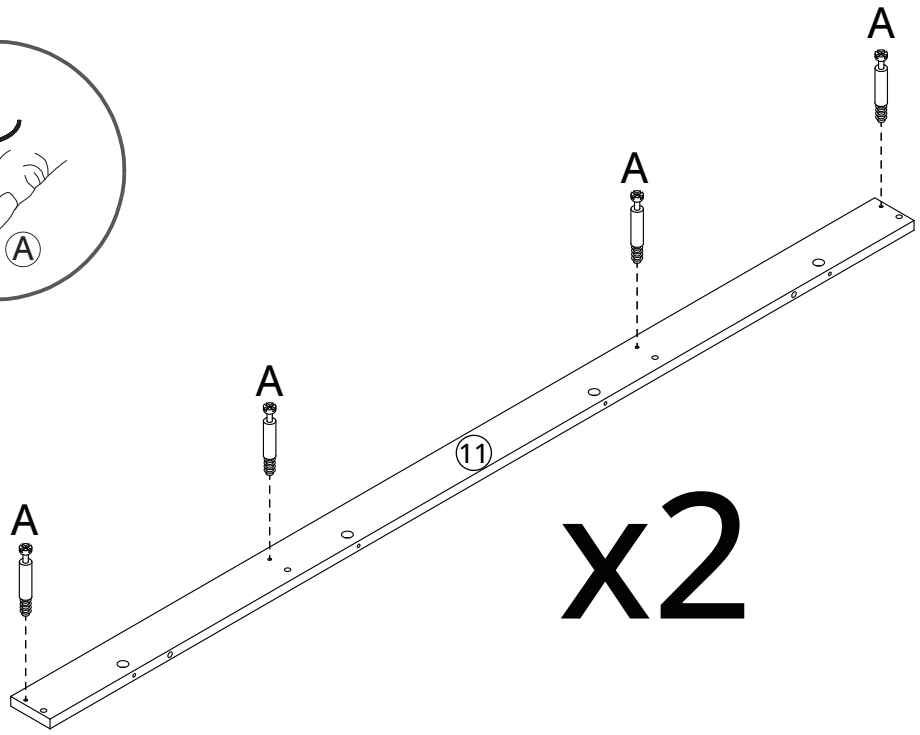


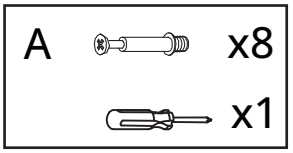

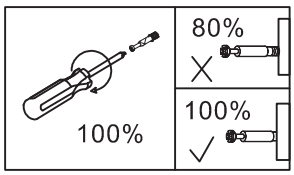



11

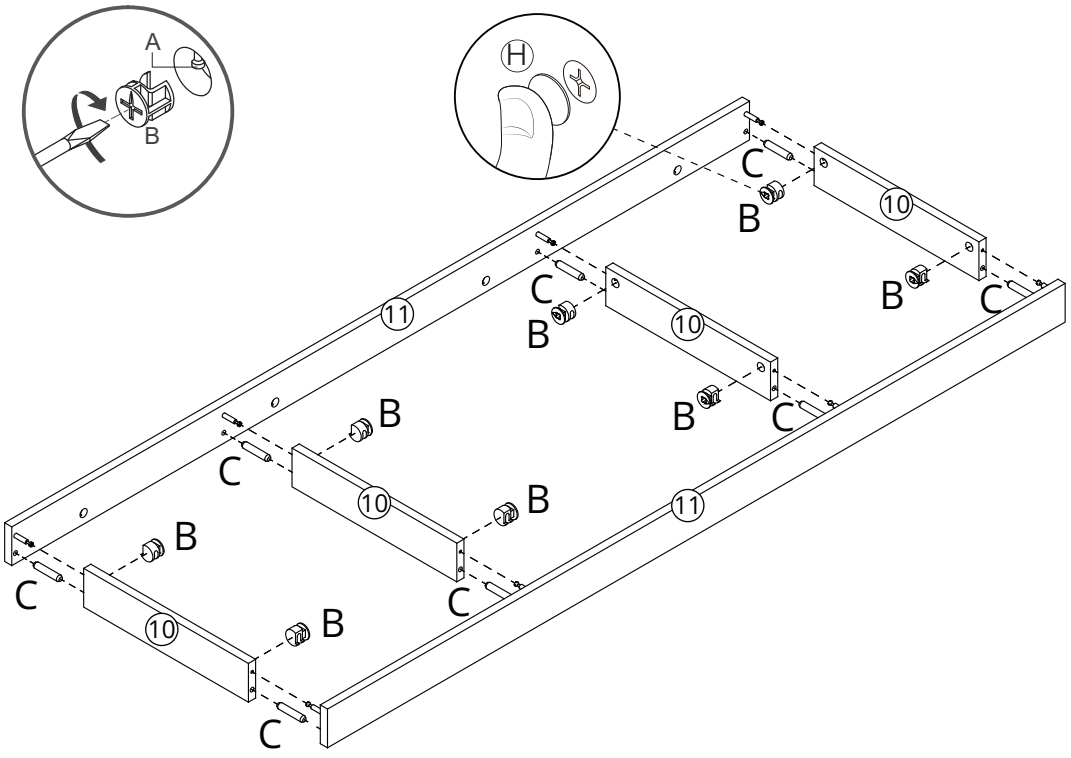
A
B
H
C
B
10
11
B
C
10
B
C
B
C
B
10
B
11
C
B
10
B
C
C

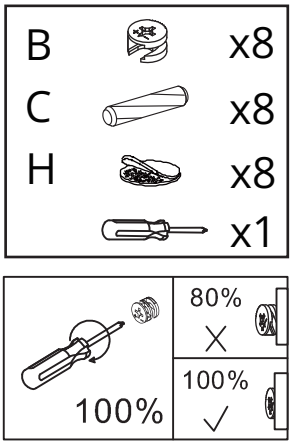

B x8
C x8
H x8
x1
80%
100%
100%


12

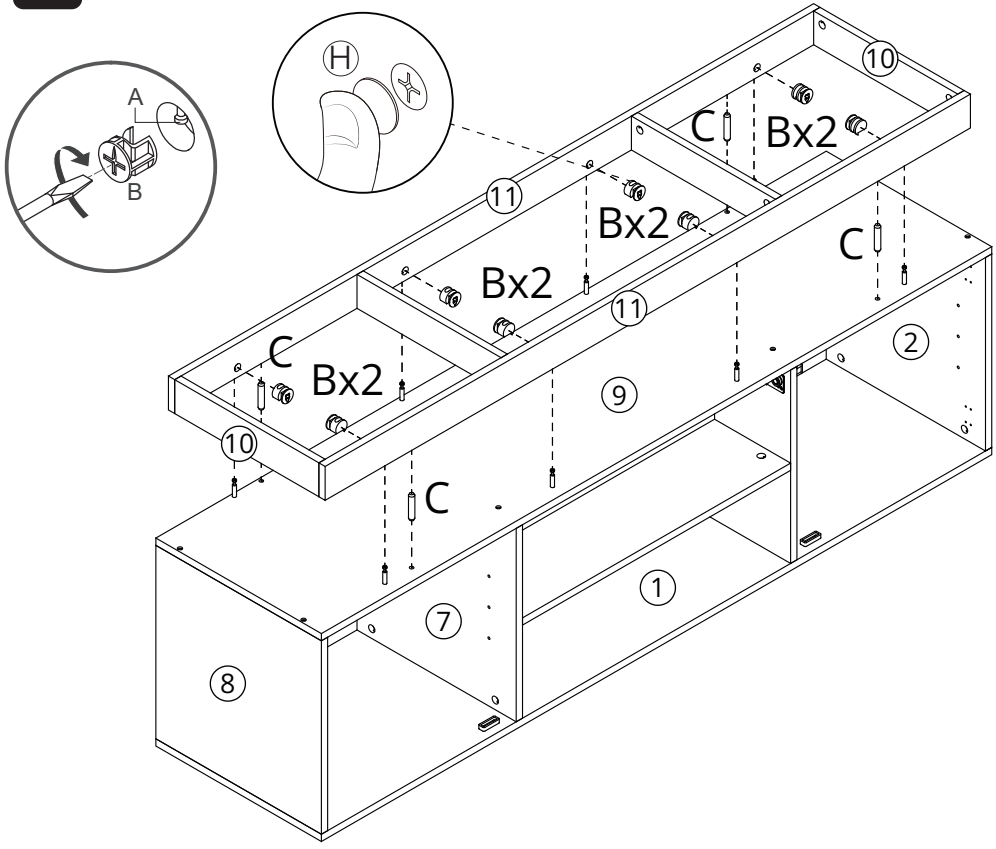

A
B
H
10
C
Bx2
11
Bx2
C
Bx2
11
C
Bx2
2
9
10
C
1
7
8

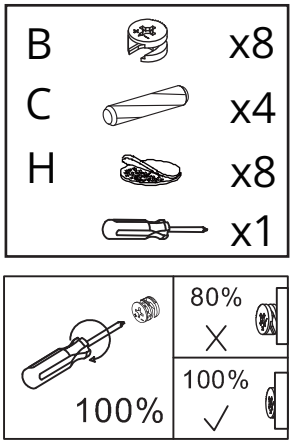

B x8
C x4
H x8
x1
80%
100%
100%


13

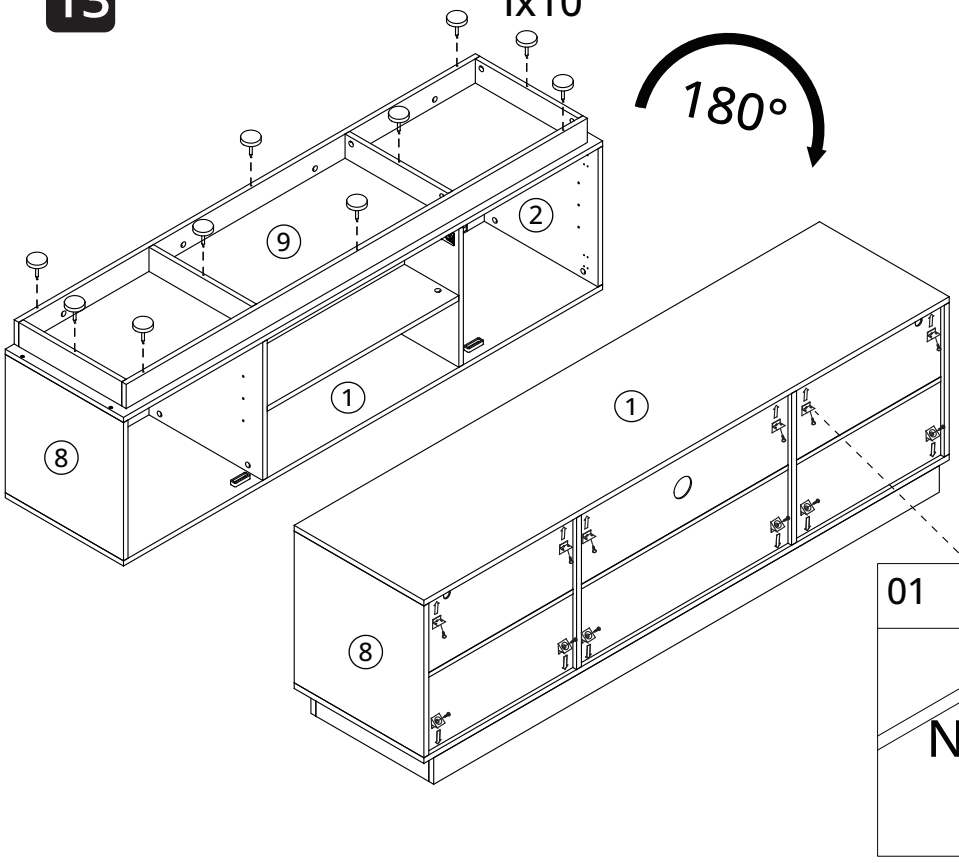

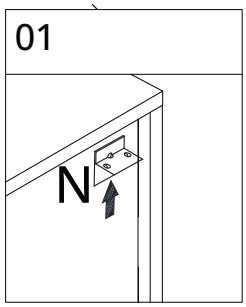


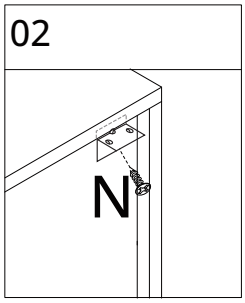


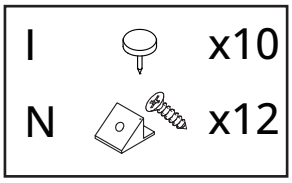


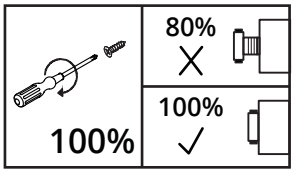


14

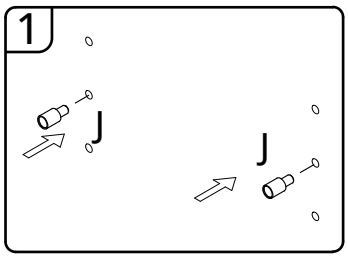


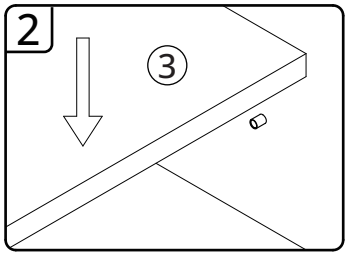





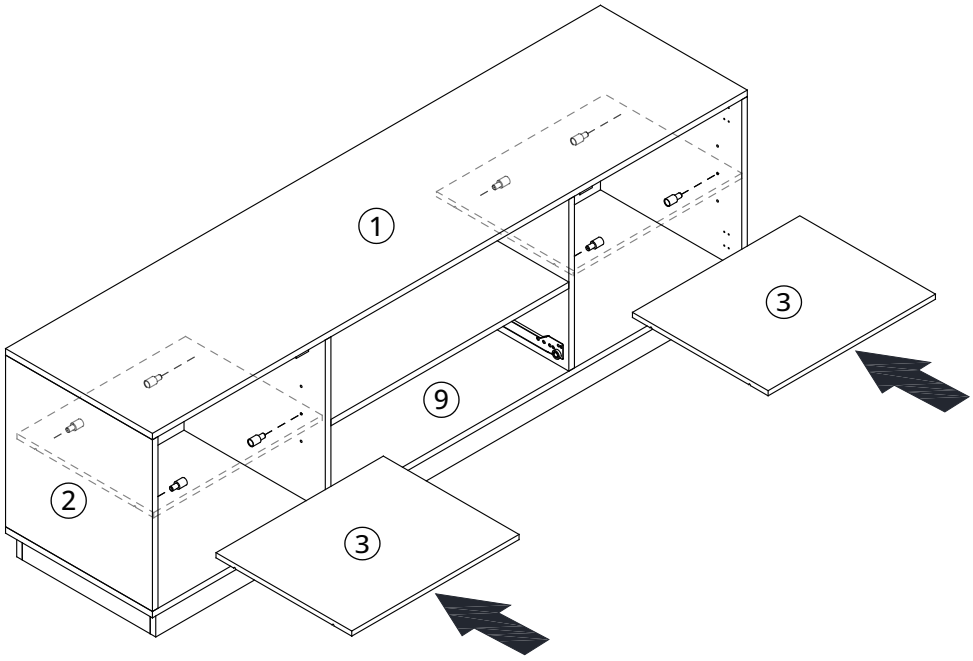


15

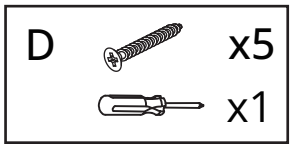


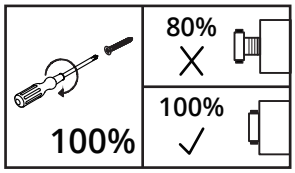


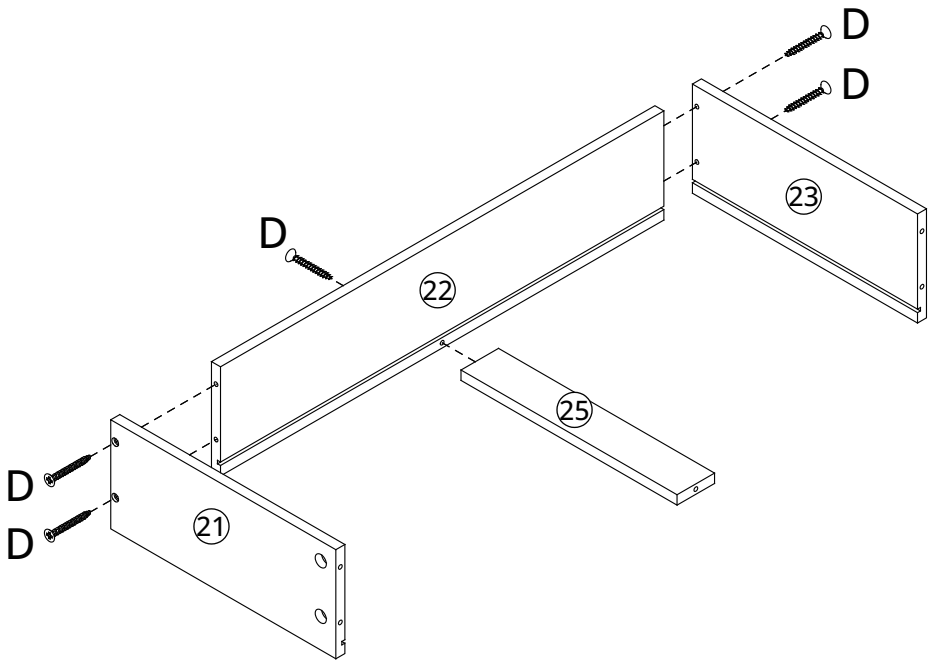


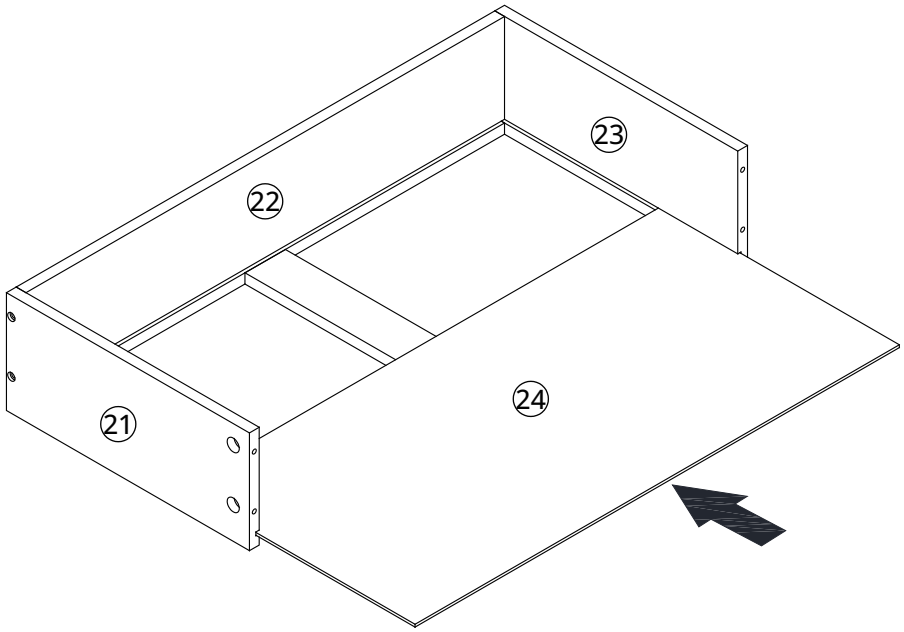



16

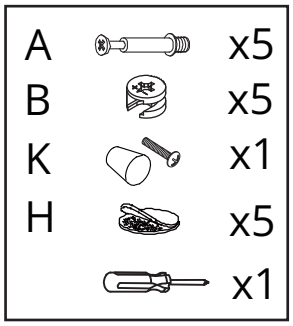

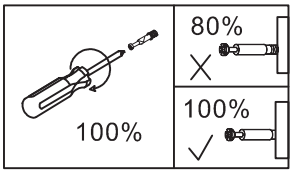


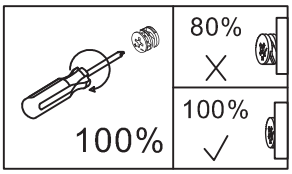


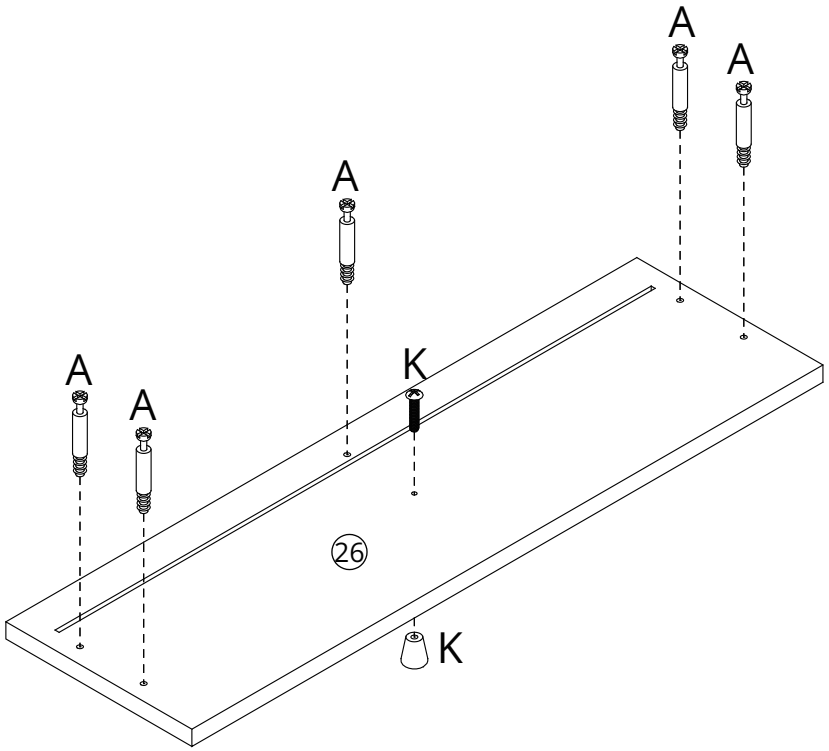


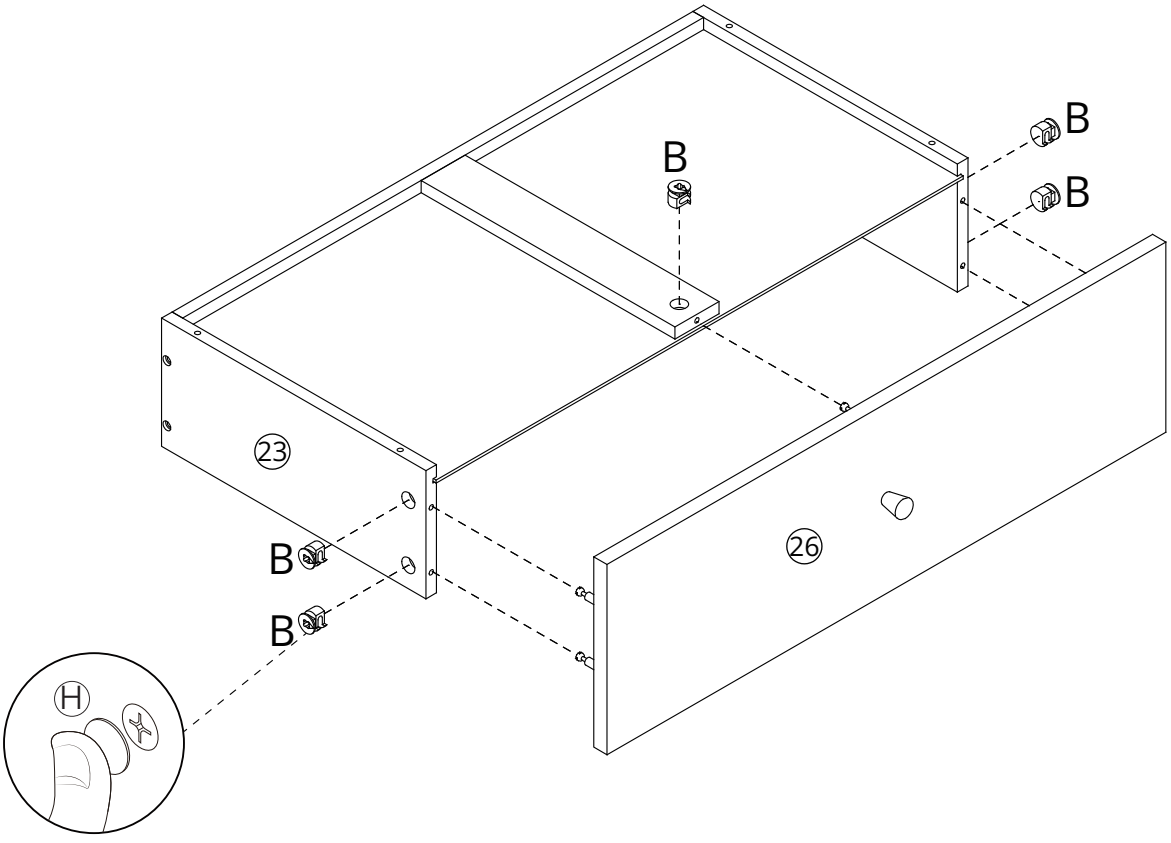


17

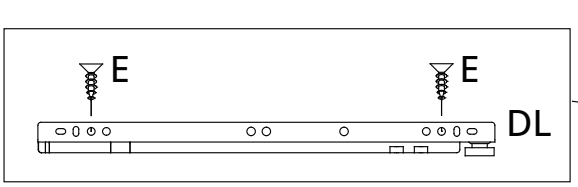

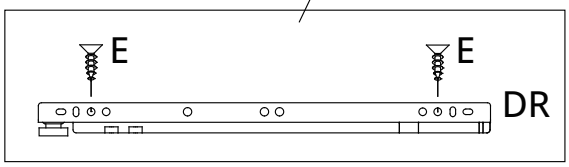

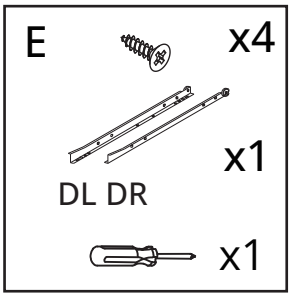


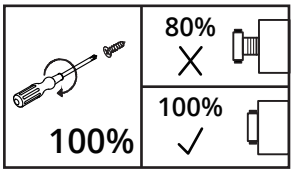



18

For safety reasons, please be sure to attach the product to the wall to avoid accidents!


1. First, drill a hole with electric drill on the wall.
2. Hammer the G3 into the hole.
3. Fix G2 to the wall by tightening G4 through G2 into G3.

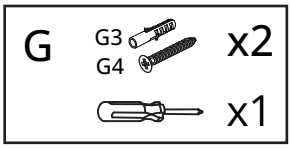


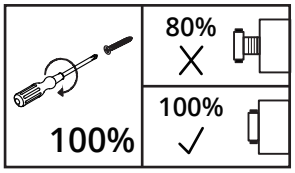

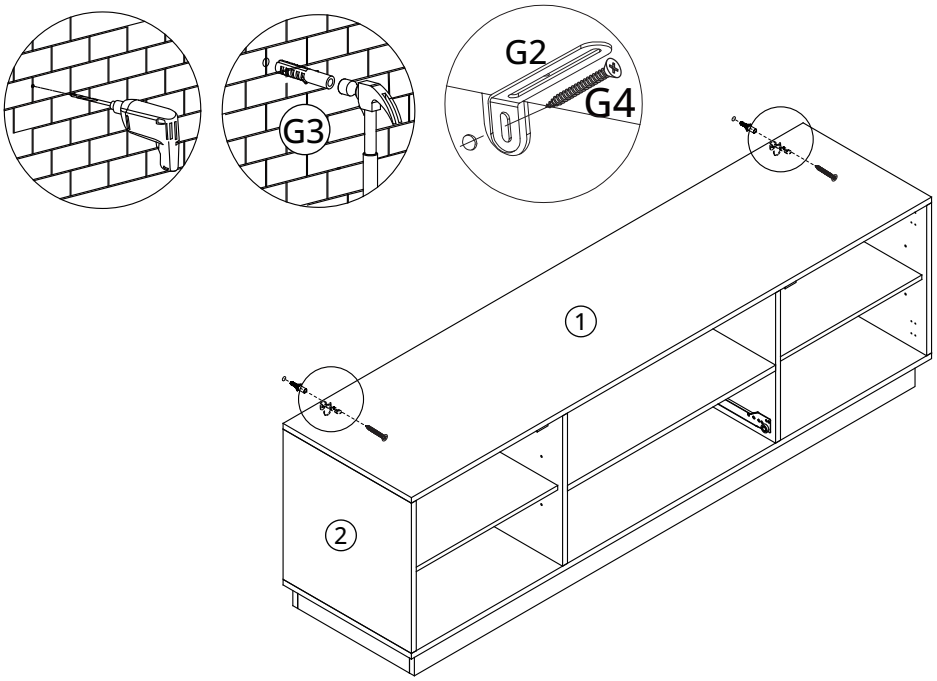



19

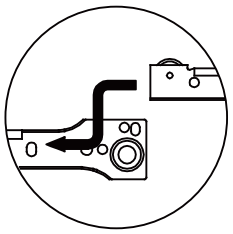


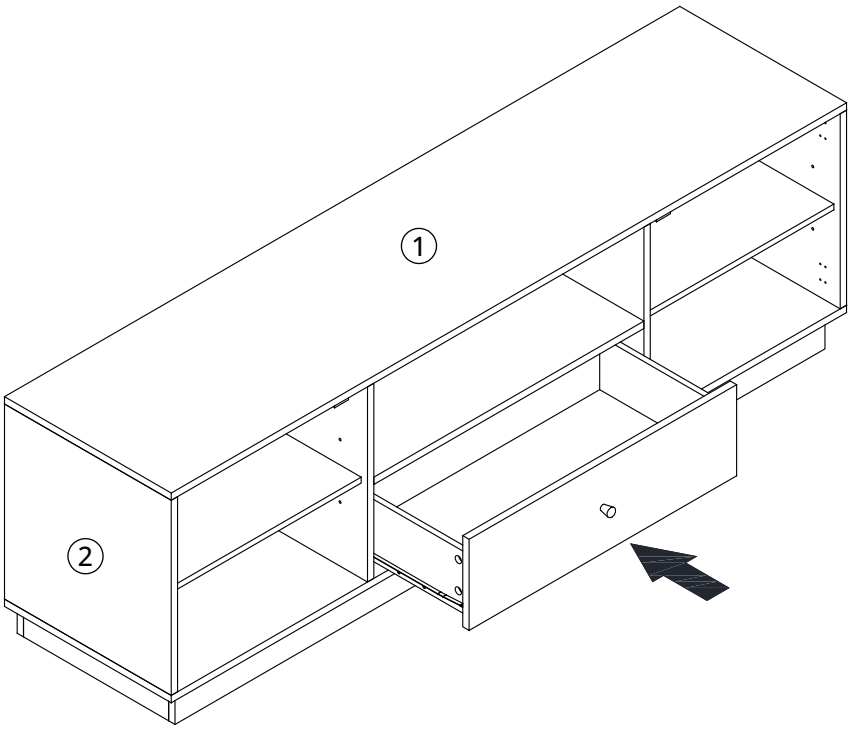

20

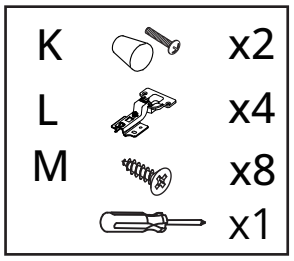

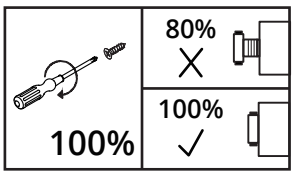

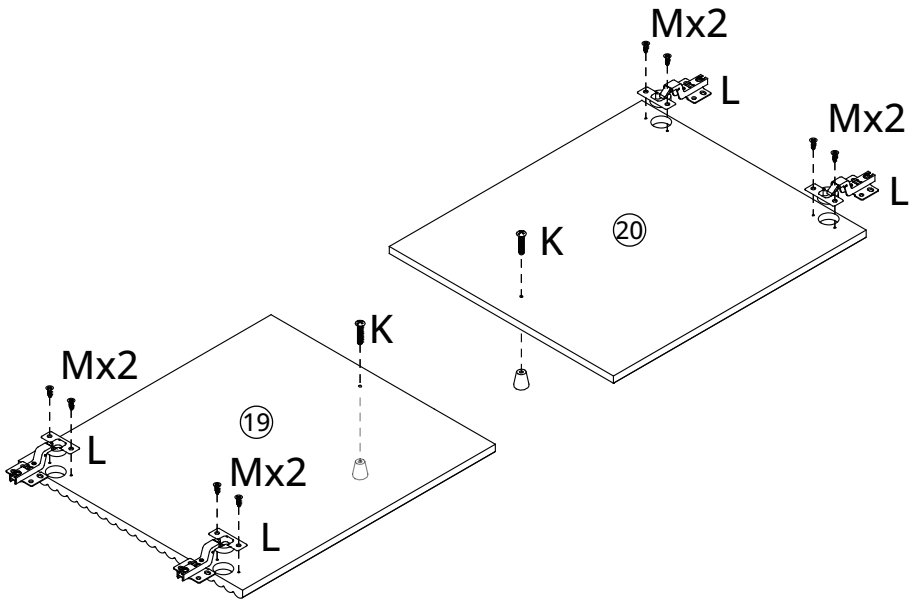

21

Figure 1

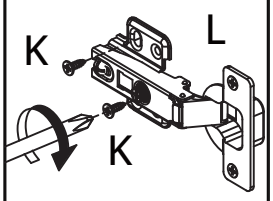


Figure 2

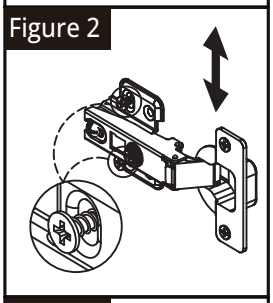


Figure 3

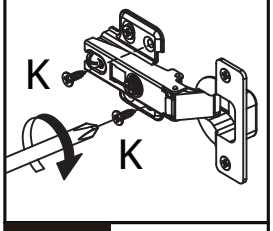


Figure 4

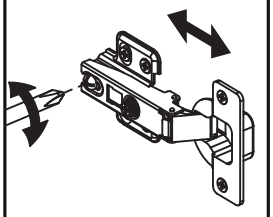


Figure 5



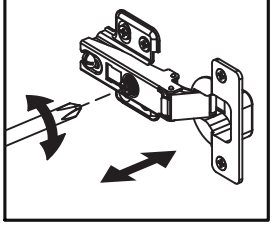



Figure 2: Adjust the screws used for mounting the hinge to align the cabinet door vertically (up and down) with the edge of the cabinet frame.

Figure 4: Turn the rear screw on the hinge as shown to adjust the depth of the cabinet door relative to the cabinet frame.


Figure 5: Turn the front screw on the hinge as shown to adjust the left-and-right alignment of the cabinet door, aligning the door evenly with the edge of the cabinet frame.

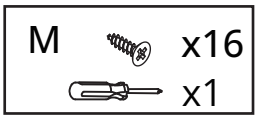


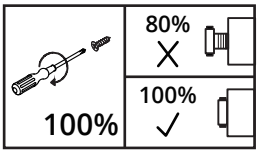

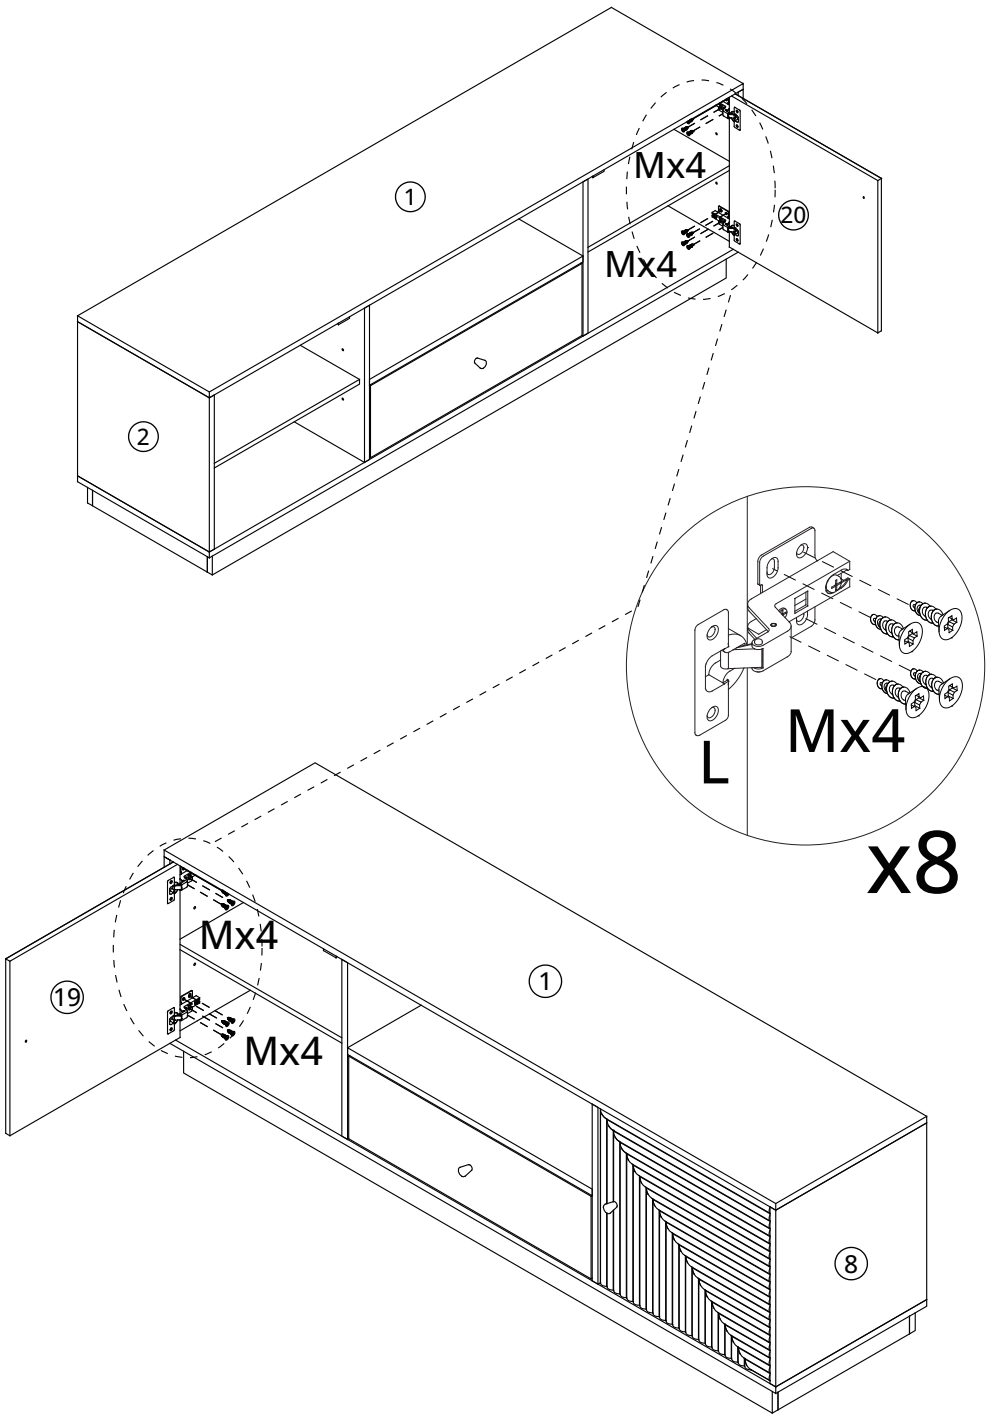

FINISHED

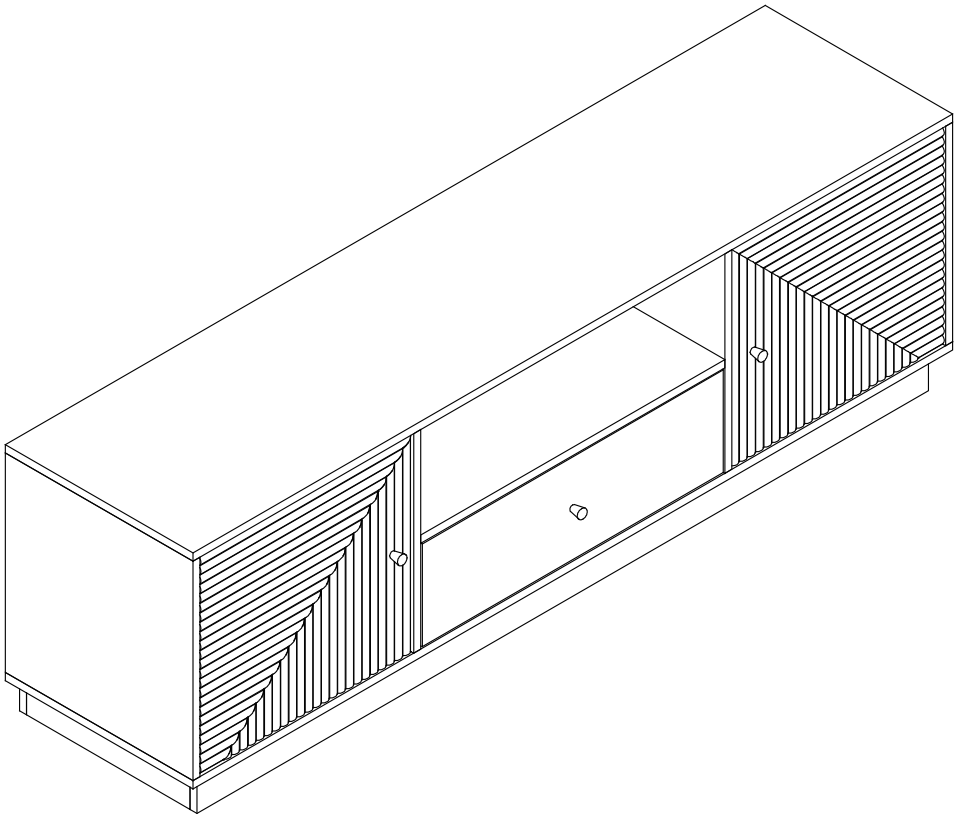

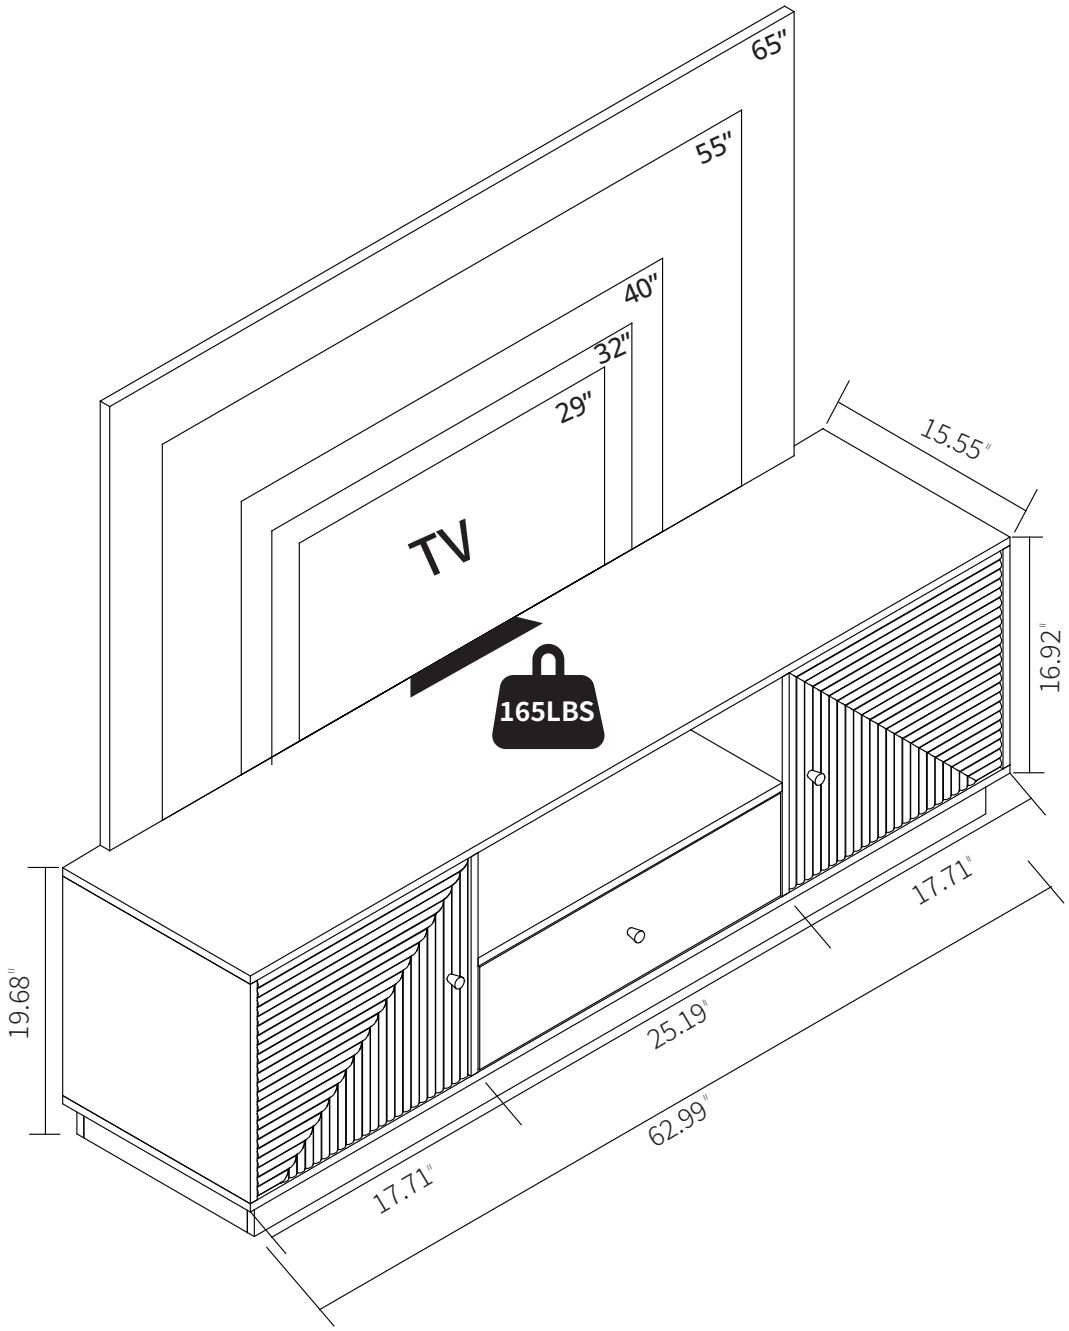
65"
55"
40"
32"
29"
TV
165LBS
15.55"
16.92"
19.68"
17.71"
25.19"
62.99"
17.71"