
Cogace

To Be the Creator of Your Kitchen

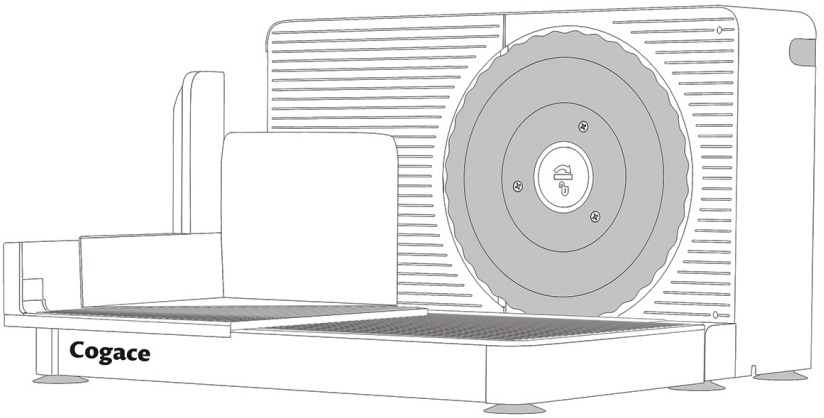

Elite Slicer Instruction Manual

Model: Q818

Manual Contents

Safety Information 2

Instructions for Use 2

Important Warning 3

Power Safety Precautions 4

Packaging Contents 4

Technical Specifications 5

Description of the Food Slicer 5

Disassembly / Assembly of Components 6

Usage 7

Cleaning 8

Blade Cleaning 9

Blade Removal / Installation 9

Storage of the Slicer 10

Recommendations 11

After-sales Service 11

Additional Warnings 11

FAQs 12

NOTE:For assembly,disassembly,operation,use,cleaning,and common FAQs,please refer to the product video on the purchase page.If you still have questions,feel free to contact our online customer service for assistance.

Safety Information

Important Safety Warnings Before Use

Please read the instructions in this manual carefully, as they contain important information regarding the safe installation, use, and maintenance of the appliance.
Keep this manual in a safe place for future reference.

● Packaging materials (such as plastic bags, polystyrene boxes, etc.) should not be placed within reach of children to avoid potential hazards.

Carefully read these instructions before use.
● Use this device only for the intended purposes described in this manual. The warnings and important safety instructions in this manual do not cover all possible situations and conditions. When installing, maintaining, and operating the appliance, it is essential to exercise common sense, caution, and care.
● **Repair Warning:** Do not attempt to repair the appliance yourself; improper handling may lead to injury.
● **Contact Risk:** Avoid contact with all moving parts. Before changing attachments or approaching moving parts during operation, ensure the appliance is turned off and unplugged.

Instructions for Use

Ensuring Safe Operation

● **Pre-Use Inspection:** Before each use, check the mechanical integrity of the appliance and all its components. Ensure the body and all parts are free of cracks or damage. The protective cover and plug of the power cord should not show any signs of cracking or breakage.
● **If Abnormalities Are Detected:** If any of the above issues are found, immediately unplug the unit from the outlet and take it to an authorized dealer for necessary inspection.
● **Voltage Matching:** Before inserting the power plug, ensure the grid voltage matches the voltage indicated on the nameplate.

Safety Precautions for Operation

● **Prevent Overheating:** Do not obstruct the appliance's ventilation during operation.
● **Water Protection:** Never immerse the appliance, power cord, or plug in water or any other liquid.
● **Properly Unplug the Power:** Never pull the power cord to unplug the appliance.
● **Environmental Requirements:** Do not use or store the appliance outdoors, in humid environments, or near water.
● **Placement of the Appliance:** Place the appliance on a stable, durable, and level surface (e.g., avoid placing it on easily damaged surfaces such as painted furniture or tablecloths). Do not place items such as bottle caps or cans on the appliance.

Ensuring Safe Placement of the Appliance

- **Applicable User Groups:** This appliance may be used by children aged 8 and older, individuals with physical or intellectual disabilities, or those lacking experience or knowledge, provided they are supervised or have received guidance on safe usage and understand the associated risks.
- **Child Safety:** Keep children and the power cord away from the appliance.
- **Suitable Users:** The appliance should only be operated by adults who are properly trained and have read this manual thoroughly.
- **Cleaning and Maintenance:** Cleaning and maintenance must be performed by adults. The appliance should not be cleaned by individuals with physical, sensory, or intellectual disabilities, or those lacking experience or knowledge.
- **Electrical Safety:** The appliance is not a toy. When in use or storage, keep it out of reach of children and ensure they do not tamper with the appliance.
- **Accessibility of Power Outlet:** The power outlet should remain easily accessible while the appliance is in operation, allowing for quick disconnection if necessary.
- **Avoid Flammable Materials:** Ensure that there are no flammable materials (such as curtains, furniture, etc.) near the appliance.

Post-Use Operations and Safety Precautions

- **Disconnect the Power:** After each use, please unplug the appliance from the power outlet.
- **Keep Away from Water Sources:** The appliance should be placed away from sinks and faucets.
- **Authorized Inspection and Repair:** The appliance must be inspected or repaired by authorized dealers. Repairs performed by unauthorized personnel will void the warranty.
- **Usage Limitations:** This appliance is intended solely for its designed purpose, which is to slice food for household use. Any other use is considered improper and dangerous, and the manufacturer is not responsible for damages resulting from improper, erroneous, or unreason-able use.
- **For Household Use Only:** If the appliance encounters issues, please contact an authorized service center and avoid attempting repairs on your own. Unauthorized repairs will void the warranty, even if it is still within the warranty period.

Important Warning

To reduce the risk of fire, electric shock, and personal injury, follow these basic precautions when using the appliance:

- **Power Cord Maintenance:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid risk.
- **Storage and Use Environment:** Do not store or use the appliance outdoors, and avoid using it near water sources, in damp basements, or by swimming pools.
- **Power Connection:** Do not connect the appliance to the power supply through external timers or remote control systems.

Device Installation Precautions

●**Installation Location:** Do **NOT** install the appliance in the following locations:


- ○ Near heaters;
- ○ Close to flammable materials;
- ○ In damp, greasy, or dusty areas;
- ○ Exposed directly to sunlight or near water sources;
- ○ In places where there is a risk of gas leaks;
- ○ On uneven surfaces.

●**Cleaning Precautions:** Always unplug the appliance before cleaning. To avoid overheating, the appliance should **NOT** operate continuously for **more than 5 minutes.** If continuous processing or extended operation is required, allow a minimum rest period of 5 minutes between each cycle and limit the continuous operation time to 3 minutes.

Power Safety Precautions

●Do not place the power cord within reach of children.
●Avoid placing the power cord on the floor to prevent tripping or accidental pulling of the appliance.

Packaging Contents

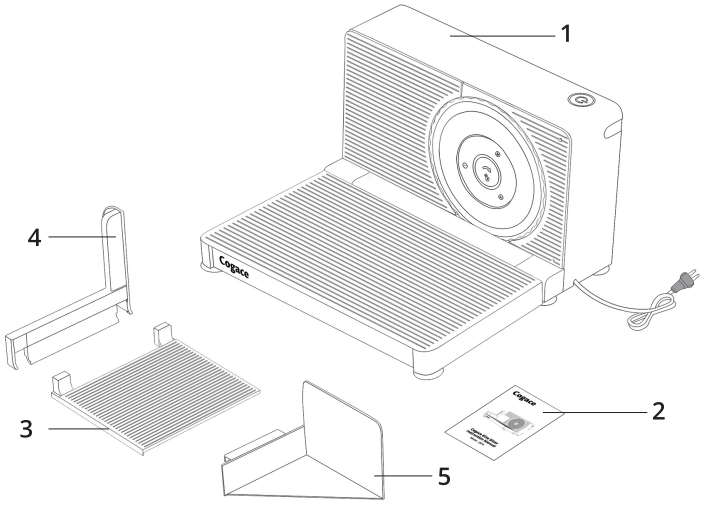


1. Appliance
2. User manual
3. Sliding carriage
4. Finger guard
5. Food pusher

Technical Specifications


Item No.	Blade	Voltage Rating	Power Rating	Dimension	Weight
Q818	6.7 Inch	120V 60Hz	100W	12.32*11*8.07Inch	5.48lbs

Description of the Food Slicer

A

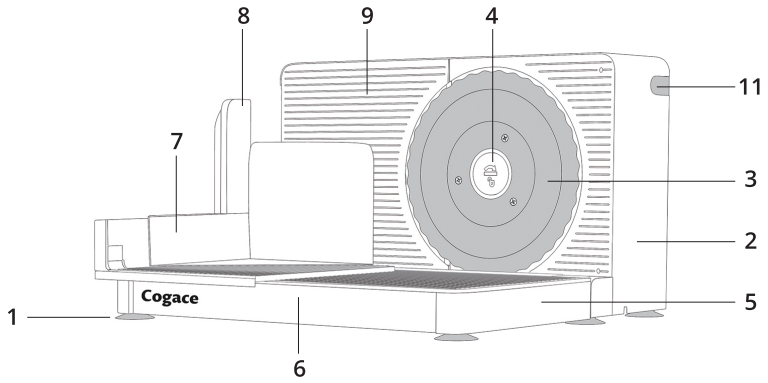

1. Feet
2. Motor body
3. Blade
4. Engagement/release blade washer
5. Removable surface
6. Sliding carriage
7. Food pusher
8. Finger guard
9. Cut thickness adjustment plate

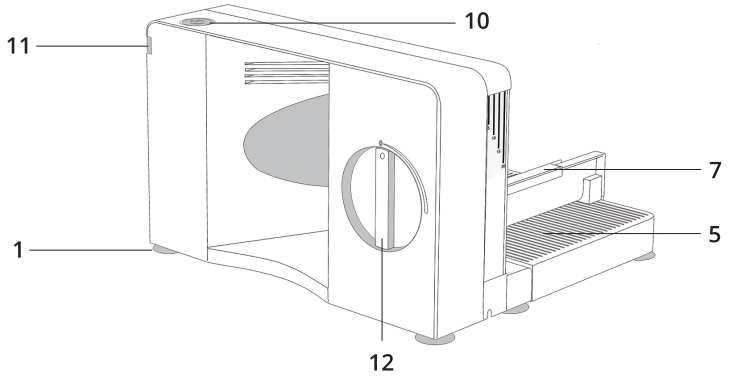


10. Switching on/off button
11. Switching on unlocking button
12. Cut thickness adjustment knob


Disassembly / Assembly of Components

The blade is very sharp; handle it with care.
Before installing or removing the blade from the device, ensure the appliance is unplugged from the outlet.


- Place the slicer on the work surface.
- Ensure that all feet (1) are correctly resting on the work surface, and fully open the removable surface (5) from the motor body (2).
- Ensure the work surface is level and stable.

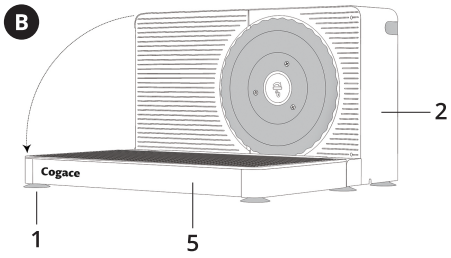


- Install the finger guard (8) onto the sliding carriage (6).
- Press down the finger guard (8) until you hear a “click” sound.

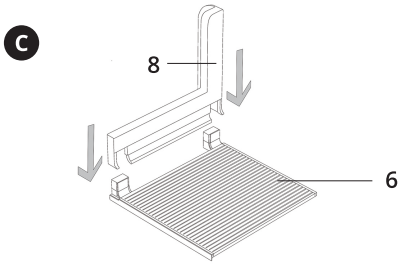

- Place the sliding carriage (6) onto the removable surface (5).

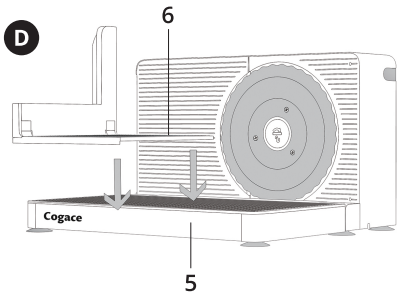

- Position the food pusher (7) on top of the sliding carriage (6).
- The slicer is now ready for use.

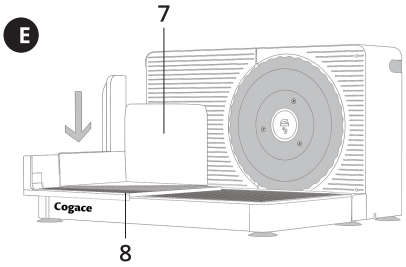


Usage

The included blade can be used to slice foods such as bread, meats, cheeses, ham, and vegetables. Do not slice frozen foods.


●Adjust the cutting thickness by turning the adjustment knob (12).
●The adjustable cutting thickness ranges from 0 to 20 millimeters.
●Plug the power cord into the power outlet, ensuring that the voltage matches the specifications indicated on the device's rating label.

F

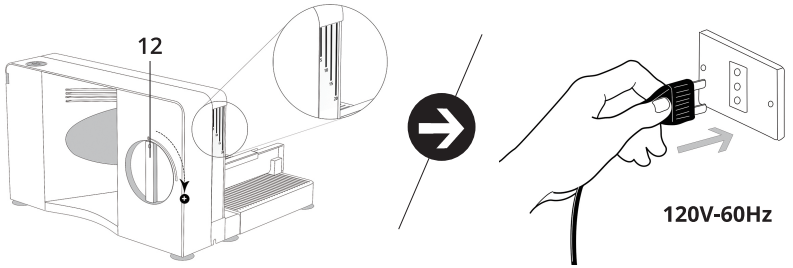


●Place the food to be sliced on the sliding surface (6) and use the food pusher (7) to push it toward the cutting thickness adjustment plate (9).

G

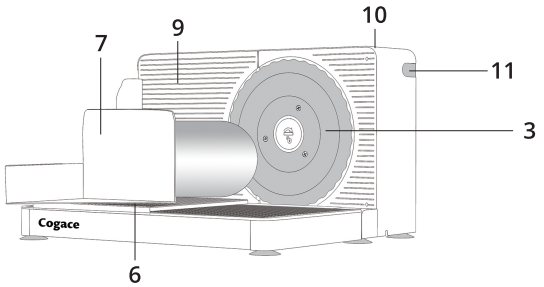


●To start the rotation of the blade (3), first press the unlock button (11) and then press the switch button (10) simultaneously.
●The blade will continue to rotate as long as you hold down the switch button, even after RELEASING the unlock button.
●The blade will stop rotating when the switch button is released.

H

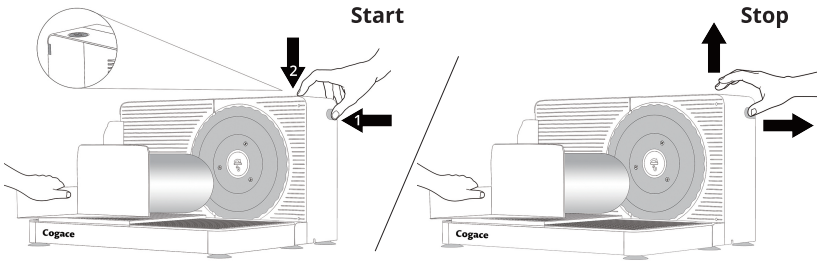

●While holding switch button, move the food back and forth alternately to slice it, pushing the food toward the blade only during the cutting phase.
●Adjust the cutting thickness as needed.


Ⓘ

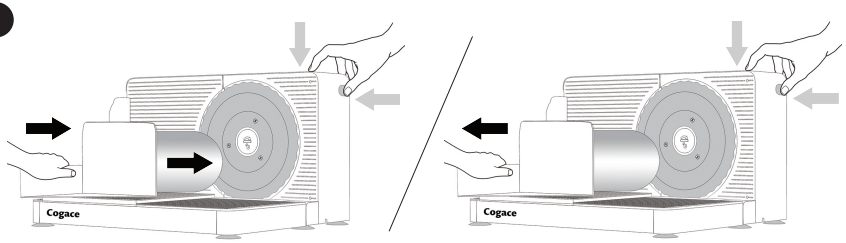

Cleaning

●**Unplug the Appliance:** Always unplug the appliance from the power outlet before cleaning.


Ⓛ

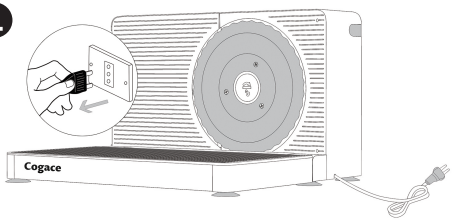

For Effective Cleaning


●**Adjust the Dial:** Rotate the knob (12) to the "0" position.

Ⓜ

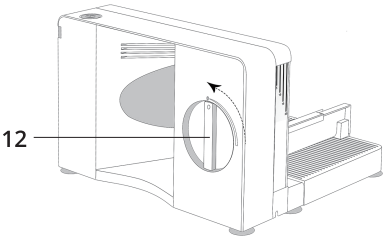

●**Remove Components:** Remove the food pusher (7) and sliding carriage (6) along with the finger guard (8).

Ⓝ

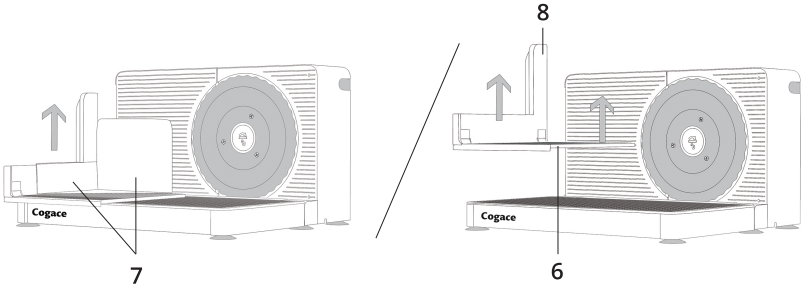

●**Clean the Appliance:** Use a damp cloth to clean the motor body (2), removable surface (5), and adjustment plate (9). Avoid using abrasive cleaners to prevent damage.

Cleaning Precautions:

- The motor body (2) should never be immersed in water or any other liquids.
- Do not wash the moving blade, as it is very sharp. Exercise caution while handling it.
  completely dried before reassembly.
  - ○ The removable parts, such as the food pusher (7) and sliding carriage (6), can be washed with water and regular dish soap. After cleaning, they must be thoroughly rinsed and completely dried before reassembly.
  - ○ Clean the area behind the blade (3) with a damp cloth.
- Do not use abrasive cleaners or scouring pads for cleaning.
- Avoid using metal or sharp objects to remove food residues from the blade.


Blade Cleaning

No need to disassemble the blade (3) during cleaning:

- Rotate the knob (12) to "0" (see illustration "M").
- Remove the food pusher (7) and sliding carriage (6), along with the finger guard (8) (see illustration "N").
- Dampen a cloth with alcohol or cooking oil.
- Press the damp cloth against the blade surface and gently move outward from the center, as shown in the illustration.
- It is recommended to lubricate the blade with petroleum jelly before storing the slicer.

DO NOT CLEAN THE MOVING BLADE.
THE BLADE IS VERY SHARP,
SO PLEASE HANDLE IT WITH CARE.


P

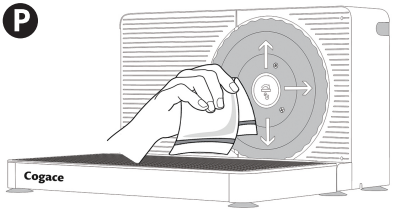

Blade Removal / Installation


- It is recommended to regularly clean the back of the blade (3) carefully.
- Ensure the appliance is unplugged from the power outlet.
- Rotate the knob (12) to the "0" position (refer to illustration “M”).
- Remove the food pusher (7) and the sliding carriage (6), along with the finger guard (8) (refer to illustration “N”).
- Use a coin to turn the blade washer (4) clockwise and remove it.
- Remove the blade (3) for cleaning.
- When reassembling, position the blade correctly and secure it by turning the blade washer

Q

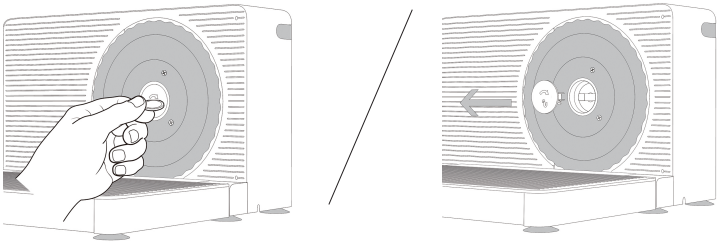

●Wear gloves to protect your hands and hold the blade securely.
●Exercise caution to avoid injury from the sharp blade! Never clean the moving blade. The blade is extremely sharp, so handle it with care.
●After removing the blade (3), it is recommended to also detach the adjustment plate (9) from the motor body (2) for a more thorough cleaning.

R

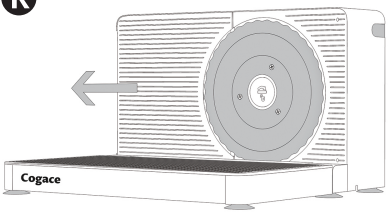


●●the adjustment plate (9) can be removed by rotating the knob (12) counterclockwise past the “0” position, which will disengage the adjustment plate from its seat.
After removing the adjustment plate (9), you will see a screw. The function of this screw is to adjust the food resistance of the adjustment plate. If you notice insufficient food resistance, which may cause displacement, you can tighten the screw slightly to increase the resistance. (Please be careful not to overtighten, as this may cause the plastic components to crack).
●After cleaning, ensure that the blade (3) is reassembled correctly.
●Ensure that the blade washer (4) is properly hooked. Do not overtighten the washer.

Storage of the Slicer

●Disconnect the plug from the power outlet.
●Rotate the knob (12) to the “0” position (see illustration “M”).
●Remove the food pusher (7) and sliding carriage (6), including the finger guard (8) (see illustration “N”).
●Close the surface (5) on the motor body (2) (see illustration “S”).
●Wrap the power cord around the designated area beneath the motor body (2) (see illustration “S”).

●Press on both sides of the finger guard (8) and lift it upwards to detach it from the sliding carriage (6).
●Fold the finger guard (8) over the sliding carriage (6) to reduce its size for storage.

T

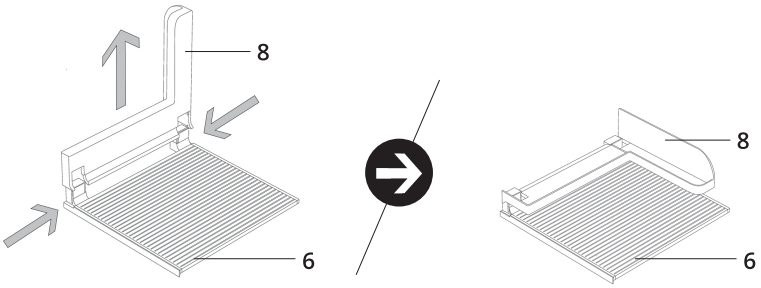

Recommendations

●Do not slice marinated or frozen meats.
●Ensure that any meat to be sliced is boneless.
●Allow cooked meats (such as roast beef) to cool for 15 to 20 minutes and remove any strings before slicing.
●If the blade is cutting unevenly, have it sharpened by a professional.

After-sales Service

● If there are any quality issues within 30 days, we offer a replacement service.
● The product comes with a 1-year free quality guarantee.
If you have any questions, you can reach out for after-sales consultation and feedback through the purchase platform or channels.

Additional Warnings

Before connecting the device, ensure that the data on the nameplate matches the data from the power distribution network. The nameplate is located on the bottom of the device. If the outlet is incompatible with the power plug, have a qualified professional replace it with a suitable one. Also, ensure that the cross-sectional area of the power cord meets the device's power requirements. The use of adapters, multi-sockets, or extension cords is not recom mended. If absolutely necessary, only use simple or multifunctional adapters and extension cords that comply with current safety standards, and be mindful not to exceed the load limits.
When using electrical appliances, some basic rules must be followed, especially:
●Do not touch or use the device with wet hands, wet feet, or bare feet.
●Do not pull out the plug by tugging on the power cord or the device itself.
●Children or individuals without supervision must not use the device.
In the event of a malfunction or failure, turn off the power and do not attempt to disassemble it. Repairs should be carried out exclusively by authorized dealers.

Failure to adhere to the above guidelines may jeopardize the safety of the device. If you decide to stop using this device, cut the power cord after unplugging it to prevent it from being reused. It is also recommended to dispose of potentially hazardous components, especially those that children might mistakenly treat as toys.
Installation must be carried out according to the manufacturer's instructions. Improper installation may result in damage to persons, animals, or property, for which the manufacturer cannot be held responsible.
To avoid the risk of overheating, it is advisable to fully unwind the power cord and use the device as recommended in the "Instructions for Use." Do not keep the device connected to power for extended periods. When the device is not in use, please unplug it from the outlet.

FAQs

Q: What should I do if the backplate shifts while slicing,causing uneven slices?
A: Follow these steps to fix the issue.Prepare a Phillips screwdriver and a coin:
1.**Ensure safety first.** Remove the food pusher to avoid accidents during adjustments.
2.**Unlock and remove the blade.** Use a coin to unlock the blade and carefully remove it.
3.**Set the thickness knob to 0.** Rotate the thickness adjustment knob to the 0 mark,then continue turning it counterclockwise firmly to remove the scale plate.
4.**Tighten the backplate screw.** Using a Phillips screwdriver,tighten the screw clockwise to secure the backplate.
5.**Reattach the backplate.** Align the backplate in its original position.Apply moderate pressure to hold it in place,then turn the knob clockwise until it reaches the maximum 20mm mark.Next,turn the knob counterclockwise back to the 0mm position.
6.**Reinstall the blade.** Use the coin to securely reattach the blade.

Q: What is the correct way to start the slicer?
A: Follow these steps to safely and correctly start the slicer:
1.**Unlock the safety lock.** Press and hold the safety lock located on the side of the slicer's power button.
2.**Press the power button.** While holding the safety lock,press and hold the power button to start the slicer.

Important Notes:
1.The slicer **will not start** if you press the power button without unlocking the safety lock.
2.Once the slicer starts,you can release the safety lock.Simply holding the power button will keep the slicer running.The safety lock is only required for initial startup and does not need to be held continuously.
3.Holding the power button during operation is a **safety measure** to ensure controlled and secure usage.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's
authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These
limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can
radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio
communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the
user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful
interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC US Agent Inc.
1942 Broadway Ste 314C Boulder CO 80302 US
Support@fccagent.com