Assembly Instructions

Please read before use. No tools required.

Parts List



A1



A2



B1




B2



E



C

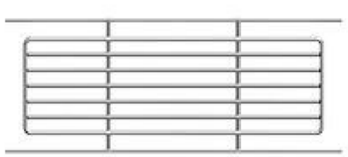


D

Code	Part
A1/A2	Long Side Panel
B1/B2	End Panel
C	Ash Tray
D	Charcoal Grate
E	Flip Grill Grate Assembly (with handle)


Metal edges may be sharp. Wear gloves during assembly.

Step 1 - Insert A1 into B1

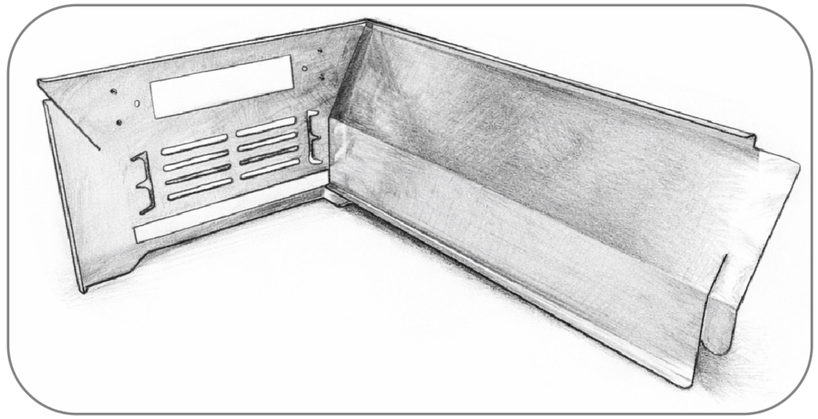


- Stand end panel B1 upright, vents facing outward.
- Orientation: A1’s upper and lower folded edges must face inward.
- Align A1 tabs with B1 slots, then press down until locked.
- Check panels sit flush with no wobble.

Step 2 - Install D (Adjustable Height)

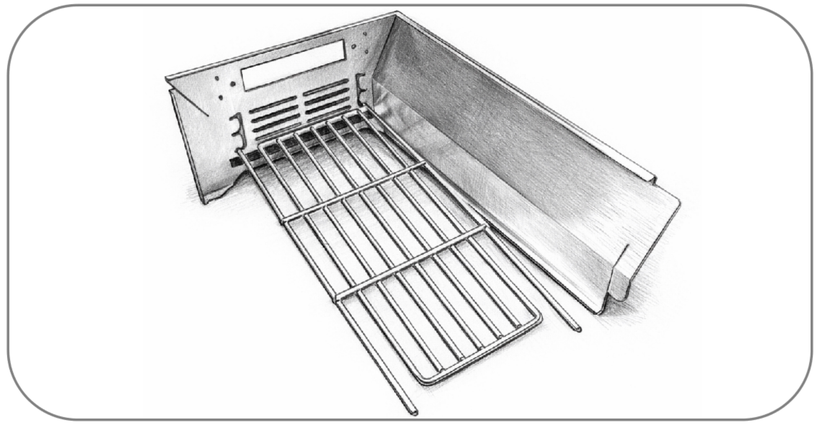

- Find the adjustable slots on B1.
- Insert grate D rods into the slots on both sides.
- Use the same height on both sides; grate must sit level.
- Higher = farther from coals; lower = stronger heat.

Step 3 – Install End Panel B2

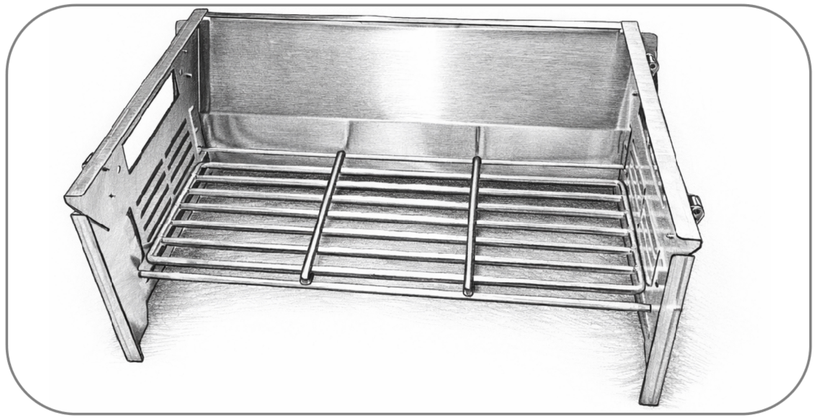


- Place B2 at the open end, vents facing outward.
- Align tabs and slots, then press down to lock.
- Ensure all corners are fully seated.
- grate must sit level.

Step 4 – Install Long Side Panel A2




- Position A2 opposite A1.
- Align with B1/B2 slots and press down until locked.
- Check the frame is square and stable.


Step 5 – Install Ash Tray C

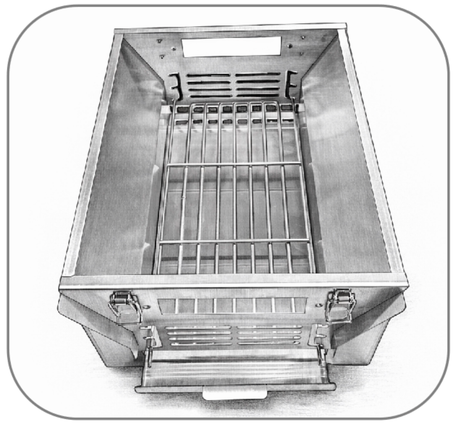

- Slide ash tray C into the bottom rails.
- Push fully in until it stops.
- Remove only after the grill is completely cool.

Step 6 – Fasten Latches & Install E

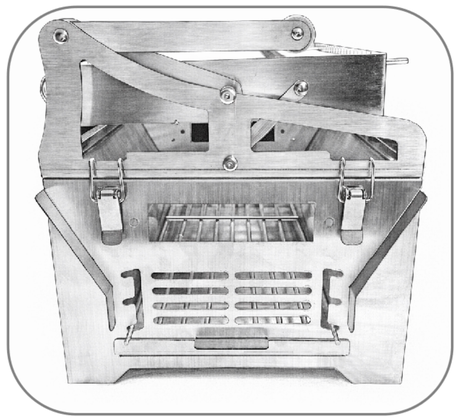

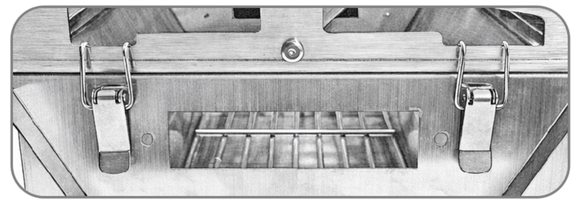

- Place assembly E on the base and align both sides.
- Fasten the latches to secure E to the base.

Step 7 – Unfold the Flip Handle



- Lift the wooden handle to unfold the grate.
- Push down on the handle to flip the grate over.