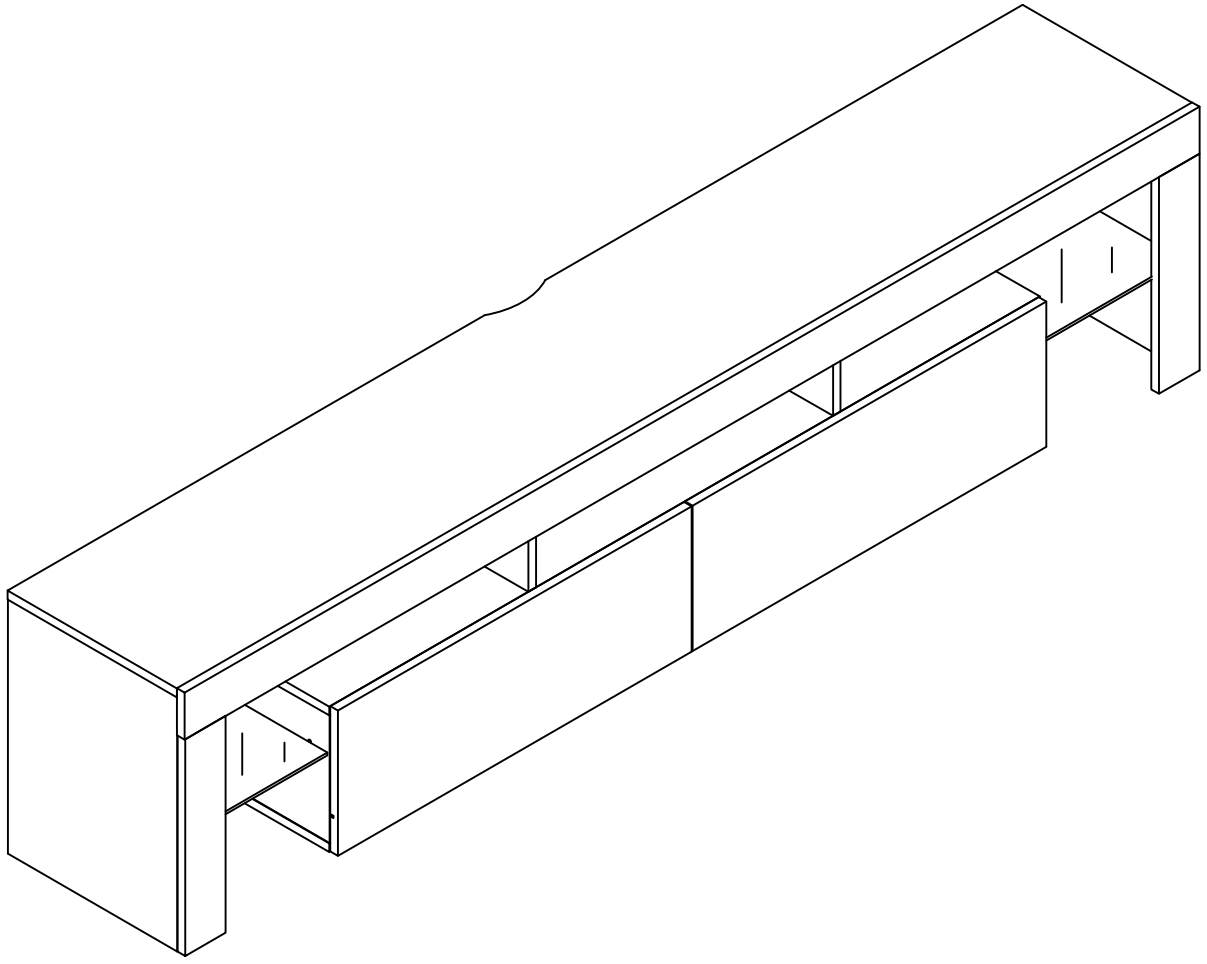

OME2208061

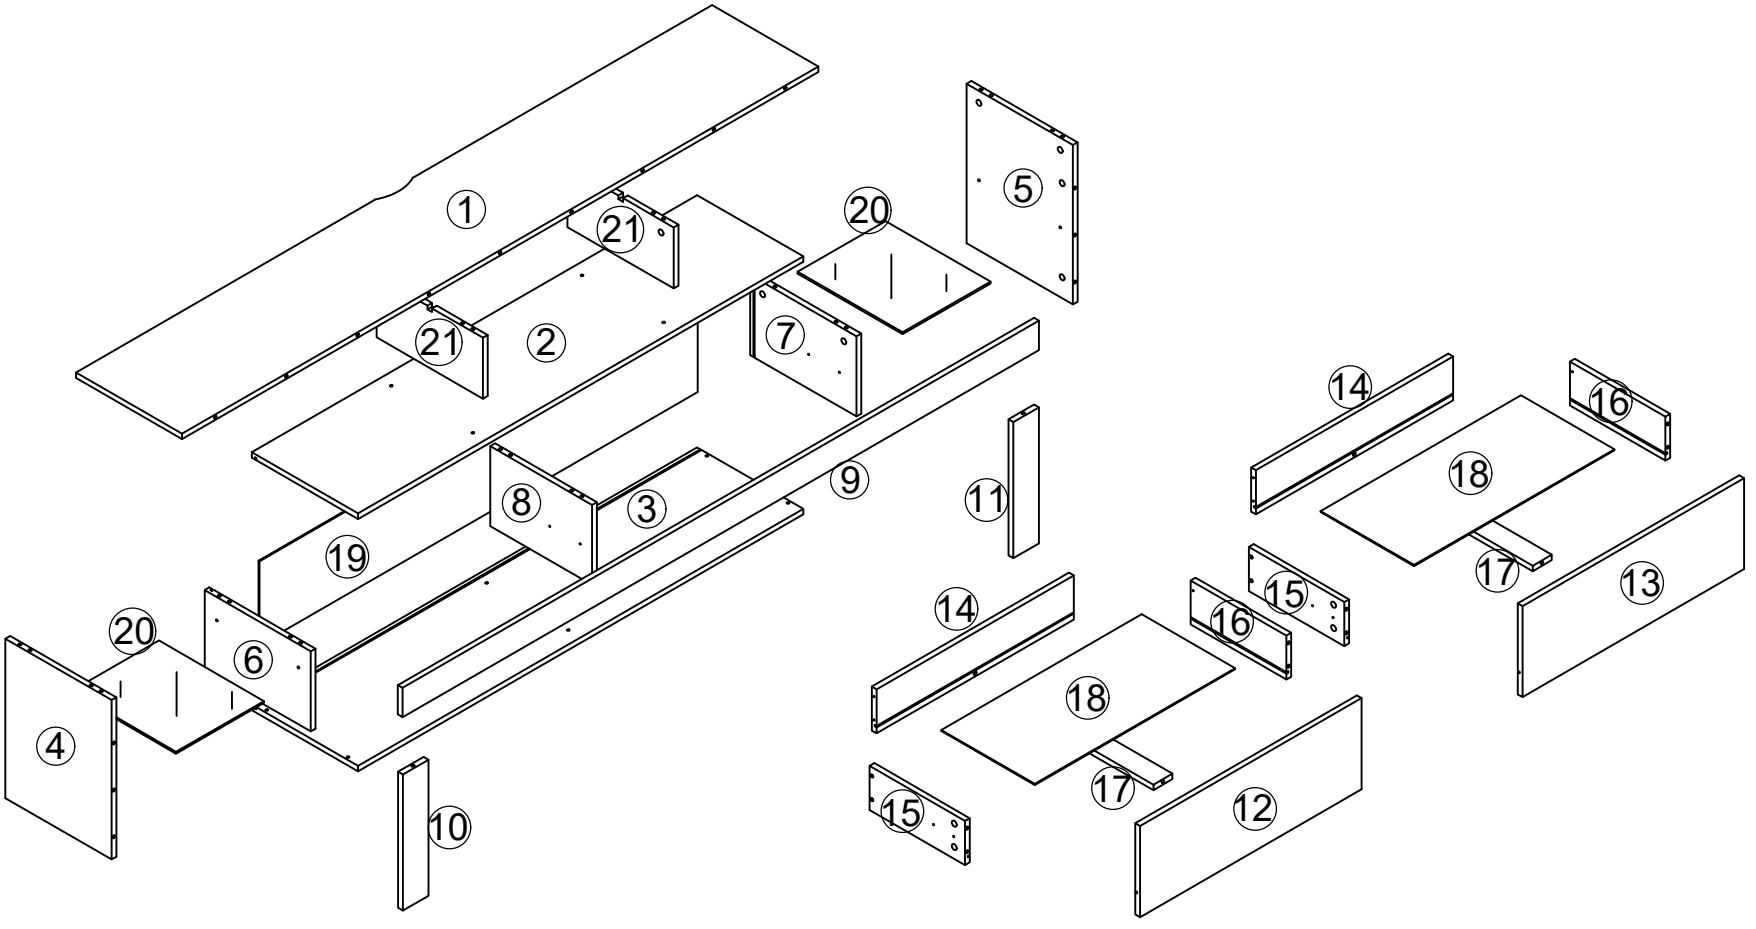

K 300mm  2PCS		L 10PCS	M 3*12 10PCS	LED  1PCS					
A 35PCS	B 35PCS	C 8*40  22PCS	D 3.5*14 26PCS	E 3.5*25  10PCS	F 3.5*35  8PCS	G 7*50  10PCS	H  5PCS	I 8PCS	J 10PCS

1 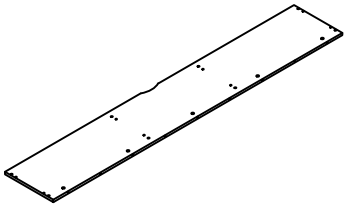 2000*334 1PS	2 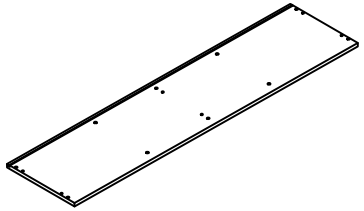 1400*334 1PS	3 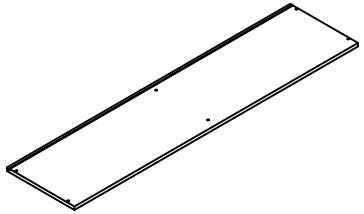 1400*334 1PS	4 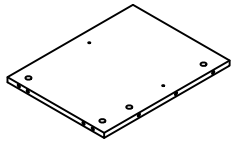 434*334 1PS	5 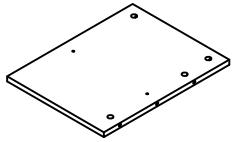 434*334 1PS
6 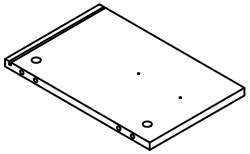 218*334 1PS	7 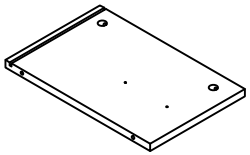 218*334 1PS	8 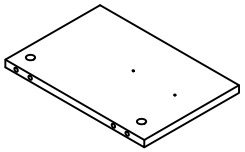 218*320 1PS	9 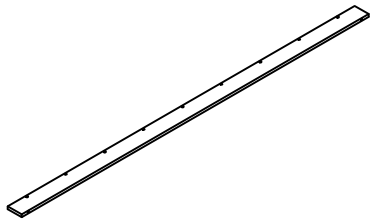 2000*80 1PS	10 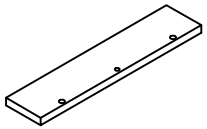 370*80 1PS
11 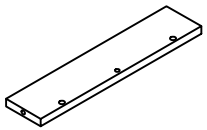 370*80 1PS	12 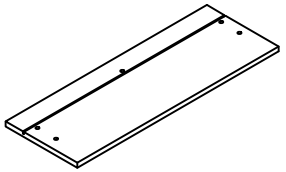 697*248 1PS	13 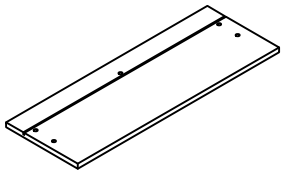 697*248 1PS	14 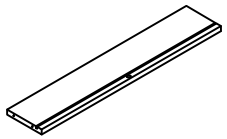 620*120 2PS	15  300*120 2PS 16  300*120 2PS
17  284*60 2PS	18 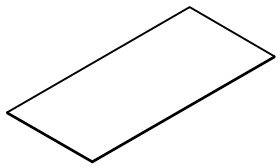 630*294 2PS	19 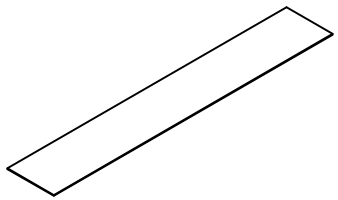 1378*228 1PS	20  330*276 2PS	21  166*334 2PS

Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!

I

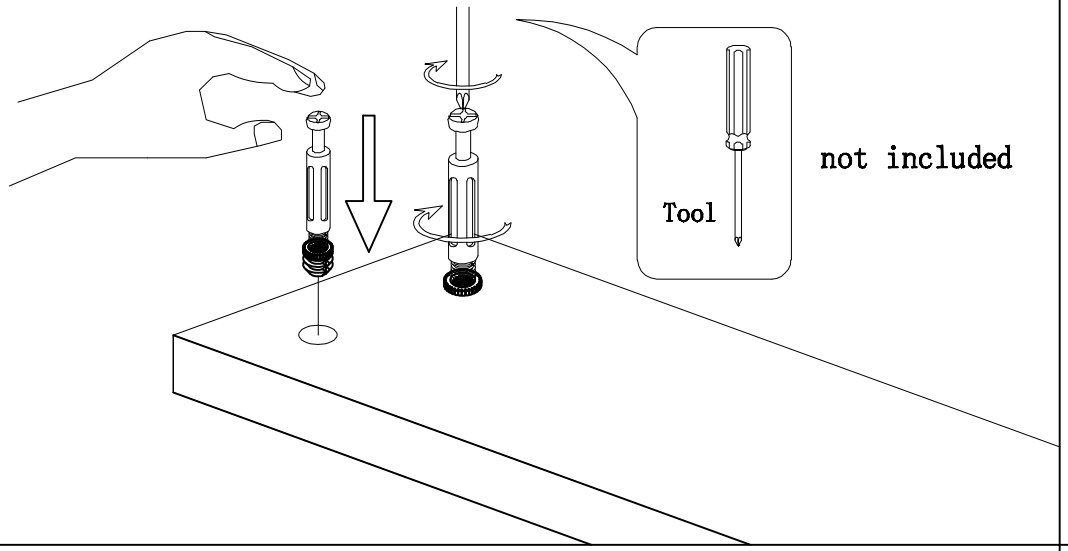

II

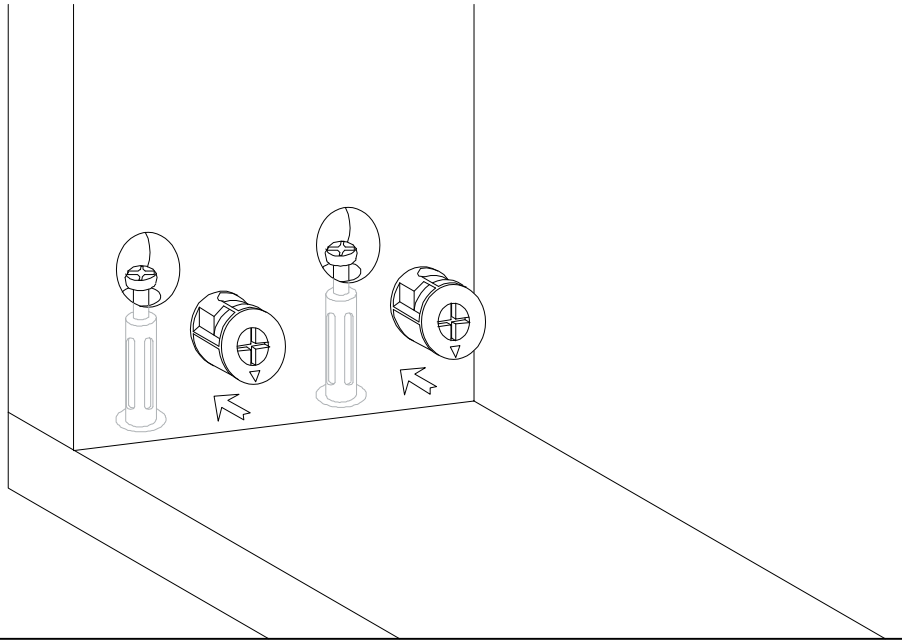

III

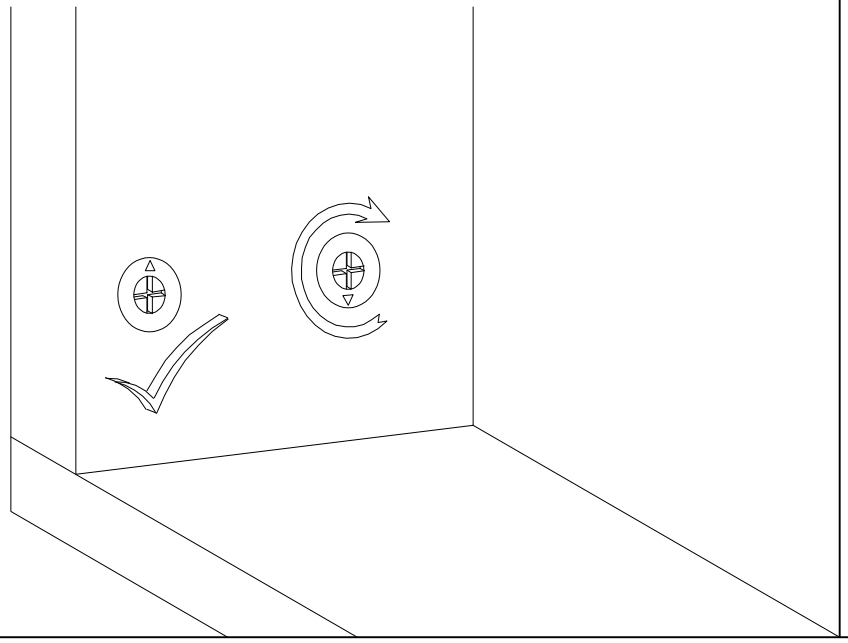

1

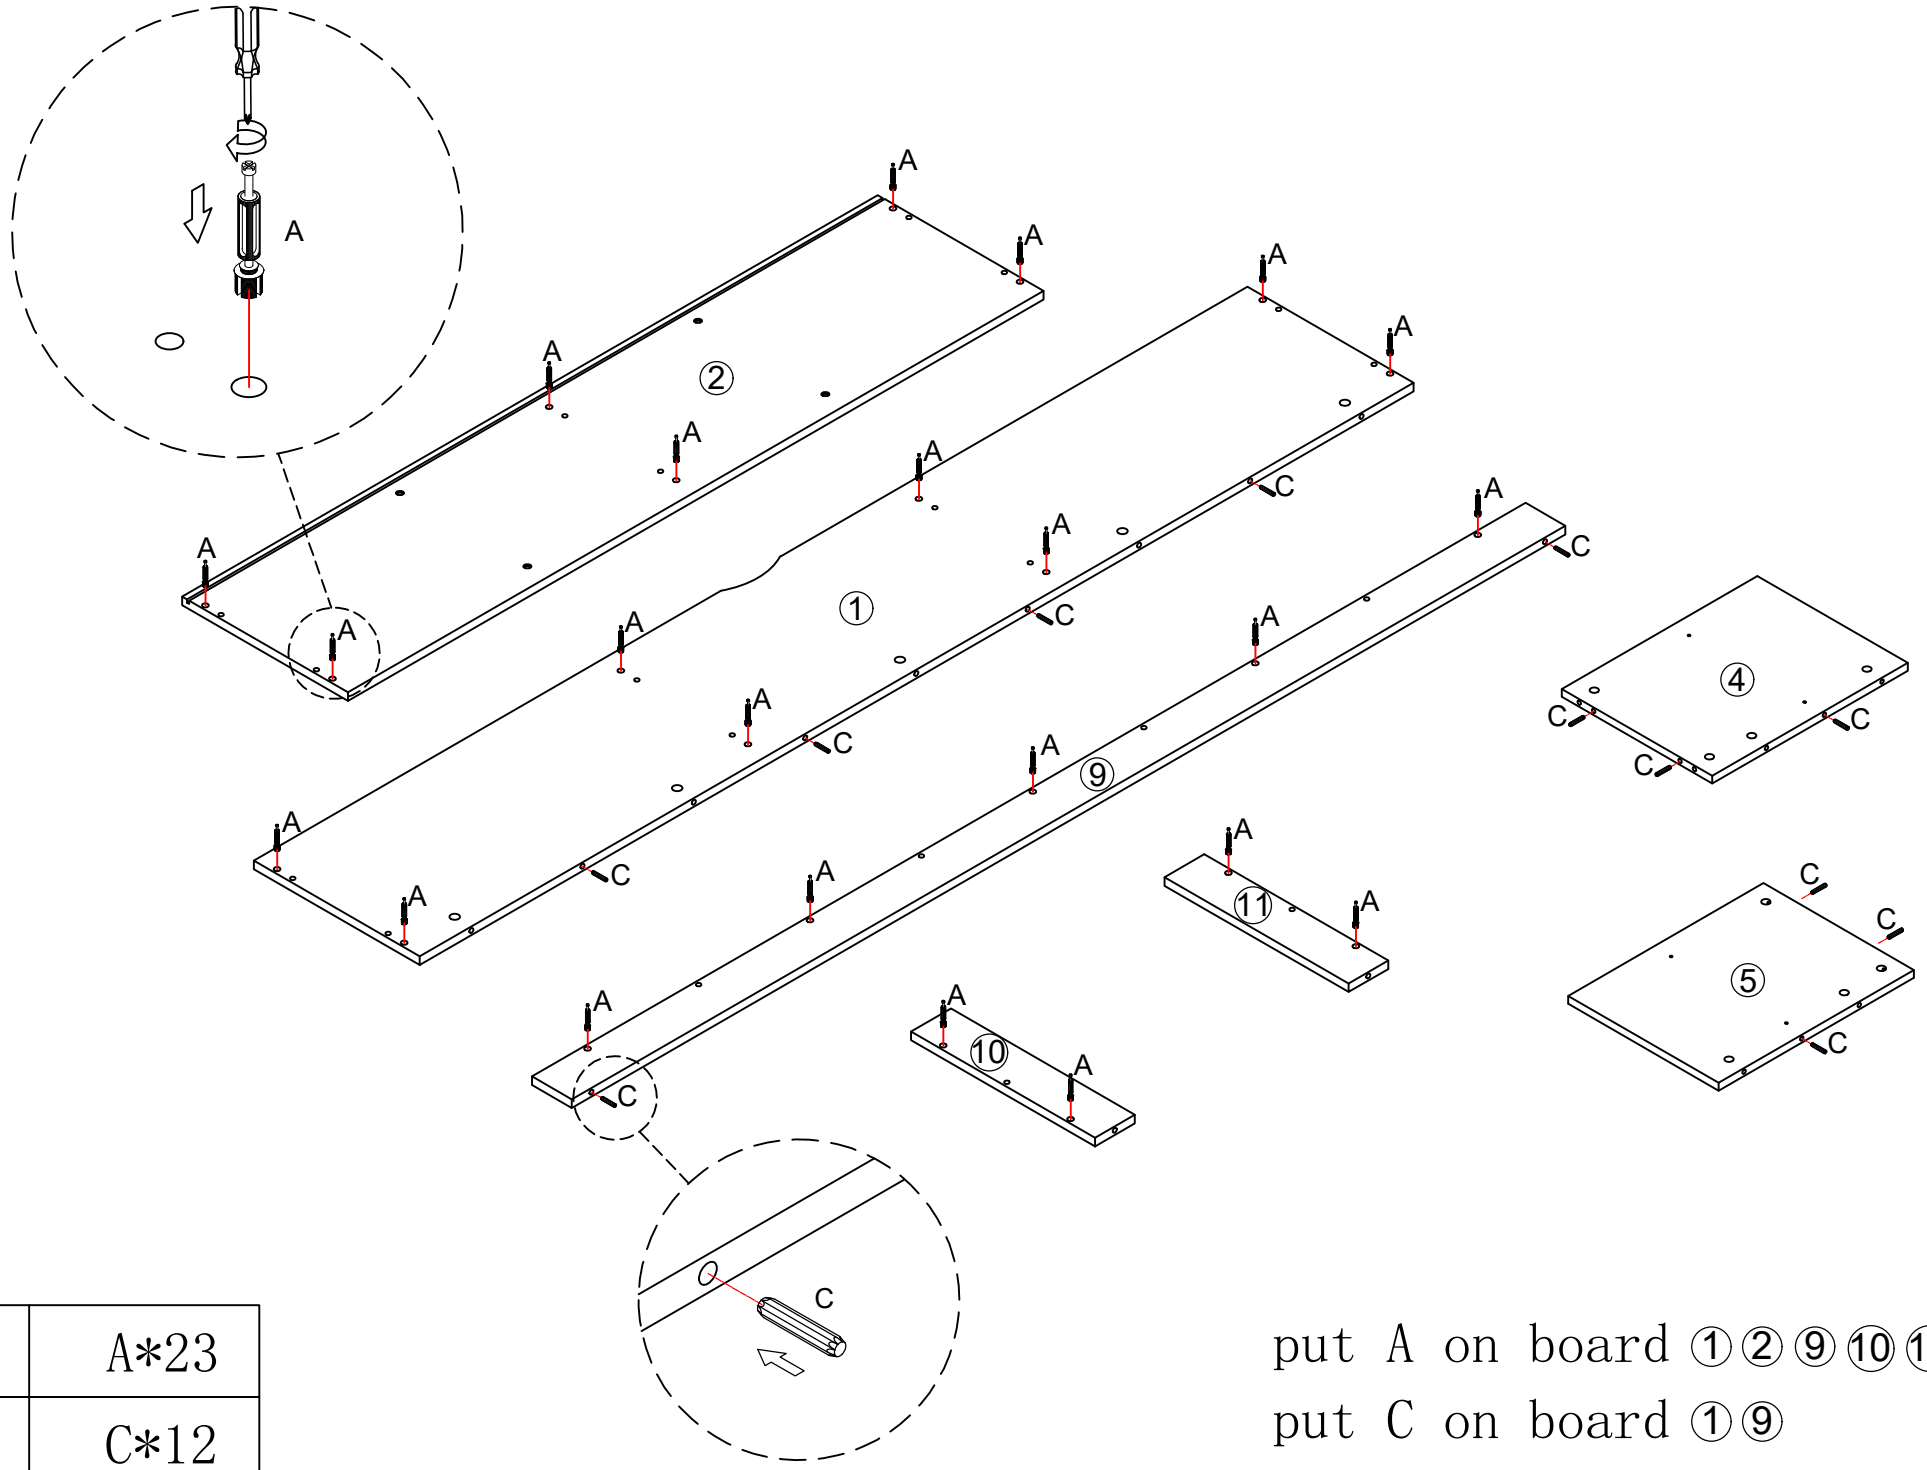

	A*23
	C*12

put A on board ①②⑨⑩⑪

put C on board ①⑨

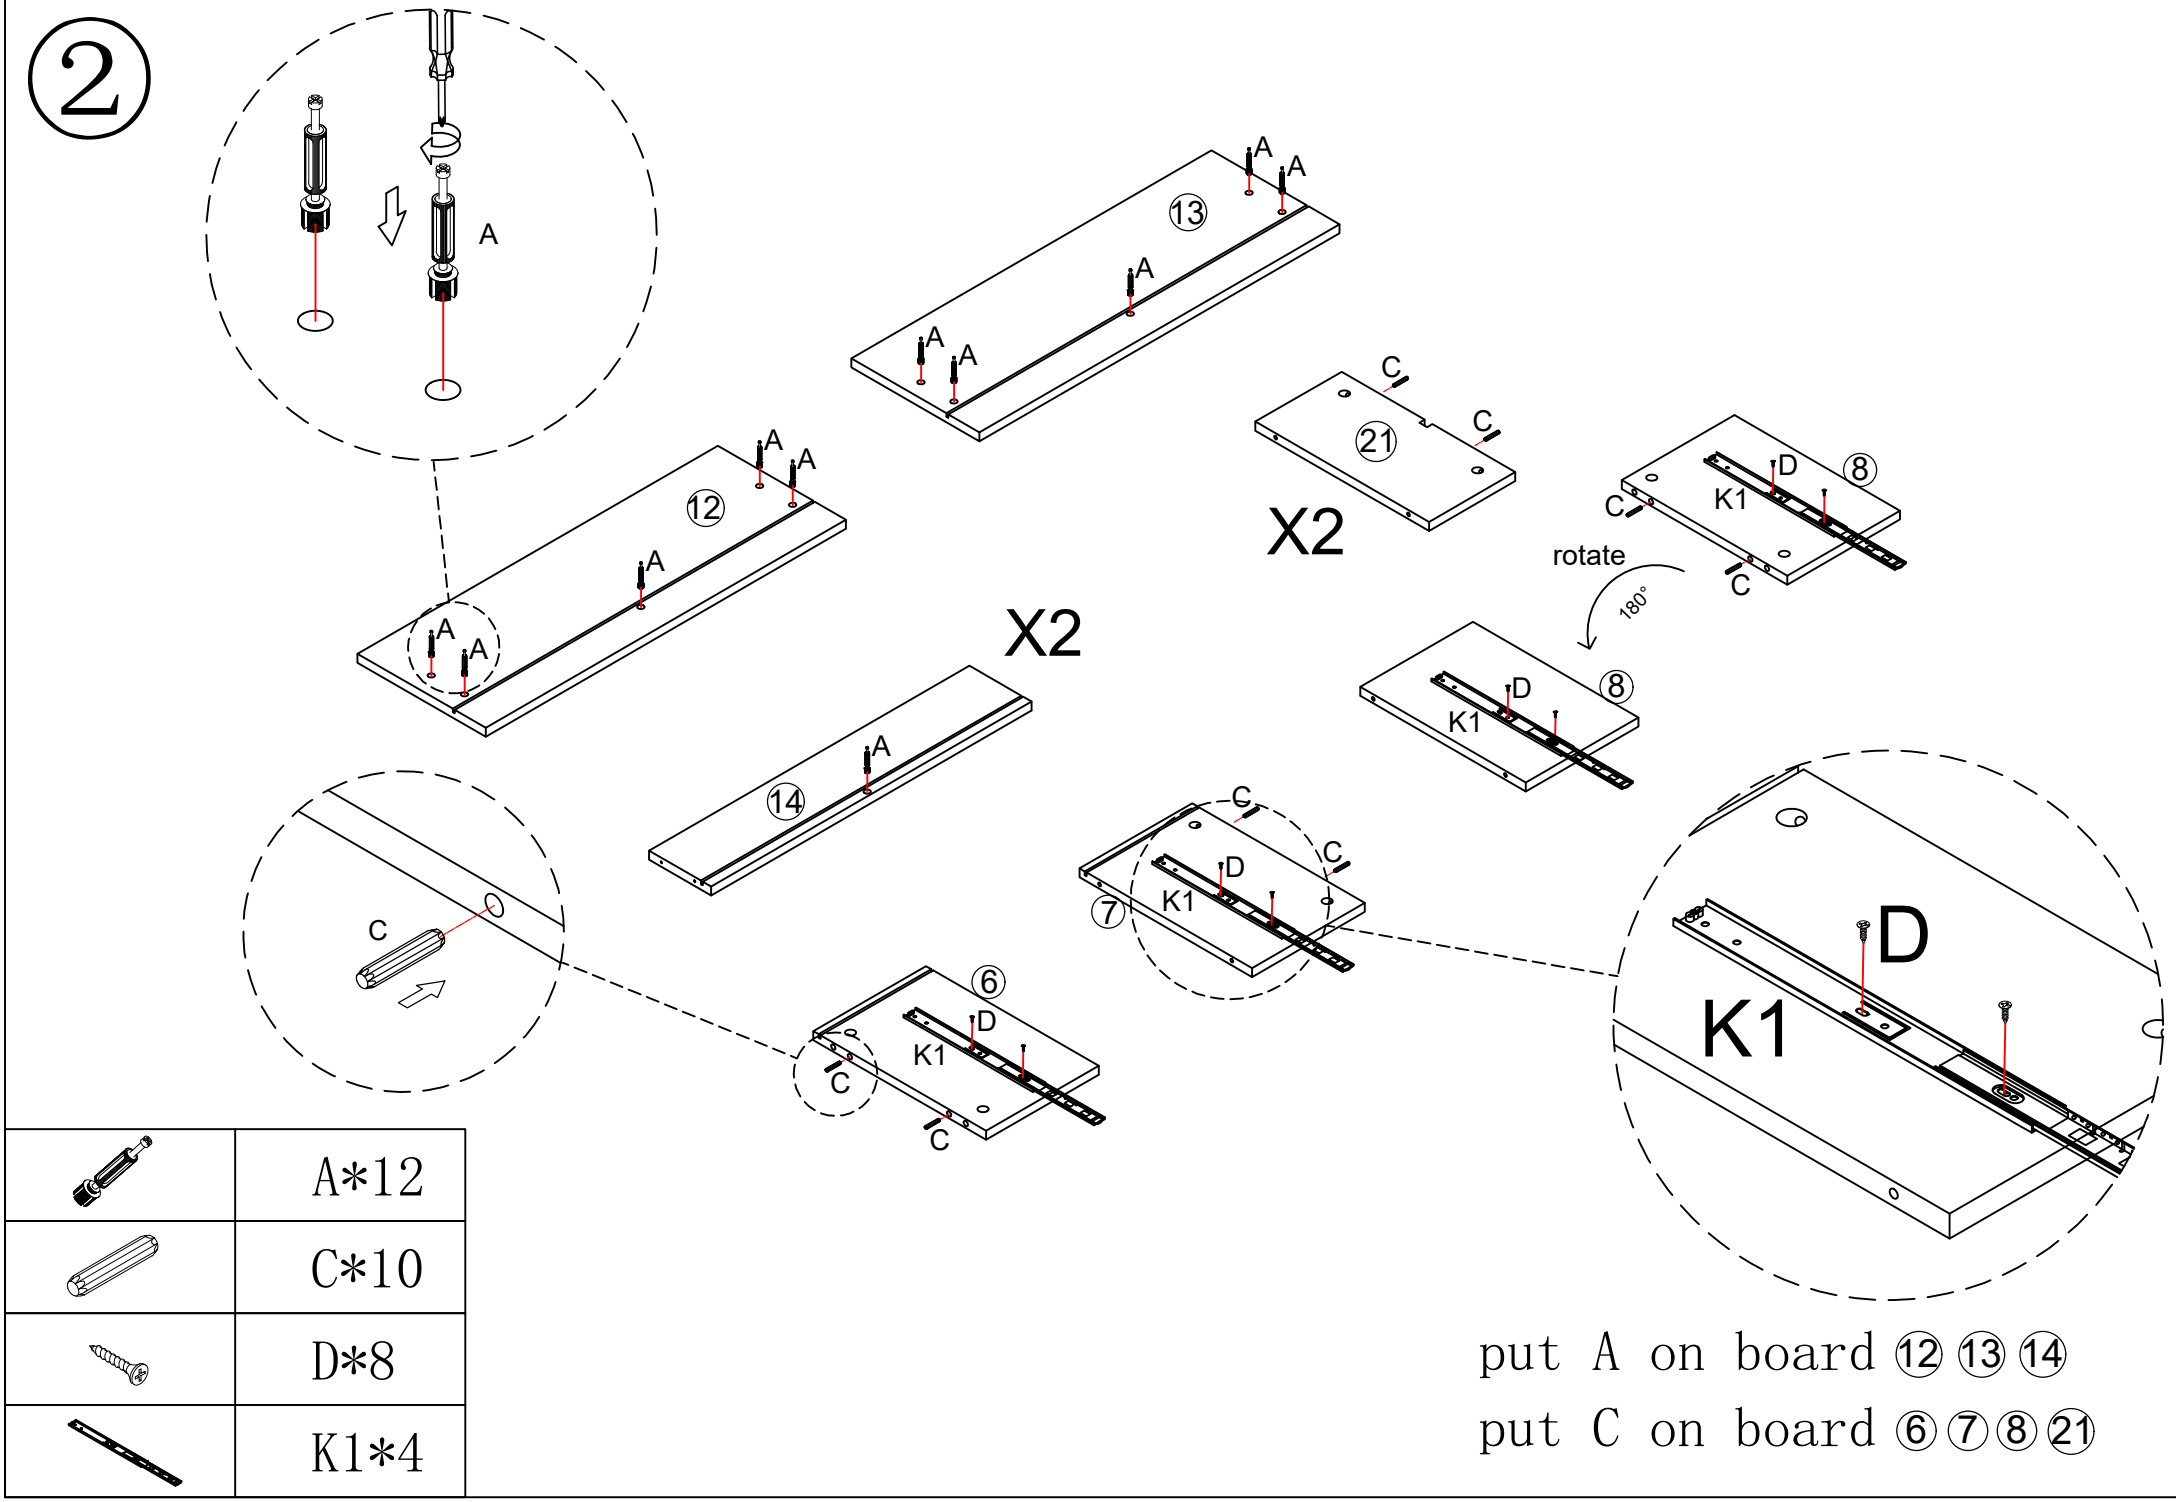
2
A
13
A
A
A
A
12
A
A
A
A
X2
21
C
C
X2
8
D
K1
C
C
rotate
180°
8
D
K1
14
A
C
C
C
D
K1
7
6
D
K1
C
C
D
K1
A*12
C*10
D*8
K1*4
put A on board ⑫ ⑬ ⑭
put C on board ⑥ ⑦ ⑧ ㉑

3

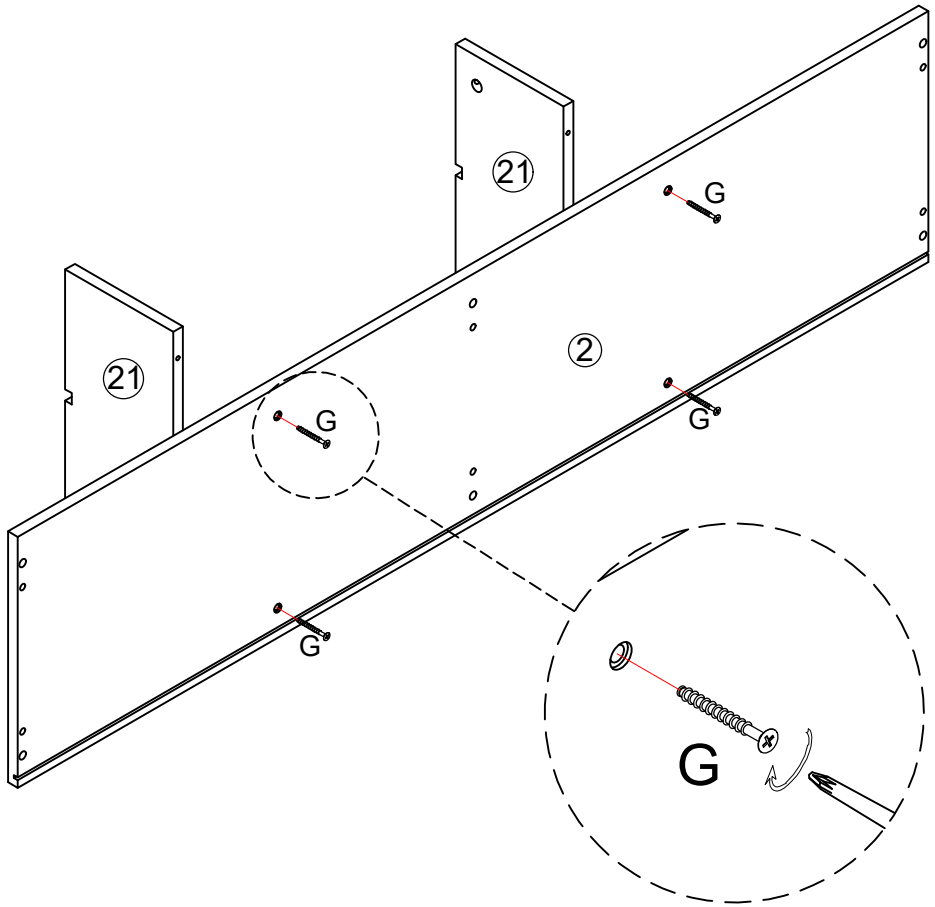

	G*4

④

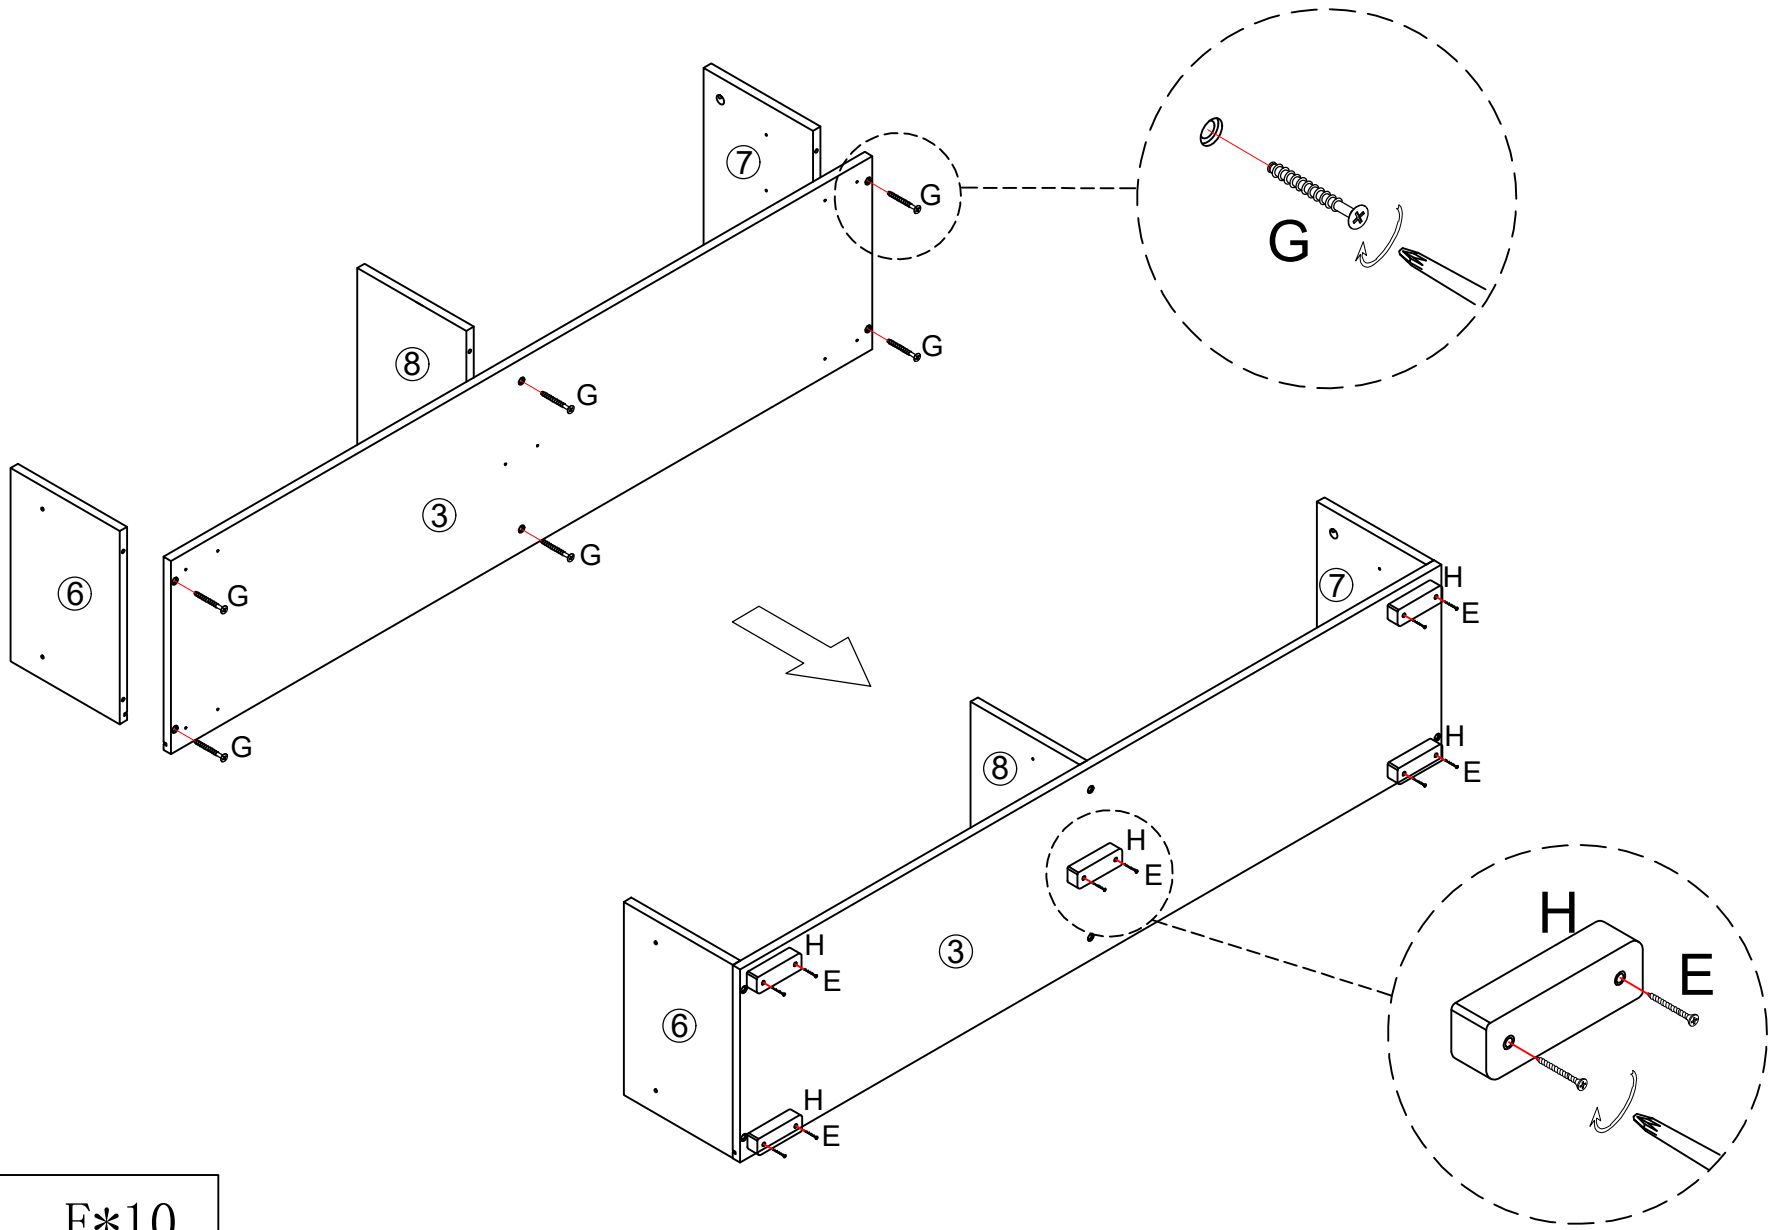

	E*10
	G*6
	H*5

5

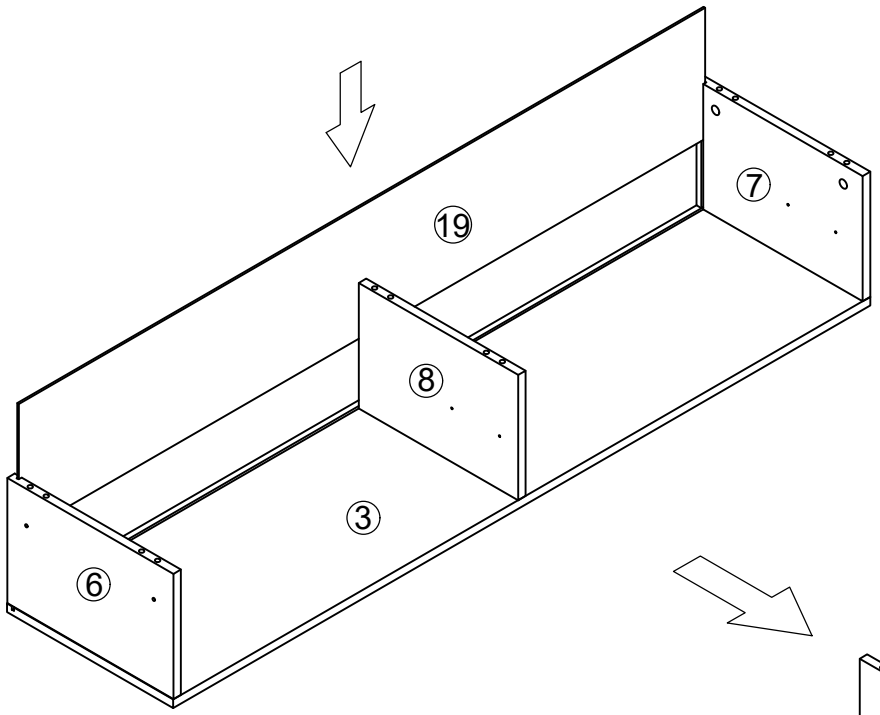

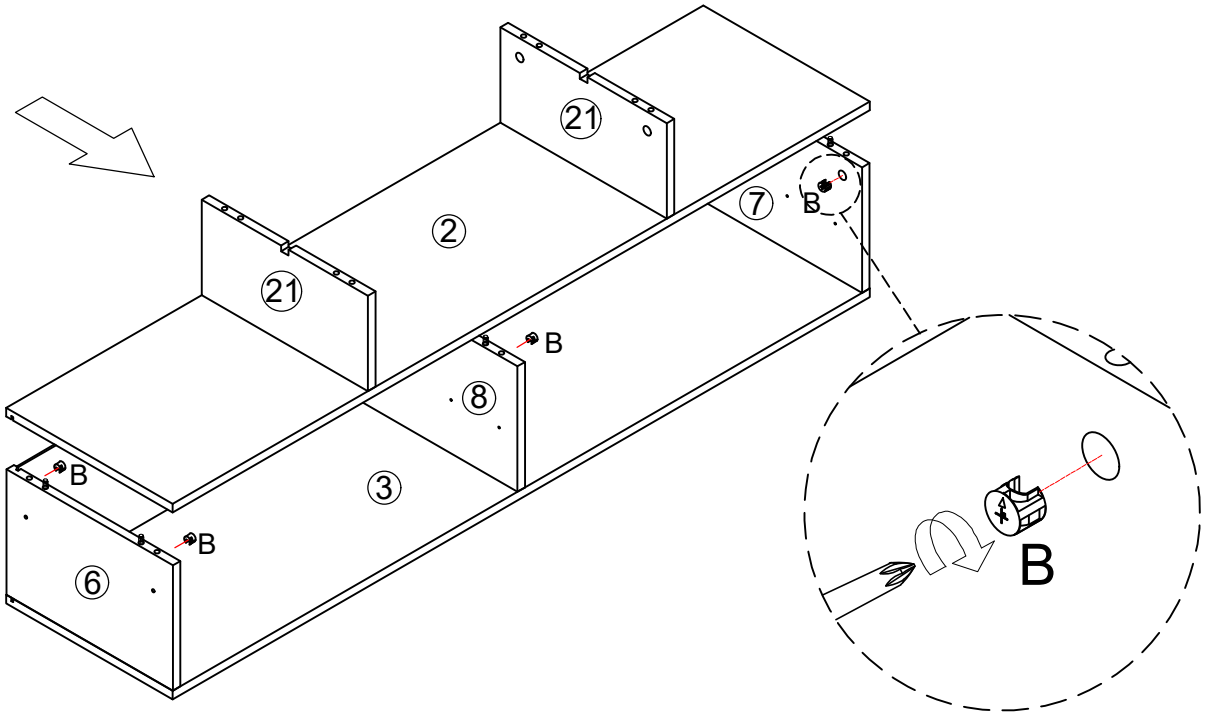

Make sure the arrow on the screw align to the hole on the side.

	B*6

put B on board ⑥⑦⑧

6

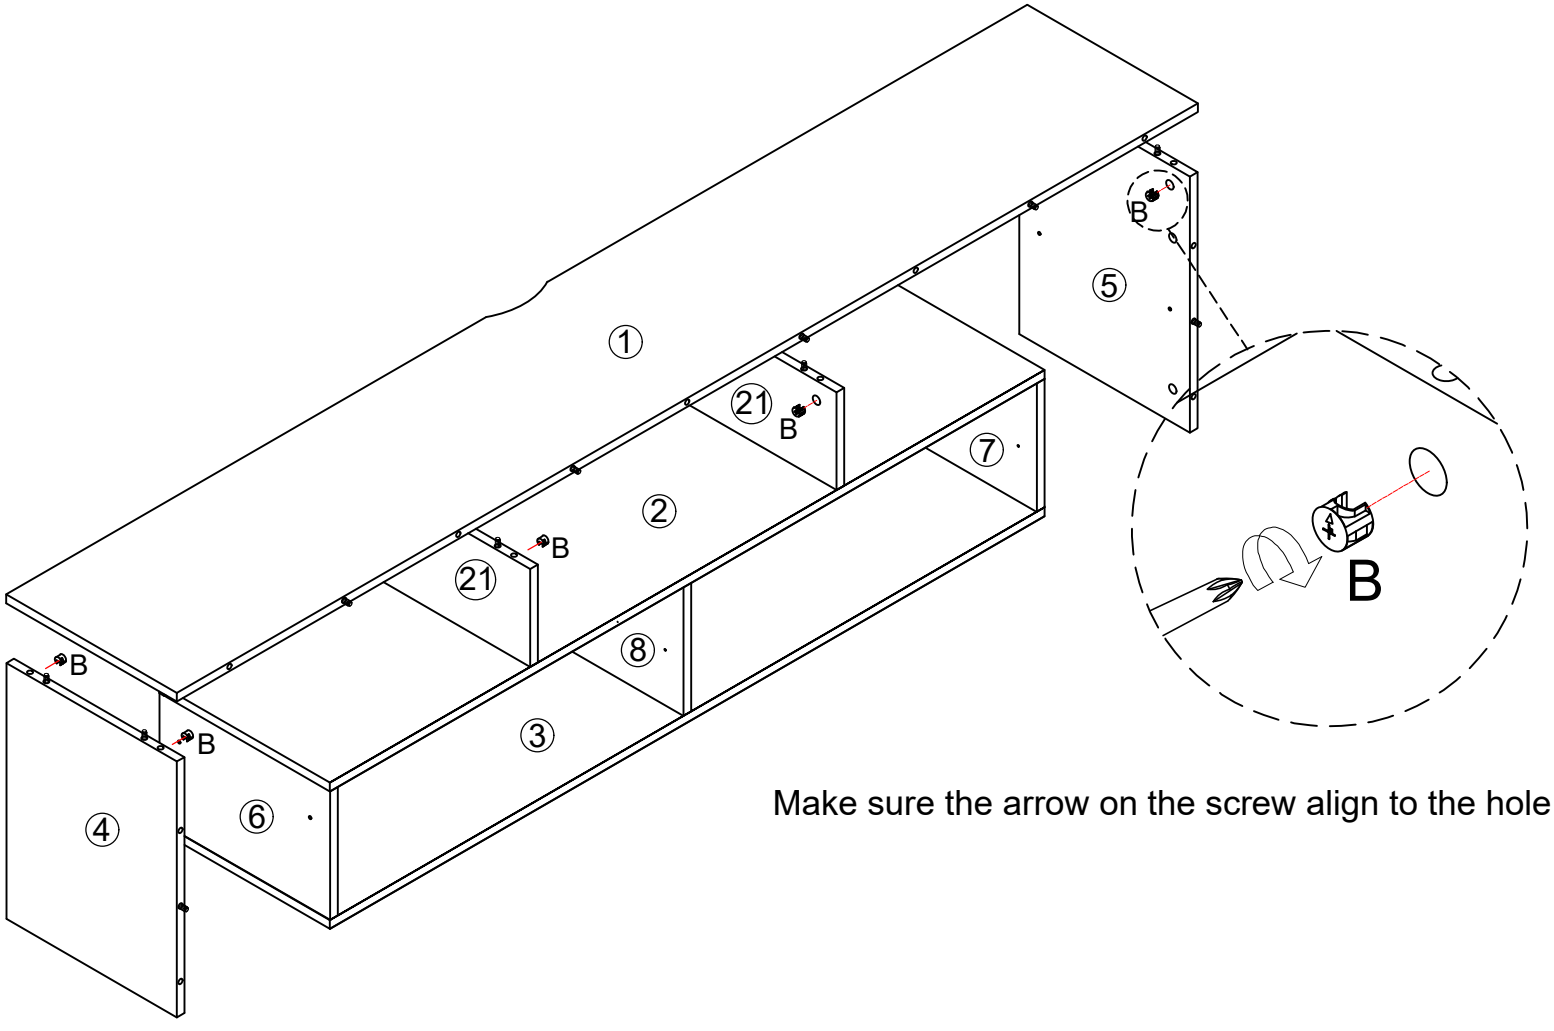

Make sure the arrow on the screw align to the hole on the side.

	B*8

put B on board ④⑤㉑

7

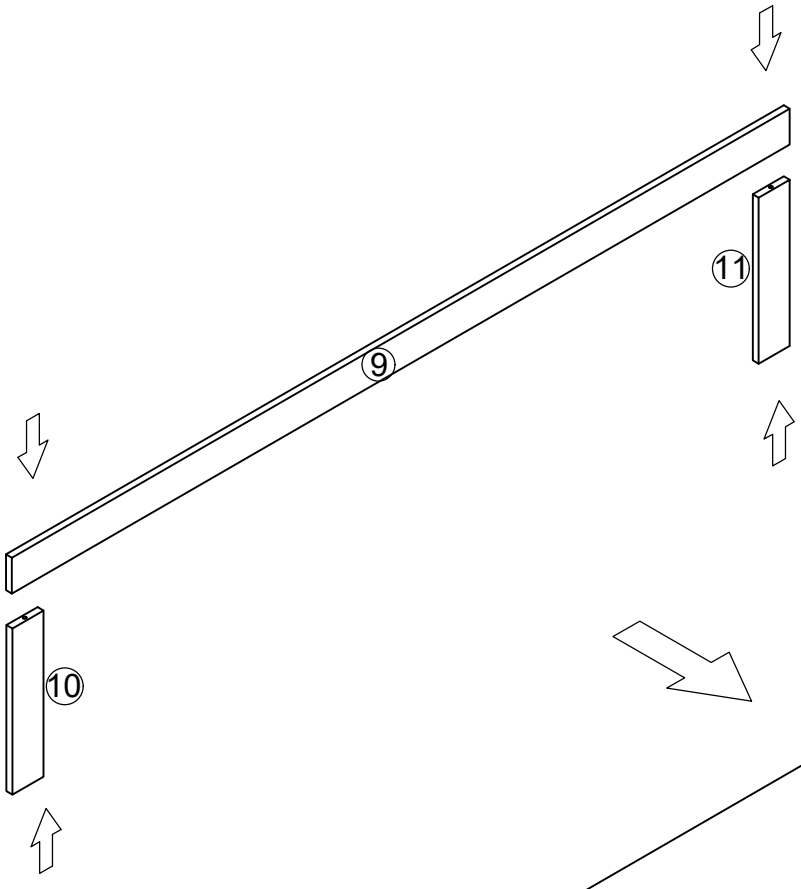

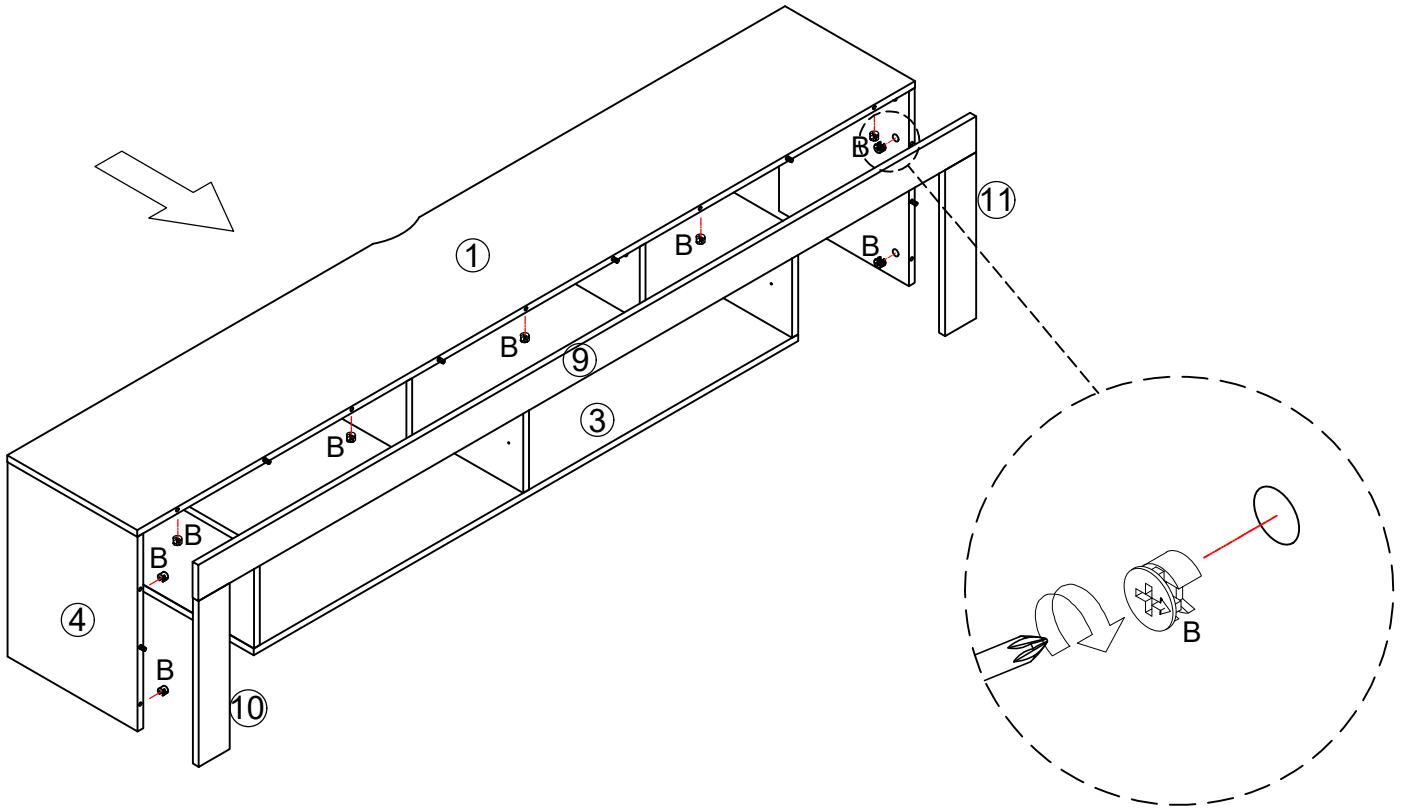

Make sure the arrow on the screw align to the hole on the side.

	B*9

put B on board ①④⑤

8

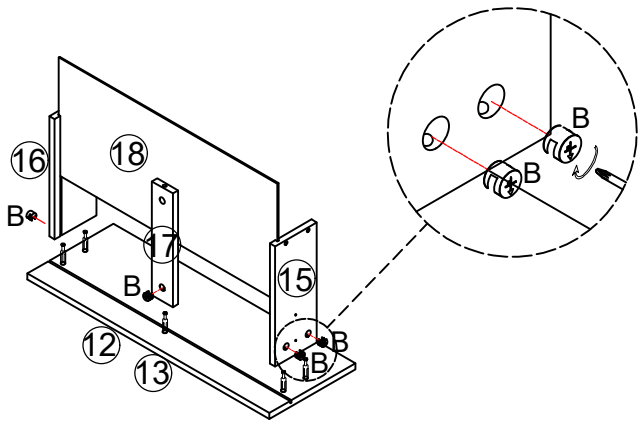

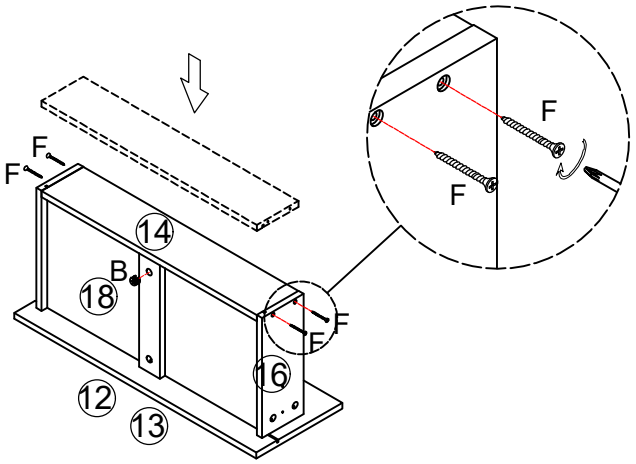

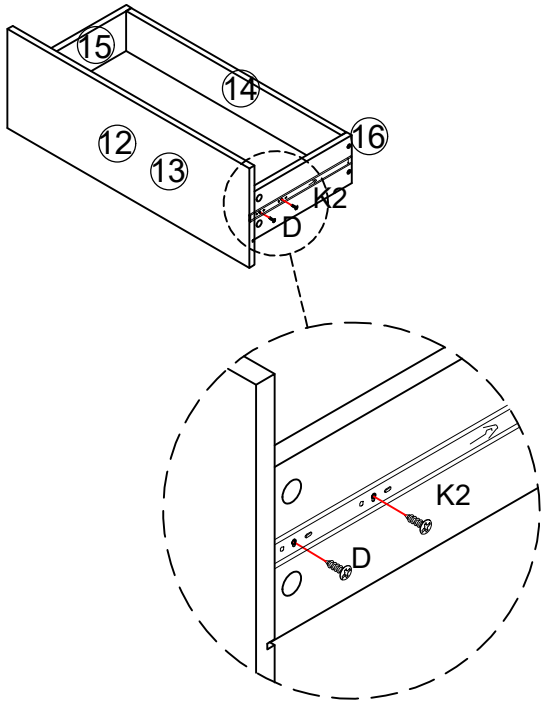

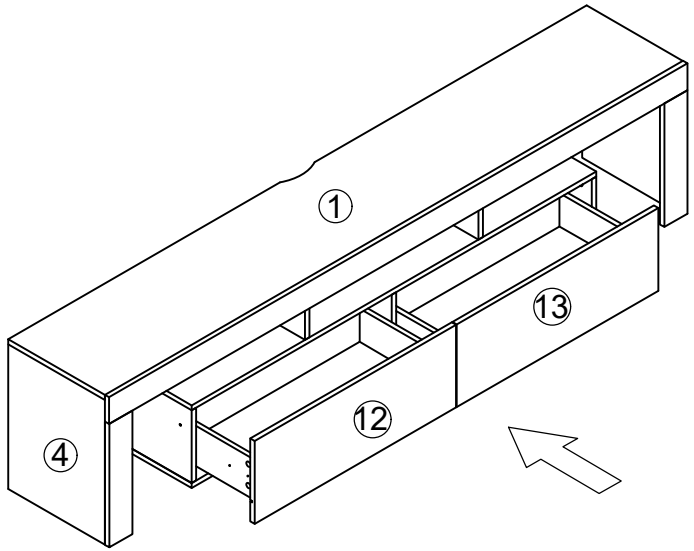

	B*12
	D*8
	F*8
	K2*4

put B on board ⑮ ⑯

9

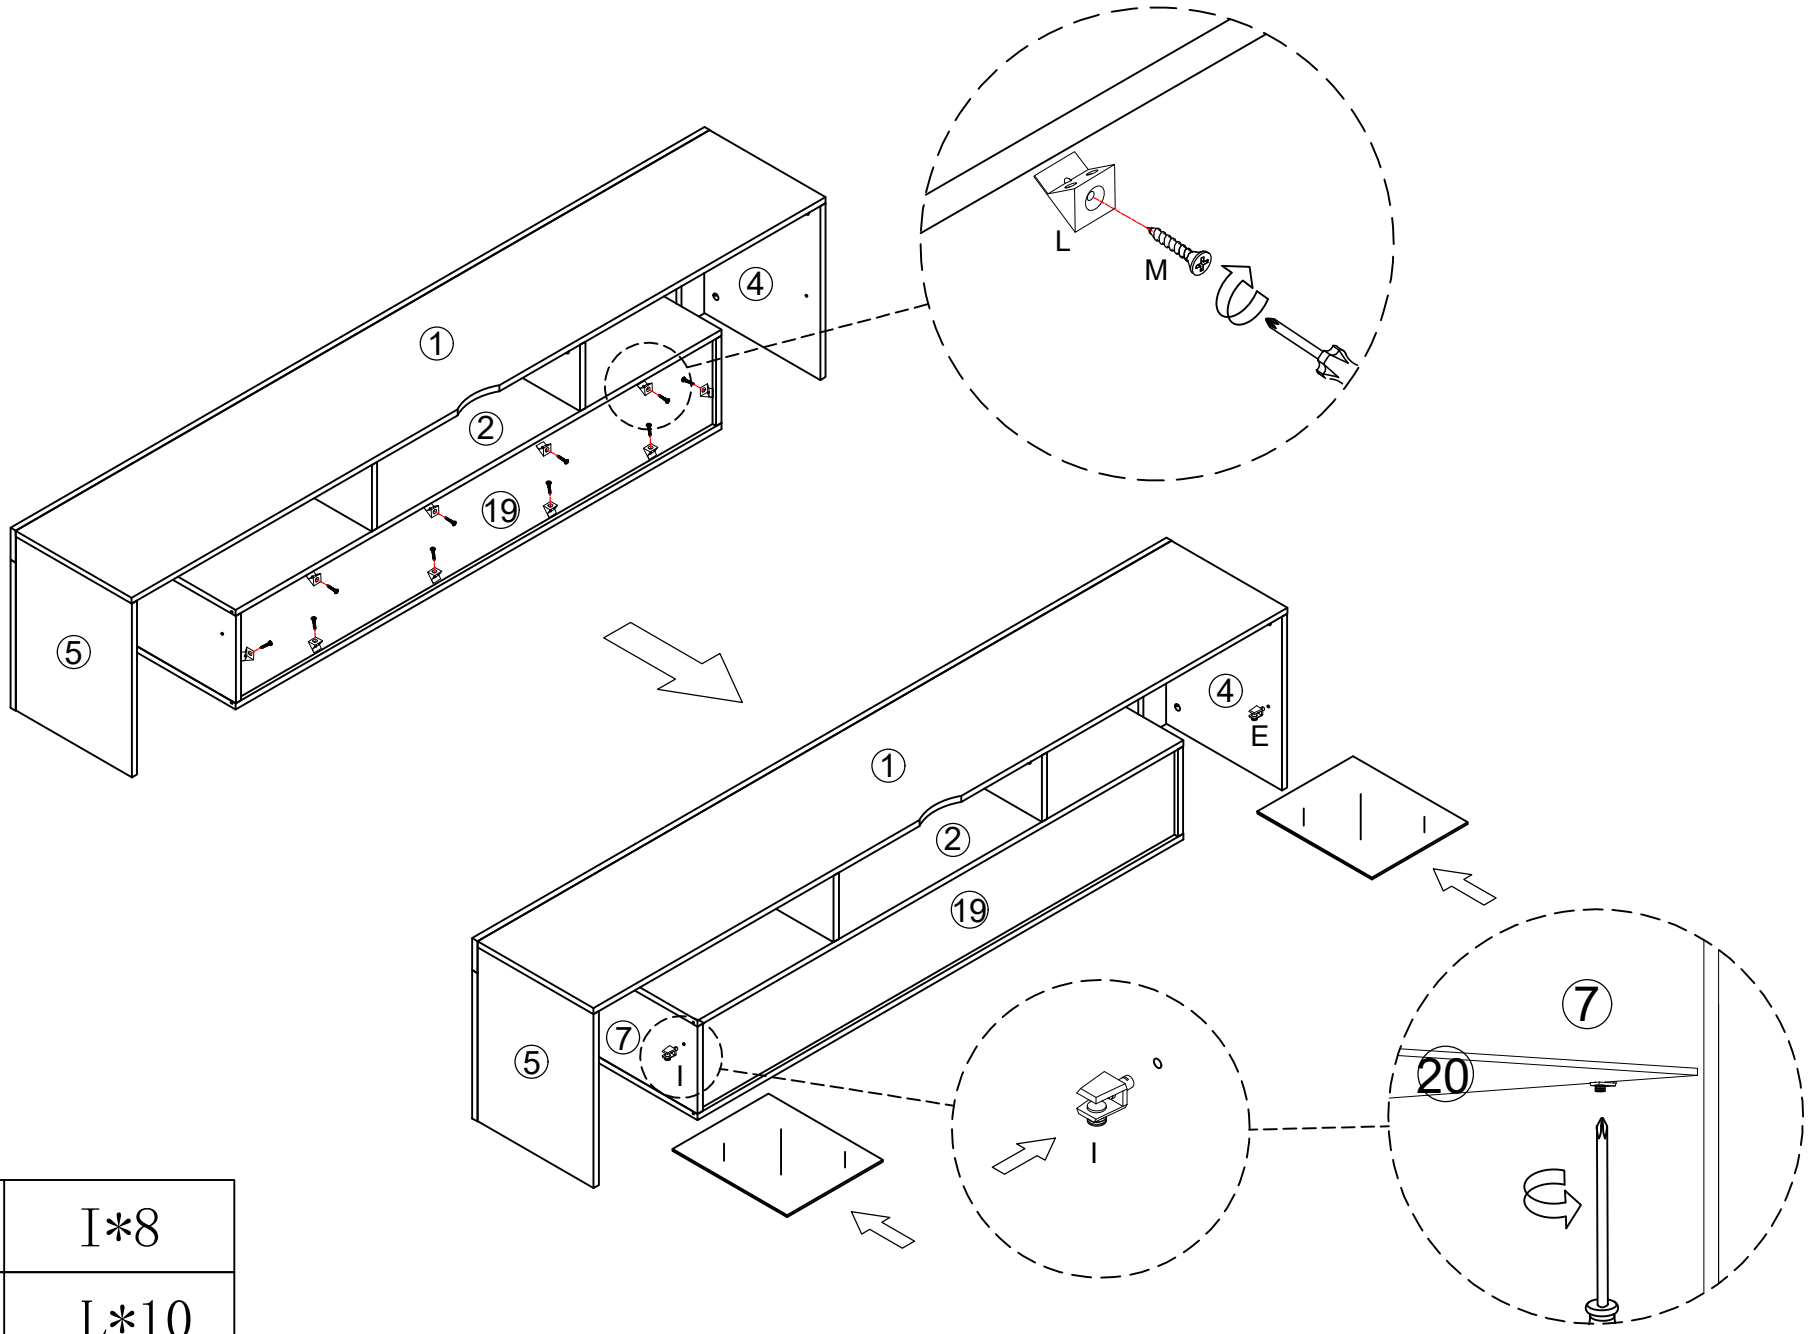

	I*8
	L*10
	M*10

10

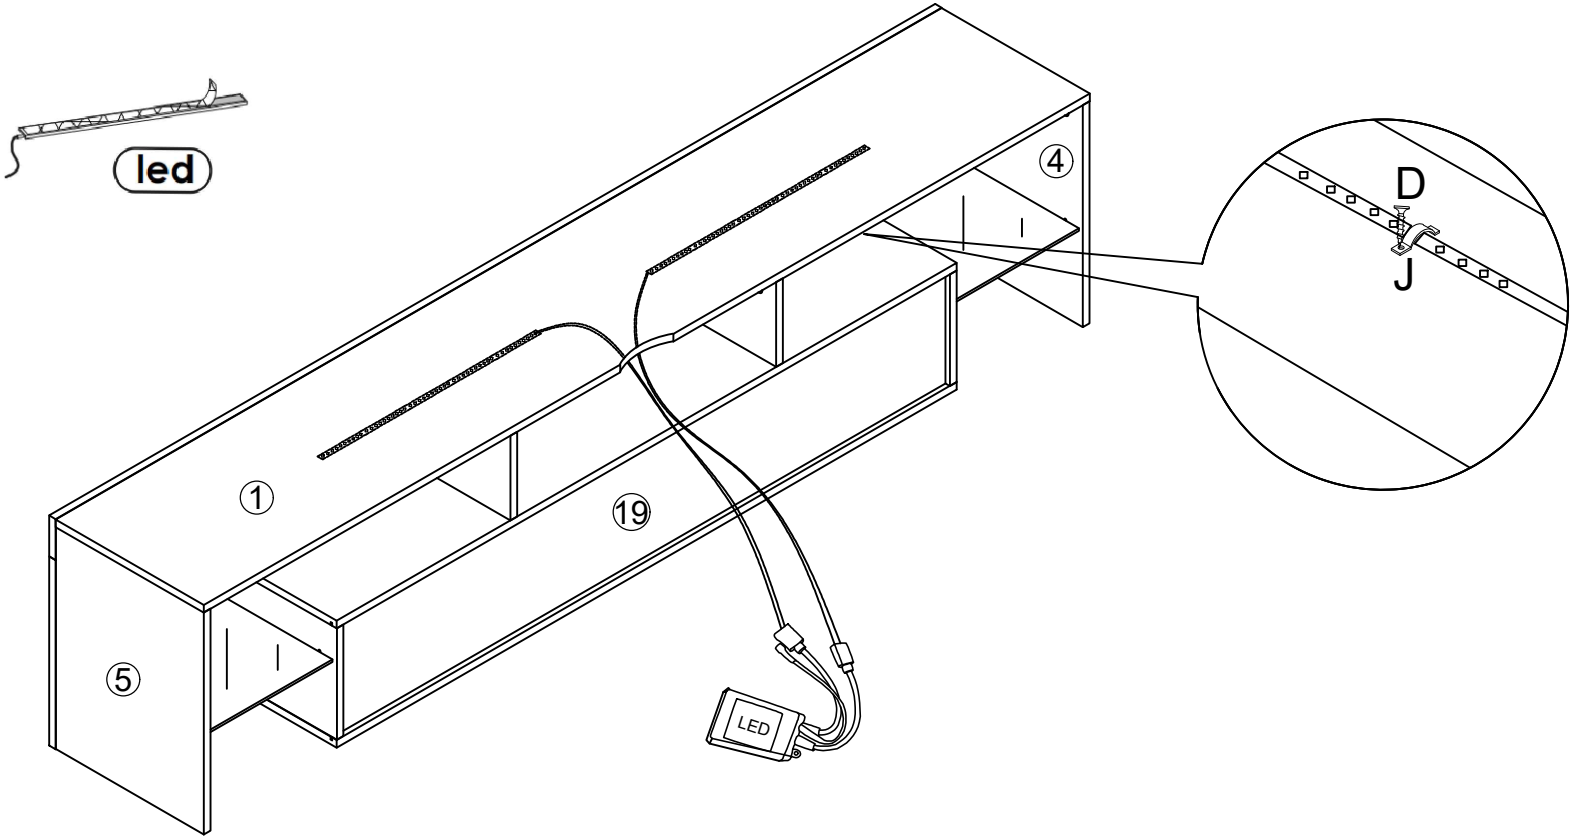

	D*10
	J*10
	LED

11

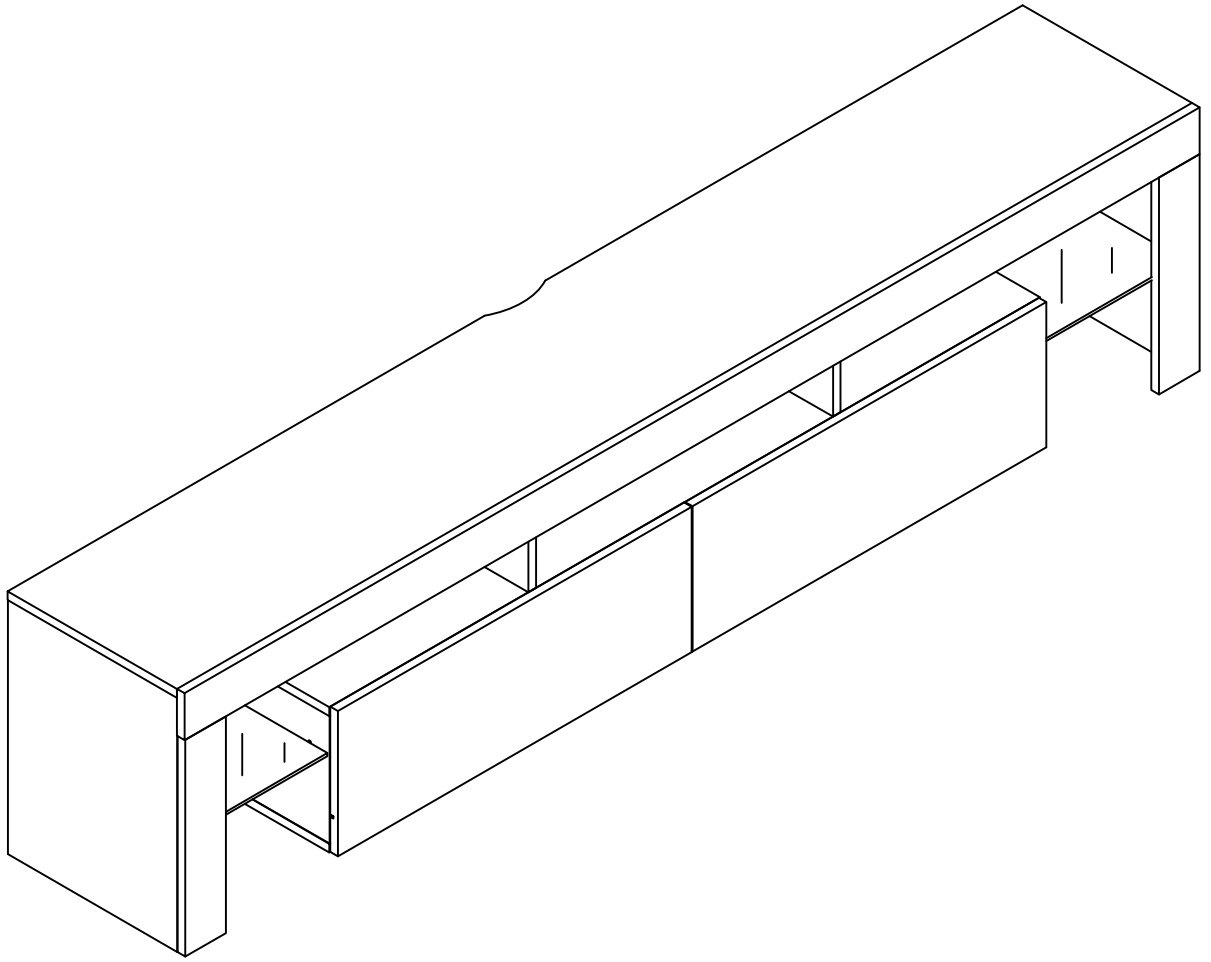

LED Light

If you can’t let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.

2. Please check the remote control, it need you to tear down the plastic septum before use it.
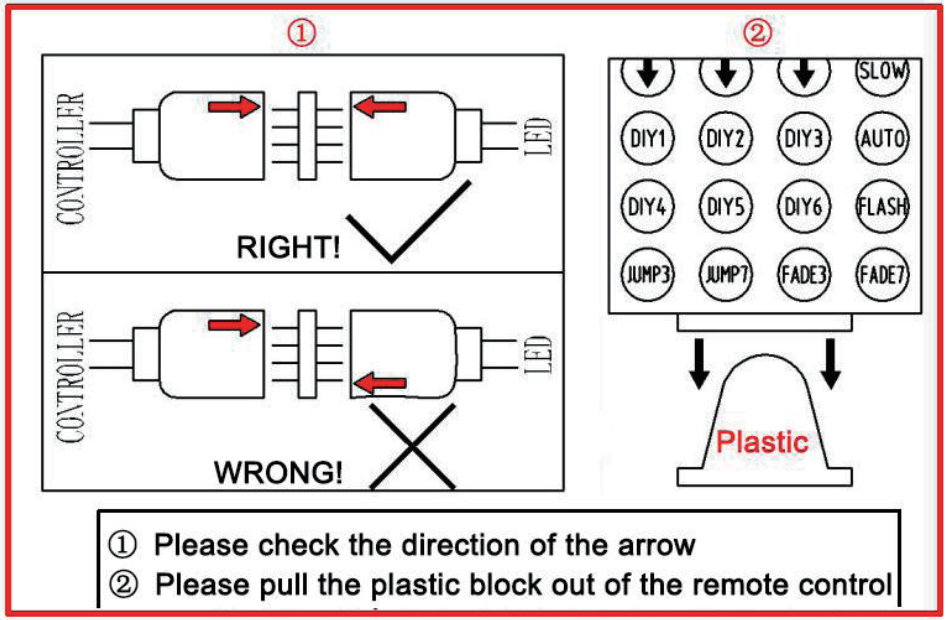
3. Don’t let the remote control too far from the receiver, make sure there is no obstruction between them.