TV STAND

Assembly Instructions-Please keep for future reference

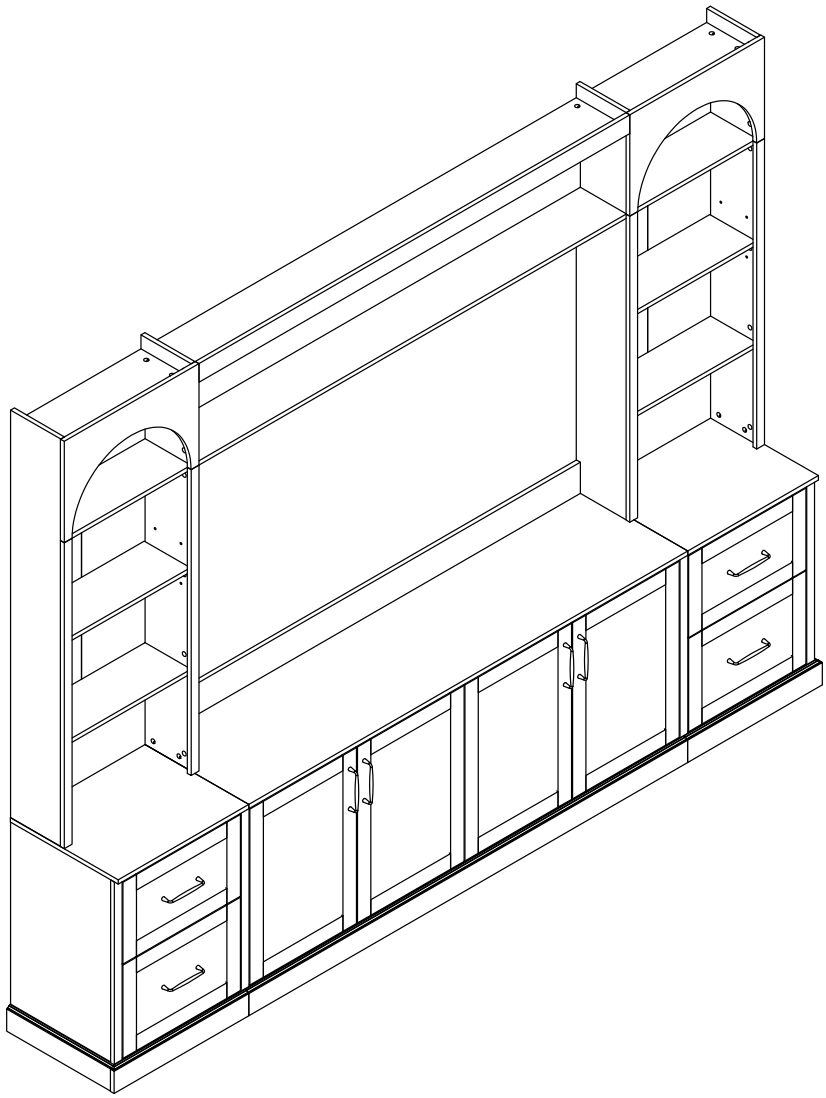

Dimensions

Width-15.74inch

Depth-102.36inch

Height-77.95inch

WARNING

This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

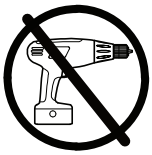

• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks

Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

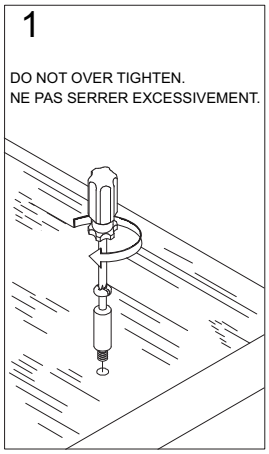

Step 2

Push the male camlock into the entry hole.

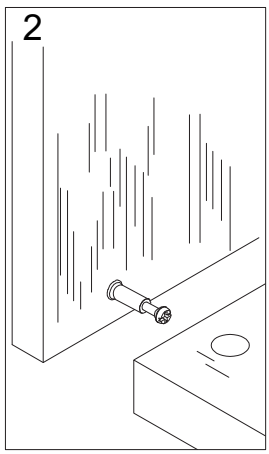

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock

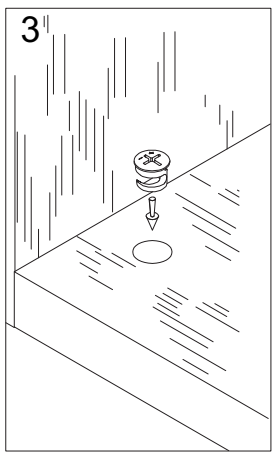

Step 4

Turn the female camlock clockwise with a screwdriver

You should feel a click when the camlock is locked in place.

The joint is now secure.

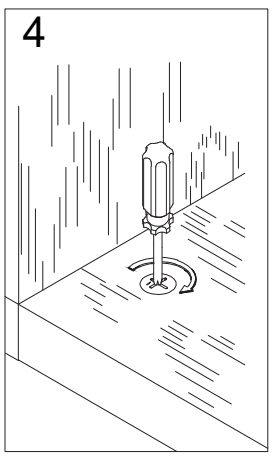

Assembly Instructions

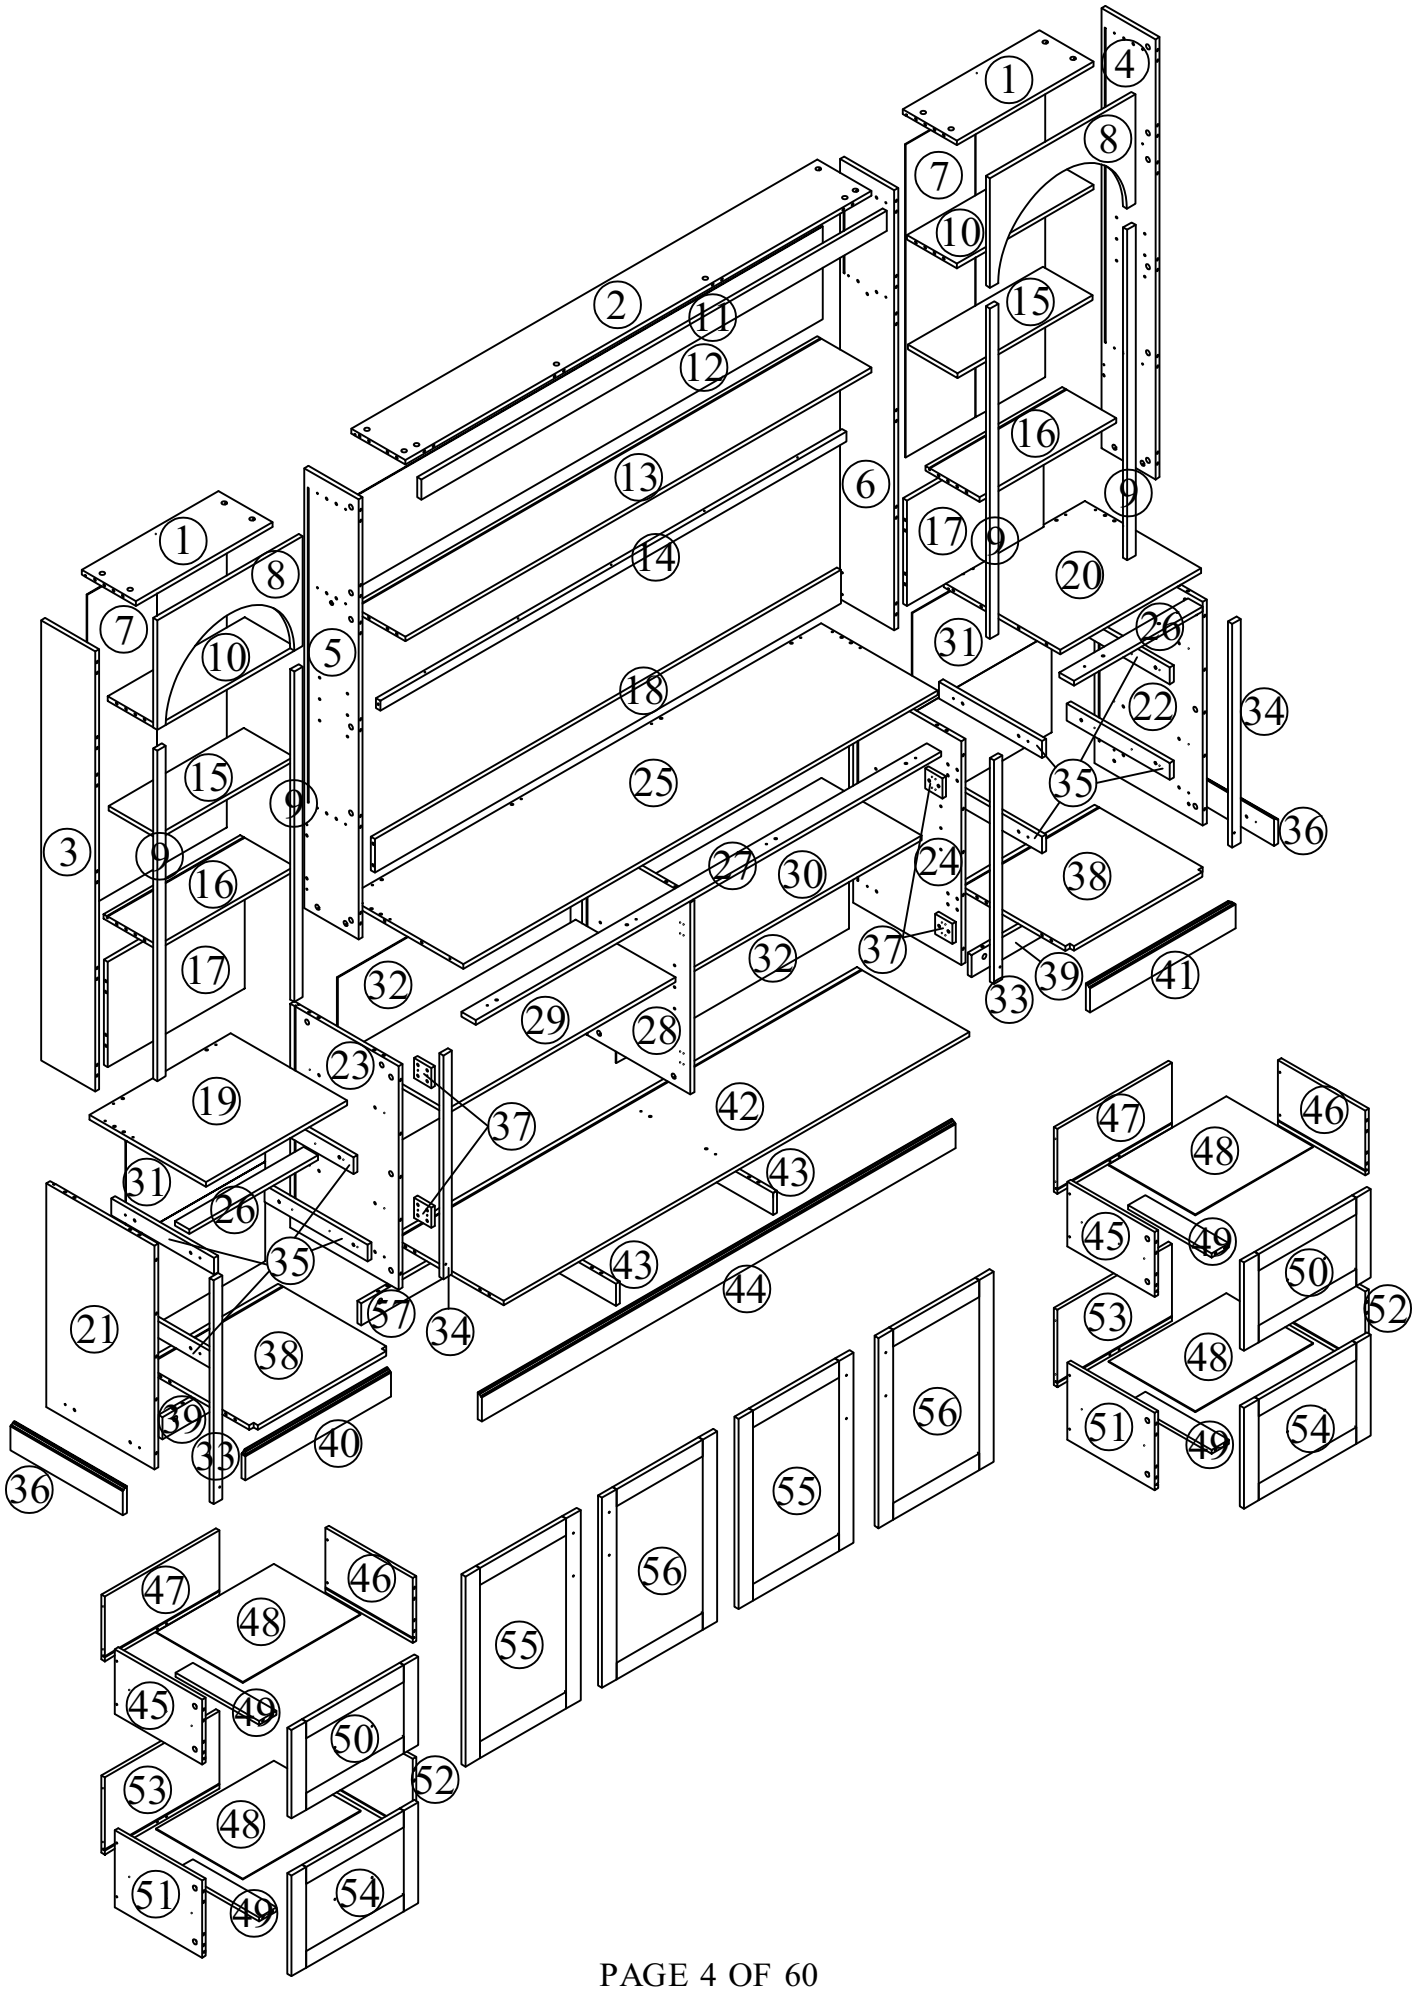

Assembly Instructions

There are 3 boxes of this product

BOX_1:

②	ROOF BOARD OF UPPER MIDDLE CABINET 1602 x 186 x 14mm 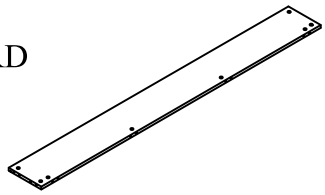	1PC	㉕	ROOF BOARD OF LOWER MIDDLE CABINET 1630 x 400 x 14mm 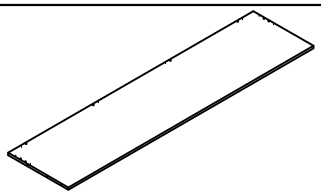	1PC
③	SIDES BOARD OF UPPER LEFT CABINET 1310 x 186 x 14mm	1PC	⑫	BACK BOARD OF UPPER MIDDLE CABINET 300 x 150 x 14mm 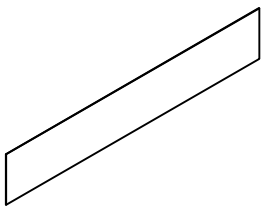	1PC
④	SIDES BOARD OF UPPER RIGHT CABINET 1310 x 186 x 14mm	1PC	㊷	BASE BOARD OF LOWER MIDDLE CABINET 1601 x 386 x 14mm 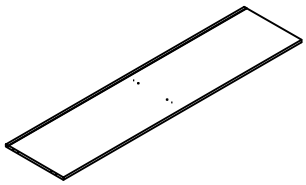	1PC
⑤	VERTICAL PARTITION BOARD OF UPPER LEFT CABINET 1310 x 186 x 14mm	1PC	㉗	FRONT STRIP OF LOWER MIDDLE CABINET 1600 x 50 x 14mm 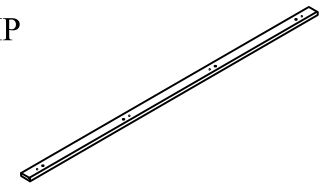	1PC
⑥	VERTICAL PARTITION BOARD OF UPPER RIGHT CABINET 1310 x 186 x 14mm	1PC	㉙	REMOVABLE SHELT OF LOWER MIDDLE CABINET 787.5 x 344 x 14mm 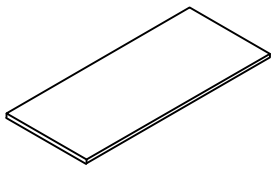	1PC
⑬	HORIZONAL PARTITION BOARD OF UPPER MIDDLE CABINET 1602 x 186 x 14mm 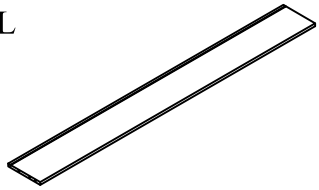	1PC	㉚	REMOVABLE SHELT OF LOWER MIDDLE CABINET 787.5 x 344 x 14mm 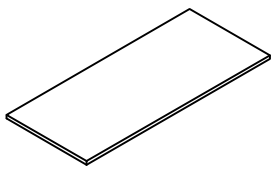	1PC

Assembly Instructions

There are 3 boxes of this product

BOX_1:

㊹	FRONT DECORATION STRIP OF LOWER MIDDLE CABINET 1629 x 80 x 14mm	1PC	⑨	SIDE FRONT DECORATION STRIPS OF UPPER LEFT RIGHT CABINET 984 x 29 x 14mm	2PCS
㊼	BASE BOARD SUPPORT BAR OF MIDDLE LOWER CABINET 1601 x 66 x 14mm	1PC	⑭	PARTITION BOARD SUPPORT IRON BAR OF UPPER MIDDLE CABINET 1602 x 30 x 15mm	1PC
⑱	BOTTOM BACK TENSION BAR OF UPPER MIDDLE CABINET 1602 x 100 x 14mm	1PC	㉜	BACK BOARD OF LOWER MIDDLE CABINET 800 x 594 x 2.5mm	2PCS
⑪	ROOF BOARD DECORATION STRIP OF UPPER MIDDLE CABINET 1600 x 60 x 14mm	1PC			

Assembly Instructions

There are 3 boxes of this product

BOX_2:

21	SIDE BOARD OF LOWER LEFT CABINET 666 x 372 x 14mm	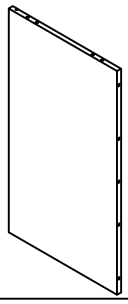	1PC	35	SLIDE RAILS PADDING BAR OF LOWER CABINET 354 x 50 x 14mm	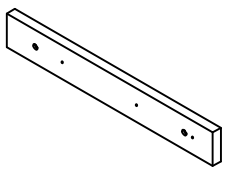	8PCS
22	SIDE BOARD OF LOWER RIGHT CABINET 666 x 372 x 14mm	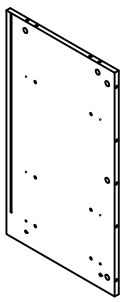	1PC	43	BASE BOARD SUPPORT BAR OF LOWER MIDDLE CABINET 371 x 66 x 14mm	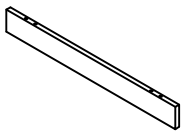	2PCS
31	BACK BOARD OF LOWER LEFT RIGHT CABINET 594 x 478 x 2.5mm	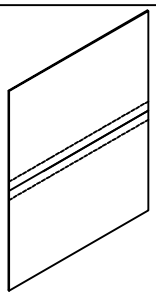	2PCS	36	SIDE DECORATION STRIP OF LOWER RIGHT CABINET 386 x 80 x 14mm	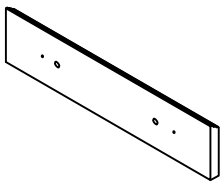	2PCS
23	VERTICAL PARTITION BOARD OF LOWER LEFT CABINET 666 x 372 x 14mm	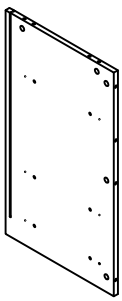	1PC	19	TOP BOARD OF LOWER LEFT CABINET 485 x 400 x 14mm	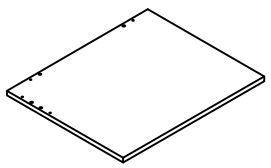	1PC
24	VERTICAL PARTITION BOARD OF LOWER RIGHT CABINET 666 x 372 x 14mm	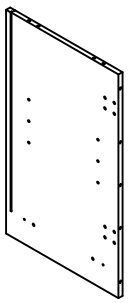	1PC	20	TOP BOARD OF LOWER RIGHT CABINET 485 x 400 x 14mm	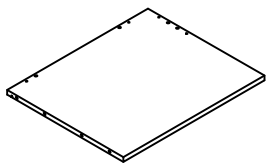	1PC
28	HORIZONAL PARTITION BOARD OF LOWER MIDDLE CABINET 586 x 372 x 14mm	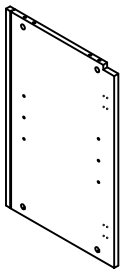	1PC	38	BASE BOARD OF LOWER LEFT RIGHT CABINET 471 x 386 x 14mm	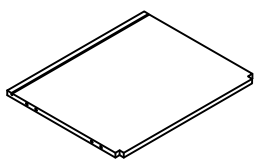	2PCS

Assembly Instructions

There are 3 boxes of this product

BOX_2:

⑩	UPPER HORIZONAL PARTITION BOARD OF LOWER LEFT RIGHT CABINET 470 x 171 x 14mm 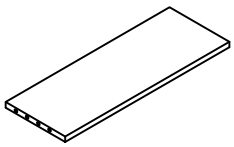	2PCS	⑧	FORNT DECORATION BOARD OF UPPER LEFT RIGHT CABINET 500 x 326 x 14mm 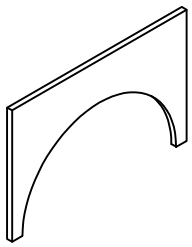	2PCS
⑮	REMOVALE BOARD OF LOWER LEFT RIGHT CABINET 464 x 171 x 14mm 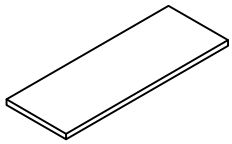	2PCS	⑰	LOWER BACK BOARD OF LOWER LEFT RIGHT CABINET 470 x 314 x 14mm 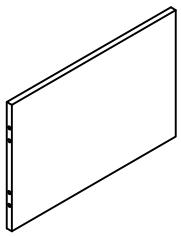	2PCS
①	ROOF BOARD OF LOWER LEFT RIGHT CABINET 470 x 186 x 14mm 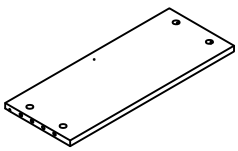	2PCS	㉖	TOP BOARD'S STRIP OF LOWER LEFT RIGHT CABINET 442 x 50 x 14mm 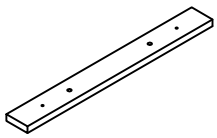	2PCS
⑯	LOWER HORIZONAL PARTITION BOARD OF LOWER LEFT RIGHT CABINET 470 x 186 x 14mm 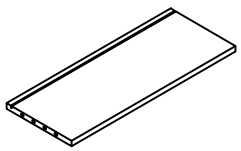	2PCS	㊴	BASE BOARD BACK SUPPORT BAR OF LOWER LEFT RIGHT CABINET 471 x 66 x 14mm 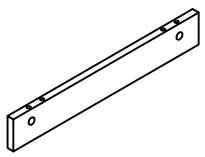	2PCS
㉝	LEFT VERTICAL DECORATION STRIP OF LOWER LEFT RIGHT CABINET 666 x 29 x 14mm 	2PCS	⑨	SIDE FRONT DECORATION STRIPS OF UPPER LEFT RIGHT CABINET 984 x 29 x 14mm 	2PCS
㉞	RIGHT VERTICAL DECORATION STRIP OF LOWER LEFT RIGHT CABINET 666 x 29 x 14mm 	2PCS	㊵	BASEBOARD'S FRONT STRIP OF LOWER LEFT CABINET 500 x 80 x 14mm 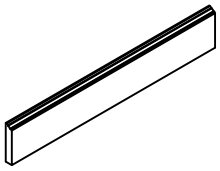	1PC

Assembly Instructions

There are 3 boxes of this product

BOX_2:

(41)	BASEBOARD'S FRONT STRIP OF LOWER RIGHT CABINET 500 x 80 x 14mm 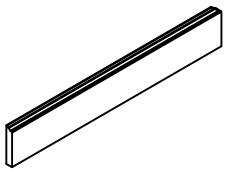	1PC
(37)	DOOR HINGES'S PADDING BAR OF LOWER MIDDLE CABINET 464 x 171 x 14mm 	4PCS
(7)	BACK BOARD OF UPPER LEFT RIGHT CABINET 932 x 479 x 2.5mm 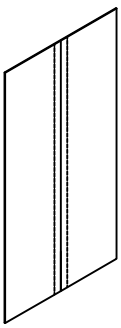	2PCS
	Hardware Kit	1PC

Assembly Instructions

There are 3 boxes of this product

BOX_3:

45	LEFT SIDE BOARD OF UPPER DRAWERS 300 x 193 x 12mm	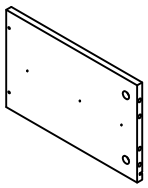	2PCS	53	BACK BOARD OF LOWER DRAWERS 394 x 230 x 12mm	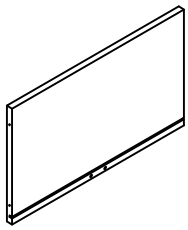	2PCS
46	RIGHT SIDE BOARD OF UPPER DRAWERS 300 x 193 x 12mm	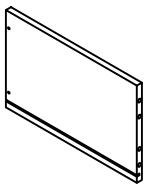	2PCS	50	FRONT BOARD OF UPPER DRAWERS 436 x 263 x 14mm	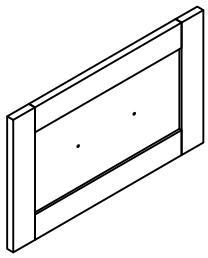	2PCS
47	BACK BOARD OF UPPER DRAWERS 394 x 193 x 12mm	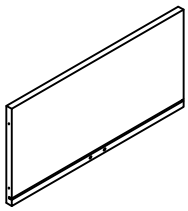	2PCS	54	FRONT BOARD OF LOWER DRAWERS 436 x 300 x 14mm	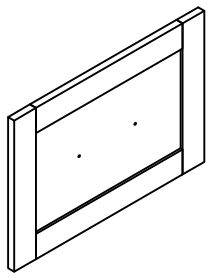	2PCS
48	BOTTOM BOARD OF UPPER DRAWERS 405 x 298 x 2.5mm	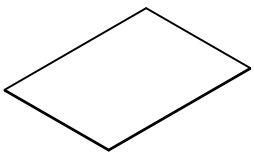	4PCS	55	LEFT DOOR OF LOWER MIDDLE CABINET 566 x 396 x 14mm	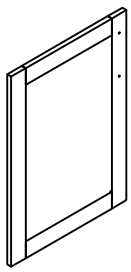	2PCS
49	BOTTOM BOARD SUPPORT BAR OF DRAWERS 287 x 60 x 12mm	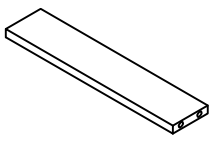	4PCS	56	RIGHT DOOR OF LOWER MIDDLE CABINET 566 x 396 x 14mm	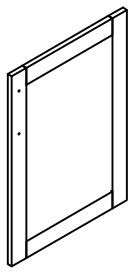	2PCS
51	SIDE BOARD OF LOWER LEFT DRAWERS 300 x 230 x 12mm	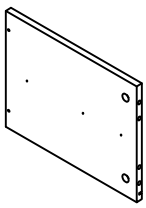	2PCS	52	SIDE BOARD OF LOWER RIGHT DRAWERS 300 x 230 x 12mm	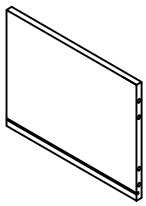	2PCS

Components-Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

Ⓐ	Ø5*35 mm	174+4 (PCS)	Ⓚ	Ø35 mm 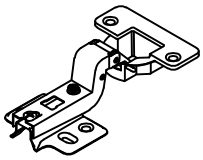	8 (PCS)
Ⓑ	Ø15*9 mm 	174+4 (PCS)	Ⓛ	Ø3.5*12 mm	96+4 (PCS)
Ⓒ	Ø8*30 mm 	132+4 (PCS)	Ⓜ	Ø3.9*22 mm 	40+1 (PCS)
Ⓓ	Ø8*20 mm 	44 (PCS)	Ⓝ	Ø3.5*30 mm 	16+1 (PCS)
Ⓔ	Ø6*30 mm 	16+1 (PCS)	Ⓞ	Ø3.9*15 mm	24+2 (PCS)
Ⓕ	139 mm 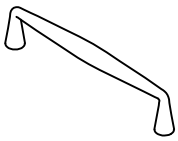	8 (PCS)	Ⓟ	32*19*19 mm	4 (PCS)
Ⓖ	Ø5/32"*19 mm	8 (PCS)	Ⓠ	58*29*29 mm 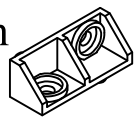	8 (PCS)
Ⓗ	Ø5/32"*9 mm	8 (PCS)	Ⓡ	38*13*6 mm 	4 (PCS)
Ⓘ	15*19*16mm	16 (PCS)	Ⓢ	Ø1/4*12 mm 	16 (PCS)
Ⓙ	Ø3.5*15 mm 	16+1 (PCS)	Ⓣ	Ø3.9*40 mm 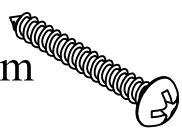	5 (PCS)

Components-Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

Ⓤ	M6*40 mm 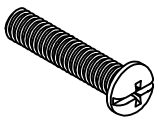	2 (PCS)
Ⓥ	72*15*25MM Ø3.9*15MM 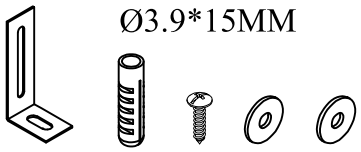	2 (PCS)
Ⓦ	Ø3.9*30 mm 	2 (PCS)
Ⓧ	Ø20*0.2mm 	174 (PCS)
Ⓨ	Ⓨ-1 Ø300*35mm	8 (PCS)
	Ⓨ-2 Ø295*15mm	8 (PCS)

Step/Étape 1

3		1	5		1
4		1	6		1
A		32	C		32

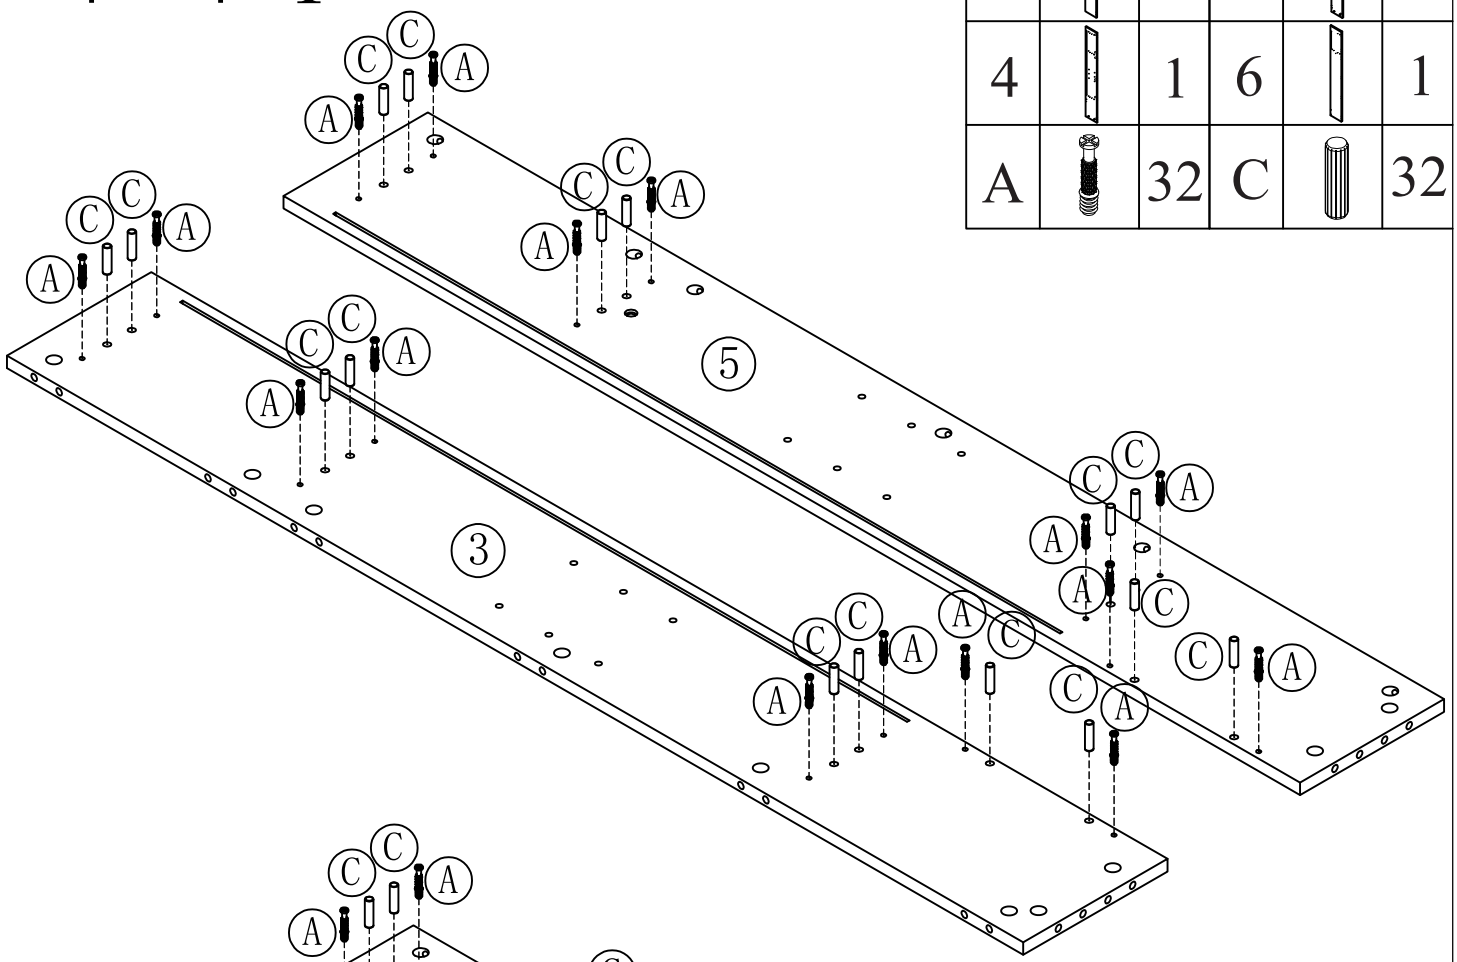

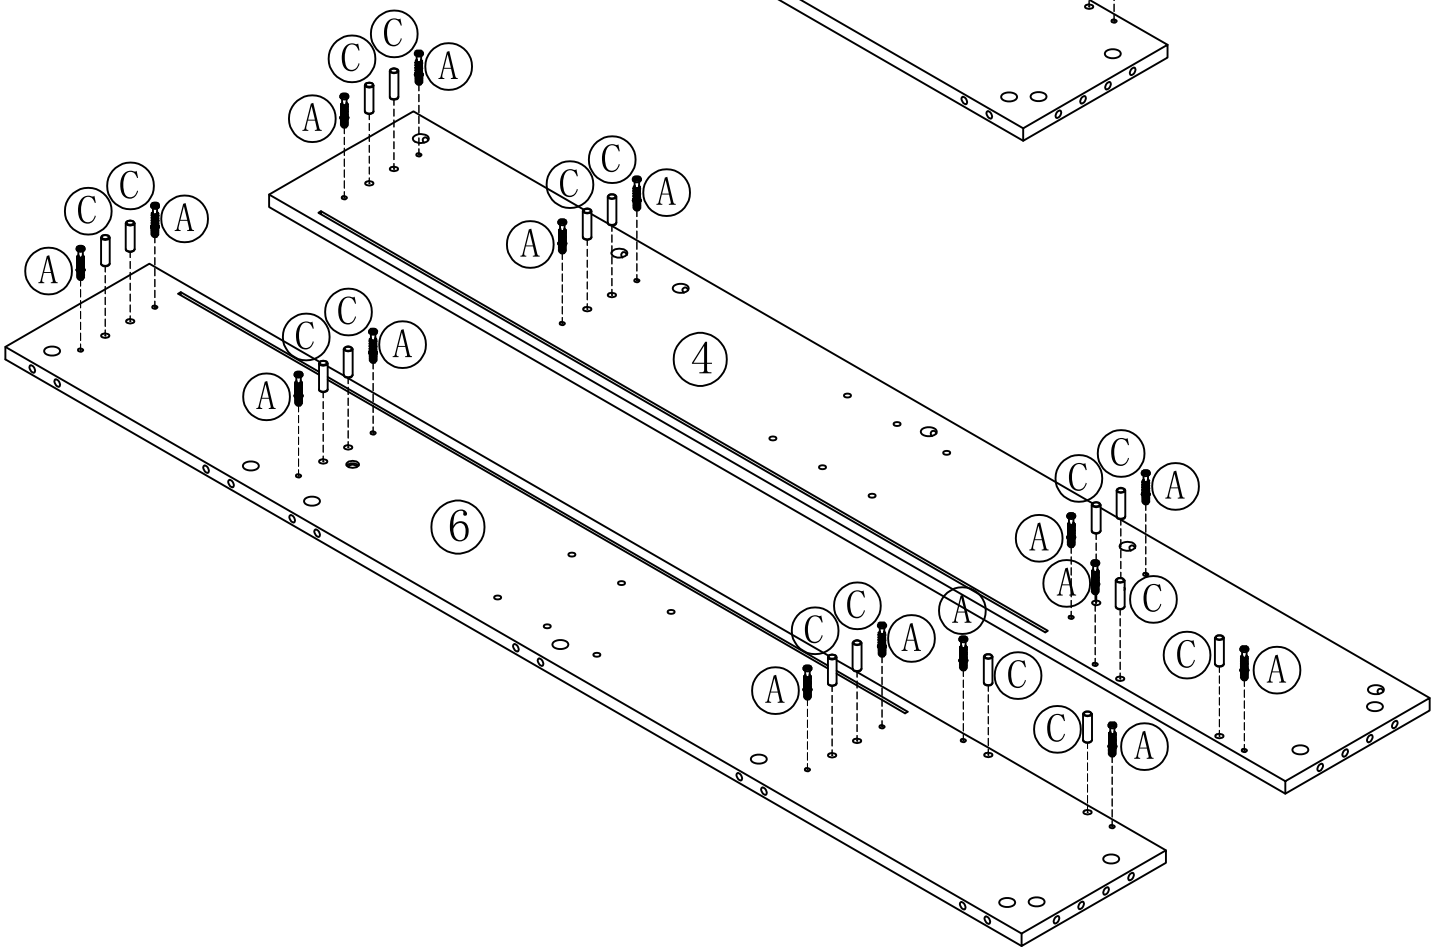

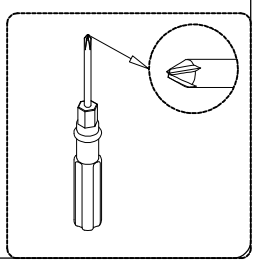

Step/Étape 2

1		2	16		2
10		2	17		2
			B		12

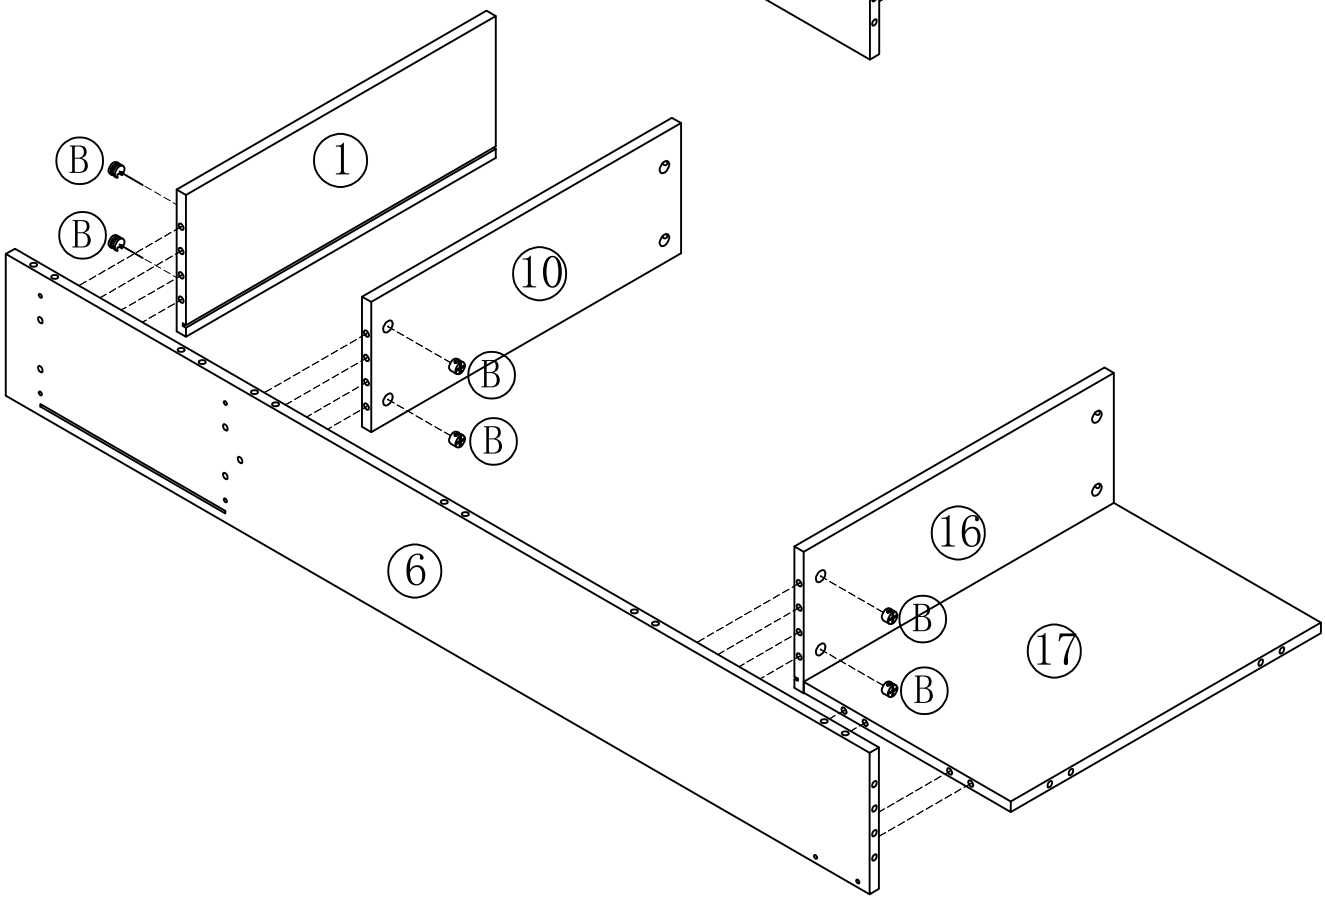

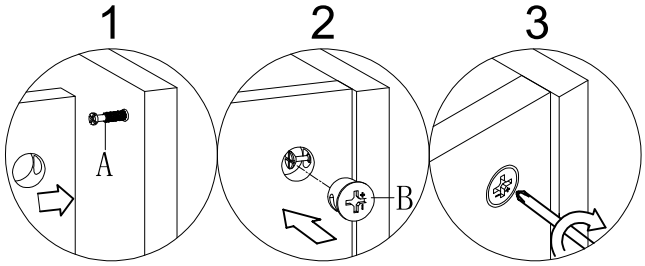

Step/Étape 3

7 | 2

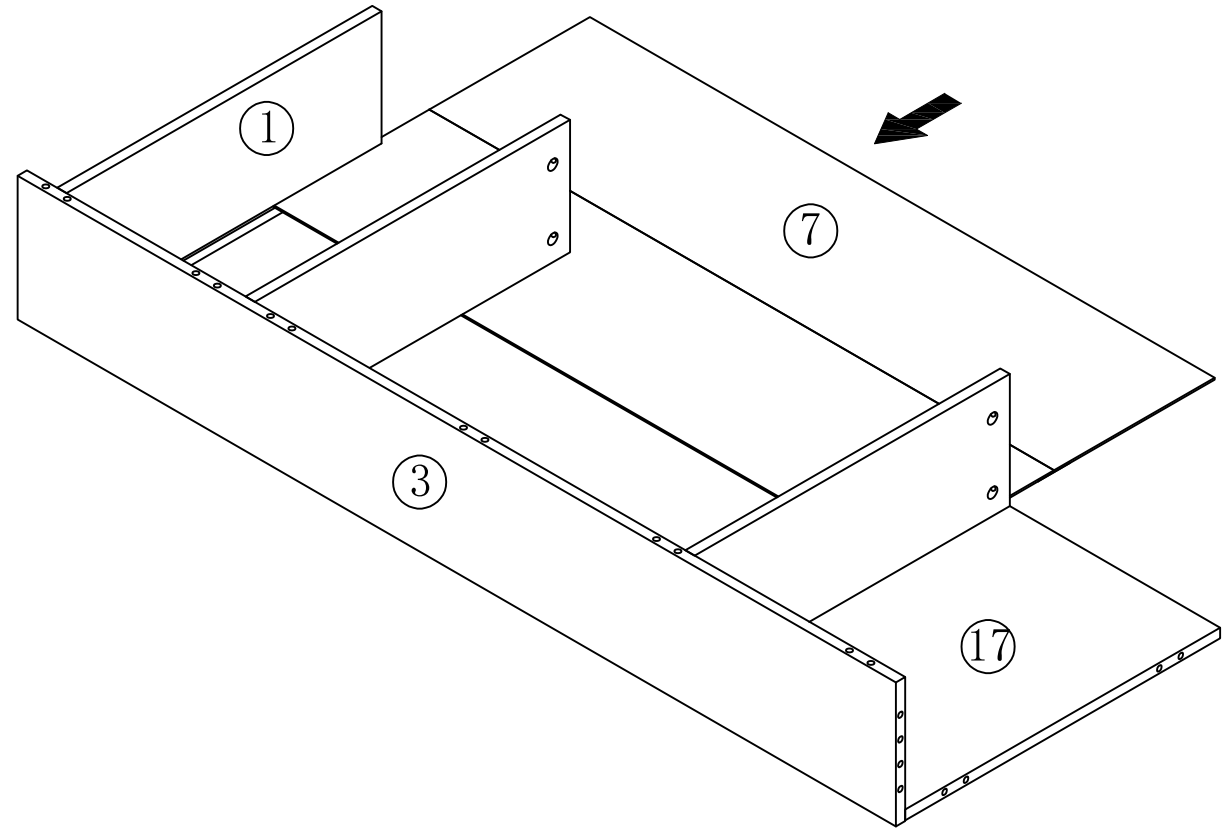

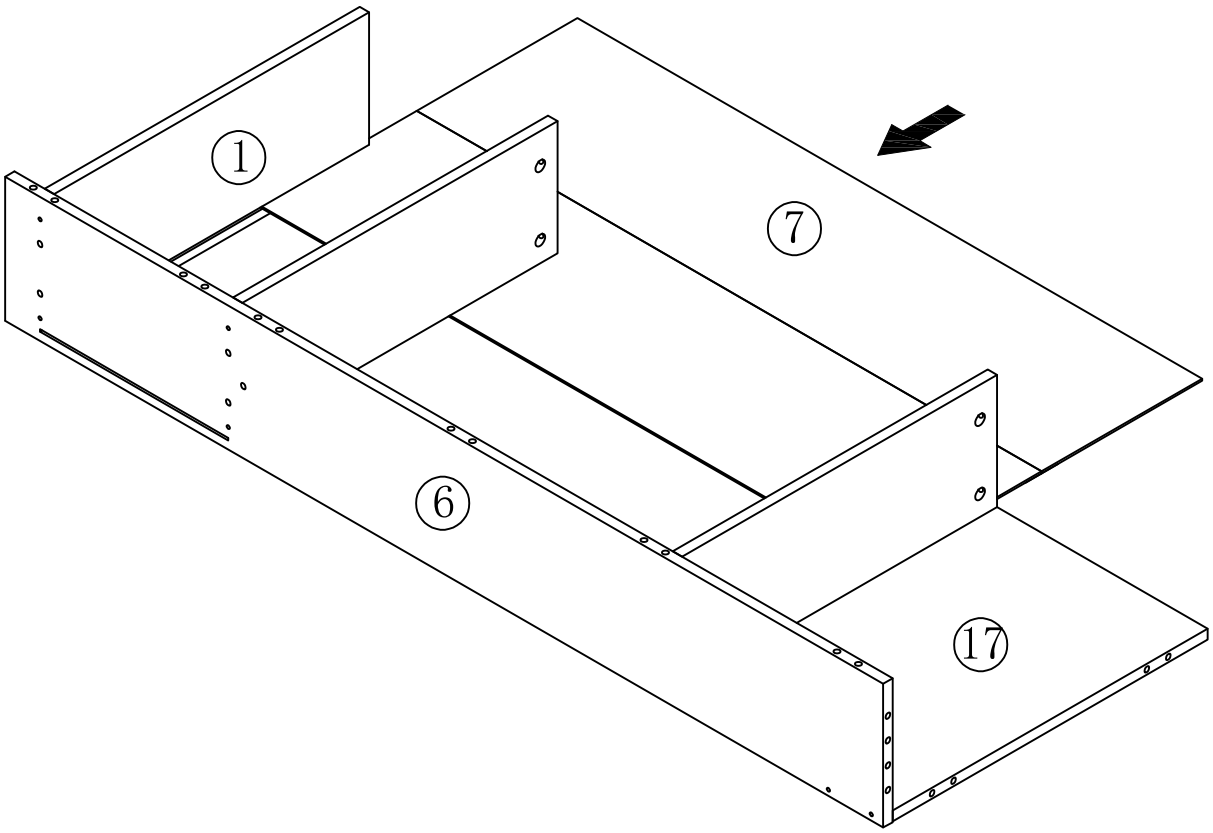

Step/Étape 4

B		6

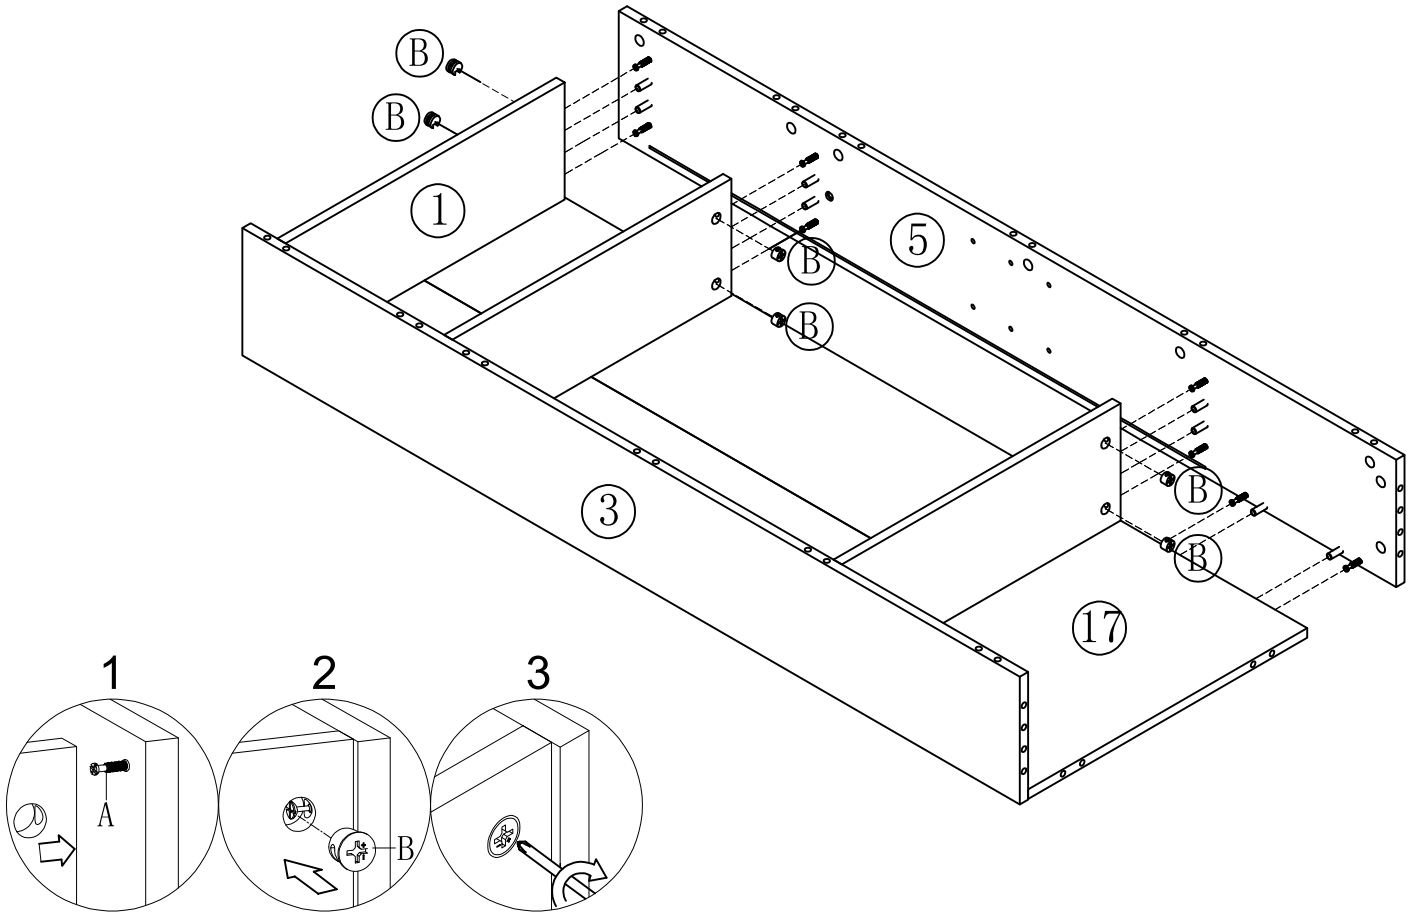

Step/Étape 5

B		6

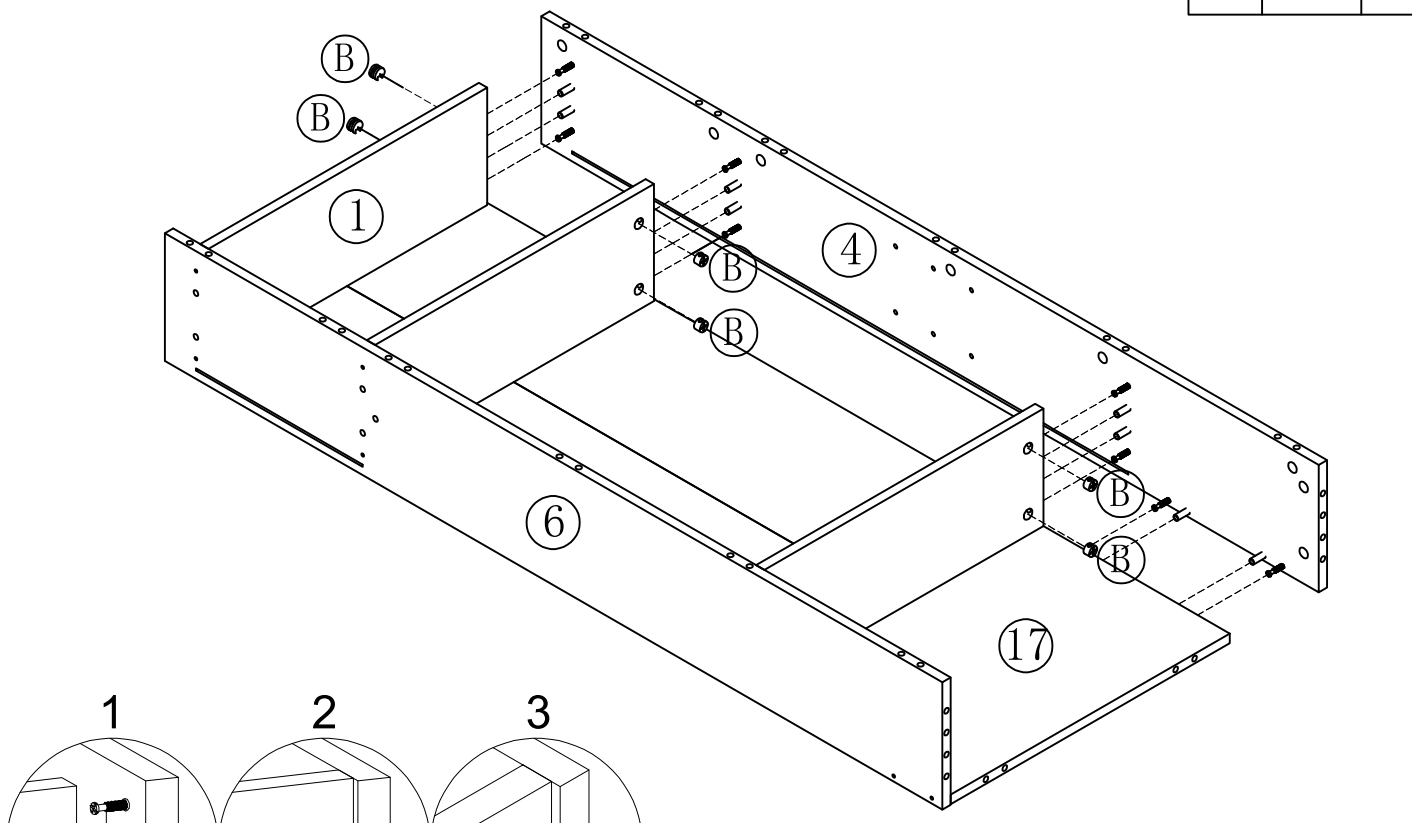

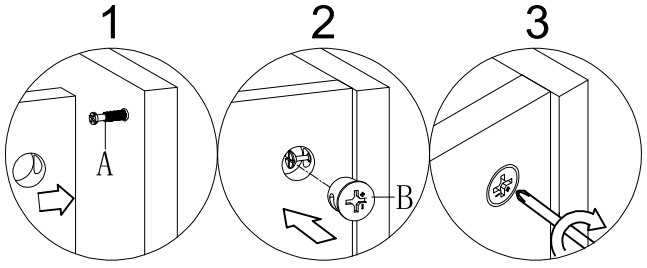

Step/Étape 6

C		24

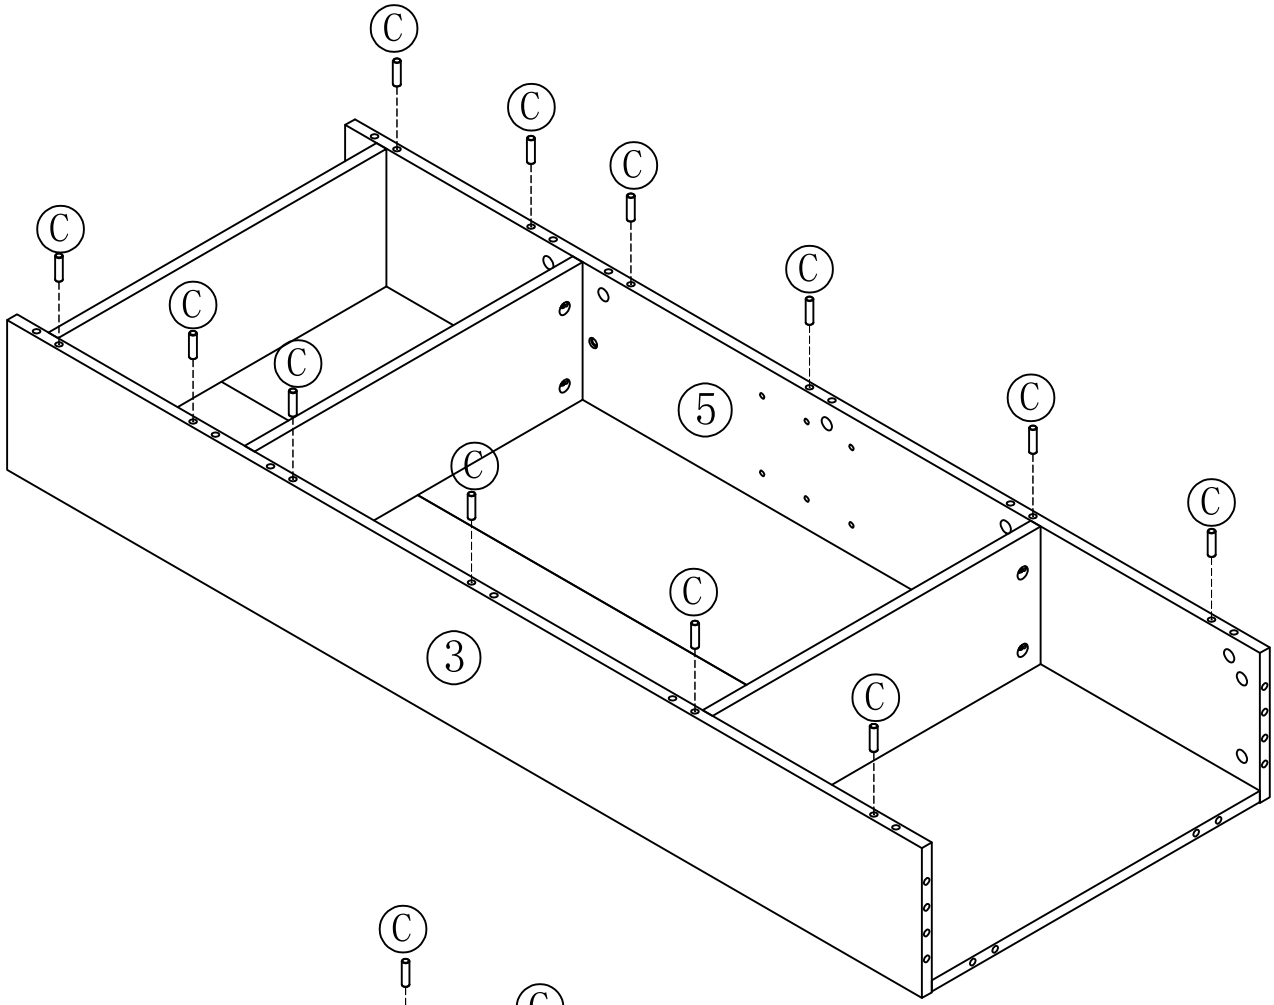

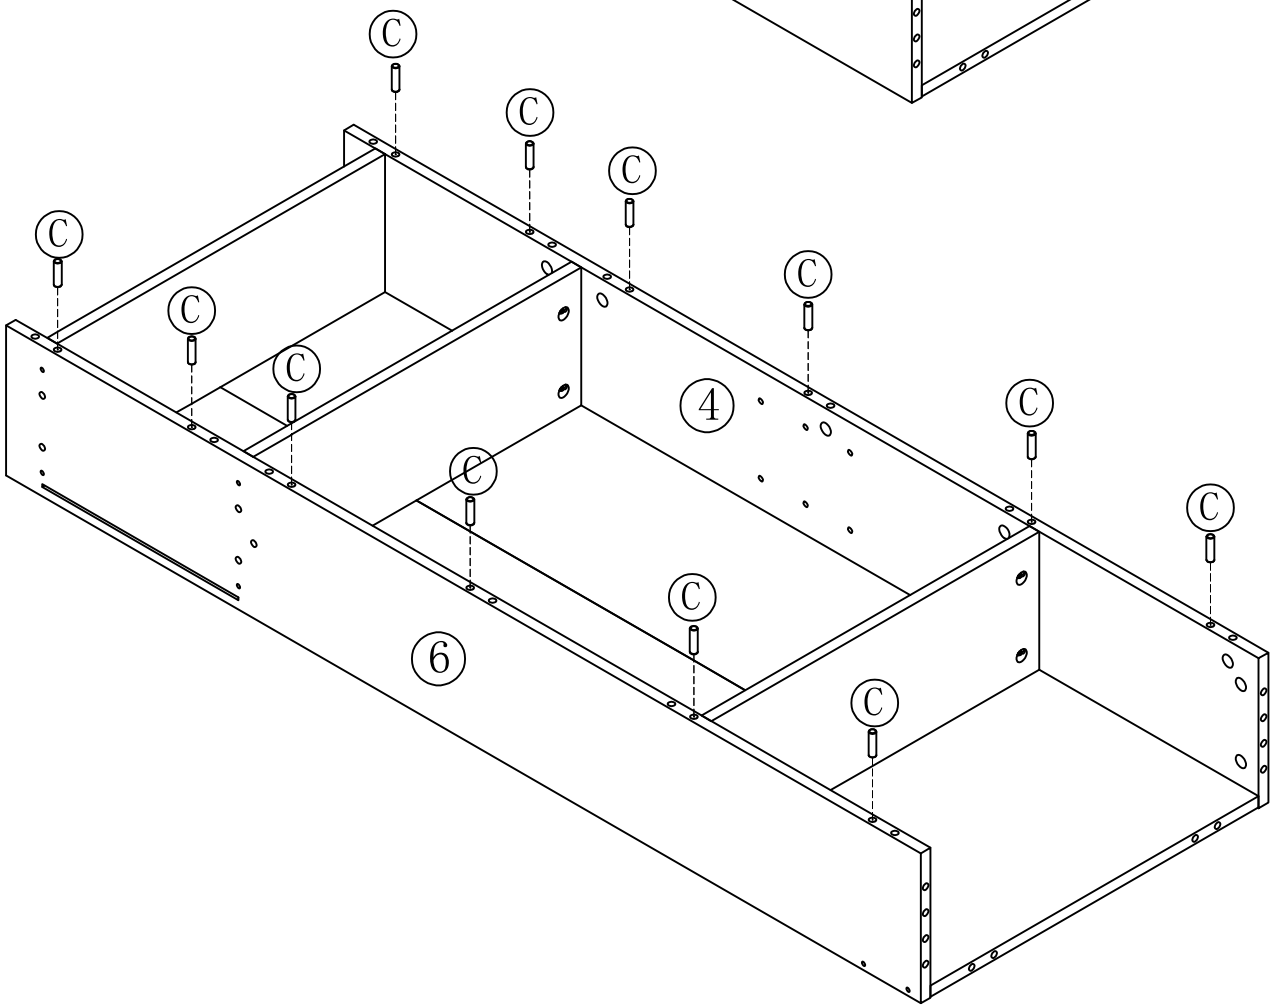

Step/Étape 7

8		2
9		4
A		24

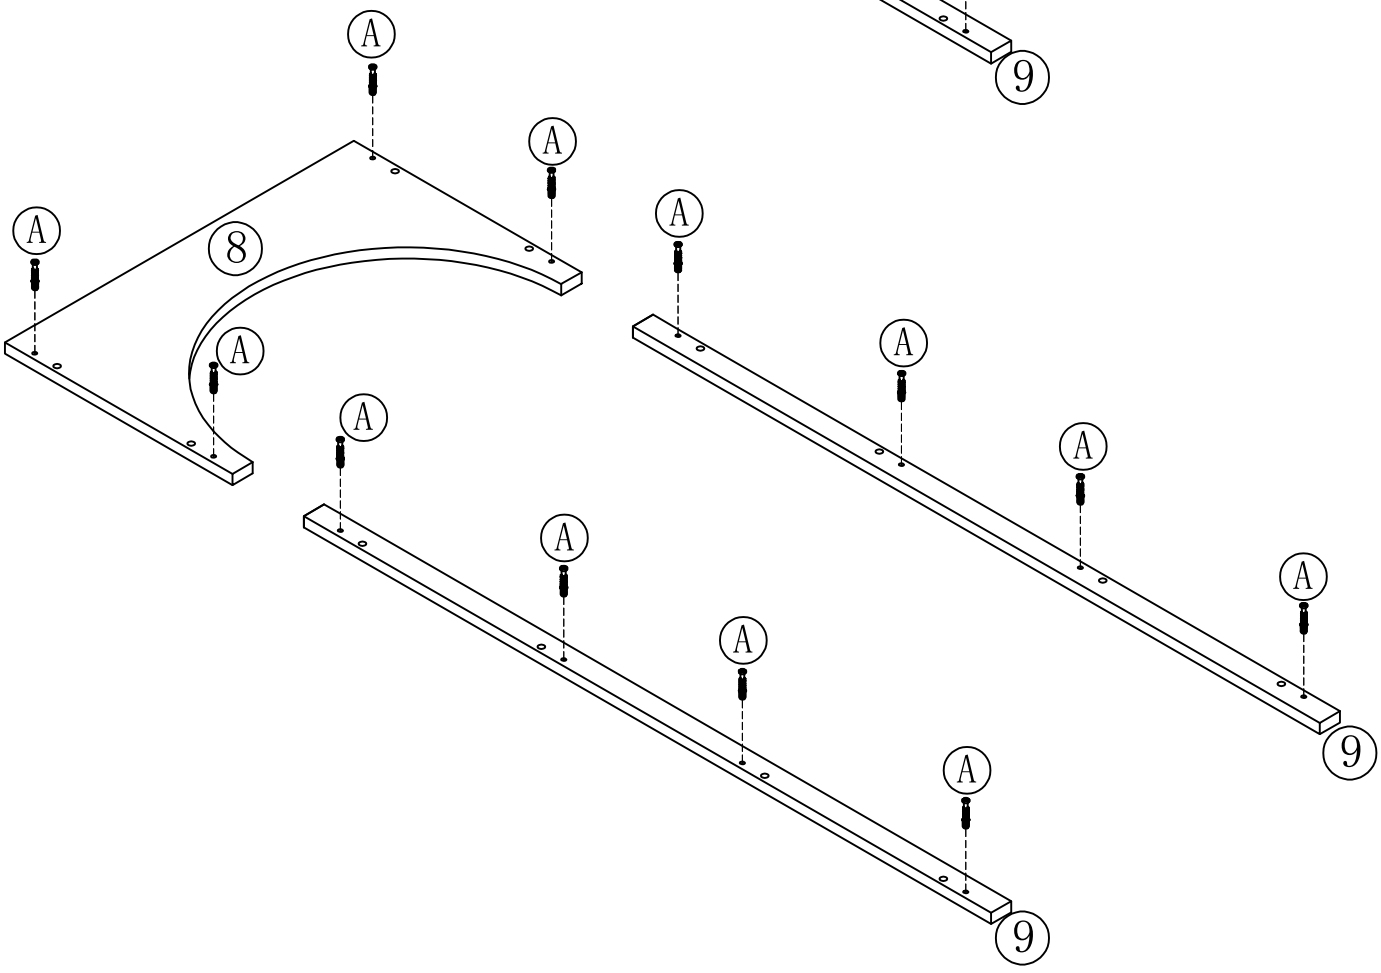

Step/Étape 8

B		24

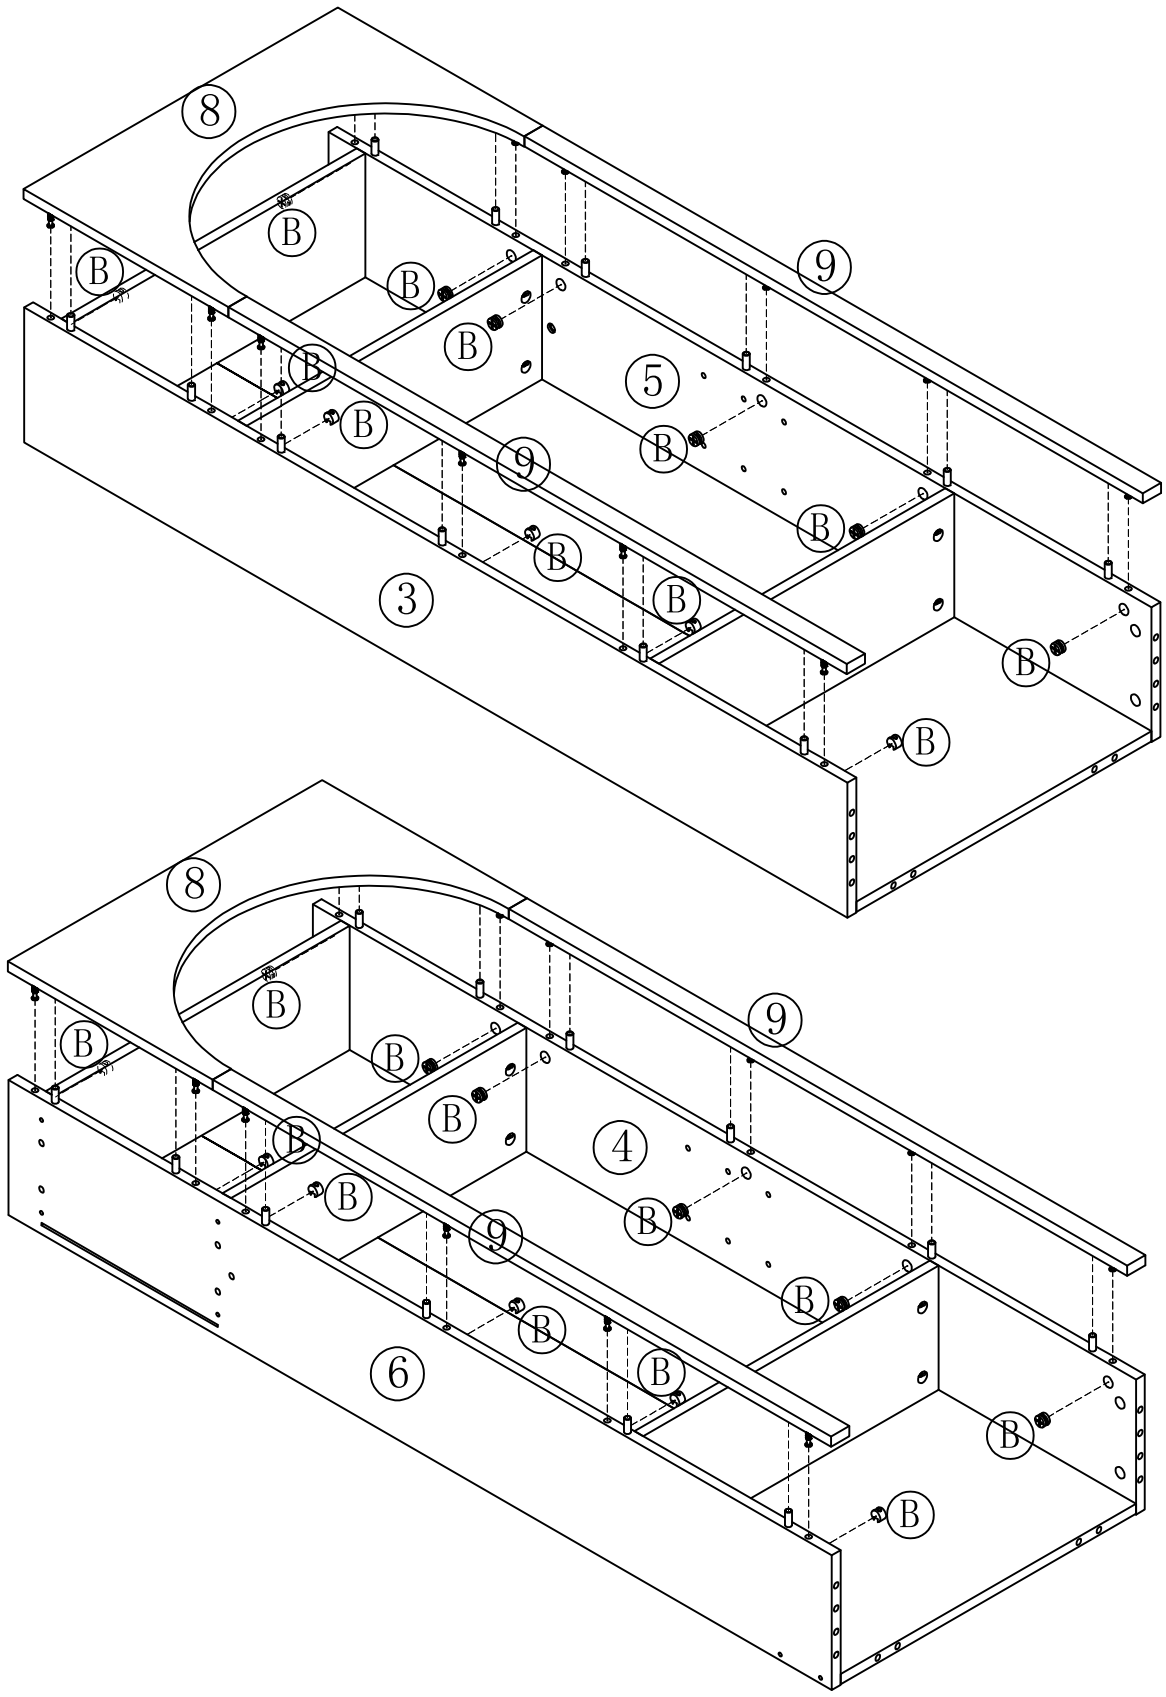

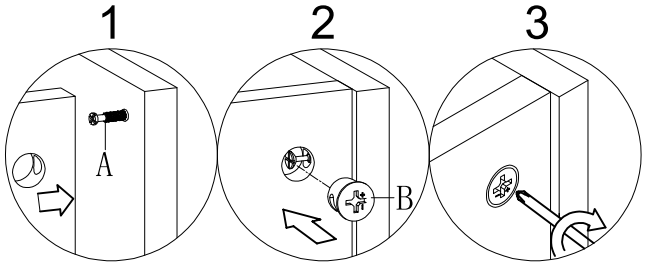

Step/Étape 9

A		12
C		8

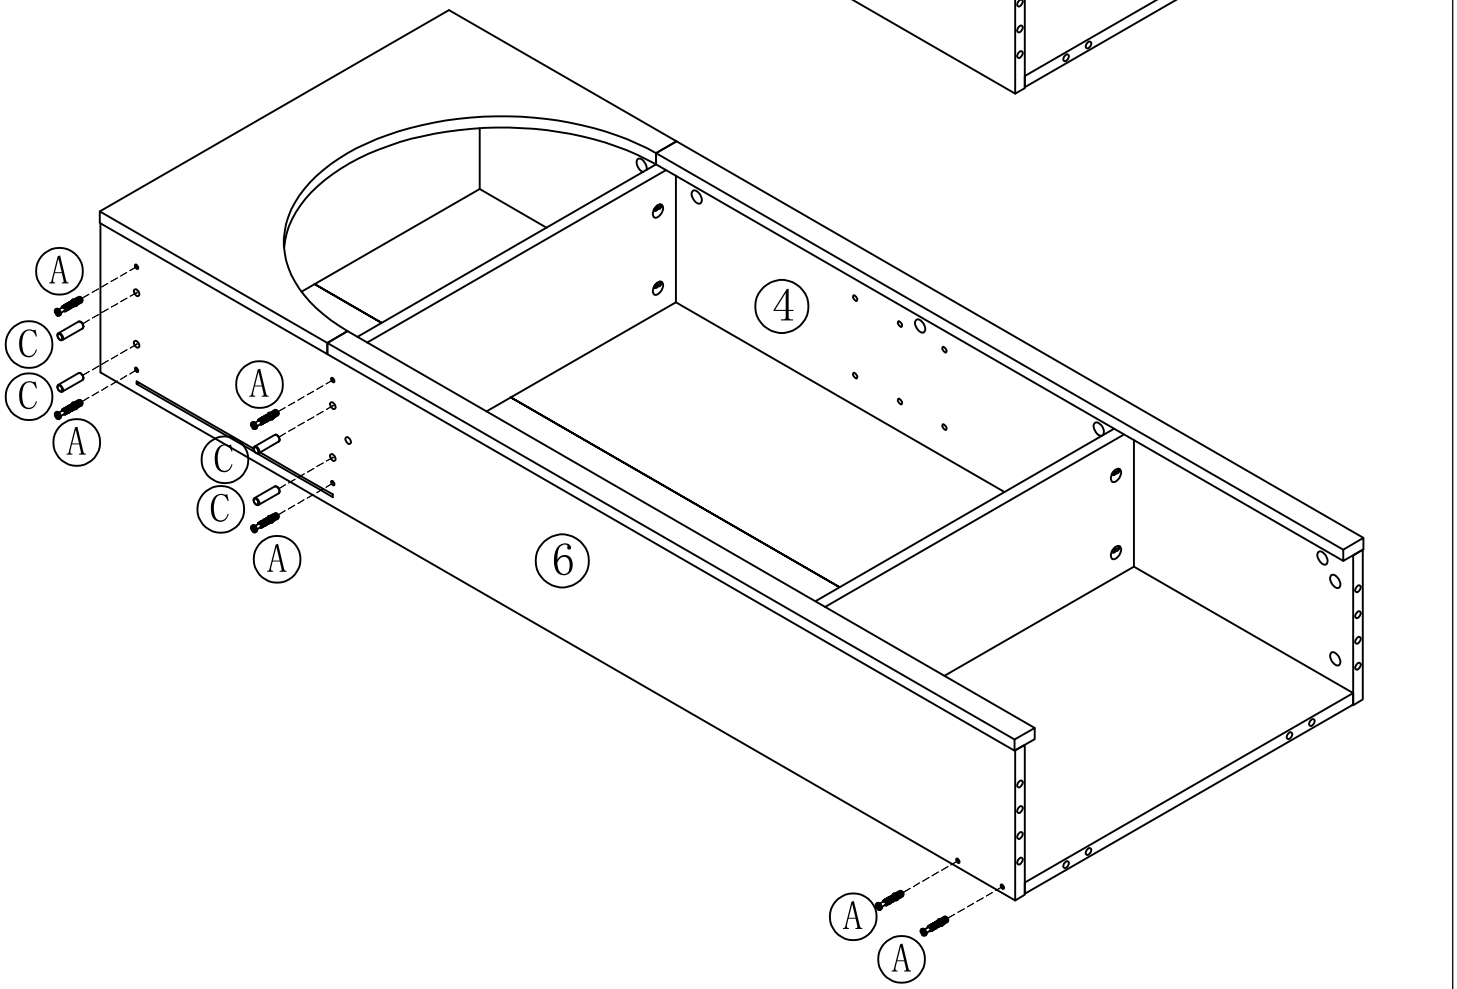

Step/Étape 10

11		1	C		4
A		4	O		4
			P		2

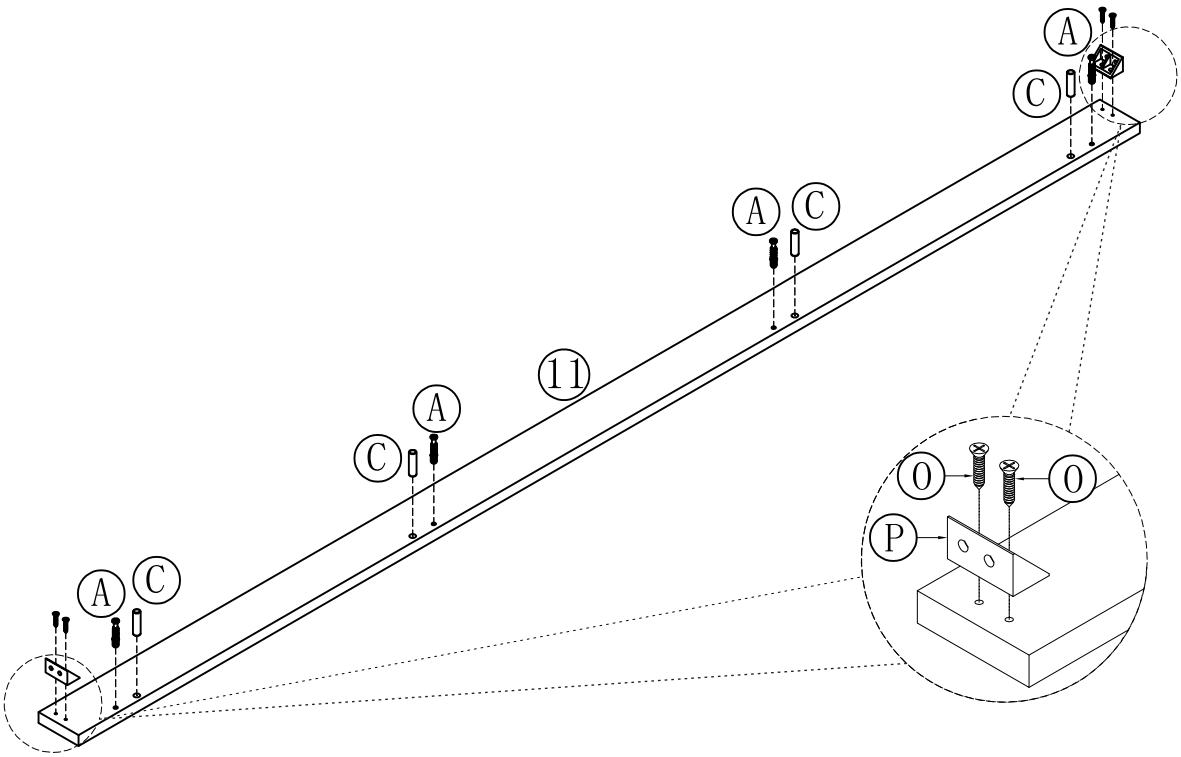

Step/Étape 11

2		1
B		4

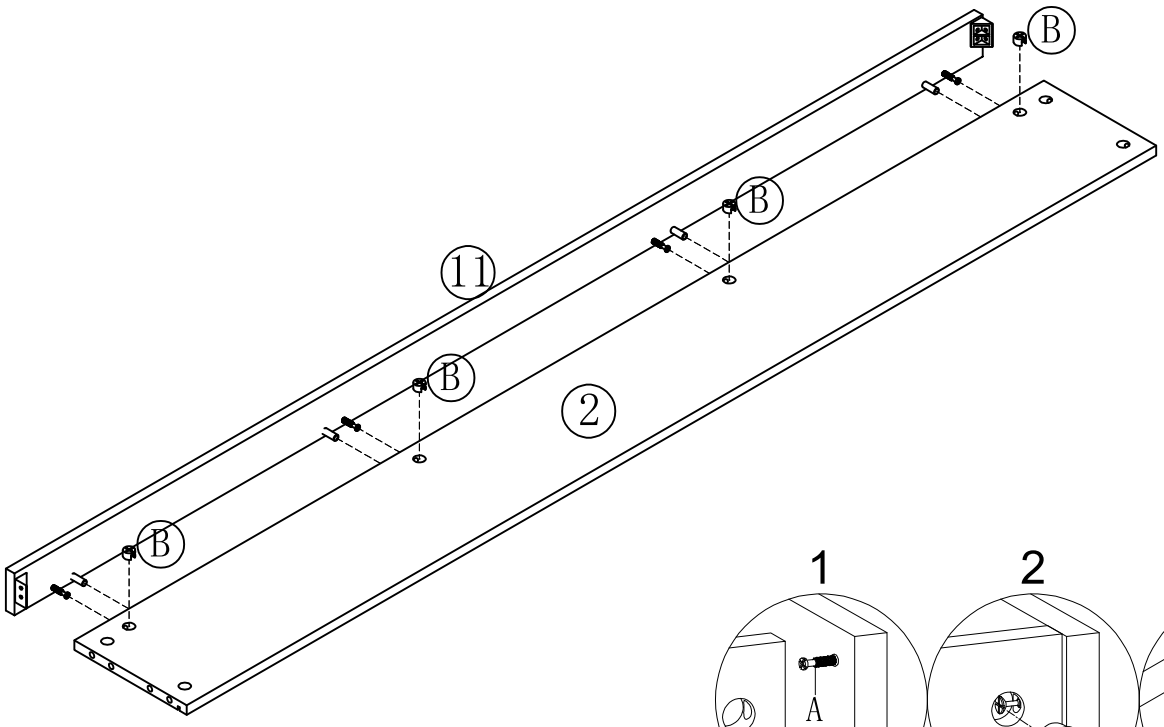

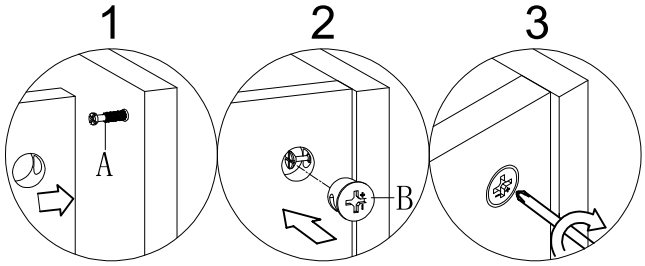

Step/Étape 12

13		1
14		1
T		5

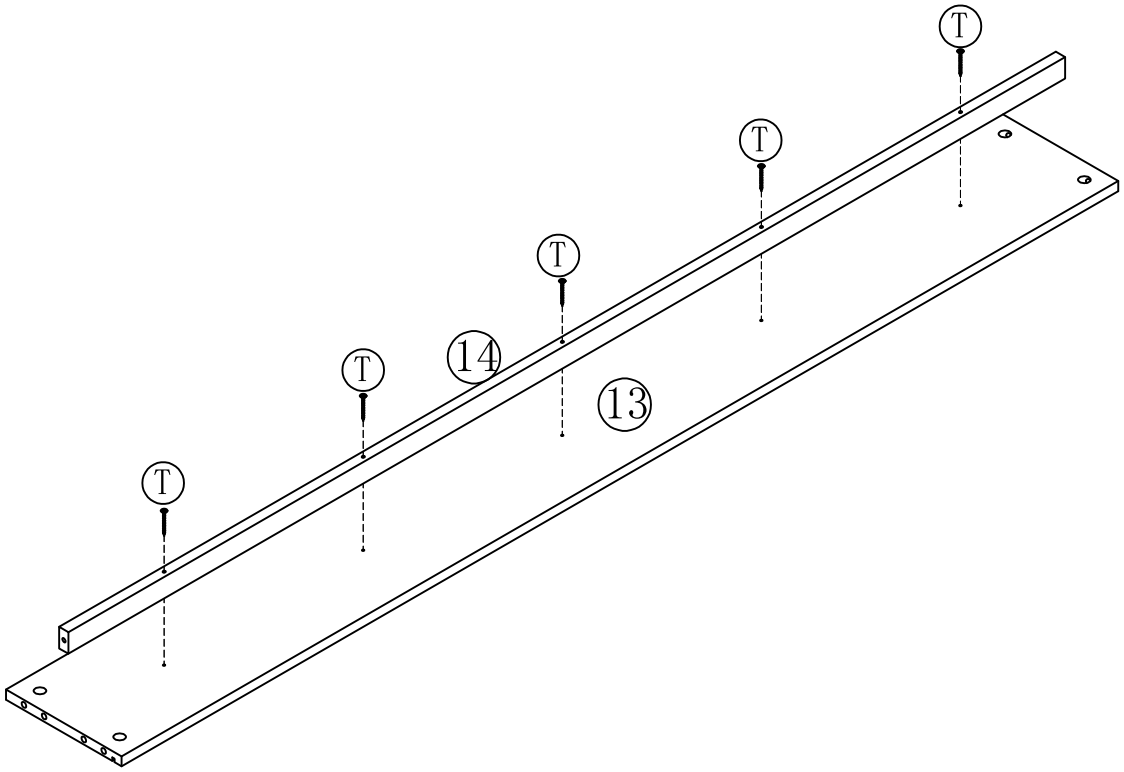

Step/Étape 13

12		1	B		4
18		1	U		1

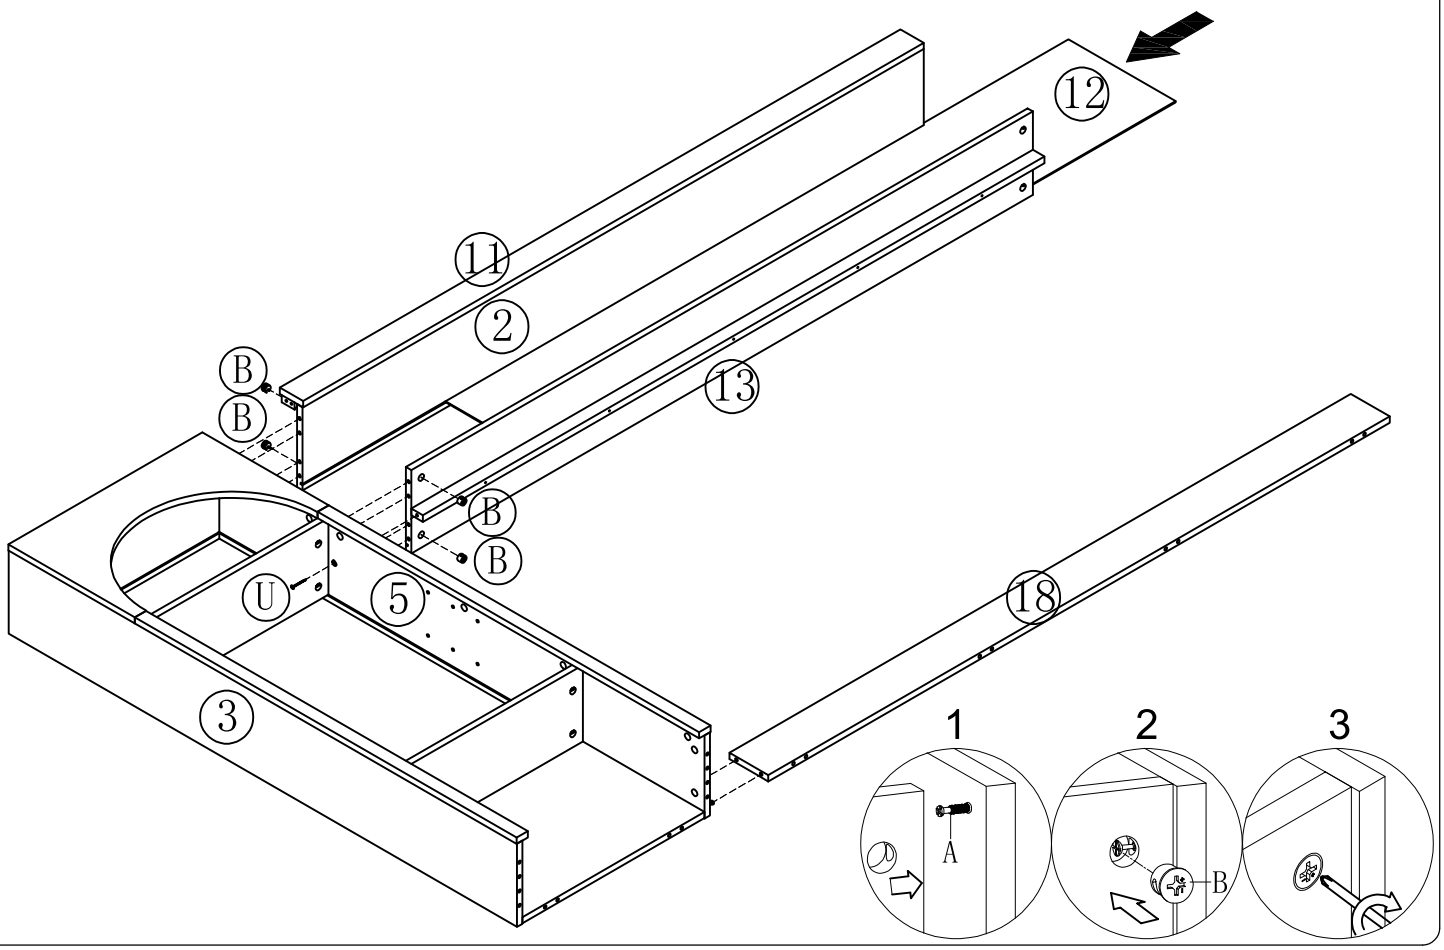

Step/Étape 14

B		4
U		1

Step/Étape 15

B		12
O		4

At least 2 people are required.

Step/Étape 16

21		1	23		1	35		8
22		1	24		1	D		16
						M		16

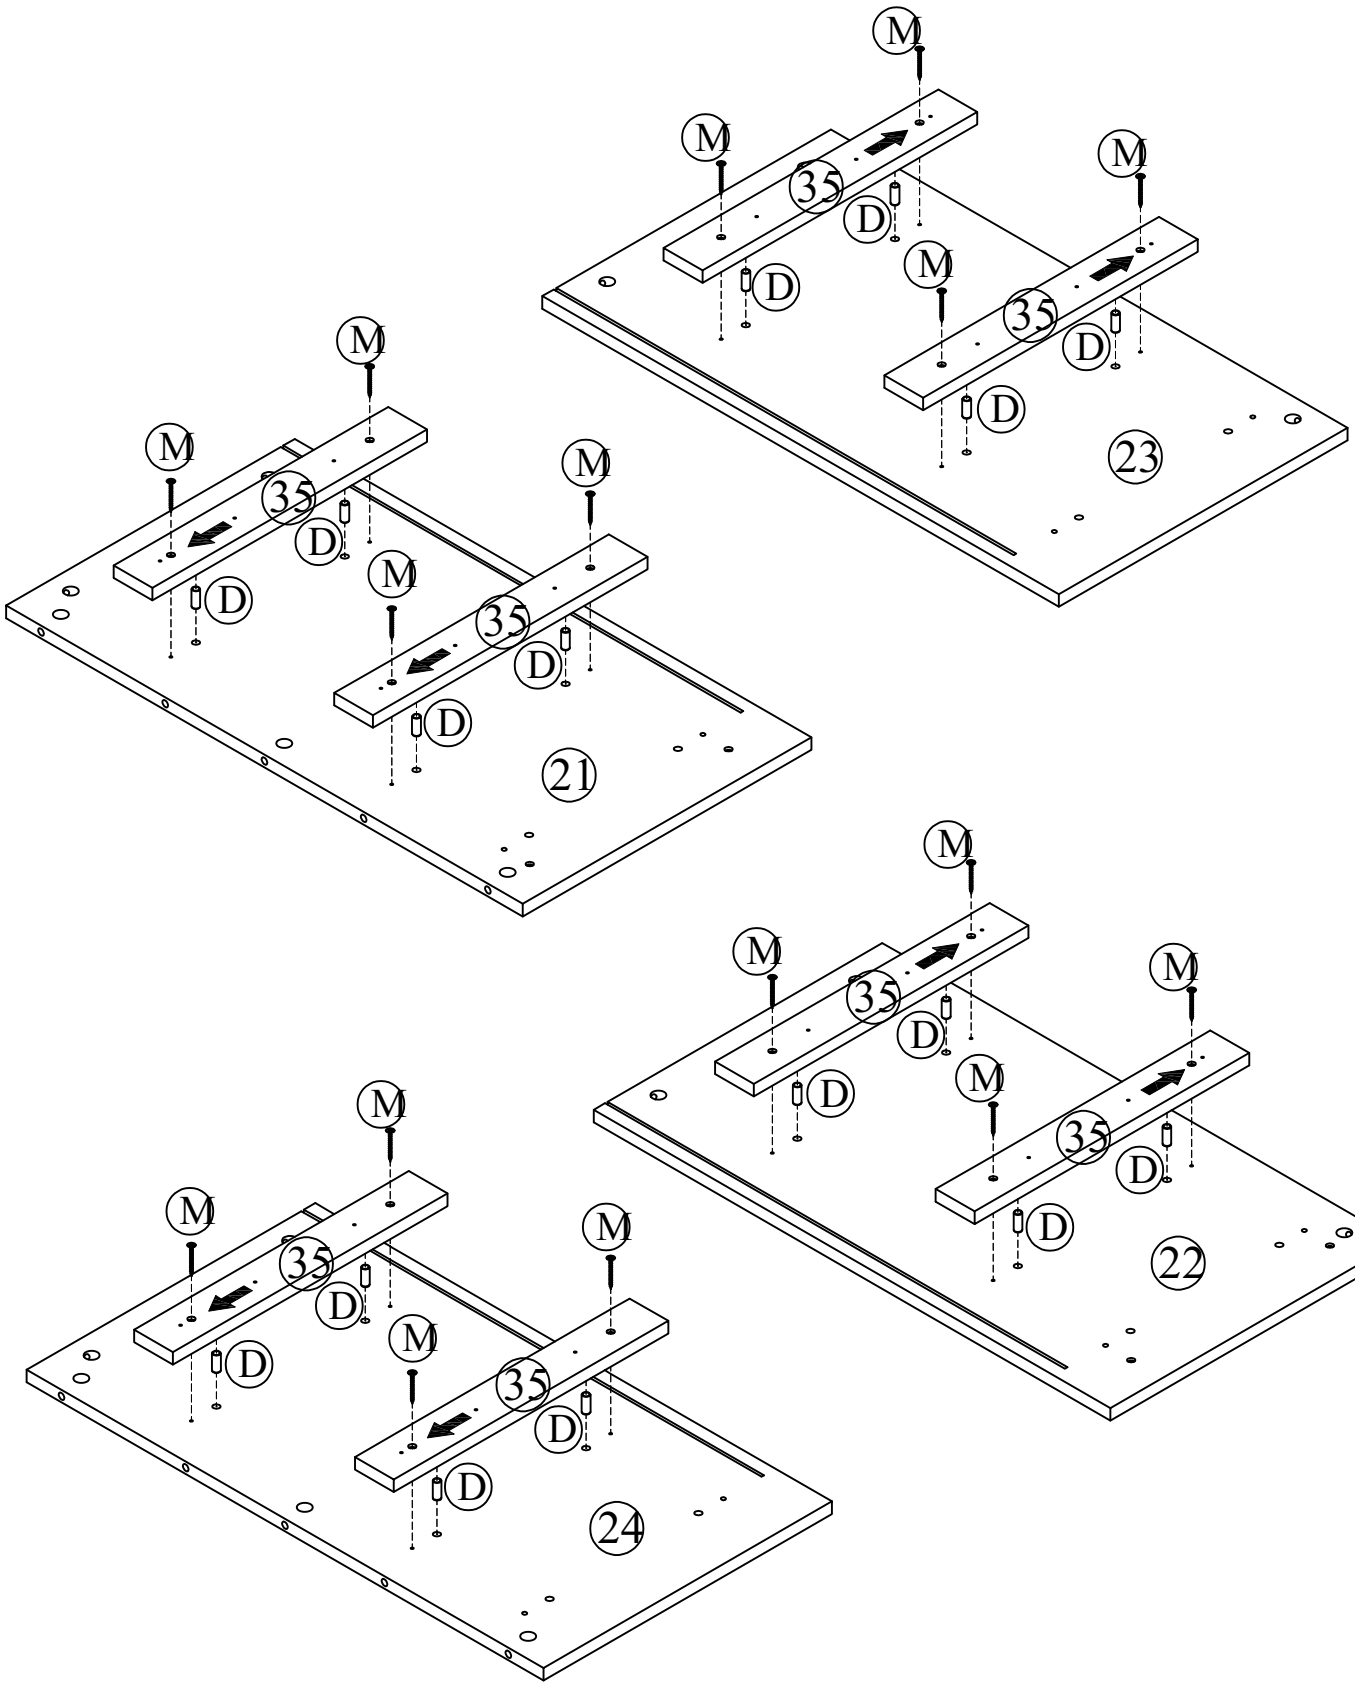

Step/Étape 17

Y		8

Slides Must Be Separated Before Assembly,
After Separated, Set Aside Until Needed for Assembly.
Step 1:Extend Slide
Step 2:Push Lever Up
Step 3:Remove Runner

Les lames doivent être séparées avant l'assemblage.
Une fois séparéeselles doivent être mises de
cÃté jusqu'à leur utilisation pour l'assemblage
Étape 1 : Étendre la diapositive
Étape 2 : Poussez le levier vers le haut
Étape 3 : Supprimer le Runner

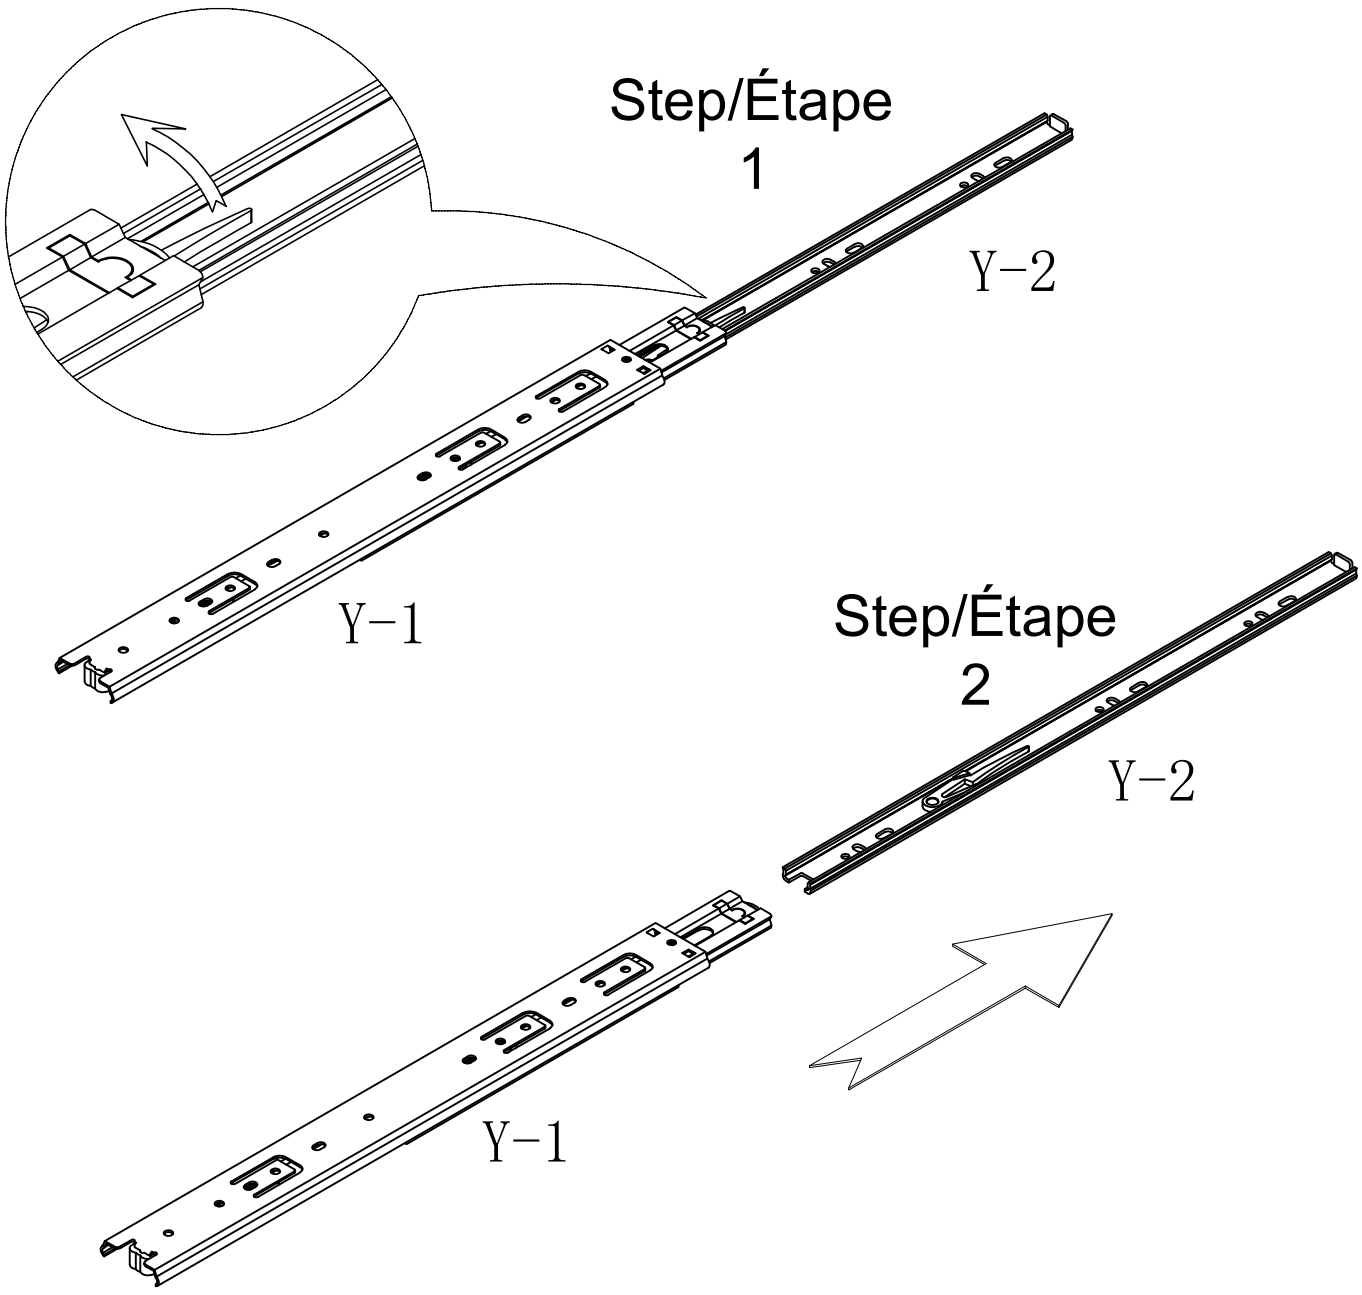

Step/Étape 18

A		4	L		12
C		4	Y-1		4

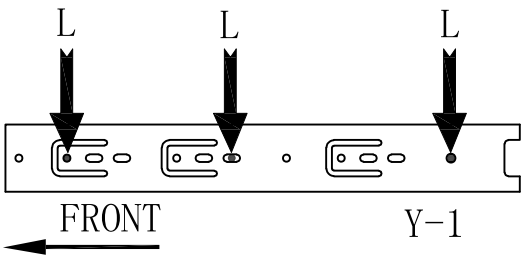

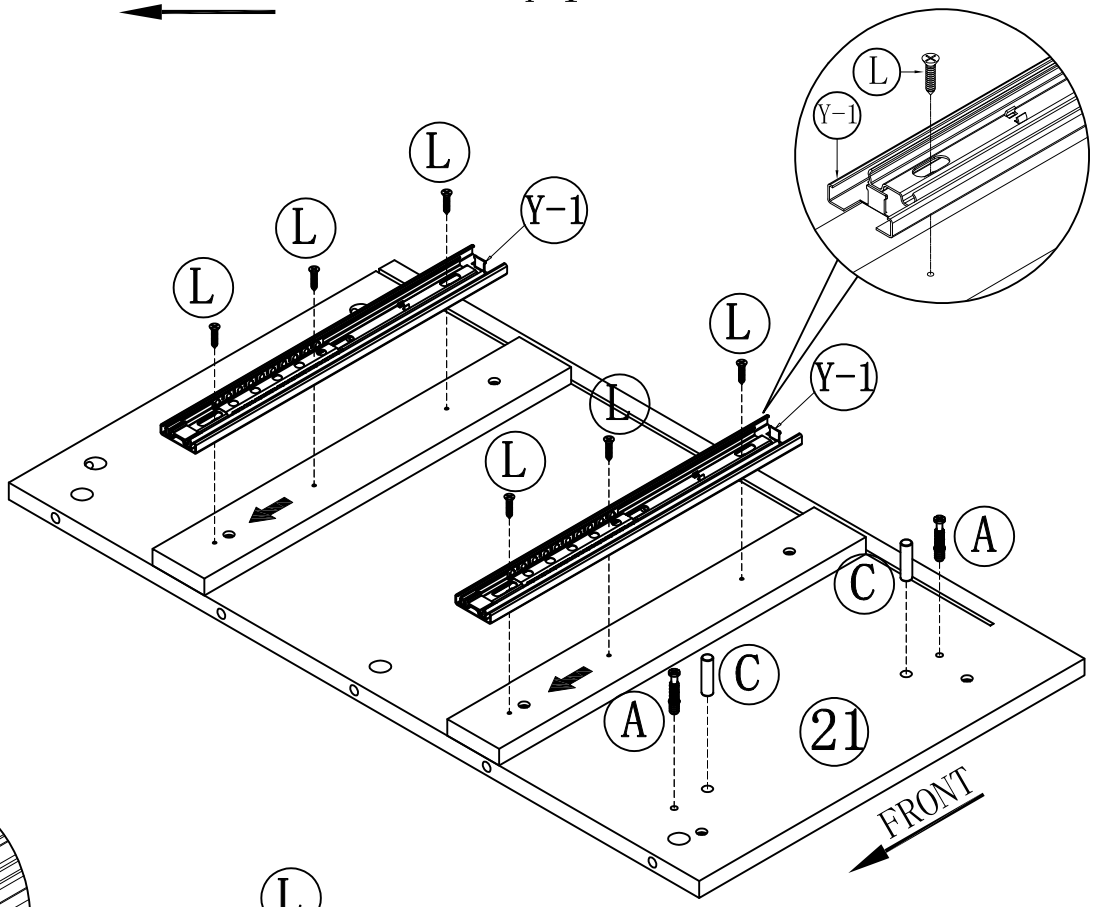

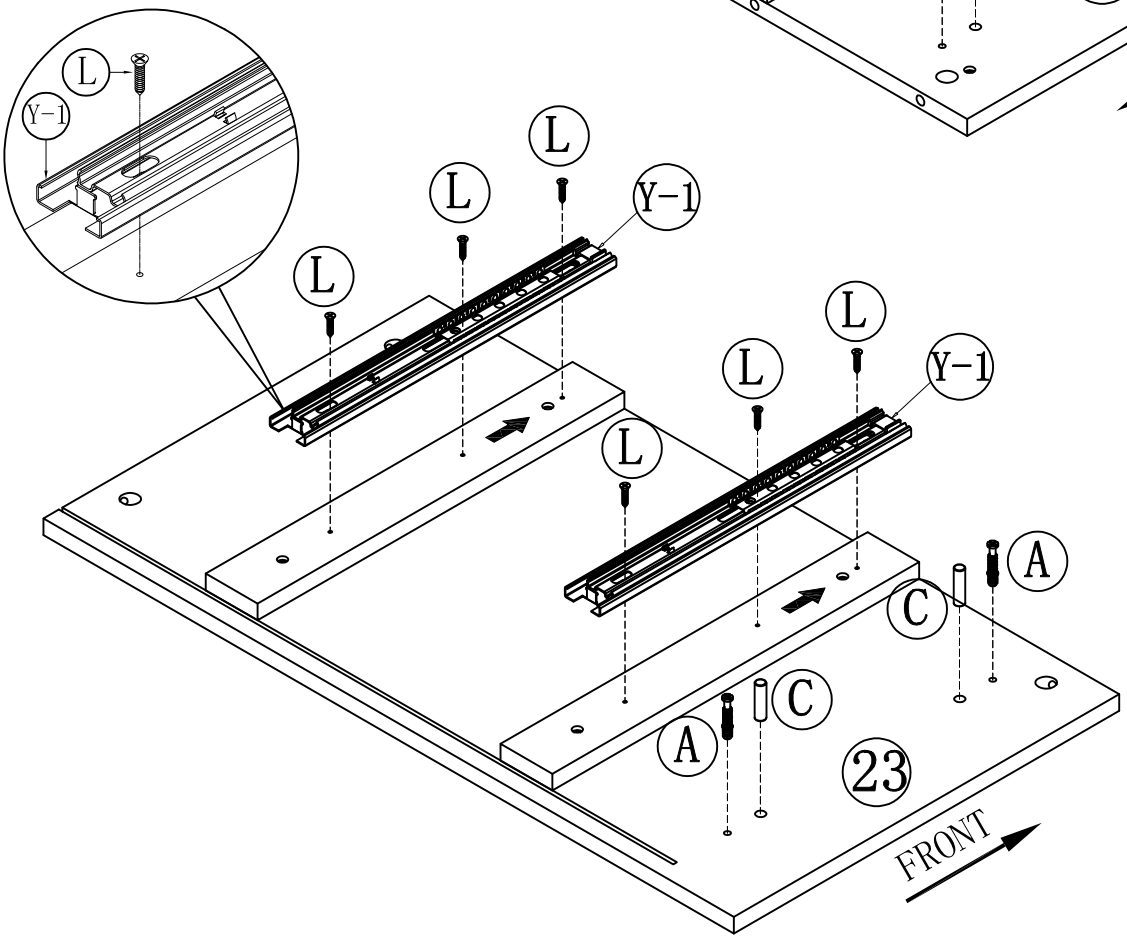

Step/Étape 19

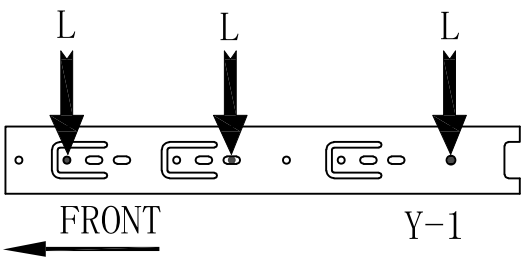

A		4	L		12
C		4	Y-1		4

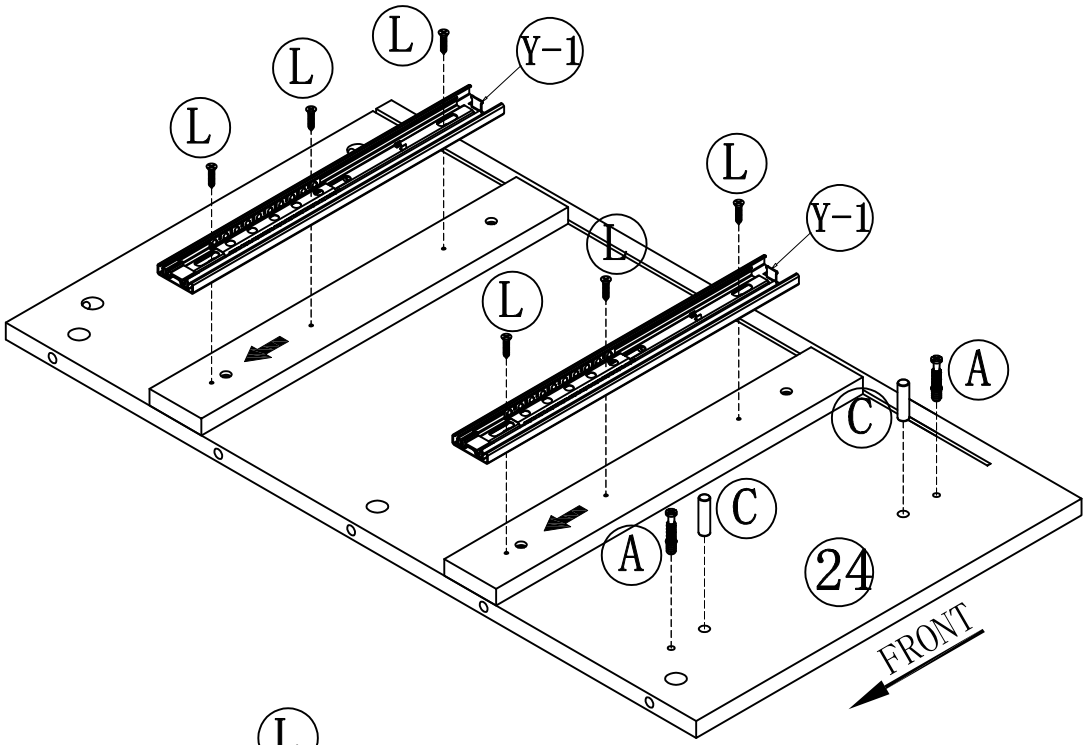

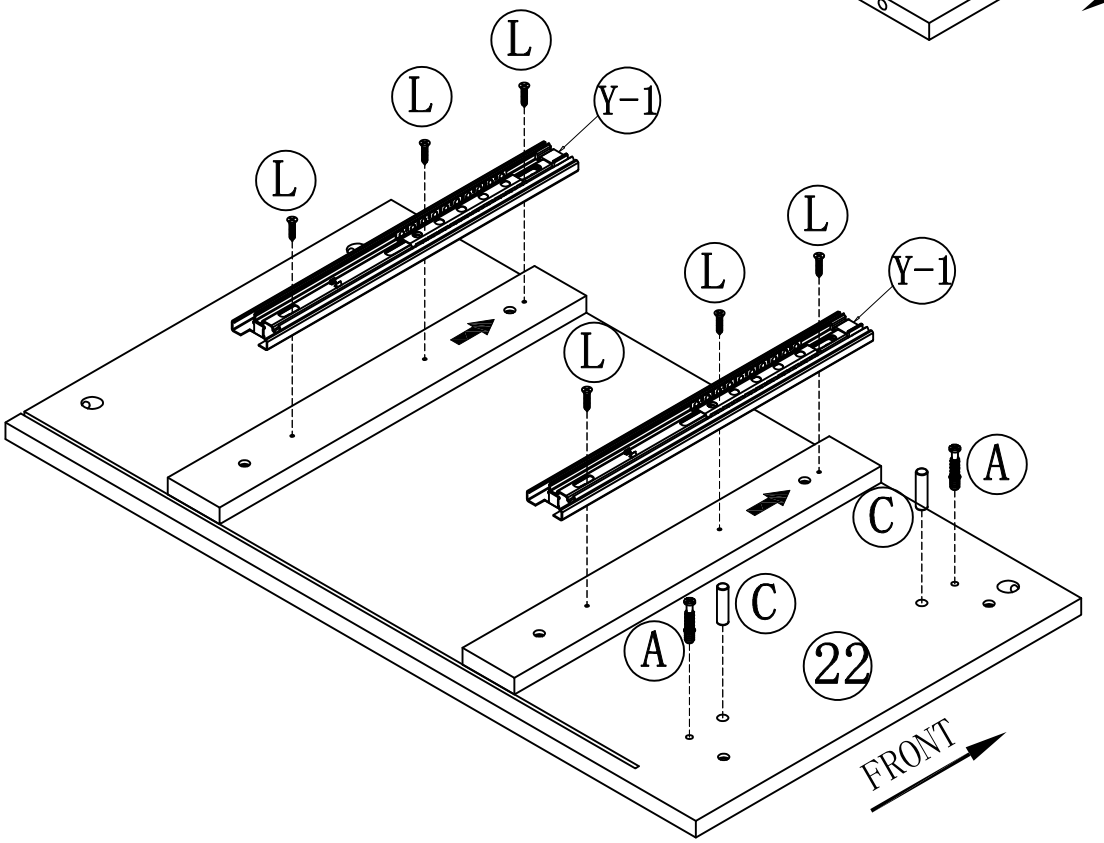

Step/Étape 20

38		2
A		6
C		4

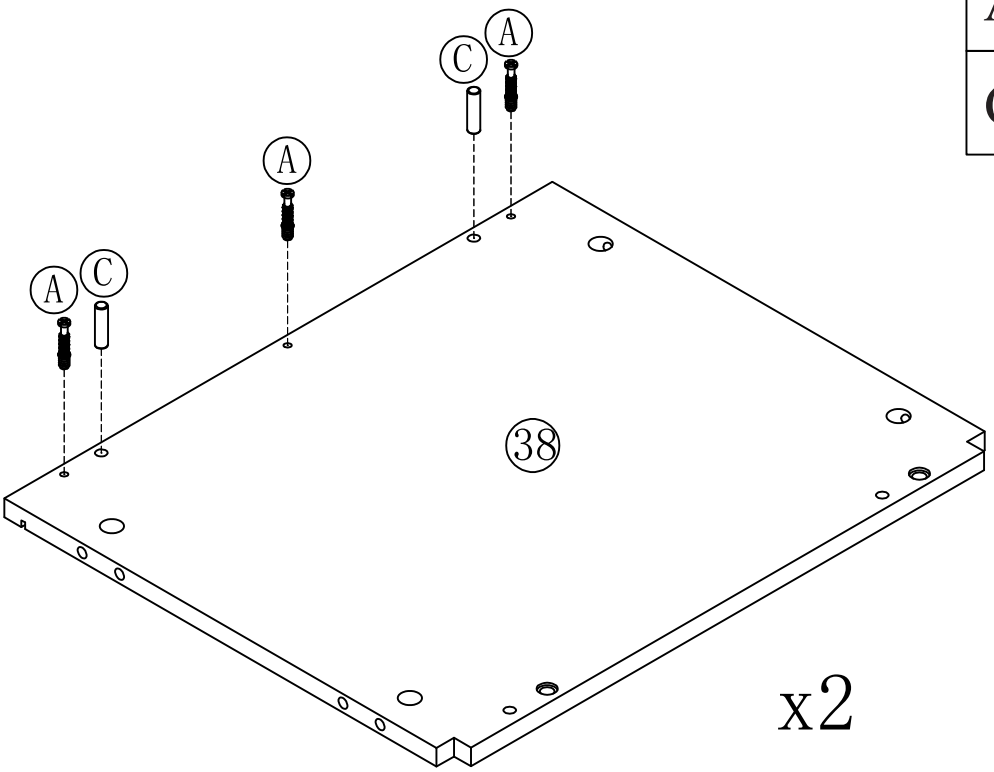

x2

Step/Étape 21

39		2
B		6

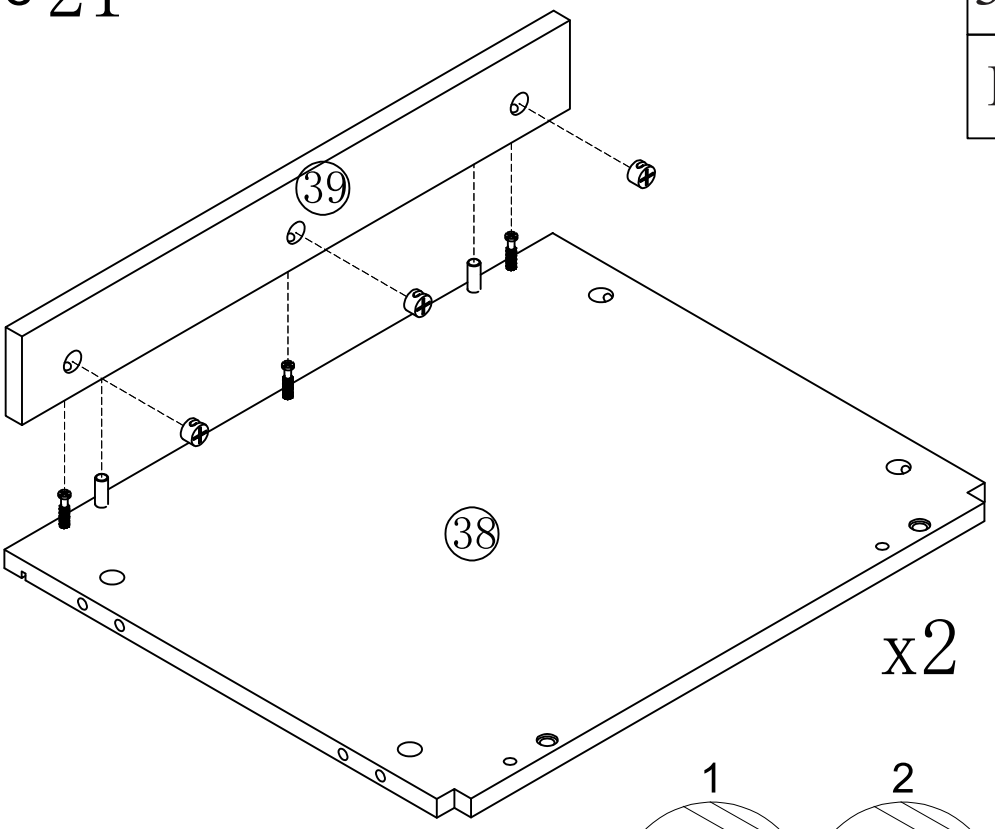

x2

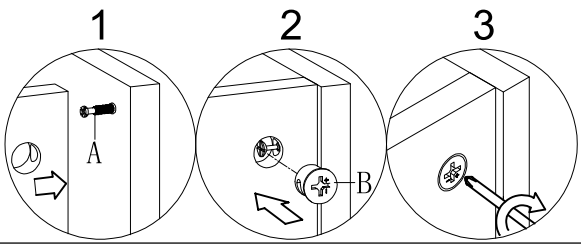

Step/Étape 22

B		4

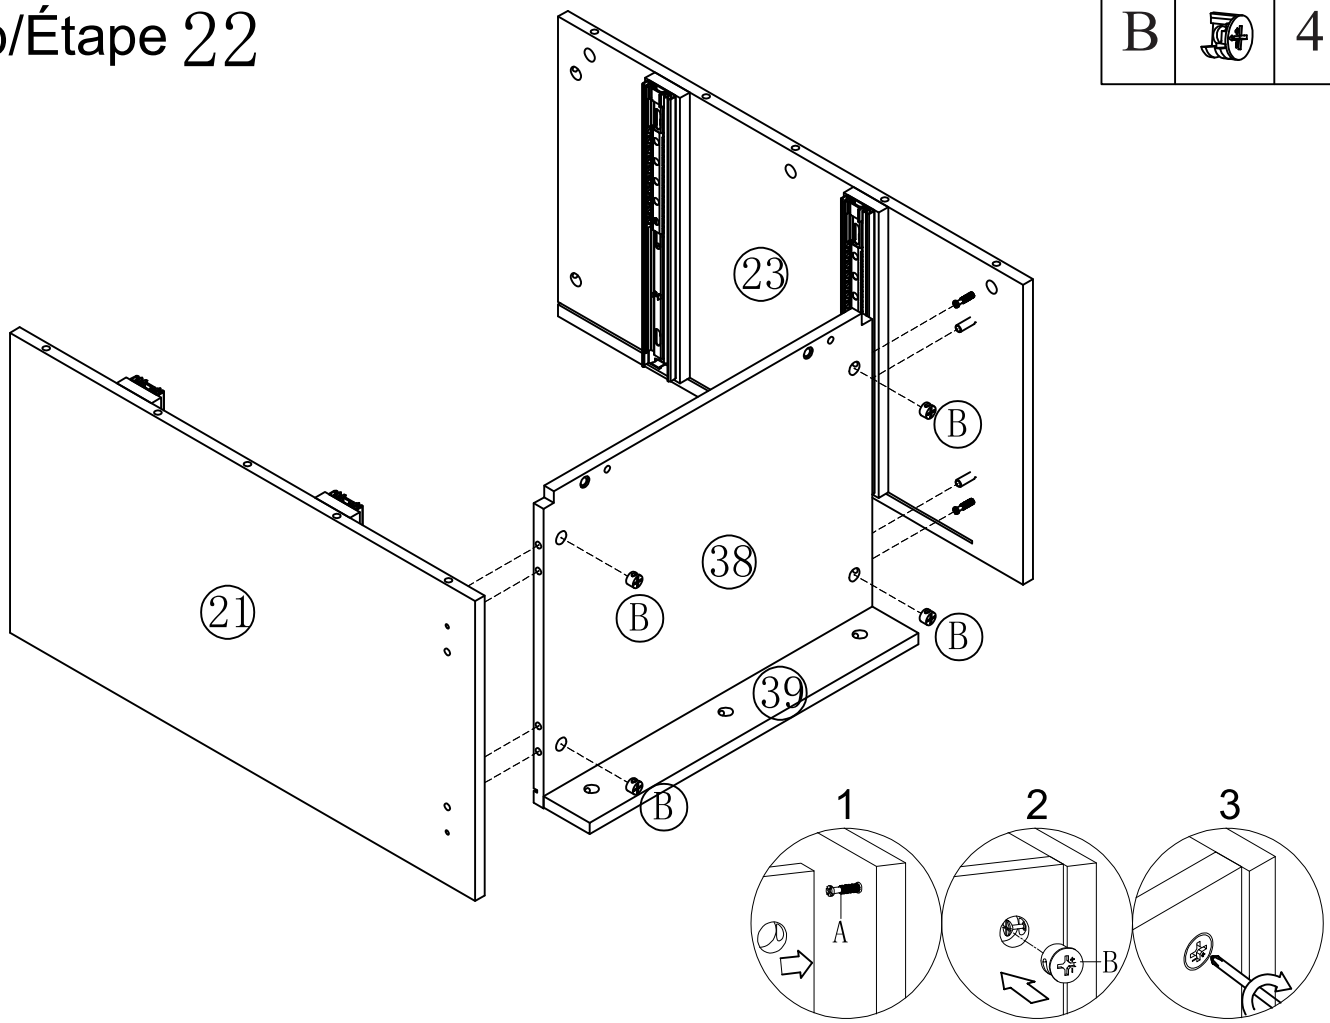

Step/Étape 23

B		4

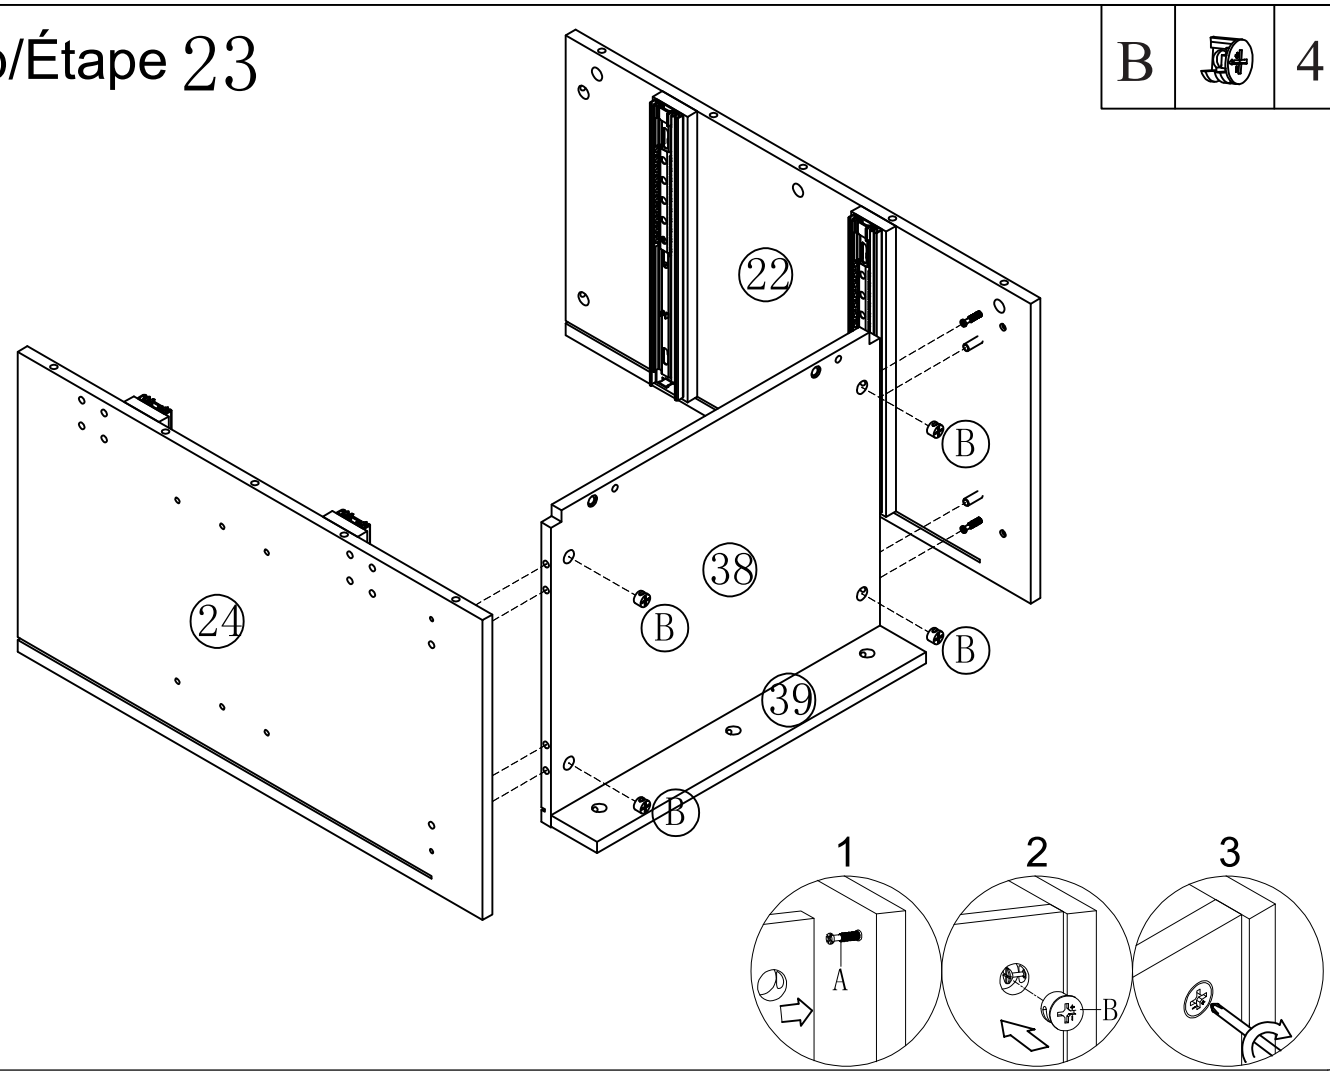

Step/Étape 24

37		4	D		16
			M		8

Step/Étape 25

A		4
C		4

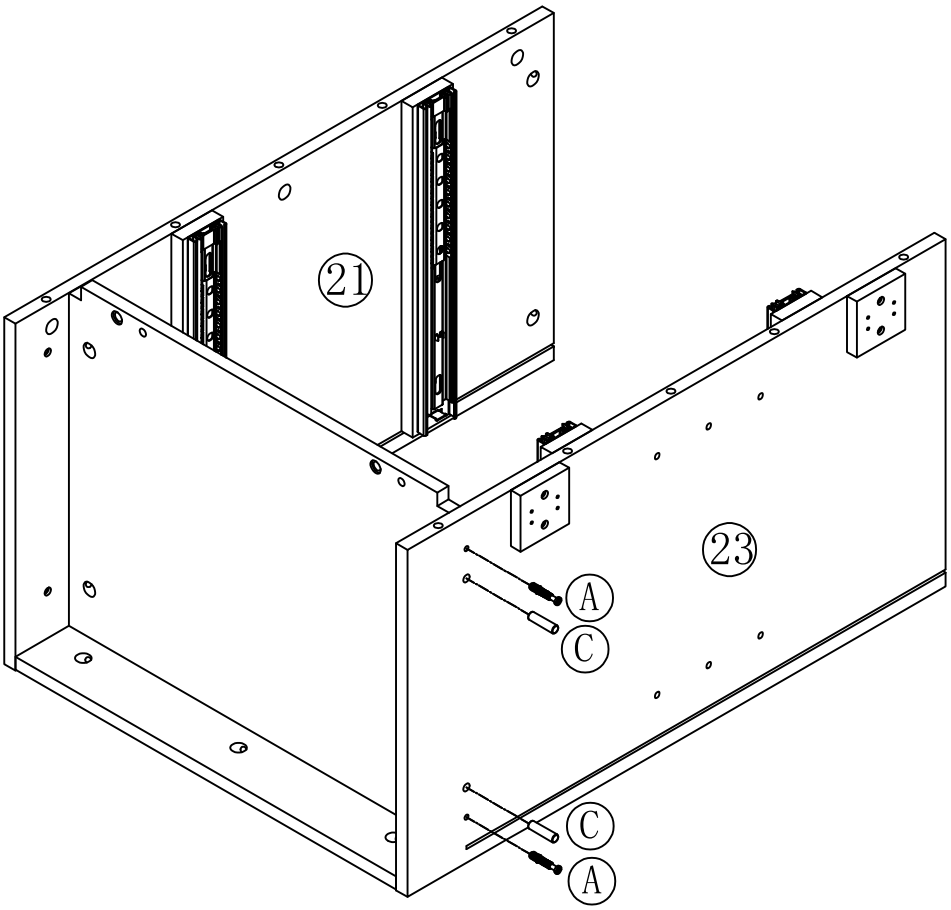

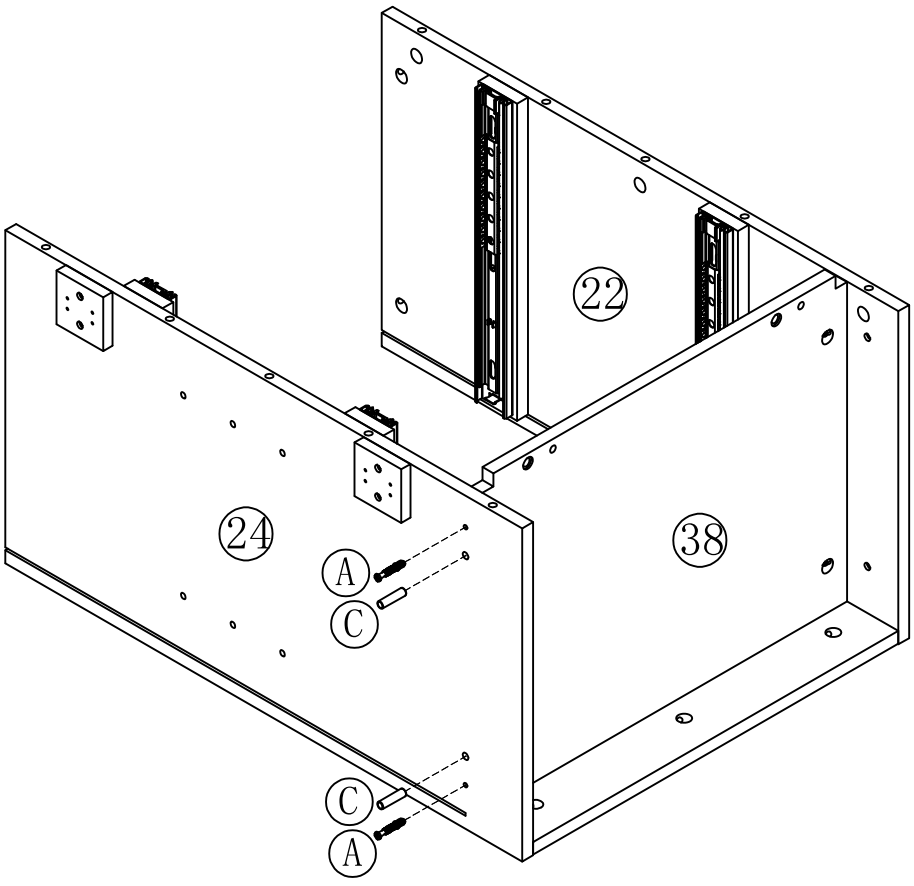

Step/Étape 26

42		1
A		8
C		8

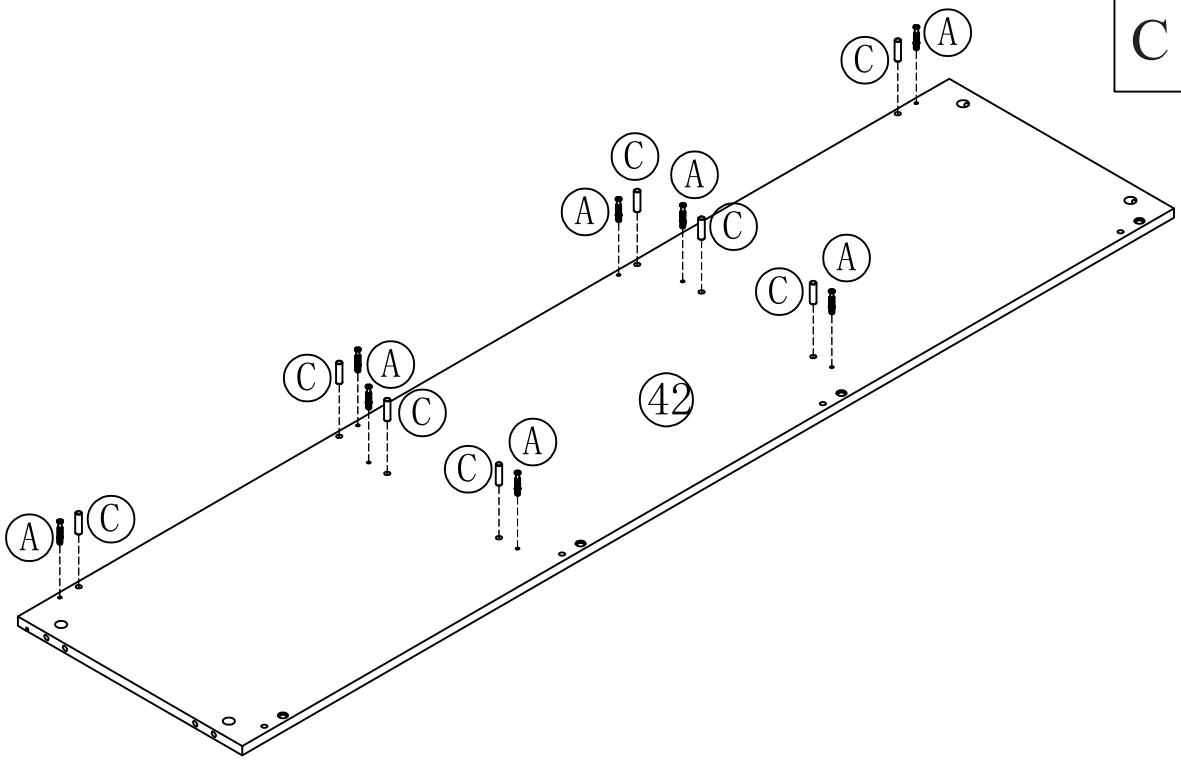

Step/Étape 27

43		2
57		1
B		8

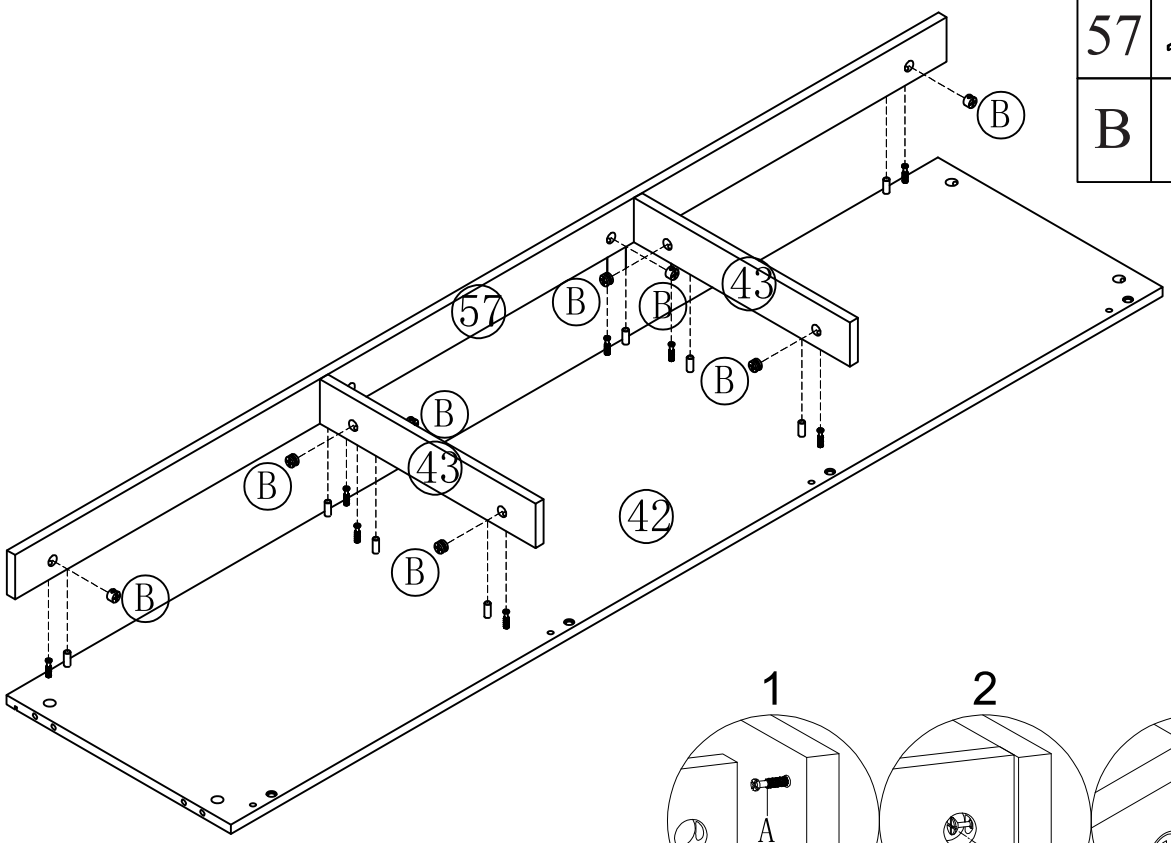

Step/Étape 28

A		2
C		2

At least 2 people are required.

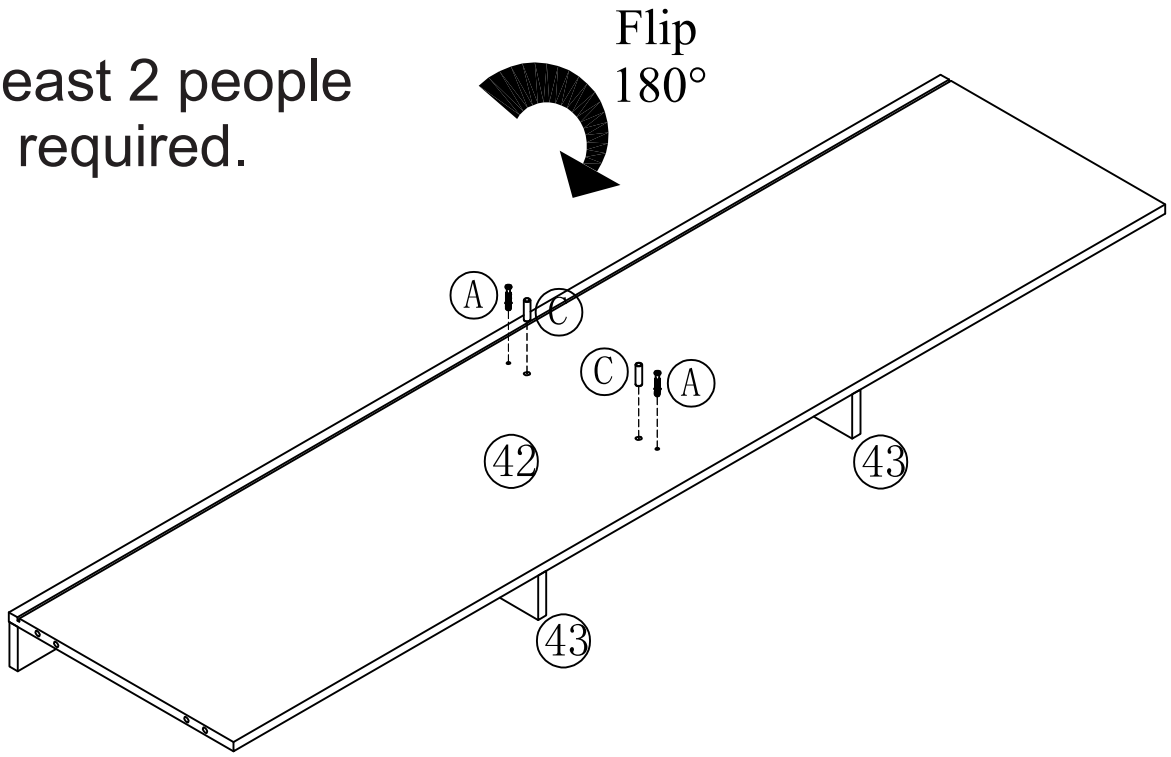

Step/Étape 29

28		1
B		2

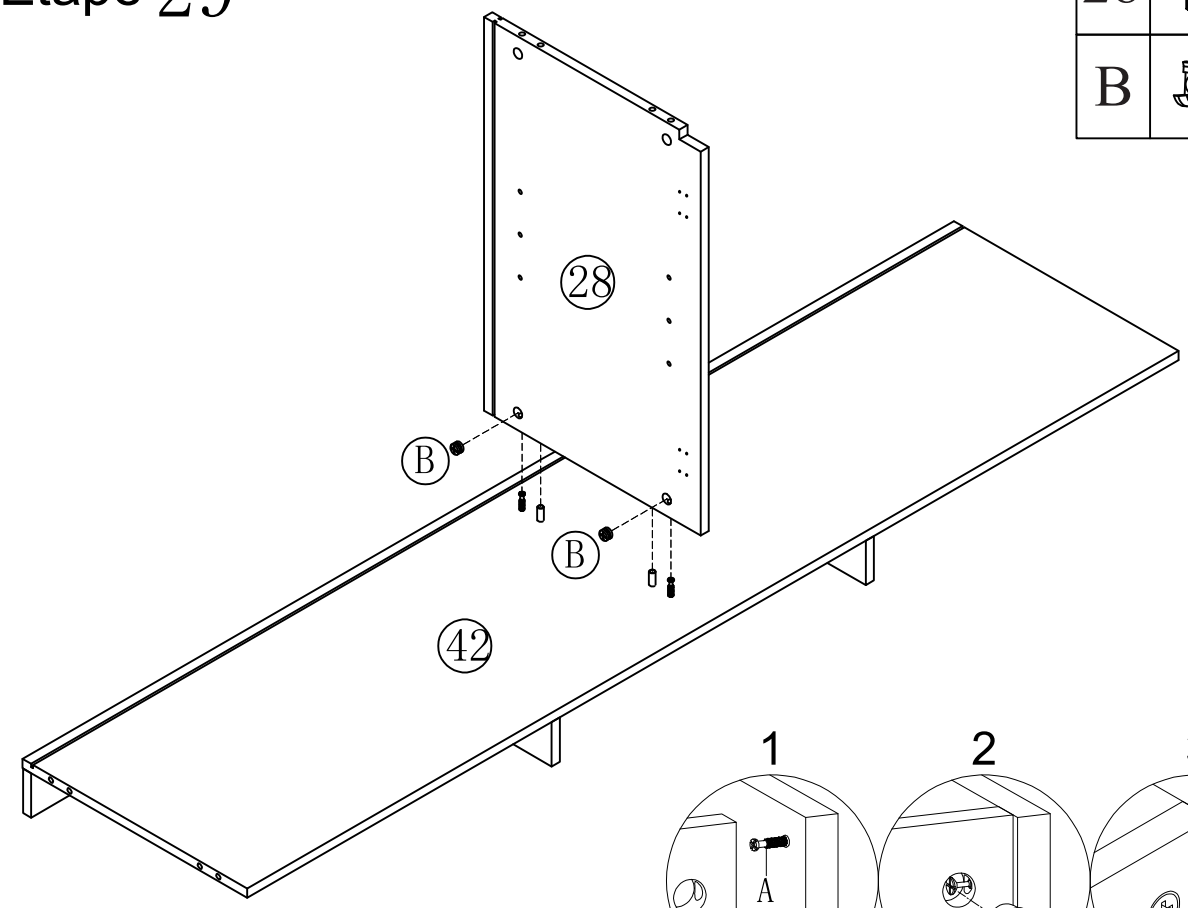

Step/Étape 30

B		4

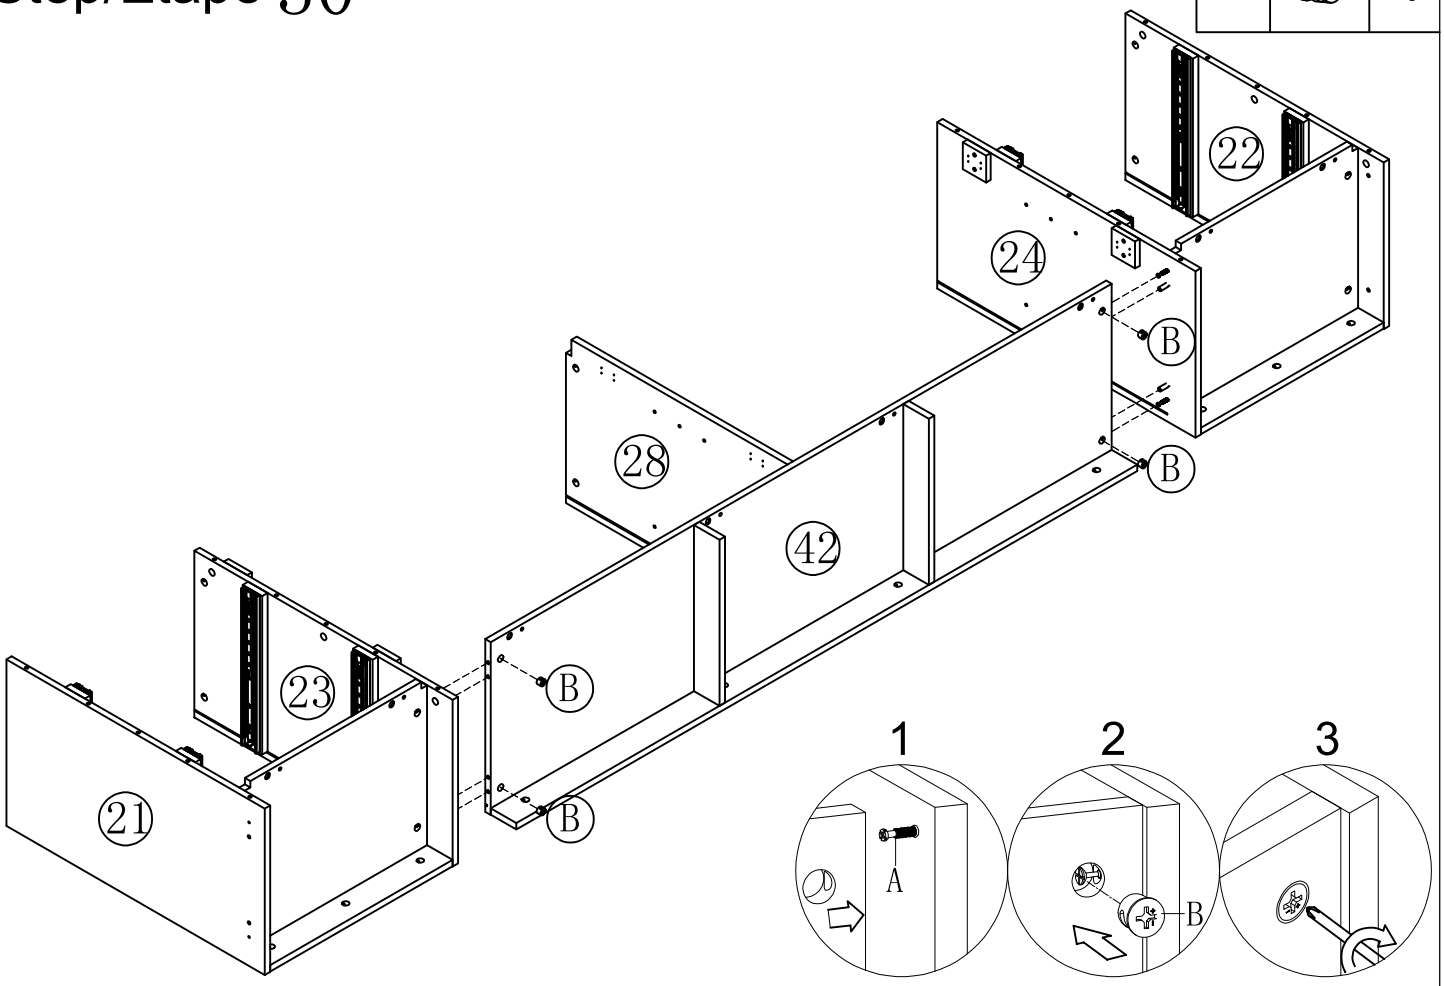

Step/Étape 31

31		2	32		2
C		8			

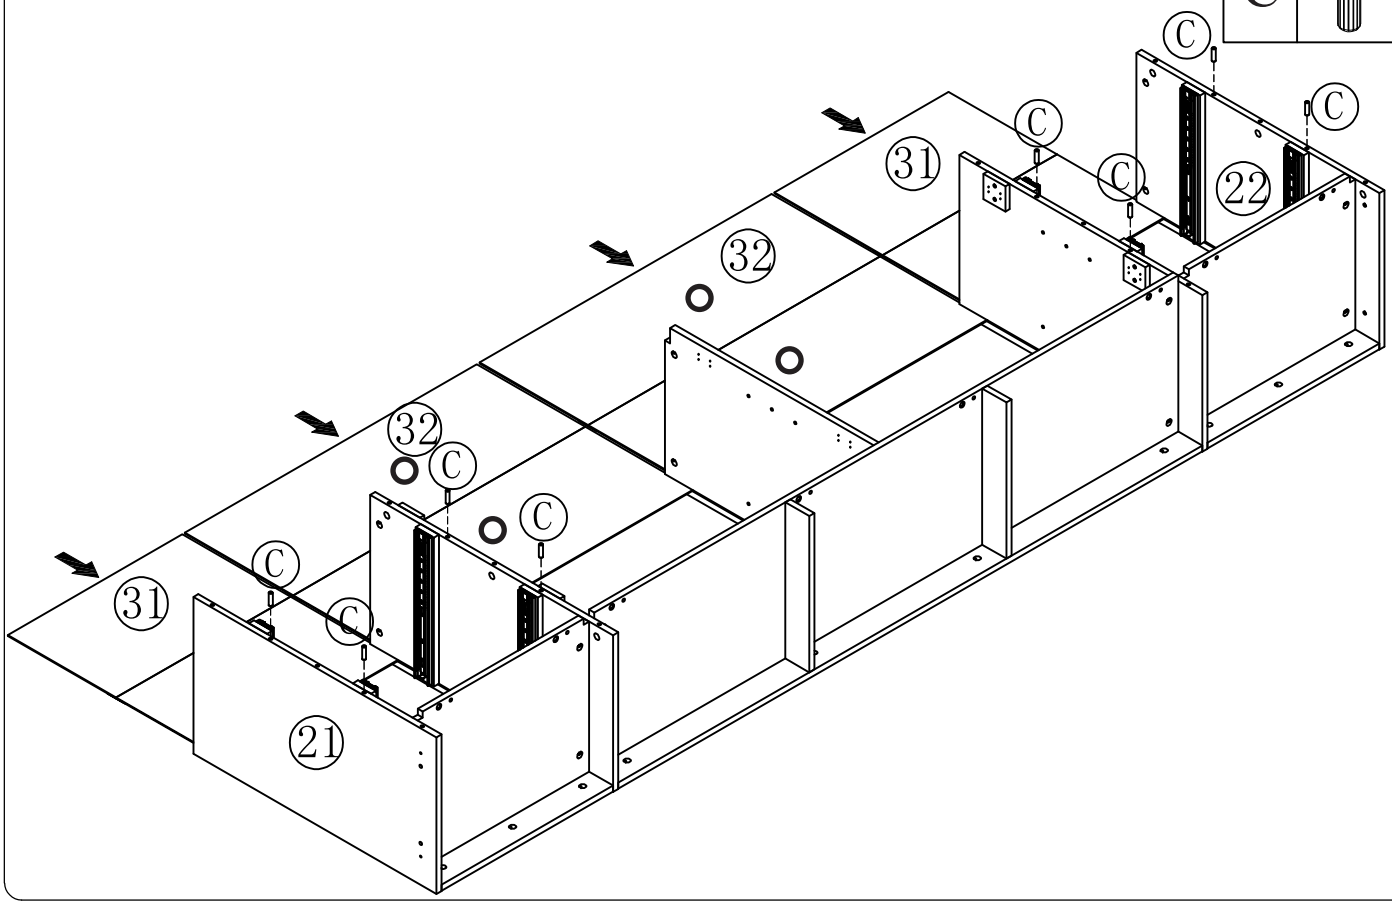

Step/Étape 32

19		1	25		1
20		1	A		14
			C		14

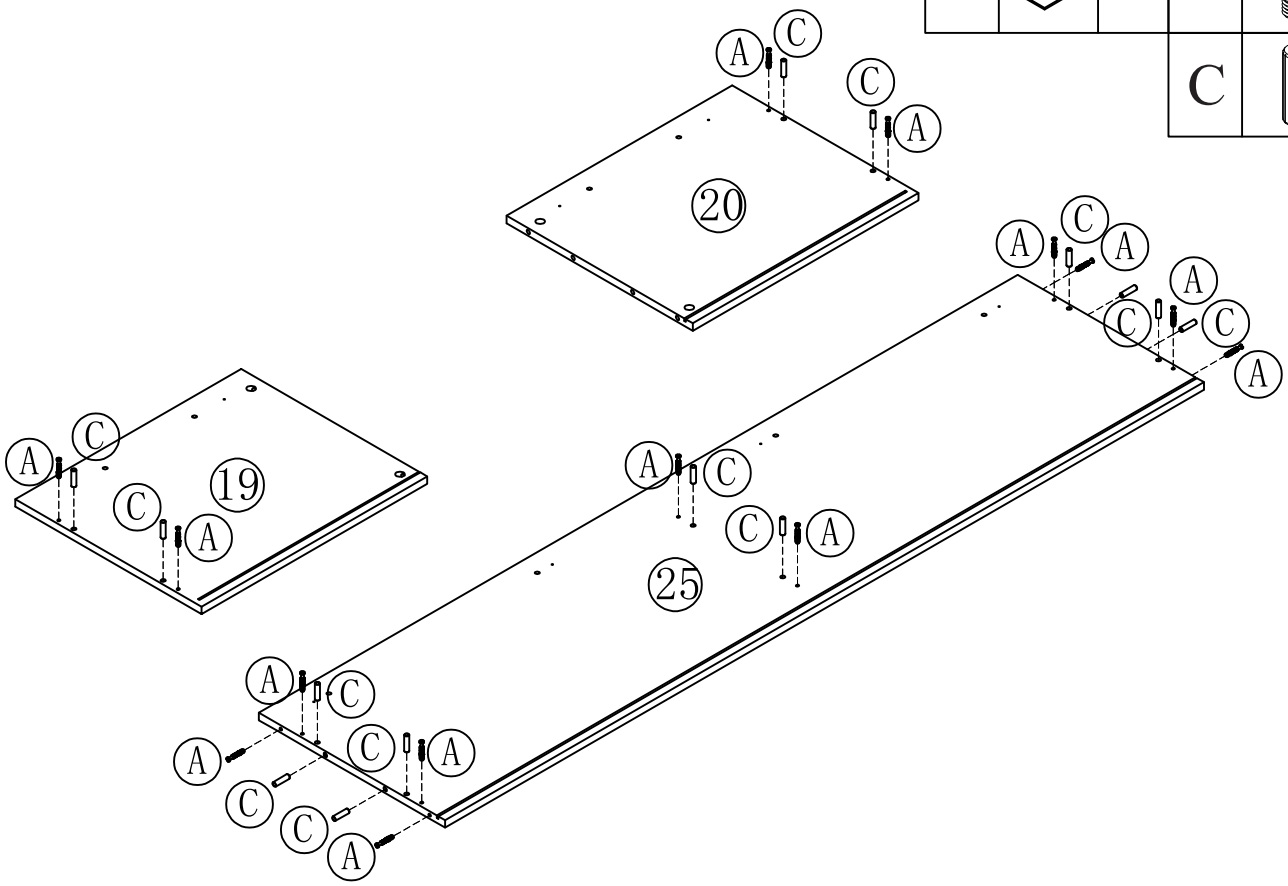

Step/Étape 33

B		4

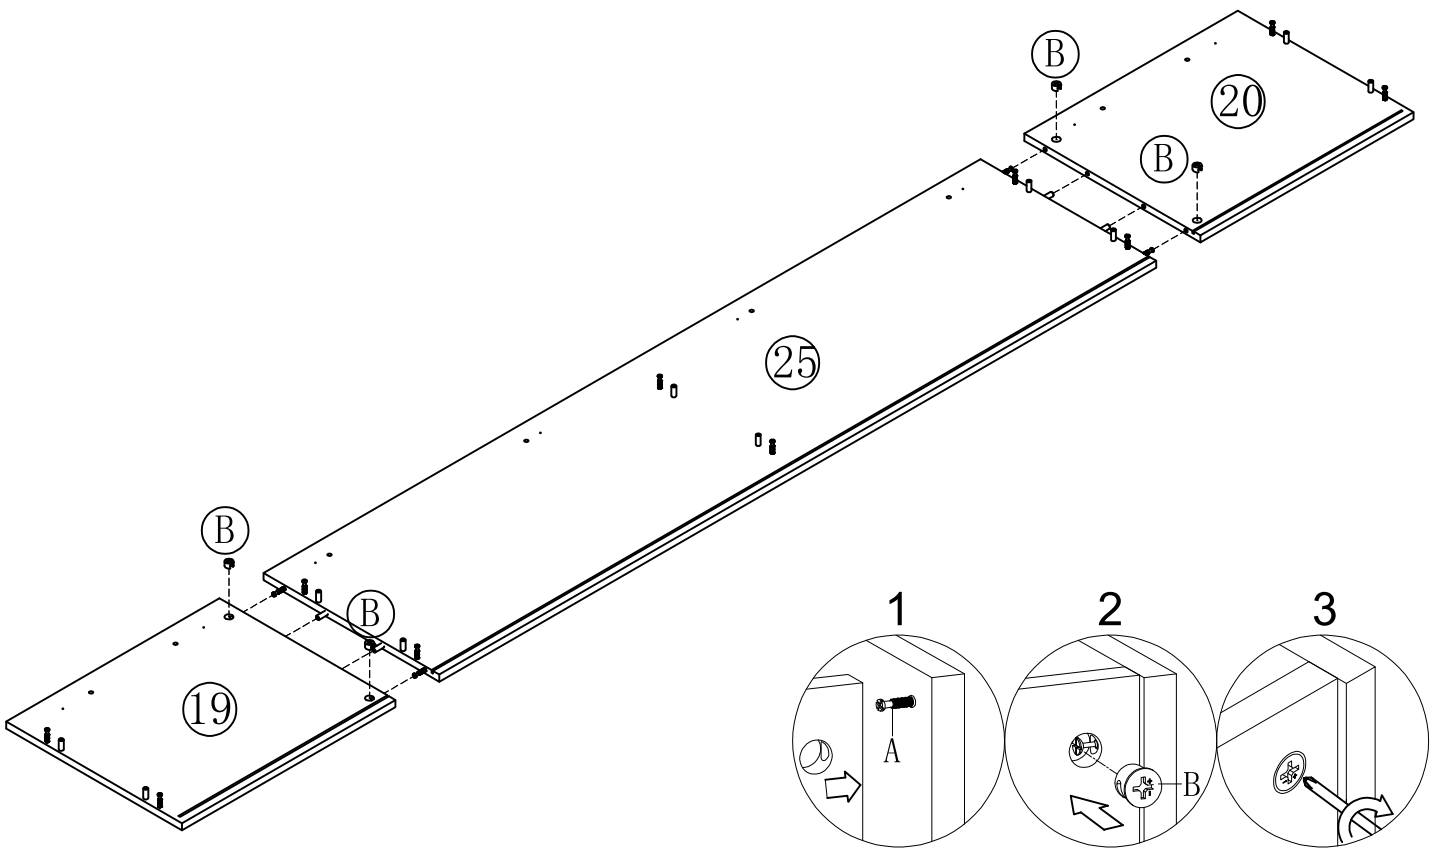

Step/Étape 34

26		2	D		8	O		8
27		1	M		8	R		4

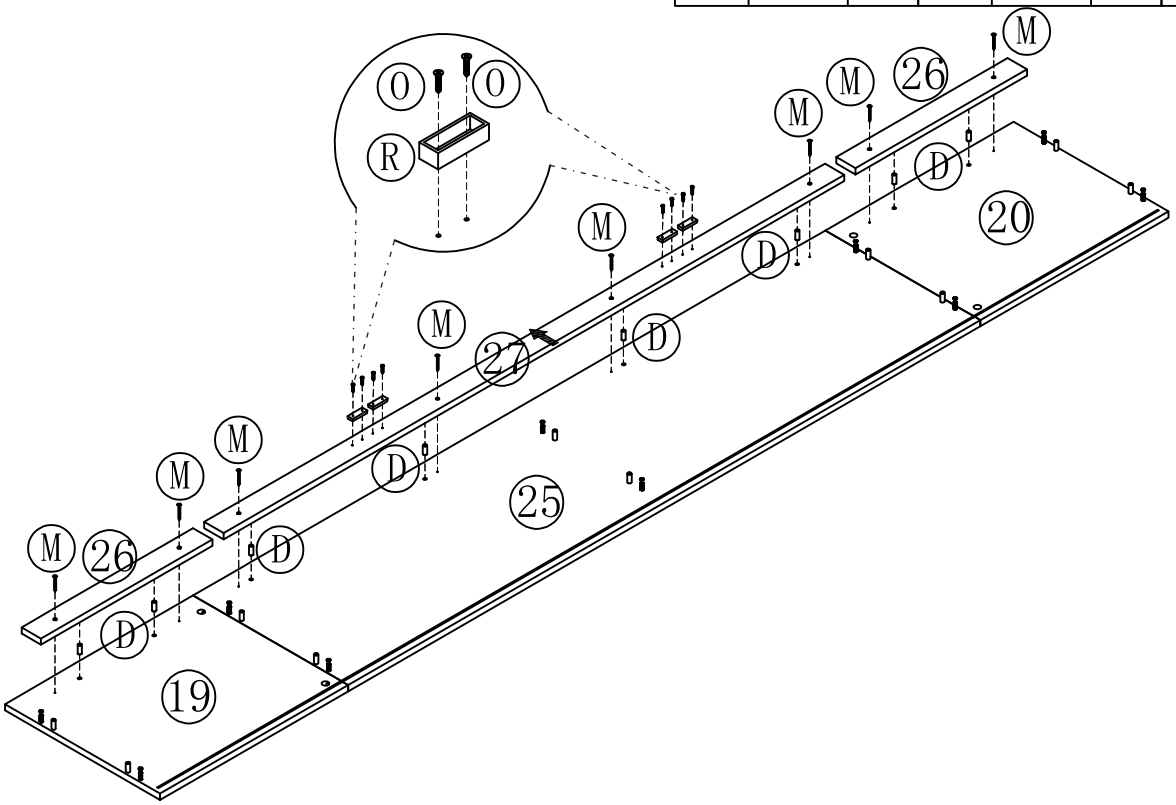

Step/Étape 35

B		10

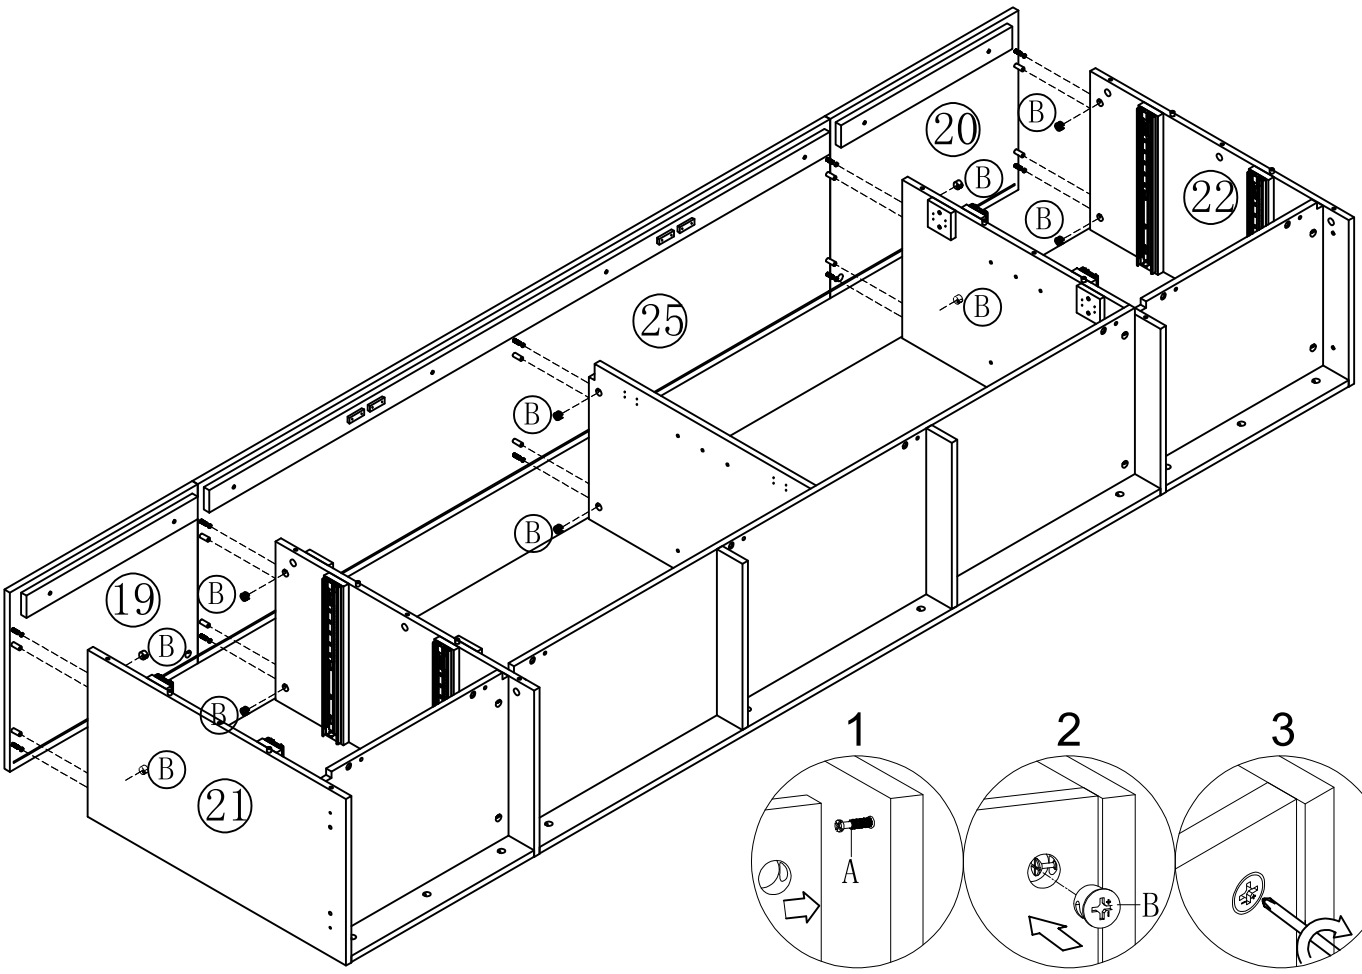

Step/Étape 36

33		2
34		2
A		12

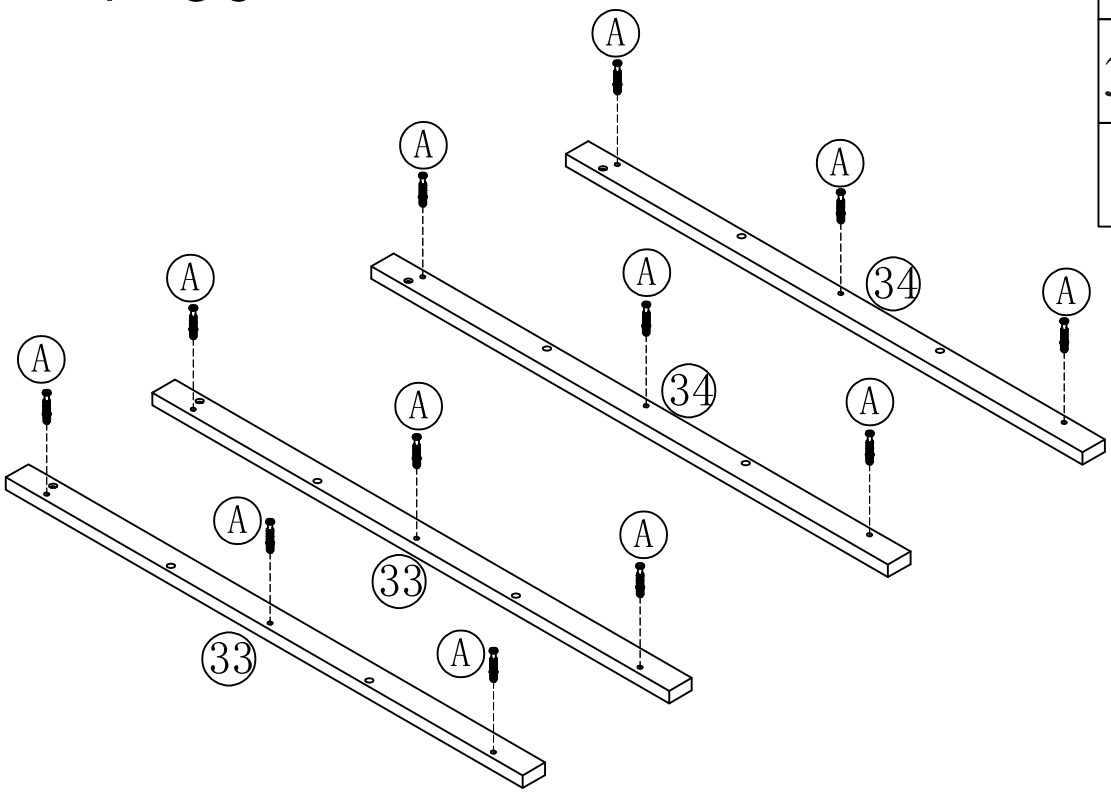

Step/Étape 37

B		12

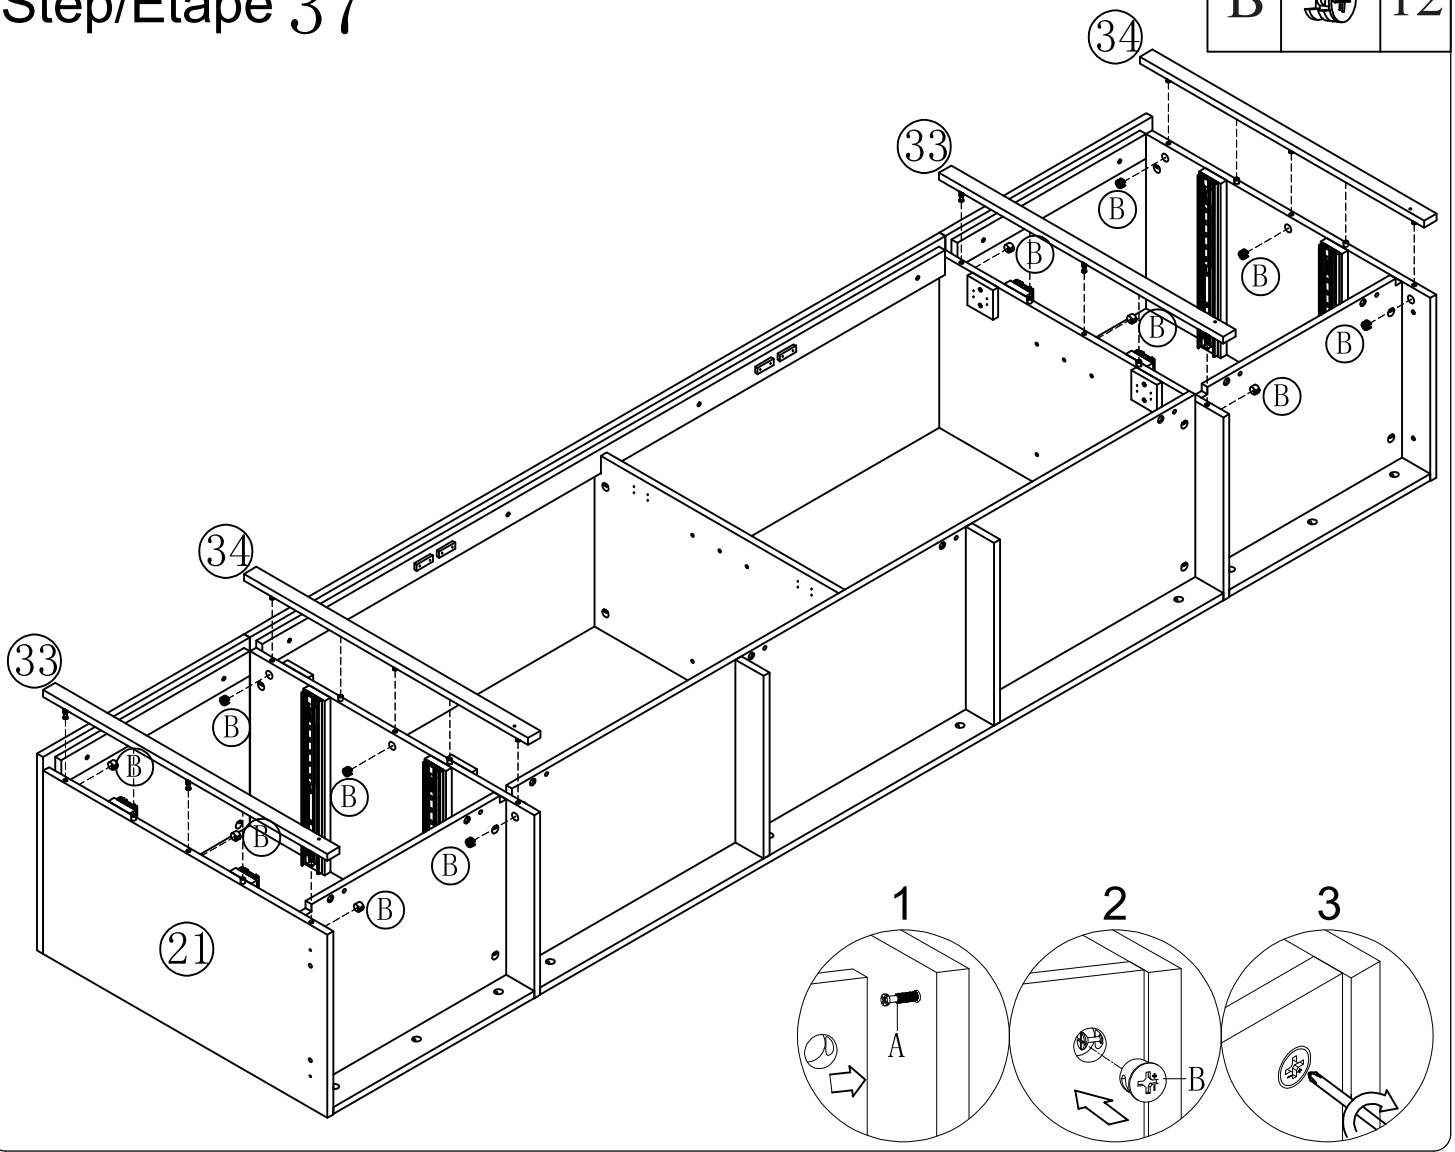

Step/Étape 38

44		1	O		4
			P		2

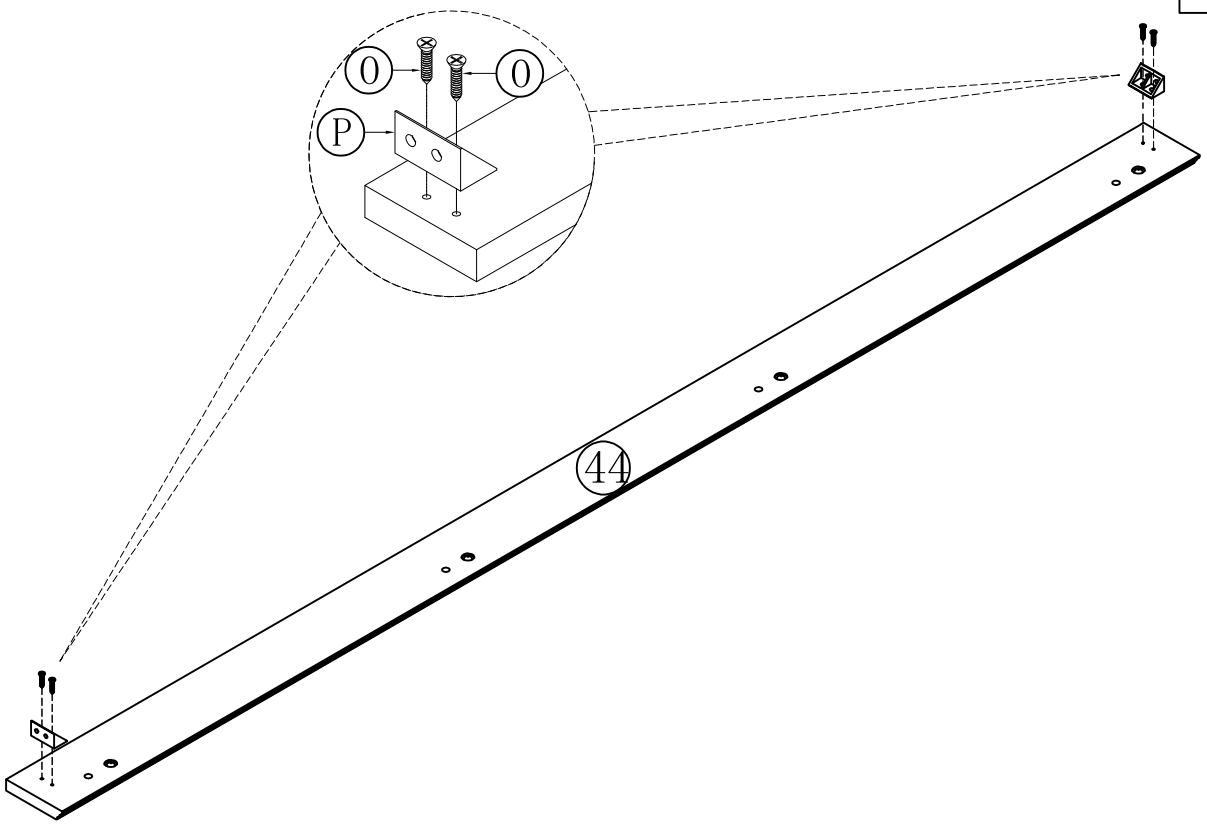

Step/Étape 39

40		1	Q		8
41		1	S		8

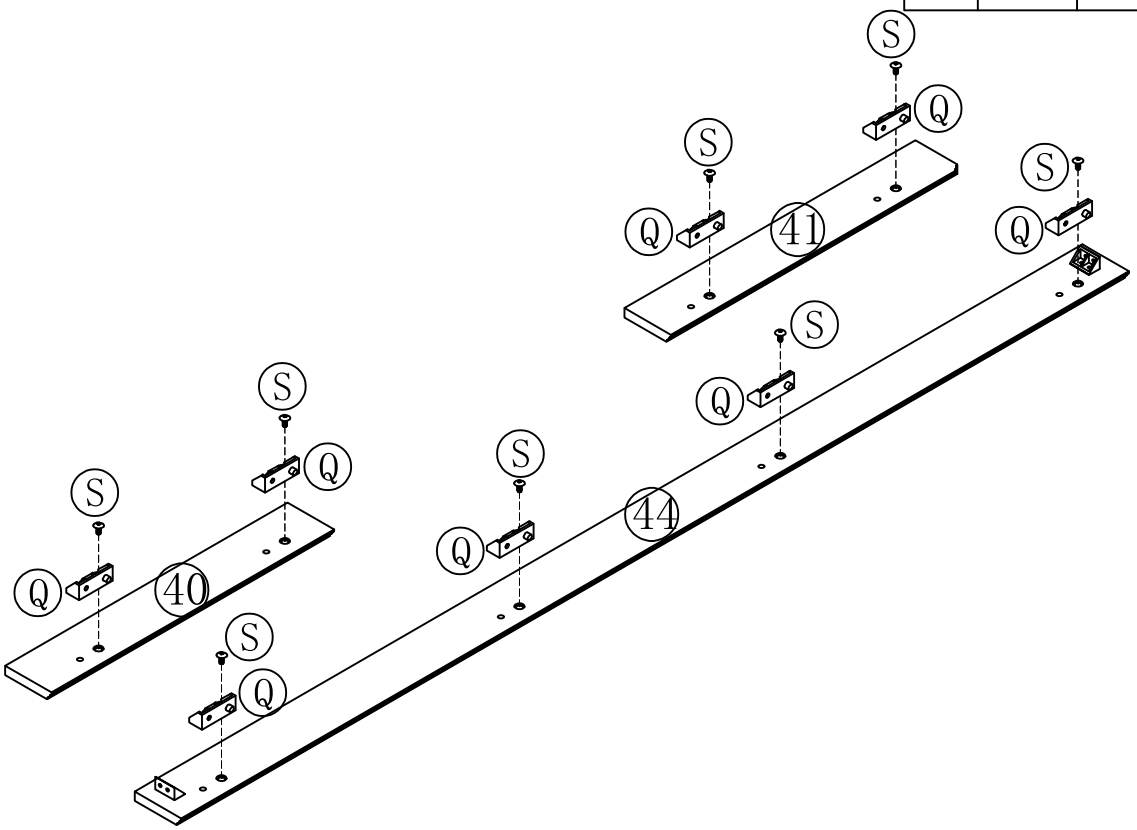

Step/Étape 40

S		8

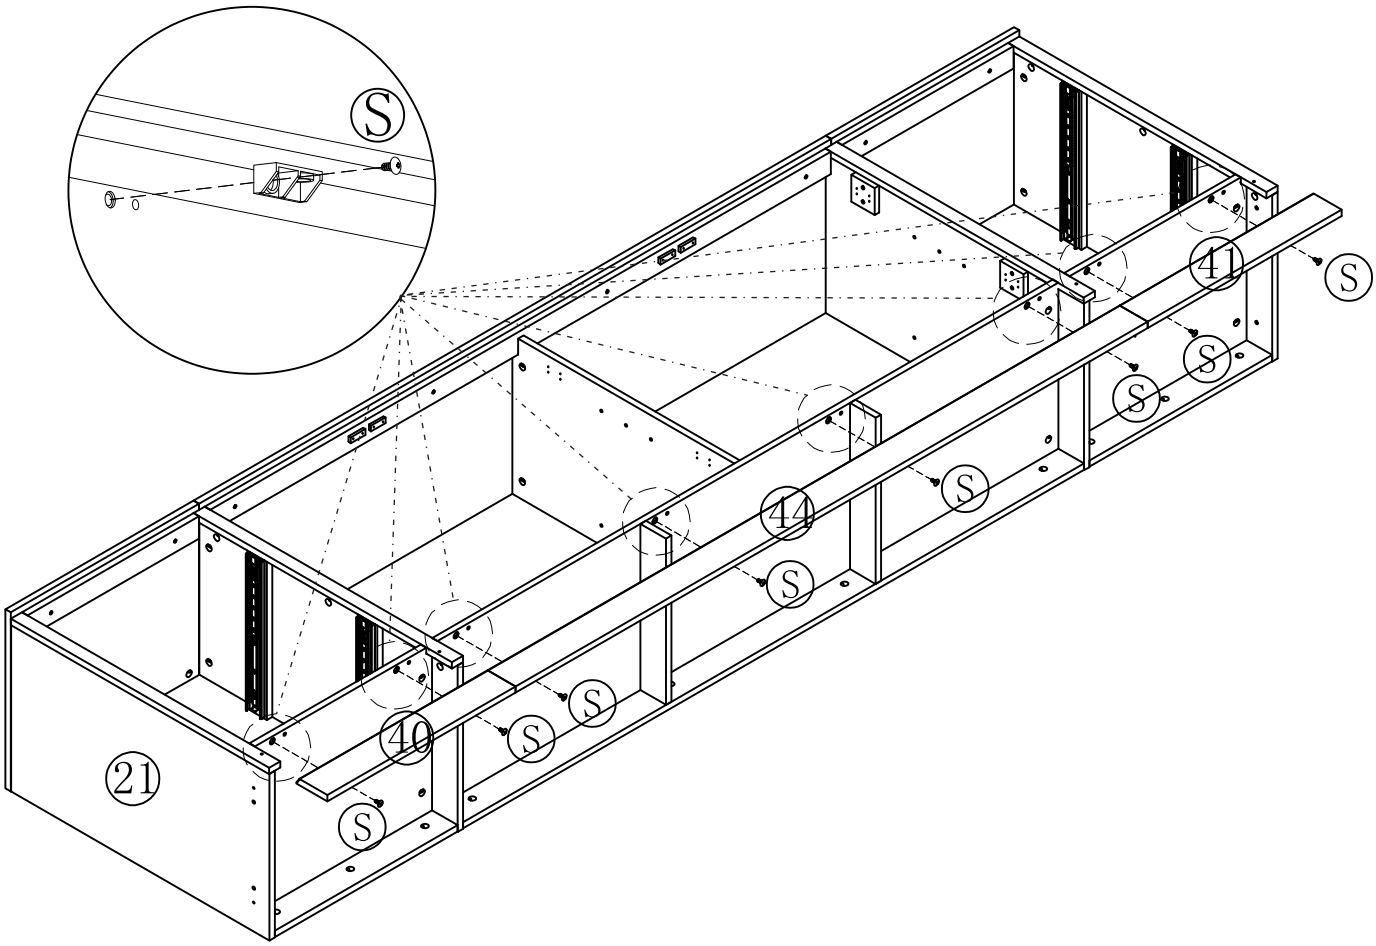

Step/Étape 41

O		4

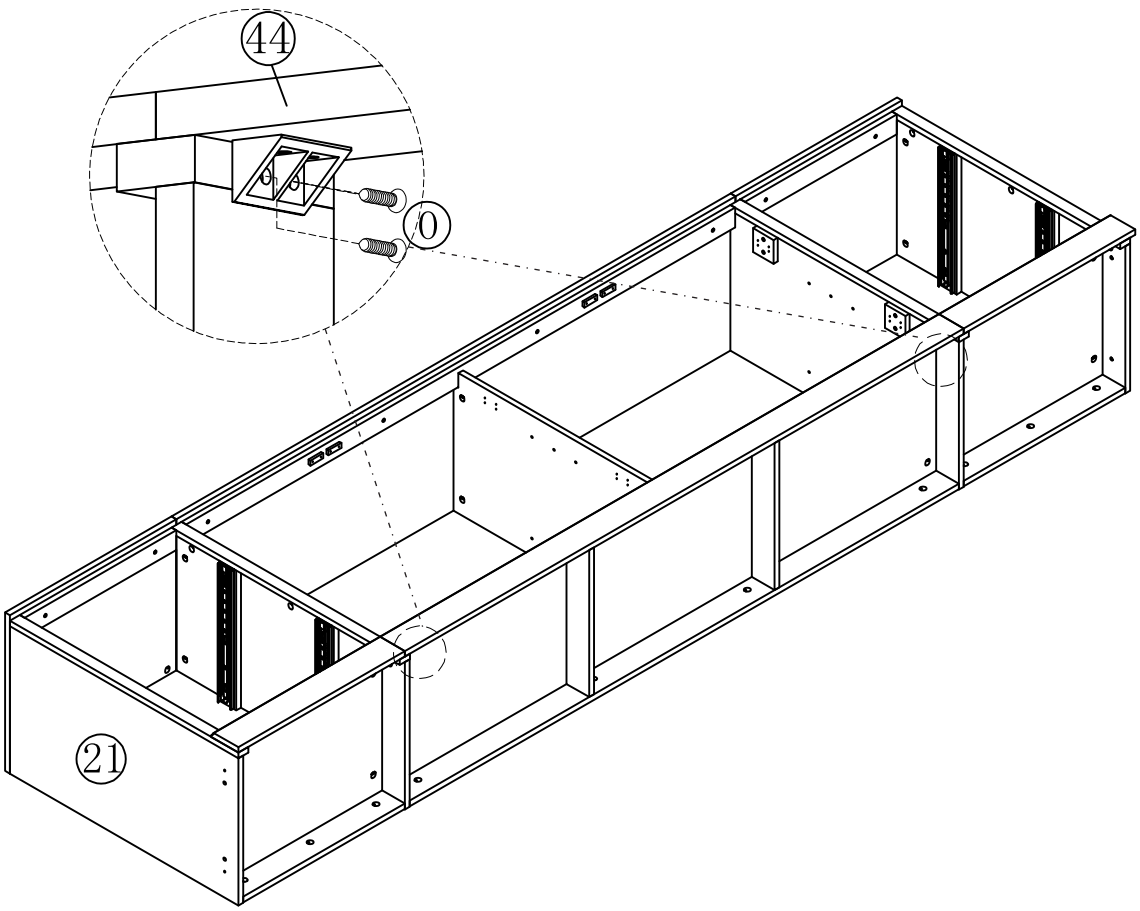

Step/Étape 42

3		2	M		8
			D		4

Step/Étape 43

A		16
C		16

Turn Over 90°

At least 2 people are required.

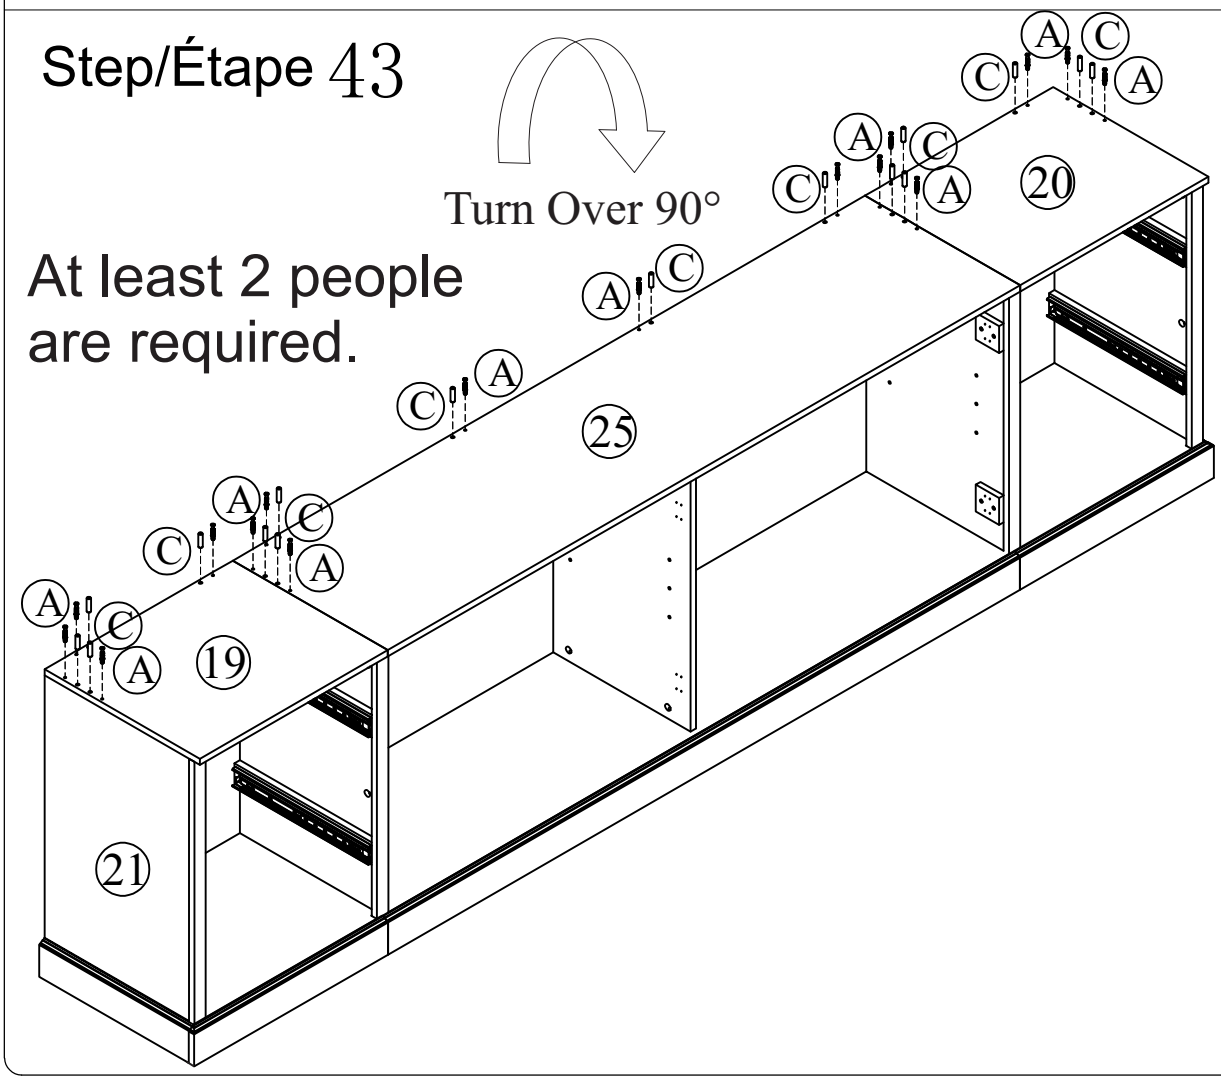

Step/Étape 44

B		8

At least 2 people
are required.

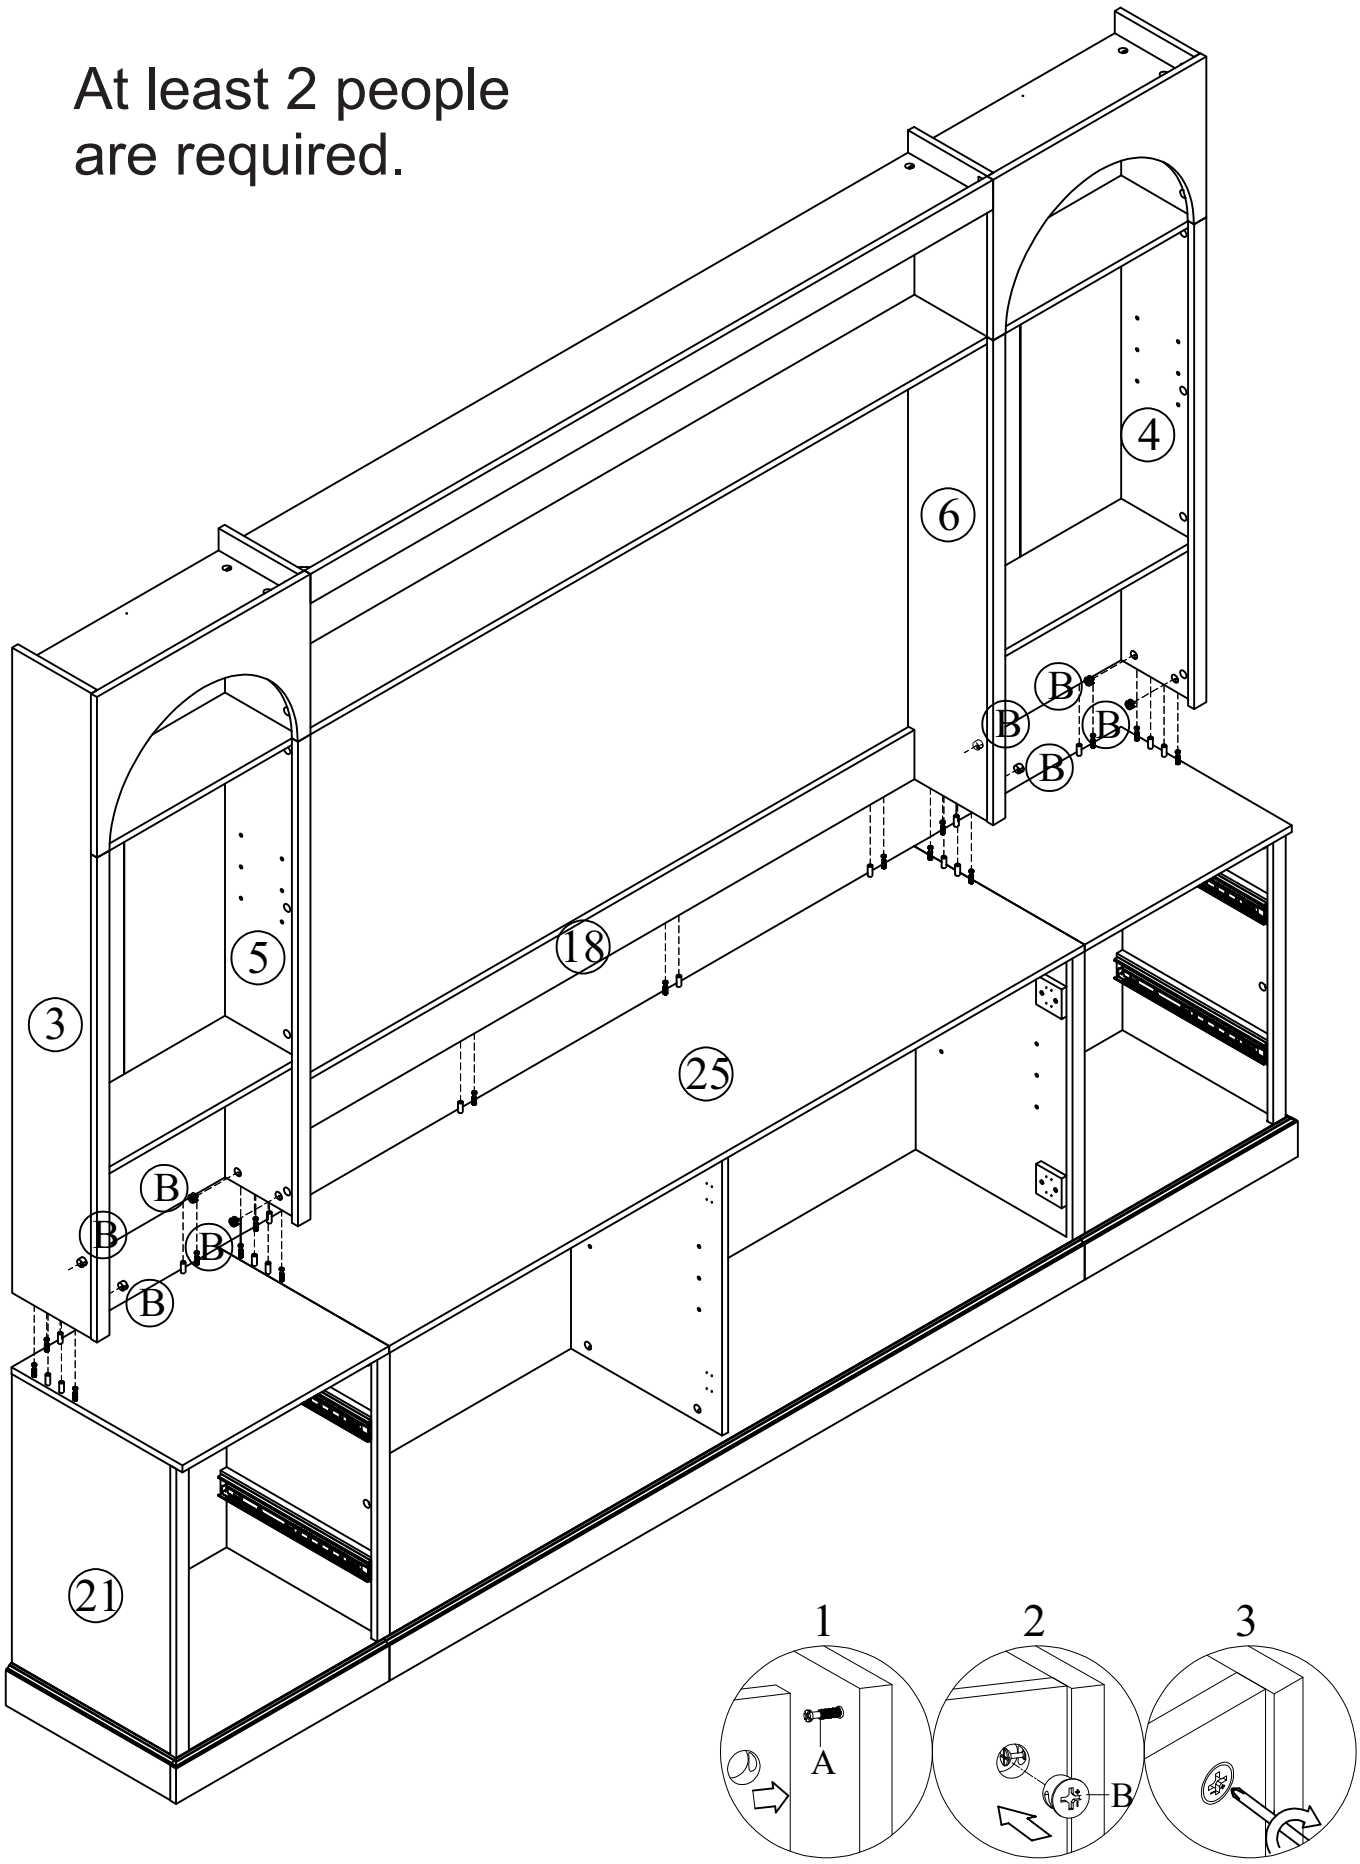

Step/Étape 45

B		8

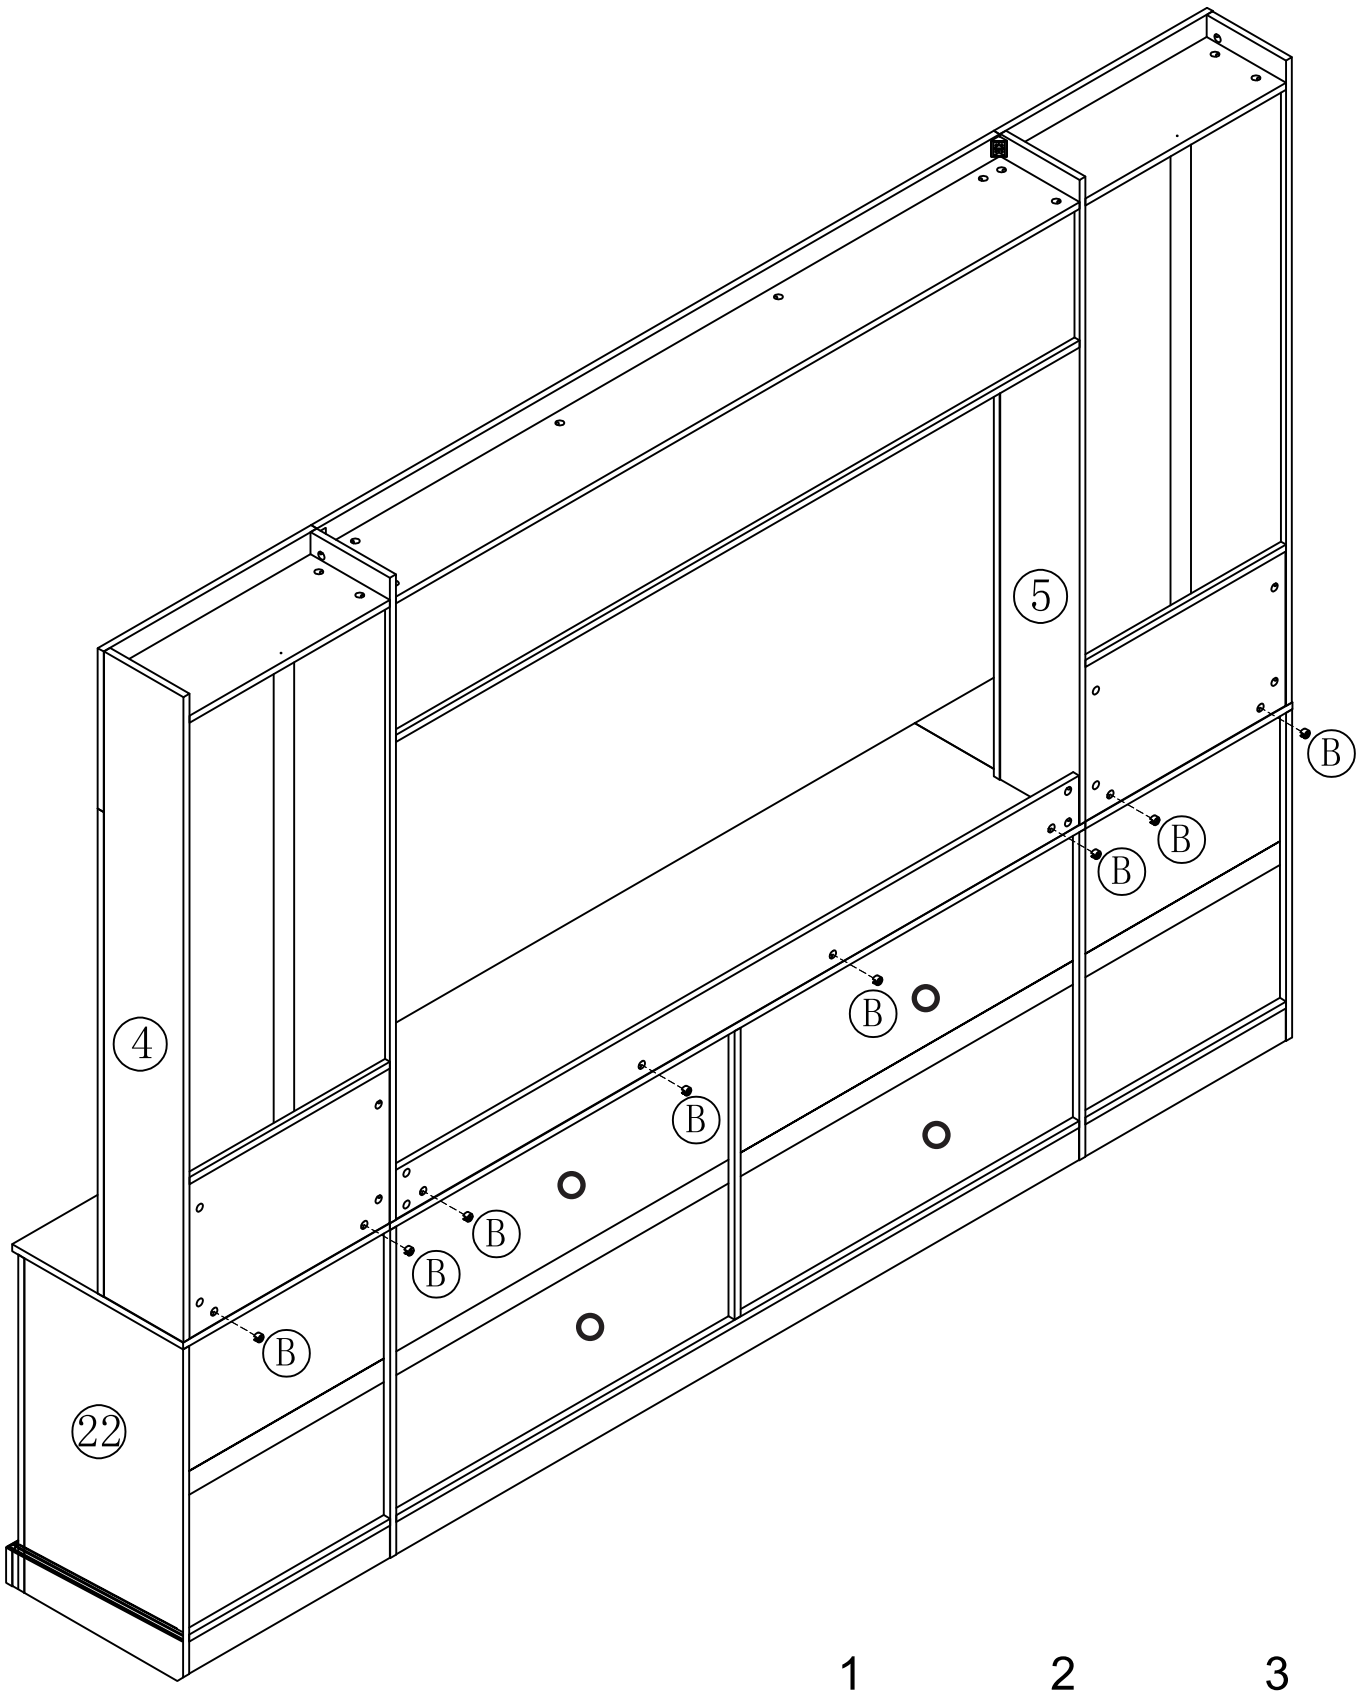

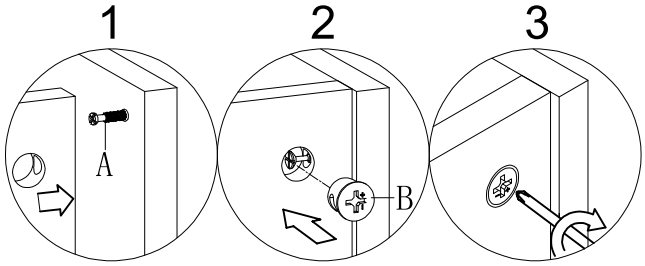

Step/Étape 46

I | 16

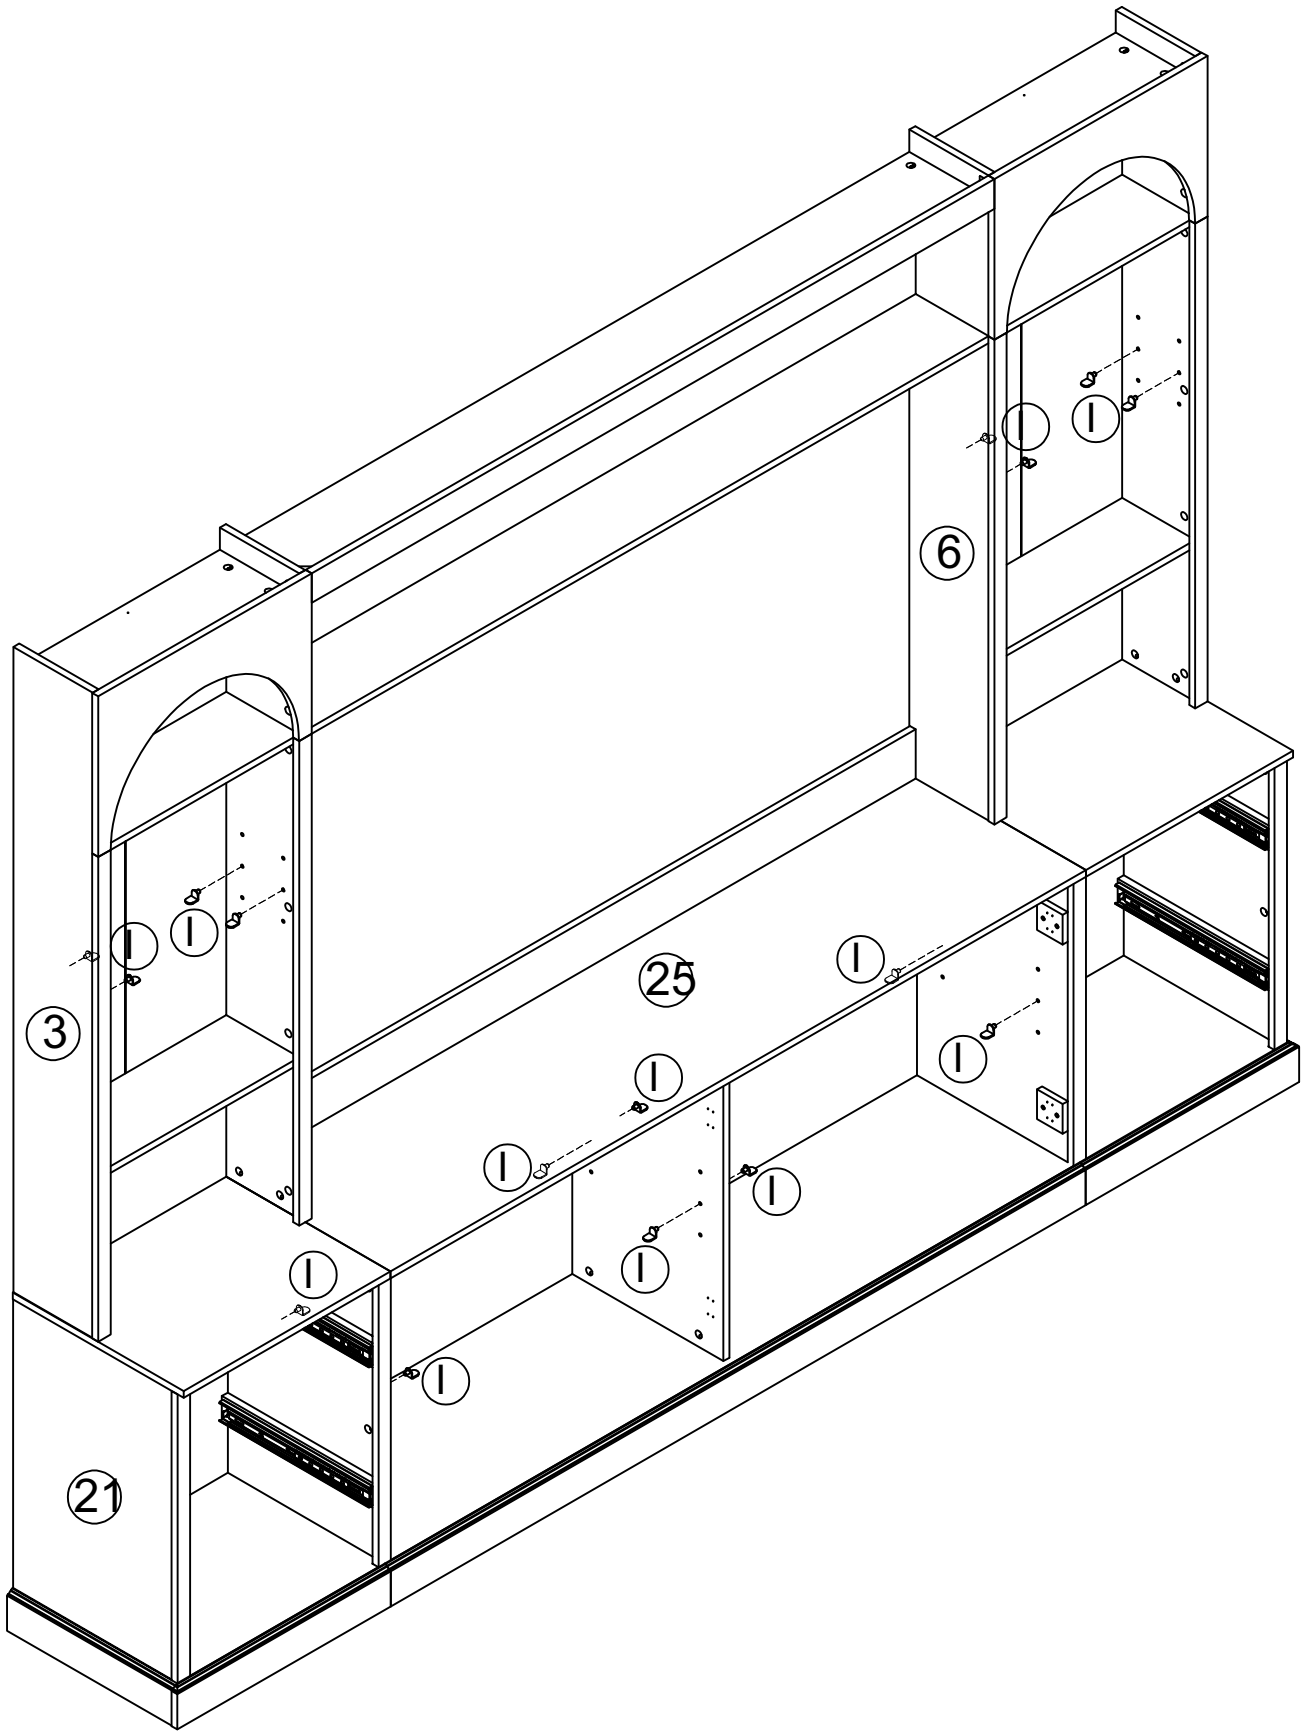

Step/Étape 47

15		2	30		1
29		1	J		16

The shelf height can be adjusted as needed.
Please decide on the layer placement before installing the shelves in the side cabinet.

Step/Étape 48

47		2
A		4

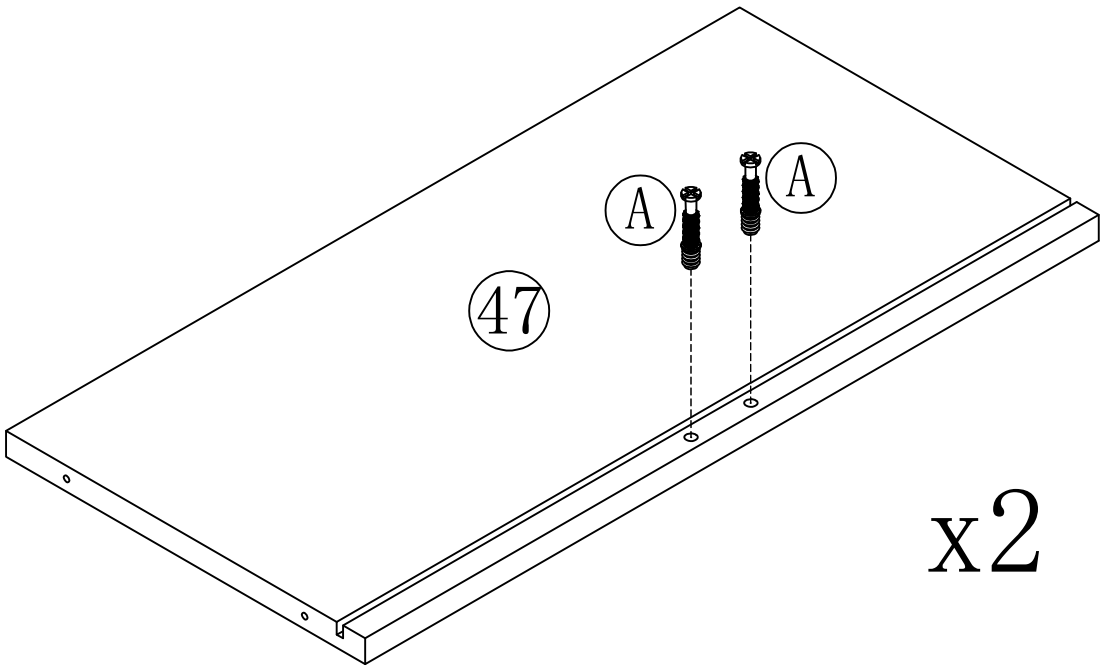

x2

Step/Étape 49

45		2	L		12
46		2	Y-2		4

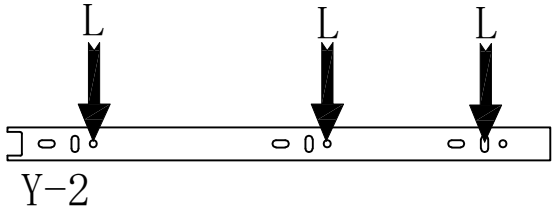

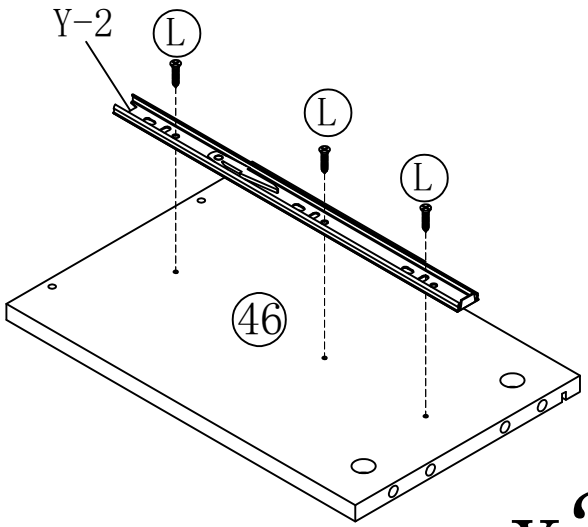

x2

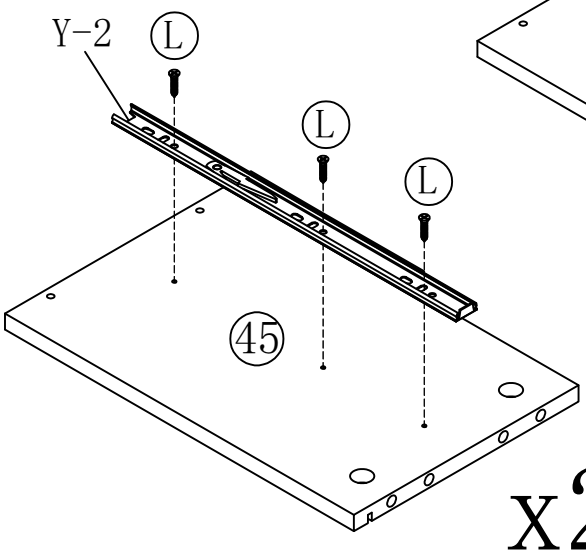

x2

Step/Étape 50

49		2
B		4
N		8

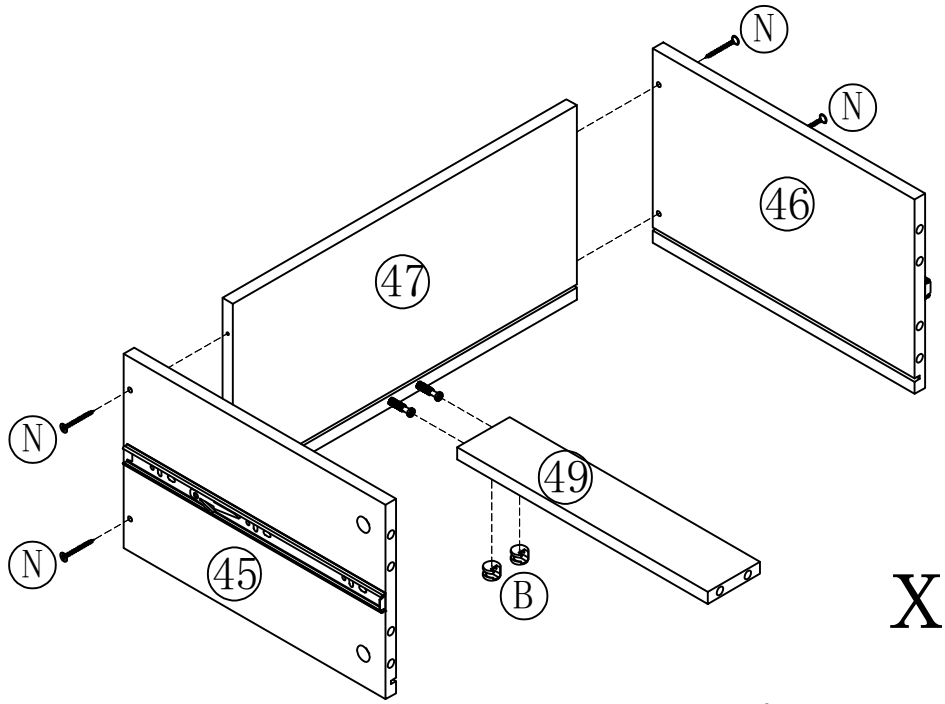

x2

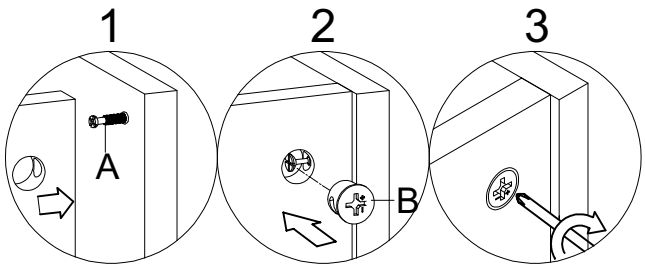

Step/Étape 51

48		2

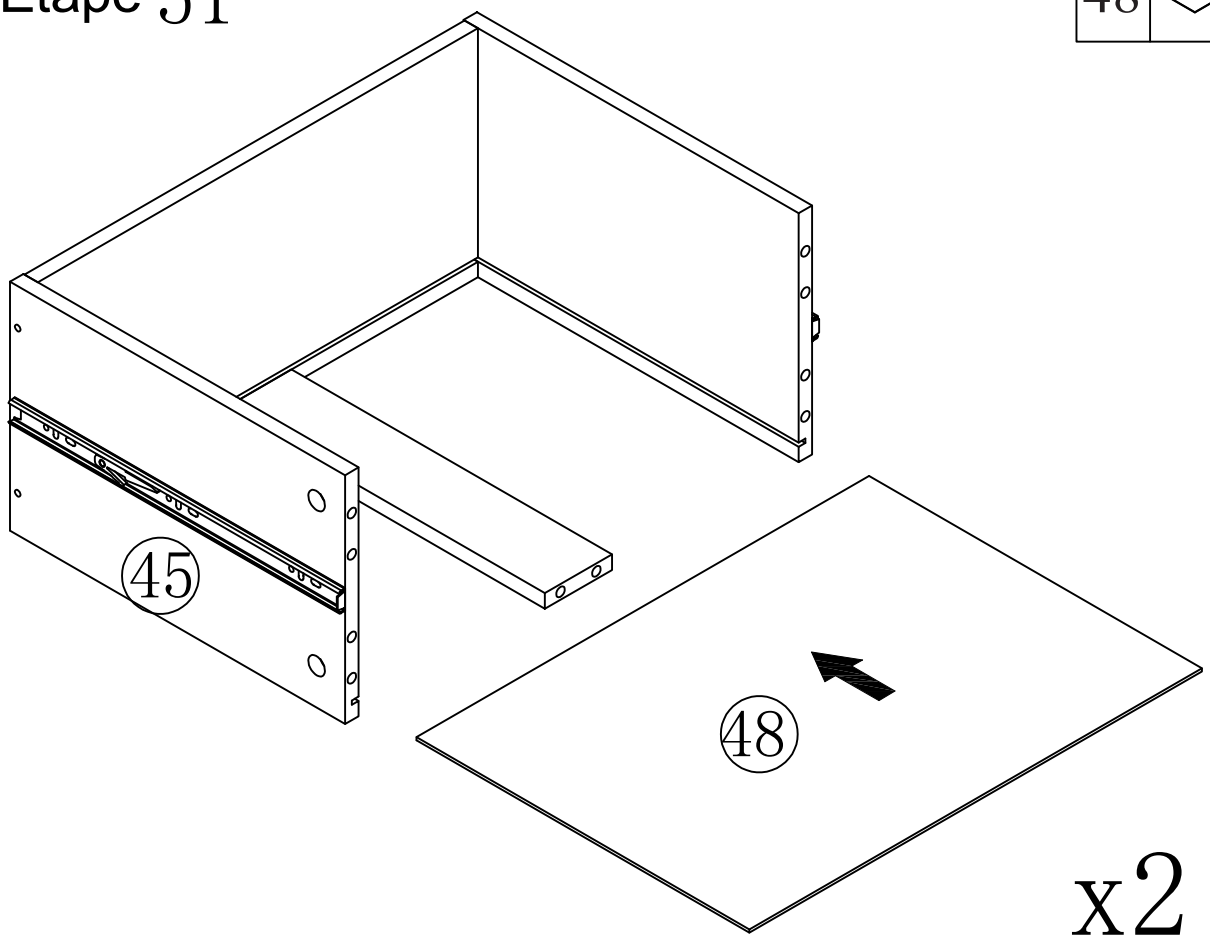

x2

Step/Étape 52

50		2
A		12
E		8

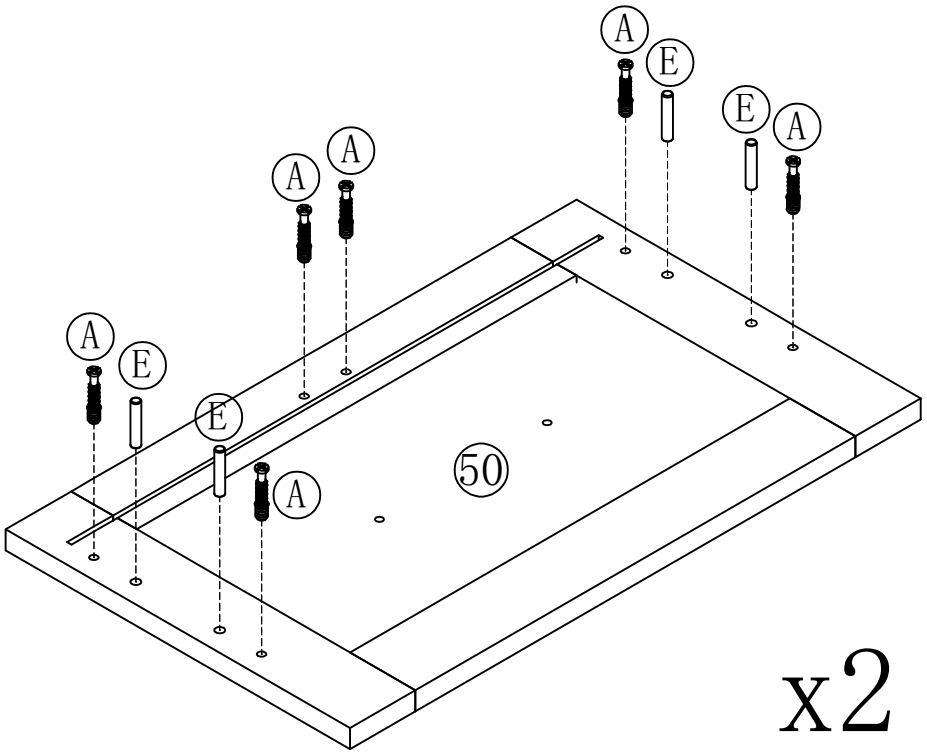

x2

Step/Étape 53

B		12

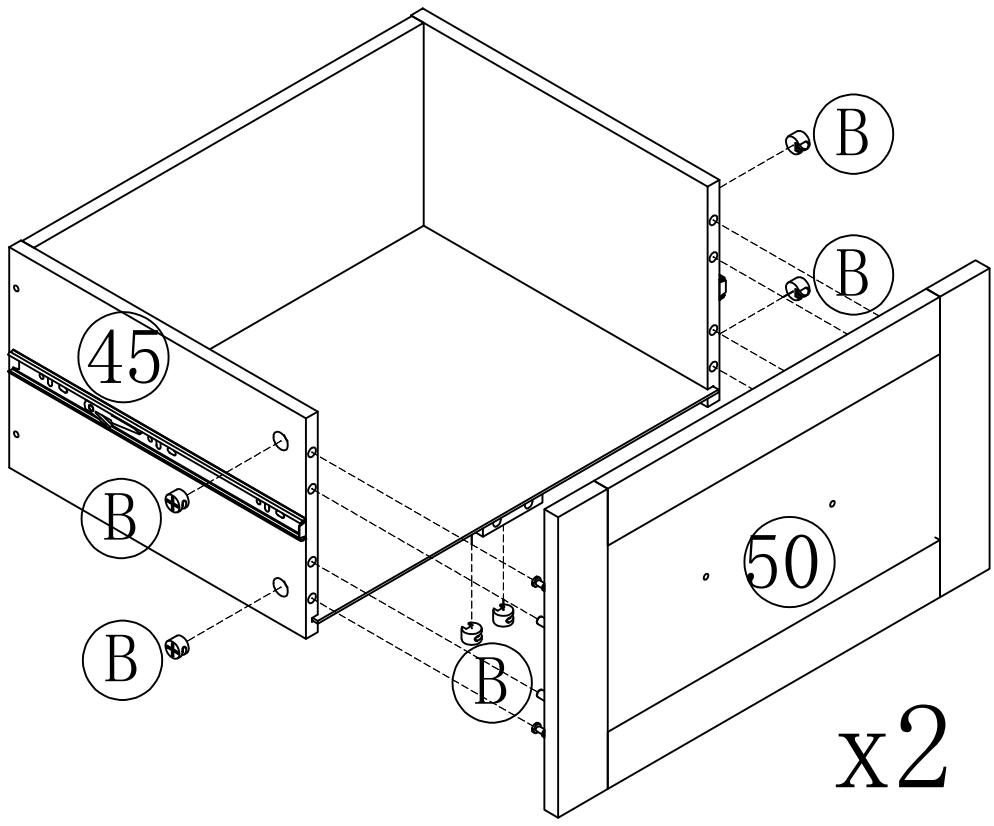

x2

Step/Étape 54

F		2
H		4

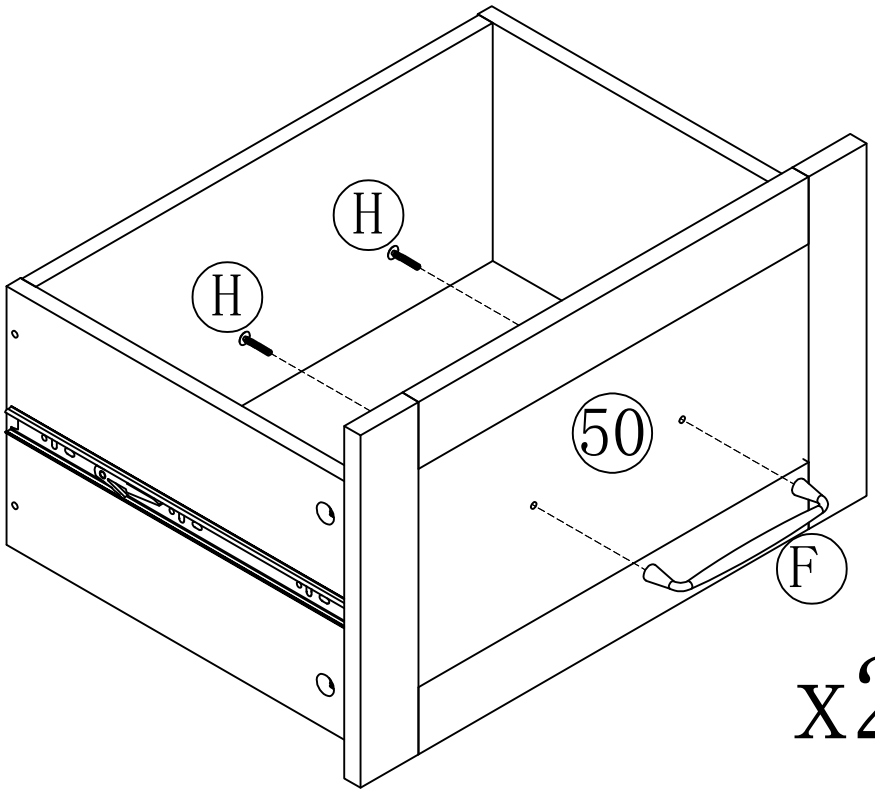

x2

Step/Étape 55

53		2
A		4

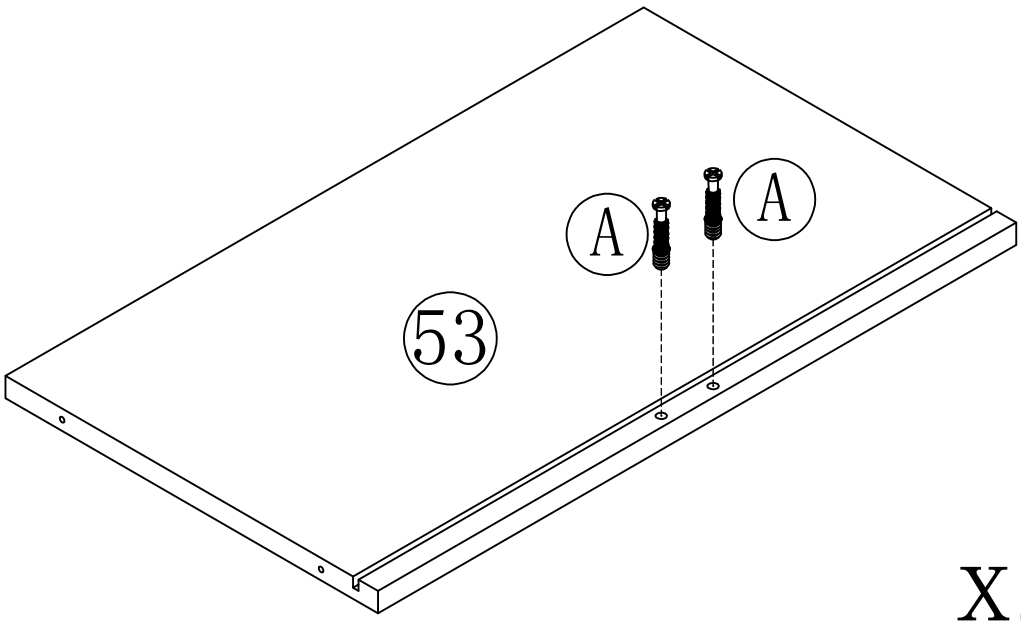

x2

Step/Étape 56

51		2	L		12
52		2	Y-2		4

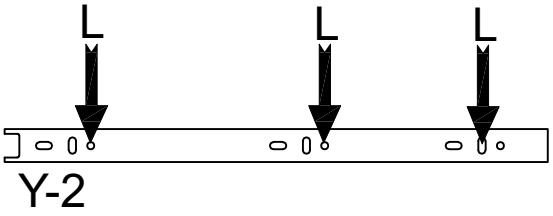

x2

x2

Step/Étape 57

49		2
B		4
N		8

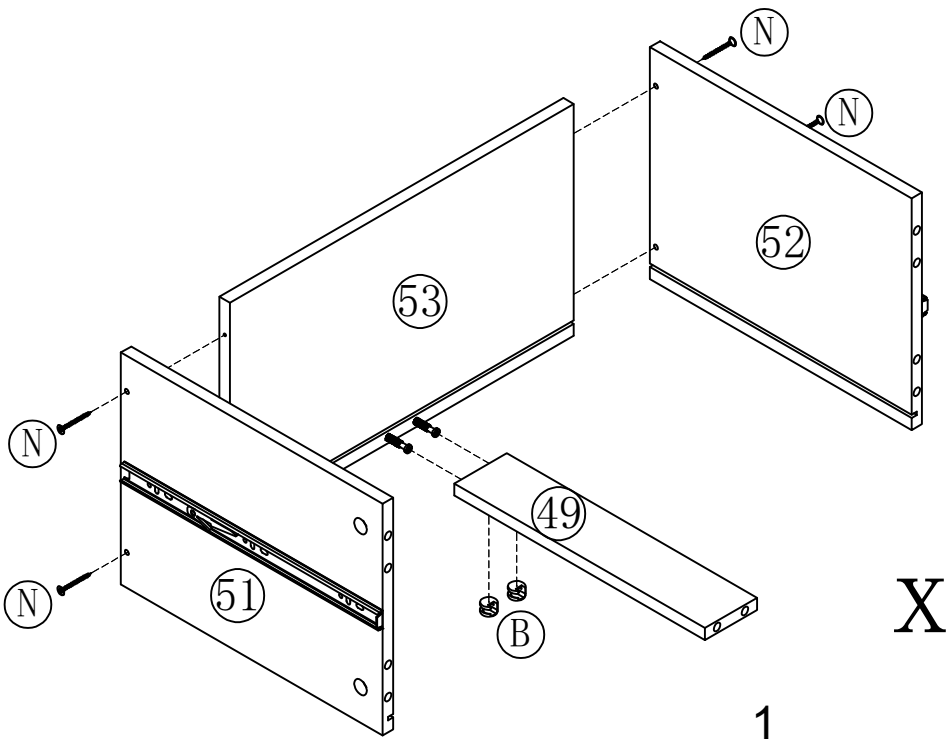

x2

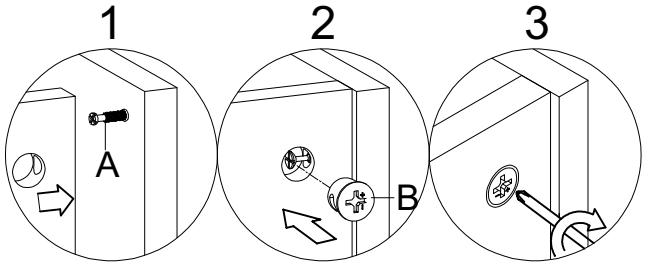

Step/Étape 58

48		2

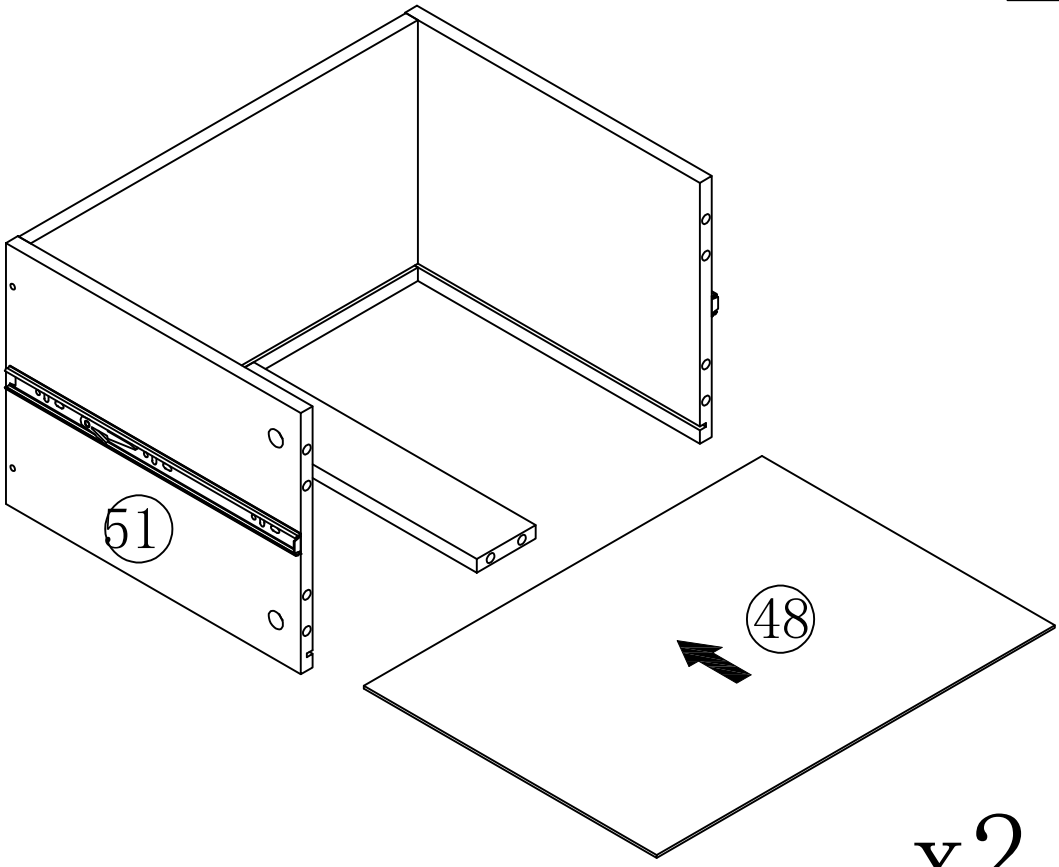

x2

Step/Étape 59

54		2
A		12
E		8

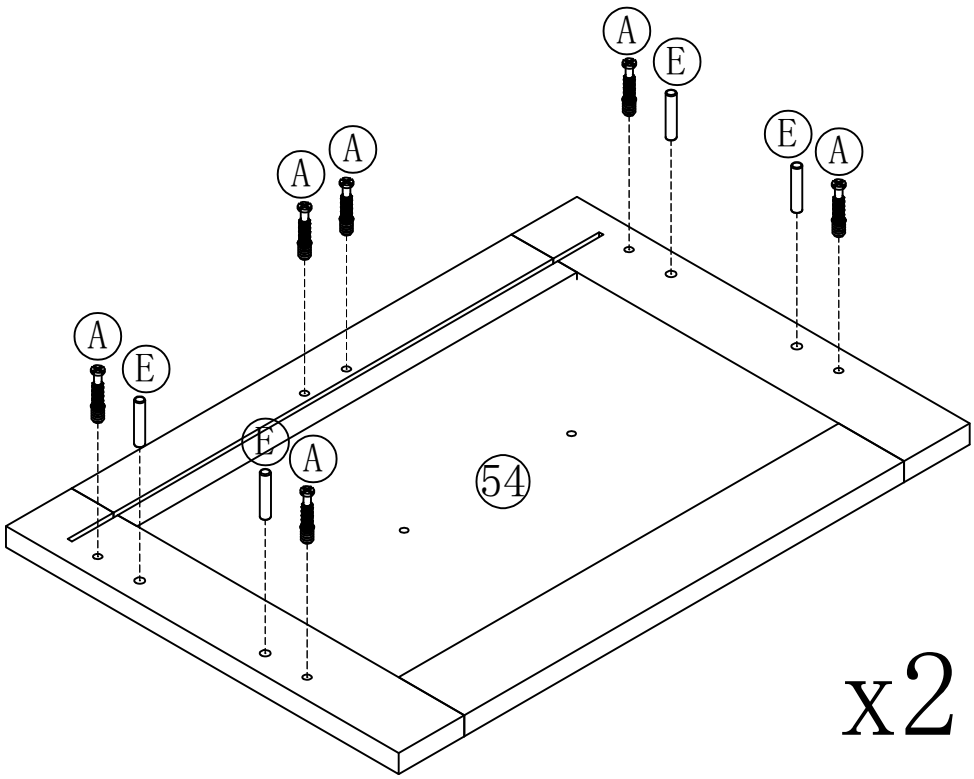

x2

Step/Étape 60

B		12

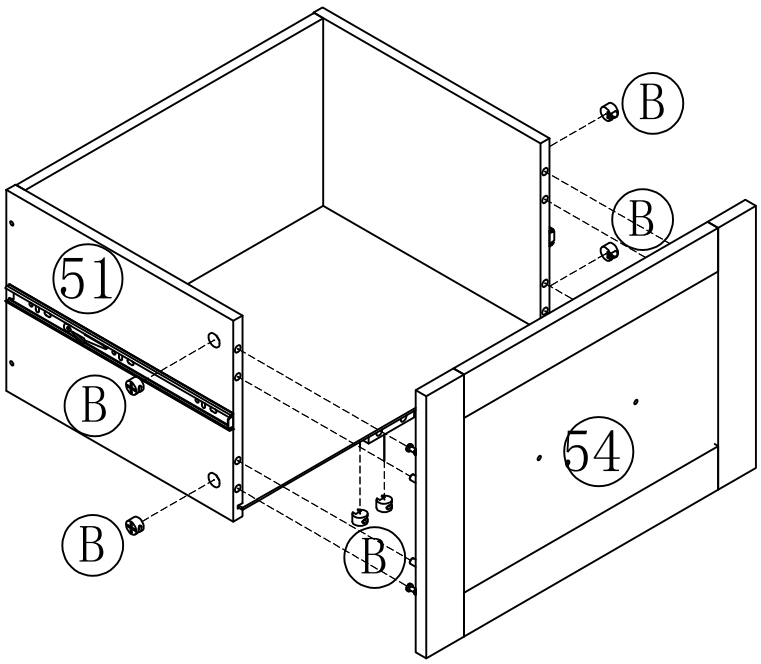

x2

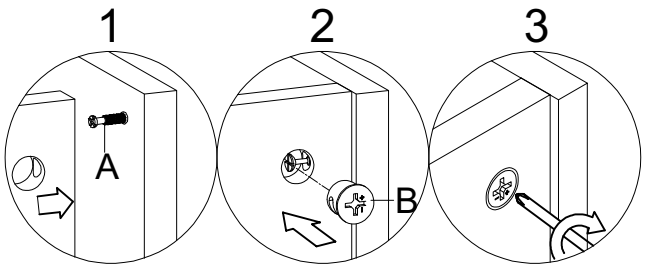

Step/Étape 61

F		2
H		4

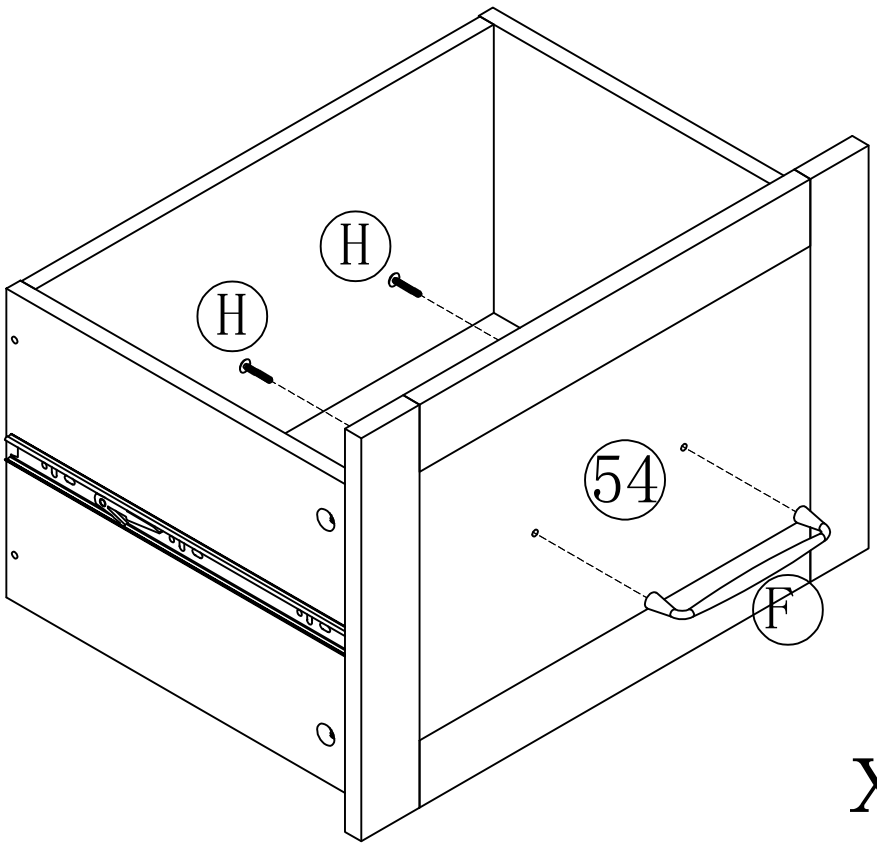

x2

Step/Étape 62

X	⬭	174

Slide the ball slide to the front end of the guide rail

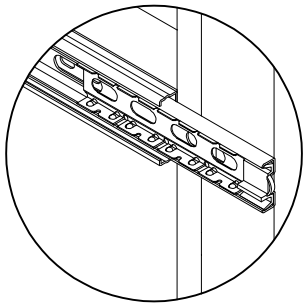

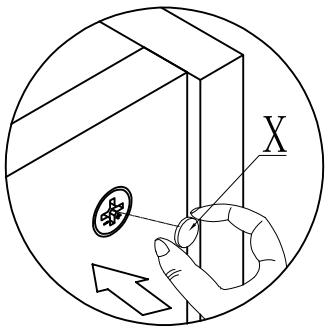

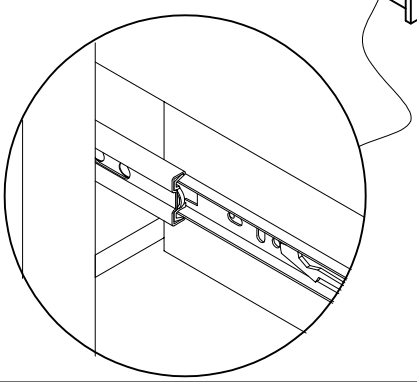

Attention:

1.Pull out the rail installed on the cabinet.

2.Align the slide runners on the drawer with the unit and push it carefully inside until it stops.

3.If the drawer does not go in smoothly please take it out and repeat the previous step

Step/Étape 63

55		2	F		4	K		8
56		2	G		8	L		16

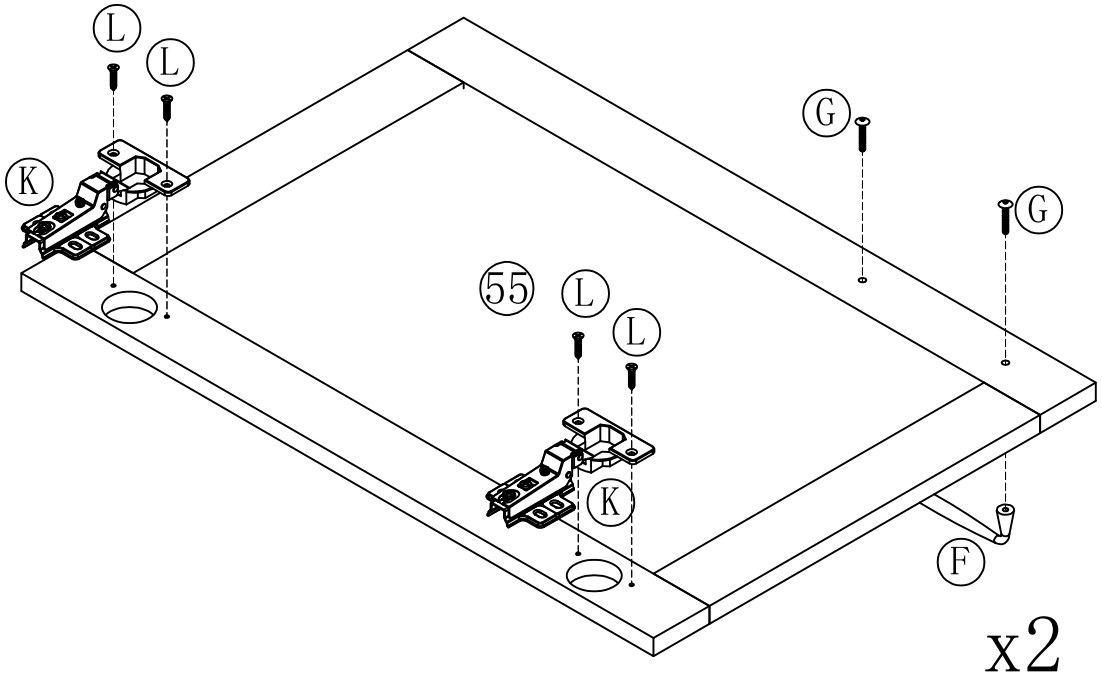

x2

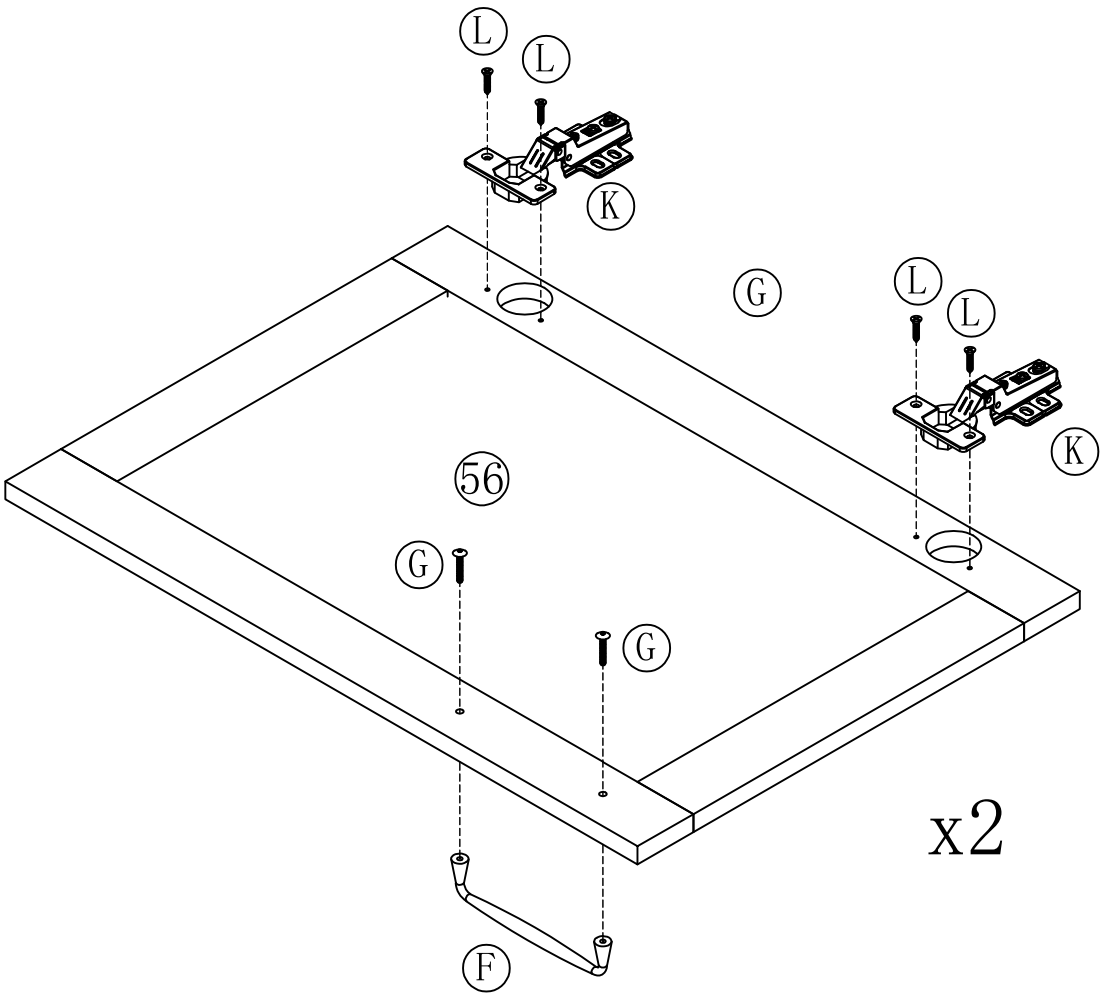

x2

Step/Étape 64

L		16

When the hinges are installed, you can refer to the pictures to adjust the screws of the

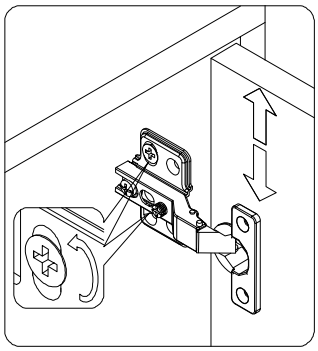

1.Adjust the screws shown in Fiqure 1 to adjust the door up and down.

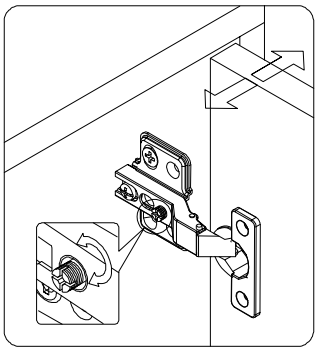

2.Adiust the screws shown in Fiqure 2 to adjust the door left and right to the right position.

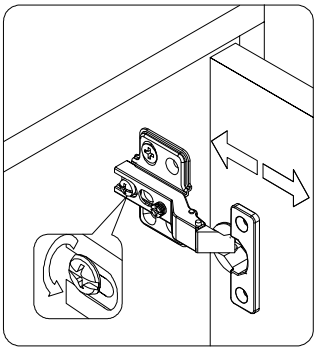

3.Adjust the screws shown in Fiqure 3 and pull the door back and forth so that it can be opened smoothly.

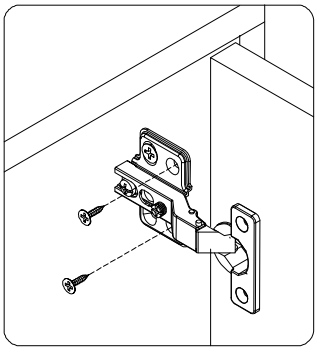

4.After the adjustment is complete, install the remaining two screws to secure the door in place.

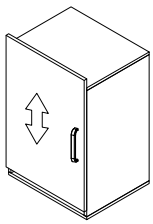

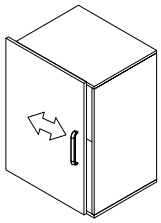

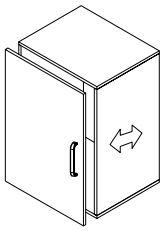

If there is an uneven gap between the door and the cabinet body, the problem can be solved by adjusting the hinge.

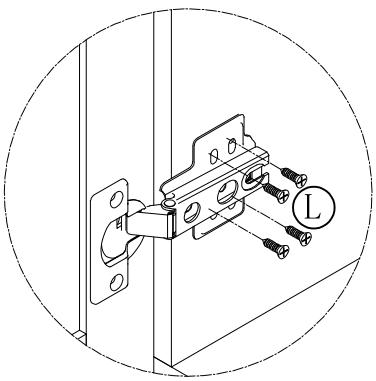

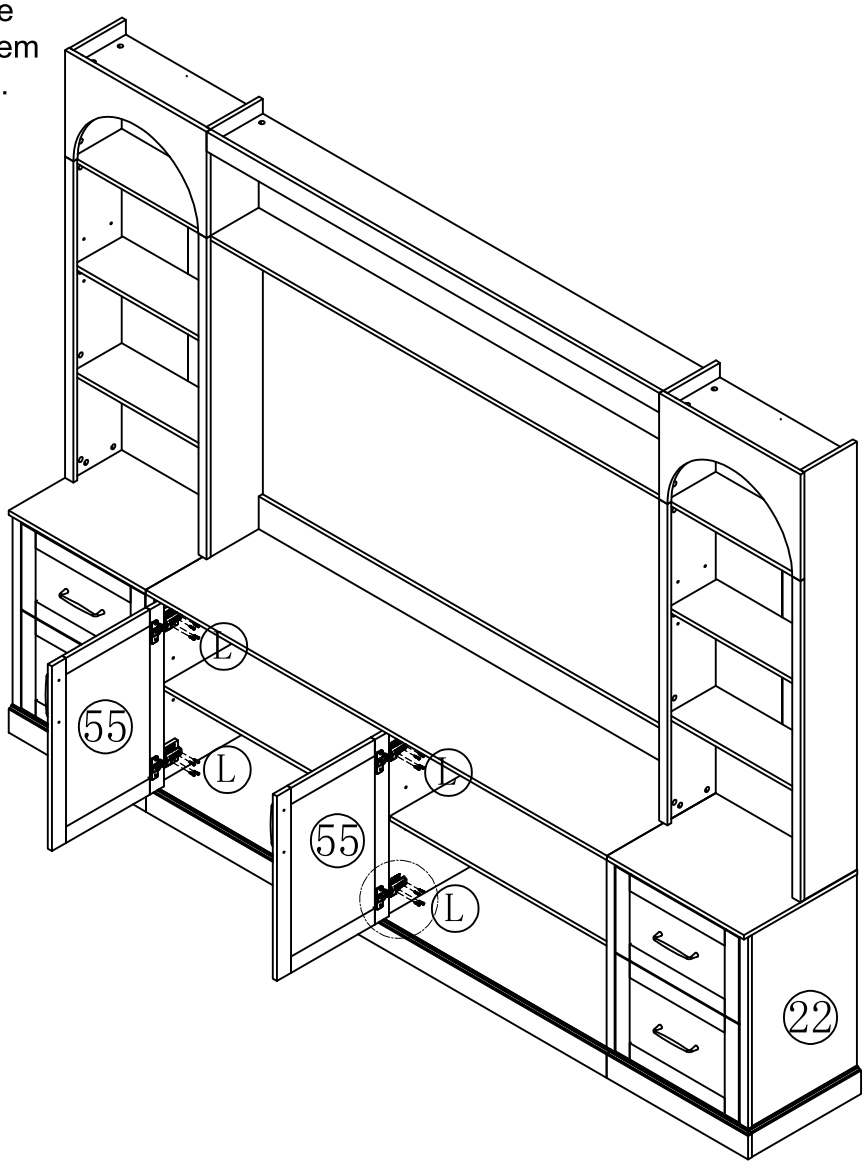

Step/Étape 65

L		16

When the hinges are installed, you can refer to the pictures to adjust the screws of the

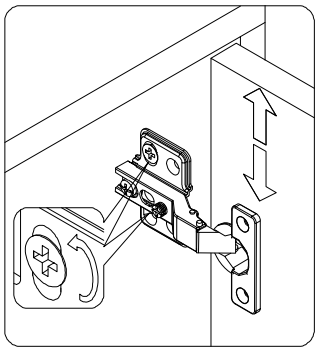

1.Adjust the screws shown in Fiqure 1 to adjust the door up and down.

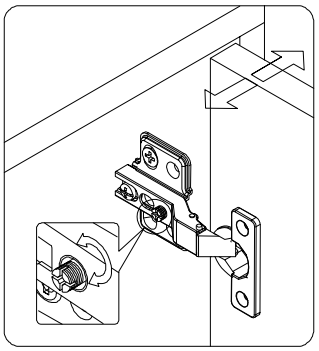

2.Adiust the screws shown in Fiqure 2 to adjust the door left and right to the right position.

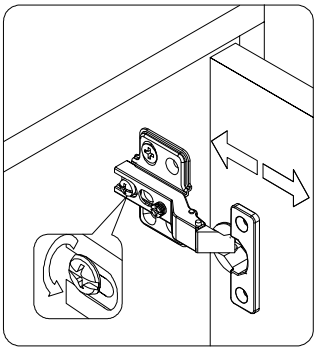

3.Adjust the screws shown in Fiqure 3 and pull the door back and forth so that it can be opened smoothly.

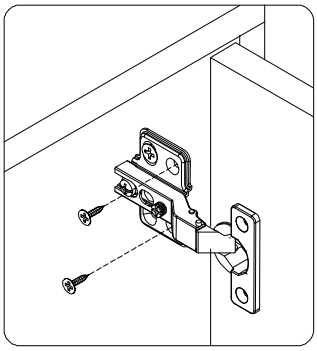

4.After the adjustment is complete, install the remaining two screws to secure the door in place.

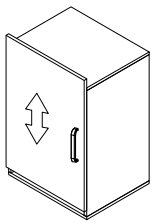

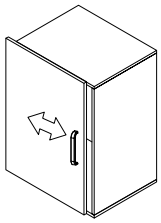

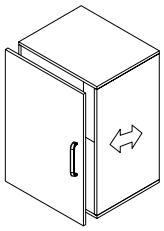

If there is an uneven gap between the door and the cabinet body, the problem can be solved by adjusting the hinge.

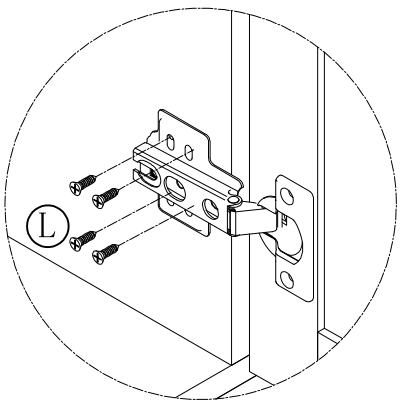

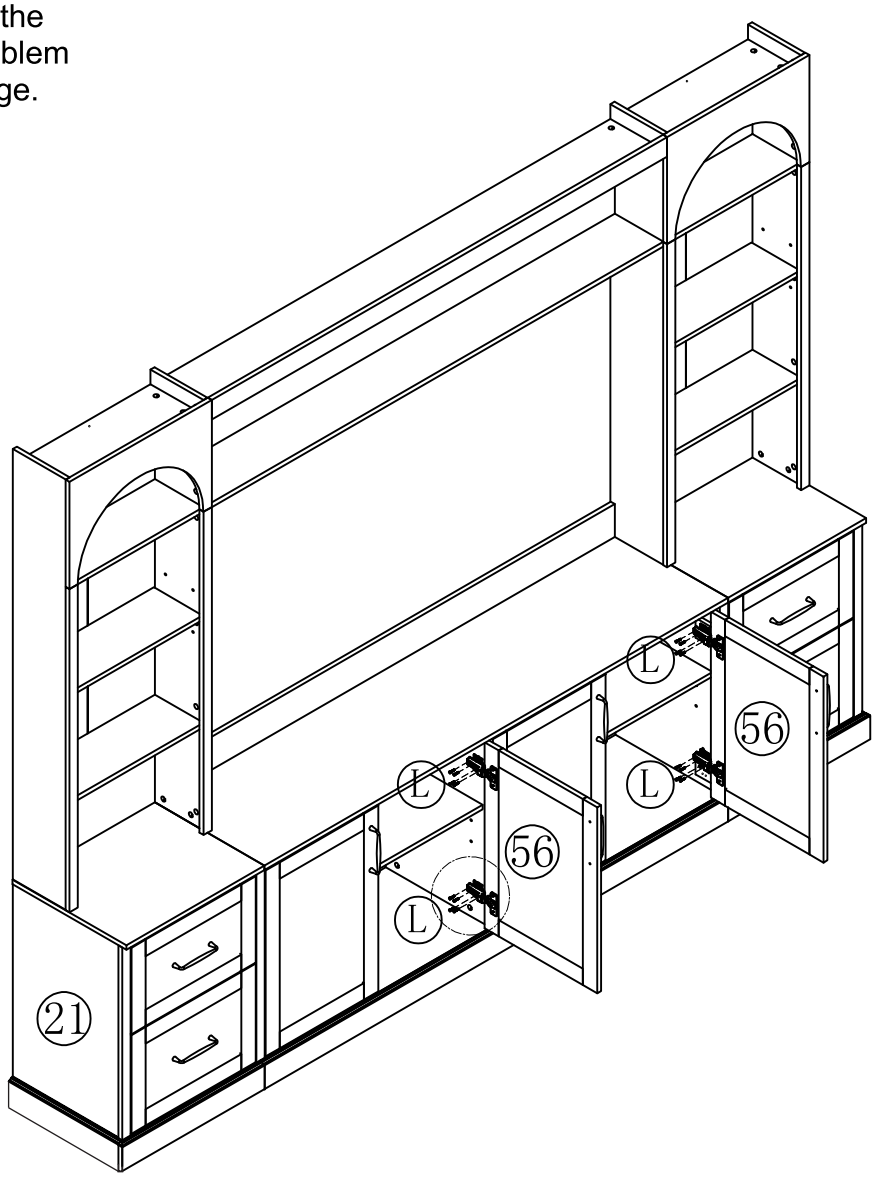

Step/Étape 66

V | | 2

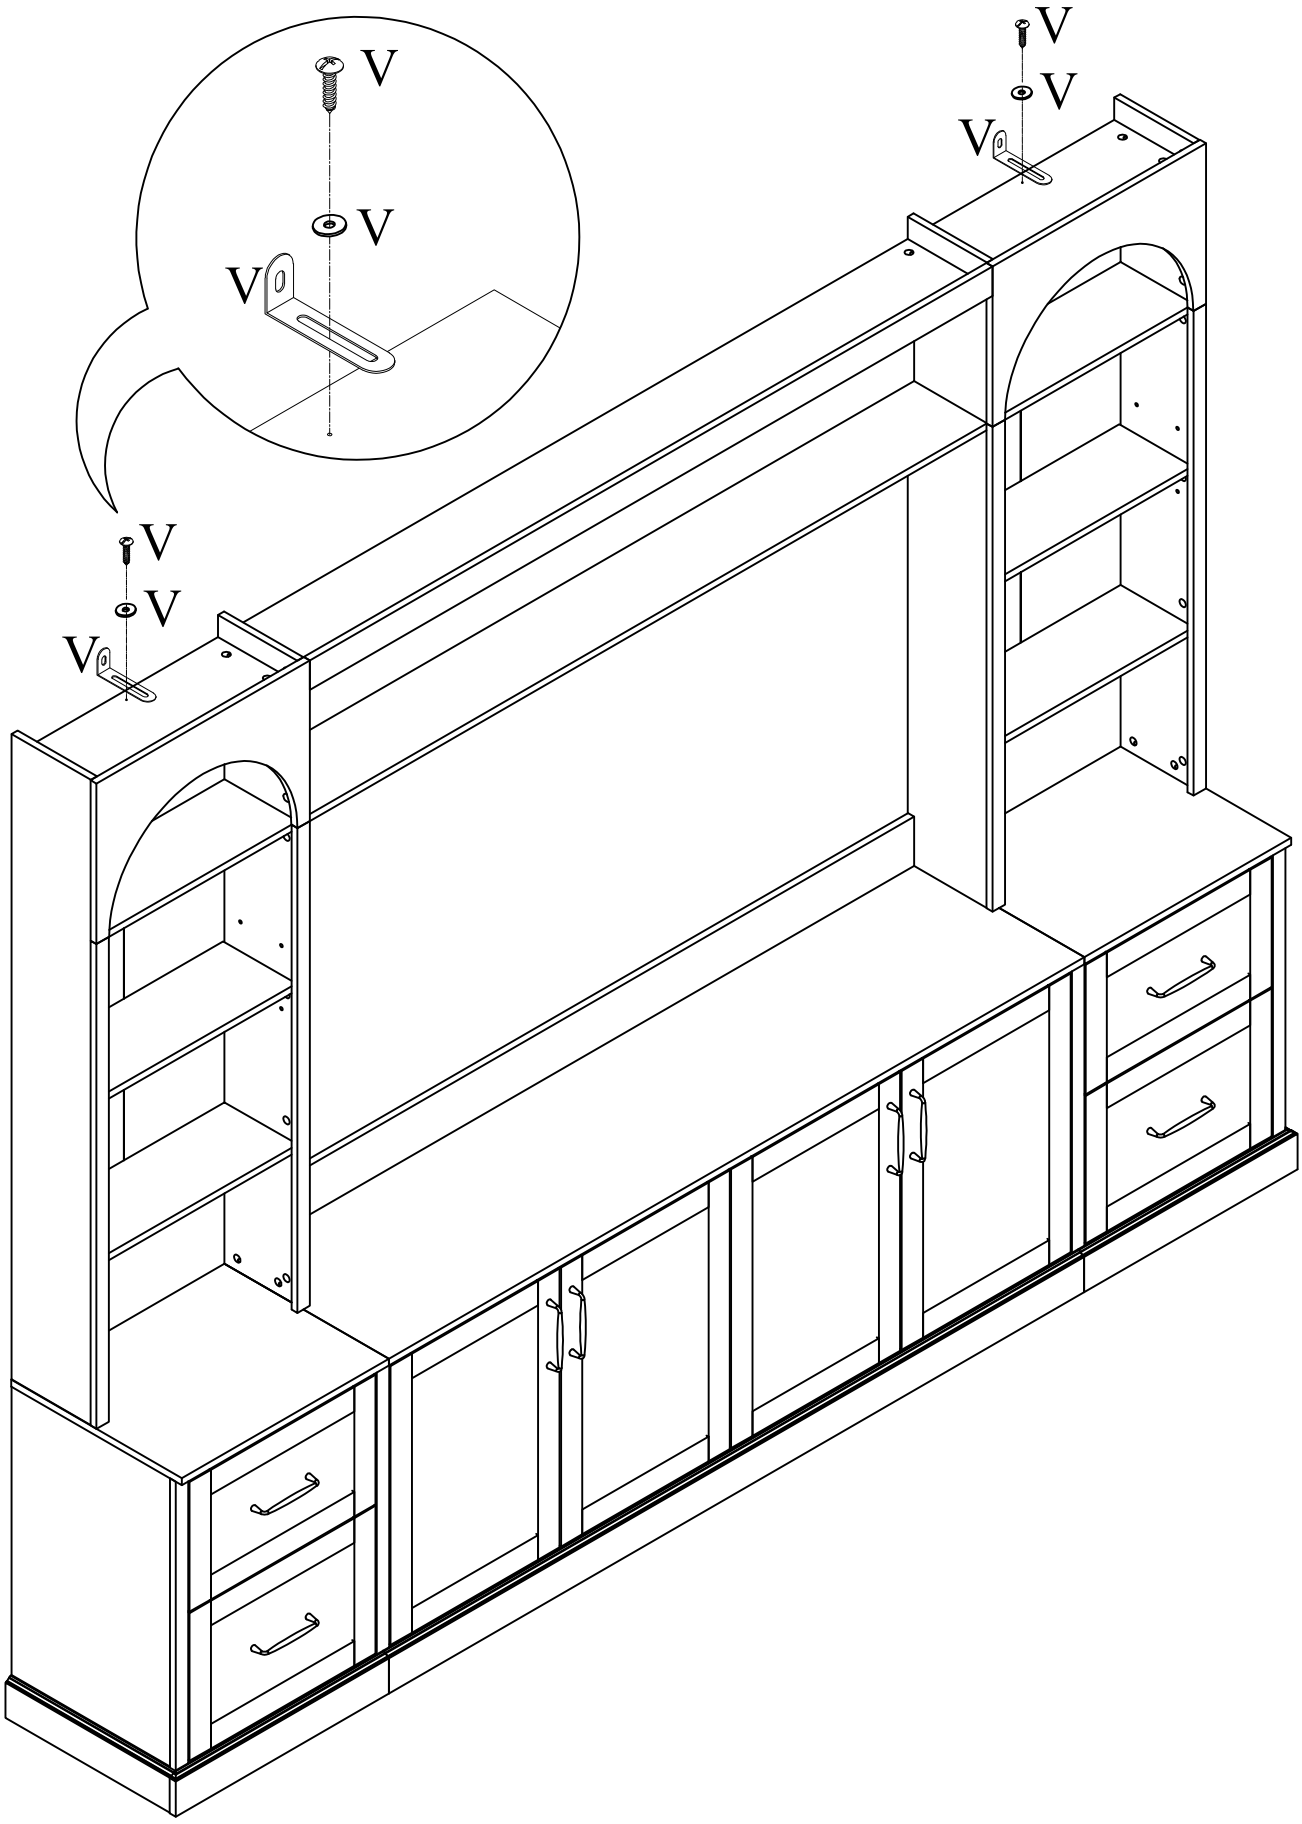

Step/Étape 67

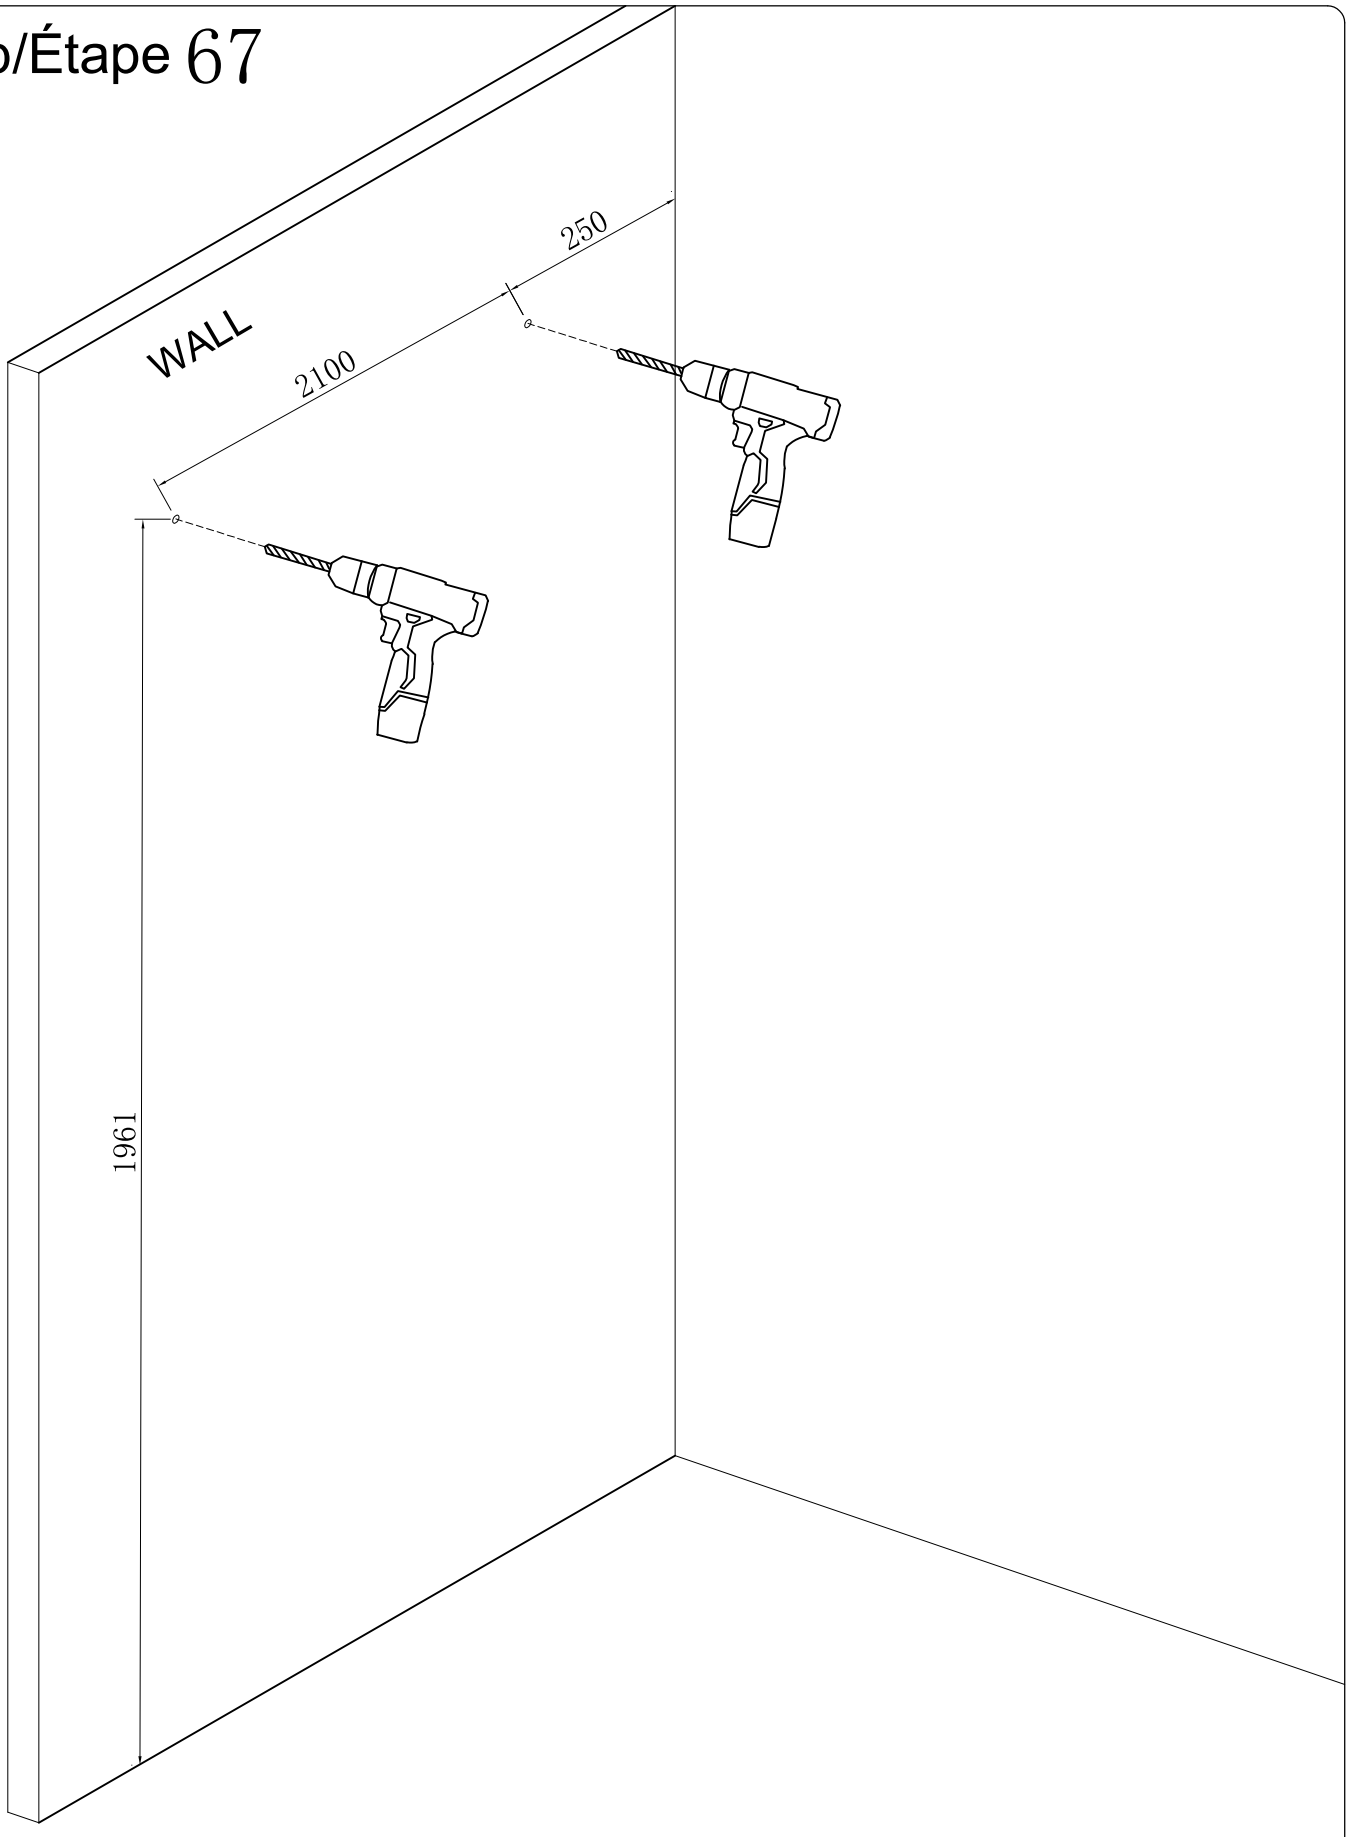

Before installing the anti-tipping device,
ensure the correct distance when drilling holes in the wall.

Step/Étape 68

V		2

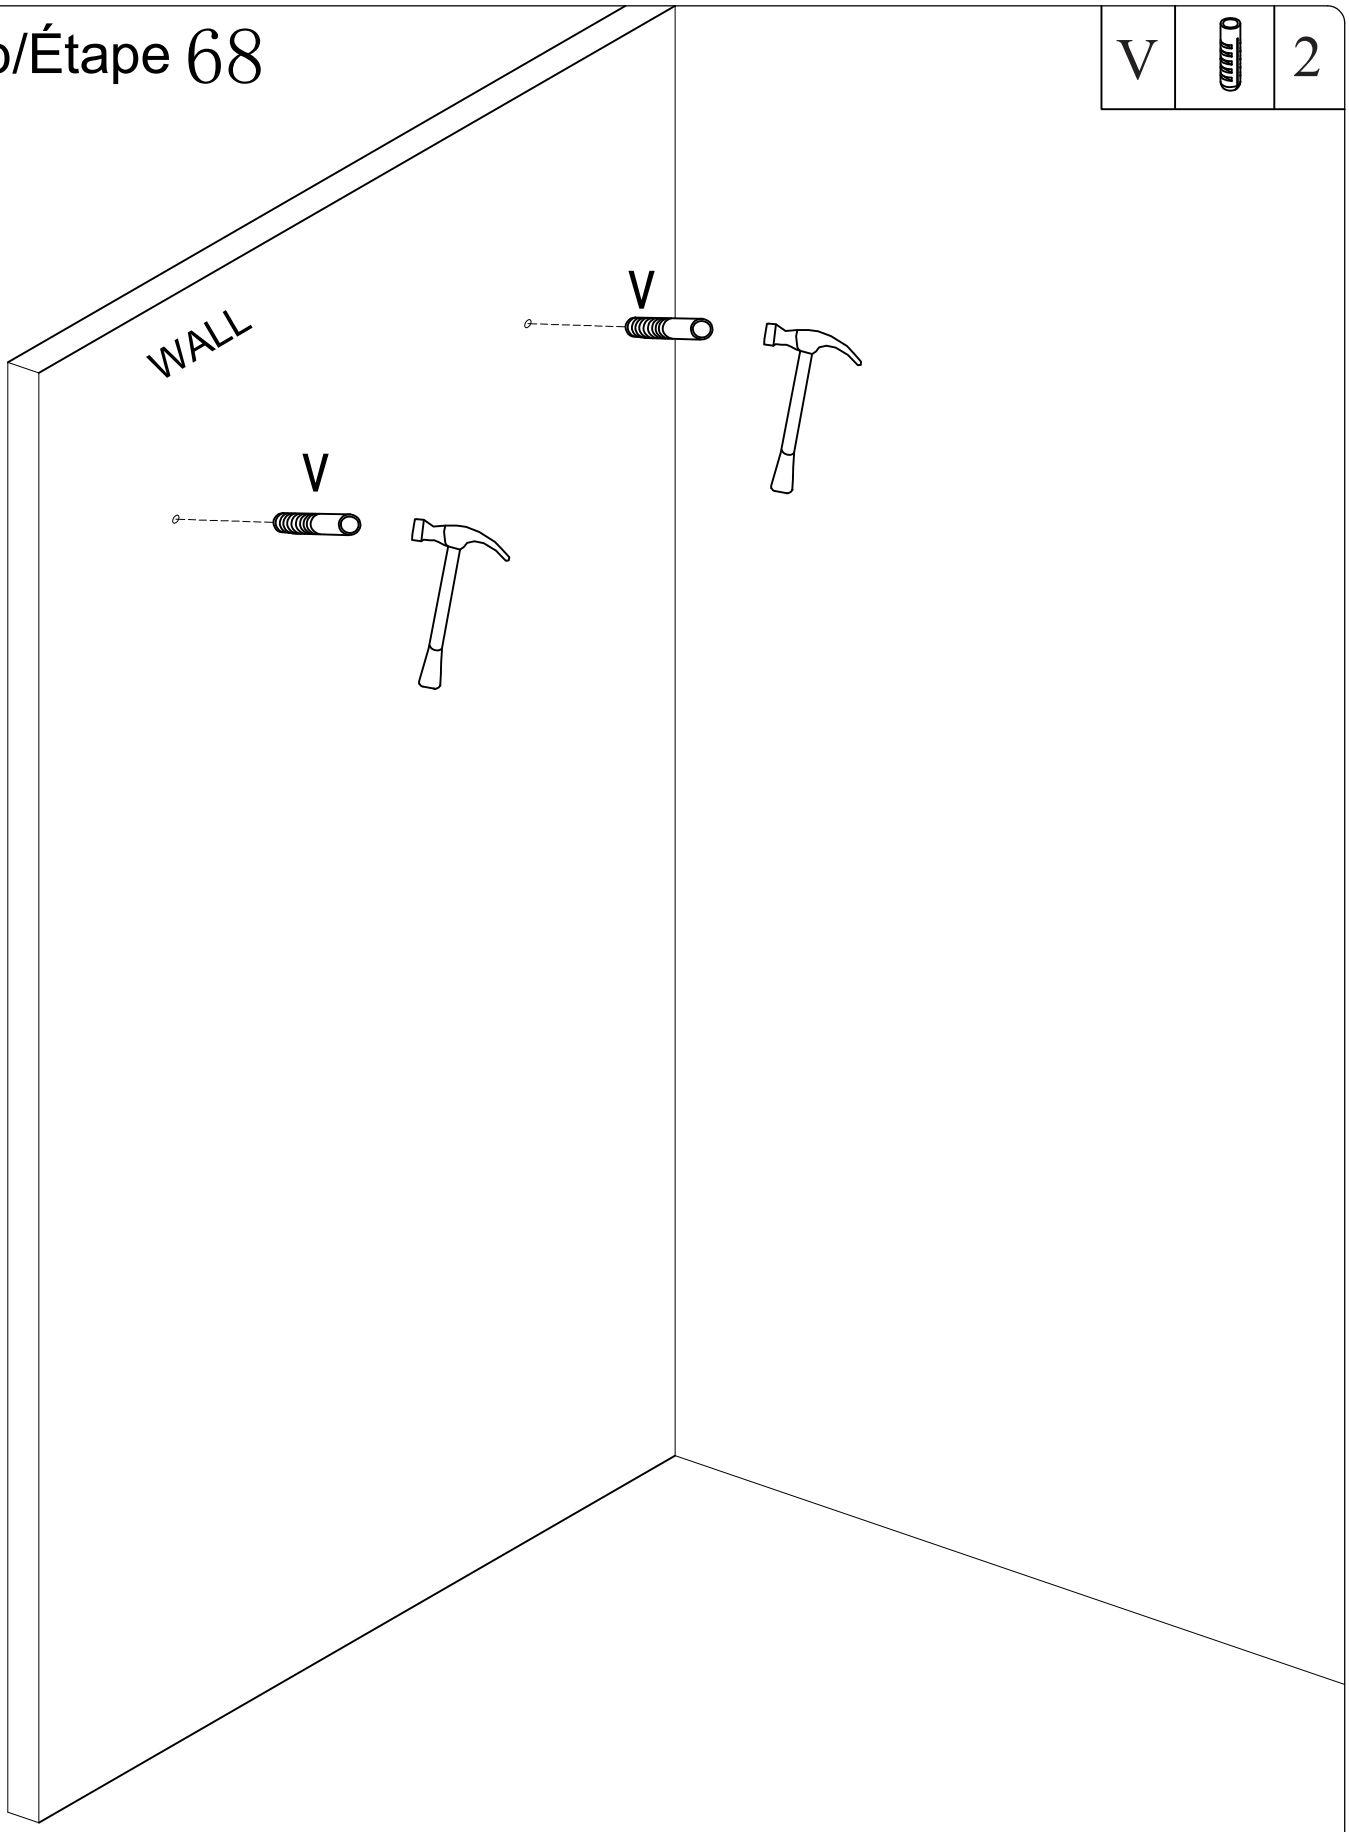

Step/Étape 69

V		2
W		2

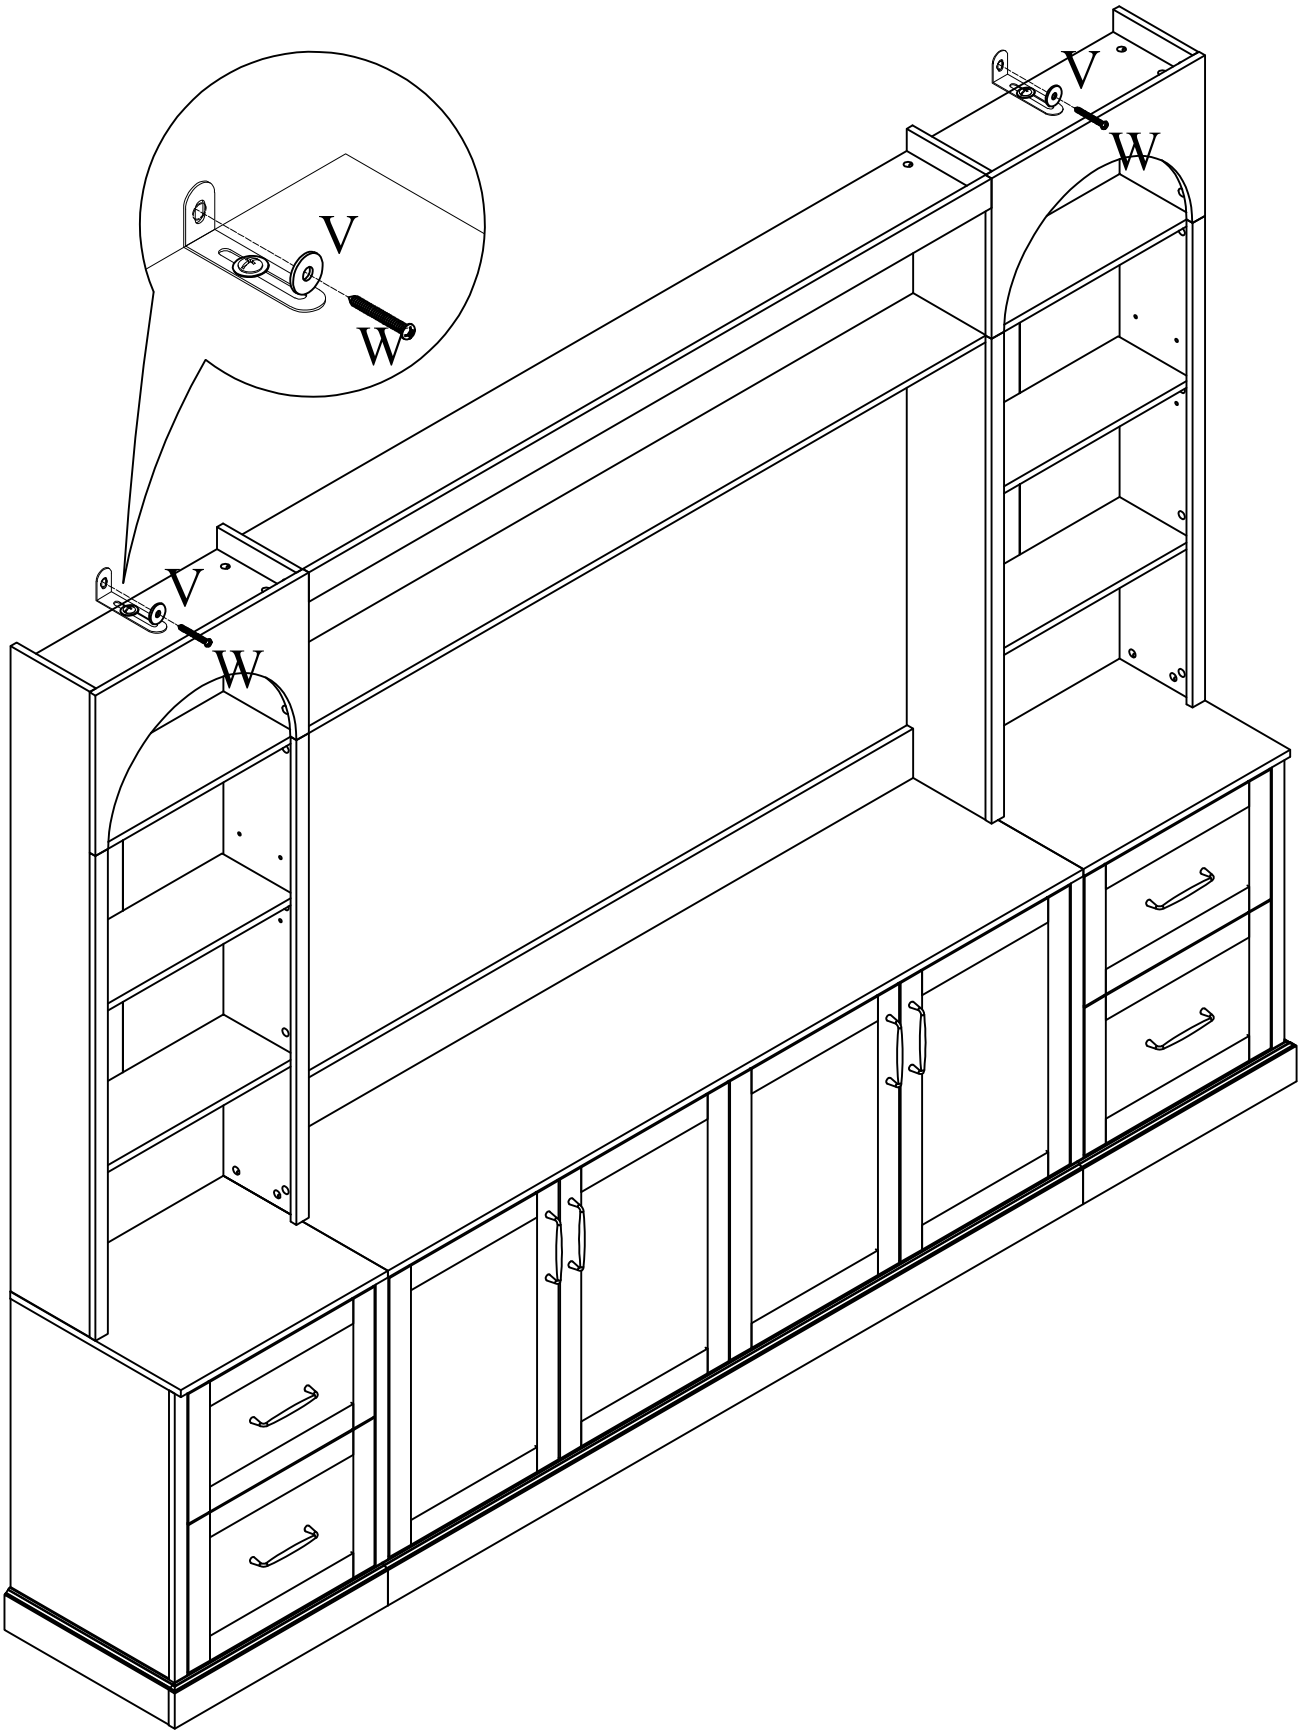

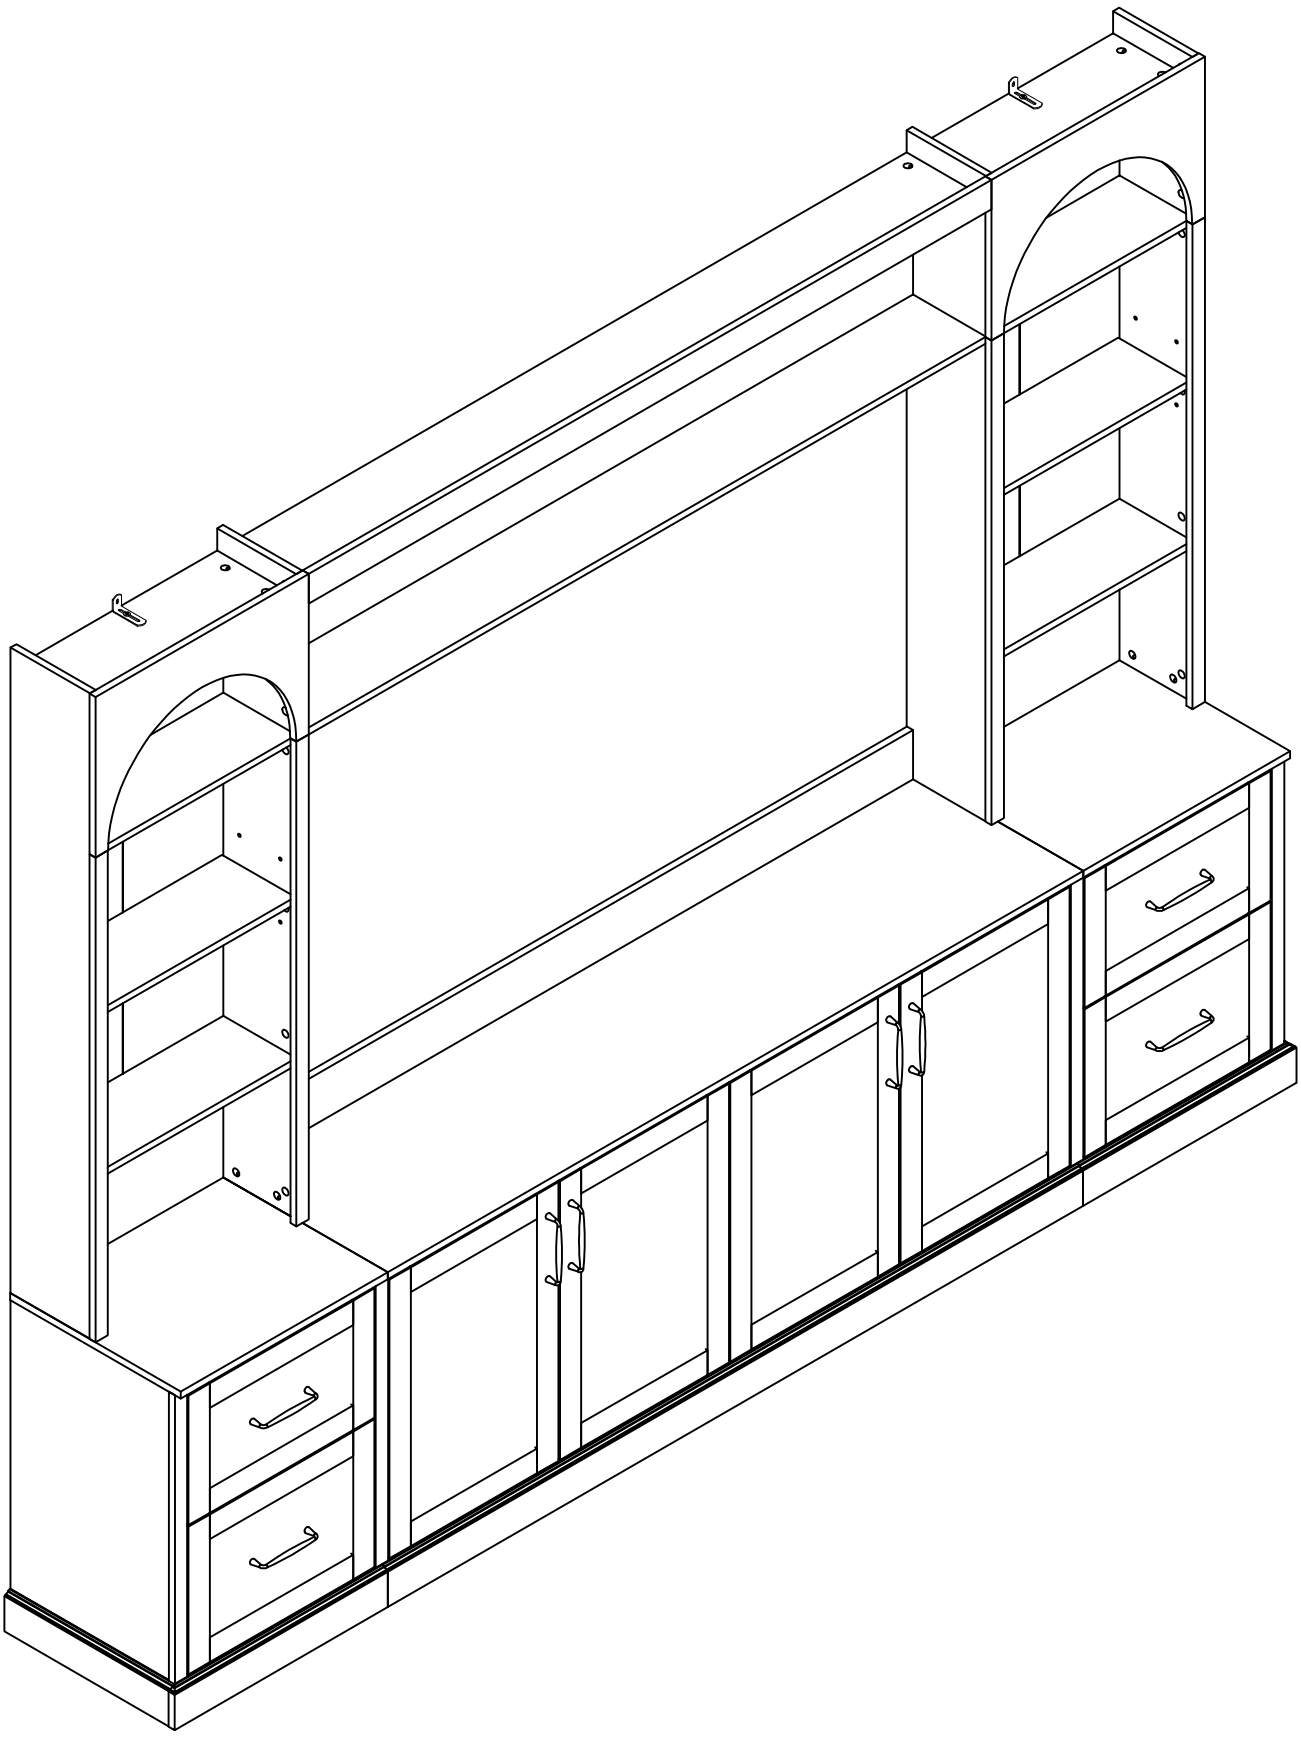

Finish/Finir